


AKAI SERVICE MANUAL

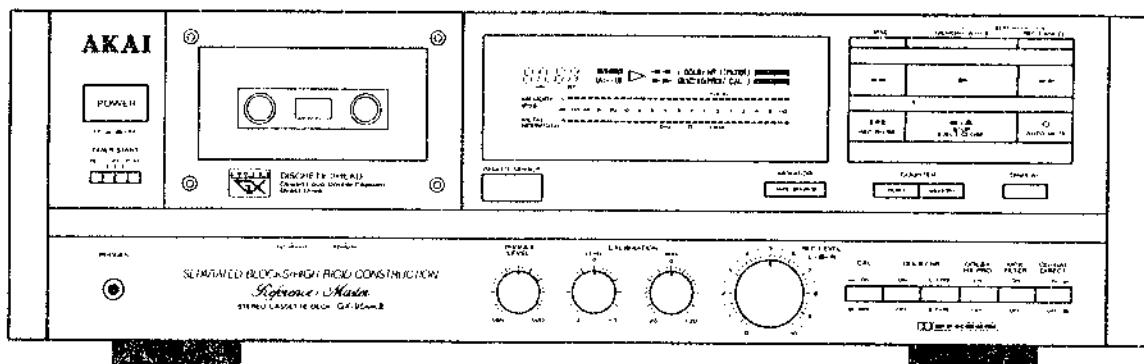

MODEL GX-95MKII

STEREO CASSETTE DECK

MODEL **GX-75MKII**
MODEL **GX-95MKII**

SPECIFICATIONS

Track System	4 track 2 channel Stereo	T, H, D	0.6%
Heads	Erase Head x1 LC-OFC SGX Head for recording x1 LC-OFC SGX Head for playback x1	Input Sensitivity/ Impedance	
Motors	FG Servo D.D. motor for capstan drive x1 DC motor for reel drive x1 DC motor for cam drive & tape eject/loading x1	Line 70mV/47kΩ CD/DAT Direct IN 240mV/47kΩ	
Wow & Flutter	0.04% DIN 0.025% WRMS	Output Level/Impedance	
Tape winding time	85 sec. (C-60)	Line 388mV/200Ω Headphones 1.3mW (8Ω)	
Frequency Response		Power Requirements	220V, 50Hz for Europe except UK 240V, 50Hz for UK (GX-95MKII ONLY)
Normal	15Hz to 19,000Hz ± 3dB	Dimensions	GX-95MKII : 460(W)×155(H)×350(D)mm
CrO ₂	15Hz to 20,000Hz ± 3dB		GX-75MKII : 425(W)×154(H)×350(D)mm
Metal	15Hz to 22,000Hz ± 3dB	Weight	GX-95MKII : 10.1kg GX-75MKII : 9.0kg
S/N	59dB (Measured via Metal tape with peak recording level) Dolby B type NR switch ON: Improves up to 5dB at 1kHz, 10dB above 5kHz Dolby C type NR switch ON: Improves up to 15dB at 500Hz, 20dB at 1kHz to 10kHz	Standard accessories	
		Connection cords RCA pin cord ×2 Remote control unit ×1 Dry batteries R6 (AA) size ×2	

- * For improvement purposes, specifications and design are subject to change without notice.
- * Dolby noise reduction and HX Pro headroom extension manufactured under license from Dolby Laboratories Licensing Corporation. HX Pro originated by Bang & Olufsen.
- * "DOLBY", the double-D symbol  and "HX PRO" are trademarks of Dolby Laboratories Licensing Corporation.

★ SAFETY INSTRUCTIONS

PRECAUTIONS DURING SERVICING

1. Parts identified by the (*) symbol are critical for safety. Replace only with parts number specified.
2. In addition to safety, other parts and assemblies are specified for conformance with such regulations as those applying to spurious radiation. These must also be replaced only with specified replacements.
3. Use specified internal wiring. Note especially:
 - 1) Wires covered with PVC tubing
 - 2) Double insulated wires
 - 3) High voltage leads
4. Use specified insulating materials for hazardous live parts. Note especially:
 - 1) Insulation Tape
 - 2) PVC tubing
 - 3) Spacers (insulating barriers)
 - 4) Insulation sheets for transistors
 - 5) Plastic screws for fixing microswitch (especially in turntable)
5. When replacing AC primary side components (transformers, power cords, noise blocking capacitors, etc.), wrap ends of wires securely about the terminals before soldering.



6. Observe that wires do not contact heat producing parts (heatsinks, oxide metal film resistors, fusible resistors, etc.).

★ INFORMATION


SYMBOLS FOR PRIMARY DESTINATION

Primary destinations of units are indicated with the following alphabetic

Symbols	Primary Destinations
A	USA
B	UK
C	Canada
E	Europe(except UK)
J	Japan
S	Australia
V	W.Germany only
U	Universal Area
Y	Custom version

I. DISASSEMBLY

In case of trouble, etc, necessitating dismantling, please dismantle in the order shown in the photographs. Reassemble in reverse order.

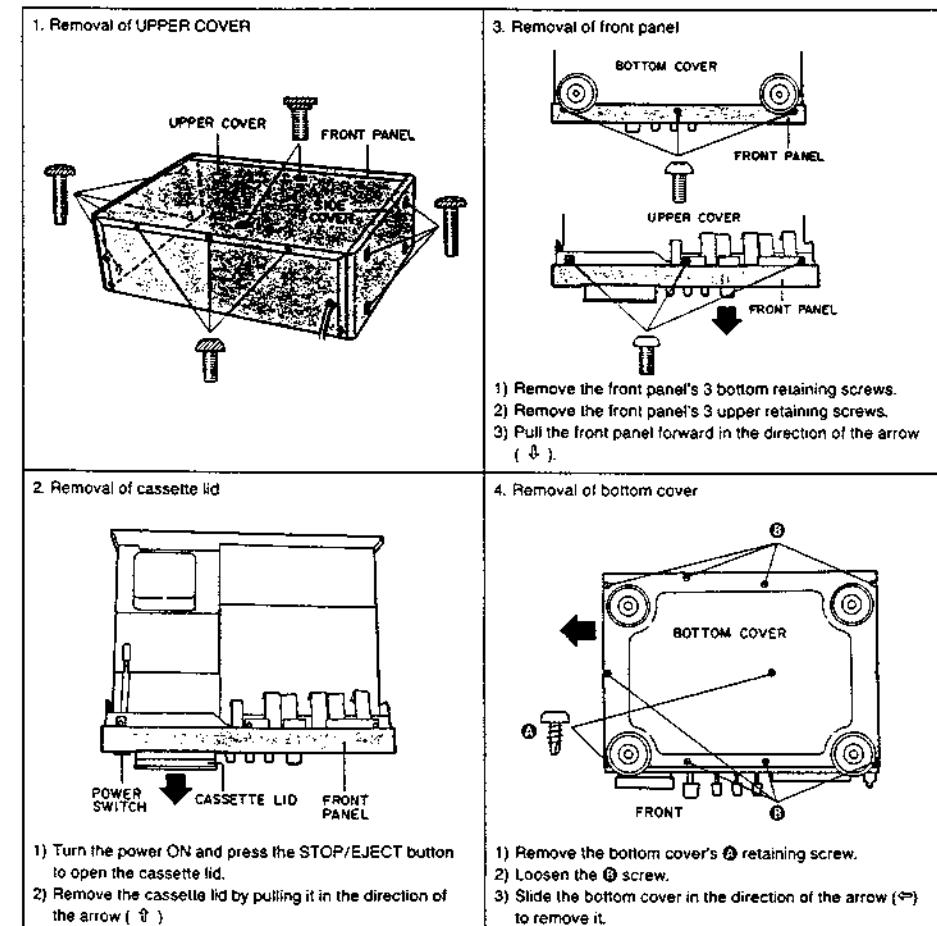

- 1) Turn the power ON and press the STOP/EJECT button to open the cassette lid.
- 2) Remove the cassette lid by pulling it in the direction of the arrow (↑).

- 1) Remove the bottom cover's **A** retaining screw.
- 2) Loosen the **B** screw.
- 3) Slide the bottom cover in the direction of the arrow (↔) to remove it.

II. PRINCIPAL PARTS LOCATION

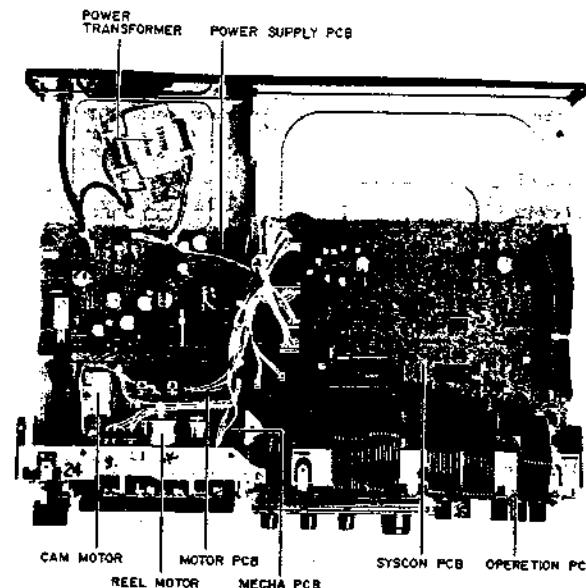


Fig. 2-1 View from upper side

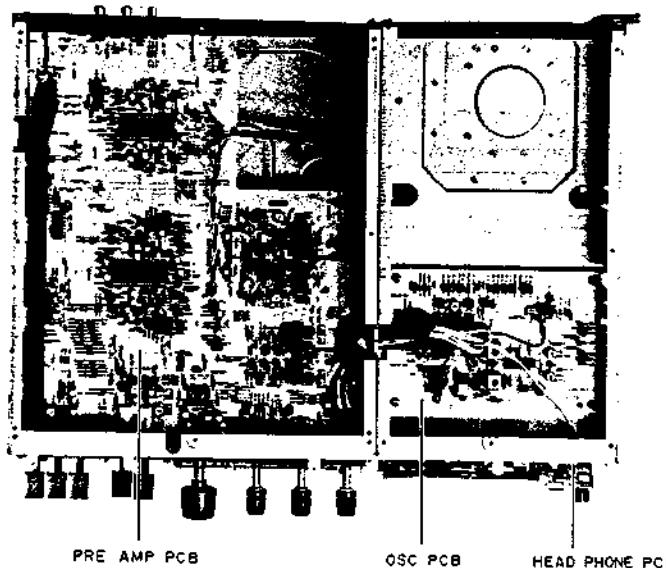


Fig. 2-2 View from bottom side

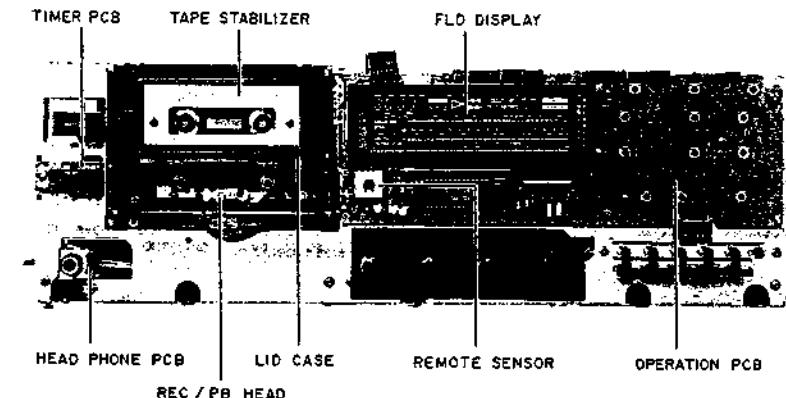


Fig. 2-3 View from front side

III. DISASSEMBLY AND REASSEMBLY OF THE MECHANISM BLOCK

3-1. REMOVING THE LID CASE AND LID DECORATION

- 1) Turn the power on and press the STOP/EJECT button. Remove the lid panel when the lid is in the eject position. Press the STOP/EJECT button a second time to close the lid. Turn the power off.
- 2) While pulling the Θ section of the LID ARM outward, press inward on the Θ section of the LID CASE to disengage the LID CASE from the collar and LID ARM (Refer to Fig. 3-1, 3-2)
- 3) Disengage the LID CASE from the MECHA BLOCK by pulling in the direction of the arrow.
- 4) Proceed in the reverse order for reassembling.

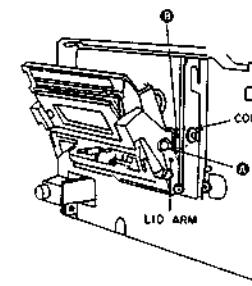


Fig. 3-1

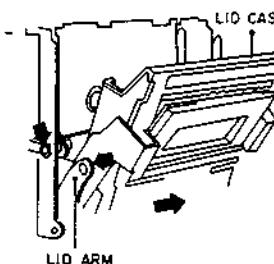


Fig. 3-2



Fig. 3-3

- 5) Next, while pressing up slightly on the decoration stopper on the upper right and left sides, move the lid decoration forward and down, disengaging it from the holders and guide shafts on the bottom left and right (Refer to Fig. 3-3).
- 6) To reassemble, perform the above steps in the reverse order.

3-2. REMOVING THE MECHANISM BLOCK

- 1) Remove connector P101 from the PRE AMP PCB and the P751 and P781 from the OSC PCB. Next, remove mechanism block securing screws ④ (Refer to Fig. 3-4)
- 2) Remove the six connectors P1-P6 from the SYSCON PCB. Remove mechanism block securing screws ④. (Refer to Fig. 3-5)
- 3) Finally, lift the mechanism block upward to remove it.
- 4) To reassemble, perform the above steps in the reverse order.

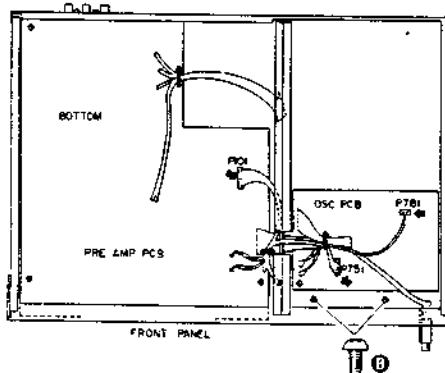


Fig. 3-4

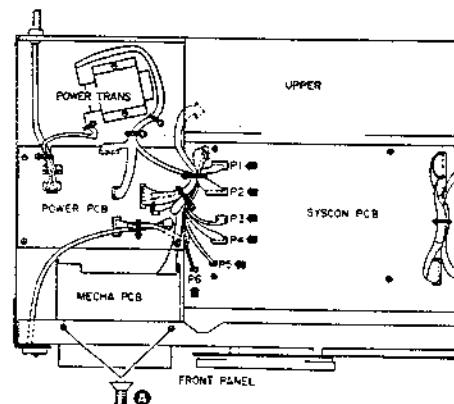


Fig. 3-5

3-3. REMOVING THE MOTOR BLOCK

- 1) First remove the lid case and lid decoration, then take the mechanism block out of the main unit.
- 2) Remove the MOTOR BLOCK securing screw from the left side panel of the mechanism block. (Refer to Fig. 3-6)
- 3) Remove motor block securing screws ④, ④ and ④ from the mechanism block's front side. Remove the motor block from the mechanism block. (Refer to Fig. 3-7)
- 4) To reassemble, perform the above steps in the reverse order.

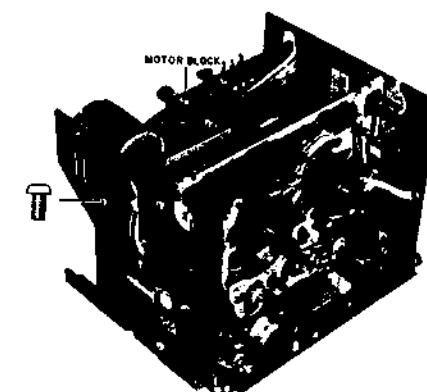


Fig. 3-6

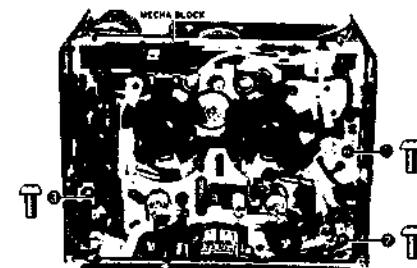


Fig. 3-7

3-4. REMOVING THE CAM MOTOR AND CAM BELT

- 1) Remove the motor block from the mechanism block. (See section 3-3, "Removing the motor block.")
- 2) Disconnect the two cam motor lead wires.
- 3) Remove cam motor base screws ④ and ④ from the motor block. (Refer to Fig. 3-8.)
- 4) Remove the cam belt and operation pulley from the cam motor block which has just been removed.
- 5) Remove cam motor securing screws ④ and ④. (Refer to Fig. 3-9.)
- 6) To reassemble, perform the above steps in the reverse order.

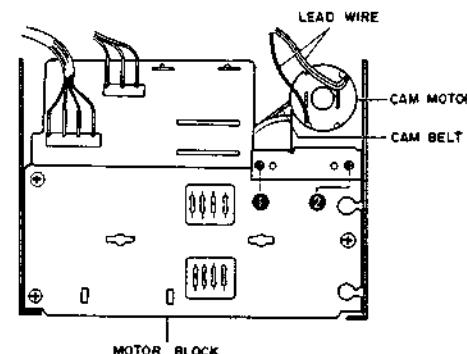


Fig. 3-8

3-5. REPLACING THE HALL ELEMENT

- 1) Remove the motor block from the mechanism block. (See section 3-4, "Removing the motor block.")
- 2) Remove motor PCB block securing screws ④, ④ and ④ and take out the motor PCB block. (Refer to Fig. 3-10.)
- 3) Remove the solder from the Hall element. Remove the Hall element from the motor circuit board.
- 4) When attaching a replacement, connect the protruding portion of the Hall element to the circuit board. (Refer to Fig. 3-11.)
- 5) To reassemble, perform the above steps in the reverse order.

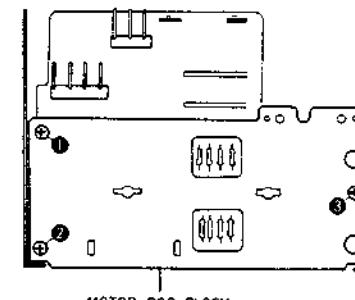


Fig. 3-10

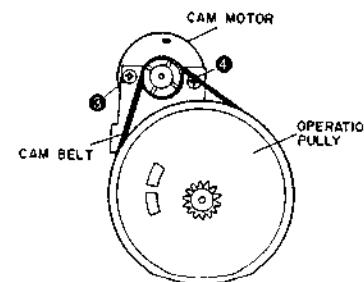


Fig. 3-9

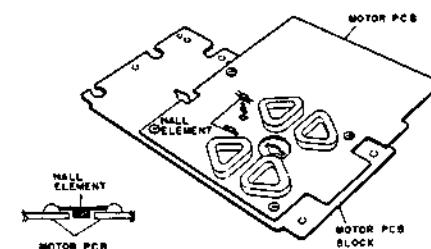


Fig. 3-11

3-6. REMOVING THE CAM WHEEL AND POSITION POTENTIAL VOLUME

- 1) Remove the motor block from the mechanism block. (See section 3-3, "Removing the motor block.") Also remove the motor PCB, the capstan belt and the fly-wheel.
- 2) Remove the stopper ring from the capstan holder. Pull off the cam wheel. (Refer to Fig. 3-12)
- 3) Remove capstan holder securing screws ①, ②, ③ and ④. Remove the capstan holder. (Refer to Fig. 3-13)
- 4) Remove the potenio gear. Unscrew the position potential volume securing nut. (Refer to Fig. 3-14)
- 5) To reassemble, follow the directions in section 3-7, "Reassembling the cam wheel and position potential volume," below.

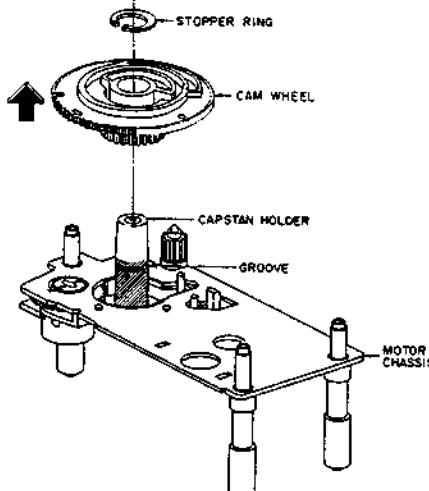


Fig. 3-12

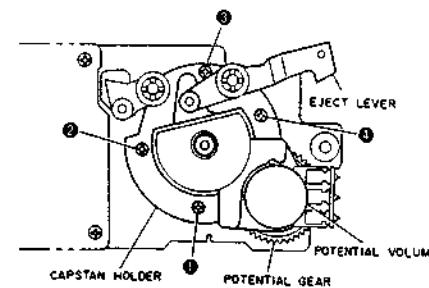


Fig. 3-13

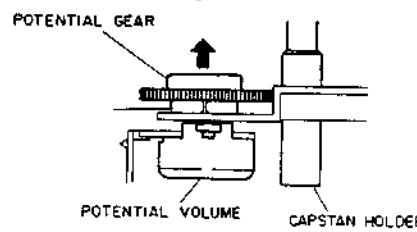


Fig. 3-14

IV. MECHANICAL ADJUSTMENT

4-1. POTENTIAL VOLUME PRESET VOLTAGE ADJUSTMENT (Refer to Fig. 4-1, 4-2)

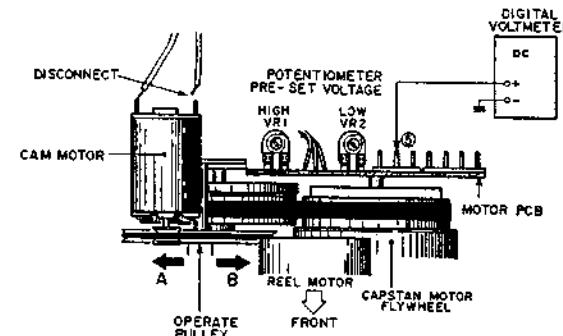


Fig. 4-1

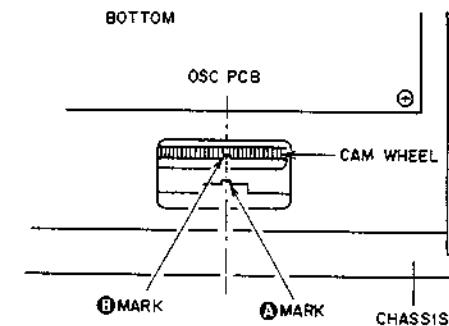


Fig. 4-2

1) LOW VOLTAGE ADJUSTMENT

- a. With power OFF, remove the connecting cord of the CAM MOTOR and turn the OPERATE PULLEY fully with your fingers in the A direction. (EJECT DIRECTION)
- b. Connect the digital voltmeter as shown in Fig. 4-1.
- c. With power ON, adjust VR2 so that the voltage reading on the Digital DC Voltmeter is 1.13V.

2) HIGH VOLTAGE ADJUSTMENT

- a. With power OFF, turn the OPERATE PULLEY fully with your fingers in B direction. (PLAY DIRECTION)
- b. With power ON, adjust VR1 so that the voltage reading on the Digital DC Voltmeter is 9.08V.
- 3) Repeat step 1) and 2).
- 4) With power OFF, connect the connecting cord of the CAM MOTOR.

- 5) Remove the Cassette lid, Front panel and Bottom cover. (Refer to I. DISASSEMBLY)

- 6) a. Turn the power ON
- b. Adjust VR1 slightly so that the center of marker (B) coincides with the center of marker (A) in the STOP mode as shown on Fig. 4-2. (The marker (A) on the CAM WHEEL can be seen clearly by lighting it from the back.)
- c. Set the IP LS switch to ON.
- d. Turn the reel with fingers in STOP mode to check that the brake works sufficiently. When the brake acts normally, the take-up reel does not turn clockwise and the supply reel does not rotate counter clockwise.

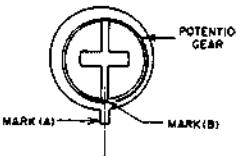


Fig. 3-15



Fig. 3-16

V. HEAD ADJUSTMENT

4-2. PINCH ROLLER PRESSURE MEASUREMENT (Refer to Fig. 4-3)

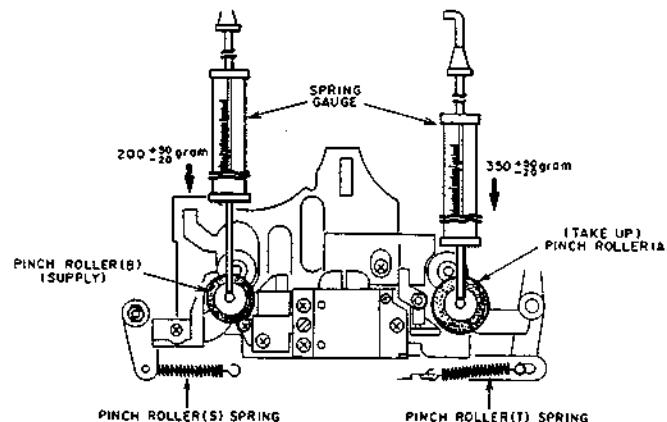


Fig. 4-3

Engage the PLAY mode. Push the pinch roller shaft down with the spring gauge, and push the pinch roller 1 to 2mm away from the capstan and release slowly. Read the spring gauge at the moment the pinch roller touches the capstan and begins to rotate.

Specified pressure : 350 ± 5 gram (Take up)
 200 ± 5 gram (Supply)

If there is no measurement obtained, replace the pinch roller spring.
 Note: Remove the cassette lid and cassette holder first.
 (Refer to Assembly and disassembly of the mechanism)

4-3. WINDING TORQUE MEASUREMENT IN EACH MODE (Refer to Fig. 4-4)

Insert a cassette torque meter (AJ-751179) and measure in each mode. For Fast Forward and Rewind, measure at the end of the tape when the tape has stopped running.

PLAY mode

Take up Torque : 40 ± 5 g-cm
 Back tension torque : 10 ± 5 g-cm

FAST FORWARD, REWIND mode

Take up Torque : 120 ± 10 g-cm

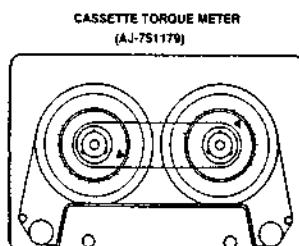


Fig. 4-4

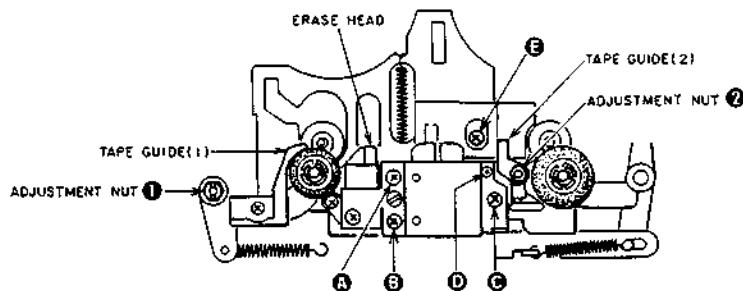


Fig. 5-1

Cassette Head Projection Gauge.

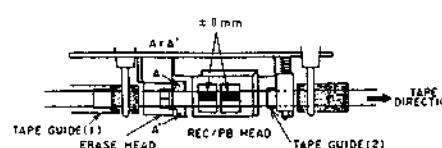


Fig. 5-2

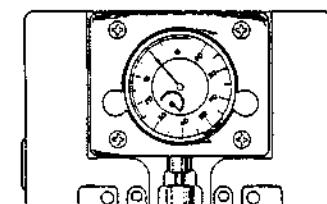


Fig. 5-3

5-1. TAPE GUIDE HEIGHT ADJUSTMENT

- 1) Load the mirror cassette tape (AJ-751178) and engage the PLAY mode.
- 2) Adjust the tape guide (2) so that the tape runs smoothly and is not hitched by the tape guide. For adjustment, use the adjustment nut ②.
- 3) After adjustment, paint-lock the adjustment nut ②.

Caution:

The tape guide adjustment nut ② is important as it fixes the position of the tape guide (1). This nut should not be moved as it has been pre-adjusted at the factory.

5-2. REC/PB HEAD HEIGHT ADJUSTMENT

- 1) Load the mirror cassette tape and engage the PLAY mode.
- 2) Turn the ④, ⑤ and ⑥ screws alternately so that the upper edge of the REC/PB head core and the tape edge is in alignment.
- NOTE: Always turn the three screws in the same direction and to the same degree. If they are not turned in the same manner, re-adjustment of head azimuth or tape transposition may be necessary.
- 3) Play back the head height adjustment tape (4 Track 1,000Hz) (AT-750775), and fine-adjust screws ④, ⑤ and ⑥ so that the largest output is obtained for both channels.

5-3. REC/PB HEAD AZIMUTH ALIGNMENT ADJUSTMENT

- 1) Play back a 10kHz (-15dB) Head Azimuth Adjustment Tape (AT-750778) and adjust the ⑦ adjustment screw until the output level from both LINE OUT channels is maximum. At the same time make sure that output phase is equal for both channels.
- 2) While recording a 12kHz (-26dBs) signal from an audio signal generator, monitor it and adjust the recording head azimuth adjustment screw ⑧ so that the play back level is maximum. At the same time make sure that output phase is equal for both channels.
- 3) After adjustment, paint-lock the adjustment screw.

- NOTES: 1. Be sure to clean the heads prior to head adjustment.
 2. Be careful not to use a magnetized driver or other magnetized tools in the vicinity of the heads.
 3. Be sure to demagnetize the heads with a Head Demagnetizer before and after head adjustment.

5-4. TAPE TRANSPORTATION SYSTEM ADJUSTMENT (Refer to Fig. 5-1, 5-2)

If there is level fluctuation or poor frequency response caused by faulty tape transportation use the following procedure to adjust the tape transportation system.

- 1) Load the mirror cassette tape (AJ-751178) and engage the PLAY mode.
- 2) Check to make sure that the tape is running smoothly and that it does not curl or wrinkle at the tape guide. If the tape is not running smoothly, make adjustment using the tape guide height adjustment screw (2).
- 3) Play back a 10kHz (-15dB) Head Azimuth Adjustment tape (AT-750778) and adjust the \odot adjustment screw so that the output from both the Right and Left LINE OUT channels is at the maximum level. At the same time make sure that output phase is equal for both channels.
- 4) After adjustment, paint-lock the adjustment screws.
- 5) After finishing the above adjustment refer to the "VI Electrical adjustment" section and perform electrical adjustment to the playback and recording circuits.

Caution:

The tape guide (1) screw is an important adjustment screw that fixes the position of tape transport. This screw should not be moved as it has been pre-adjusted at the factory.

5-5. ADJUSTMENT WHEN REC/PB HEAD IS REPLACED (Refer to Fig. 5-1, 5-2, 5-3)

Before proceeding with the following adjustment, the lid decoration must be removed. (Refer to section 3-1, "REMOVING THE LID CASE AND LID DECORATION")

- 1) Attach the REC/PB head to the head mount with the \odot , \odot and \odot screws.
- Turn each screw the same amount of times (4 or 5 times) so that the screws are tightened temporarily.
- 2) Load the mirror cassette tape (AJ-751178) and engage the play mode.
- 3) Turn the \odot , \odot and \odot screws alternately so that the upper edge of the REC/PB head core and the tape edge is in alignment.

NOTE: Always turn the three screws in the same direction and to the same degree. If they are not turned in the same manner, re-adjustment of head azimuth or tape transportation may be necessary.

- 4) Perform the following procedure to adjust the angle of the REC/PB head against the tape surface.
 - a. Using your finger, lightly rub the top of the REC/PB head (where it makes contact with the tape) until it is cloudy.
 - b. Play back the tape for a few seconds.
 - c. Eject the cassette tape and check the shape of the mark made by the tape



Fig. 5-4

- A long rectangular mark indicates good tape transportation.
- If the tape leaves an inverted triangular mark, adjust the angle of the head by turning the \odot screw in the counterclockwise direction. Repeat the adjustment until a long rectangular mark is left by the tape.
- If the tape leaves a triangular mark, adjust the angle of the head by turning the \odot screw in the clockwise direction. Repeat the adjustment until a long rectangular mark is left by the tape.
- 5) Insert the cassette head projection gauge (AJ-751180) and engage the PLAY mode. Loosen the \odot screw and adjust the position of the REC/PB head so that it is 3.2 ± 0.1 mm from the tape. Tighten the \odot screw and measure the position. Repeat the adjustment until the correct measurement is obtained.
- 6) Play back a 1000Hz (0dB) 4 track head height adjustment tape (AT-750776). Adjust the \odot screw so that the output from both the Left and Right LINE OUT channels is at the maximum level. After adjusting the \odot screw, make the exact same adjustments to the \odot and \odot screws.
- NOTE:** always turn the screws in the same direction and to the same degree. If they are not turned in the same manner, re-adjustment of head azimuth or tape transportation may be necessary.
- 7) Play back a 10kHz (-15dB) Head Azimuth Adjustment tape (AT-750778) and adjust the \odot adjustment screw so that the output from both the Left and Right LINE OUT channels is at the maximum level. At the same time make sure that output phase is equal for both channels.
- 8) Repeat adjustments 6) and 7) a few times and set at the best point.
- 9) Once adjustments 1) to 8) have been made, refer to the "VI electrical adjustment" section and perform electrical adjustment to the playback and recording circuits.
- When adjusting the recording circuit's normal position frequency response, record a 12kHz (-26dB) signal from an audio signal generator. While recording the signal, monitor it and adjust the recording head azimuth with the \odot screw so that the playback level is maximum. At the same time make sure that the Left and Right levels are the same.
- 10) After finishing the above adjustment, paint-lock the \odot , \odot , \odot and \odot screws.

Caution:

All adjustment screws other than screws \odot to \odot have been pre-adjusted and should not be moved.

VI. ELECTRICAL ADJUSTMENT

NOTES

- All adjustments should be made with CAL DOLBY, HX-PRO and MPX FILTER switches OFF (except STEP 3, 9, 14).
- Control settings
REC LEVEL : Max.
CALIBRATION LEVEL : center click position
CALIBRATION BIAS : center click position
- Use the following cassette tapes for adjustment.
NORMAL TAPE : MAXELL UD1 C-60
CrO₂ TAPE : TDK SA C-60
METAL TAPE : TDK MA C-60

ADJUSTMENT KEY

STEP No.	ADJUSTMENT ITEM
1.	TEST TAPE, Supply signal
2.	MODE
3.	Adjustment Parts
4.	Remarks/Result

Adjustment point
Test point

6. PLAYBACK EQUALIZER LEVEL

- 10kHz(-15dB) TEST TAPE (AT750778)
- PLAY
- VR102(Lch)/VR102b(Rch)
- Connect the AC voltmeters to LINE OUT
*-21.0dBs

3. MPX FILTER

- 19kHz, Set the audio signal generator output level to -6.0dBs
- STOP/SOURCE MONITOR, MPX SW ON
- FL331 (Lch)/FL331b (Rch)
- Connect the AC voltmeters to LINE OUT.
*Minimum level (Less than -36dBs)

14. CAL METER

- CrO₂ RECORDING TAPE
- REC/PLAY, CAL SW ON
- VR652 (CAL LEVEL), VR652b (CAL BIAS)
- #Adjustment must be made just before the 0dB segment lights completely

2. METER SENSITIVITY (-40dB)


- 400Hz, Set the audio signal generator output control, so that the CUT PUT level is -37.5dBs.
- STOP/SOURCE MONITOR
- VR653
- Adjust until the -40dB indicator lights completely.

1. METER SENSITIVITY (0VU)

- 400Hz, Set the audio signal generator output control, so that the LINE OUTPUT level is -4.5dBs
- STOP/SOURCE MONITOR
- VR651 (Lch)/VR651b (Rch)
- DOLBY ID segments light on

5. PLAYBACK LEVEL

- 315Hz TEST TAPE (AT750773)
- PLAY
- VR101(Lch)/VR101b(Rch)
- Connect the AC voltmeters to LINE OUT
*-6.0dBs

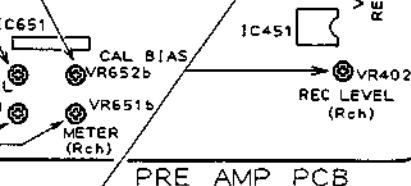

13. RECORDING LEVEL


- NORMAL RECORDING TAPE
0.15mV -0.0dBs (LINE OUT)
- REC/PLAY → PLAY
- VR402 (Lch)/VR402b (Rch)
- Connect the AC voltmeters to LINE OUT
*-6.0 dBs

4. TAPE SPEED


- 3.150Hz TEST TAPE (AT751263)
- PLAY
- VR501
- Connect a Frequency counter to LINE OUT
*3.150 ± 2Hz

VR501

SYS CON PCB

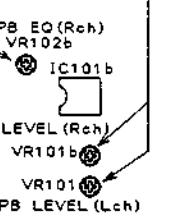

- CrO₂ RECORDING TAPE
1kHz/12kHz, -26.0dBs (LINE OUT)
- REC/PLAY → PLAY
- VR722
- *-26.0dBs (1kHz, 12.5kHz) flat

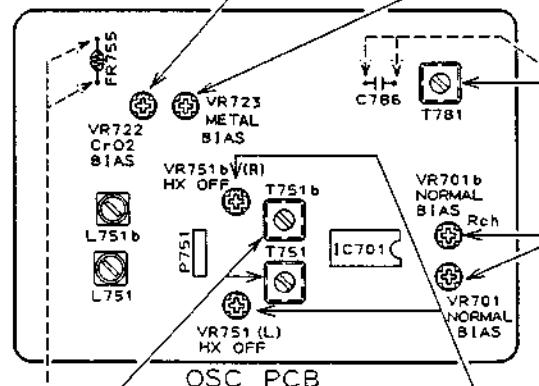

6. BIAS DIP POINT

- METAL RECORDING TAPE
1kHz/12kHz, -26.0Bs (LINE OUT)
- REC/PLAY
- T751/T751b/FR755
- Connect a DC voltmeter to FR755
*Minimum DC voltage

10. NORMAL POSITION FREQUENCY RESPONSE (HX PRO OFF)

- NORMAL RECORDING TAPE
1kHz/12kHz, -26.0Bs (LINE OUT)
- REC/PLAY → PLAY
- T751/T751b/FR755
- VR751 (Lch)/VR751b (Rch)
- Connect a DC voltmeter to LINE OUT
*-26.0dBs

VI. PARTS LIST

ATTENTION

- When placing an order for parts, be sure to list Part No., Model No. and the description of each part. Otherwise, the non-delivery of the part or the delivery of a wrong part may result.
- Please make sure that Part No. is correct when ordering. If not, a part different from the one you ordered may be delivered.
- Since the parts shown in Parts List of Preliminary Service Manual may have been the subject of changes, please use this Parts List for all future reference.

HOW TO USE THIS PARTS LIST

- This Parts List lists those parts which are considered necessary for repairs. Other common parts, such as resistors and capacitors, are listed in the "Common List for Service Parts" from which these parts should be selected and stocked.
- The Recommended Spare Parts List shows those parts in the Parts List which are considered particularly important for service.
- Parts not shown in the Parts List and "Common List for Service Parts" will not in principle be supplied.
- How to read the Parts List.

a) Mechanism Block

2. HEAD BASE BLOCK

Ref.No.	Part No.	Description
1	BH-T2023A20A	HEAD BASE BLOCK
2	HP-H2206A010A	HEAD R/P PRA-BPU C
3	ZS-477876	PAN20-03STL CMT
4	ZS-536486	BID20×08STL CMT
5	ZG-402895	SP CS ANGLE ADJUST

SP (Service Parts) Classification

This number corresponds with the individual parts index number in that figure.

b) PC Board

6. MAIN PC BOARD

Ref.No.	Part No.	Description
IC1	EI-324536	IC HD14049BP
KC2	EI-336801	IC MB8841-564M
C1A	EC-336399	C MMV V 223M 250AC (U.E.B.S.)
C1B	EC-350949	C MMV V 223M 250DC (J)
C1C	EC-336397	C MMV V 223M 125AC (CA)
X1	EI-318384	OSC XTAL NC-18C

Symbols for primary destination

- [A] : AAL (U.S.A) [S] : SAA (Australia)
- [B] : BEAB (England) [U] : U/T (Universal Area)
- [C] : CSA (Canada)
- [E] : CEE (Europe) [V] : VDE (W. Germany)
- [J] : JPN (Japan) [Y] : Custom Version

SP (Service Parts) Classification
These reference symbols correspond with component symbols in the Schematic Diagrams.

The available PC Board Blocks are listed separately.

WARNING

Δ (*) INDICATES SAFETY CRITICAL COMPONENTS. FOR CONTINUED SAFETY, REPLACE SAFETY CRITICAL COMPONENTS ONLY WITH MANUFACTURER'S RECOMMENDED PARTS.

AVERTISSEMENT


Δ (*) IL INDIQUE LES COMPOSANTS CRITIQUES DE SÉCURITÉ. POUR MAINTENIR LE DÉGRÉ DE SÉCURITÉ DE L'APPAREIL, NE REMPLACER QUE DES PIÈCES RECOMMANDÉES PAR LE FABRICANT.

1.RECOMMENDED SPARE PARTS

We suggest you to stock the following Recommended Spare Part items listed below since they can cover most of the routine service.

Ref.No.	Part No.	Description	Ref.No.	Part No.	Description
1	AX-384837J	REMOCONRC-G95	66	ES-396600J	SWPUSHSPUY525THROW [DOLBYNR]
2	BB-T2047A020K	MECHABLKGX-Z7100EV	67	ES-370933	SWSLIDESSSU01-03N [TIMERSW]
3	BH-T2047A060G	HEADBLKGX-Z7100EV	68	ES-398610J	SWTACTSCR-122HST05 [RESET]
4	BL-T2030A160A	LEVERBRAKE(A)BLKGX-F51	69	ET-381683J	DETECTORA1DM3921H0
5	BL-T2030A170A	LEVERBRAKE(B)BLKGX-F51	70	ET-345081	DETECTORSP-201-408,C [PH1]
6	BL-B336007	LEVERBRAKECAMPART	71	ET-363953	TRDTA114TS
7	BL-B336196	LEVERBTPART	72	ET-395078J	TRDTA124GS
8	BL-B336009	LEVERJECTCAMPART	73	ET-396487J	TRDTA124XLTS
9	BM-A3104A010C	MOTORBLM-310C	74	ET-371075	TRDTA124X
10	BM-396252J	MOTOROPERATION(PULLEY)PART	75	ET-370634	TRDTA143XS
11	BM-T2030A120D	REELMOTORBLKGX-95	76	ET-354415	TRDTA144ES
12	*BT-386317J	TRANSPOWT2129(B)	77	ET-353887	TRDTC114GST05
		(B)	78	ET-406755J	TRDTC114VS
			79	ET-354365	TRDTC114Y
			80	ET-395077J	TRDTC115TS
			81	ET-382952J	TRDTC123ES
			82	ET-373391	TRDTC143ZS
			83	ET-396485J	TRDTC144ELT05
			84	ET-354414	TRDTC144ES
			85	ET-370310	TRDTC144TS
			86	ET-354897	TRFET2SK170BLGRV
			87	ET-354841	TR2SA1262AF,GF05
			88	ET-364093	TR2SA1283EP
			89	ET-353899	TR2SA1317S,TU
			90	ET-397403J	TR2SA1581R,ST05
			91	ET-369603J	TR2SA933RS
			92	ET-337760	TR2SA884KF
			93	ET-352067	TR2SB744P,Q,R
			94	ET-382825J	TR2SC1740SSP05
			95	ET-397186J	TR2SC2274KEF
			96	ET-3653394	TR2SC324AE,F,GF05
			97	ET-397160J	TR2SC330R,S,T,U
			98	ET-378524J	TR2SC3383S,TU
			99	ET-400741J	TR2SC3708T,T05
			100	ET-396465J	TR2SC4038R,RT05
			101	ET-396072J	TR2SD2159V,W
			102	ET-349979	TR2SC794P,Q,R
			103	HE-39197SJ	HEADAJAHJB3721A
			104	HR-H2410A010A	HEADCOMBRP4-10SR,RP4-10SR
			105	MB-336026	BELTCAPSTAR
			106	MB-336021	BELTOOPERATION
			107	MP-336204	PINCHROLLER(B)
			108	MP-401746J	PINCHROLLER(A-2-5360)
			109	MZ-336006	CAMWHEEL
			110	MZ-336005	GEARPOTENTION
			111	TC-336005	WINDLIDERASSY

MECHA BLOCK

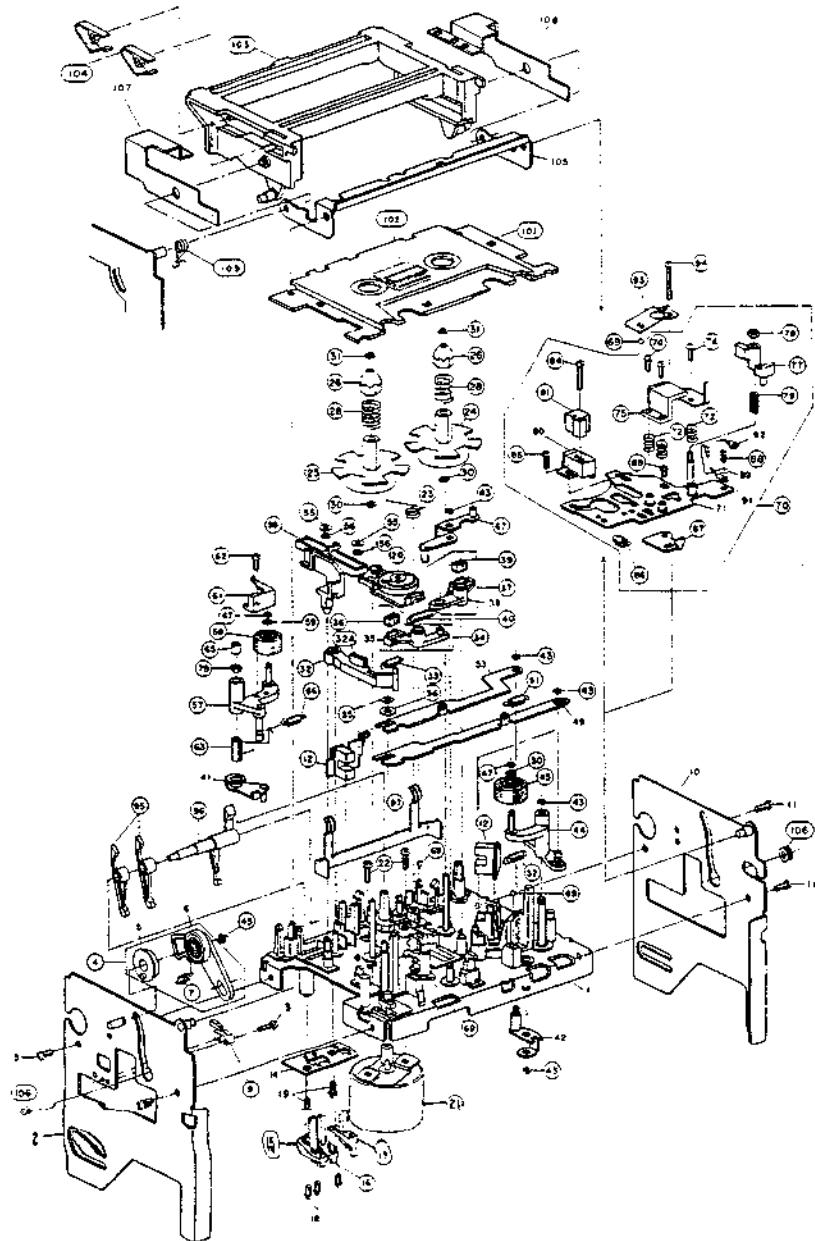

2. MECHA BLOCK

Ref.No.	Part No.	Description
4	MZ-388144J	OIL CLUTCH PART
7	ZG-388145J	SP PULL OIL CLUTCH(2)
9	ES-372912	SW LEAF SPBP2: 01-2 [SW904]
12	ET-345091	DETECTOR SPI-201-40 BC [PH1]
15	ES-336990	SW LEAF BSW-169 01-1 NO [SW901]
16	ES-336990	SW LEAF BSW-169 01-1 NO [SW902]
17	ES-336990	SW LEAF BSW-169 01-1 NO [SW903]
20	TC-336605	WIND IDLER ASSY
21	BM-T2030A1200	REEL MOTOR BLK GX-95
23	ZG-336140	SP TORSION IDLER
24	MT-395947J	REEL TABLE (R) PART
25	MT-395948J	REEL TABLE (L) PART
26	MT-349681	REEL RETAINER(B)
28	ZG-395944J	SP PUSH BT
30	ZW-305546	PW21X040X025PSL
31	ZW-343120	PW17X040X025PSL
32	BL-8336196	LEVER BT PART
32A	MZ-344983	FELT BT
33	ZG-336078	SP T2-03.2/0.20-09.0 T2-038
34	BL-T2030A160A	LEVER BRAKE (A) BLK GX-F51
36	TC-336146	BRAKE RUBBER
37	BL-T2030A170A	LEVER BRAKE (B) BLK GX-F51
39	TC-336146	BRAKE RUBBER
40	ZG-312946	SP T1-03.2/0.29-16.0 T1-062
43	ZW-270086	RING E190SUP CMT
44	BL-8336150	ARM PINCH ROLLER (A) PART
45	MP-401746J	PINCH ROLLER(A-2)-8360
47	ZW-356657	RING E190SUP CMT
51	ZG-336175J1	SP PULL PINCH ROLLER(T)
52	ZG-321534	SP T2-03.2-0.29-12.5 T2-060
55	ZW-329422	RING CS 0300
56	ZW-305464	PW31X070X050STL CMT
57	BL-8336202	ARM PINCH ROLLER (B) PART
58	MP-336204	PINCH ROLLER (B)
59	ZW-381644	PW21X040X013PSL
61	HZ-387921J	GUIDE TAPE (B)2
62	ZS-608095	PAN20X05STL CMT
63	ZG-336206	SP TORSION RETURN
65	ZW-356166	N
66	ZG-336208	SP PULL PINCH ROLLER (S)
67	BL-8336155	ARM HEAD SLIDE PART
69	MV-357208	BALL 200STL
70	BH-T2047A060G	HEAD BLK GX-Z7100EV
72	ZG-336127	SP PUSH HEAD
74	ZS-330864	PAN20X07STL CMT
75	HR-H2410A010A	HEAD COMB RP4-10SR RP4-10SR
77	H2-387920J	GUIDE TAPE(2)
78	ZW-618884	N20STL CMT 1
79	ZG-336130	SP PUSH GUIDE
81	HE-361975J	HEAD E HJWB3721A
84	ZS-306126	PAN20X12STL CMT
85	ZS-417161	PAN23X04STL CMT
86	ZG-341972	SP PULL HEAD RETURN
87	HZ-336132	ADJUST PLATE
88	ZS-201407	PAN23X03STL CMT
93	ZG-336157	SP PLATE HEAD HOLD
94	ZS-342002	ST PAN26X16STL CMT
95	ML-336158	LEVER DETECTION (S)
96	ML-336158J2	LEVER DETECTOR(A)
97	ZG-338160	SP PLATE CASSETTE HOLDER (A)
98	TC-336161J1	SUITE EJECT
101	BD-8365352-A	LID DECORATION (A) PART
102	ED-344244	D LED SLF-601C AMBER [D901]
103	SP-388168J1	LID CASE(2)
104	ZG-336615	SP PLATE CASSETTE HOLDER (B)
106	SG-336166	COLLAR LID
109	ZG-367004J	SP TORSION RETURN


NOTE:

Parts will not be supplied if they are not listed in the parts list, even if they appear on the assembling illustrations with reference No.

3. MOTOR BLOCK (BLM-310C)

Ref.No.	Part No.	Description
2	TC-8336004A	HOLDER CAPSTAN(C-1)PART
3	EV-337052	VR ROTARY 16L10XRBL103
4	MZ-336005	GEAR POTENTION
5	ZS-432843	PAN26X04STL CMT
6	BL-8336007	LEVER BRAKE CAM PART
7	ZW-653163	RING CS 280STL PKR
8	MZ-336006	CAM WHEEL
9	ZW-336604	RETAINING RING D 930SUP ACP
10	TC-336002J1	HOLDER CAPSTAN(B)
11	ZS-355618	ST BR26X04STL CMT
12	BL-8336009	LEVER EJECT CAM PART
13	ZG-353158J2	SP PLATE EJECT
14	ZS-477876	PAN20X03STL CMT
15	EA-336012	PC FG
16	ZS-479474	PAN26X05STL CMT
17	BF-390568J1	FLYWHEEL (A)PART
18	BF-336025	FLYWHEEL (B)
19	ZW-309295	WASHER THRUST
20	MB-338626	BELT CAPSTAN
22	BA-M3103A030A	PC (#) MOTOR BLK BLM-300
23	ZS-477807	CTS26X05STL CMT
24	TC-336015	HOLDER THRUST(A)
25	TC-336027	HOLDER THRUST(B)
26	ZS-479474	PAN26X05STL CMT
27	BM-396252J	MOTOR OPERATION(PULLEY)PART
29	ZS-432674	PAN30X03STL CMT
30	MR-338019	PULLEY OPERATE
31	MB-336021	BELT OPERATION
32	BM-M3104A010C	MOTOR BLM-310C

MOTOR BLOCK (BLM-310C)

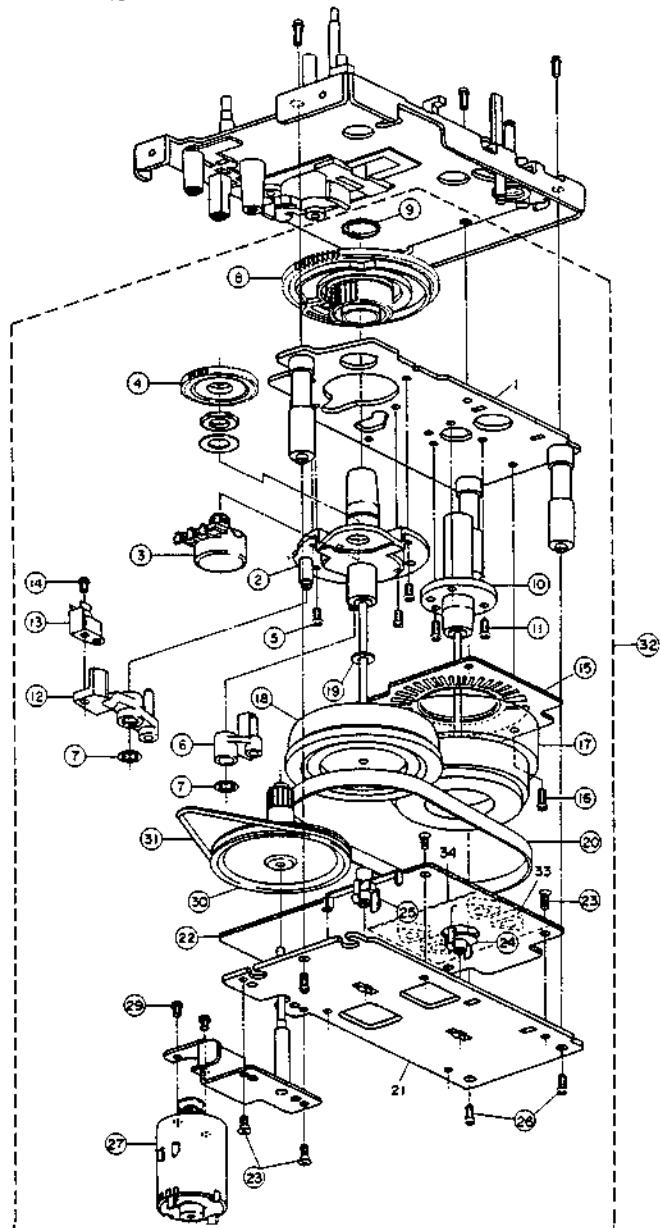

PARTS LIST

4. P.C BOARD BLOCK

Ref.No.	Part No.	Description
1A	BA-T2129A020C	PC(#) PREAMP BLK GX-75-2
1B	BA-T2129A020B	PC(#) PREAMP BLK GX-95-2
2	BA-T2128A030A	PC(#) SYSCON BLK GX-Z7100EV
3	BA-T2128A040C	PC POWER BLK GX-95-2

PC (#) PRE AMP BLK CONSISTS OF FOLLOWING P.C BOARD.

- PRE-AMP P.C BOARD
- OSC P.C BOARD
- HEADPHONE P.C BOARD

PC (#) SYSCON BLK CONSISTS OF FOLLOWING P.C BOARD.

- SYSCON P.C BOARD
- OPERATION P.C BOARD
- TIMER SW P.C BOARD

5. PRE-AMP P.C BOARD

Ref.No.	Part No.	Description
D551	ED-624903	D SILICON H 1S2473
D552	ED-624903	D SILICON H 1S2473
D553	ED-624903	D SILICON H 1S2473
D554	ED-624903	D SILICON H 1S2473
D555	ED-624903	D SILICON H 1S2473
D801	ED-346545	D ZENER H H29C2L
D802	ED-346545	D ZENER H H29C2L
D811	ED-346540	D ZENER H H29B1L
D812	ED-346540	D ZENER H H29B1L
D841	ED-305655	D ZENER H H24B3
FL331	EH-372101	FILTER D6 42B-5162-04
IC101	EI-389881J	IC NUM4580D-D
IC102	EI-393324J	IC M5218AL
IC103	EI-362587	IC M5238L
IC201	EI-359985	IC CX20187
IC251	EI-357498	IC M51143AL
IC301	EI-359985	IC CX20187
IC451	EI-362588	IC M5238P
IC501	EI-362587	IC M5238L
IC551	EI-310036	IC TC4066BP
IC601	EI-384868J	IC BU4030B
IC651	EI-373980	IC BA15216N
IC901	EI-393324J	IC MS216AL
J501A	EJ-34437U	PIN J YKC21-0081 P 6P [GX-75-2]
J501B	EJ-397198J	PIN J YKC-21-0464 6P [GX-95-2]
L101	EO-392605J	COIL FIX 1 RC875 561J
L102	EO-392605J	COIL FIX 1 RC875 561J
L201	EO-372996	COIL FIX 1 RC875 223J
L301	EO-372996	COIL FIX 1 RC875 223J
L381	EO-409782J	COIL FIX 1 EL0605RA T05 222J
L451	ED-400826J	COIL FIX 2 2104A-682 682G
SW501	ES-396600J	SW PUSH SPUY52 5THROW [DOLBY NR]
SW502	ES-396601J	SW PUSH SPUY19 2-06-02N [CD/DAT DIRECT]
TR101	ET-354897	TR FET 2SK170 BLGRV
TR331	ET-389251J	TR 2SC1740S S P06
TR332	ET-389251J	TR 2SC1740S S P06
TR401	ET-378524J	TR 2SC3383 S.T.U
TR402	ET-378524J	TR 2SC3383 S.T.U
TR403	ET-378524J	TR 2SC3383 S.T.U
TR451	ET-378524J	TR 2SC3383 S.T.U
TR452	ET-378524J	TR 2SC3383 S.T.U
TR453	ET-378524J	TR 2SC3383 S.T.U
TR501	ET-378524J	TR 2SC3383 S.T.U
TR502	ET-398803J	TR 2SA923S R.S
TR651	ET-396488J	TR DTC144EL T05
TR652	ET-396488J	TR DTC144EL T05
TR653	ET-397403J	TR 2SA1561 RLS T05
TR654	ET-378524J	TR 2SC3383 S.T.U
TR661	ET-354414	TR DTC144ES
TR661	ET-378524J	TR 2SC3383 S.T.U
TR661	ET-349979	TR 2SD794 P.Q.R
TR802	ET-353067	TR 2SB744 P.Q.R
TR811	ET-349979	TR 2SD794 P.Q.R
TR812	ET-353067	TR 2SB744 P.Q.R
VR101	EV-818107	R S-FIX H RH1021C 0.50W471
VR102	EV-390669J	R S-FIX H T05 RH0638C 0.1W 103
VR401	EV-389927J	VR RK16312AO SPL C1253X2 [CALIBRATION LEVEL]
VR402	EV-391833J	R S-FIX H T05 RH0638C 0.1W 104
VR501	EV-396813J	VR ROTARY RK1612220 A503X2 [REC LEVEL]
VR651	EV-391833J	R S-FIX H T05 RH0638C 0.1W 104
VR652	EV-390669J	R S-FIX H T05 RH0638C 0.1W 103
VR653	EV-396335J	R S-FIX H T05 RH0638C 0.1W 474
VR721	EV-400657J	VR ROTARY RK1631110 B202 [CALIBRATION BIAS]
VR901	EV-373386	VR ROTARY RK16312AO A104X2 [HEADPHONE LEVEL]

PARTS LIST

6. DSC P.C BOARD

Ref No.	Part No.	Description
D781	ED-624903	D SILICON H 1S2473
D782	ED-624903	D SILICON H 1S2473
D831	ED-346559	D ZENER M HZ12P2L
D832	ED-624903	D SILICON H 1S2473
FR755	ER-320528	R FUSE H ERD2FC 1/4W 22R0G
FR831	ER-401042J	R FUSE T05 ERD2FCV 1/4W 33R0G
I701	EI-373383	IC UPC1267CA
I751	EO-401044J	COIL FIX 2 21D4A-262 262G
L752	EO-373247	COIL FIX 1 RC875 272J
L781	EO-379851J	COIL OSC 1 7132 682J
T781	EO-400766J	COIL OSC H T2128H(X)1-7 200KHZ
T781	EO-389453J	COIL T212 105KHZ
TR721	ET-354414	TR DTC144ES
TR722	ET-354414	TR DTC144ES
TR723	ET-354414	TR DTC144ES
TR724	ET-400795J	TR DTC114GS T05
TR725	ET-353887	TR DTC114ES
TR726	ET-353887	TR DTC114ES
TR727	ET-353887	TR DTC114ES
TR751	ET-354414	TR DTC144ES
TR781	ET-400741J	TR ZSC3708 T T05
TR782	ET-400741J	TR ZSC3708 T T05
TR783	ET-396072J	TR 2SD2159 V.W
TR831	TR 378524J	TR ZSC383 S.T.U
VR701	EV-396235J	R S-FIX H T05 RH0538C 0.1W 474
VR722	EV-390873J1	R S-FIX H T05 RH0538C 0.1W 472
VR723	EV-397243J	R S-FIX H T05 RH0538C 0.1W 334
VR751	EV-390873J1	R S-FIX H T05 RH0538C 0.1W 472

7. HEADPHONE P.C BOARD

Ref No.	Part No.	Description
J901	EJ-369995	PHONE J 3P HJ0540-410 GP 6.3 [HEADPHONE JACK]

8. SYSCON P.C BOARD

Ref No.	Part No.	Description
C204	EC-201645	EC V CUT AS1 222M 6.3DC
D101	ED-624903	D SILICON H 1S2473
D102	ED-624903	D SILICON H 1S2473
D103	ED-624903	D SILICON H 1S2473
D104	ED-624903	D SILICON H 1S2473
D105	ED-624903	D SILICON H 1S2473
D106	ED-624903	D SILICON H 1S2473
D107	ED-624903	D SILICON H 1S2473
D108	ED-624903	D SILICON H 1S2473
D109	ED-307572	D SILICON H 1SS131
D110	ED-624903	D SILICON H 1S2473
D111	ED-624903	D SILICON H 1S2473
D112	ED-624903	D SILICON H 1S2473
D113	ED-307572	D SILICON H 1SS131
D114	ED-307572	D SILICON H 1SS131
D115	ED-307572	D SILICON H 1SS131
D116	ED-307572	D SILICON H 1SS131
D117	ED-307572	D SILICON H 1SS131
D118	ED-624903	D SILICON H 1S2473
D119	ED-624903	D SILICON H 1S2473
D201	ED-396063J	D ZENER H HZ57B-1
D202	ED-624903	D SILICON H 1S2473
D203	ED-394924J	D ZENER H HZ55C1
D205	ED-396365J	D ZENER H HZ56C3
D206	ED-624903	D SILICON H 1S2473
D207	ED-393772J	D ZENER H HZ1101L T26
D209	ED-393772J	D ZENER H HZ1101L T26
D301	ED-388358J	D ZENER H HZ55C2
D302	ED-393772J	D ZENER H HZ55C3 T26
D303	ED-393772J	D ZENER H HZ1103 T26
D304	ED-400779J	D ZENER H HZ56A3 T26
D305	ED-624903	D SILICON H 1S2473
D306	ED-400780J	D ZENER H HZ56B1 T26
D401	ED-624903	D SILICON H 1S2473

PARTS LIST

9. OPERATION P.C BOARD

Ref No.	Part No.	Description
D402	ED-624903	D SILICON H 1S2473
D405	ED-624903	D SILICON H 1S2473
FR209	ER-400605J	R FUSE V T05 ERD2FCV 1/4W 15R0G
I81	EI-322329J	COMP R R3LE14T 223J
IC101	EI-337036	IC LC760C
IC102	EI-384692J	IC M50754-106SP
IC103	EI-384688J	IC BU4030E
IC201	EI-377880	IC MSF7805L
IC301	EI-385862	IC LB1645
IC302	EI-373980	IC BA15218N
IC303	EI-373980	IC BA15218N
IC501	EI-336599	IC UPC1043C
TR101	ET-371075	TR DTA124XS
TR102	ET-371075	TR DTA124XS
TR103	ET-371075	TR DTA124XS
TR104	ET-395077J	TR DTC115T'S
TR105	ET-395077J	TR DTC115T'S
TR106	ET-385077J	TR DTC115T'S
TR109	ET-385078J	TR DTA124S
TR110	ET-371075	TR DTA124XS
TR111	ET-371075	TR DTA124XS
TR112	ET-371075	TR DTA124XS
TR113	ET-371075	TR DTA124XS
TR114	ET-354414	TR DTC144S
TR115	ET-354414	TR DTC144S
TR116	ET-382952J	TR DTC123ES
TR117	ET-371075	TR DTA124XS
TR118	ET-376310	TR DTC144TS
TR201	ET-397160J	TR 2SC333C R.S.T.U.V
TR202	ET-363953	TR DTA114TS
TR203	ET-363953	TR DTA114TS
TR204	ET-354414	TR DTC144S
TR207	ET-365394	TR 2SC3242A E.F.G F05
TR208	ET-354584J	TR 2SA1282A E.F.G F05
TR301	ET-354414	TR DTC144S
TR302	ET-373391	TR DTC143ZS
TR303	ET-354414	TR DTC142S
TR304	ET-354414	TR DTC144S
TR401	ET-354365	TR DTC114YS
TR402	ET-354365	TR DTC114YS
TR403	ET-354365	TR DTC114YS
TR404	ET-354365	TR DTC114YS
TR405	ET-354365	TR DTC114YS
TR501	ET-397160J	TR 2SC333C R.S.T.U.V
VR501	EV-330531	R-S-FIX H TM8KV2-1S 0.50W503
X101	EI-396490J	OSC CE CST4.00MGW-TF01 T05

10. TIMER SW P.C BOARD

Ref No.	Part No.	Description
SW701	ES-370933	SW SLIDE SSSU 01-03N [TIMER SW]

11. POWER P.C BOARD

Ref No.	Part No.	Description
C1	EC-324662	C EC V CUT AS1 222M 25.0DC
C2	EC-324662	C EC V CUT AS1 222M 25.0DC
C3	EC-365619	C EC V CUT AS1 102M 25.0DC
C5	EC-365619	C EC V CUT AS1 102M 25.0DC
C6	EC-365619	C EC V CUT AS1 102M 25.0DC
C8	EC-365619	C EC V CUT AS1 102M 25.0DC
C9	EC-365619	C EC V CUT AS1 102M 25.0DC
C10	EC-322804	C EC V CUT AS1 472M 16.0DC
C15	EC-338411	C CE V DET F2 1030 400AC
D1	ED-338322	D SILICON 10DF1 100/1.0A
D2	ED-338322	D SILICON 10DF1 100/1.0A
D3	ED-338322	D SILICON 10DF1 100/1.0A
D4	ED-338322	D SILICON 10DF1 100/1.0A
D6	ED-511907	D SILICON 1N4002 100/1.0A
D7	ED-511907	D SILICON 1N4002 100/1.0A
D8	ED-511907	D SILICON 1N4002 100/1.0A
D9	ED-511907	D SILICON 1N4002 100/1.0A
D10	ED-511907	D SILICON 1N4002 100/1.0A
D11	ED-511907	D SILICON 1N4002 100/1.0A
D12	ED-511907	D SILICON 1N4002 100/1.0A
D13	ED-511907	D SILICON 1N4002 100/1.0A
D14	ED-511907	D SILICON 1N4002 100/1.0A
D15	ED-511907	D SILICON 1N4002 100/1.0A
D16	ED-511907	D SILICON 1N4002 100/1.0A
D17	ED-511907	D SILICON 1N4002 100/1.0A
D18	ED-511907	D SILICON 1N4002 100/1.0A
D19	ED-395070J	D ZENER H HZ520-3
D20	ED-395071J	D ZENER H HZ520C2
D21	ED-395071J	D ZENER H HZ520C2
D22	ED-511907	D SILICON 1N4002 100/1.0A
F1A	#EF-601942	FUSE SEMKO T 250V 630MA [E]
F1B	#EF-358974	FUSE BET T 250V 630MA [B]
F2A	#EF-601942	FUSE SEMKO T 250V 630MA [E]
F2B	#EF-358974	FUSE BET T 250V 630MA [B]
PR1	ER-320528	R FUSE H ERD2FC 1/4W 22R0G
PR2	ER-320528	R FUSE H ERD2FC 1/4W 22R0G
SW1	#ES-371104	SW PUSH SDLD1 01-1
TR1	ET-364093	TR 2SA1263 E.F
TR2	ET-365394	TR 2SC3242A E.F.G F05
TR3	ET-354841	TR 2SA1282A F.G F05


12. MOTOR P.C BOARD

Ref No.	Part No.	Description
IC1	EI-400756J	IC NJM4558L-B
IC3	EI-400755J	HOLE-E HWK-101A-04(D)
IC4	EI-400755J	HOLE-E HWK-101A-04(D)
TR1	ET-397156J	TR 2SC2274K E.P
TR2	ET-337760	TR 2SA984K F
TR3	ET-397156J	TR 2SC2274K E.F
TR4	ET-337760	TR 2SA984K F
VR1	EV-464253	R-S-FDX V V8K1-1 0.10W 202
VR2	EV-464253	R-S-FDX V V8K1-1 0.10W 202

PARTS LIST

PARTS LIST

FINAL ASSEMBLY BLOCK

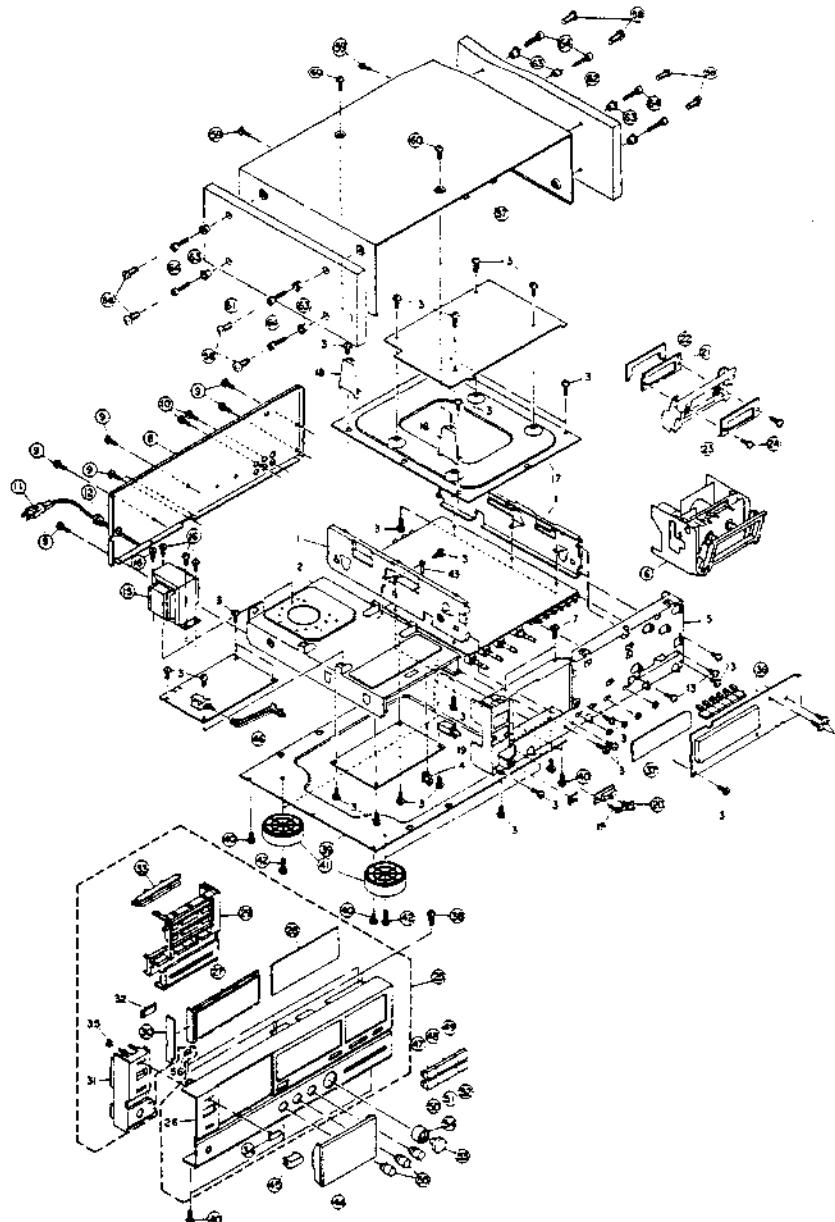

PARTS LIST

13. FINAL ASSEMBLY

Ref.No.	Part No.	Description
6	BB-T2047AD20K	MECHA BLK GX-Z7100EV
8A	SP-396307J1	PANEL REAR GX-75-2B(E)
8B	SP-396305J1	PANEL REAR GX-95-2B(E)
8C	SP-396306J1	PANEL REAR GX-95-2B(B)
9	ZS-376523	ST B1030X05STL BN EARTH LOCK
10	ZS-350934	PT B1030X05STL BN
11A	*EW-336923	AC CORD 2C KP-419CLTCE-2F EV [E]
11B	*EW-346249	AC CORD 2 CORES LCFL2X075 B [B]
12	*EZ-631945	STRAIN RELIEF SR-4N-4
15A	*BT-396316J	TRANS POW T2129(E) [E]
15B	*BT-396317J	TRANS POW T2129(B) [B]
16	ZS-301576	ST PAN40X10STL CMT
20	SK-358066B	KNOB SLIDE-BLACK
21	MZ-385721J2	PLATE DAMP
22	SZ-392824J	SCHEET DAMP NEW
23	SE-385611J	PLATE STABI
24	ZS-387752J	6RB26X030SCM BZN
25A	BD-T2107A050	PANEL FRONT BLK GX-75-2B
25B	BD-T2107A050K	PANEL FRONT BLK GX-95-2B
27	SE-382435J	WINDOW METER
28	SE-384090J	FILTER FLD
29	SK-384075J	KNOB OPERATE B
33	SK-384076J1	KNOB B
34	SM-385756C	NAME PLATE AKA(2)
35	SK-384077J	KNOB PUSH B
37	SE-384091J	MASK VR
38	ZS-358936	ST B1030X06STL CMT
39A	SP-384060J	CHASSIS BOTTOM [GX-75-2]
39B	SP-384065J1	CHASSIS BOTTOM(2) [GX-95-2]
40	ZS-305827	ST B1030X05STL BN
41A	SA-384105J	FOOT ROUND SHAPED(N)
41B	SA-384387J	FOOT ROUND SHAPED(NX2) [GX-95-2]
42	ZS-389961J	BT B1030X14STL COP CLEAR CUP
44A	BD-T2124A060C	LID PANEL BLK GX-Z7100EV-B [GX-75-2]
44B	BD-T2124A060E	LID PANEL BLK GX-95-2B [GX-95-2]
45	SK-373236B	KNOB POWER-B
46	MZ-384059J	JOINT POW
47	SK-373337C	KNOB OPERATION(B) REW-BLACK
48	SK-373338C	KNOB OPERATION(A) PLAY-BLACK
49	SK-373337A	KNOB OPERATION(B) FF-BLACK
50	SK-373337E	KNOB OPERATION(B) PAUSE-BLACK
51	SK-373336A	KNOB OPERATION(A) STOP-BLACK
52	SK-373337G	KNOB OPERATION(B) MUTE B
53	SK-384083J	KNOB REC1/B PART
54	SK-384088J	KNOB REC1/B PART
55	SK-391051J	KNOB VR-B(2) PART
57	SP-384100J1	COVER UPPER B
58	ZS-341960	ST B1040X06STL BN [GX-75-2]
59	ZS-376523	ST B1030X06STL BN EARTH LOCK
60	ZS-381482J	SCREW TOP COVER(3) B OM
61	SP-384102J	SIDEBOARD(L)
62	SP-384101J	SIDEBOARD(R) [GX-95-2]
63	ZW-376292	WASHER SIDE BOARD [GX-95-2]
64	ZS-376293	SCREW SIDE BOARD [GX-95-2]

NOTE:

Parts will not be supplied if they are not listed in the parts list, even if they appear on the assembling illustrations with reference No.

14. ACCESSORY

Ref.No.	Part No.	Description
1	EW-383168J	CORD TC-C-05S P-P 2P 2PCS
2	AX-384837J	REMOCON RC-G95

15. REMOTE CONTROL RC-G95

Ref.No.	Part No.	Description
1	SC-726112J	CASE BATTERY GX-Z9100R

PARTS LIST

MEMO

ABBREVIATIONS (CASSETTE)

ABBREVIATION	EXPLANATION	ABBREVIATION	EXPLANATION
AC	Alternating Current	MIN	MINute
A/D	Analog/Digital	MML	Maximum Modulation Level
AF	Auto Fader	MOL	Maximum Output Level
AMP	AMPlifier	MPX	Multi Plex
AR	Anti Recording	NC	Not Connected (No Connection)
AT BIAS	Auto Tuning BIAS	NFB	Negative Feed Back
ATT	ATTenuator	NORM	NORMal
BAL	BALance	NR	Noise Reduction
BEF	Band Elimination Filter	OSC	OSCillator (OSCillation)
BSS	Blank Search System	P	Pulse
CAP M	CAPstan Motor	PB	Play Back
CH	CHannel	QMSS	Quick Memory Search System
COMP	COMParator	QR	Quick Reverse
CONT	CONTinuance	R CH	Right CHannel
CRLP	Computer Recording Level Processing	REC	REcord (REcording)
CS	Chip Select	REV	REVerse
D/A	Digital/Analog	ROT	ROTation
DC	Direct Current	REW	REWind
DET	DETector	SEC	SECond
DISCRI	DISCRiminator	SELE	SELEctor
DUB	DUBbing	SENS	SENsitivity
EQ	EQUALizer	SEPP	Single Ended Push Pull
FF (or F.FWD)	Fast FORWARD	SIG	SIGnal
FLD	FLuorescent Display	SPECT	SPECTrum
FREQ	FREQUENCY	STD	STanDard
FWD	FORWARD	SW	SWitch
GND	GrouND	SYSCON	SYStem CONtrol
H	High	TP	Test Point
HPF	High Pass Filter	TRIG	TRIGe
IND	INDicator	VCA	Voltage Control Attenuator
IPLS	Instant Program Location System	VOL	VOLUME
L	Low	VOLT	VOLTage
L CH	Left CHannel	VR	Variable Resistor
LED	Light Emitting Diode	XTAL	cysTAL
MEMO	MEMOry	X1	Normal speed
MICOM	MicroCOMputer	X2	Dubble speed

AKAI

MODEL GX-75_{MKII}

MODEL GX-95_{MKII}


SCHEMATIC DIAGRAMS AND PC BOARDS

TABLE OF CONTENTS


I. SCHEMATIC DIAGRAMS AND PC BOARDS

1. CONNECTION DIAGRAM	5
2. SYSTEM CONTROL	6
3. PRE AMP, OSC	8


II. BLOCK DIAGRAM	10
-------------------------	----

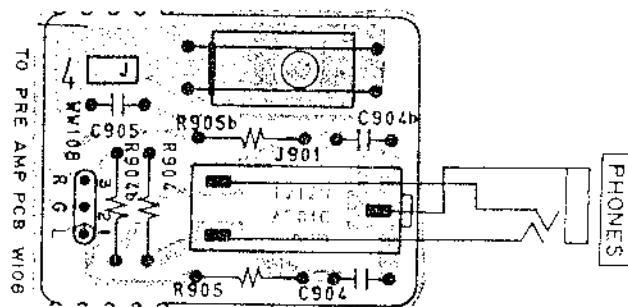


PHONE PCB T2I29A50IC

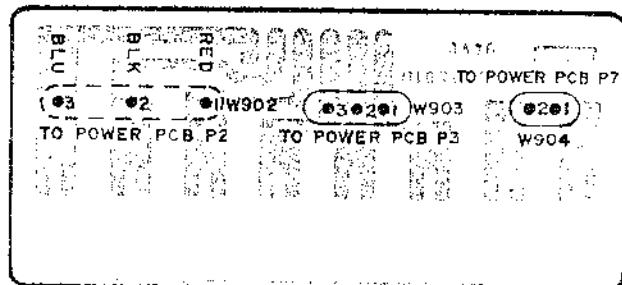


POWER TRANS PCB (1)
T2I29A50ID

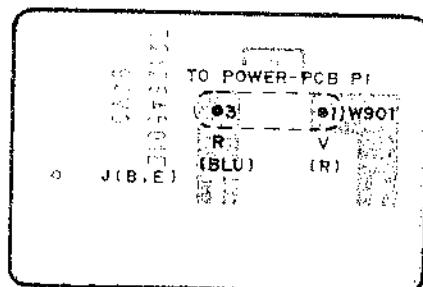

POWER TRANS PCB (2)
T2I29A50IE

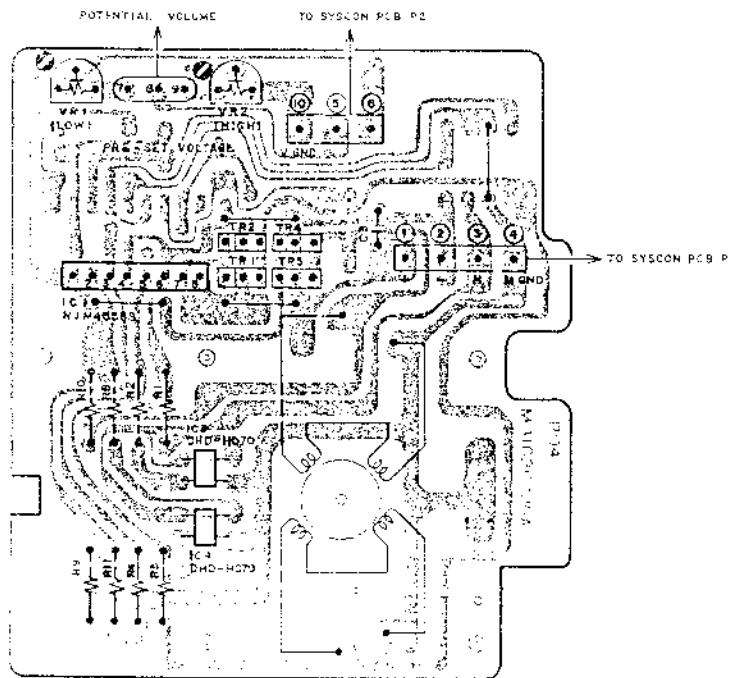


MOTOR PCB M3103C726A

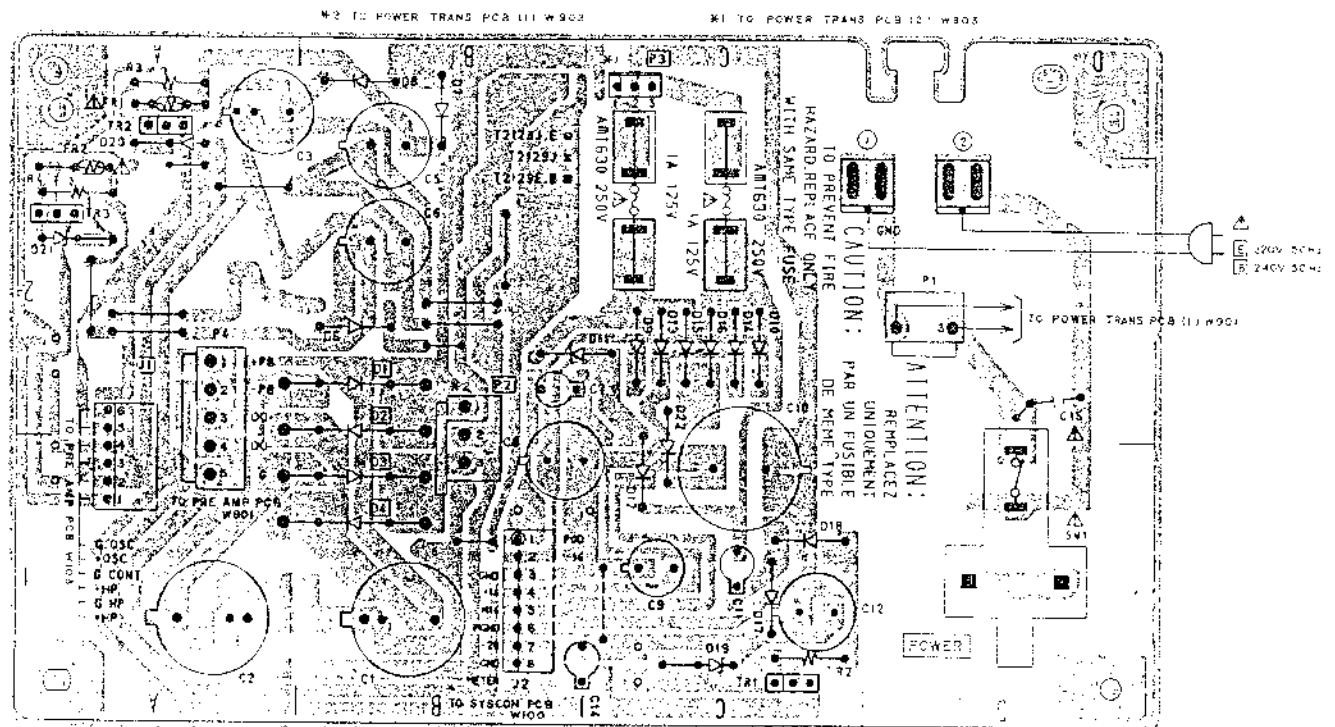


**WHEN NO. 1 INDICATES SAFETY CRITICAL COMPONENTS FOR CINT MUL SAFETY
HIPS, MAIN ENGIN SAFETY CRITICAL COMPS ONLY WITH MANUFACTURER'S
PROVENABILITY**

**AVERTISSEMENT : LORSQUE LE N° 1 INDIQUE DES COMPOSANTS CRITIQUEMENT SÉCURITÉ
POUR MAIN ENGIN, SEULEMENT LES COMPOSANTS CRITIQUEMENT SÉCURITÉ
DU MOTEUR PRINCIPAL, SEULEMENT AVEC LA PROVÉNANCE DU FABRICANT.**

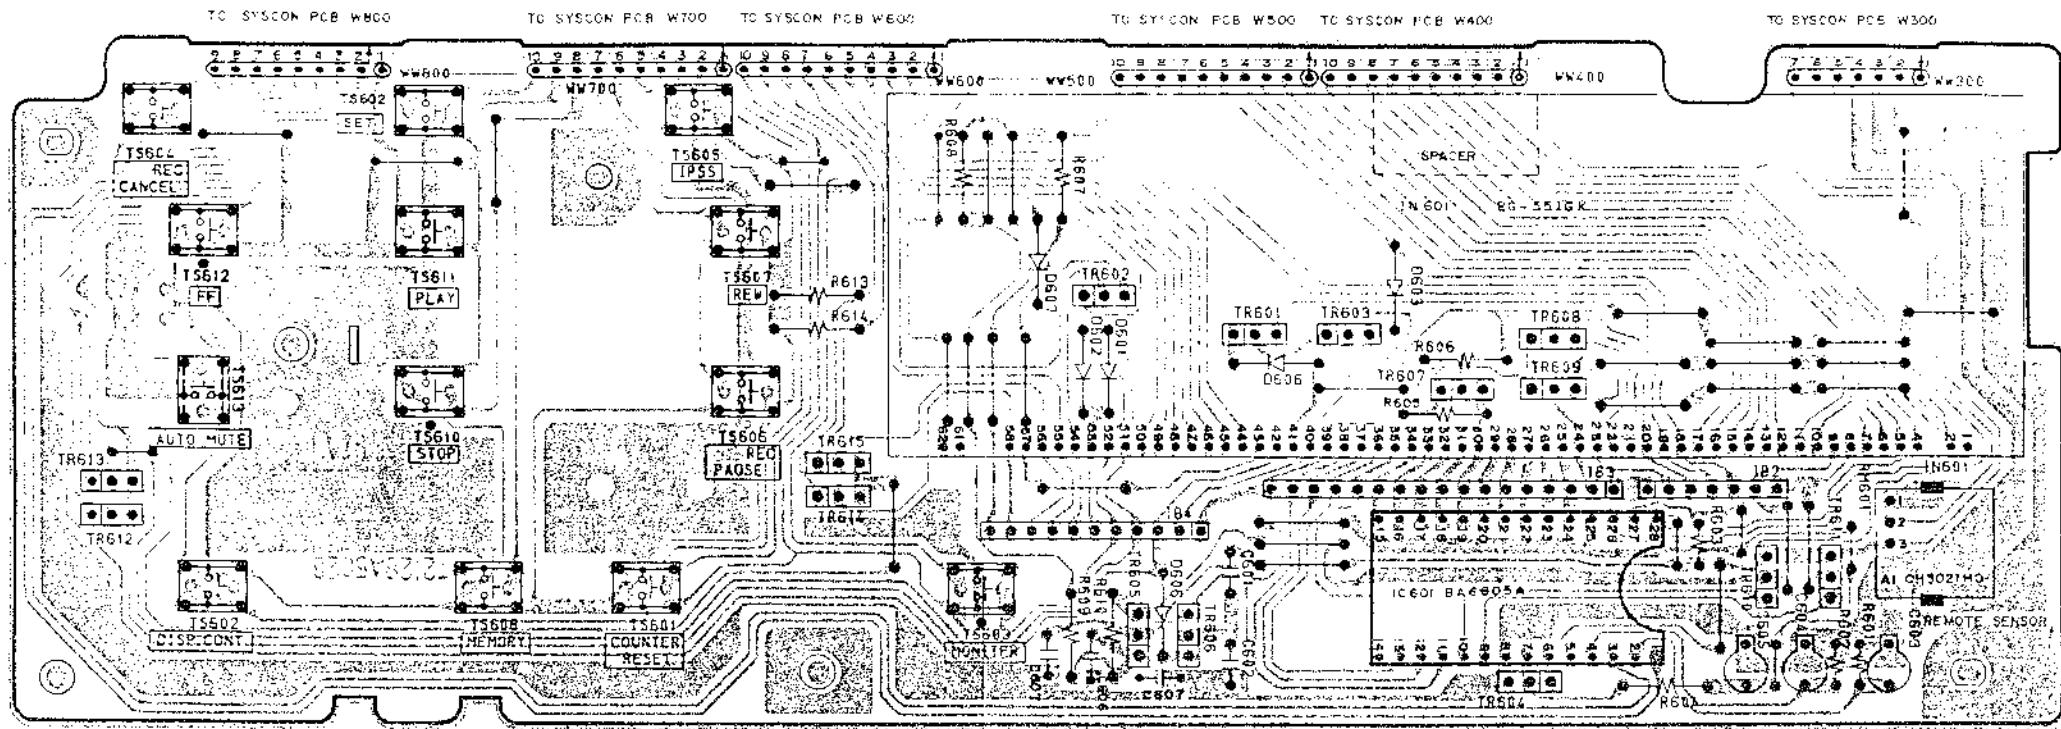


OPERATION PCB T2I28A502B

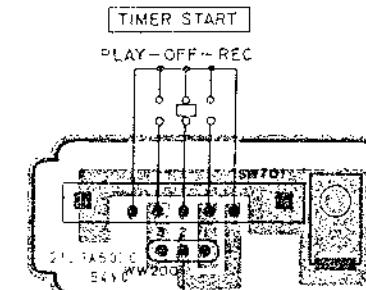

二〇一九年 三月 一〇〇七

TIMER PCB T2I28A502C

TIMER PCB T2I28A502C

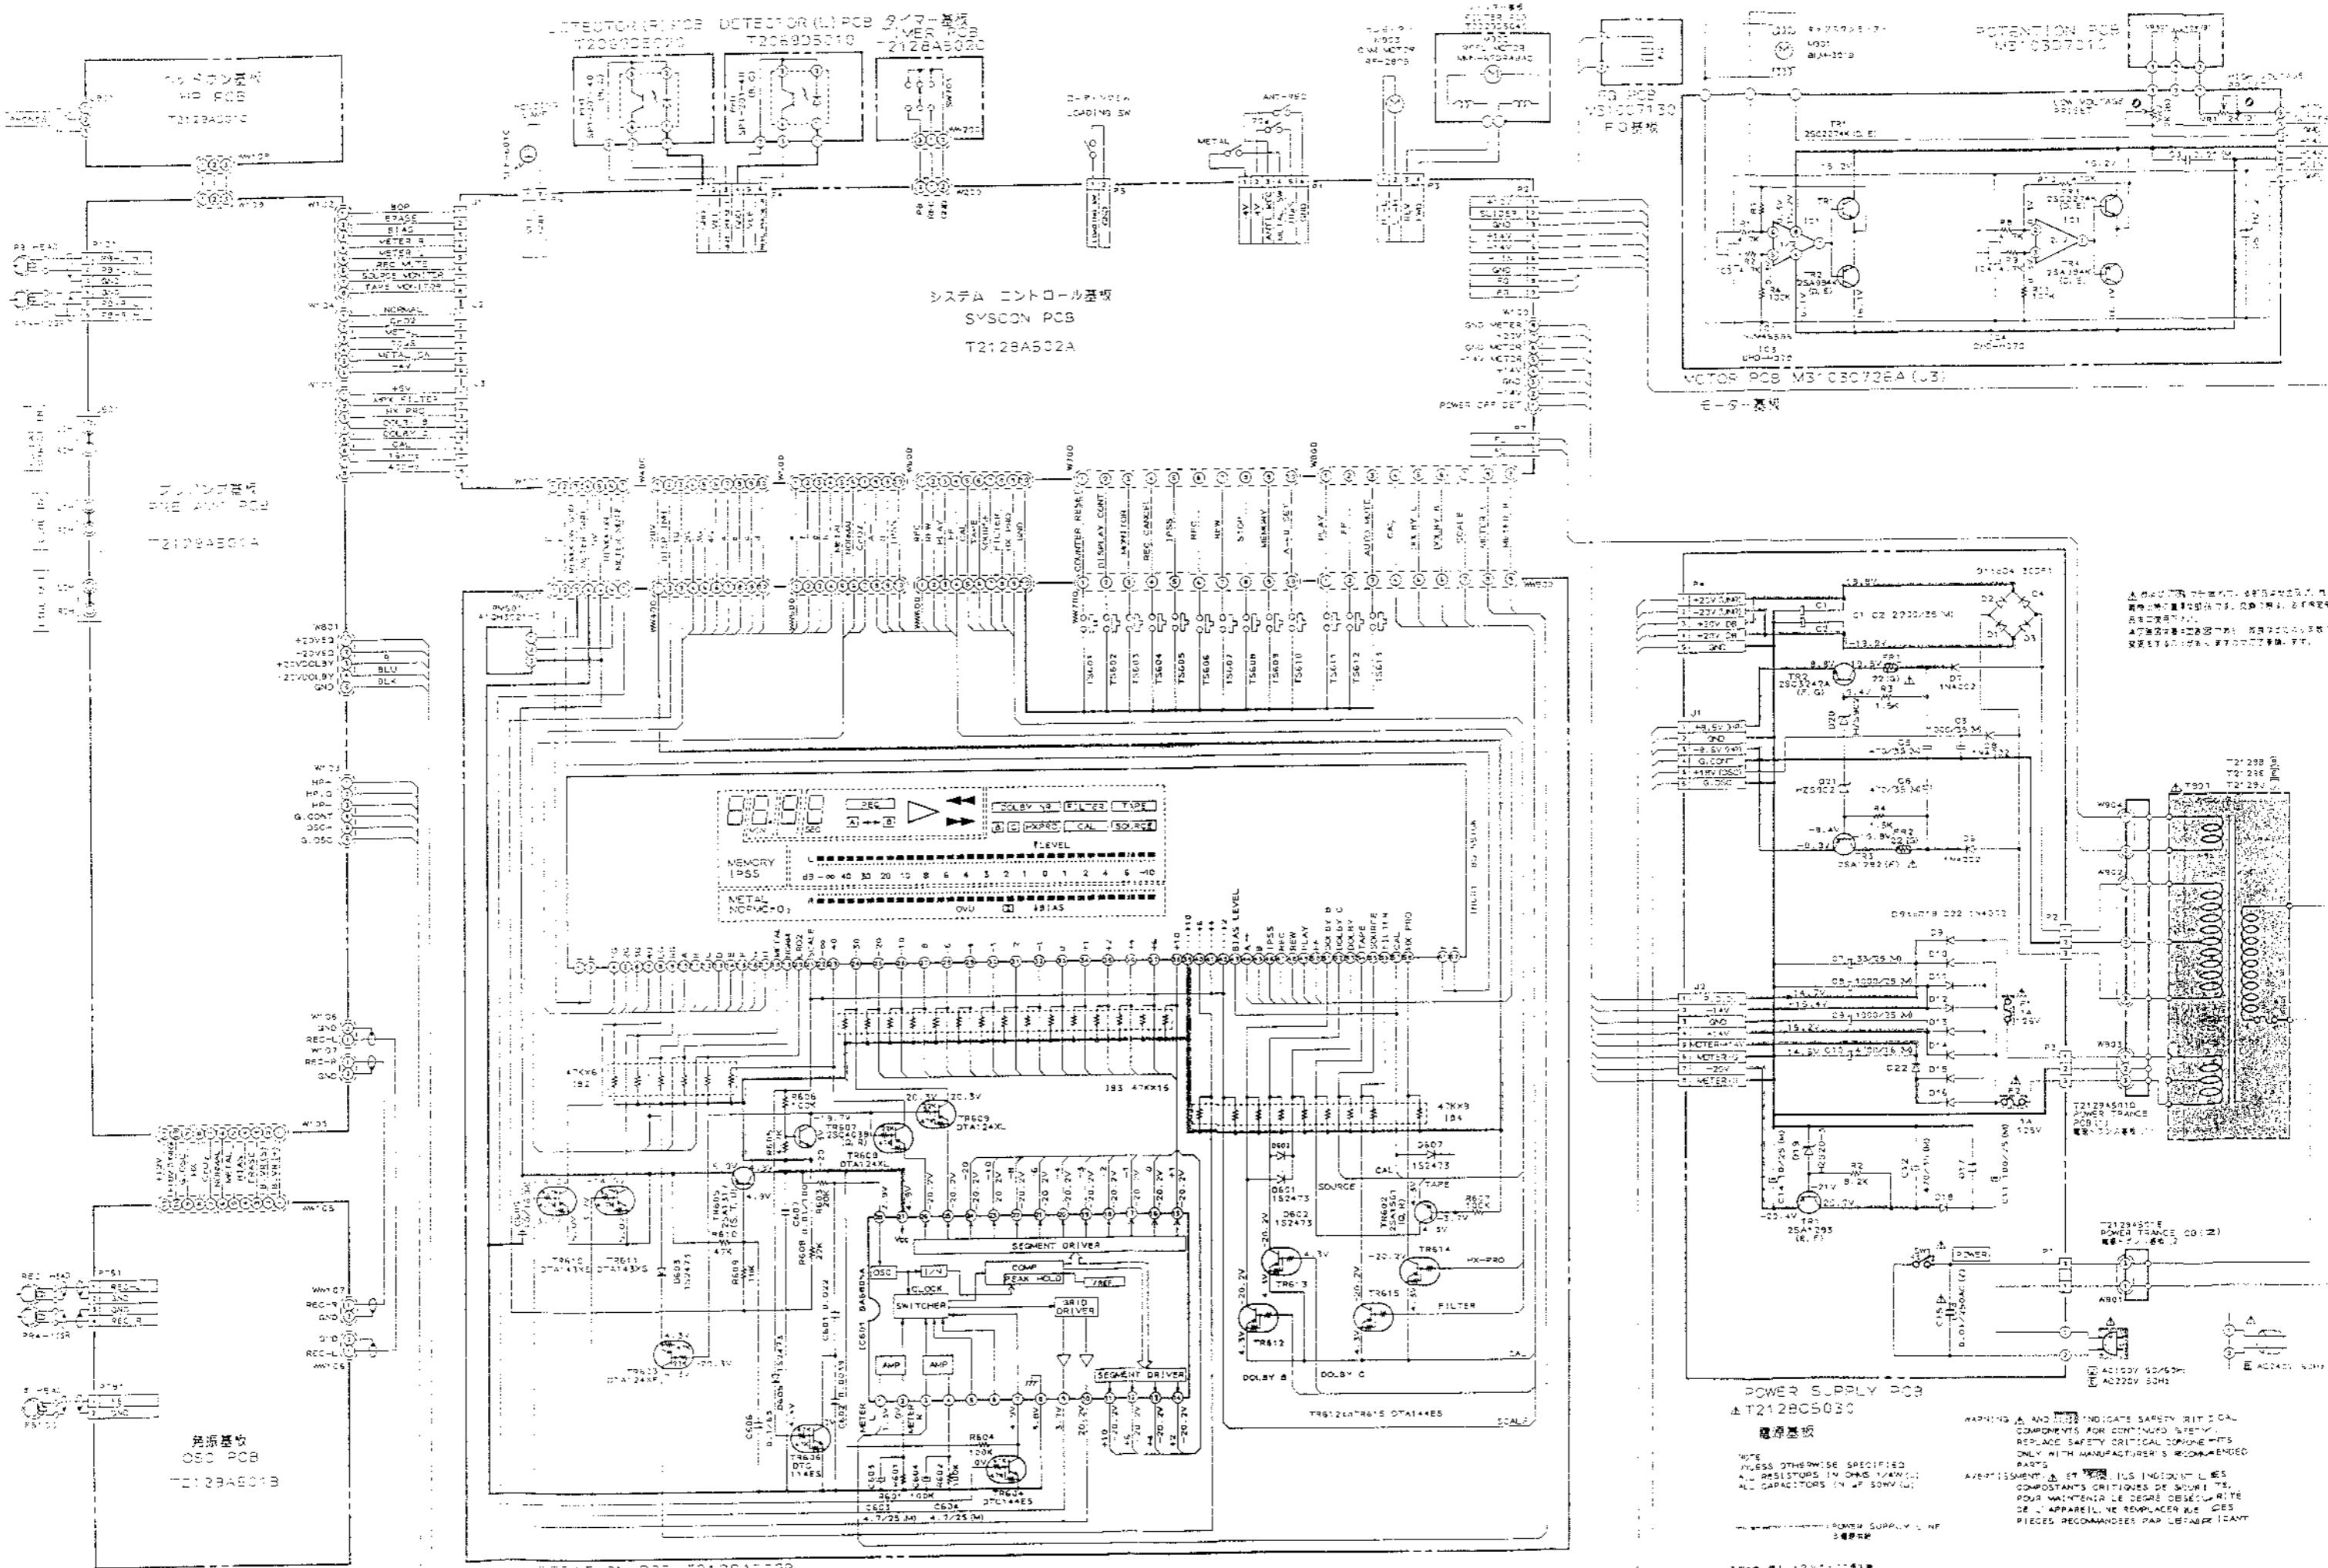


NOTES ON POWER SUPPLY
1. INPUT VOLTAGE
2. INDICATED VOLTAGES ARE MEASURED
BY DC VOLTAGE ON METAL TAPE PLATING

GX-75MKII/95MKII
CONNECTION DI AGRAM
NO. 3-1 T21 2804M

WARNING: **A** AND **B** INDICATE SAFETY CRITICAL COMPONENTS FOR CONTINUOUS SYSTEM.
REPLACE SAFETY CRITICAL COMPONENTS ONLY WITH MANUFACTURER'S RECOMMENDED PARTS.

AVERTISSEMENT: **A** ET **B** SONT DES COMPOSANTS CRITIQUES DE SECURITE POUR MAINTENIR LE DEGRE DE SECURITE DE L'APPAREIL. NE REMPLACEZ PAS CES PIECES RECOMMANDEES PAR LE FABRICANT.

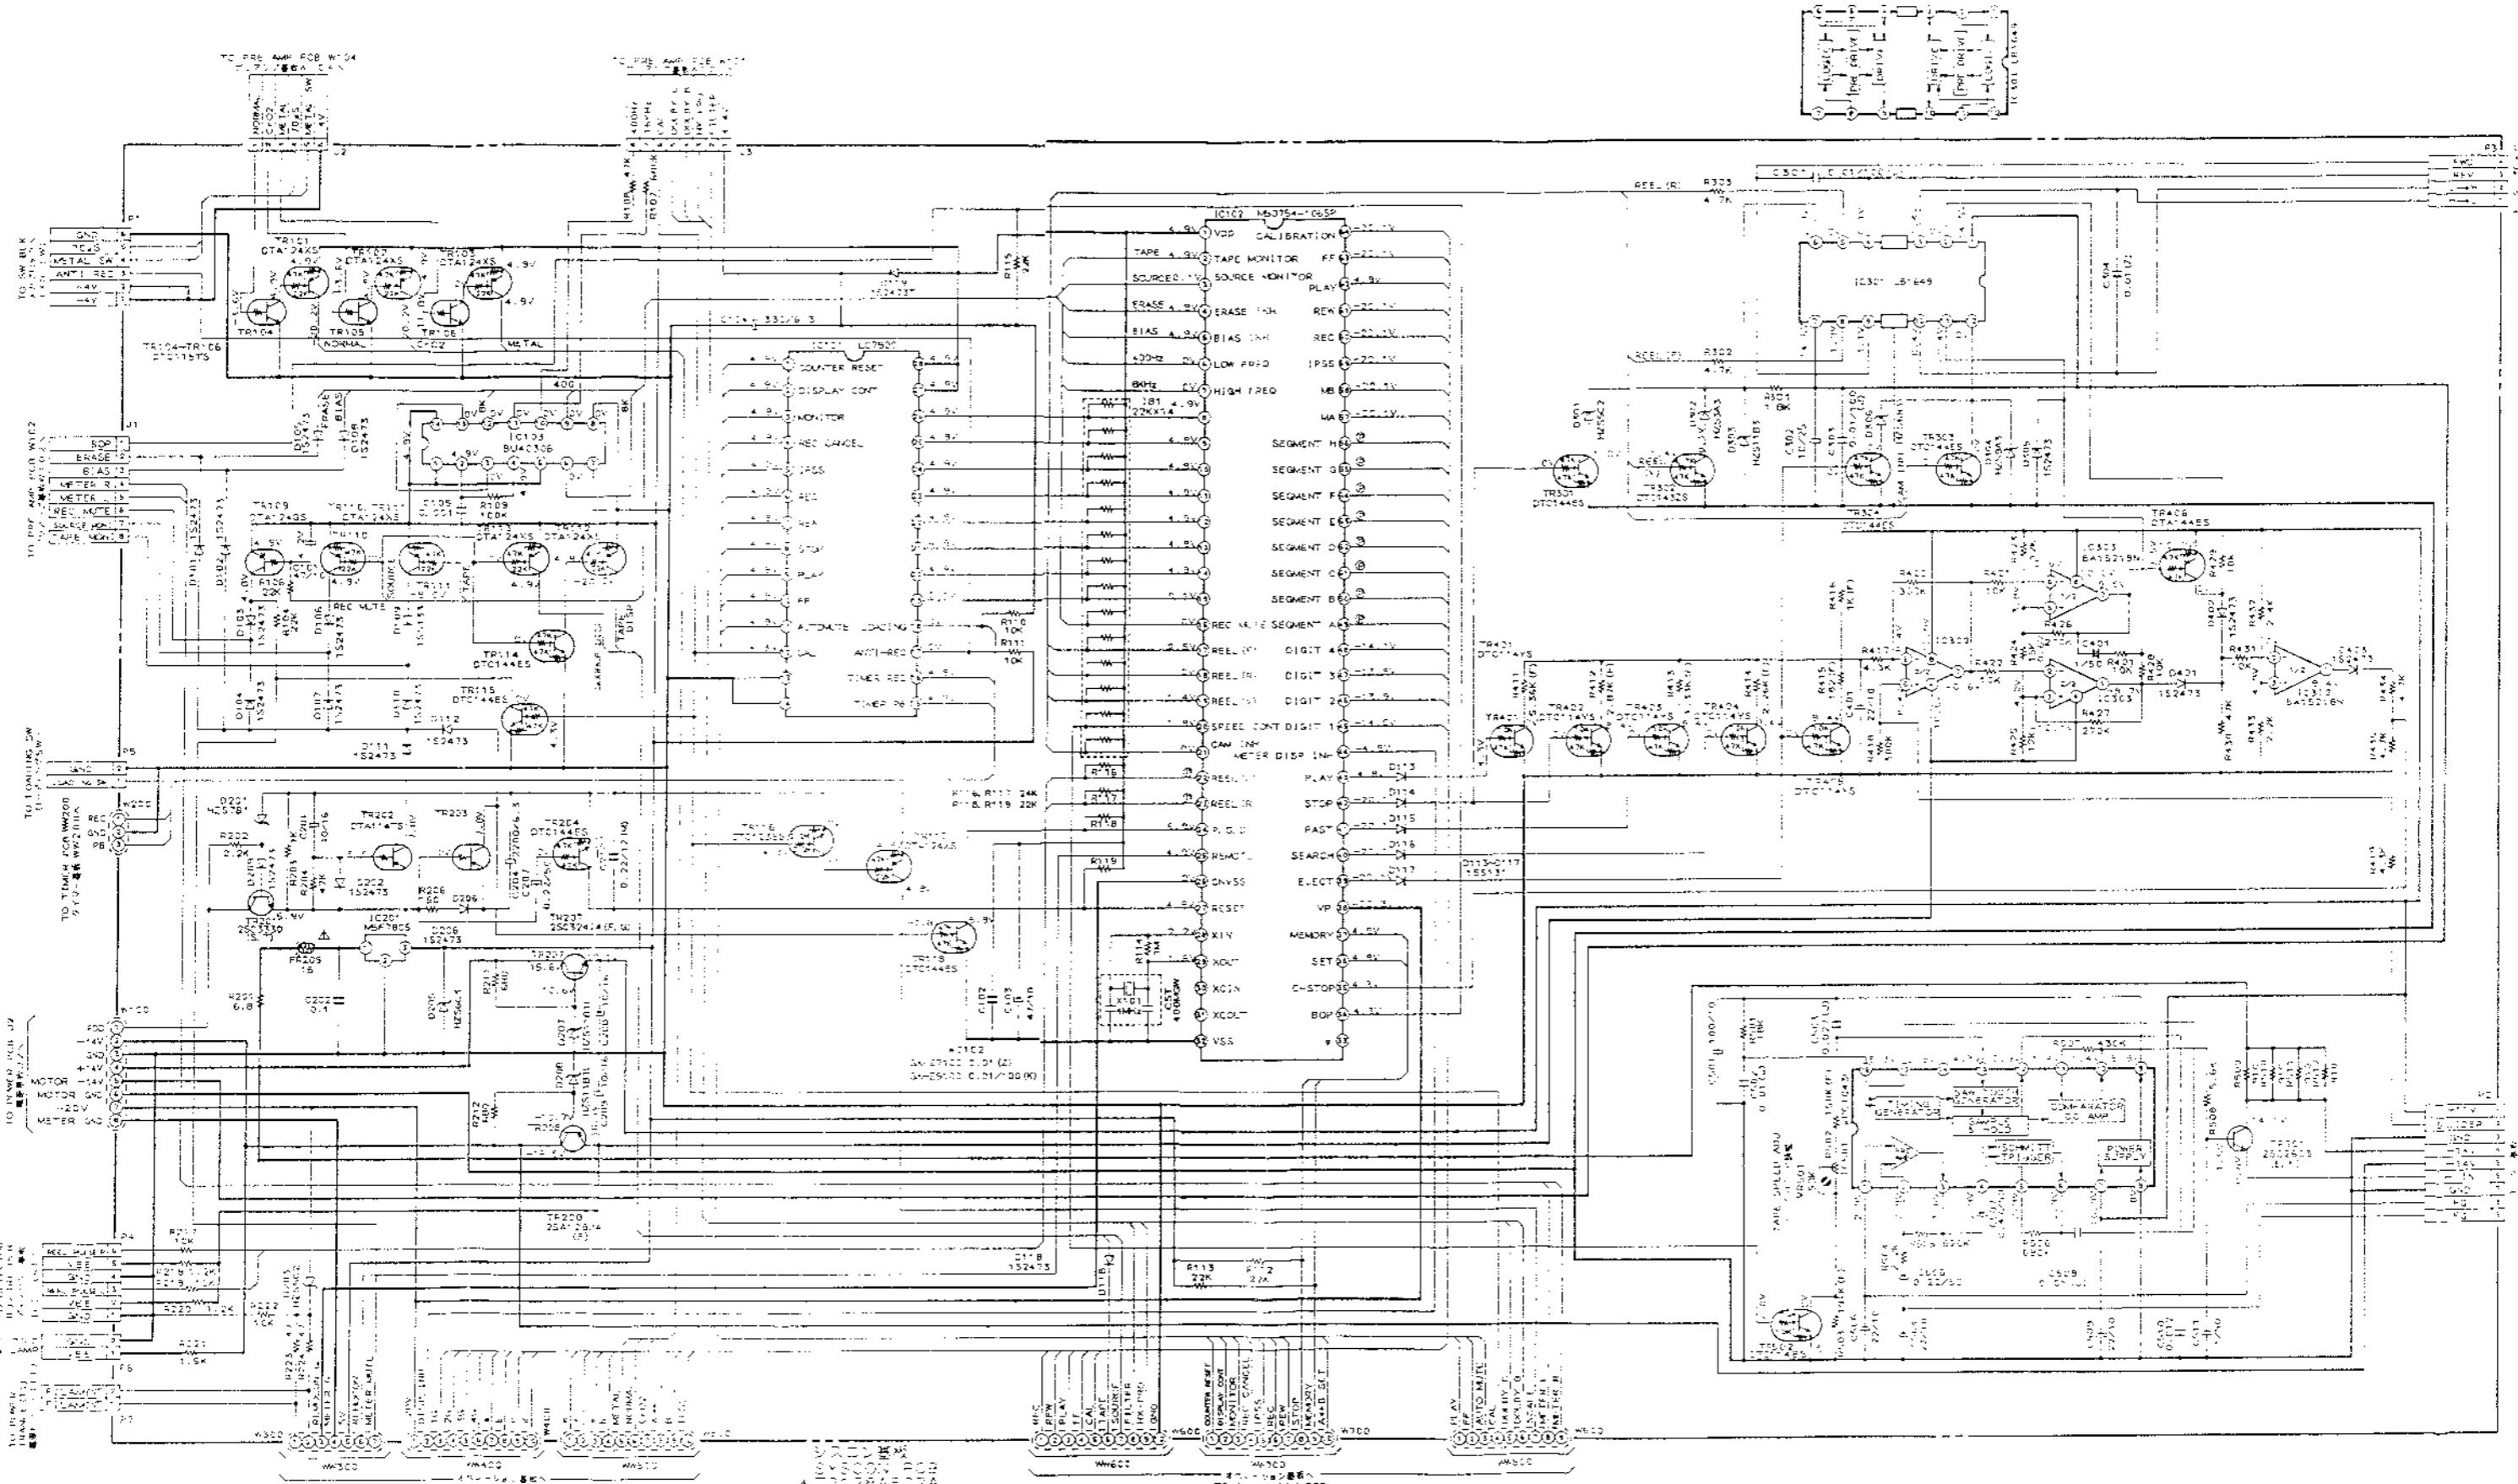

INDICATED VOLTAGES ARE MEASURED
BY DC VOLTMETER IN VERSUS GND.


二七四


貴様
「お前は死んで、死んで規定された死後人生」
死後人生の問題は、ヨーロッパでは、F.S. 社会主義者
ジョンソン、トマス・エリオット、カミングス等
各種思想家、小説家がこの問題を大胆に取り上げて
その問題を論じた。

NOTE
UNLESS OTHERWISE SPECIFIED
ALL RESISTORS IN OHMS 1/4W 1%
ALL CAPACITORS IN μ F 50 MV M


▲と△を組み合わせたマークで示されていて、部品番号は安全装置、危険
操作上最も重要な部品です。交換の際は、必ず同部品
番号で交換下さい。
各部品は各自の専門家で、及早に修理して、定期的
に点検することをお勧めしますので、お済み下さい。


**GX-75MKII / 95MKII
SYSTEM CONTROL
SCHEMATIC DIAGRAM**

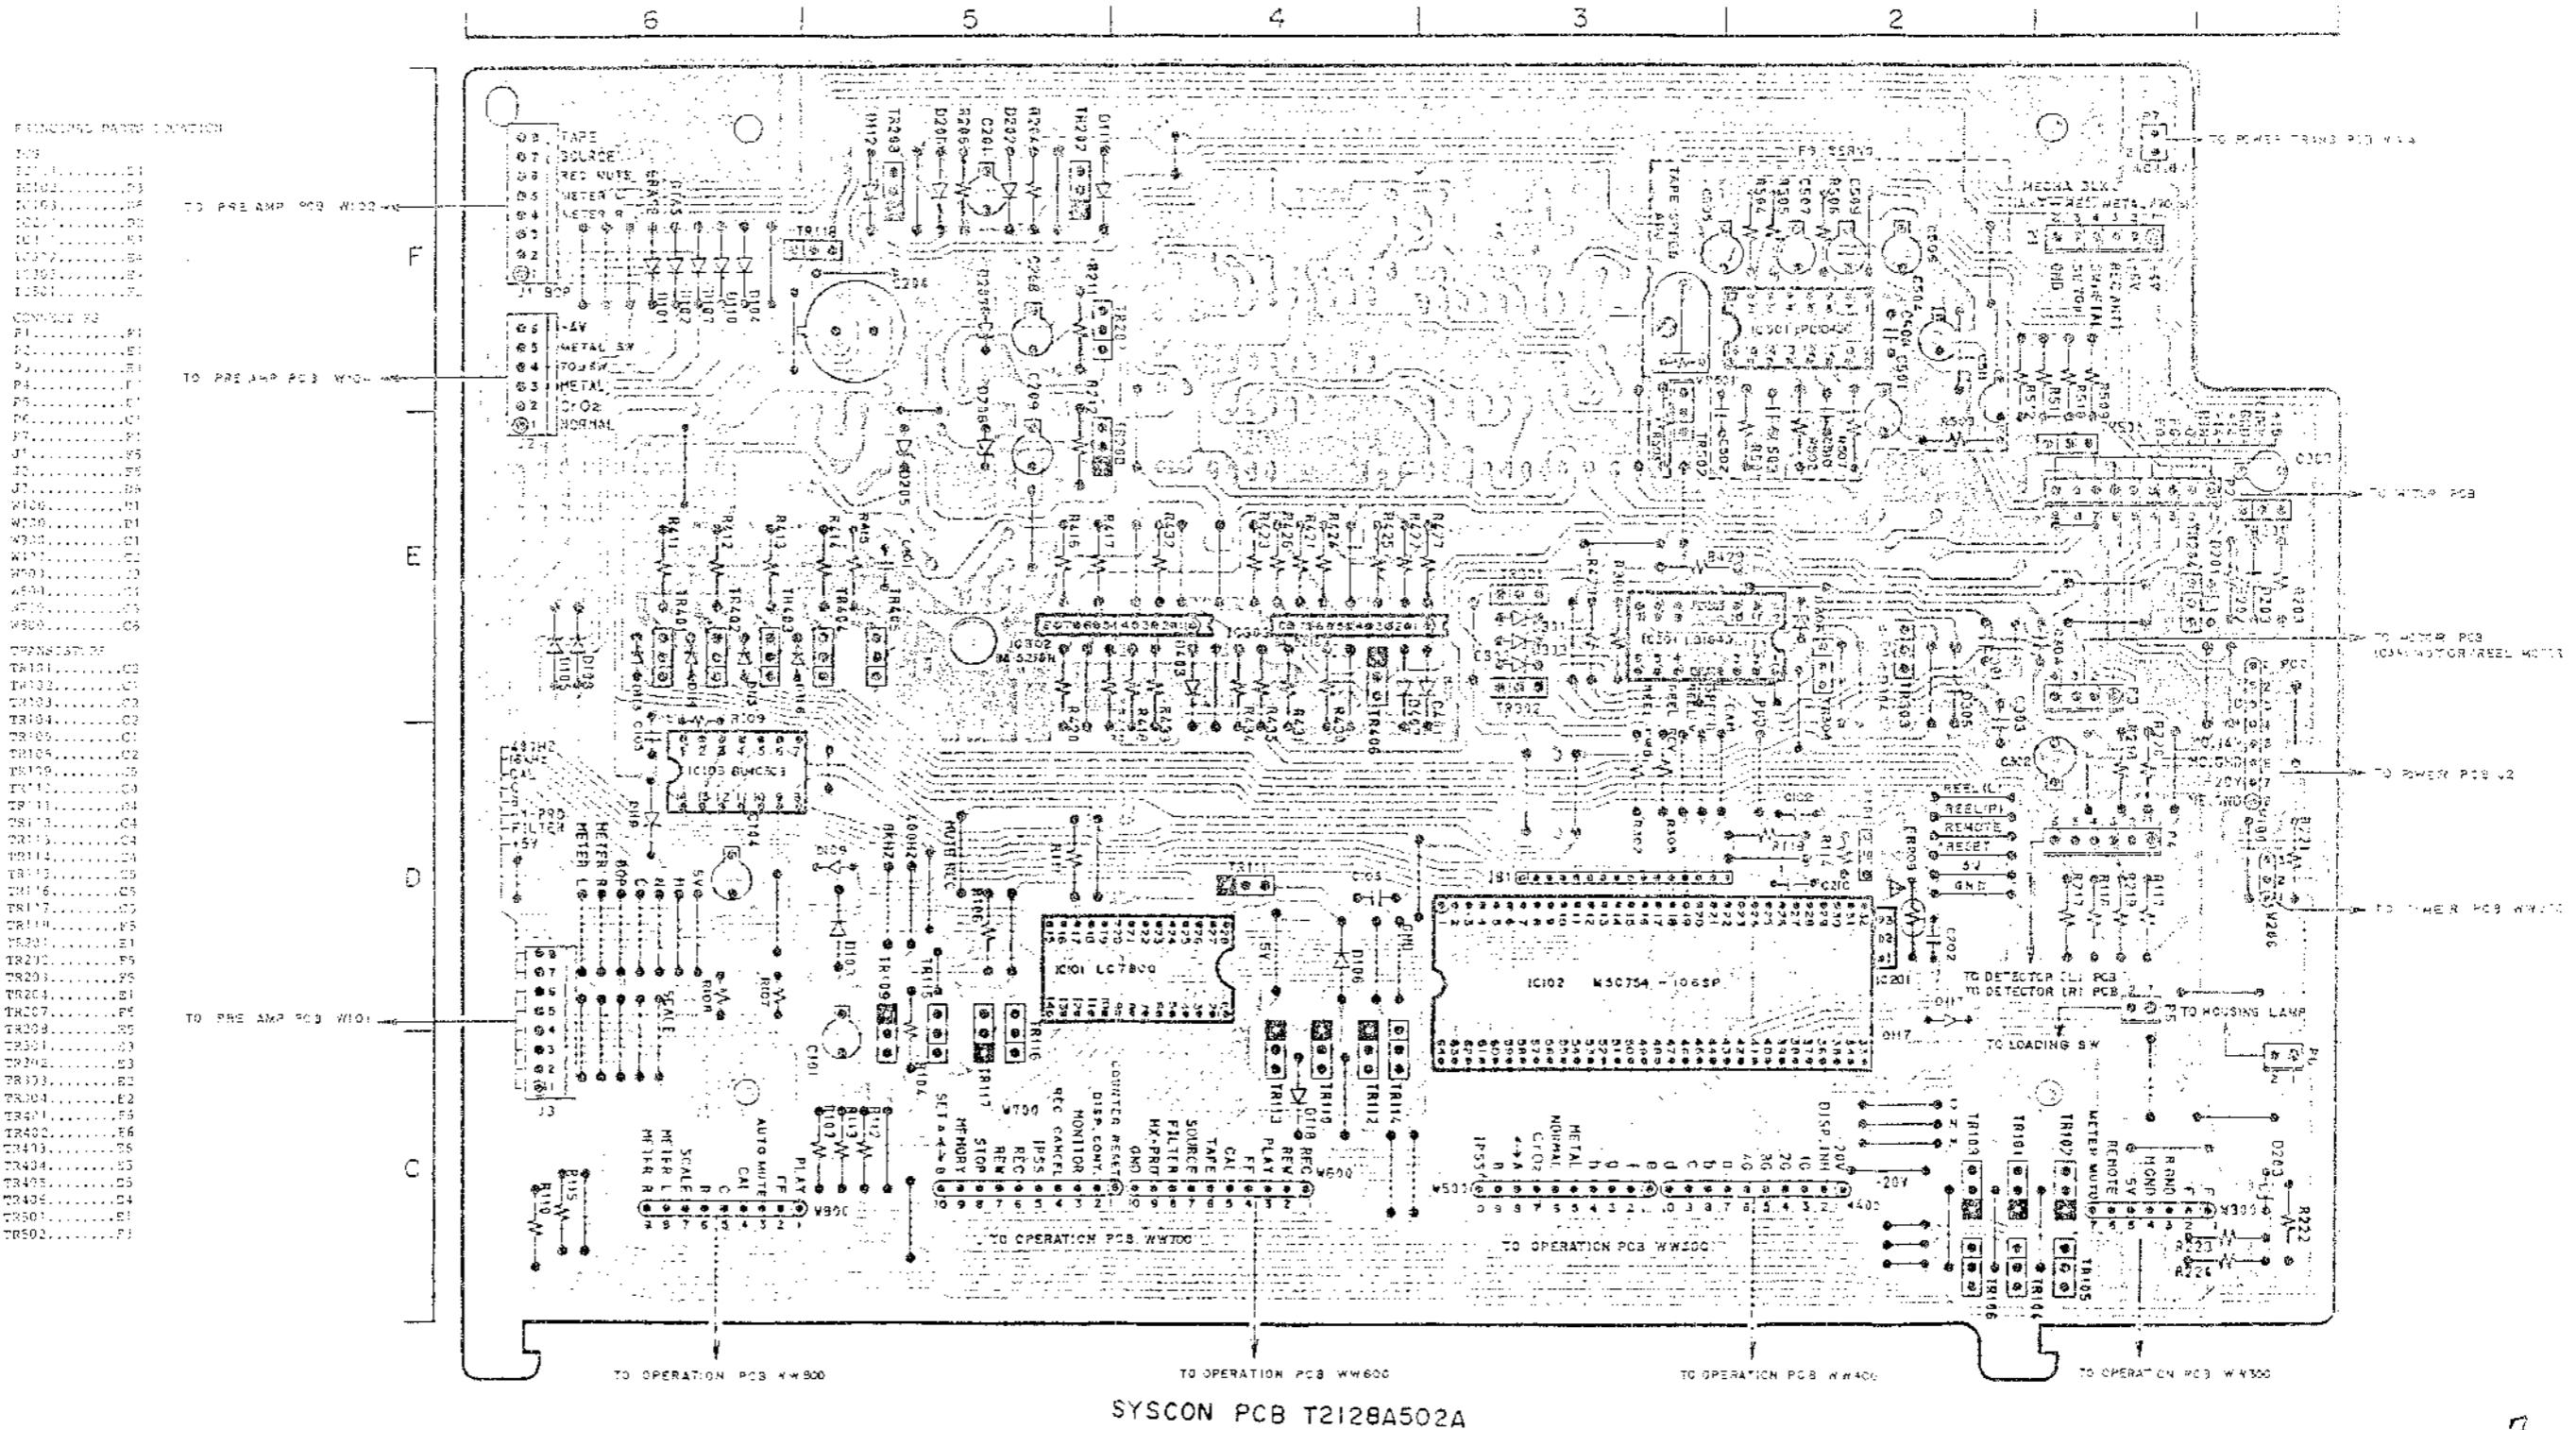

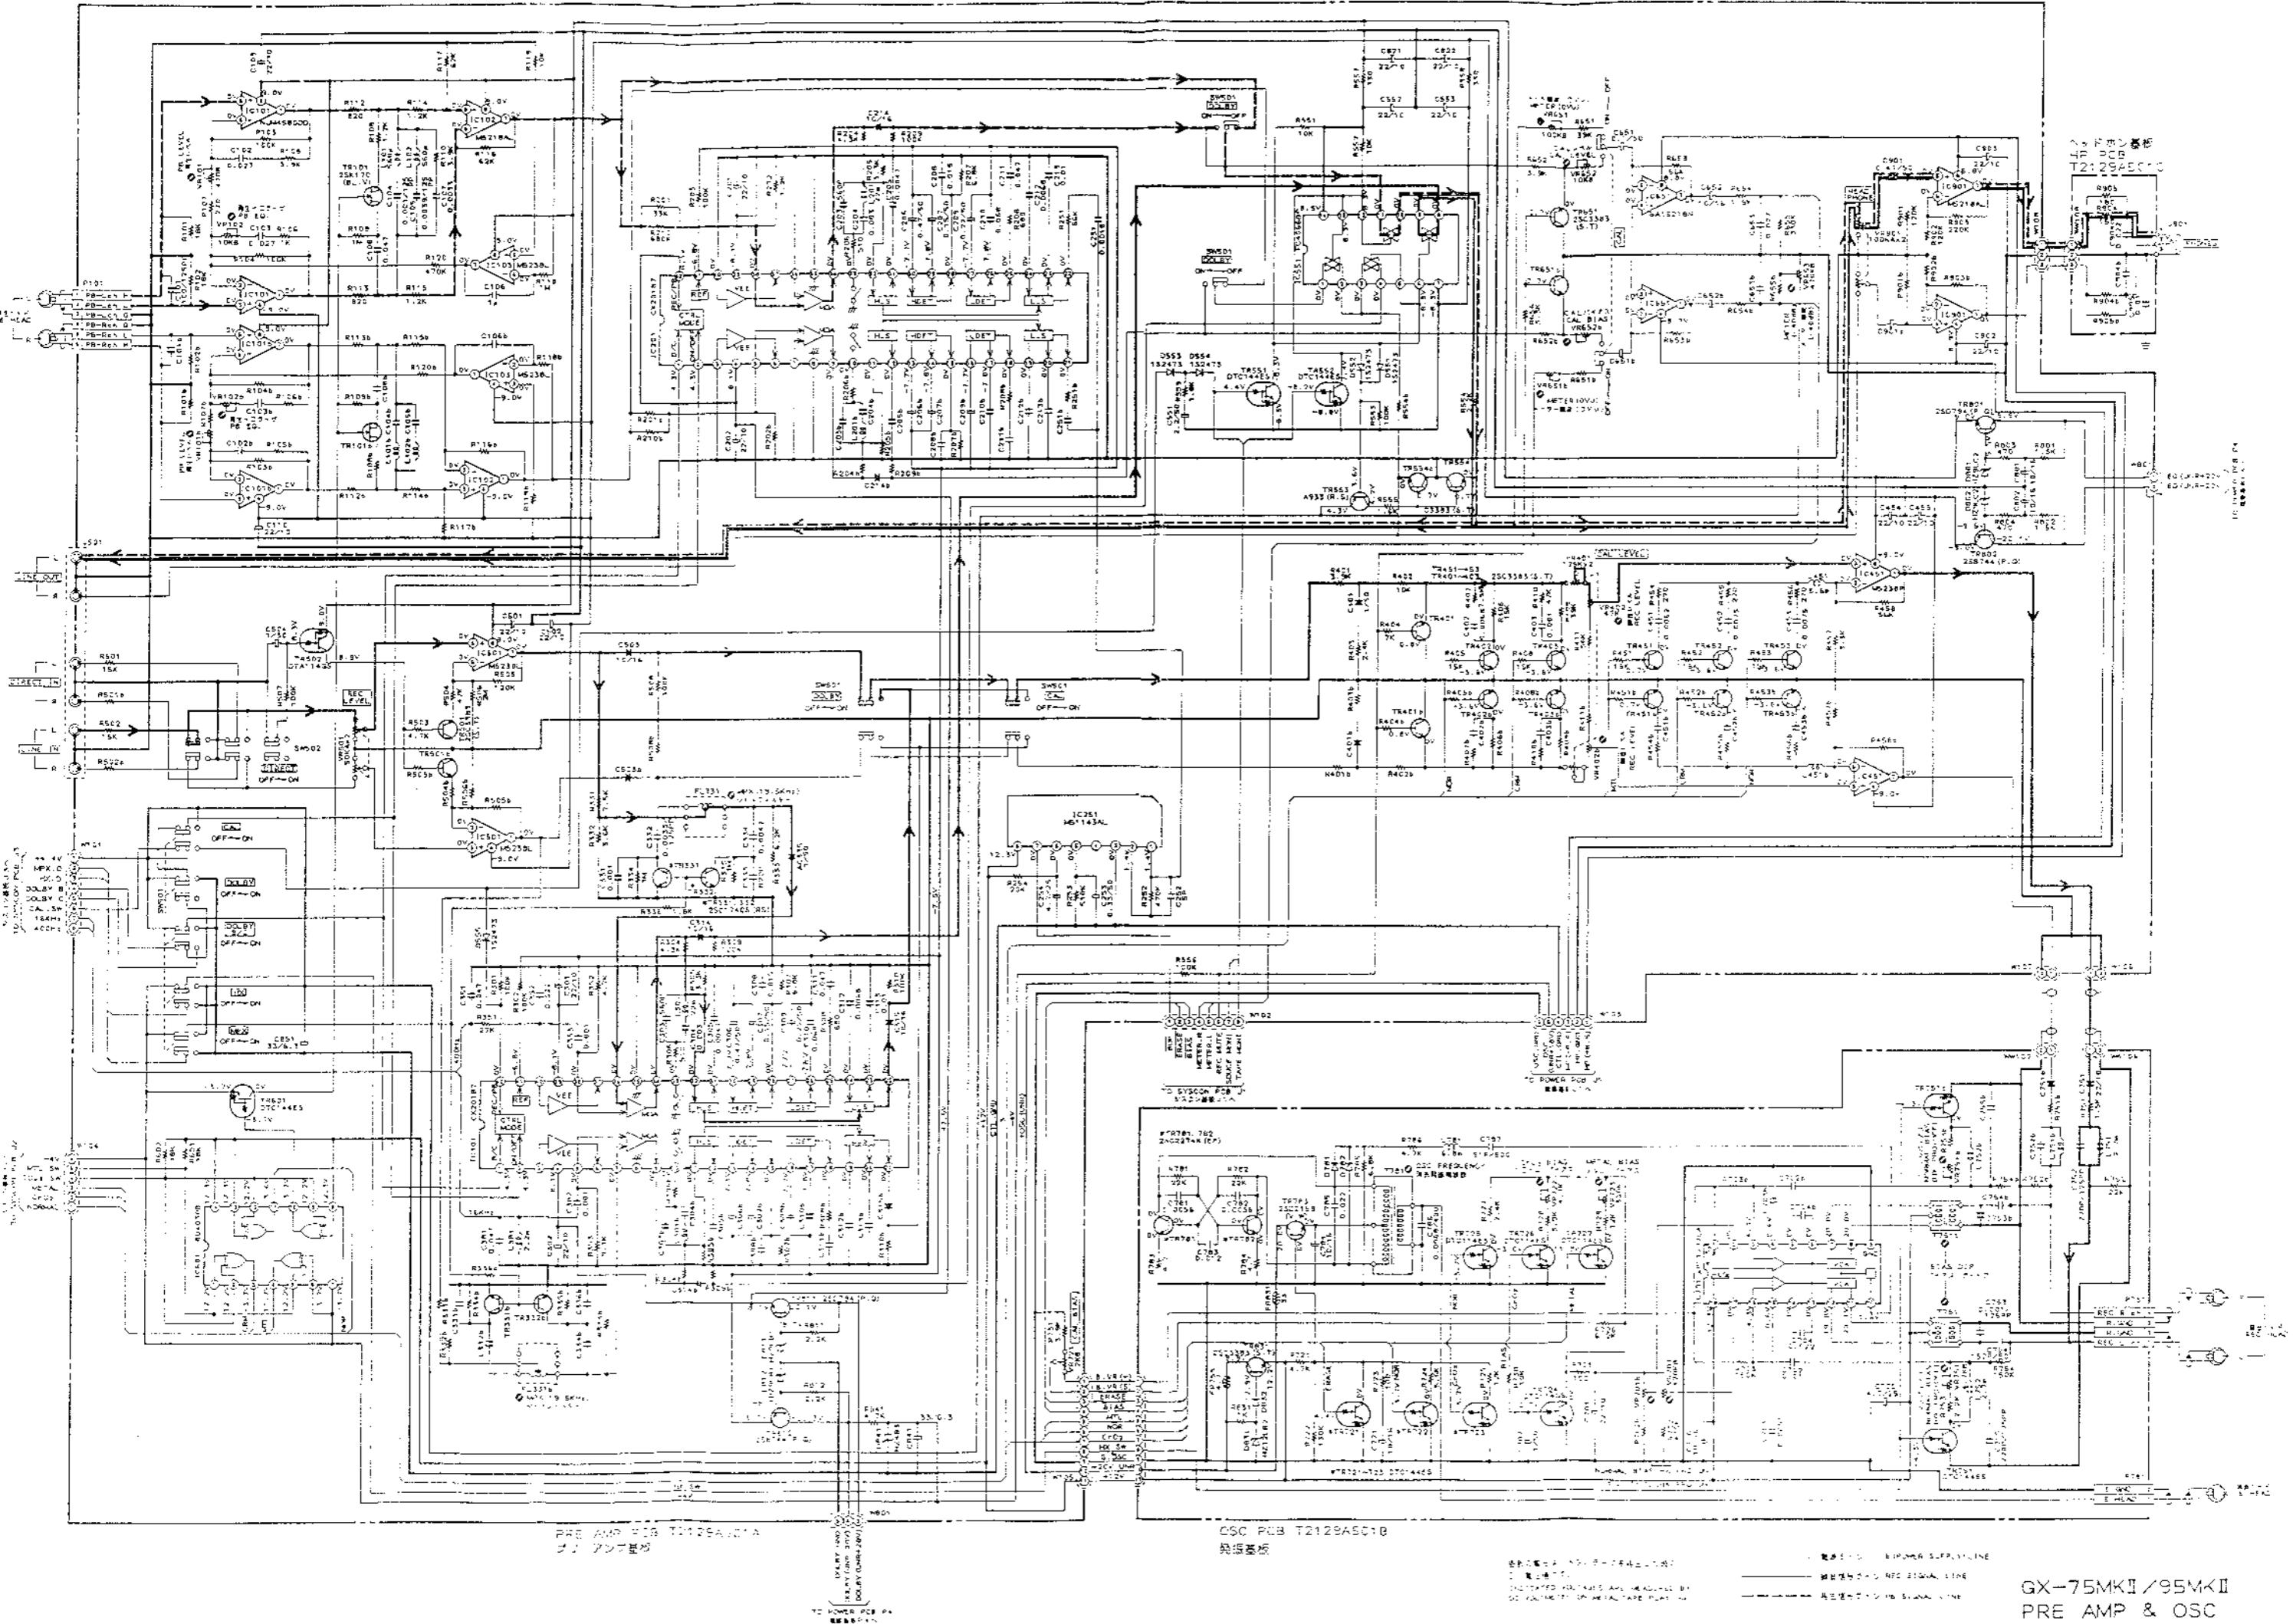

**GX-75MKII / 95MKII
PRE AMP & OSC
SCHEMATIC DIAGRAM
No. 3-3 T212806M**

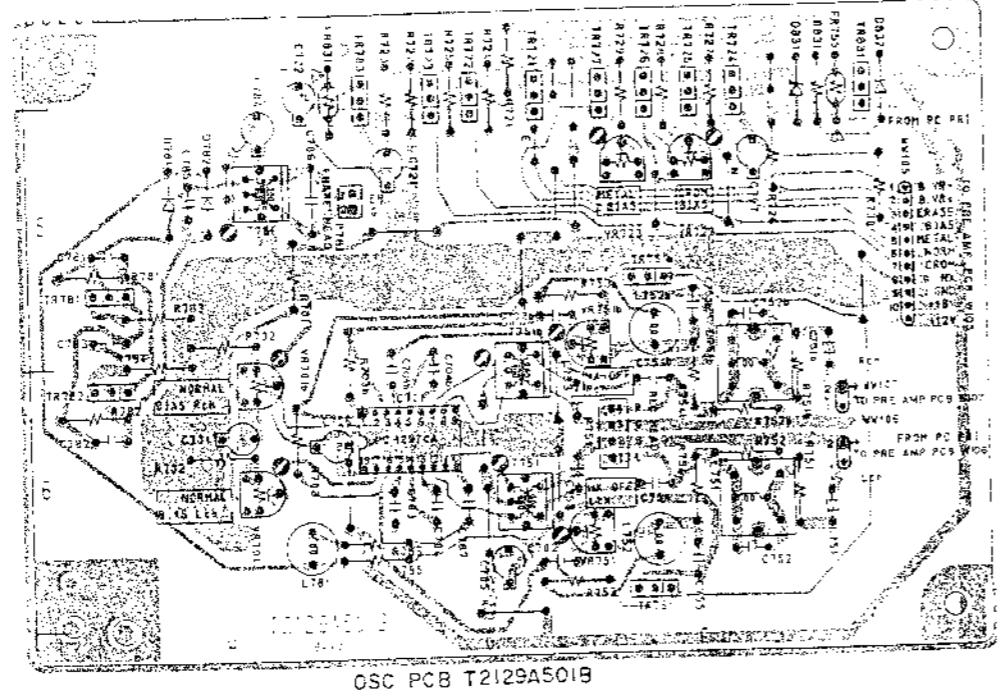

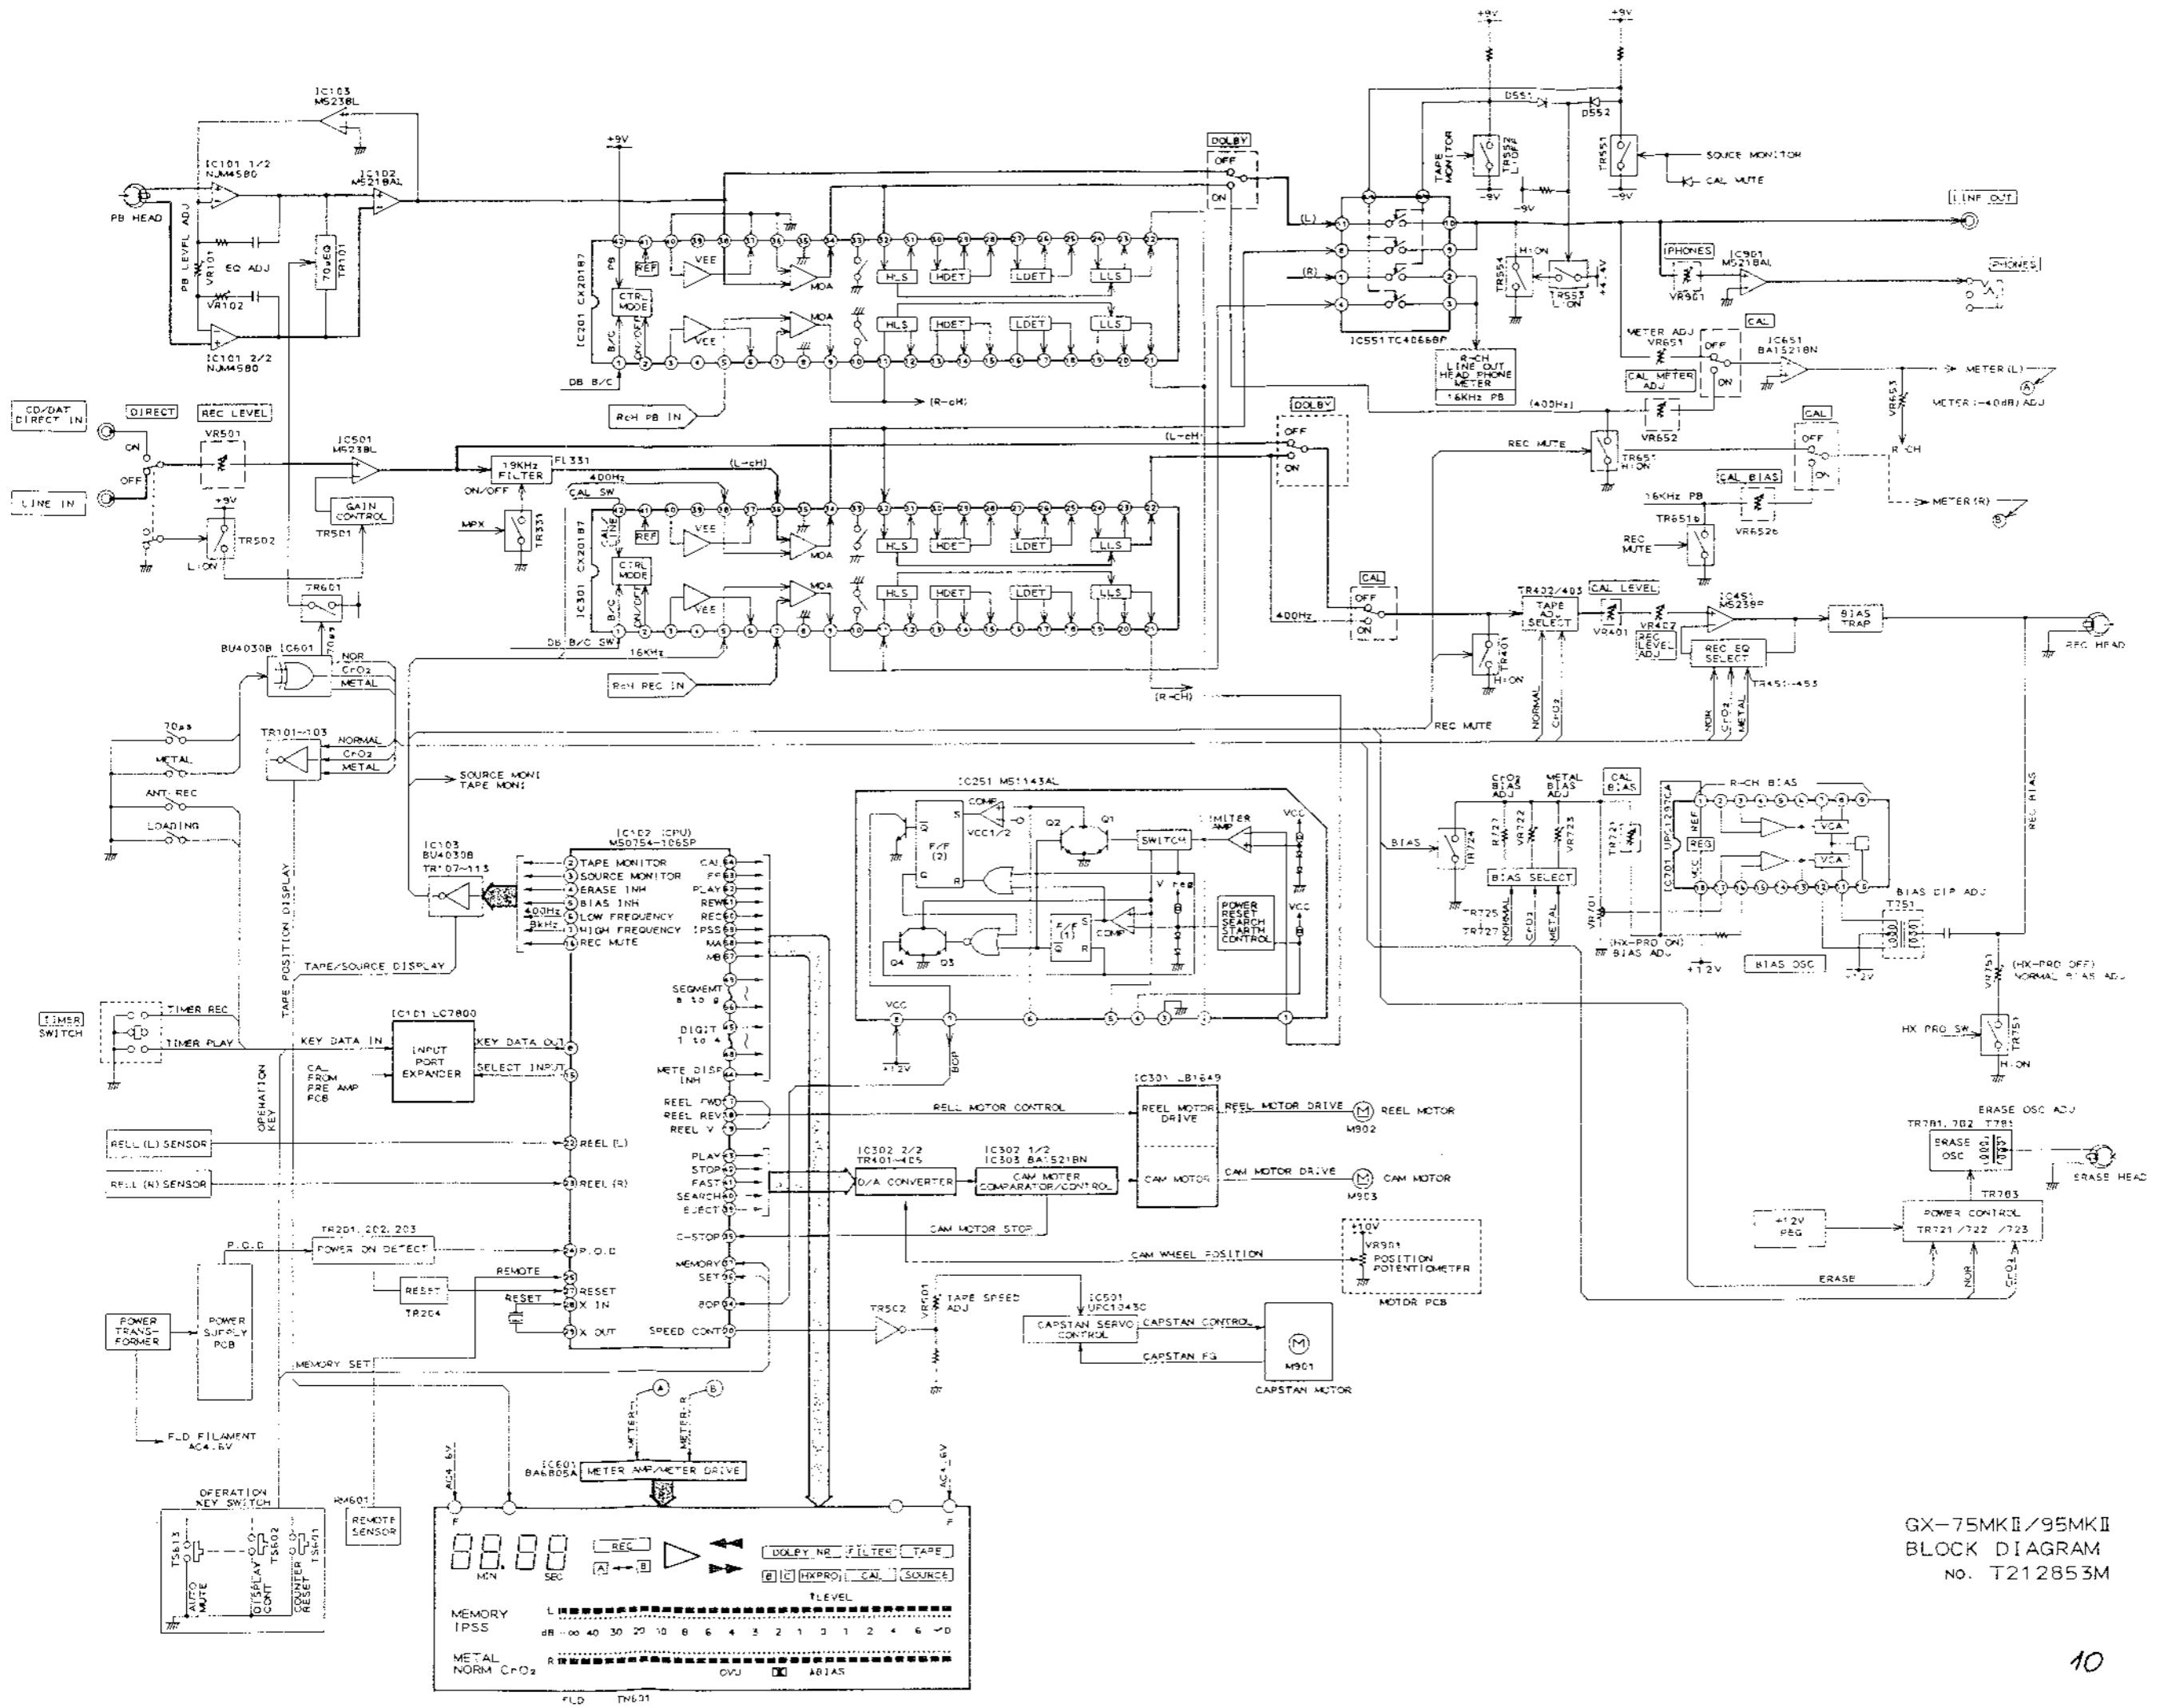

GX-75MKII/95MKII
BLOCK DIAGRAM
no. T212853M