




STEREO TAPE DECK


RT-1050


FU


EQ switch ass'y RWS-021

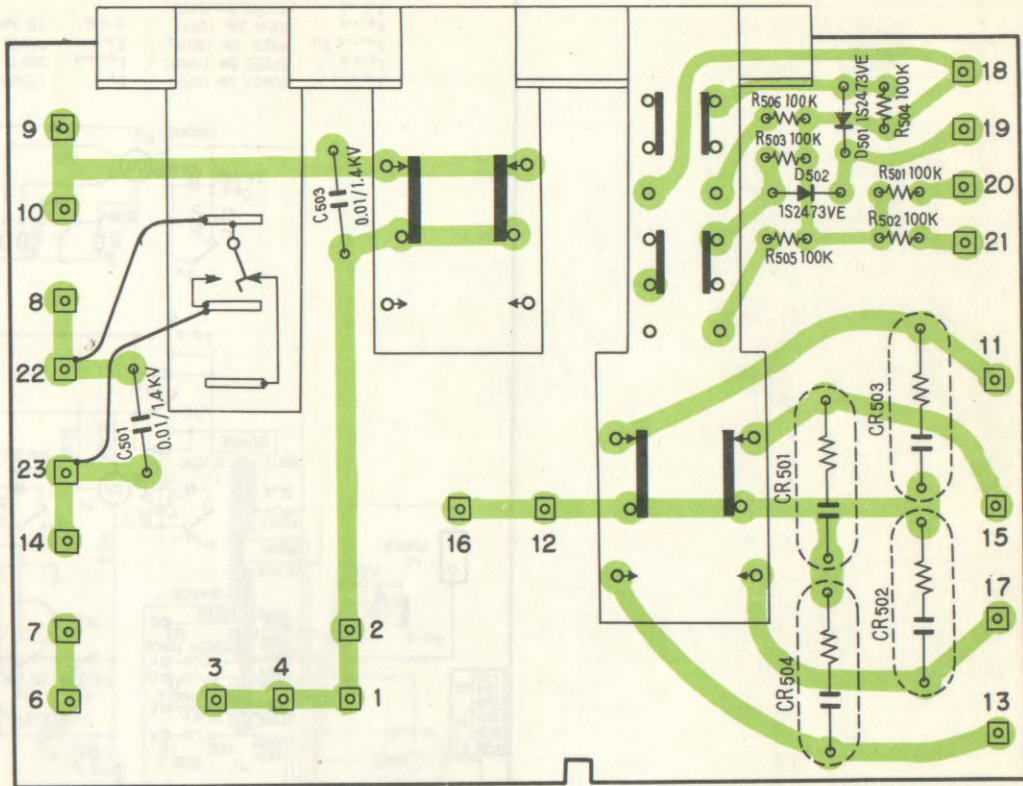


Switch circuit ass'y RWS-017

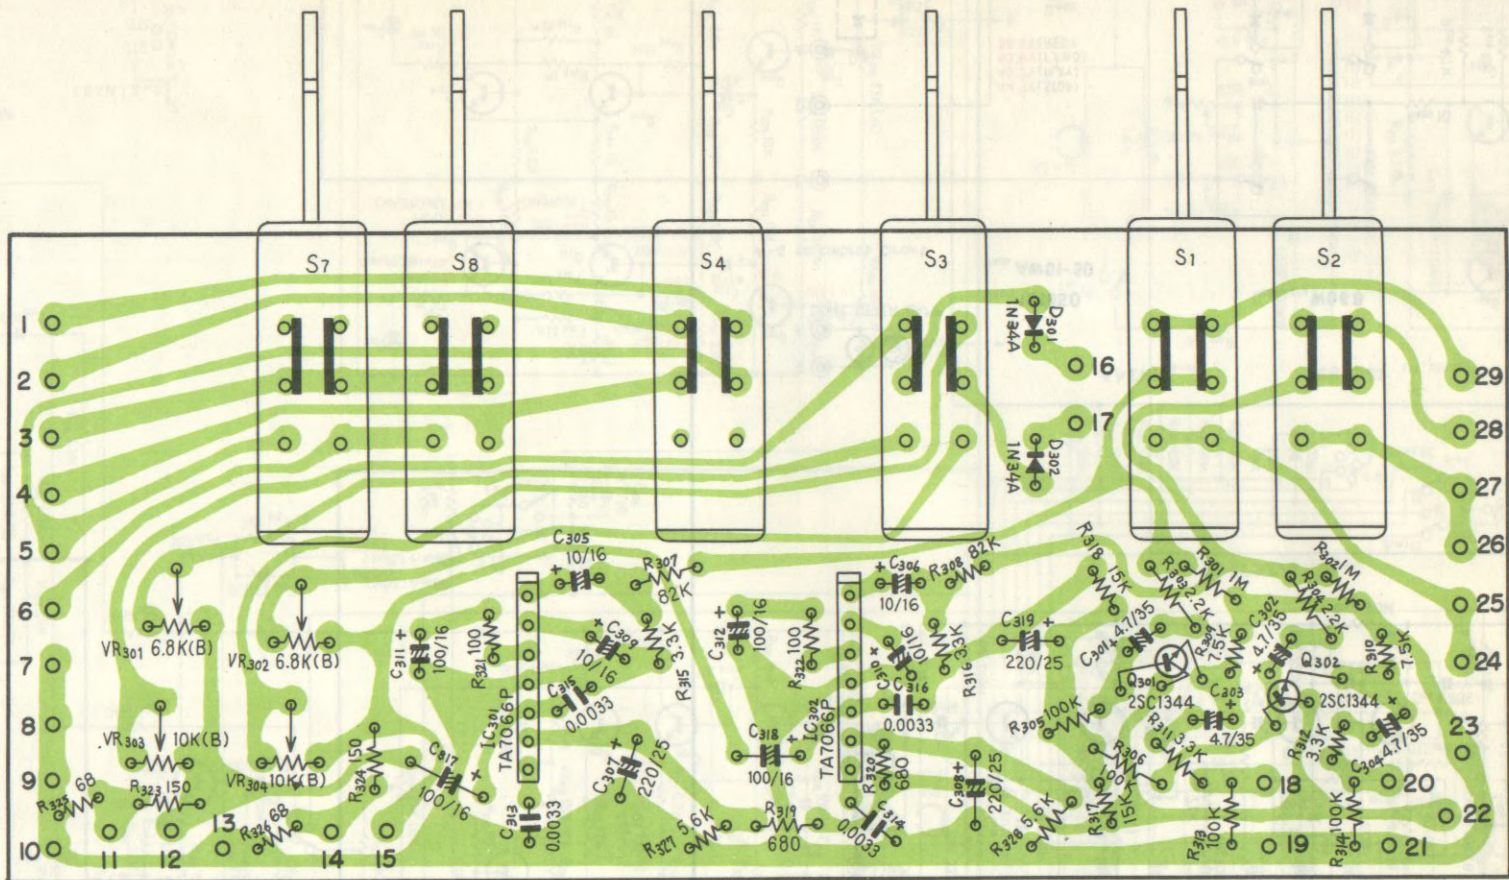

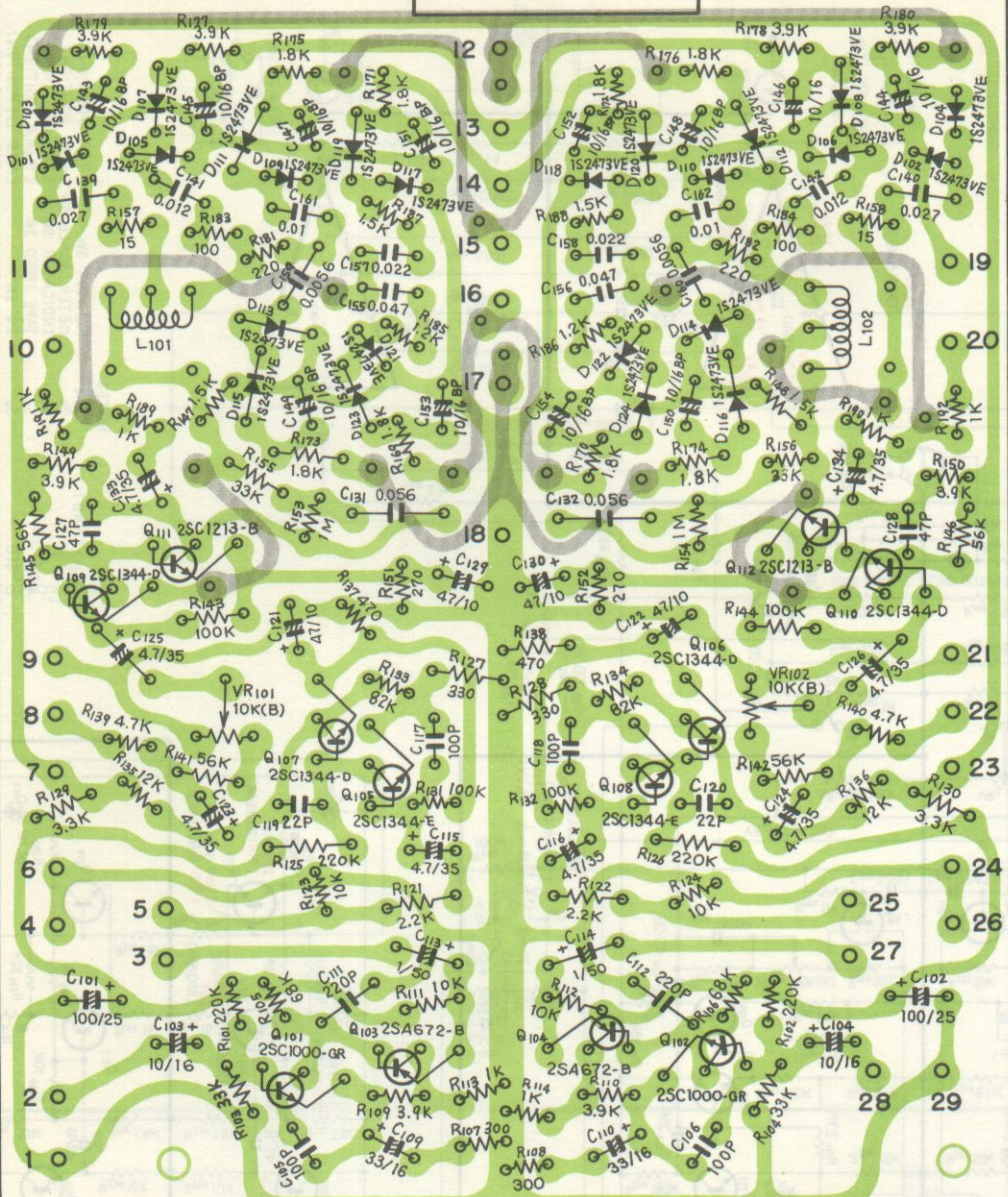

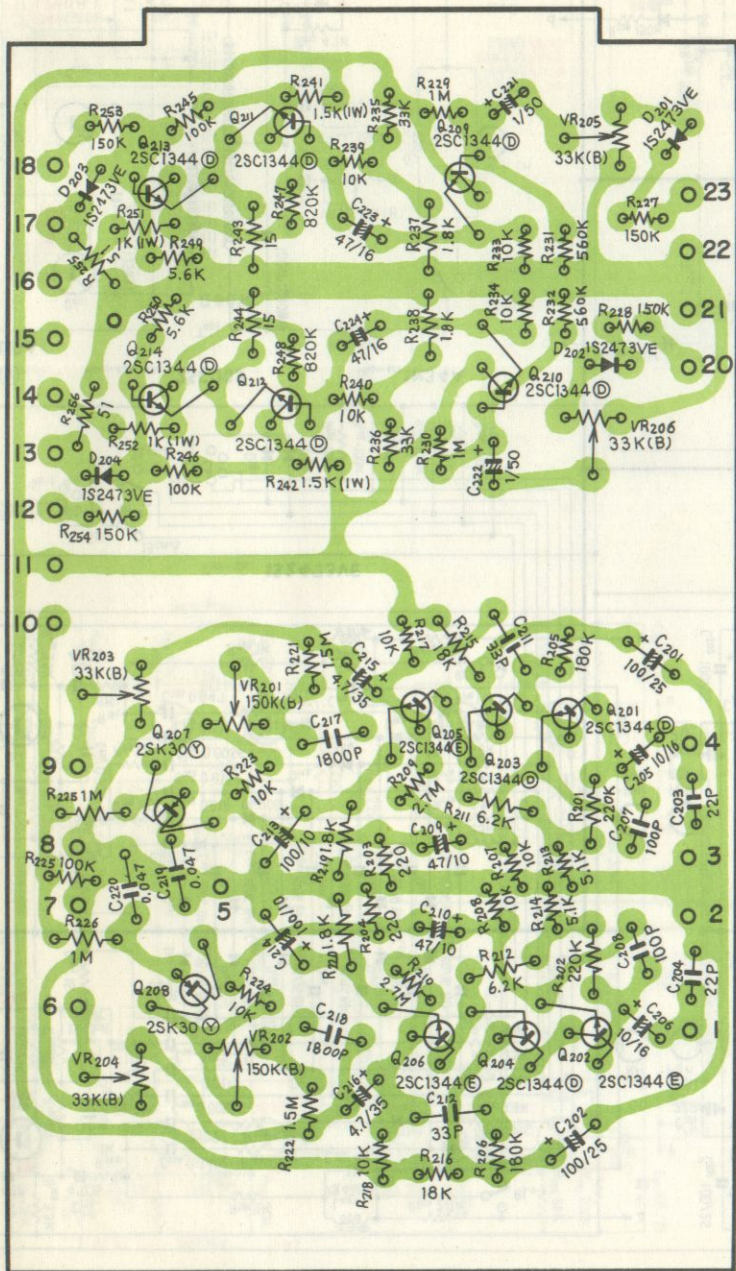

CONTROL SECTION

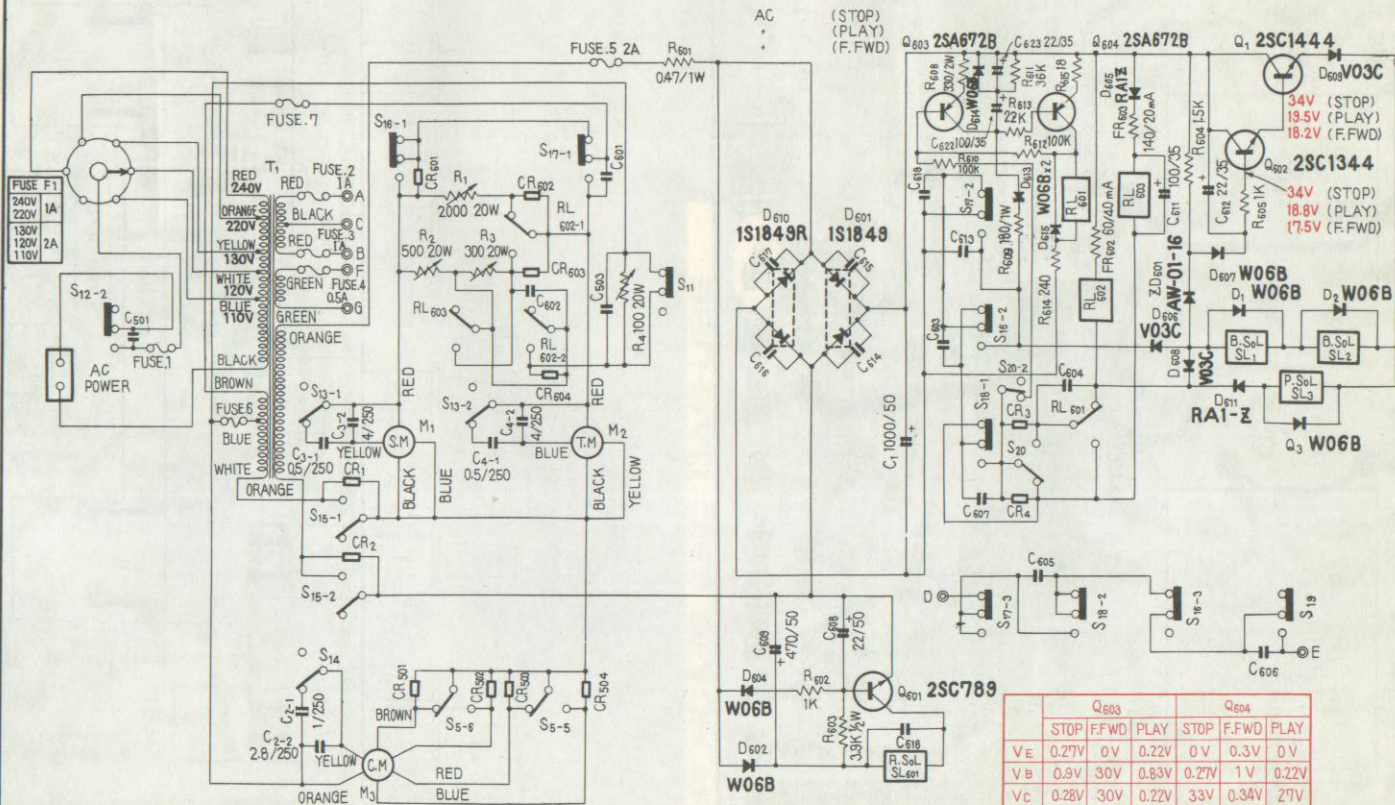

S₁₂₋₁₋₂
S₅₋₅₋₆
S₁₃₋₁₋₂ S₁₄
S₁₆₋₁₋₃
S₁₇₋₁₋₃
S₁₈₋₁₋₂
S₁₉

POWER SW. (OFF)
SPEED SW. (HIGH)
FREQ. SW. (50Hz)
REW. SW. (OFF)
F. FWD. SW. (OFF)
PLAY SW. (OFF)
REC SW. (OFF)

S₁₁
S₁₅₋₁₋₂
S₂₅
A 7 G

TENSION SW. (HIGH)
SHUT - OFF SW. (OFF)
PAUSE SW. (ON)
TO AMPLIFIER SECTION

C₆₀₁₋₆₀₇, 613-618, 501-503
0.01μF/1.4KV
CR₆₀₁₋₆₀₄, 1-4, 901-904
SPARK KILLER

FR₆₀₂₋₆₀₃
FUSE RESISTOR

S. M. SUPPLY MOTOR
T. M. TAKE-UP MOTOR
C. M. CAPSTAN MOTOR

	Q ₆₀₃			Q ₆₀₄		
	STOP	F.FWD	PLAY	STOP	F.FWD	PLAY
V _E	0.27V	0V	0.22V	0V	0.3V	0V
V _B	0.9V	30V	0.83V	0.27V	1V	0.22V
V _C	0.28V	30V	0.22V	33V	0.34V	27V