

Service Manual

Pioneer

ORDER NO.
PET99004

SPEAKER SYSTEM

CS-T7100

65S

This service manual is intended for qualified service technicians; it is not meant for the casual do-it-yourselfer. Qualified technicians have the necessary test equipment and tools, and have been trained to properly and safely repair complex products such as those covered by this manual.

Improperly performed repairs can adversely affect the safety and reliability of the product and may void the warranty. If you are not qualified to perform the repair of this product properly and safely, you should not risk trying to do so and refer the repair to a qualified service technician.

HOW TO REASSEMBLE AND DISASSEMBLE

- The grille is attached to the cabinet by catches. Detach it by pulling the grille towards you.
- The woofer, together with the trim-ring, is attached to the baffle by 6 screws. To detach the woofer, unfasten those screws and lift up. To detach it, unfasten those screws. When attaching, orient its terminal upwards.
- The midrange is attached to the baffle by 4 screws. To detach it, unfasten those screws. When attaching, orient its terminal downwards.
- The tweeter is attached to the baffle by 4 screws. To detach it, unfasten those screws. When attaching it, orient its terminal downwards.
- The super tweeter is attached to the baffle by 4 screws. To detach it, unfasten those screws. When attaching it, orient its terminal downward.
- The port tube is a press-fit to the baffle. To detach it, first remove the woofer. Then hit the port tube gently towards you from the inside of the cabinet. When re-attaching, press-fit it to the baffle, making sure that the plastic ribs on the port-tube engage with fresh, undamaged material on the baffle.

PARTS LIST

NOTES: • Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.
 • The " ⚠ " mark found on some component parts indicates the importance of the safety factor of the part.
 Therefore, when replacing, be sure to use parts of identical designation.

For Packing

Mark	No.	Description	Parts No.	Mark	No.	Description	Parts No.
		Plastic Grille Assy	266077			Packing Case	266057
		Low Frequency Trans	40-13A/XL			Corner Pad Assy	260846
		Screw for LF Trans	222020			Corner Pad Assy. Front	233043
		Mid Freq Trans (FP10DP61-51F)	255032			Poly Bag	256268
		Screw for MF Trans	222011				
		High Freq Trans (P66AP32-56F)	194709				
		Screw for HF Trans	222011				
		Super High Freq Trans (A16ZD)	194516				
		Screw for SHF Trans	222011				
		Port Tube (Plastic)	225687				
		Instruction Manual	266062				
		Speaker Wire	101717				

SCHEMATIC DIAGRAM

