

Service Manual

ORDER NO.
RRV1736

SPEAKER SYSTEM

CS-G404 XE

CS-G304 XE

FOR PRECAUTION OF REASSEMBLY AND DISASSEMBLY

[CS-G404/XE]

- The grille is attached to the cabinet by catches. Detach by pulling it toward you. The woofer is attached to the baffle by 8 external screws. To detach it, unfasten those screws. When attaching it, face its terminal lower rightward.
- The midrange is attached to the baffle by 4 external screws. To detach it, unfasten those screws. When attaching it, face its terminal downward.
- The tweeter is attached to the baffle by 4 external screws. To detach it, unfasten those screws. When attaching it, face its terminal upward.

[CS-G304/XE]

- The grille is attached to the cabinet by catches. Detach by pulling it toward you. The woofer is attached to the baffle by 8 external screws. To detach it, unfasten those screws. When attaching it, face its terminal downward.
- The midrange is attached to the baffle by 4 external screws. To detach it, unfasten those screws. When attaching it, face its terminal downward.
- The tweeter is attached to the baffle by 4 external screws. To detach it, unfasten those screws. When attaching it, face its terminal upward.

CS-G404,CS-G304

PARTS LIST

NOTES:

- Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.
- The "△" mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

[CS-G404/XE]

Mark No.	Description	Parts No.
	Grille	FRMG-113
	Badge	FRAM-002
	Network Assy	FRWN-104
	Non-skid Pads	FREC-023
	Input Terminal	FRKX-004
	Catch	FRNK-015
	Duct	FRNK-240
	Speaker (Woofer)	A40FC92-51H
	Speaker (Midrange)	H12DP61-62F
	Speaker (Tweeter)	P66AP32-56F
	Screw (for Midrange,Tweeter)	BYC40P200FZB
	Screw (for Woofer)	BYC50P250FZB

[CS-G304/XE]

Mark No.	Description	Parts No.
	Grille	FRMG-112
	Badge	FRAM-002
	Network Assy	FRWN-103
	Non-skid Pads	FREC-023
	Input Terminal	FRKX-004
	Catch	FRNK-015
	Duct	FRNK-240
	Speaker (Woofer)	A30EC80-51G
	Speaker (Midrange)	H12DP61-62F
	Speaker (Tweeter)	P66AP32-56F
	Screw (for Speaker)	BYC40P200FZB

[For Packing]

Operating Instructions	FRRD-100
Protector	FRHA-129
Protector	FRHA-130
Protection Mat	FRHC-035
Packing Case	FRHG-173

[For Packing]

Operating Instructions	FRRD-100
Protector	FRHA-122
Protection Mat	FRHC-034
Packing Case	FRHG-172

SCHEMATIC DIAGRAM

