 


**Pioneer**

# Service Manual




ORDER NO.  
**CRT2323**

REMOTE CONTROL UNIT

# CD-R600

€

## EXPLODED VIEWS AND PARTS LIST EXTERIOR

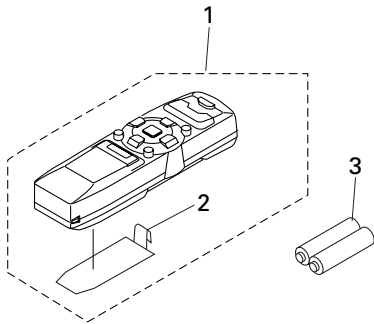

### NOTE:

● Parts marked by "\*" are generally unavailable because they are not in our Master Spare Parts List.

### ● EXTERIOR SECTION PARTS LIST

Mark No.	Description	Part No.
*	1 Remote Control Assy	CZX3237
	2 Battery Cover	CNS5032
	3 Battery	CEX1006

**PIONEER ELECTRONIC CORPORATION** 4-1, Meguro 1-Chome, Meguro-ku, Tokyo 153-8654, Japan  
**PIONEER ELECTRONICS SERVICE INC.** P.O.Box 1760, Long Beach, CA 90801-1760 U.S.A.  
**PIONEER ELECTRONIC [EUROPE] N.V.** Haven 1087 Keetberglaan 1, 9120 Melsele, Belgium  
**PIONEER ELECTRONICS ASIACENTRE PTE.LTD.** 253 Alexandra Road, #04-01, Singapore 159936

© PIONEER ELECTRONIC CORPORATION 1999

K-ZZB. MAR. 1999 Printed in Japan

ATT button

This lets you quickly lower volume level (by about 90%).  
Press once more to return to the original volume level.

