


**SOMMERKAMP
ELECTRONIC** 

**40 CHANNEL PLL
16 WATTS FM-TRANSCEIVER
WITH DIGITAL TUNING**

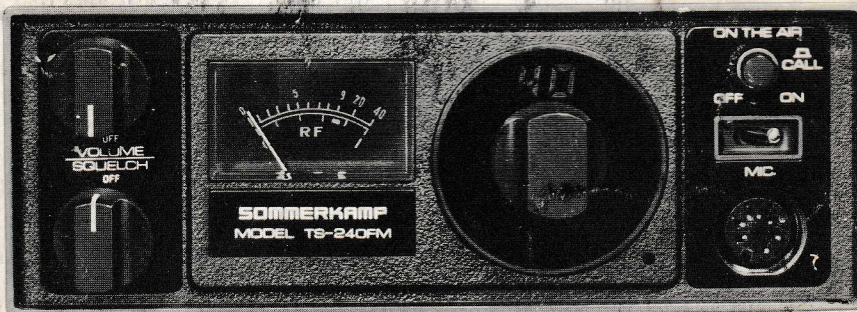

**MODEL TS 240FM
2m VHF MOBILE
INSTRUCTION MANUAL**

PLL SECTION

The PLL section consists of a C-MOS IC incorporating a reference crystal oscillator, 10 Bit divider chain and 8 Bit programable binary counter and an edge-type phase detector, voltage controlled oscillator, limiting amplifier and balance mixer, down conversion oscillator and voltage regulators. In addition, the PLL unit contains the lock detector circuit, modulation amplifier and limiter.

TRANSMITTER SECTION

The output signal of the PLL unit is amplified and multiplied to 134 MHz. This signal is mixed with 10.7 MHz and the resulting signal is amplified in the pre- and power amplifier of the transmitter section. The output of the final power amplifier is fed via a matching network, low pass filter and antenna switch to the antenna jack. Between the low pass filter and the antenna jack an SWR bridge detects the standing wave ratio on the antenna cable. If too high, it switches off the transmitter to protect the power amplifier.

RECEIVE / TRANSMIT SWITCHING

The receive/transmit switching is done by a single pole, single throw switch located in the microphone as well as a combination of NPN and PNP switching transistors which function also as voltage regulators.

METER

The meter provides the following combined functions:
in the receive mode it indicates the incoming signal strength, in the transmit mode it shows relative output power.

INSTALLATION

Unpacking:

Remove the transceiver carefully from the packing carton and examine it for external shipping damage. It is recommended to keep the shipping carton for future storage, moving or re-shipment. As the accessory hardware is packed with the transceiver, check if all parts are accounted for.

Location:

The placement of the transceiver in the vehicle is not critical and should be governed

by convenience and accessibility. Since the unit is very compact, there should not be any difficulties in finding a suitable location for it. Any place where it can be easily mounted with metal screws, bolts or pop-rivets will do.

For base-station operation, the mounting bracket will place the controls at a comfortable level and the built-in speaker into an efficient position.

POWER REQUIREMENTS

Voltage in excess of 16.0 Volts will cause heavy damage to the TS 240. Check the supply voltage before connecting the power cord.

The TS 240 FM is supplied ready for operation from any regulated 13.8 Volts DC, 2.0 Amps. negative ground source. Any vehicle system, 12.0 Volts, negative ground is usually more than adequate. Note however, that problems such as low battery, worn generator/alternator, poor voltage regulator etc. will impair the mobile operation of the TS 240 FM as well as the vehicle itself.

It is recommended that the DC power cable supplied with the set be wired directly to the vehicle battery terminals. Be certain to observe the correct polarity. RED wire is POSITIVE (+) whereas the BLACK wire is NEGATIVE (-). Do not attempt to install the TS 240 FM in a vehicle employing POSITIVE GROUND ignition system. Where a temporary mobile installation is made by connecting the power cable for instance to the cigar lighter, only less than full performance of the TS 240 FM can be expected.

In selecting a base station power supply it is imperative that the unit be sufficiently regulated so that its no-load voltage never exceeds 16.0 Volts and its voltage at a 2.0 Amps load would not drop below 10.0 Volts. The output hum and ripple should be less than 100 millivolts.

ANTENNA

The most important single item that will influence the performance of any communication system is the antenna. For that reason, a good, high-quality antenna of 50 ohms impedance is recommended. When adjusting your antenna, whether mobile or fixed, by all means follow the manufacturer's instructions. There are some pitfalls to be aware of. For example, do not attempt to adjust an antenna for lowest VSWR when using a VSWR meter not engineered for VHF applications. Such readings will invariably be substantial at 144 MHz. Rather, use an in line meter similar to the

Bird Model 23 with VHF cartridge. Further, when adjusting a mobile antenna, do so with the motor running preferably above normal idling speed. This will insure proper voltage level to the transceiver.

Do not become alarmed if your transceiver fails to transmit at times during the antenna tune up procedure. Remember, your transceiver has a built-in Automatic Protection Circuit (APC) that will disable the transmitter if excessive VSWR, or an open or shorted coaxial line or connector, or other antenna deficiency is present.

The RF coaxial connector on the rear chassis mates with a standard PL-259 connector.

MICROPHONE:

A high quality dynamic microphone is supplied with the transceiver. Merely plug it into the proper receptacle on the front panel. Should you want to use a different microphone, make certain it is of low impedance type (600 ohms). Particular care should be exercised in wiring as the internal electronic switching system is dependant upon it. See the schematic for the proper hook up. Under no circumstances use a "gain pre-amp" type microphone. The audio system in your transceiver is more than adequate and additional pre-amplification is unnecessary. To use this class of microphone is to invite distortion and unsatisfactory operation of the transceiver.

OPERATING INSTRUCTIONS

After completing the installation as described above switch the transceiver ON by moving the power switch to position ON. The receiving meter and the channel numbers will light up. Turn the squelch control to minimum. Turn the volume control to maximum until you hear a hissing sound from the speaker. Switch the channel selector to channel 1. Press the transmit button of the microphone and check that the meter needle is near the red mark during transmitting. Release the PTT button and switch to channel 2. Repeat this procedure until all 40 channels are checked out.

Then switch to a channel where there is a transmitting station, wait until this station stops to transmit and turn the squelch control slowly to maximum until the background noise just disappears. When the station starts to transmit again you will hear the station, but you will not hear the background noise during its non-transmitting periods.

To send out a call just push the CALL-button. This will transmit automatically a 1750 Hz signal to open repeaters etc. In case the antenna is mis-matched the automatic protection circuit operating the protection lamp will light up. This can be re-set by switching off the transceiver with the POWER switch.

ACCESSORY JACK


The 7-pin DIN standard accessory jack has the following connections:

- 1. Internal speaker (Z 8 ohm)
- 2. Audio detector output
- 3. Audio output (Z 8 ohm- 10 K ohm)
- 4. Microphone input (Z 600-10 K ohm)
- 5. Internal microphone input (Z 1 k ohm)
- 6. +12 Volt
- 7. transmit/receive switching


Case=ground

Always operate the transceiver with the shortening plug inserted in the accessory jack, or with the following external connections:


1. Microphone with VOX

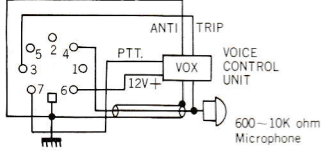


5. External microphone/speaker with PTT.

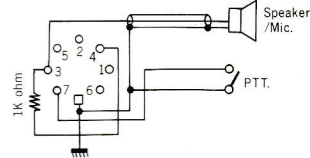


2. Headset or Telephoneset with PTT.

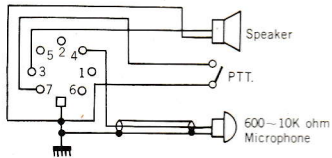


6. Internal connection

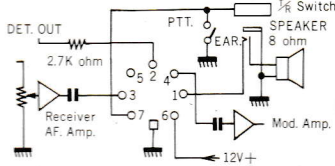


3. External microphone

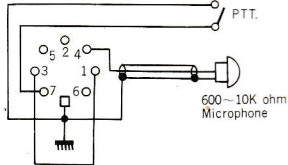

7. Parrot 76

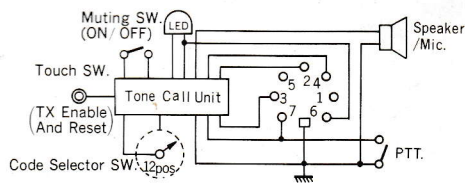


4. Headset or Telephoneset with VOX

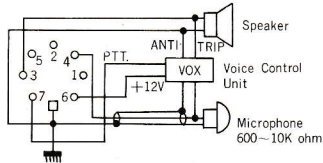

LIST OF CHANNEL FREQUENCIES




CH. NO.	TX	RX
1	145.025	145.625
2	050	650
3	075	675
4	100	700
5	125	725
6	150	750
7	175	775
8	200	800
9	225	825
10	250	250
11	275	275
12	300	300
13	325	325
14	350	350
15	375	375
16	400	400
17	425	425
18	450	450
19	475	475
20	500	500
21	525	525
22	550	550
23	575	575
24	600	600
25	625	625
26	650	650
27	675	675
28	700	700
29	725	725
30	750	750
31	775	775
32	800	800
33	825	825
34	850	850
35	875	875
36	900	900
37	925	925
38	950	950
39	975	975
40	145.000	145.600

MAIN CHASSIS PRINTED CIRCUIT BOARD PARTS LAYOUT

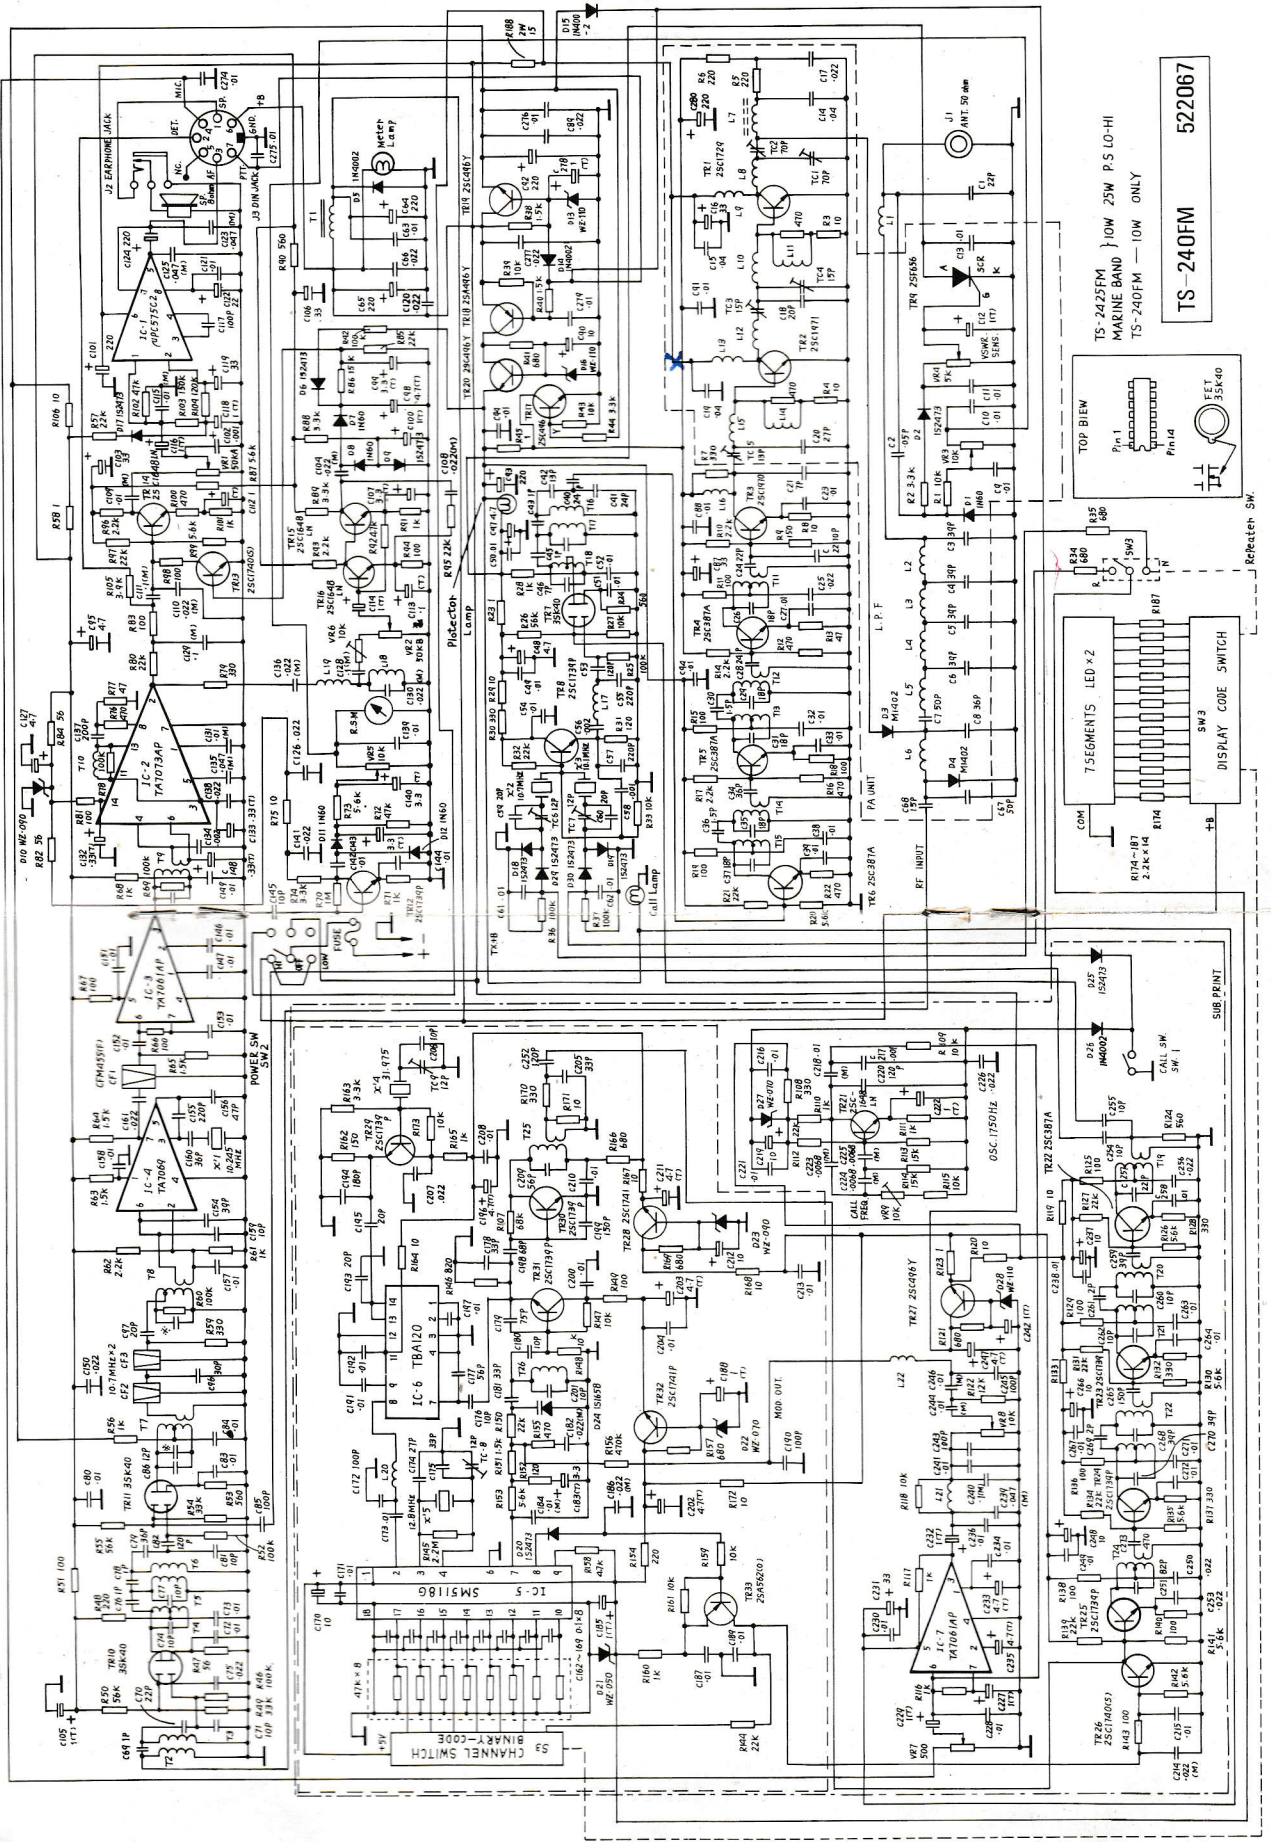


TS-2425FM
MARINE BAND LOW 25W P.S LO-HI
TS-240FM — 10W ONLY

TS-240FM 522067

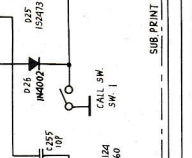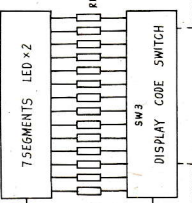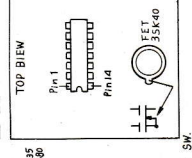


Refer to SW.

INTERCONNECTION WIRING DIAGRAM

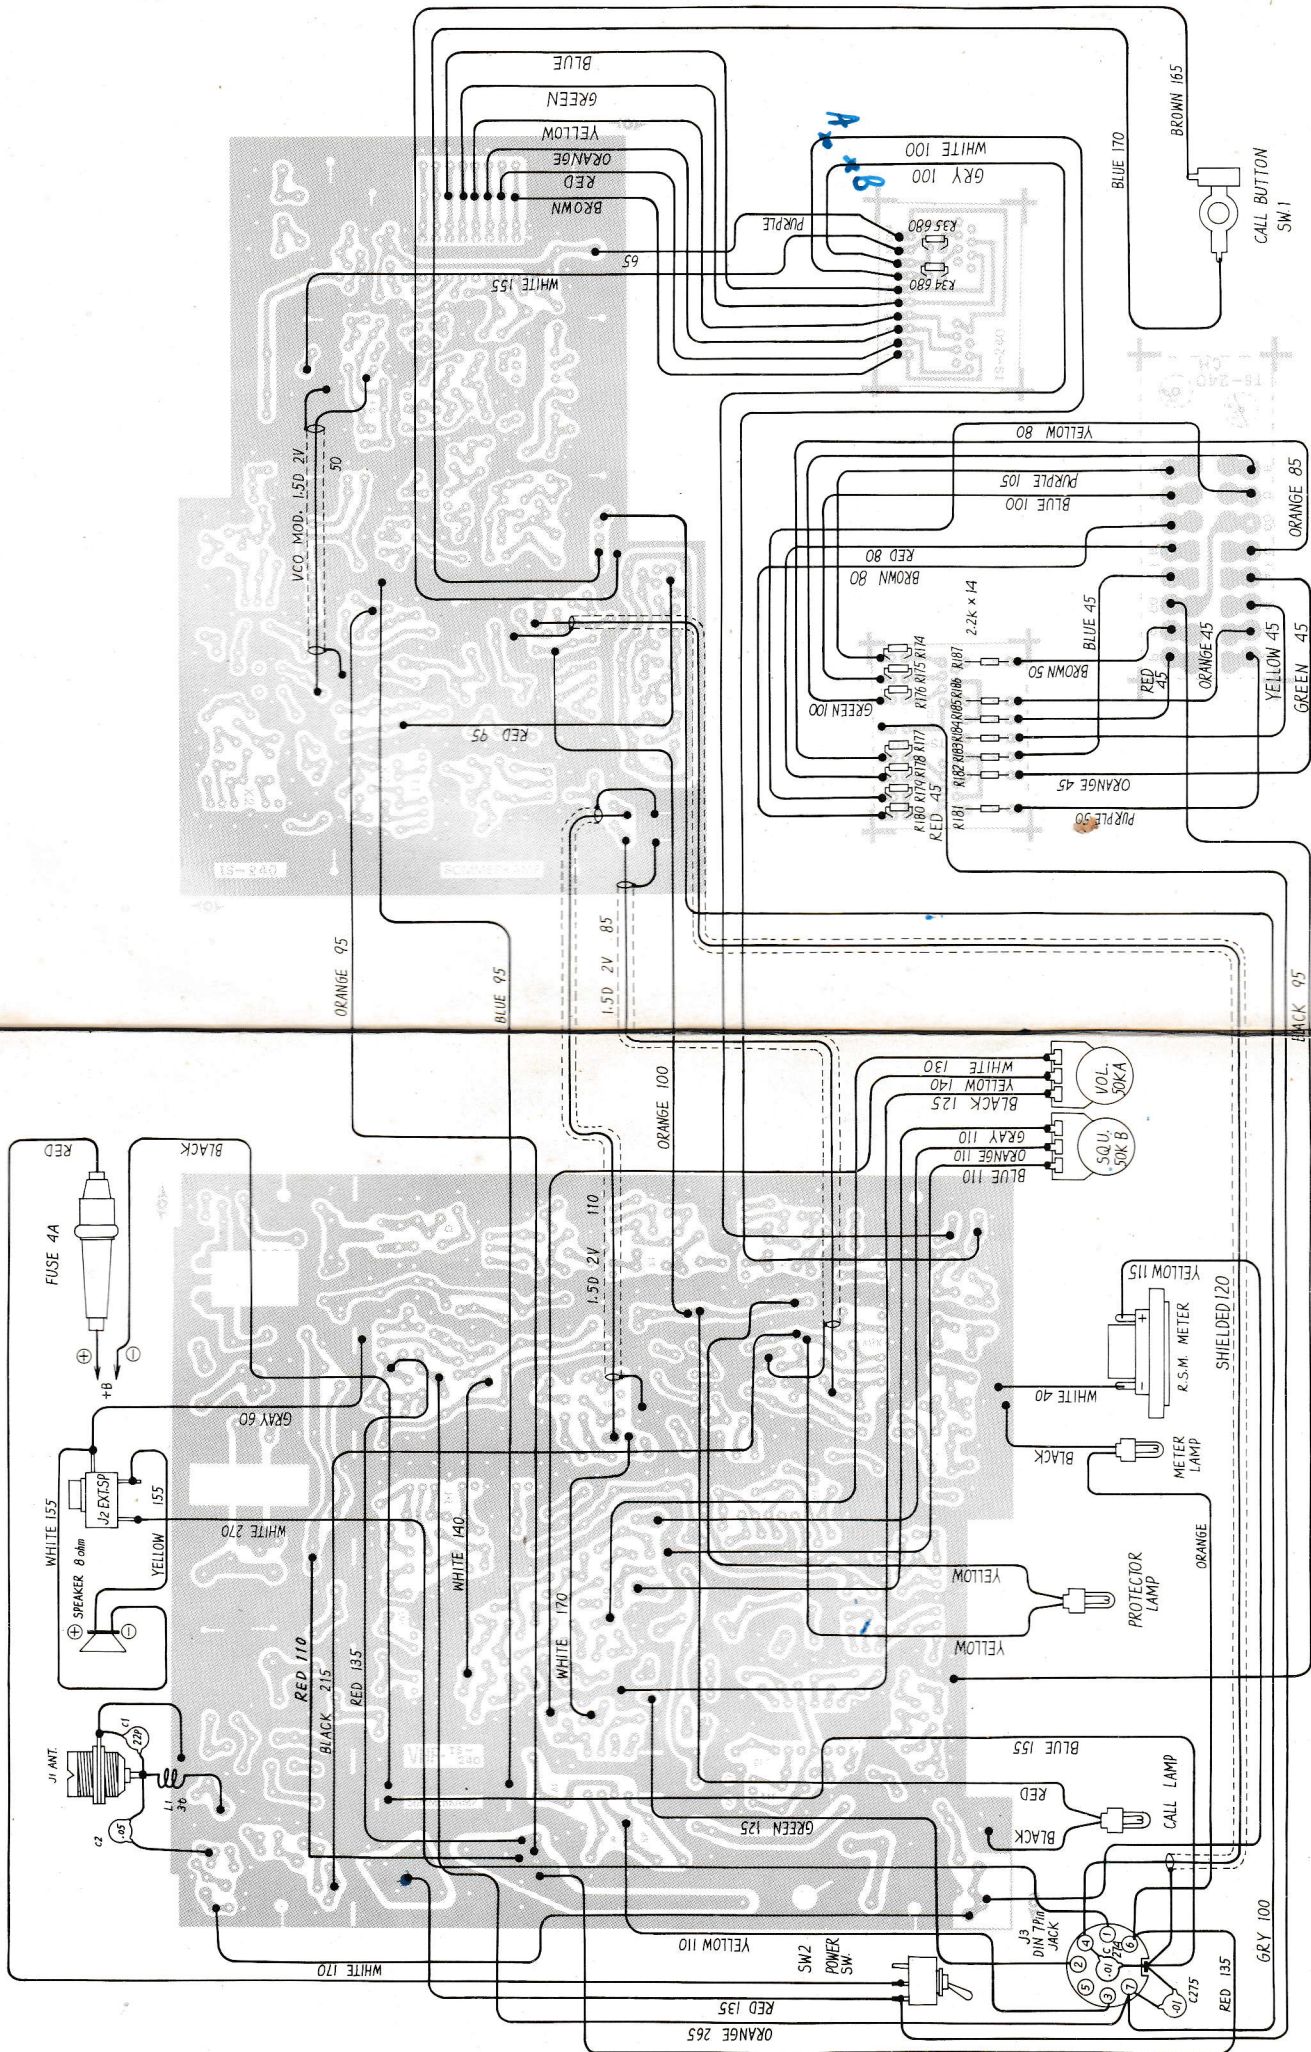

MAIN CHASSIS PRINTED CIRCUIT BOARD COMPLETE PARTS LAYOUT

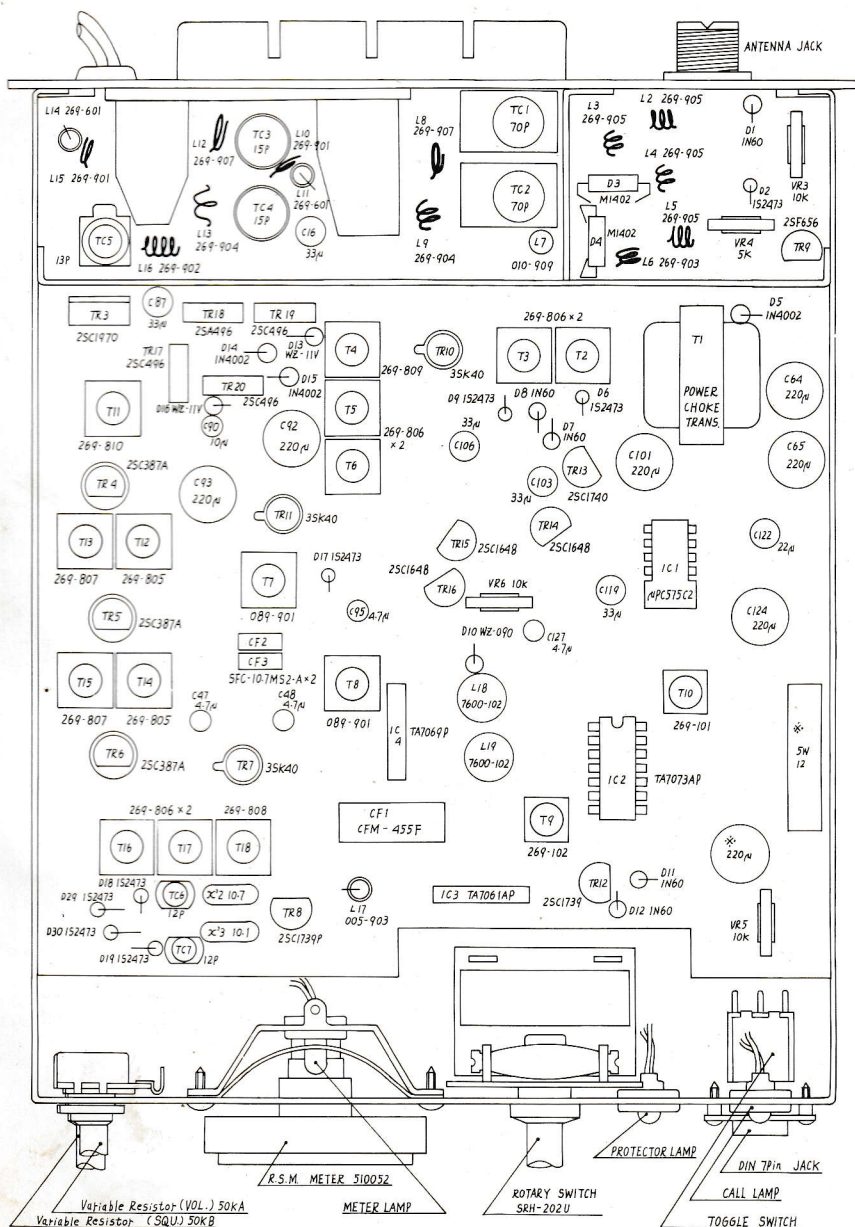

PARTS LIST FOR TS-240FM

DESIGNATION	PARTS NAME	PARTS NO.
MP-443	Front Frame	524405
MP-444	Front Plate (R)	524423-R
MP-445	Front Plate (L)	524423-L
MP-446	Brand Plate	524424
MP-447	Back Plate	524425
MP-448	Chassis Frame	522060
MP-107	Mounting Bracket	484085
MP-105	Cabinet Cover (Upper)	483016
MP-449	Cabinet Cover (Lower)	523061
MP-450	Back Pannel	524429
MP-211	Meter Lamp Reflection Plate	484063
MP-353	Heatsink A	494251
MP-354	Heatsink B	494252
MP-451	Heatsink(for 2SC1729, 2SC1971)C	524432
MP-110	Mounting Bracket for Meter	484064
MP-406	Mounting Bracket for Speaker	504335
MP-111	Call Switch Contact	484086
MP-112	Call Switch Spring	484087
MP-117	Knob for Channel Selector	484116
MP-17	Knob for Vol./Squ. Control	474011
MP-19	Call Button	484057
MP-109	Supporter for MIC. Consent	484084
MP-118	Nut for Channel Selector	484073
MP-120	Screw for Mounting Bracket	484098
MP-500	PLL Unit Cover (Upper) A	524376
MP-501	PLL Unit Cover (Lower) B	524386
MP-452	Power Unit Cover C	524430
MP-453	Power Unit Cover D	524430
MP-454	Power Unit Cover E	524431
TC-1.2	Trimmer Final Tune. 70PF	AV-70C
TC-3.4	Trimmer Drive Tune. 15PF	CV03A150
TC-5	Trimmer Pri Drive Tune. 13PF	CV7-13
TC-6~9	Trimmer Crystal FREQ. 12PF	CV05-C120

PARTS LIST FOR TS-240FM

DESIGNATION	PARTS	NAME	PARTS NO.
TR1	TRANSISTOR		2SC1729
TR2	TRANSISTOR		2SC1971
TR3	TRANSISTOR		2SC1970
TR4.5.6.22	TRANSISTOR		2SC387-A
TR17.19.20.27	TRANSISTOR		2SC496-Y
TR18	TRANSISTOR		2SA496-Y
TR33	TRANSISTOR		2SA562-O
TR8.12.23.24.	TRANSISTOR		2SC1739-P
25.29.30.31	TRANSISTOR		
TR28.32	TRANSISTOR		2SC1741-P
TR13.26	TRANSISTOR		2SC1740-S
TR14.15.16.21	TRANSISTOR		2SC1648LN
TR7.10.11	FET		3SK40
TR9	SCR		2SF656
IC5	Integrated Circuit		SM5118G
IC6	Integrated Circuit		TBA120
IC1	Integrated Circuit		UPC575C2
IC2	Integnated Circuit		TA7073AP
IC4	Integrated Circuit		TA7069P
IC3.7	Integrated Circuit		TA7061AP
CF1	Ceramic Filter		CFM-455F
CF2.3	Ceramic Filter		SFC-10.7MS2-A
D2.6.9.17.~20.	Silicon Diode		IS2473
25.26.29.30			
D5.14.15	Silicon Diode		IN4002
D1.7.8.11.12	Germanium Diode		IN60
D13.16.28	Zener Diode		WZ-110
D10.23	Zener Diode		WZ-090
D22.27	Zener Diode		WZ-070
D21	Zener Diode		WZ-050
D24	Varicap Diode		IS-1658
D3.4	RF. SW. Diode		MI-402

PARTS LIST FOR TS-240FM

DESIGNATION	PARTS NAME	PARTS NO.
T1	Power Choke Trans former	EI-24
T2.3	RX. RF IN	269-806
T4	RX. RF OUT	269-809
T5.6	RX. RF OUT	269-806
T7.8	RX. 1st MIX 10.7 MHz	089-901
T9	RX. 455KHz	269-102
T10	RX. 455KHz DET.	269-101
T11	TX. 145MHz Drive Coil	269-810
T12	TX. 145MHz Pri. Drive Coil	269-805
T13	TX. 145MHz Pri. Drive Coil	269-807
T14	TX. 145MHz Buffer Coil	269-805
T15	TX. 145MHz Buffer Coil	269-807
T16.17	TX. Mixing Coil	269-806
T18	TX. Mixing Coil	269-808
T19	RX. 134MHz Buffer Coil	269-810
T20	RX. 134MHz Doubler	269-803
T21	RX. 134MHz Doubler	269-809
T22	TX. 67MHz Doubler	269-802
T23	TX. 67MHz Doubler	269-804
T24	TX. 33MHz Buffer Coil	269-801
T25	VCO 33MHz Buffer Coil	231-003
T26	VCO 33MHz OSC Coil	231-001
L1	Antenna L.P.F.	269-906
L2~5	L. P. F.	269-905
L6	RX. IN PUT	269-903
L7	2.2MH RFC Coil	010-909
L8	TX. Final Tune Coil	269-907
L9	TX. Final Choke Coil	269-904
L10	TX. Final IN PUT	269-901
L11.14	L. R. P.	269-601
L12	TX. Drive Tune Coil	269-907
L13	TX. Choke Coil	269-904
L15	TX. Drive IN PUT	269-901
L16	TX. Pri. Drive Tune Coil	269-902
L17	10.7MHz L. P. F. RFC	005-903

PARTS LIST FOR TS-240FM

DESIGNATION	PARTS NAME	PARTS NO.
L18.19.22	1mH Choke Coil	7600-102
L21	100mH Choke Coil	7600-104
VR1	Variable Resistor (Volume) 50K ohm	VR1650KA
VR2	Variable Resistor (Squelch) 50K ohm	VR1650KB
VR3.5.8	Semi Variable Resistor 10K ohm	SVR010K S3
VR4	Semi Variable Resistor 5K ohm	SVR005K S3
VR7	Semi Variable Resistor 500 ohm	SVR500 S3
VR6.9	Semi Variable Resistor 10K ohm	SVR010K S2
RM	Resistor 47K ohm x 8	RM8-473K
J1	Antenna Jack	MRM /1NCH
J2	EXT. Speaker Jack	SJ-296
J3	Microphone Jack DIN Type 7pin.	CS-279
F1	Fuse 4A.	F-4A
SW2	Toggle SWitch	8A-2011
SW3	(Binary) Code Switch, Repeater Switch	SRH-202U
R.S.M	Meter	510052
PL1.2.3	Pirot Lamp 14V 80mA	524433
MIC.	Microphone Complete	22-256-28
LED.	LED Display	GL-6P202
K	Connector 8pin	524438

SPECIFICATIONS FOR TS 240 FM

General

Frequency Coverage:	145.000 to 145.975 MHz in 25 KHz steps, ch. 40 to ch. 9. Receiver 600 KHz repeater offset.	
Frequency control:	Digitally synthesized, low sideband noise PLL system.	
Frequency stability:	3×10^{-6} at 25°C 8×10^{-6} at -10 to +50°C	
Semiconductor complements:	Transistors, FETs, ICs, LED displays, diodes.	
Modulation Type:		
Supply Voltage:	10-16VDC	
Current drain:	Transmit: 2A at 14 Volts	Receive: 300mA at 14V
Antenna Impedance:	50 Ohms unbalanced	
Size:	58mm x 156mm x 216mm (excluding controls)	
Weight:	1.9 kg	
Transmitter:		
Frequency Control:	Phase Locked Loop synthesizer	
Modulation:	FM	
Audio Input:	600 Ohms	
Microphone:	600 Ohms dynamic	
Power Output:	min. 10 Watts at 12 Volts	
Spurious and Harmonic Output:	less than -30dBm. (-70 dB below carrier)	
Duty Cycle:	100% transmit at 16V/+60% C 50 Ohms resistive load	
Receiver		
Frequency Scheme:	Dual conversion superheterodyne with 10.7MHz and 455 KHz IF	
Sensitivity:	· 75 μ V for 12dB sinad. · 1 μ V squelch threshold	
Spurious Response:	-70 dB	
Selectivity:	15 KHz -3dB; 25 KHz -70dB	
Audio Output Power:	2 Watts at 8 Ohm at less than 10% THD.	

SOMMERKAMP ELECTRONIC SAS

CH-6903 LUGANO, P.O. BOX 176
SWITZERLAND
TEL. (91) 688543 TELEX 79314