


5547


R.G.B. DRIVE PANEL Type A807

CAPACITOR PL

TO 8T1
tag 1
& 8C5

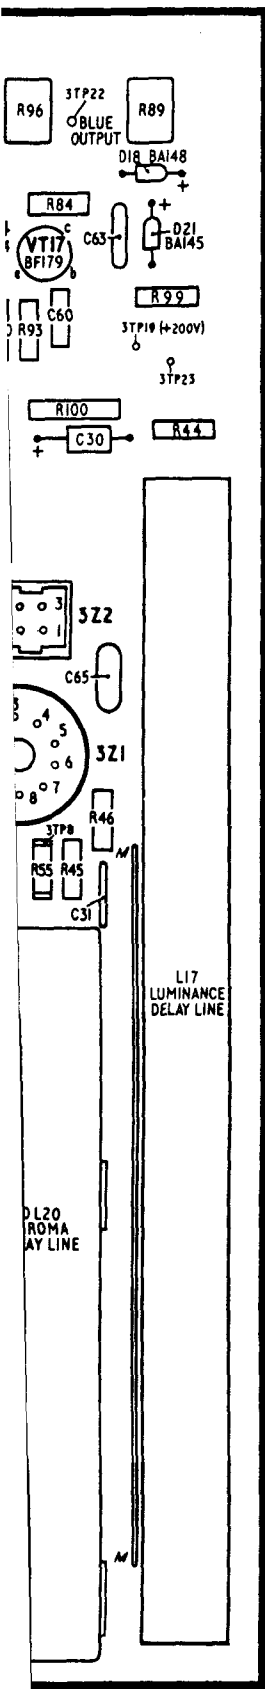


5547

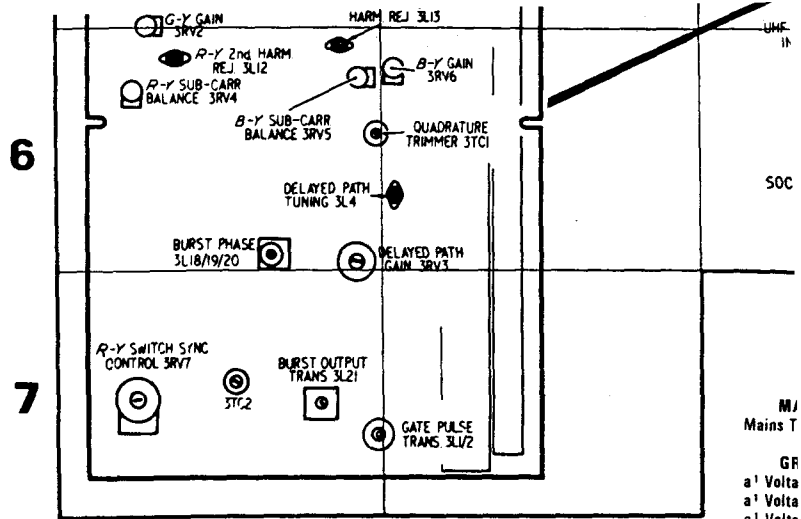




M/
Mains T
GF
a¹ Volta
a¹ Volta
a¹ Volta
Blue Ori
Green Di
Red Driv
Gun Swi


CON
Blue Hor
Blue Hor
Blue Hor
Blue Lat
Blue Lat
Blue Ver
Blue Ver
Horizont:
Purity Ri
Radial Si
Red/Gree
Red/Gree
Red/Gree

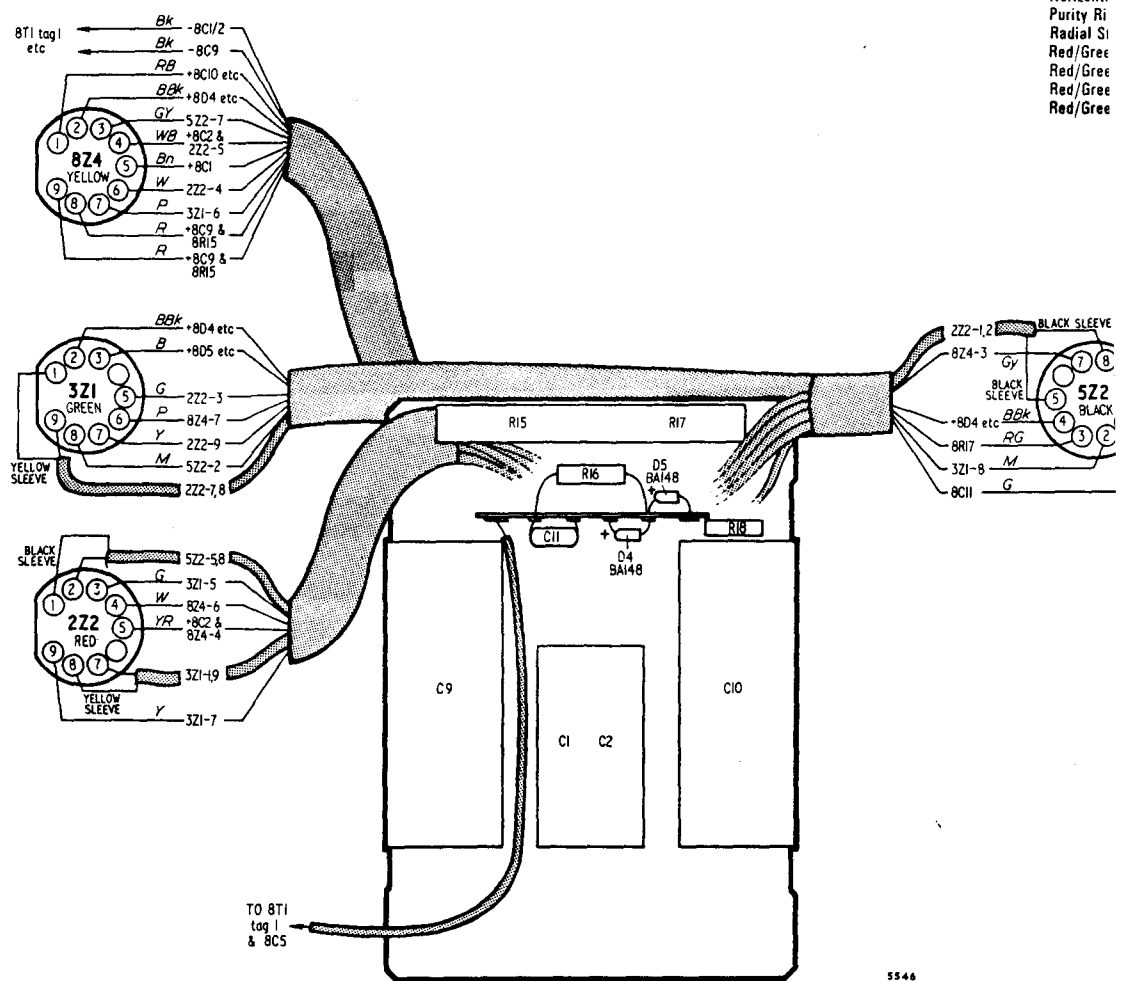

5546





 
CAPACITOR PLATE & CABLEFORM

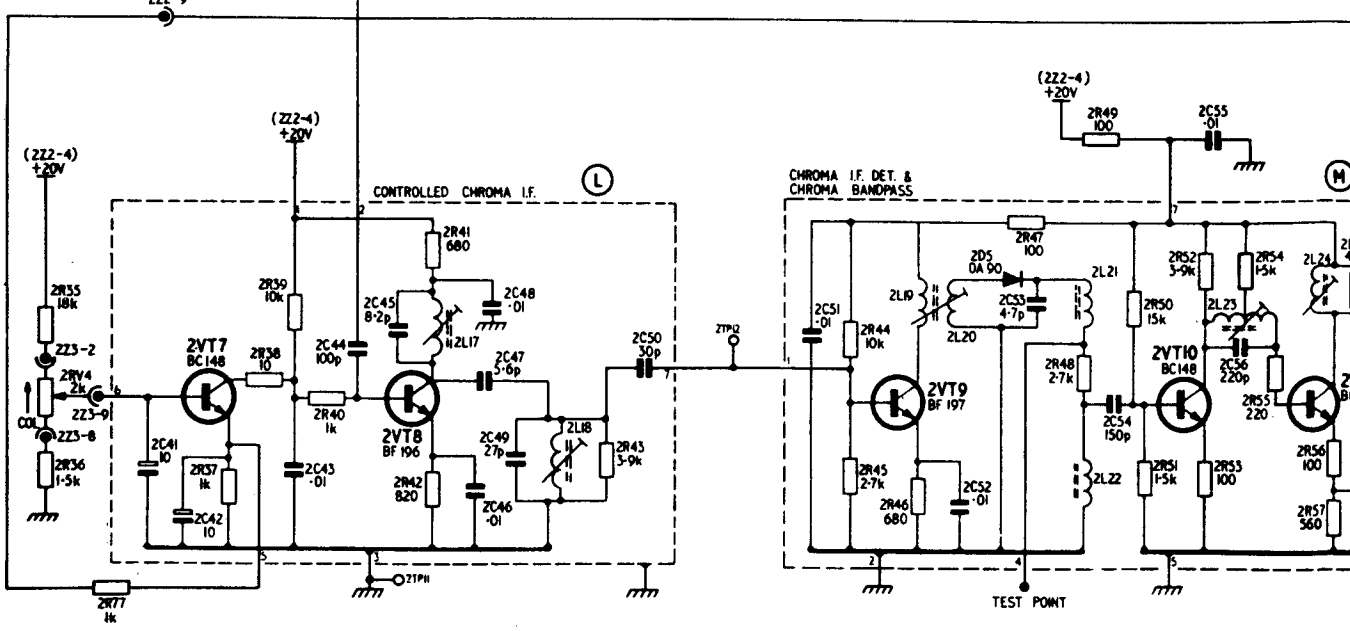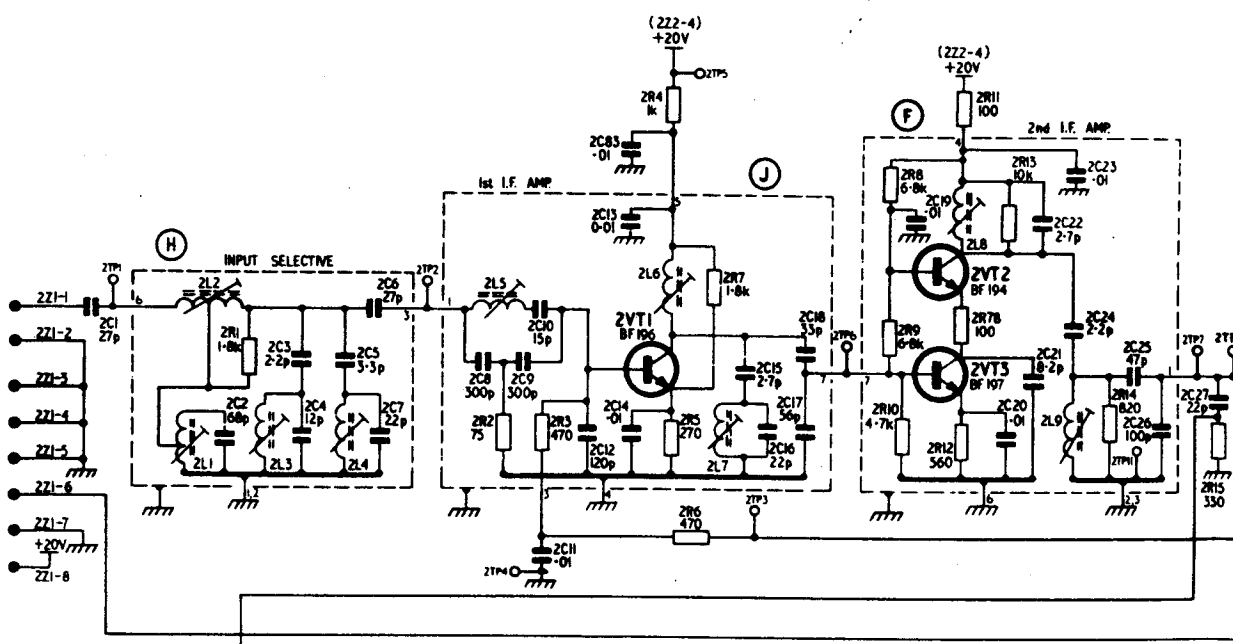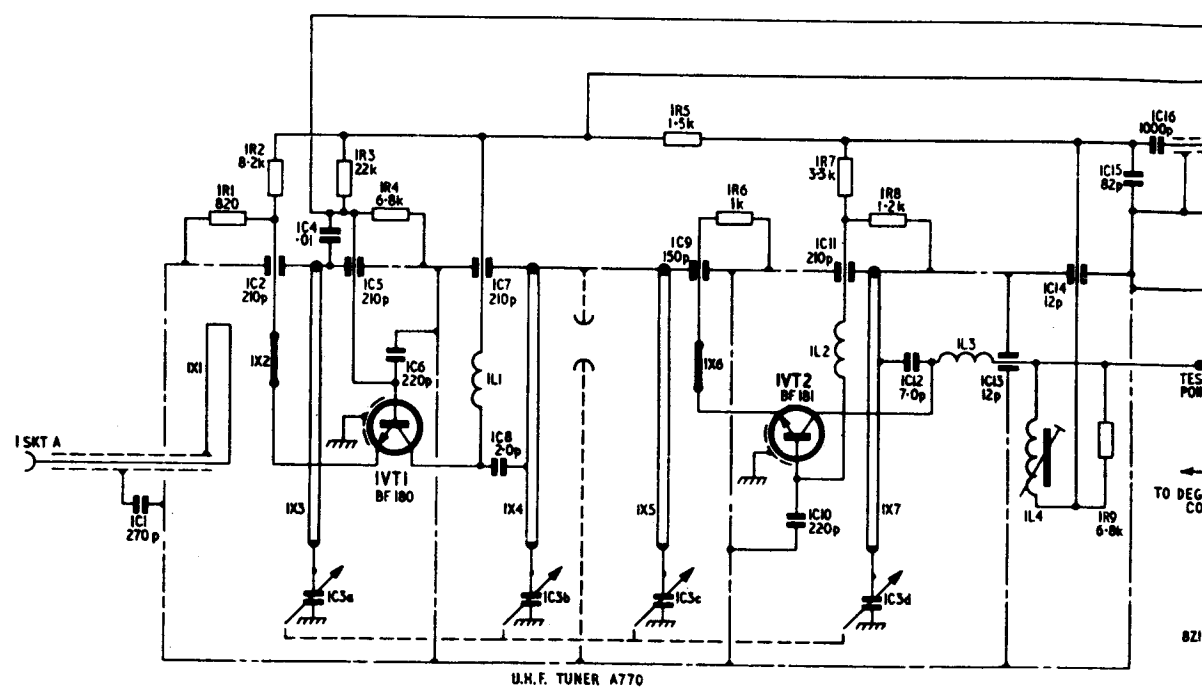



Ref.	Type	Electrode Voltage			Remarks
		emitter	base	collector	
4VT1	BC117	-76.0	-74.0	2.0	
4VT2	BC171	-85.0	-78.0	-75.0	
5VT1	BC170B	0	0	9.0	
5VT2	BSY84	0.1	0	3.1	
5VT3	BC108	0	0	17.4	
5VT4	BC170B	2.6	3.1	17.5	
5VT6	BC147	5.8	6.0	16.0	
5VT7	BD131	0	0.4	20.0	
5VT8					
5VT9	BC148	0	0	1.2	
5VT10	AC128	1.5	1.3	0	
5VT11	BD131	21.5	22.0	35.0	
5VT12	BD131	0.75	1.4	22.0	
6VT1	BU105	N.T.	N.T.	N.T.	Connected as diode
6VT2	BU105	N.T.	N.T.	N.T.	Connected as diode
7VT1	AC128	—	—	—	
7VT2	AC128	—	—	—	

5THY1	BRY39	Cathode	C. Gate	Anode	A. Gate
Ref.	Pin No.	Electrode		Voltage	
4V1	1	Heater	0	4.1	6.2
	2	Cath., Red			
	3	Grid, Red			
	4	A ¹ , Red			
	5	A ¹ , Green			
	6	Cath., Green		130	
	7	Grid, Green			
	8	No. Pin			
	9	A ² , Focus		5-8kV	
	10	No. Pin			
	11	Cath., Blue		130	
	12	Grid, Blue			
	13	A ¹ , Blue			
	14	Heater		Chassis	

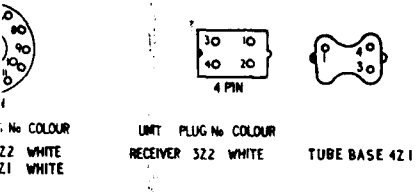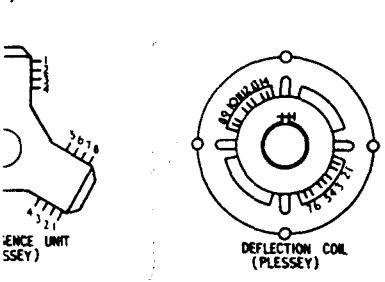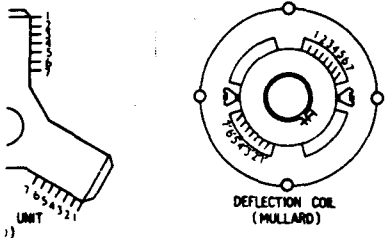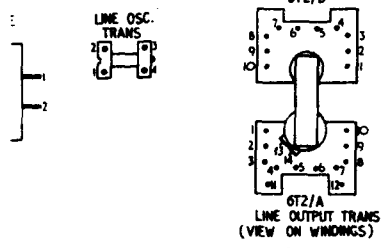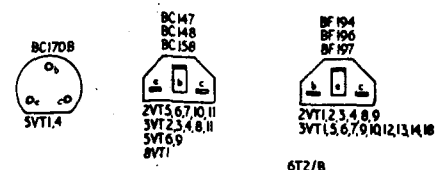

INDICATES CLOCKWISE ROTATION OF VARIABLE RESISTORS

COILS & TRANSISTORS
N PINS
WED ON WINDINGS


RESISTOR VALUES IN Ω
CAPACITOR VALUES IN μF
UNLESS OTHERWISE STATED

CIRCUITS DIAGRAM

I.F. & SOUND OUTPUT PANEL Type A809


POWER SUPPLY PANEL TY

MISC.	R	C
VT15		
VT16		
VT14	74	76
	76 75	
VT13	65	81
	69 66	
	67 68	
	73	
Z4	71	79
	72	78 82
	77 75	
VT12	70	40
L29		80
D7	64	74
TP15	35	21
L28	63	39
	72	
	64 73	
Z3		
	22 36	65
TP4	49	
		55
		18
TP8		34
TP13		
TP12		
TP11		27
ZZ	77	15
L15		
	23	
TP10	26	
TP9		
VT5		
L16		
RV2	36	
	24	11 35
TP4	25	
D2	31	
TP6	27	
	30	38
D3	28	
TP5		
VT6	33	83
TP3	29	6 4
RV5	32	11
TP2		37
D4		34
TP1		
Z1		1

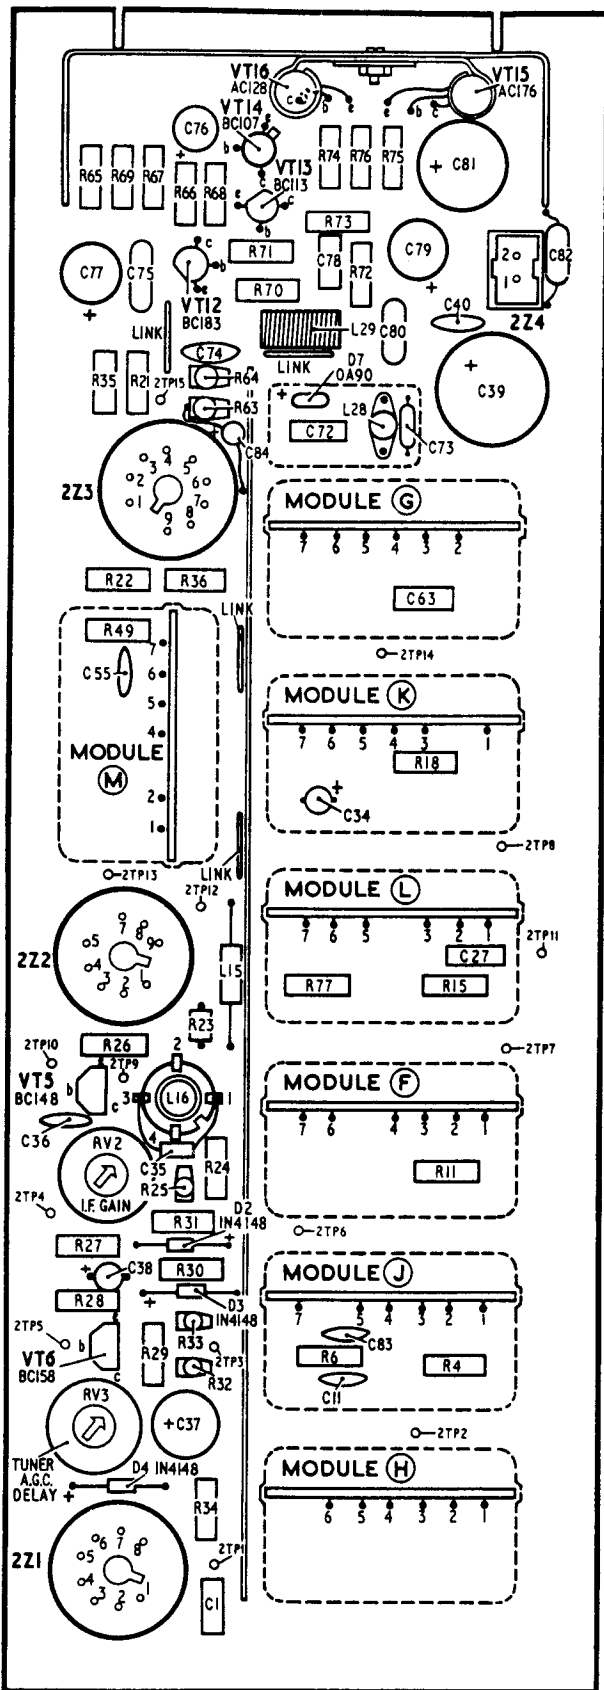


5543

MISC.	R	C
F3	D1	1
	2	4 3
Z4		
	9	6
D2	BR1	8 7
VT1		10
D3	RV1	
FI		7
THY1		
	13	14
	12	
TH2	Z2	5
TH1		
VDR1		
F2		
Z3		
Z1		

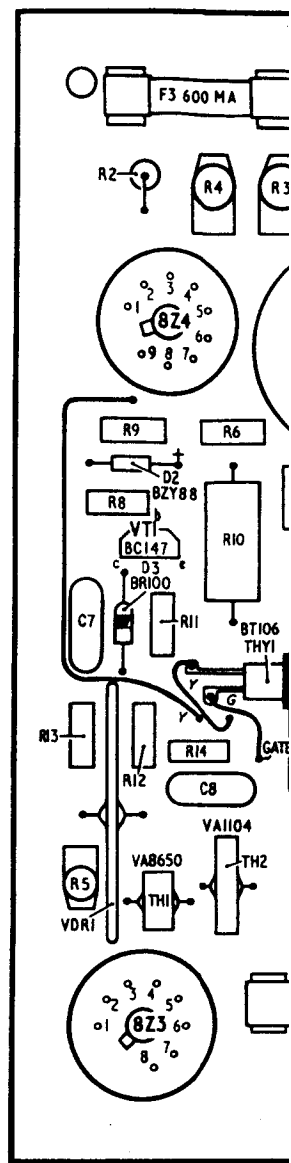


POWER SUPPLY PANEL Type A801

MISC	R	C
F3	D1	1
		2 4 3
Z4		4
		3
		9 6
D2	BR1	8 7
VT1		10
D3	RV1	
		11 7
THY1		
		13 14
		12 8
TH2	Z2	5
TH1	VDR1	
F2	Z3	
		21

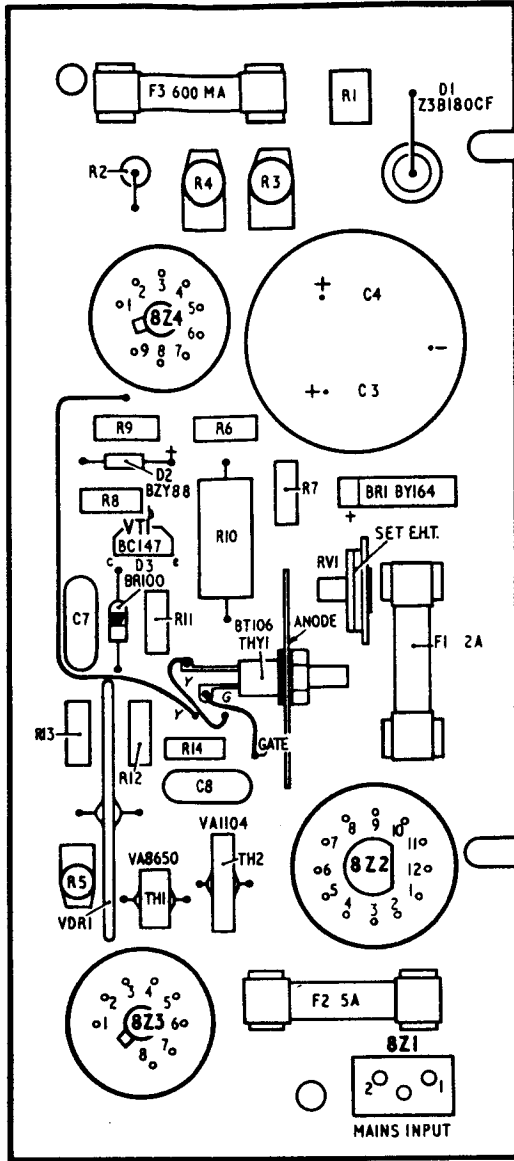


5554

TUNER UNIT Type A770

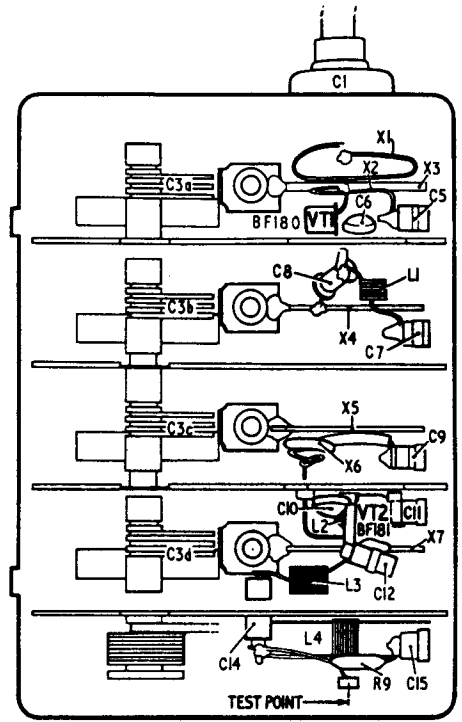



8841

A

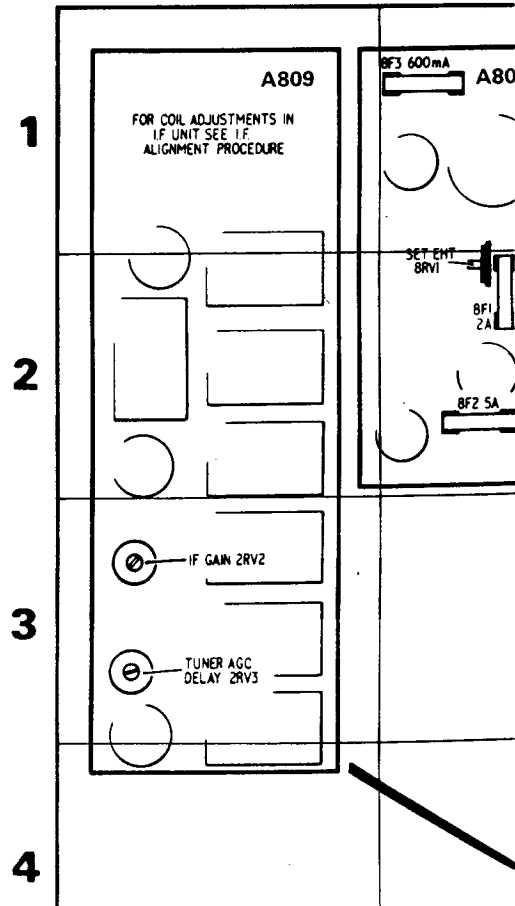


TUNER UNIT Type A770

CONVERGEN

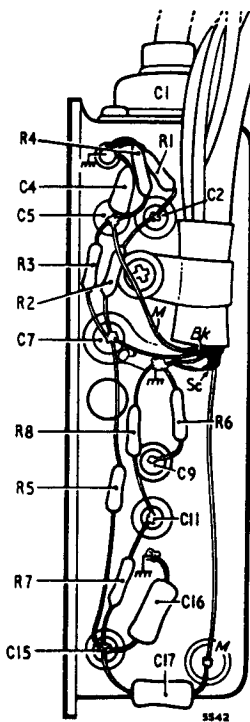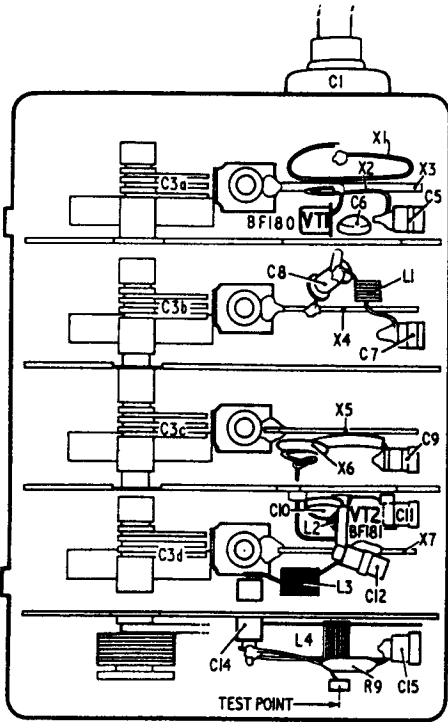


MISC.	C	R
	1	
X1 X2 X3	3a	4 1
VT1	4 2 6 5	
L1	8	3
X4	3b	2
X5	3c	8 6
X6	9	5
VT2 L2 X7	10 11	
L3	3d 12 16	7
L4	15 17	9

MISC	RV5 RV4 RV13	VT1
R		
C	1 9	

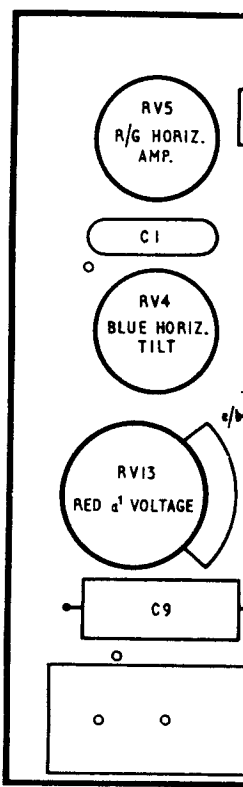


A B C D

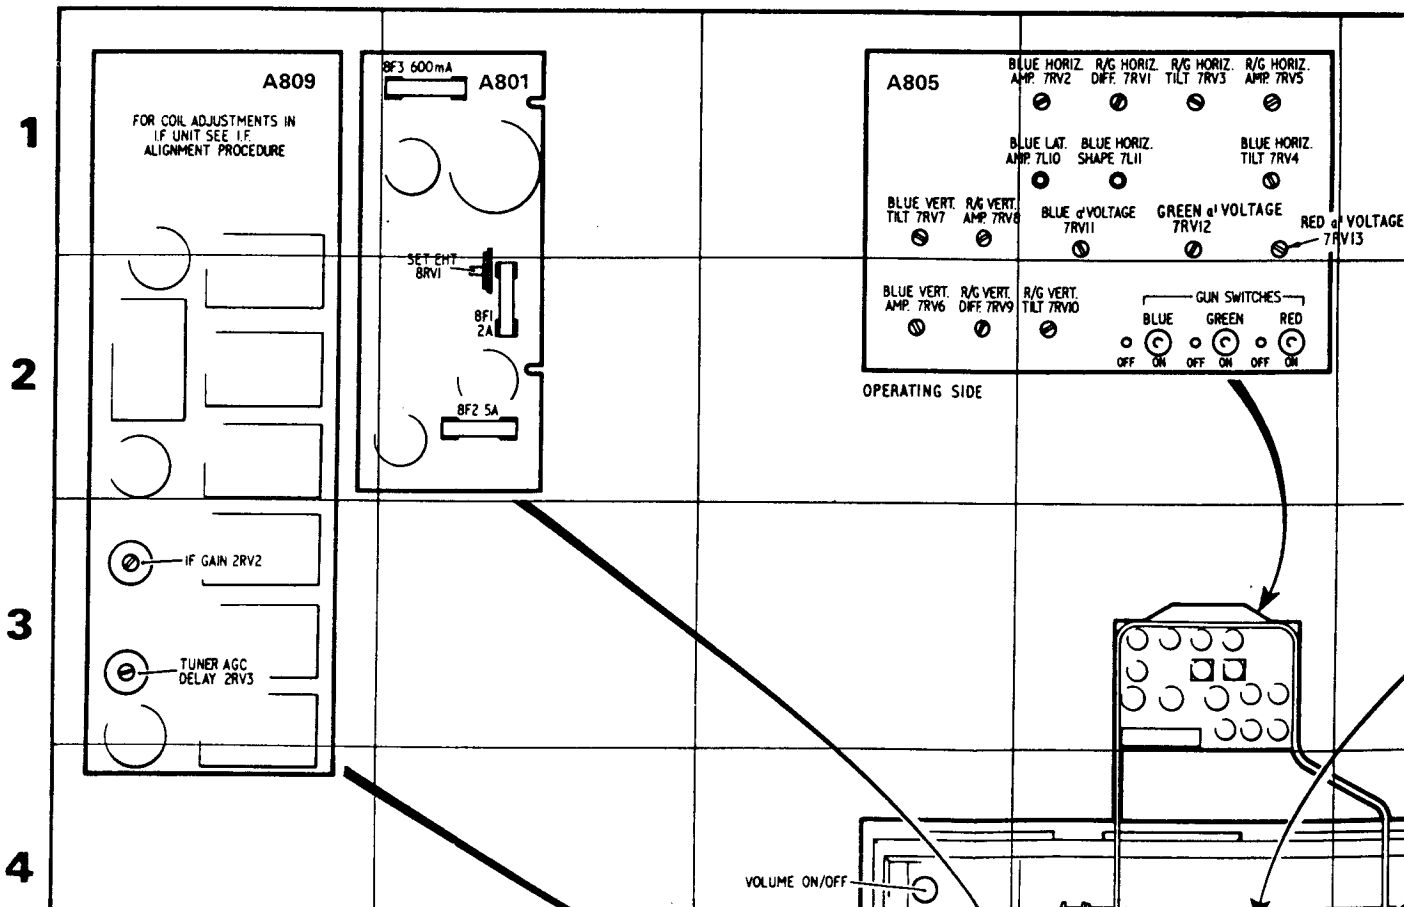


CONVERGENCE UNIT Type A805 (Component side)

MISC	RV5 RV4 RV13	VT1	RV3 L9 RV12	RV1 L11	RV11	RV2 L10 RV10	VT2	RV8 RV9	RV7 RV6
R		4 10	2		9 8 3	1 7		6	5
C	1		3 8		7	2		6	5 4

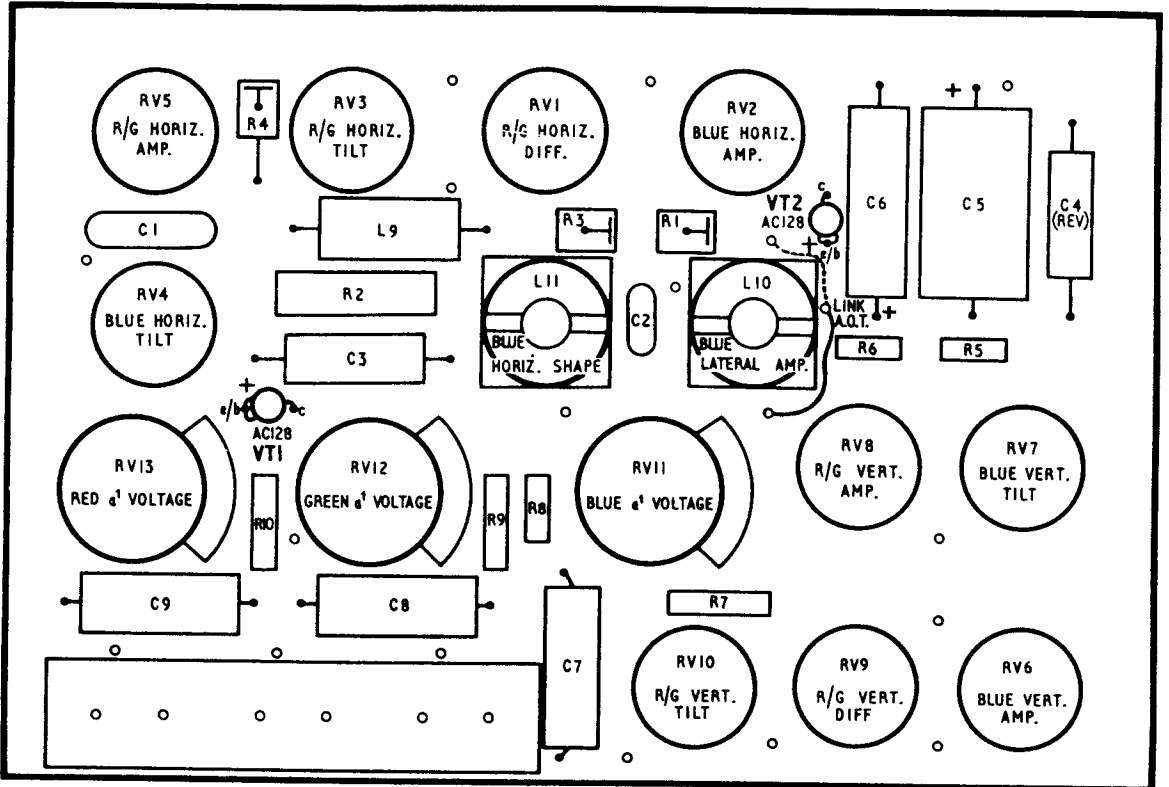


5558

D E F G

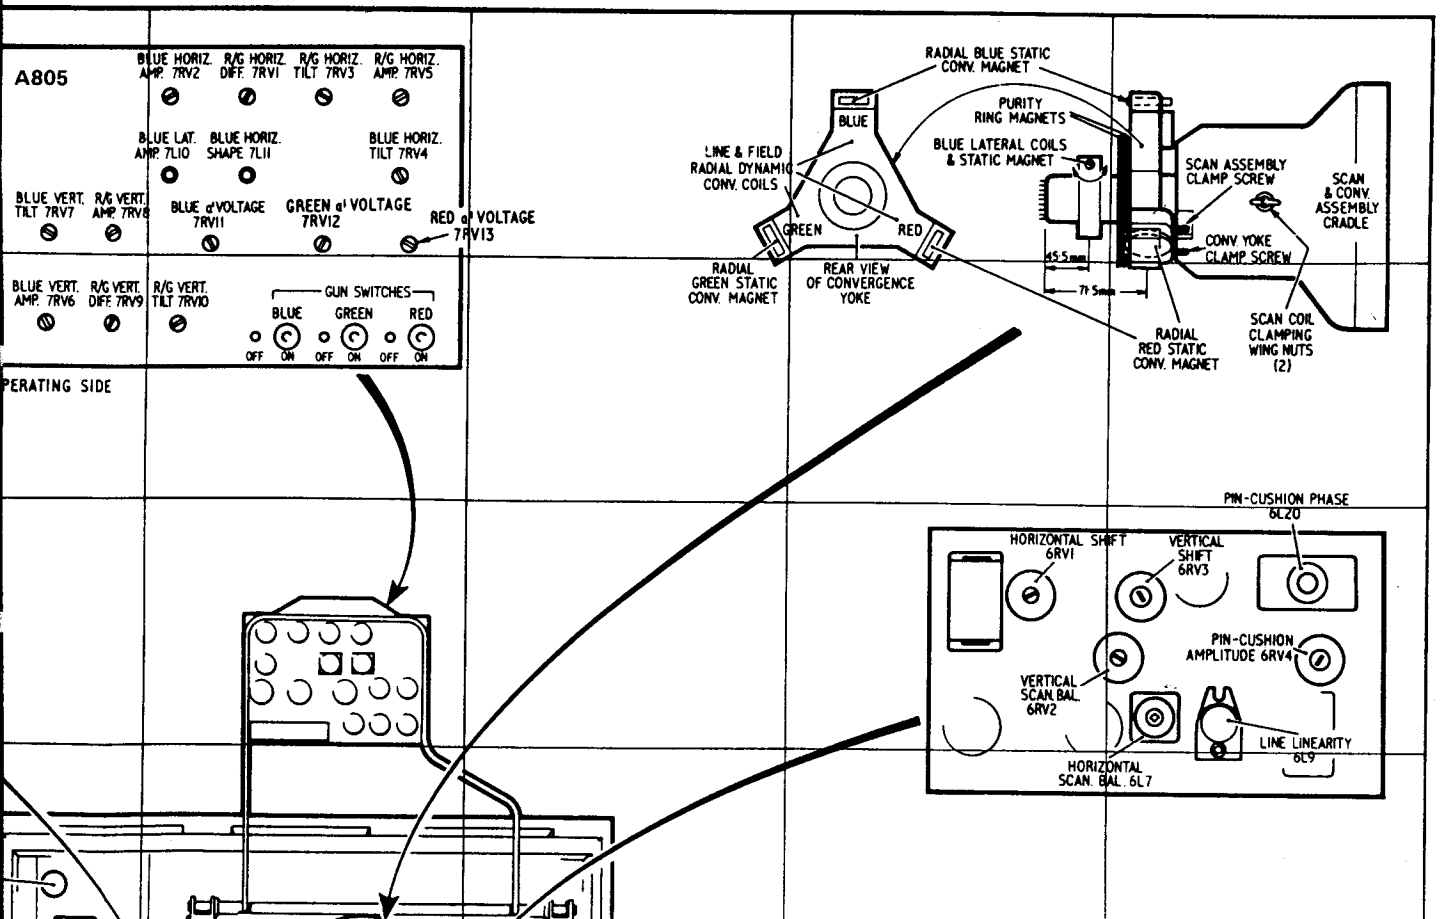

SCAN CONTROL PANEL


MISC.	L10	D3	RV1	RV3	Z3	D2	L20	RV4
	Z1			RV2	L7	L9	L21-24	
R			15	12		7		14
C	10	11	12			3	13	14

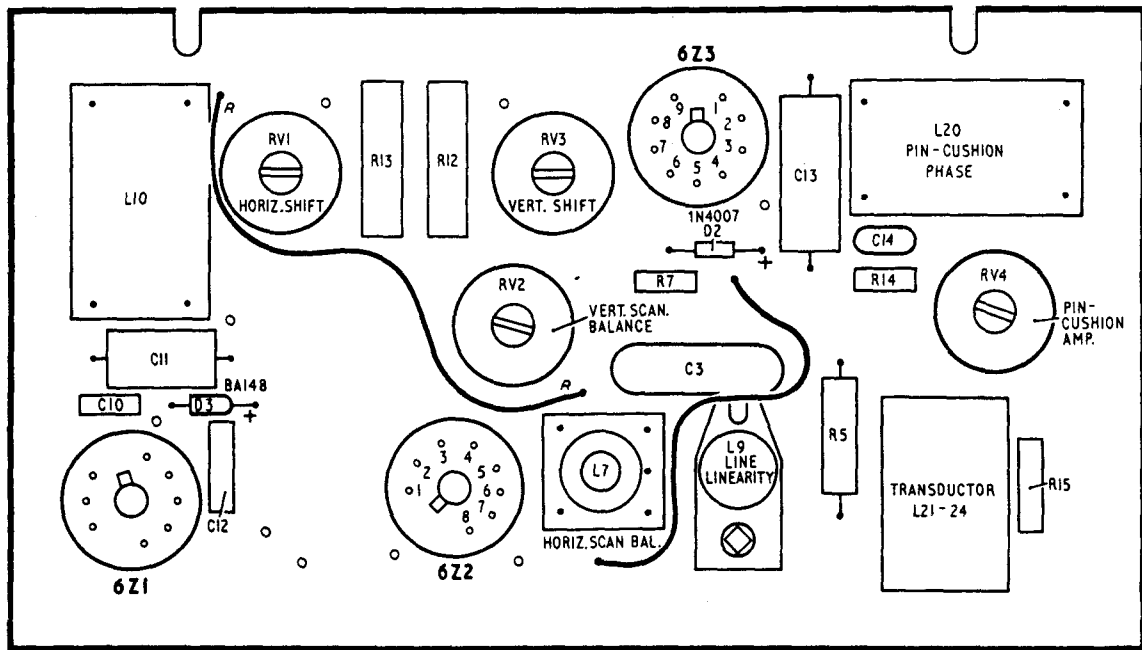


5552

5550


SCAN CONTROL PANEL
(see separate illustrations)

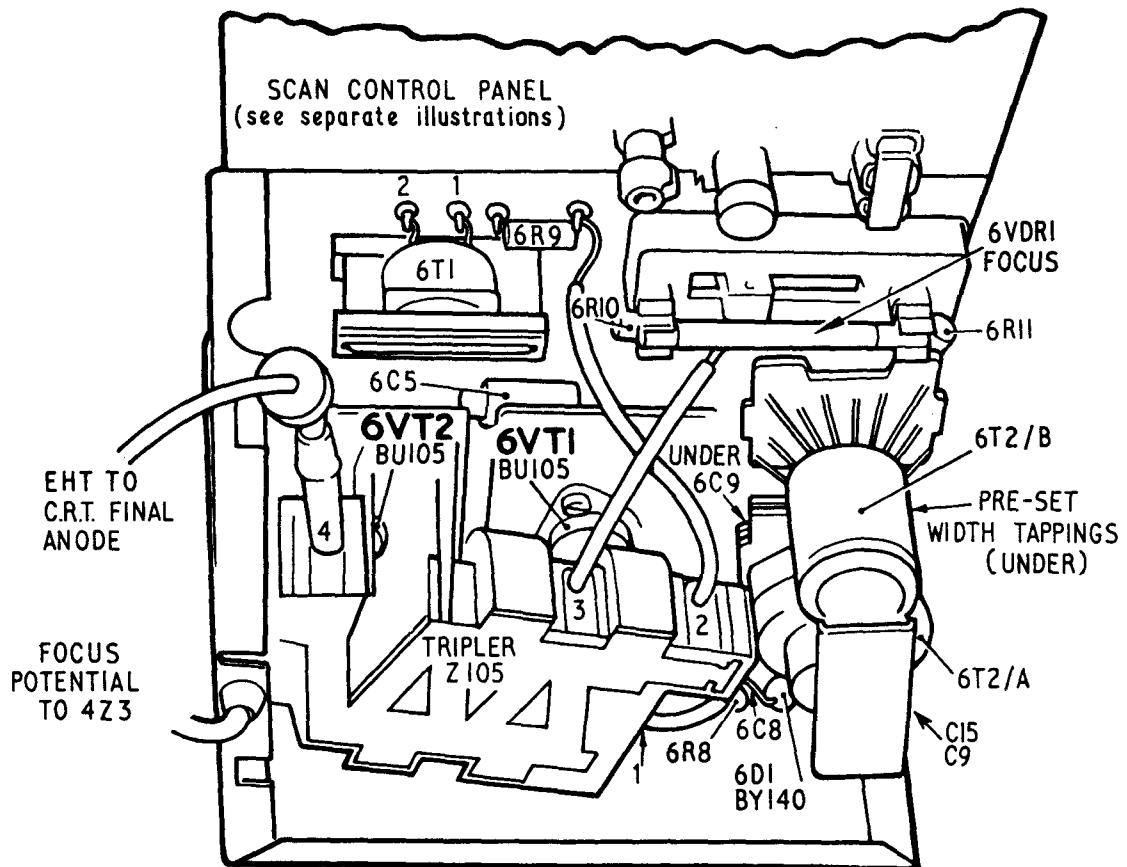

5549

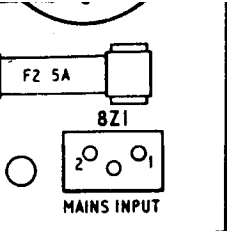


5556

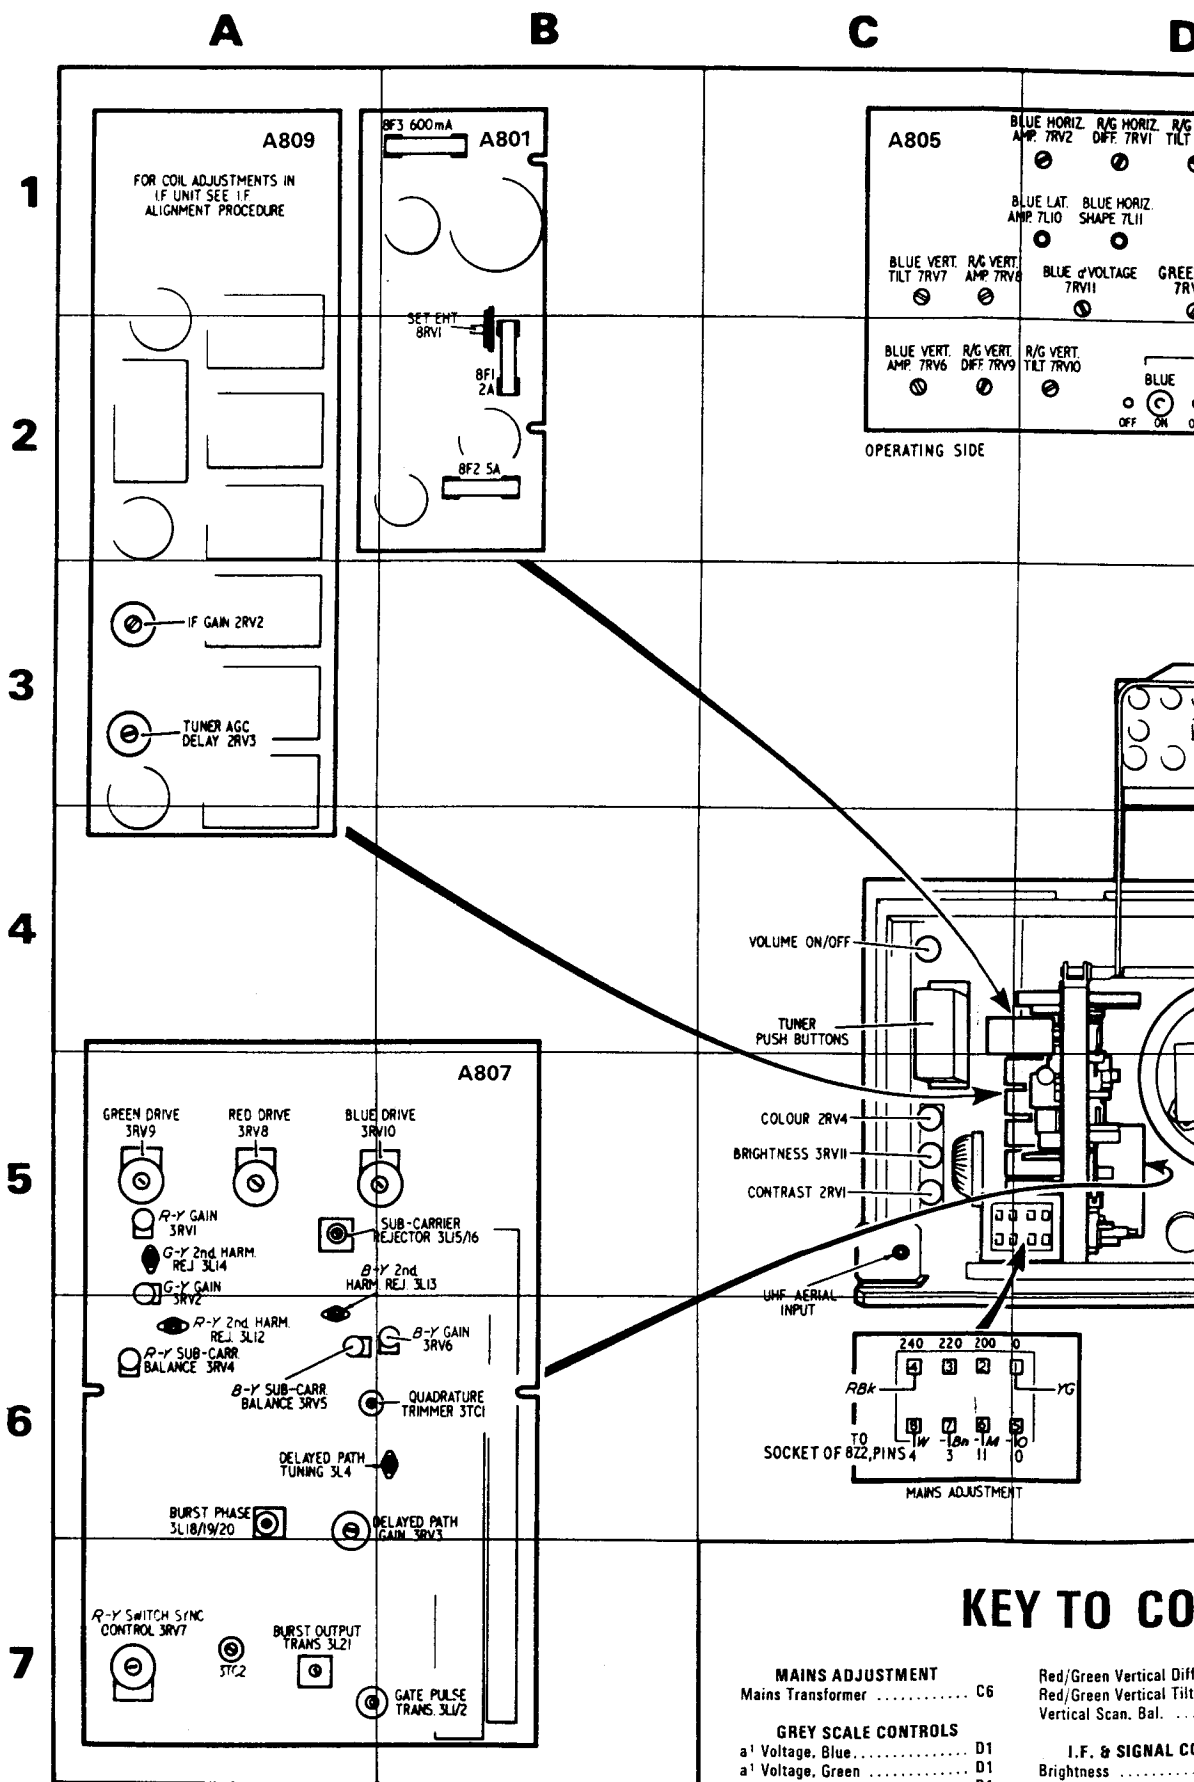

KEY TO CO


MAINS ADJUSTMENT		Red/Green Vertical Diff.
Mains Transformer	C6	Red/Green Vertical Tilt
GREY SCALE CONTROLS		Vertical Scan. Bal.
a' Voltage, Blue	D1	I.F. & SIGNAL CO
a' Voltage, Green	D1	Brightness
a' Voltage, Red	D1	Colour
Blue Drive	B5	Contrast
Green Drive	A5	I.F. Gain
Red Drive	A5	Tuner A.G.C. Delay
Gun Switches	D2	Tuner Push Buttons
CONVERGENCE CONTROLS		Volume On/Off
Blue Horizontal Amp.	D1	LINE TIMEBA:
Blue Horizontal Shape	D1	E.H.T. CONT
Blue Horizontal Tilt	D1	Discriminator Balance
Blue Lateral Amp.	D1	Discriminator Transform
Blue Lateral Coils	F1	Focus
Blue Vertical Amp	C2	Horizontal Shift

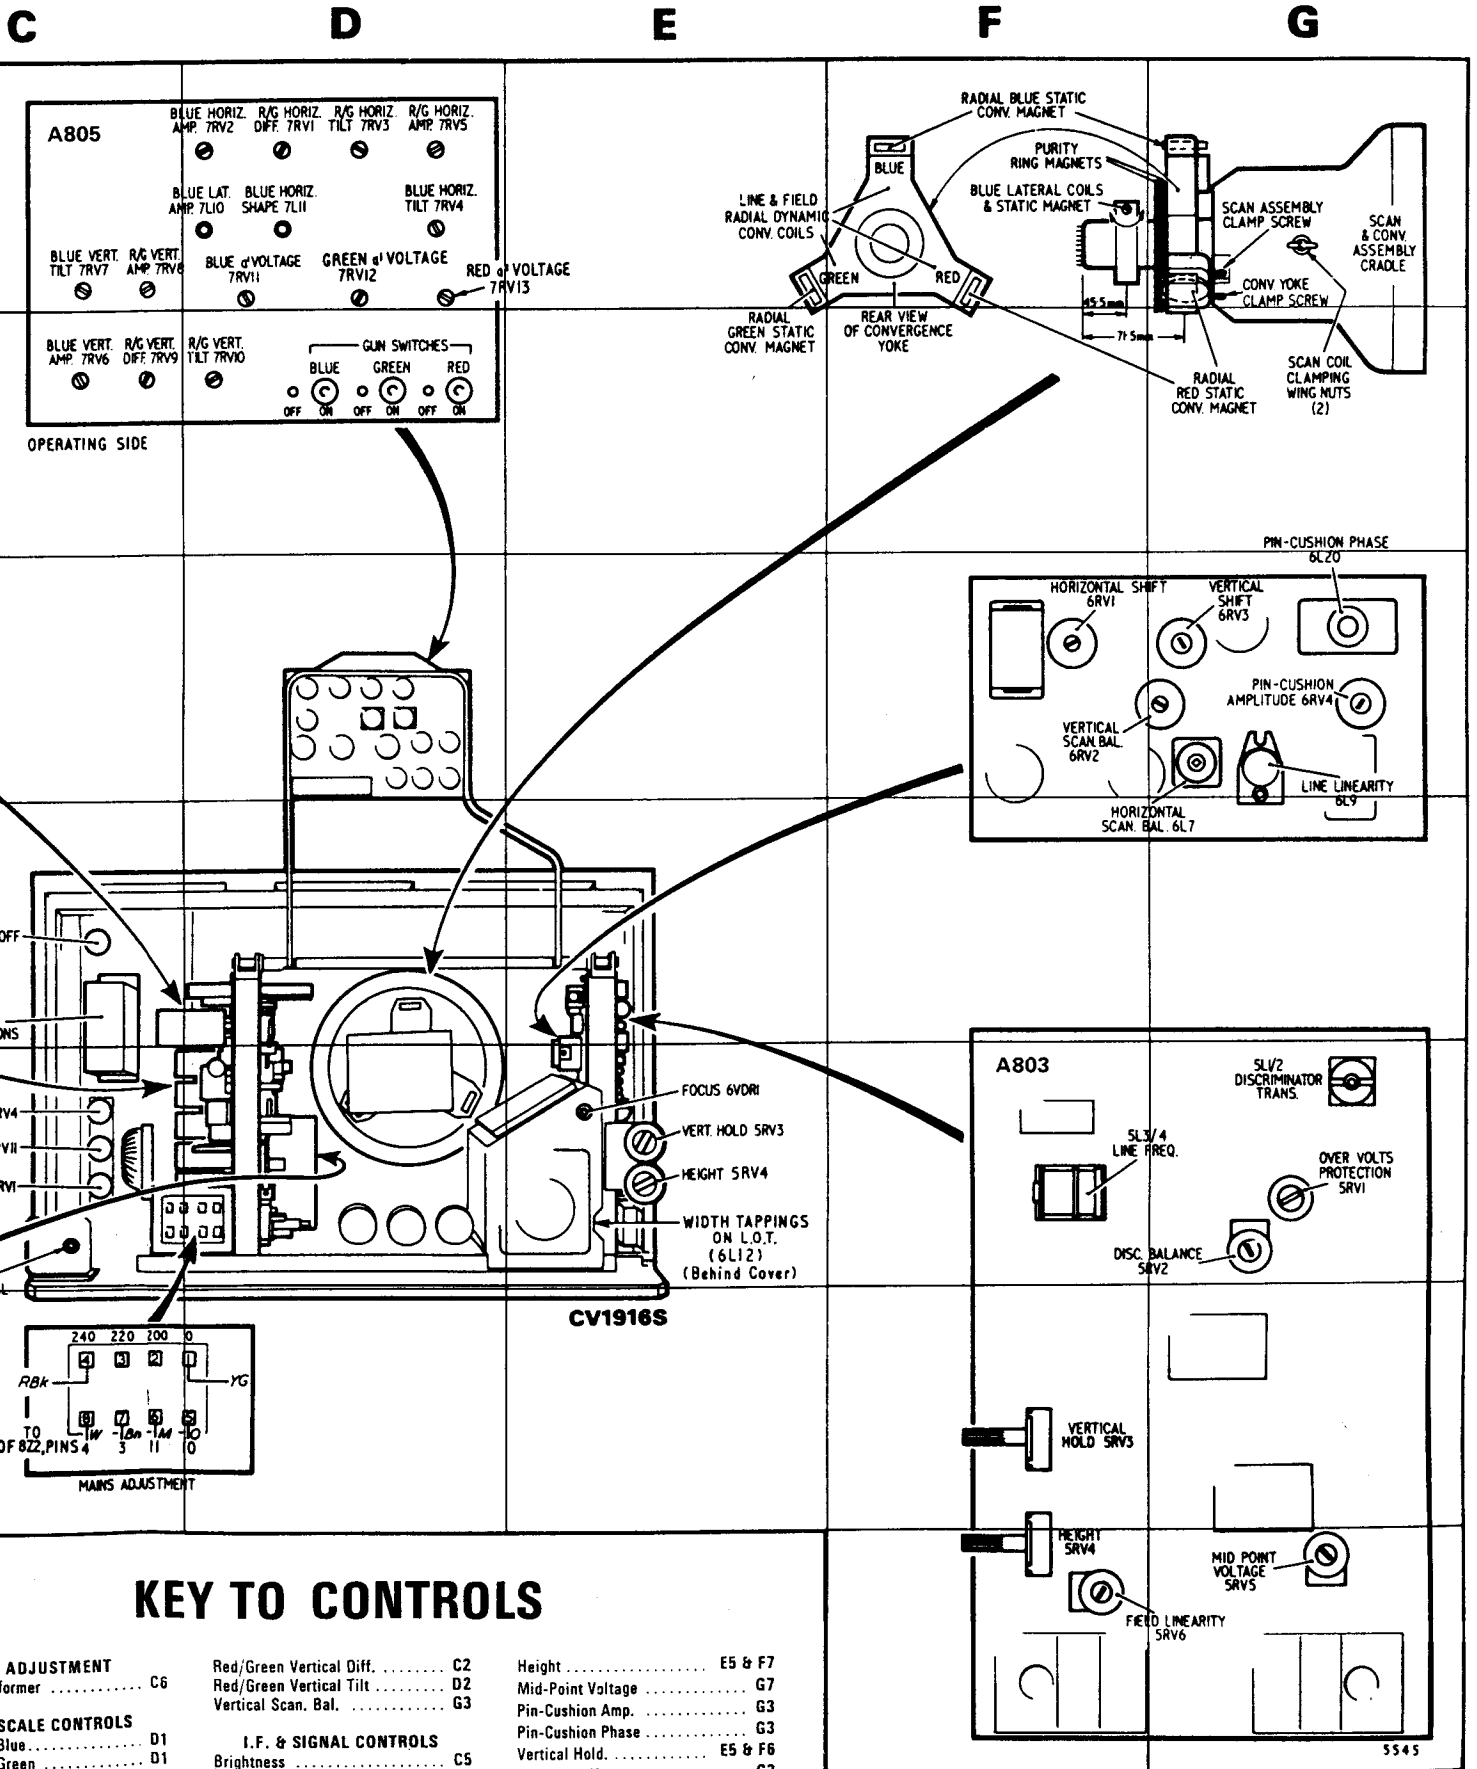

KEY TO CONTROLS

- | | | |
|--|--|--|
| <p>CONVERGENCE ADJUSTMENT</p> <p>Convergence Transformer C6</p> <p>KEY SCALE CONTROLS</p> <p>Brightness, Blue D1</p> <p>Brightness, Green D1</p> <p>Brightness, Red D1</p> <p>Contrast B5</p> <p>Vertical Linearity A5</p> <p>Vertical Hold A5</p> <p>Vertical Shift D2</p> <p>CONVERGENCE CONTROLS</p> <p>Horizontal Amp. D1</p> <p>Horizontal Shape D1</p> <p>Horizontal Tilt D1</p> <p>Vertical Amp. F1</p> <p>Vertical Coils C2</p> <p>Vertical Amp. C1</p> | <p>Red/Green Vertical Diff. C2</p> <p>Red/Green Vertical Tilt D2</p> <p>Vertical Scan. Bal. G3</p> <p>I.F. & SIGNAL CONTROLS</p> <p>Brightness C5</p> <p>Colour C5</p> <p>Contrast C5</p> <p>I.F. Gain A3</p> <p>Tuner A.G.C. Delay A3</p> <p>Tuner Push Buttons C4</p> <p>Volume On/Off C4</p> <p>LINE TIMEBASE & E.H.T. CONTROLS</p> <p>Discriminator Balance G5</p> <p>Discriminator Transformer G5</p> <p>Focus E5</p> <p>Horizontal Shift F3</p> <p>Line Frequency F5</p> | <p>Height E5 & F7</p> <p>Mid-Point Voltage G7</p> <p>Pin-Cushion Amp. G3</p> <p>Pin-Cushion Phase G3</p> <p>Vertical Hold. E5 & F6</p> <p>Vertical Shift. G3</p> <p>DECODER CONTROLS</p> <p>Burst Output Transformer A7</p> <p>Burst Phase Transformer A6</p> <p>Delayed Path Gain A6</p> <p>Delayed Path Tuning B6</p> <p>B-Y Gain B6</p> <p>G-Y Gain A5</p> <p>R-Y Gain A5</p> <p>Gate Pulse Transformer A7</p> <p>Quadrature Trimmer B6</p> <p>B-Y 2nd Harmonic Rejector A6</p> |
|--|--|--|

MISC.	R	C
TP20	94 97	
TP21	85 96	
TP22	95 87 89	
D16	98	
D17	56	57
VT14	83 82 84	
VT12	74 73 75	62 61
D20	77 76 78	63
VT13		
VT16		
VT15		
VT17		55
RV8	99	
RV9	92 86 90	59 58 60
RV10	88 79 81	
TP23	80 91 93	
TP17		
TP16	100	67 68
TP15	42 44	30
RV1		
VT5		
LI5/16	33	
L14	103	54
VT18	38	28
RV2	37 40	26
VT18	104	27
RV2	35	25
L13	101	25
LI2	102	24
RV6	33	24
RV5	28	
RV5	25	
RV4	27 23	
T3 T4	46	18
L8/9	36	22
LIQ/N	45	19
TC1	34 24	20
TC1	35	23
TC1	32	17
T2		21
D9	105	16
LI7	31	22
LI5/6/7		6
TP5	21	9
D10	26	66
TP2	21	15
TP4	11	18
VT4		
VT3		
VT1	5	14
TP7	30	9
TP7	10	
D8 T5	16 53 12	4
D7 TP6	32	8
D7 TP6	15 19 14	5
LI8/19/20	19 13	11 57
RV3	17	12
D6	54	10
DL20		
D12	8 49	
D11		7 35
D11		34
TP4		48 36
VT7		
D4 D5	72 50	6
VT11		
TP14	47	51
VT10	48	2
TP13		35
TP9		
TP12	69 56	45 42
TP3	67	38 3
VT8		
TC2	59 58	57
D15	60	44
D13	66	
VT6		
L21		47
RV7		40
XLI	68	39
VT9		
TP10	63	1
LI/2	61	49
T1	65	43
TP11	70 71	41 50

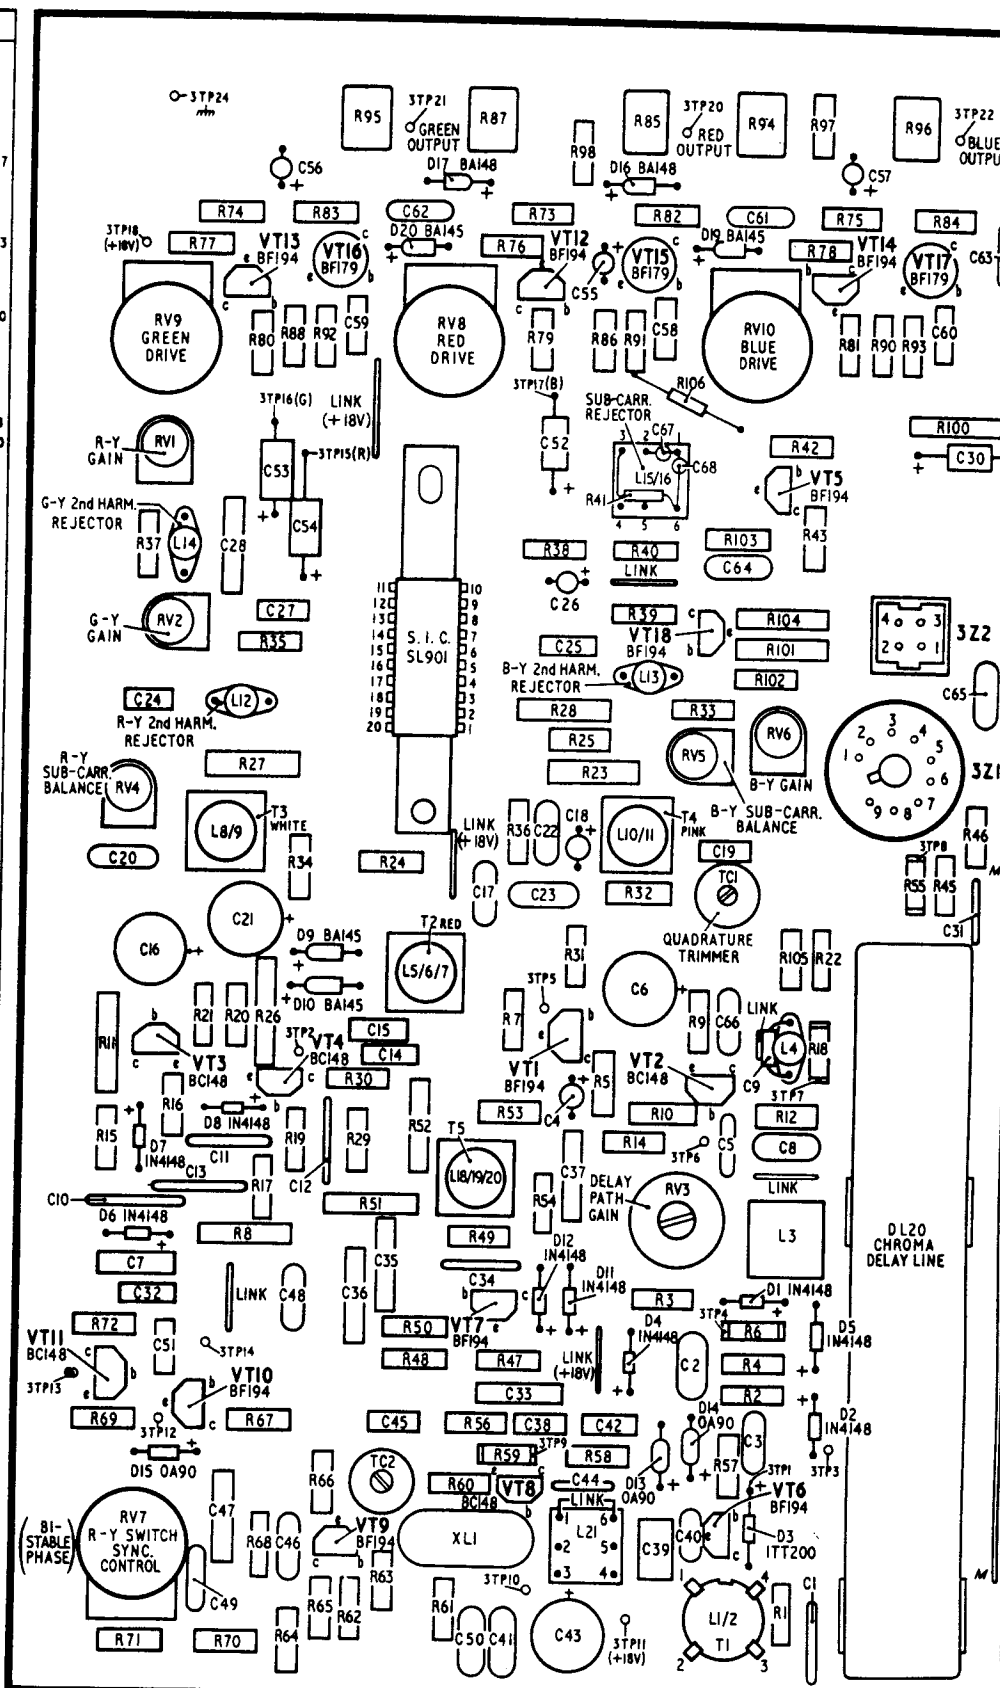

DECODER & R.G.B. DRIVE PANEL Type A807

CIRCUIT DESCRIPTION

U.H.F. Tuner Type Z511

The Z511 is a four section transistorised u.h.f. tuner employing three r.f. transistors in a grounded base mode. Transistors 1VT1 and 1VT2 are used as an r.f. amplifier stage; this stage is followed by 1VT3 operating as a combined mixer and oscillator. An a.g.c. control voltage derived from the Z582 i.f. panel is applied to the base of 1VT1. Four quarter wave coaxial lines 1X2, 4, 8 and 10 are employed as tuned elements for the aerial, r.f., mixer and oscillator respectively. Each of these lines is tuned by a varicap diode (1D1, 2, 3 and 4) with trimming and bandshaping of the r.f. and oscillator stages being carried out by coupling loops. The intermediate frequency signal developed across the output coil 1L10 is passed to the i.f. amplifier on the Z582 via 2Z1. By adjusting the customer push-button channel selector, the voltage applied to the varicap diodes is varied and hence the channel to which the unit is tuned.

A.F.C. and Power Supply Panel Z512

An i.f. signal from the Z582 is fed via 2Z5 to the base of transistor 1VT4 which acts, with 1L11 and 12, as a narrow band amplifier for 39.5 MHz. The output from this amplifier is fed to the base of 1VT5, the driver for the Foster-Seeley discrimina-

tor 1D5 and 6 etc. The output of the discriminator is zero at 39.5 MHz, but with decreasing frequency pin 6 of the Module *AE* goes positive and pin 7 goes negative. With increasing frequency these polarities are reversed. This resultant automatic frequency control correcting voltage is either added or subtracted, depending on its polarity, to the positive varicap control voltage set by the customer push-buttons, and appears at the wiper of 1RV2 to be fed to pin 4 of the Z511 where it is used to control the channel frequency of the tuner. The diodes 1D7 and 8 have been included to limit the a.f.c. correcting voltage to avoid an excessive pull-in range. The Hold-in Range control 1RV2 is adjusted to give a holding range of ± 1 MHz at 39.5 MHz. A switch is provided on the customer push-button unit to mute the a.f.c. system whilst tuning.

The integrated circuit 1SIC1, TAA550 stabilises the voltage derived from the +200 V line of the Z584 decoder before feeding it to the varicap push-button control unit. Transistor 1VT6 provides a stabilised supply voltage and bias for the tuner. The base voltage of 1VT6 is held steady by the action of 1SIC1 whilst 1D9 provides compensation for changes of base current due to temperature variation.

ALIGNMENT PROCEDURE

1 Equipment Required

- | | |
|--|--|
| 1. 1 External Bias Unit for Z582 | (See Fig. 19, Page C-16 of TP1741). |
| 1. 2 Oscilloscope | Tequipment S43 or equivalent. |
| 1. 3 Multi-range Meter | 20,000 Ω per volt. |
| 1. 4 Sweep Generator | providing swept i.f. signal 30 to 50MHz. |
| 1. 5 Signal Generator, A.M./F.M. | covering 30 to 50MHz, modulated 50% at 1000Hz, terminated. |
| 1. 6 Signal Generator, U.H.F. | covering 470 to 860MHz amplitude modulated. |

2 Alignment of 1L10 in Z511

1. 1 Inject a swept i.f. signal into i.f. injection point at 1C29 on the side of the tuner Z511, monitor the output at 2TP8 on the Z582 I.F. Panel.
1. 2 Adjust 1L10 to position the vision carrier at 50% on the h.f. side of i.f. response (see Fig. 20, Page C-17 of TP1741).



and re-check the display, then reduce the signal input level to check for any signs of instability. Disconnect signal generator and oscilloscope.

3 A.F.C. Bandpass Alignment

3. 1 Inject a 39.5MHz f.m. signal, modulated ± 100 kHz at 1000Hz, using an input level of 2mV, into 2Z5, 1 and 2
3. 2 Set the A.F.C. Switch, 1SW1 to the ON position and set the A.F.C. Hold-in Range control 1RV2 to its mid-position. Monitor the display at pin 6 of the F. M. Detector module (*AE*) on the oscilloscope.
3. 3 Set the core of 1L11 so that it is flush with the top of its former. Align 1L15, 14, 12, and 11 in that order, for maximum amplitude of display. The display will be a symmetrical sinewave with an amplitude of approx. 0.2V pk-pk
3. 4 Change the signal generator from frequency to amplitude modulation and set the modulation depth to 50%. Adjust 1L15 only for minimum display amplitude. Revert to frequency modulation


4 A.F.C. Hold-in Range Check

4. 1 Connect the external bias unit (See Item 1.1) to the i.f. unit at 2TP3, 4 and 5. Switch the A.F.C. Switch to the OFF position and set the R.F. Gain control 1RV3 fully anti-clockwise.
4. 2 Inject into the u.h.f. aerial socket, a signal of 600MHz, amplitude modulated 50% at 1000Hz at a level of not less than 1mV. Tune one of the unit push-buttons to this signal, monitoring the output at 2TP8 on the oscilloscope. Adjust the external bias unit to produce a display amplitude of 2V pk-pk.
4. 3 Check that the i.f. produced is 39.5MHz by injecting a 39.5MHz into 2TP1 on the Z582 via a 1pF capacitor and observing any beat pattern on the display.
4. 4 Change the input signal frequency to 599MHz. Set 1RV2 fully anti-clockwise and 1SW1 to ON. Rotate 1RV2 slowly clockwise to a point where the display regains its undistorted amplitude of 2V pk-pk.

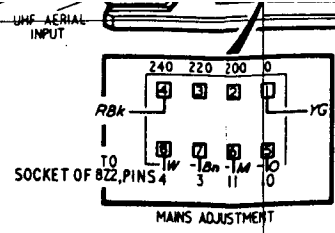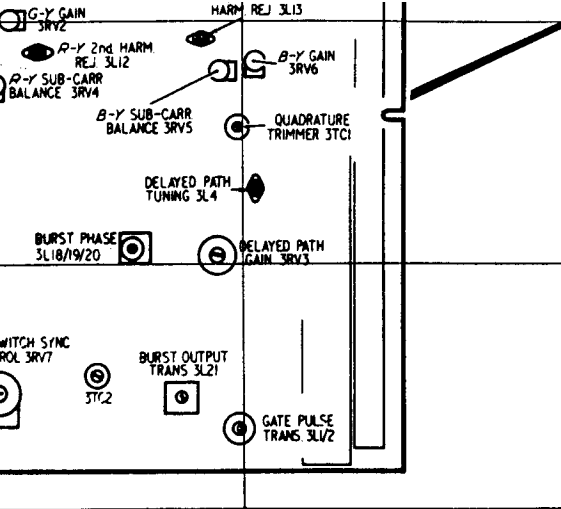


KEY TO CONTROLS

- | | | |
|--------------------------------------|--|------------------------------------|
| MAINS ADJUSTMENT | Red/Green Vertical Diff. C2 | Height E5 & F7 |
| Mains Transformer C6 | Red/Green Vertical Tilt D2 | Mid-Point Voltage G7 |
| | Vertical Scan. Bal. G3 | Pin-Cushion Amp. G3 |
| GREY SCALE CONTROLS | I.F. & SIGNAL CONTROLS | Pin-Cushion Phase G3 |
| a' Voltage, Blue D1 | Brightness C5 | Vertical Hold E5 & F6 |
| a' Voltage, Green D1 | Colour C5 | Vertical Shift G3 |
| a' Voltage, Red D1 | Contrast C5 | |
| Blue Drive B5 | J.F. Gain A3 | DECODER CONTROLS |
| Green Drive A5 | Tuner A.G.C. Delay A3 | Burst Output Transformer A7 |
| Red Drive A5 | Tuner Push Buttons C4 | Burst Phase Transformer A6 |
| Gun Switches D2 | Volume On/Off C4 | Delayed Path Gain A6 |
| | | Delayed Path Tuning B6 |
| CONVERGENCE CONTROLS | LINE TIMEBASE & E.H.T. CONTROLS | B-Y Gain B6 |
| Blue Horizontal Amp. D1 | Discriminator Balance G5 | G-Y Gain A5 |
| Blue Horizontal Shape D1 | Discriminator Transformer G5 | R-Y Gain A5 |
| Blue Horizontal Tilt D1 | Focus E5 | Gate Pulse Transformer A7 |
| Blue Lateral Amp. D1 | Horizontal Shift F3 | Quadrature Trimmer B6 |
| Blue Lateral Coils F1 | Line Frequency F5 | B-Y 2nd Harmonic Rejector A6 |
| Blue Vertical Amp. C2 | Line Linearity G3 | G-Y 2nd Harmonic Rejector A5 |
| Blue Vertical Tilt C1 | Over Volts Protection G5 | R-Y 2nd Harmonic Rejector A6 |
| Horizontal Scan. Bal. G3 | Set E.H.T. B2 | B-Y Sub-Carrier Balance A6 |
| Purity Ring Magnets G1 | Width Tappings E5 | R-Y Sub-Carrier Balance A6 |
| Radial Static Conv. Magnets F1 | | Sub-Carrier Rejector A5 |
| Red/Green Horizontal Amp. D1 | FIELD CONTROLS | R-Y Switch Sync. Control A7 |
| Red/Green Horizontal Diff. D1 | Field Linearity F7 | 3TC2 A7 |
| Red/Green Horizontal Tilt D1 | | |
| Red/Green Vertical Amp. C1 | | |

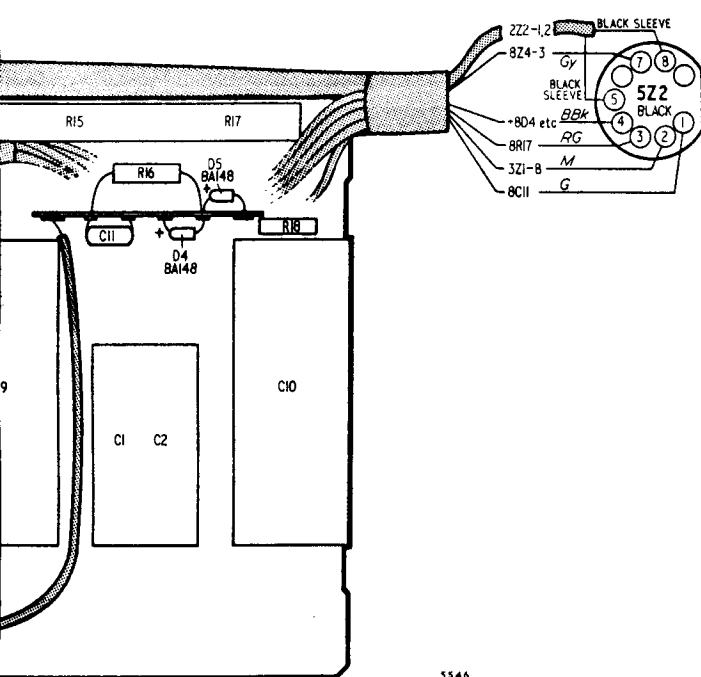

MISC.	R	C
Z3 D2		2
	1	11
SG9 SG1	3	
	8	5
Z1 SG3	13	
VT2	17	
D1 V1 SG8 SG6	4	
VT1	16 15 9	
	6	7
	10	1
SG7 SG5 SG2 SG4	2 14	

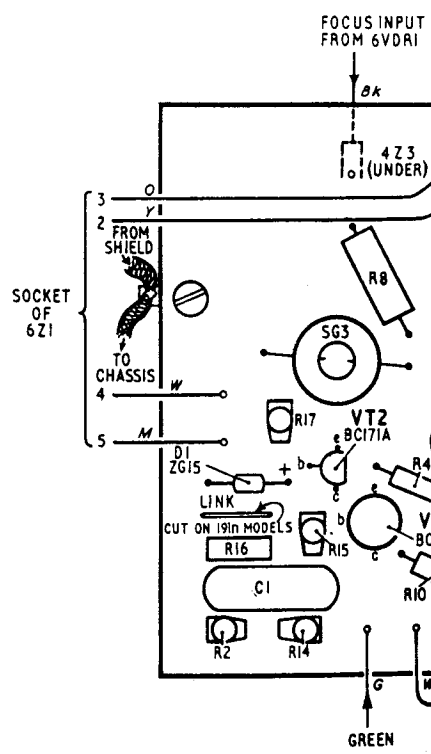

ABLEFORM

C.R.T. BASE PANEL



CV1916S

(Behind Cover)

VERTICAL HOLD SRV3
HEIGHT SRV4
MID POINT VOLTAGE SRV5
FIELD LINEARITY SRV6

5545

CONTROLS

Vertical Diff.	C2	Height	E5 & F7
Vertical Tilt	D2	Mid-Point Voltage	G7
Lineal. Bal.	G3	Pin-Cushion Amp.	G3
SIGNAL CONTROLS			
.....	C5	Pin-Cushion Phase	G3
.....	C5	Vertical Hold.	E5 & F6
.....	C5	Vertical Shift.	G3
.....	A3	DECODER CONTROLS	
Delay	A3	Burst Output Transformer	A7
Buttons	C4	Burst Phase Transformer	A6
Off	C4	Delayed Path Gain	A6
TIMEBASE & T. CONTROLS			
Balance	G5	Delayed Path Tuning	B6
Transformer	G5	B-Y Gain	B6
.....	E5	G-Y Gain	A5
Shift	F3	R-Y Gain	A5
.....	F5	Gate Pulse Transformer	A7
.....	G3	Quadrature Trimmer	B6
.....	G5	B-Y 2nd Harmonic Rejector	A6
.....	B2	G-Y 2nd Harmonic Rejector	A5
.....	E5	R-Y 2nd Harmonic Rejector	A6
FIELD CONTROLS			
.....	F7	B-Y Sub-Carrier Balance	A6
.....	F7	R-Y Sub-Carrier Balance	A6
.....	F7	Sub-Carrier Rejector	A5
.....	F7	R-Y Switch Sync. Control	A7
.....	F7	3TC2	A7

R	C
1	11
2	2
3	3
4	5
5	13
6	15
7	16
8	17
9	18
10	19
11	20
12	21
13	22
14	23
15	24
16	25
17	26
18	27
19	28
20	29
21	30
22	31
23	32
24	33
25	34
26	35
27	36
28	37
29	38
30	39
31	40
32	41
33	42
34	43
35	44
36	45
37	46
38	47
39	48
40	49
41	50
42	51
43	52
44	53
45	54
46	55
47	56
48	57
49	58
50	59
51	60
52	61
53	62
54	63
55	64
56	65
57	66
58	67
59	68
60	69
61	70
62	71
63	72
64	73
65	74
66	75
67	76
68	77
69	78
70	79
71	80
72	81
73	82
74	83
75	84
76	85
77	86
78	87
79	88
80	89
81	90
82	91
83	92
84	93
85	94
86	95
87	96
88	97
89	98
90	99
91	100

SOCKET OF 6Z1
SOCKET OF 8Z3
FOCUS INPUT FROM 6VDRI
TO DE-GAUSSING COILS Via 4Z2
TO CHASSIS
LINK
HTR.
PLUG OF 4Z1
GREEN
RED

5597


MISC	R	C
Z3	35	25
VT7 L1/2		8
	34 33	
VT6		39
	32	22 9 7
D6		23
D3		
D2	30	7 17
	23	
	14	
	13	
DI		12
	5	18
L3M		20 13
RV1	31	15
		2
VT5		1
D5	17	
TP1 TP3	16	
	26	
	18	
	15	
RV2	29	3
	20	
	22	21
D4		12 19
VT1		19
N1		4
TP4 TP2	28	
	27	
VT4		16
	24	
VT3		4
Z2	25	6
		14
DI2		11
		28
D7	6	24
		38
DI1	31	
RV3	40	
D10		29
	43	
	46	
THY1		39 37
	44	32
	39 41	57
VT9	42	38
	45	31 35
		48
VT10		
RV4 D8		
RV5 D9		30 33
		52
RV6		56 51
		49
		54
TH1		50 55 53
		34
VT11		
VT12		

THY1 B
SILICON SWI
1. Catho
2. Catho
3. Anod
4. Anod

C.T. BASE PANEL

SCAN DRIVE P



MISC	R	C
Z3	35	25
VT7 LU2		8
	34 33	
VT6		39
	32	5
	22 9 7	
D6		23
D5		14
VT2	7	17
D2	30	3
	23 14	
	13	12
L3/4	5	18
RV1	31	13
		15
VT5	2	1
D5	17	16
TP1	16	10
TP3	18	18
RV2	29	3
	20	21
D4	22	19
VT1	19	4
NI	19	6
TP4	28	16
TP2	27	
VT4	24	24
VT3	24	
Z2	25	4
	25	6
D12		14
	11	
D7	6	28
		24
D11	38	
Z1	40	
RV3	40	
D10		29
THY1	39	37
	41 57	
VT9	42	38
	45	31
	36	35
VT10	48	
RV4	48	
D8		30
RV5		33
D9		
RV6	52	
	56 51	
	49	
	54	
TH1	50	
	55 53	
		34
VT11		
VT12		

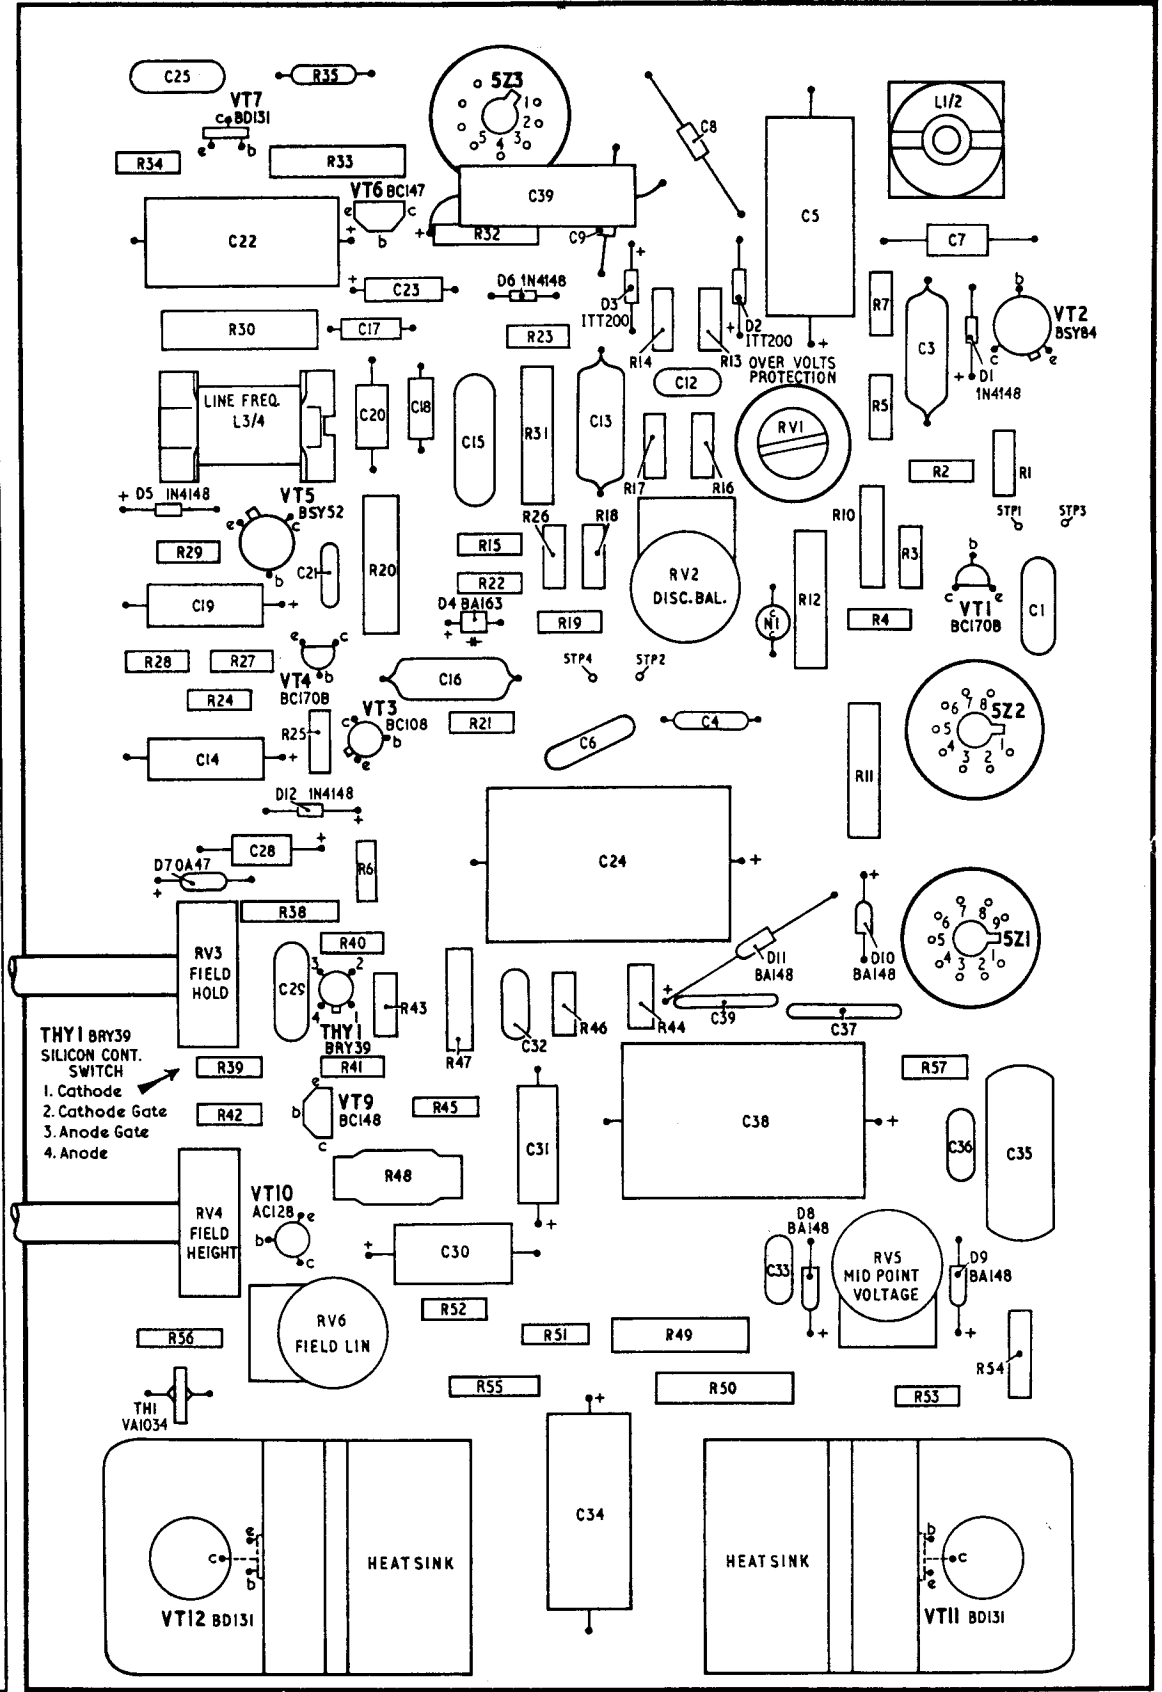

SCAN DRIVE PANEL Type A803

VOLTAGES

These voltages were obtained using a typical receiver under average signal conditions on a mains input of 240V a.c. A 20,000 ohms/volt meter was used with a suitable adaptor for measuring the E.H.T. and Focusing potential. All voltages are positive with respect to chassis unless otherwise stated. N.T. indicates no test.

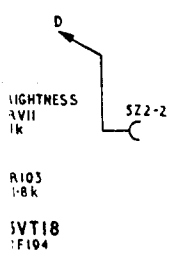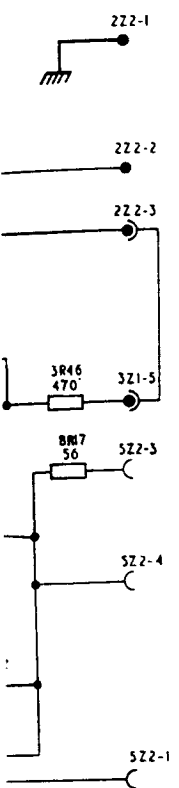

Ref.	Type	Electrode Voltage			Remarks
		emitter	base	collector	
1VT1	BF180	N.T.	N.T.	N.T.	
1VT2	BF171	N.T.	N.T.	N.T.	
2VT1	BF196	3.3	4.0	7.3	
2VT2	BF194	11.0	11.5	18.0	
2VT3	BF197	3.9	4.5	10.0	
2VT4	BF197	8.1	7.0	15.0	
2VT5	BC148	4.0	4.5	15.5	Depends on setting of 2RV2
2VT6	BC158	19.0	18.5	7.5	Depends on setting of 2RV3
2VT7	BC148	3.6	2.5	8.0	
2VT8	BC196	7.0	8.0	15.0	
2VT9	BF197	2.5	3.2	16.5	
2VT10	BC148	1.0	1.6	6.5	
2VT11	BC148	6.0	6.5	17.0	
2VT12	BC153	1.2	3.0	12.2	
2VT13	BC113	0.7	1.2	12.5	
2VT14	BC107	—	0.7	12.5	
2VT15	AC176	12.6	13.0	25.0	
2VT16	AC128	12.6	12.5	—	
3VT1	BF194	—	0.5	0.1	
3VT2	BC148	1.9	2.1	17.0	Depends on setting of 3RV3
3VT3	BC148	—	0.5	6.0	Colour on
		—	0	12.0	Colour off
3VT4	BC148	—	0.5	6.0	Colour on
		—	0.8	0.5	Colour off
3VT5	BF194	5.1	5.6	18.0	
3VT6	BF194	2.2	3.0	18.0	
3VT7	BF194	0	-3.6	-2.1	
3VT8	BC148	0	0	18.0	
3VT9	BF194	0.6	0.9	10.0	Colour on
		1.5	2.1	10.0	Colour off
3VT10	BF194	2.8	3.0	18.0	
3VT11	BC158	18.0	17.2	17.3	Colour on
		18.0	17.4	0.6	Colour off
3VT12	BF194	2.0	2.5	18.0	Bright. max.
		1.4	2.0	18.0	Bright. min.
3VT13	BF194	2.0	2.5	18.0	Bright. max.
		1.4	2.0	18.0	Bright. min.
3VT14	BF194	2.0	2.5	18.0	Bright. max.
		1.4	2.0	18.0	Bright. min.
3VT15	BF179	1.5	2.0	100	Bright. max.
		0.8	1.7	125	Bright. min.
3VT16	BF179	1.5	2.0	100	Bright. max.
		0.8	1.7	125	Bright. min.
3VT17	BF179	1.5	2.0	100	Bright. max.
3VT17	BF179	0.8	1.7	125	Bright. min.
3VT18	BF194	0.25	0.3	16.0	
8VT1	BC147	-0.2	-1.5	10.0	
		Cathode	Anode	Gate	
8THY1	BT106	N.T.	N.T.	N.T.	

VOLTAGES

These voltages were obtained using a typical receiver under conditions on a mains input of 240V a.c. A 20,000 ohms/volt suitable adaptor for measuring the E.H.T. and Focusing potentials are positive with respect to chassis unless otherwise stated.

Ref.	Type	Electrode Voltage			Remark
		emitter	base	collector	
1VT1	BF180	N.T.	N.T.	N.T.	
1VT2	BF171	N.T.	N.T.	N.T.	
2VT1	BF196	3.3	4.0	7.3	
2VT2	BF194	11.0	11.5	18.0	
2VT3	BF197	3.9	4.5	10.0	
2VT4	BF197	8.1	7.0	15.0	
2VT5	BC148	4.0	4.5	15.5	Depend
2VT6	BC158	19.0	18.5	7.5	Depend
2VT7	BC148	3.6	2.5	8.0	
2VT8	BC196	7.0	8.0	15.0	
2VT9	BF197	2.5	3.2	16.5	
2VT10	BC148	1.0	1.6	6.5	
2VT11	BC148	6.0	6.5	17.0	
2VT12	BC153	1.2	3.0	12.2	
2VT13	BC113	0.7	1.2	12.5	
2VT14	BC107	—	0.7	12.5	
2VT15	AC176	12.6	13.0	25.0	
2VT16	AC128	12.6	12.5	—	
3VT1	BF194	—	0.5	0.1	
3VT2	BC148	1.9	2.1	17.0	Depend
3VT3	BC148	—	0.5	6.0	Colour
			0	12.0	Colour
3VT4	BC148	—	0.5	6.0	Colour
			0.8	0.5	Colour
3VT5	BF194	5.1	5.6	18.0	
3VT6	BF194	2.2	3.0	18.0	
3VT7	BF194	0	-3.6	-2.1	
3VT8	BC148	0	0	18.0	
3VT9	BF194	0.6	0.9	10.0	Colour
		1.5	2.1	10.0	Colour
3VT10	BF194	2.8	3.0	18.0	
3VT11	BC158	18.0	17.2	17.3	Colour
		18.0	17.4	0.6	Colour
3VT12	BF194	2.0	2.5	18.0	Bright.
		1.4	2.0	18.0	Bright.
3VT13	BF194	2.0	2.5	18.0	Bright.
		1.4	2.0	18.0	Bright.
3VT14	BF194	2.0	2.5	18.0	Bright.
		1.4	2.0	18.0	Bright.
3VT15	BF179	1.5	2.0	100	Bright.
		0.8	1.7	125	Bright.
3VT16	BF179	1.5	2.0	100	Bright.
		0.8	1.7	125	Bright.
3VT17	BF179	1.5	2.0	100	Bright.
3VT17	BF179	0.8	1.7	125	Bright.
3VT18	BF194	0.25	0.3	16.0	
8VT1	BC147	-0.2	-1.5	10.0	
		Cathode	Anode	Gate	
8THY1	BT106	N.T.	N.T.	N.T.	



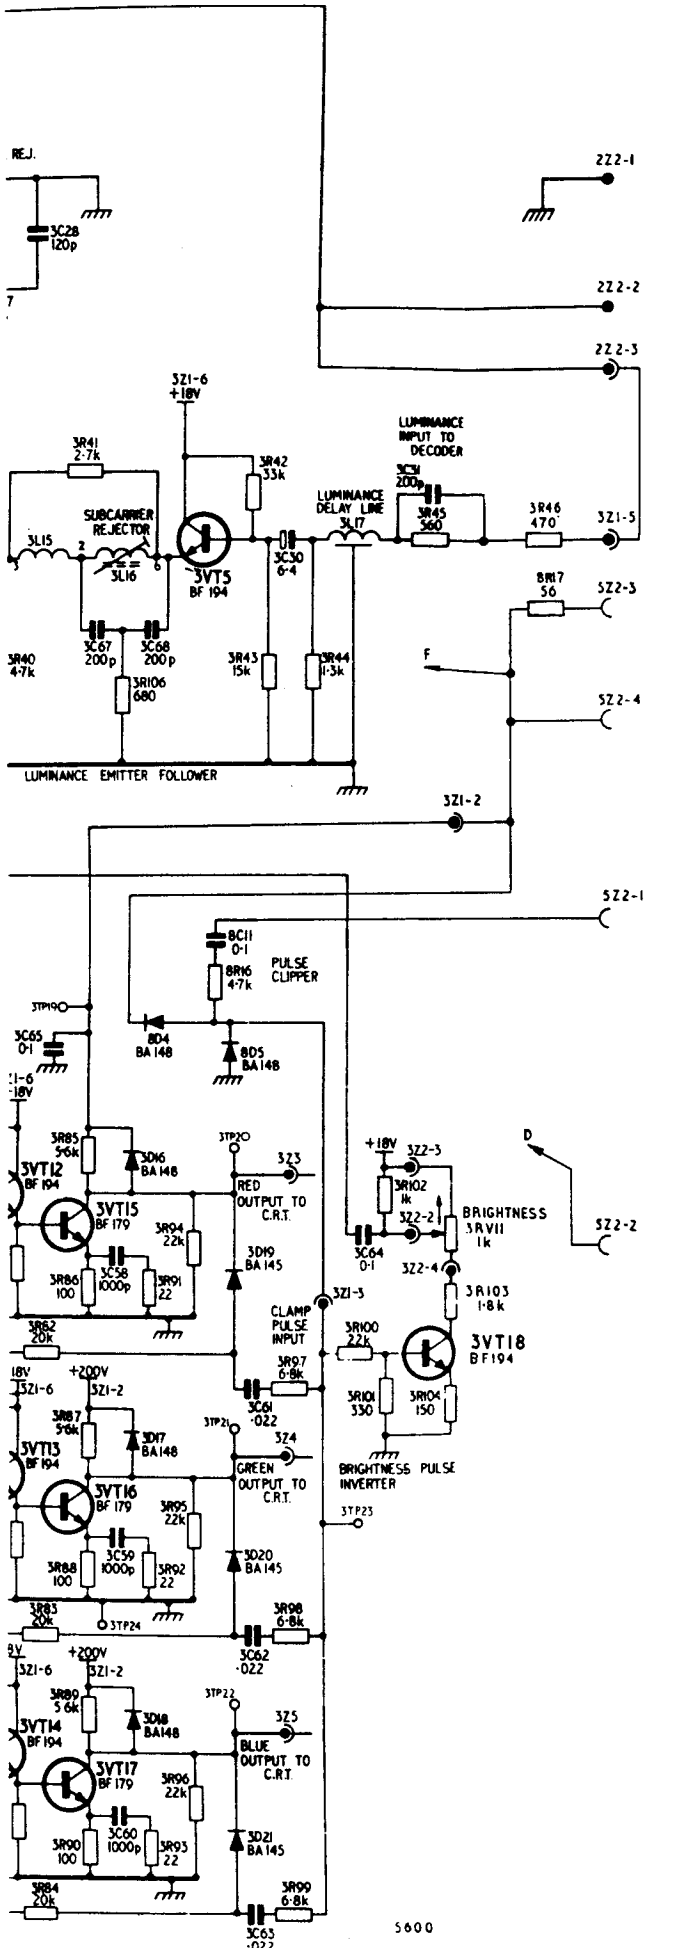








TABLE & REF SUBCARRIER SWITCH

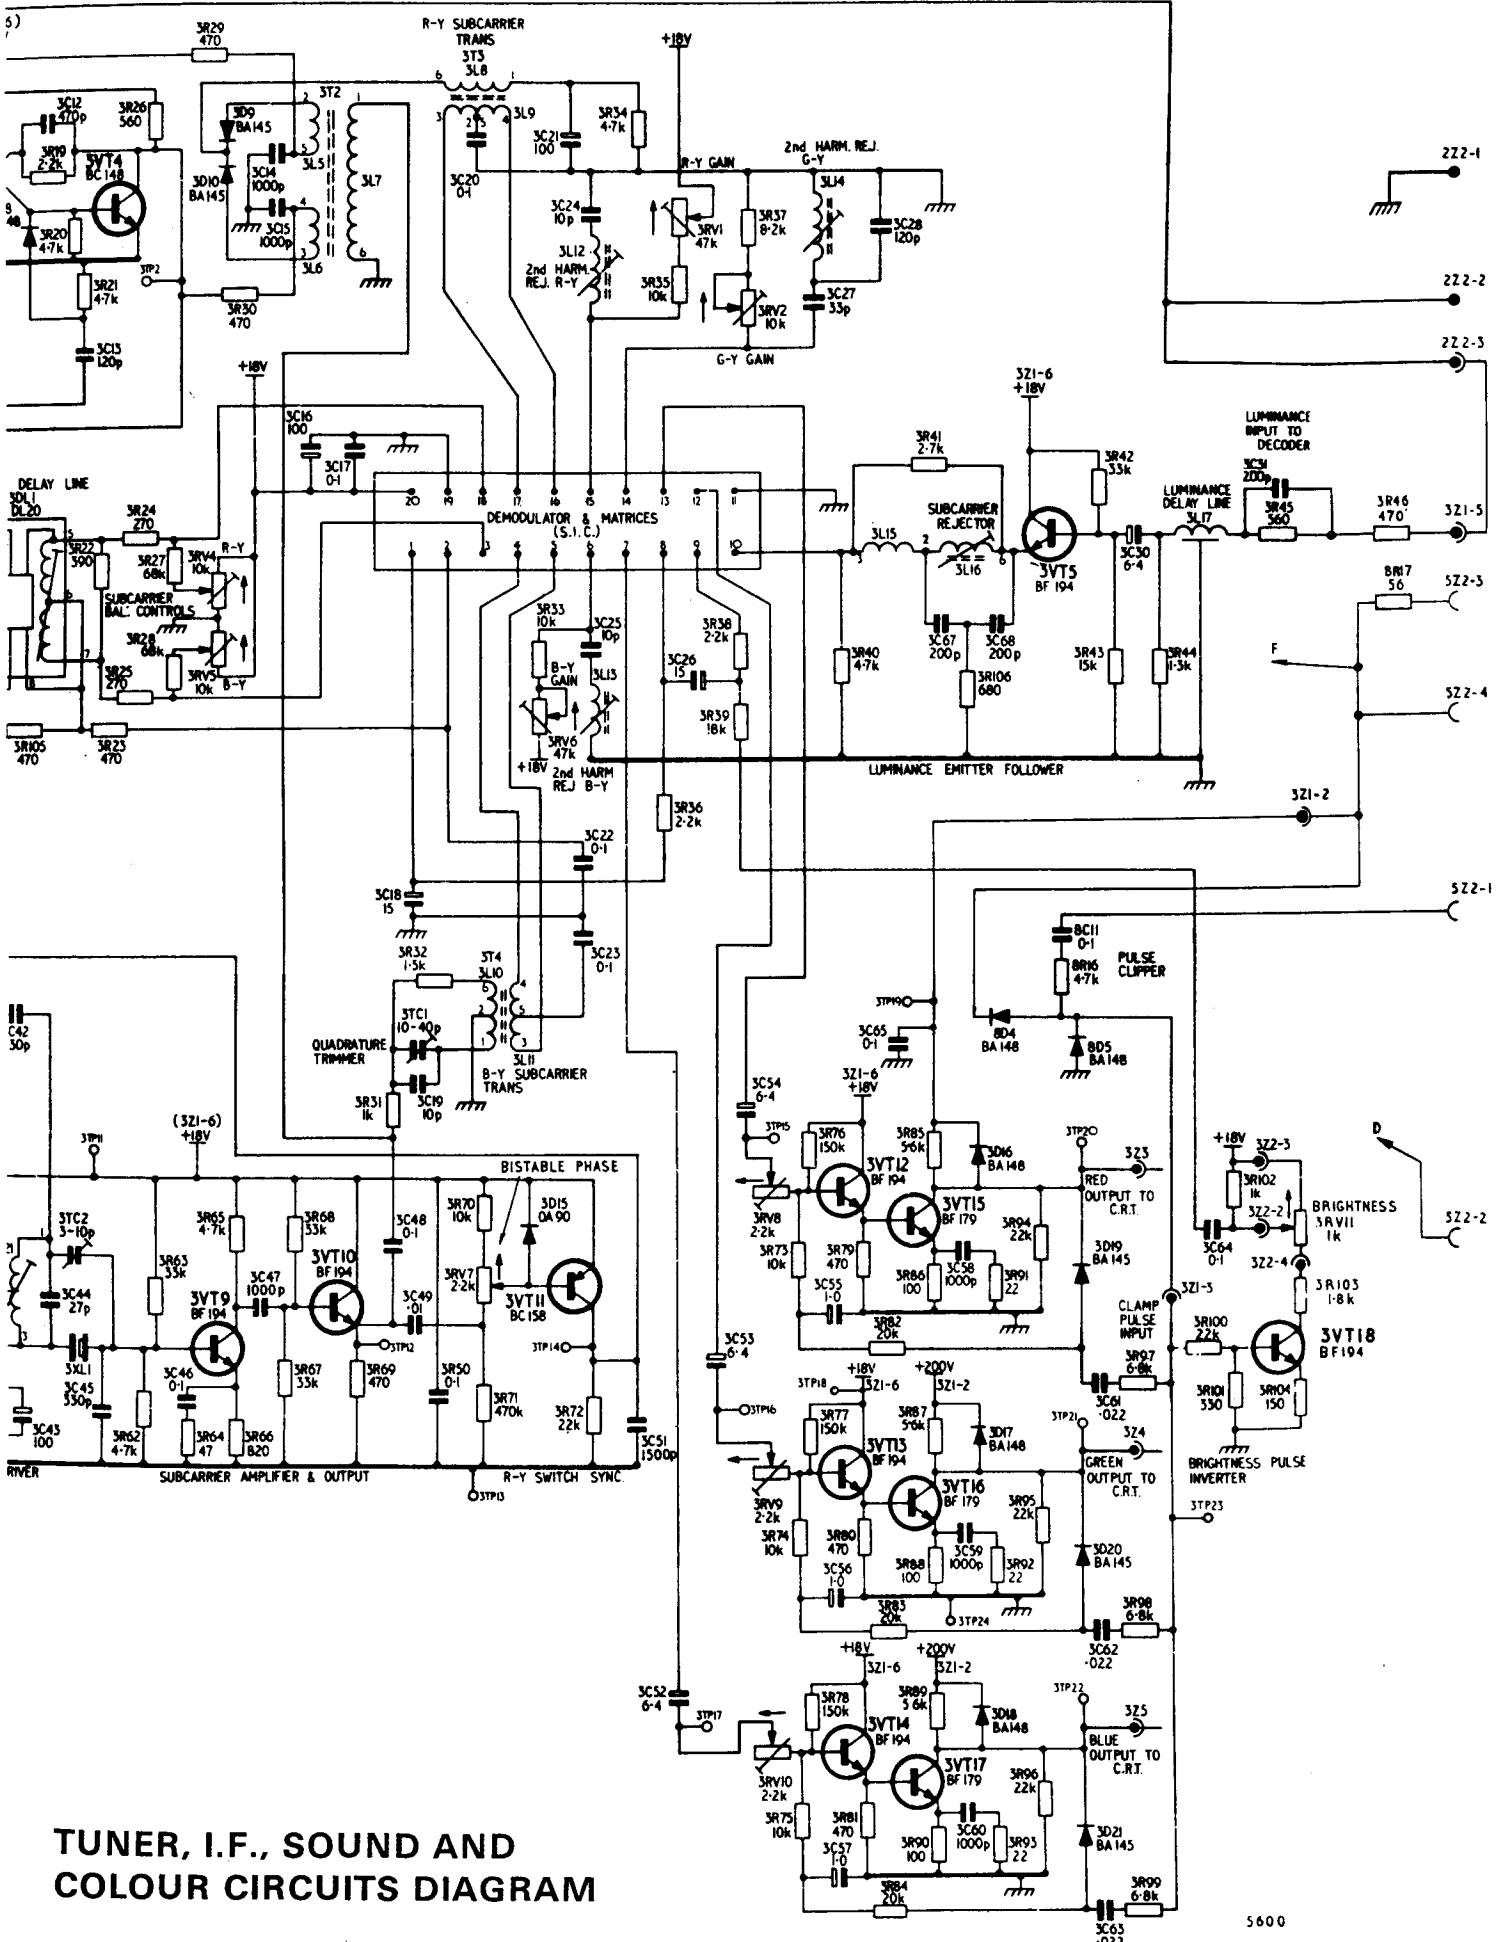

TUNER, I.F., SOUND AND COLOUR CIRCUITS DIAGRAM

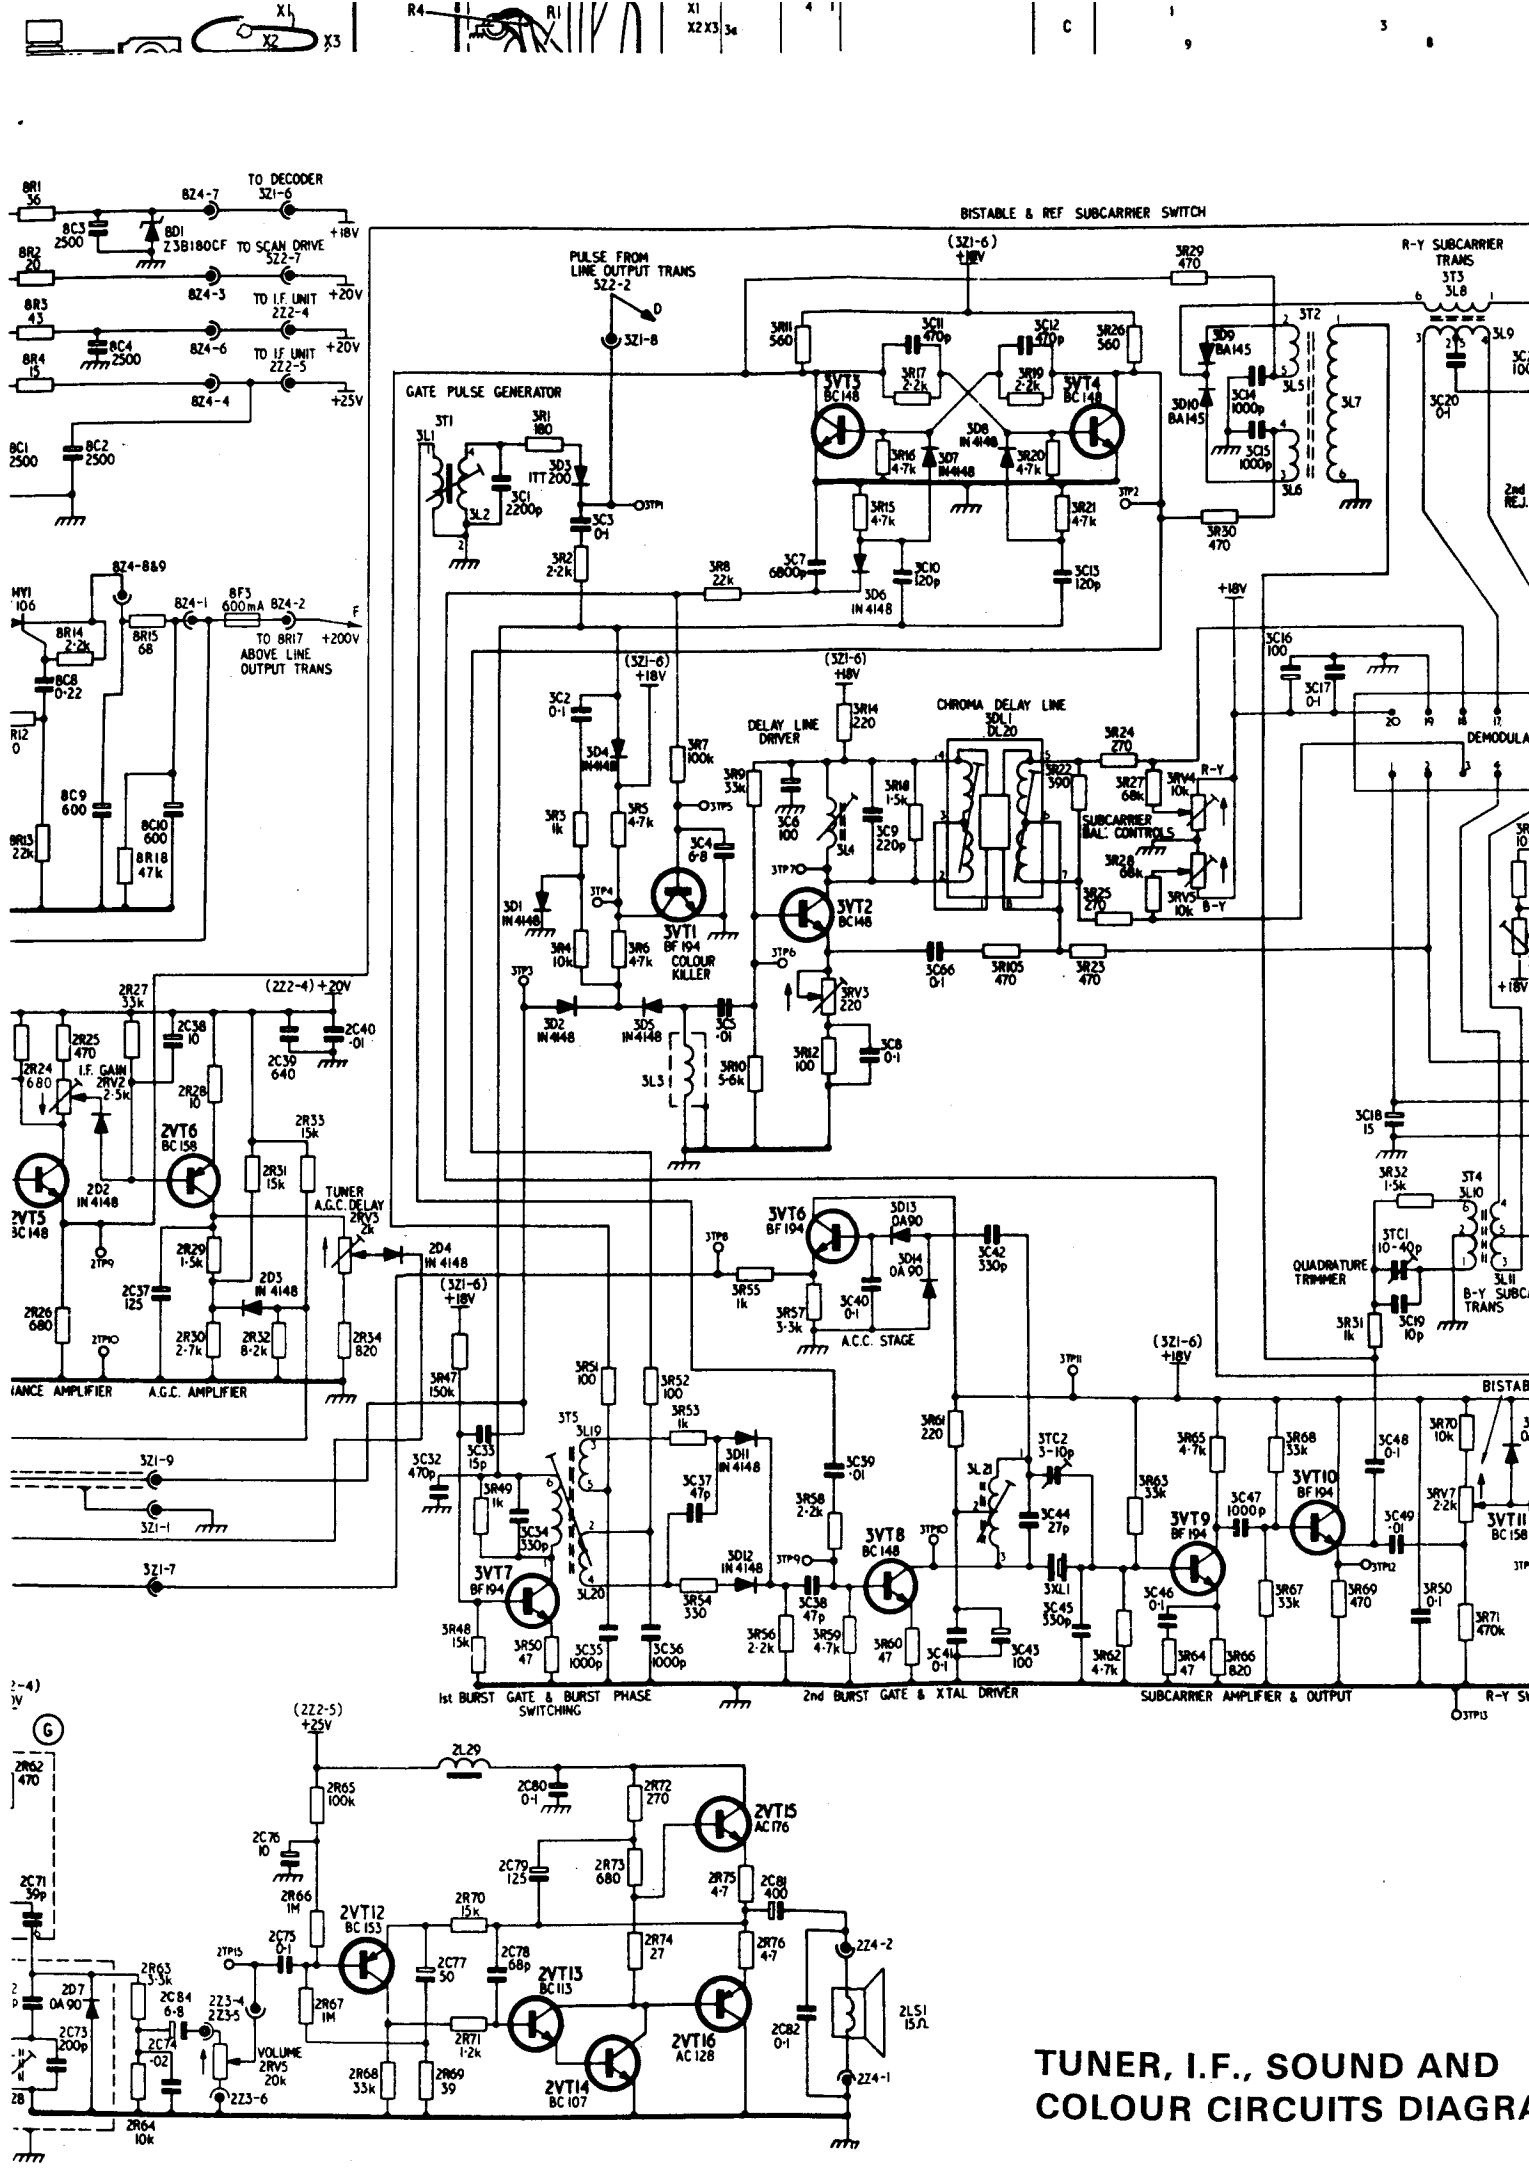

TUNER, I.F., SOUND AND COLOUR CIRCUITS DIAGRAM

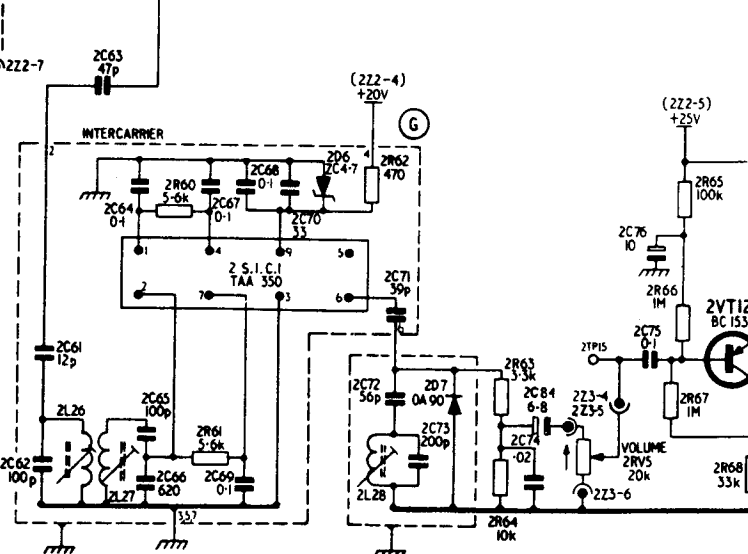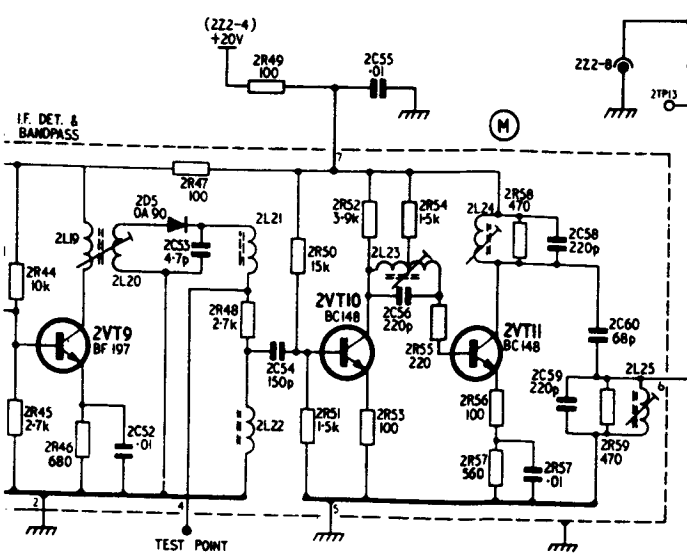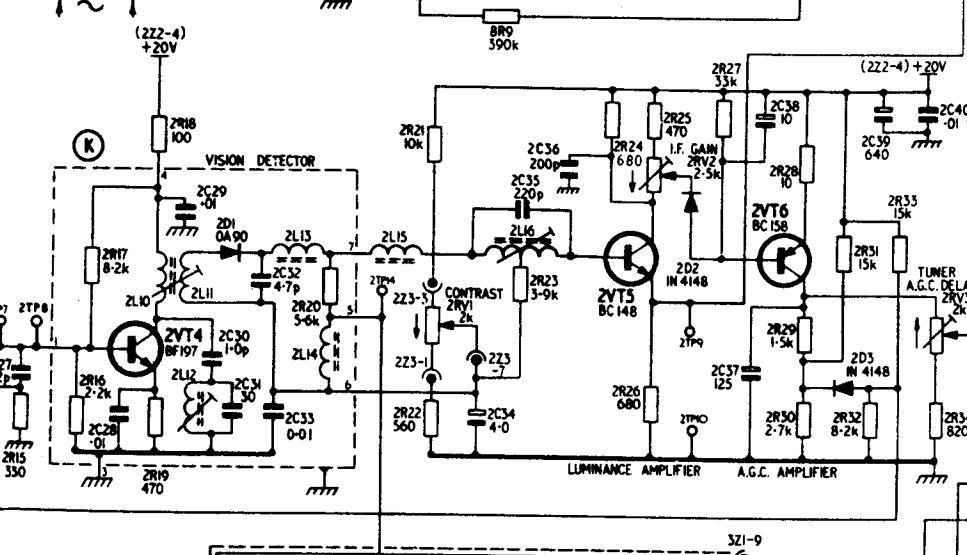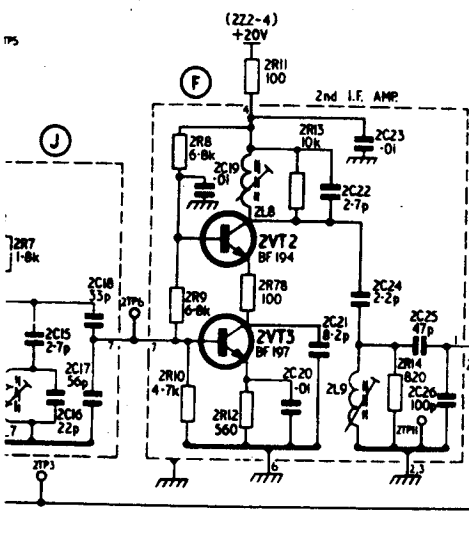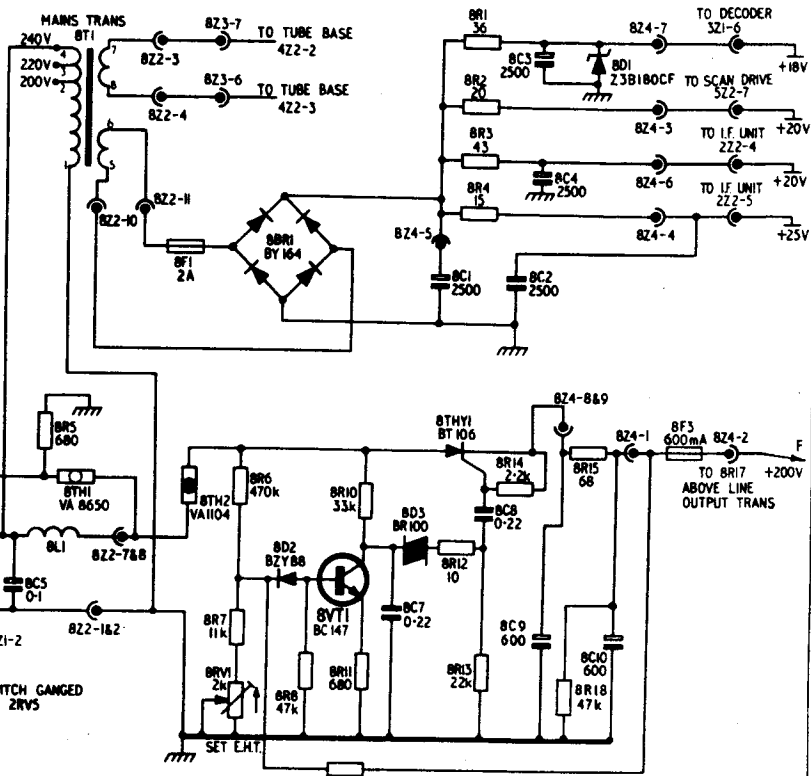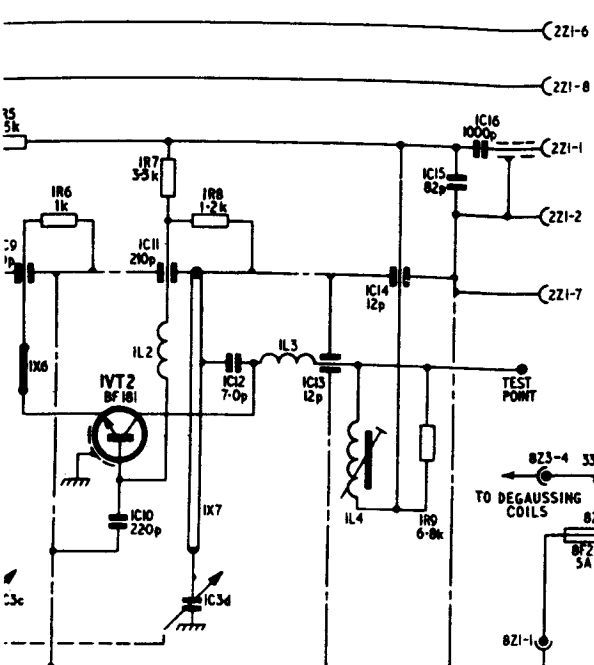

5 Stabilising Voltage Check

5. 1 Check that 1S1C1 (TAA550) is stabilising the voltage at 1Z3 pin 8 at 33V, ± 1 V. Check that the supply to pin 3 of the Z511 is 12V, ± 1 V.

6 Tuning Range

6. 1 With the u.h.f. signal generator connected to the tuner aerial socket, and the A.F.C. Switch 1SW1 in the OFF position, check that the frequency coverage of the tuner is at least 470.75MHz to 853.75MHz. The signal should be

amplitude modulated 50% at 1000Hz and the output monitored on the Z582 at 2TP8, with the oscilloscope. After completing this check disconnect the signal generator and oscilloscope.

7 R.F. Gain Control, 1RV3, Setting

7. 1 With no signal input applied, monitor the voltage at Pin 1 of the tuner unit Z511 with the meter, Item 1. 3, set to its 10V range. Adjust 1RV3 to produce 2.8V at this point.

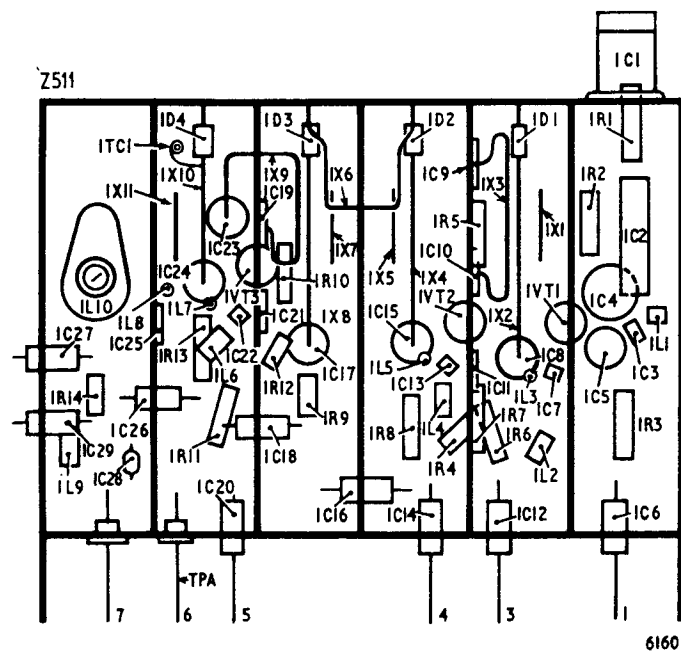


Fig. 1 Component Layout, Tuner type Z511

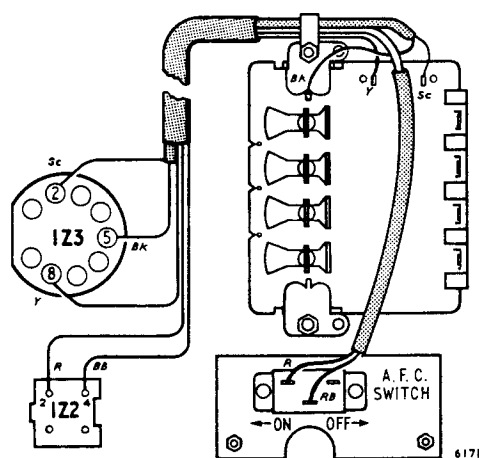


Fig. 2 Customer Control Unit Interconnection Diagram

ADJUSTMENT PROCEDURE

The adjustment procedure for the Z584 decoder is identical to that for the Z180 decoder, as printed TP1741 Service Information, apart from Sections 23 to 26, Identity Control (Final Adjustment). These adjustments should be now made as follows:

1 Reference Levels

1. 1 Inject a colour bar signal at the aerial socket and monitor the output on the oscilloscope at 3TP7. Adjust the Pre-set Colour control 2RV6 on the Z582 panel to provide 600mV, pk-pk of U reference output at 3TP7.
1. 2 Transfer the oscilloscope to 3TP1 and adjust the Burst Gain control 3RV2 for 450mV pk-pk of the red colour bar at 3TP1.
1. 3 Recheck operations 1. 1 and 1. 2 above to achieve the figures quoted.





2 Identity Adjustment

2. 1 Connect a 10k Ω resistor (preferably $\pm 1\%$ tolerance) between 3TP8 and the wiper of the Identity control 3RV4. Turn the Identity control 3RV4 fully clockwise.

2. 2 De-couple the bi-stable trigger pulse momentarily by connecting a 10 μ F capacitor between the link to pin 5 of the SL917A and chassis (3TP4) and then removing it, until the circuit goes into the 'reverse ident' condition (low saturation, reverse phase colours).
2. 3 Rotate the Identity control slowly anti-clockwise until correct ident just occurs.
2. 4 Interrupt the bi-stable trigger pulse 15 to 20 times (See 2. 2 above) to ensure that reverse ident does not occur after interruption of pulse. If it does, rotate 3RV4 a few degrees further anti-clockwise, and repeat.

3 Colour Killer Check

3. 1 Remove the 10k Ω resistor and insert a 27k Ω $\pm 1\%$ resistor between 3TP8 and chassis (3TP4).
3. 2 Change channels by depressing a tuner push-button and ensure that the display does not 'colour kill', if it does repeat section 2 above.

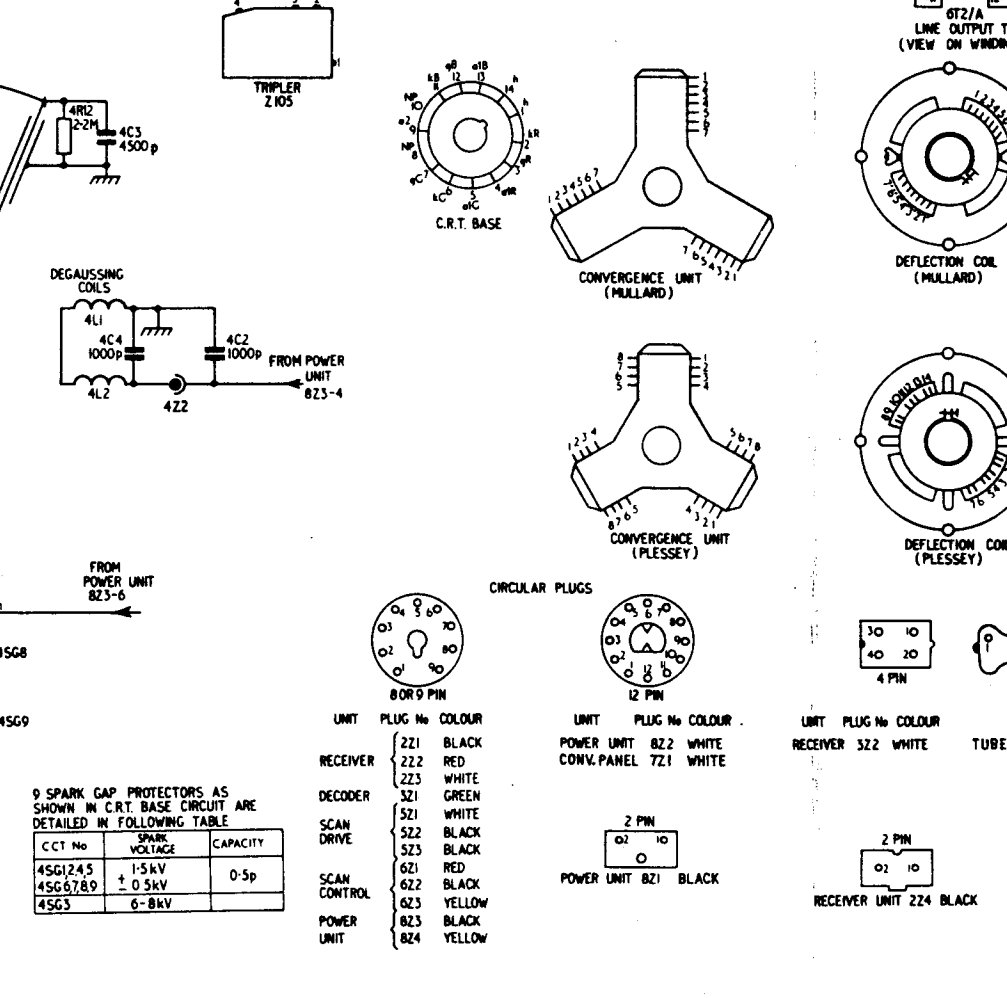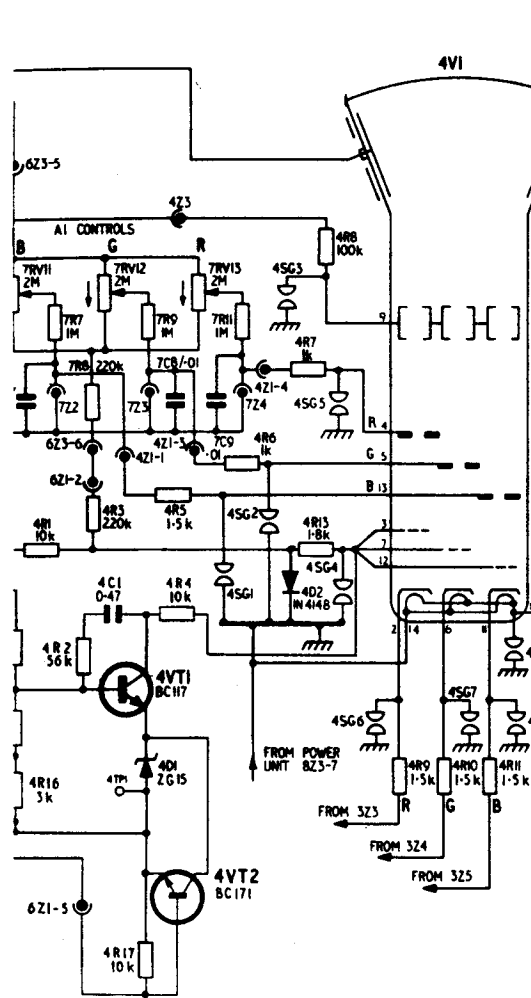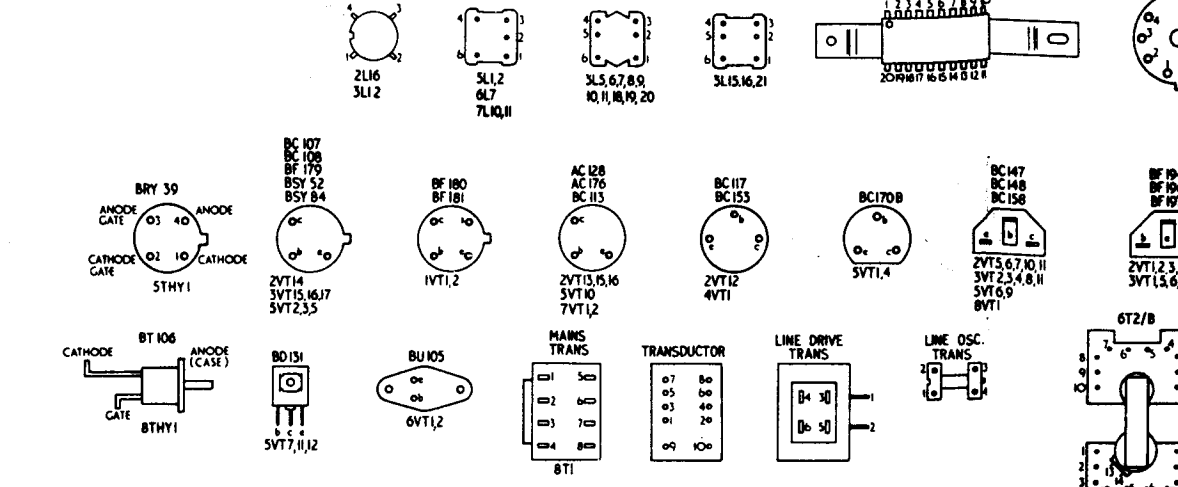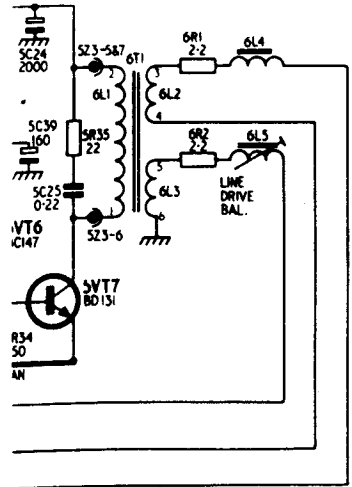

9 SPARK GAP PROTECTORS AS SHOWN IN C.R.T. BASE CIRCUIT ARE DETAILED IN FOLLOWING TABLE

CCT No	SPARK VOLTAGE	CAPACITY
4SG1,2,4,5	+ 1.5KV	0.5p
4SG6,7,8,9	+ 0.5KV	
4SG3	6-8KV	

COMPONENT PREFIXES

Prefix	U.F. TUNER UNIT	COMPONENT PREFIX	...
A770	U.F. TUNER UNIT	COMPONENT PREFIX	...
AB09	I.F. AND SOUND UNIT	"	...
AB07	DECODER & R G B DRIVES	"	...
	TUBE BASE PANEL	"	...
	SCAN DRIVE PANEL	"	...
AB02	LINE SCAN, EHT UNIT, & SCAN CONTROL	"	...
AB05	CONVERGENCE PANEL	"	...
AB01	POWER SUPPLY PANEL ETC.	"	...

CONVERGENCE COILS

CONVERGENCE	MULLARD	PLESSEY
LINE R.G.B.	4.5	7.8
LINE R.G.B.	6.7	5.6
FIELD R.G.B.	3	1.2
FIELD R.G.B.	2	3.4

SCAN COILS



SCAN	MULLARD	PLESSEY
LINE	1.2	6.14
LINE	1.2'	7.13
FIELD	6.3'	1.11
FIELD	3.6'	4.8

INDICATES CLOCKWISE ROTATION OF VARIABLE RESISTORS

KEY TO PLUGS & TRANSISTORS VIEWED ON PINS COILS VIEWED ON WINDINGS

RESISTOR VALUES IN CAPACITOR VALUES IN UNLESS OTHERWISE ST

TIMEBASE, E.H.T. & CONVERGENCE CIRCUITS DIAGRA

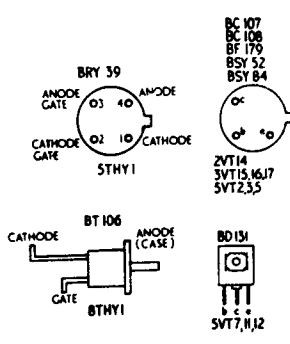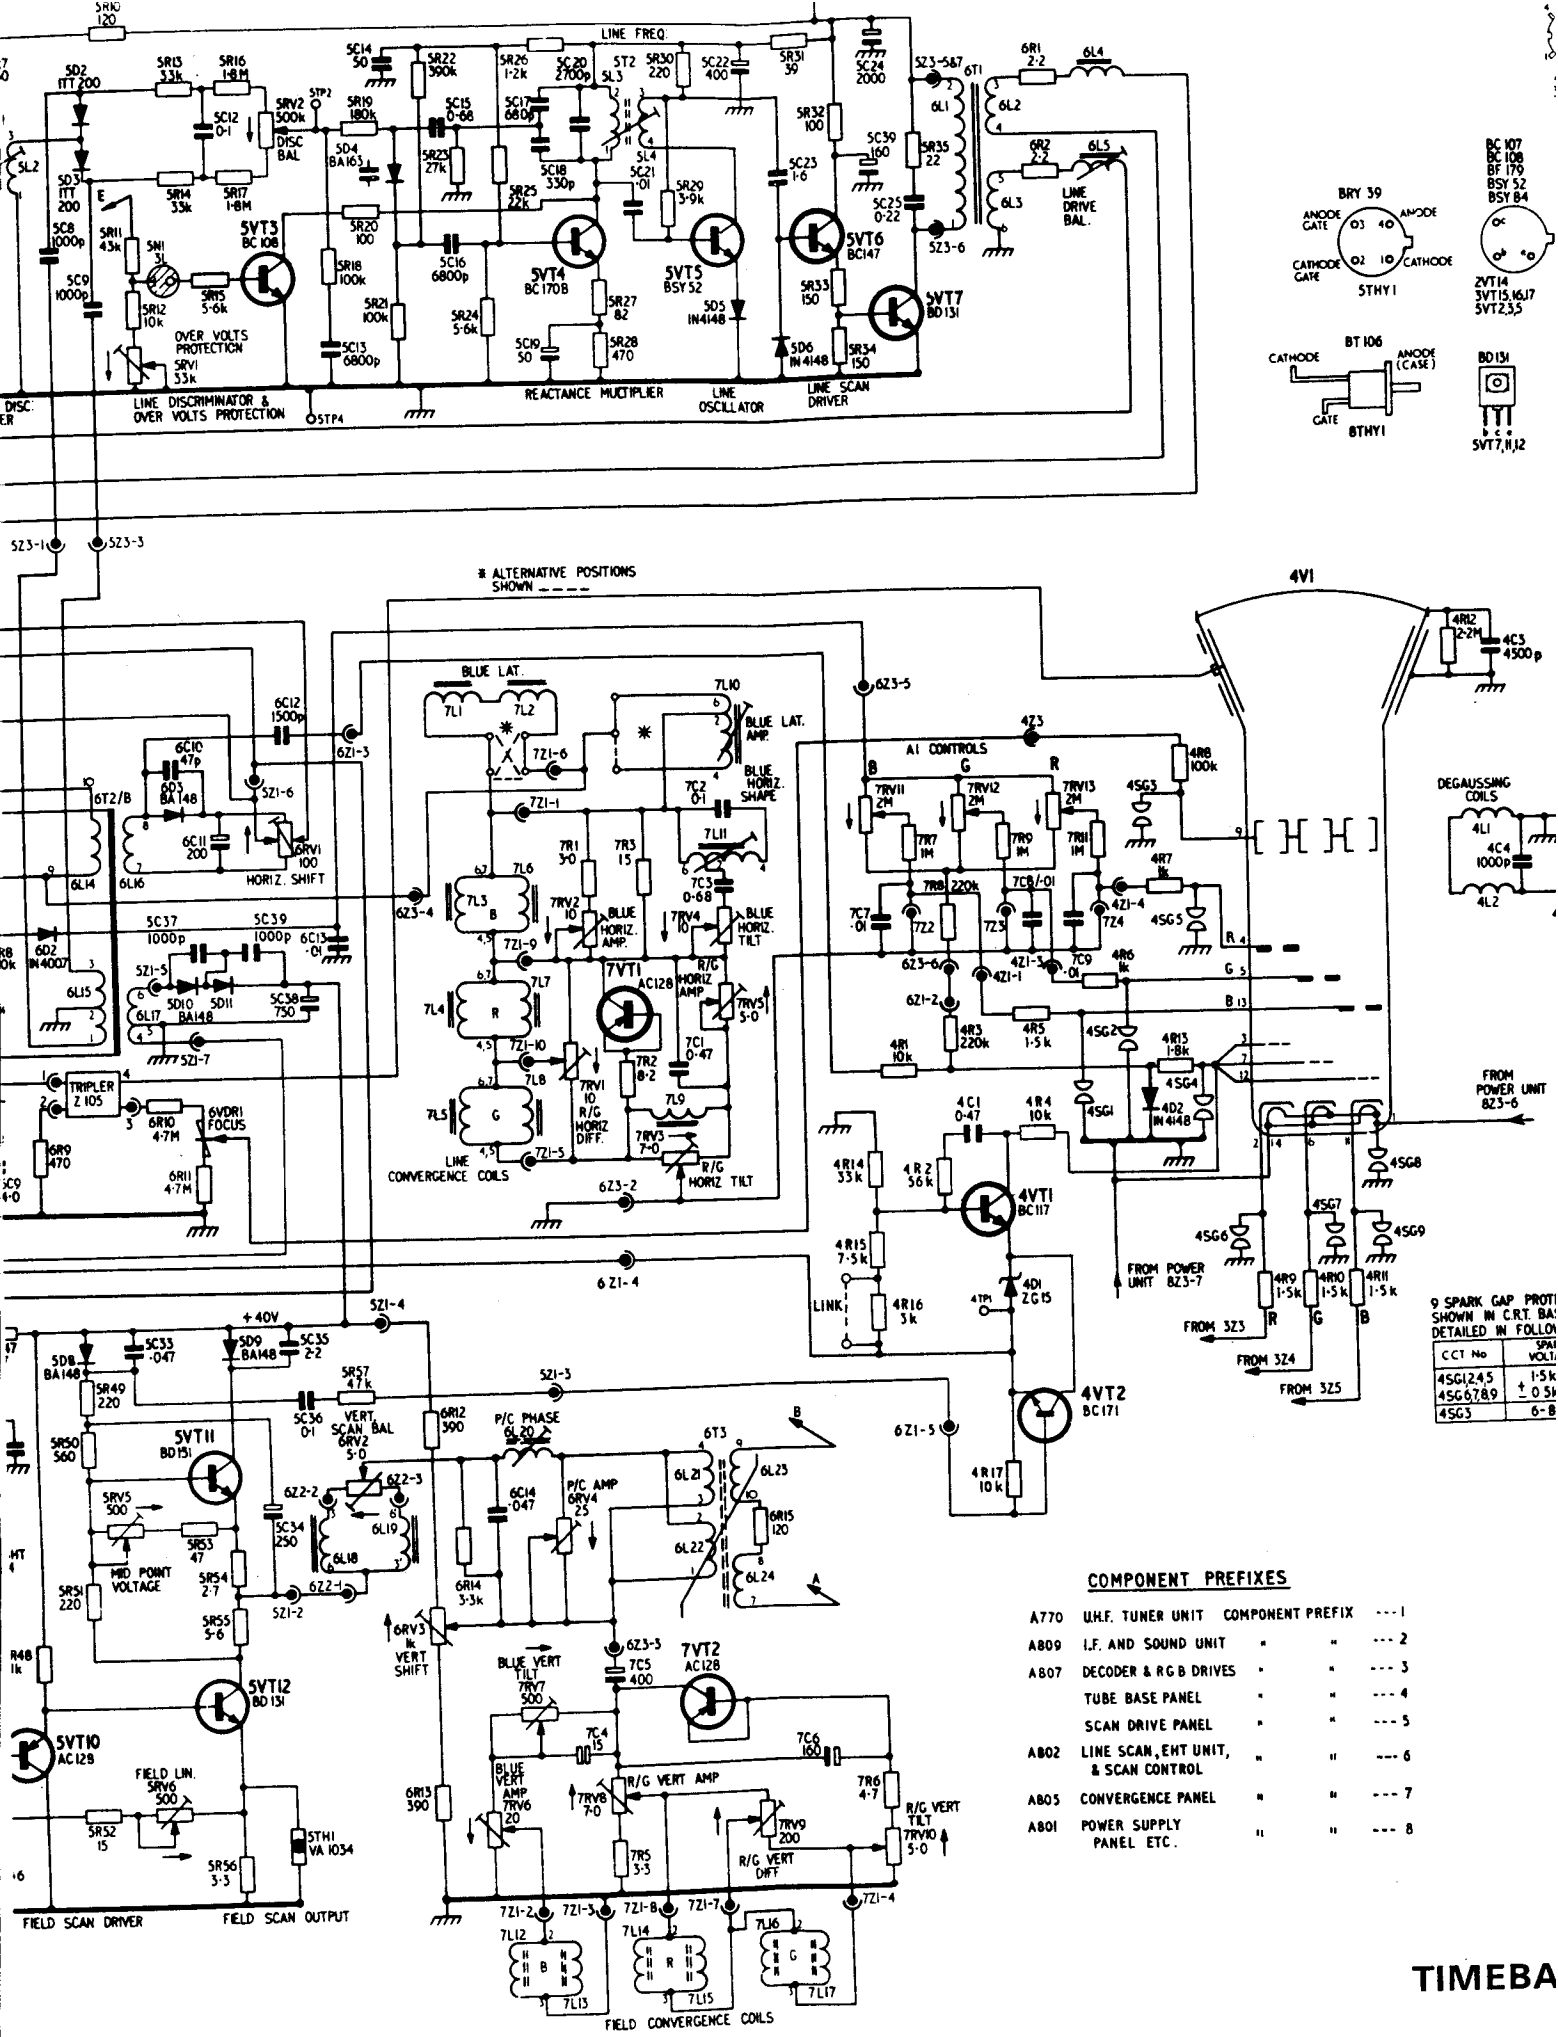

* ALTERNATIVE POSITIONS SHOWN - - - -


9 SPARK GAP PROT. SHOWN IN CRT. BA. DETAILED IN FOLLO.

CC1 No.	VOLT.
45G124.5	1-5k
45G67.8.9	± 0.5k
45G3	6-8

COMPONENT PREFIXES

- A770 U.H.F. TUNER UNIT COMPONENT PREFIX --- 1
- AB09 I.F. AND SOUND UNIT " " --- 2
- AB07 DECODER & RGB DRIVES " " --- 3
- TUBE BASE PANEL " " --- 4
- SCAN DRIVE PANEL " " --- 5
- AB02 LINE SCAN, EHT UNIT, & SCAN CONTROL " " --- 6
- AB05 CONVERGENCE PANEL " " --- 7
- AB01 POWER SUPPLY PANEL ETC. " " --- 8

TIMEBA

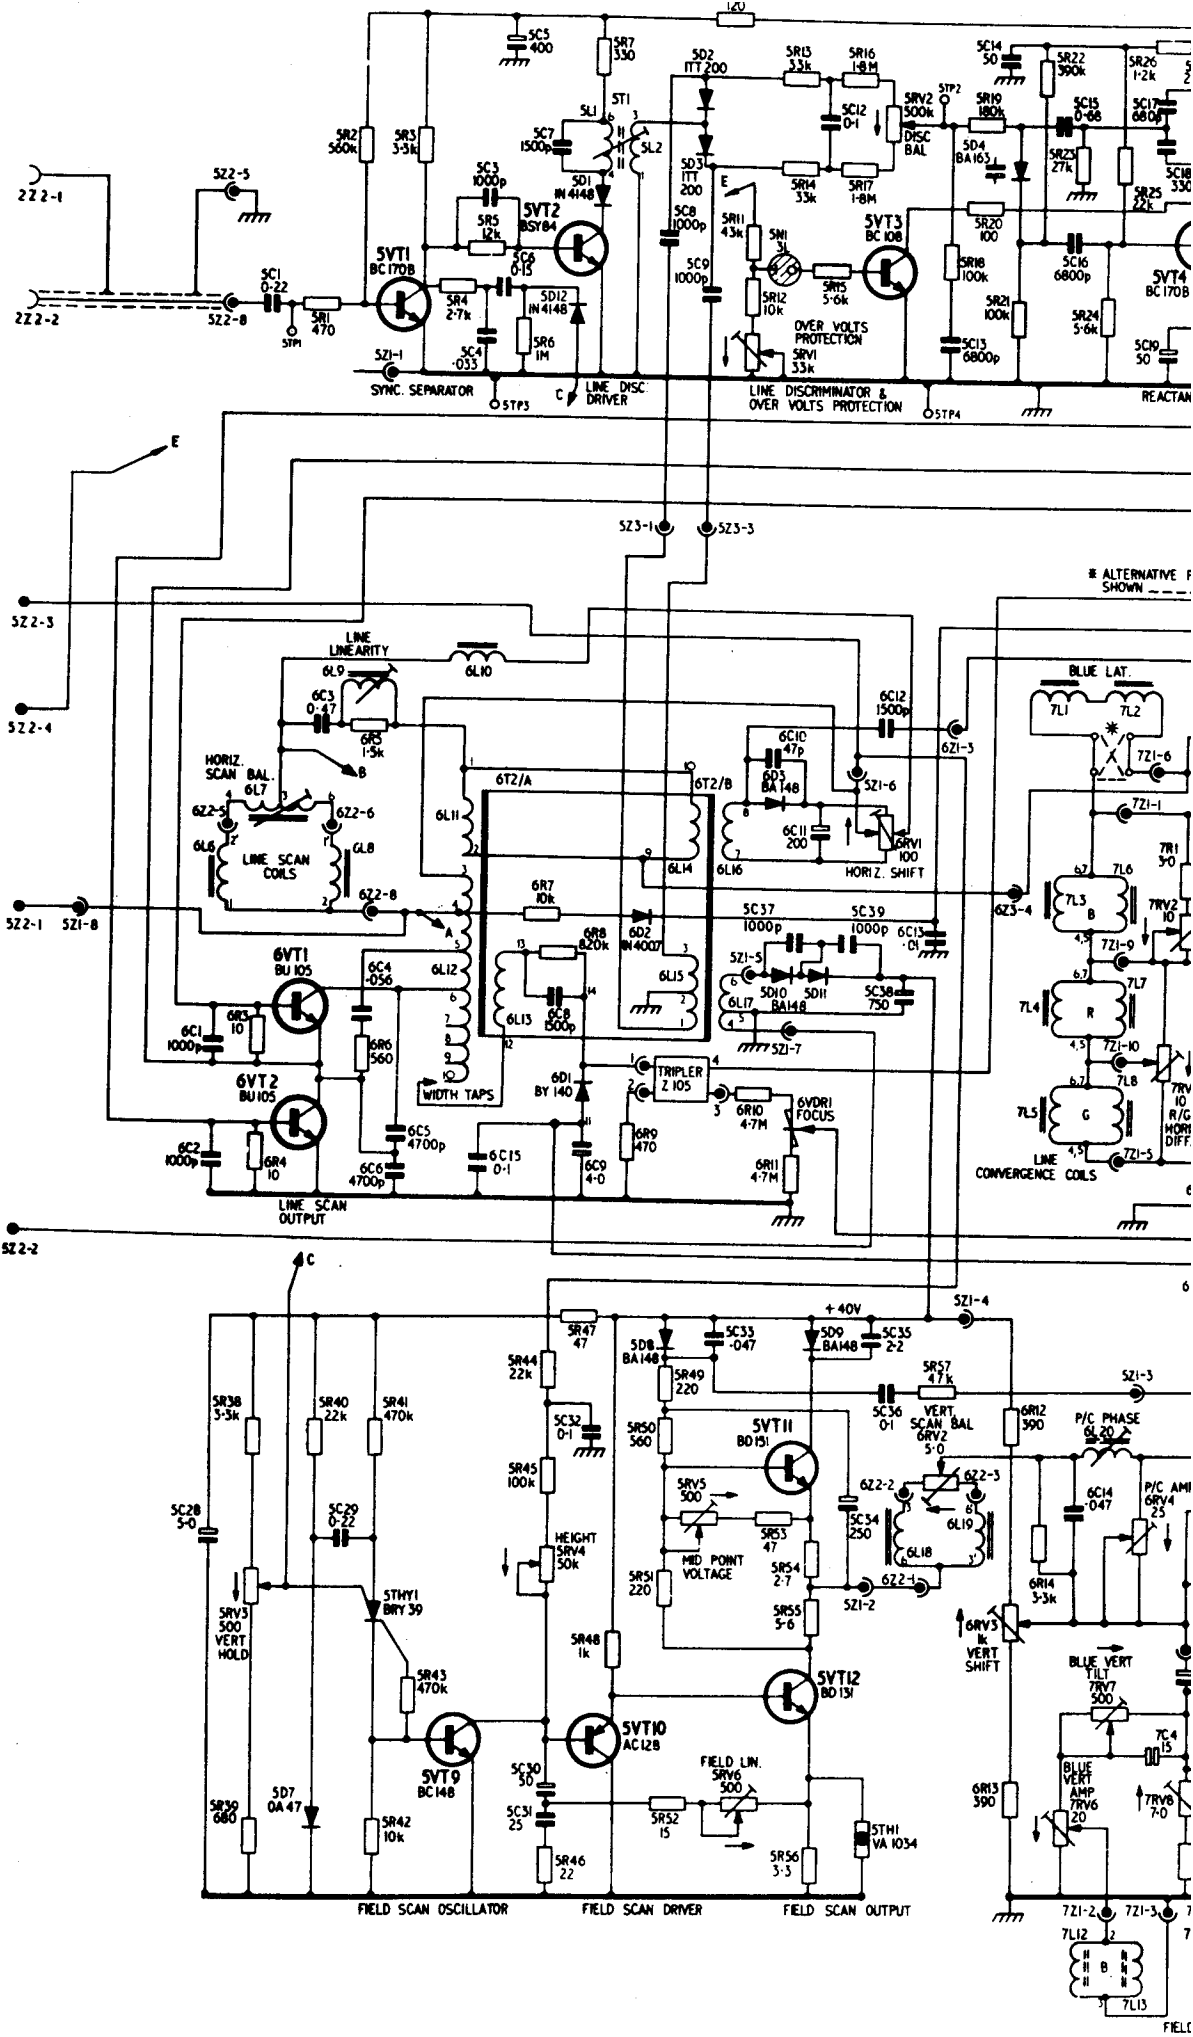

red are robust
 1 to apply the
 ocodile clips.
 ection of the

modified for opera-
 into the screen.
 ating position.
 ently disturbed,

he event of any
 ontrast level is
 ss and Contrast

ontrols 7RV11

control for the
).

nt cover. (see

using a high

ie

BUSH MURPHY

SERVICE INFORMATION

MODELS CTV182S, CTV184S, CT187CS, CV1916S, CV221S, CT2516CS

Single Standard Colour Television Receivers

This range of television receivers is fully transistorised and the transistors which are employed are robust and reliable under normal operating conditions. However, it is necessary to stress the need to apply the precautions usual when servicing a transistorised receiver i.e. avoiding short-circuits by crocodile clips, leakage currents and/or overheating from a soldering iron particularly in the time-base section of the instrument.

INSTALLATION

NOTE:—The adjustment of the picture controls, i.e. Height, Hold, etc. follows standard practice.

1. **Mains Adjustment.** The receiver as supplied is suitable for a 240 volts a.c. supply. If the receiver is modified for operation on voltages other than 240 volts a.c. this must be noted on the rear of the cabinet back.

2. **Degaussing.** Automatic degaussing is fitted which will normally take care of any magnetic effects induced into the screen. Use an external degaussing coil if required.

3. **Push Button Selection.** To tune, press in the appropriate button and allow it to return to its normal operating position. Withdraw the button slightly and turn it until the receiver is correctly tuned to the desired channel.

NOTE:—Clockwise rotation of a button selects channels in a descending order of frequency.

4. **Tuner AGC Delay Control.** This control should not be adjusted but if its setting has been inadvertently disturbed, however, the slider of the control should be rotated fully clockwise and left in this position.

5. **Purity.** If necessary, adjust the Purity Ring magnets for satisfactorily pure fields on each gun.

6. **Convergence.** Refer to diagram on convergence panel.

MAINTENANCE ADJUSTMENTS

This information is included to enable the correct adjustment of the undermentioned controls to be made in the event of any of these controls being accidentally disturbed.

1. Pre-set I.F. Gain

1. Set the Brightness and Contrast Controls to a midway position.

2. Adjust the Pre-set I.F. Gain control 2RV2 (see I.F. Unit diagram) for a correctly contrasted picture.

3. To check, turn the Contrast control fully clockwise and then operate the channel push buttons. If the contrast level is incorrect resulting in over-loading reduce slightly the setting of the pre-set I.F. Gain control. Re-adjust Brightness and Contrast controls to normal operating positions.

2. Grey Scale

1. Switch on, with no signal input.

2. Remove tuner socket 2Z1 from the i.f. unit to obtain a noise-free raster.

3. Set the R. G. & B. drive controls 3RV8, 3RV9, 3RV10 (see Decoder panel diagram) to maximum, the A1 controls 7RV11, 7RV12, 7RV13 (see Convergence Panel diagram) to minimum and the Brightness control to maximum.

4. Adjust the A1 controls in this order (leave all gun switches ON).

(a) the Green A1 control 7RV12, to a just visible green raster.

(b) the Red A1 control 7RV13 until red is just introduced into the raster.

(c) the Blue A1 control 7RV11 until blue is just introduced into the raster.

5. Restore the tuner socket and the signal, adjust the Contrast control to a normal picture and set the Brightness control for the correct black level.

6. Adjust the appropriate A1 control to remove colouration if any, in the lowlights close to black level.

7. Adjust, if necessary, the appropriate drive control for no colouration in the peak white areas (Illuminant D).

8. Check that the overall grey scale is satisfactory.

3. Focus

The Focus control 6VDR1 is adjusted, using an insulated screwdriver, through a hole in the e.h.t. compartment cover. (see Controls Diagram).

4. Set E.H.T.

This control is set for an e.h.t. of 25kV measured under signal conditions with zero brightness on the c.r.t. screen using a high voltage meter whose impedance is not less than 30M ohms.

5. E.H.T. over-volts protection control

This control should not be disturbed from its setting, as indicated by the paint spot, without reference to the recommended procedure.

THE SERVICE DEPARTMENT




RANK BUSH MURPHY

A DIVISION OF THE RANK ORGANISATION

DRAYTON ROAD · BOREHAM WOOD · HERTFORDSHIRE · ENGLAND

Telephone: 01-953 6151 · Telex: 262741 · Cables: Rankboom Boreham Wood

Issued by the Technical Publications Department at R.B.M. London W4.

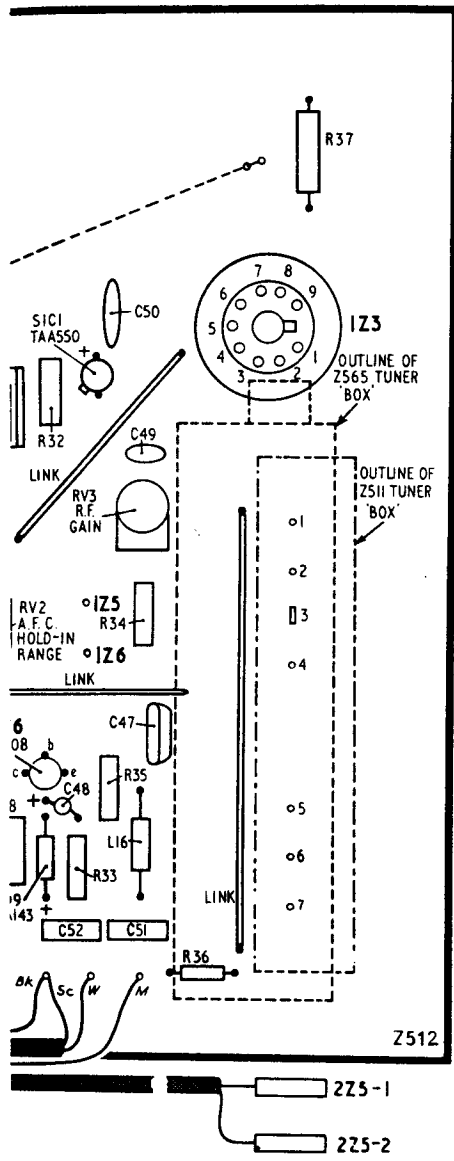

2512

6156

r Supply panel, Z512

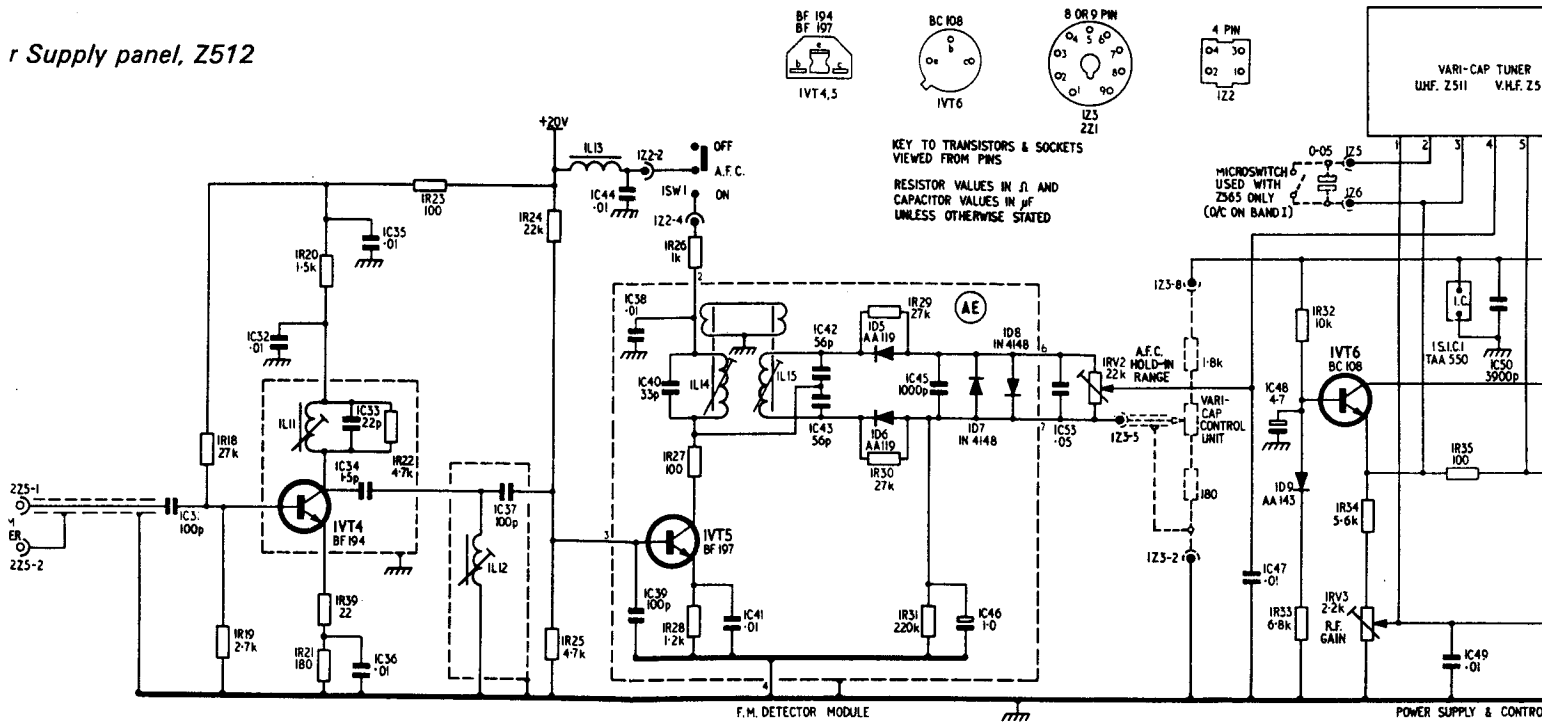


Fig. 5 Circuit Diagram, A.F.C. and Power Supply Panel,

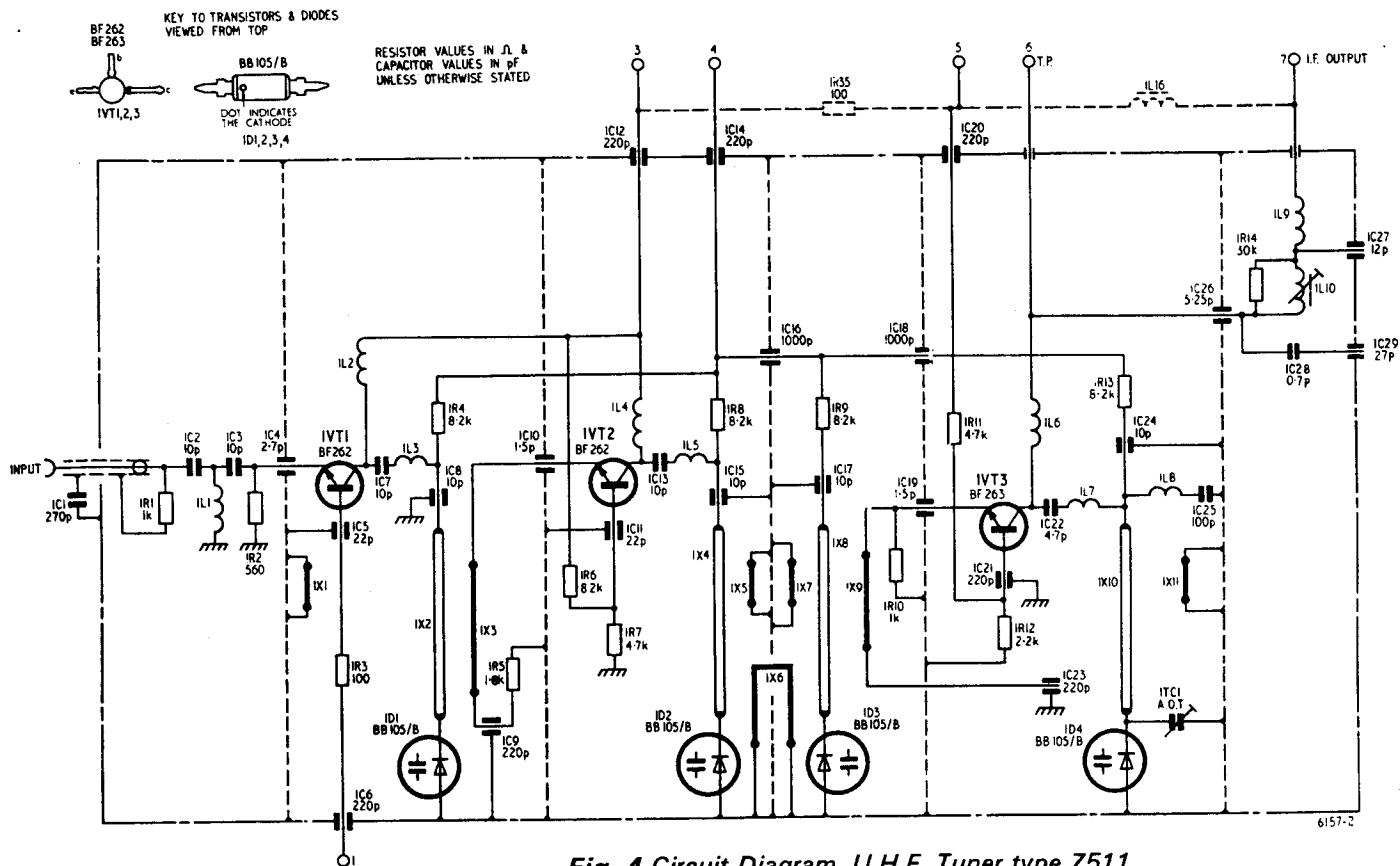


Fig. 4 Circuit Diagram, U.H.F. Tuner type Z511

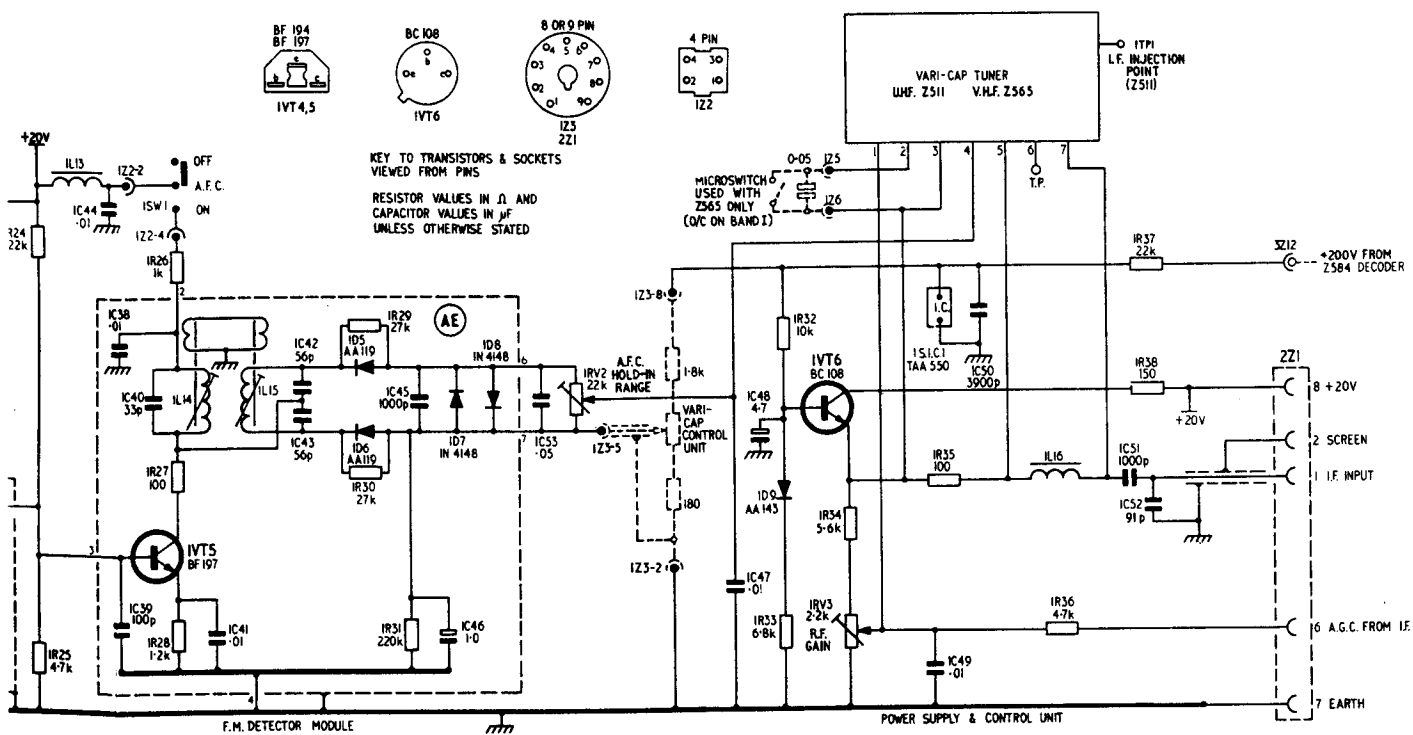


Fig. 5 Circuit Diagram, A.F.C. and Power Supply Panel, type Z512

Electrical Parts, Z511 U.H.F. Tuner Unit

Note: As the parts contained within the varicap tuner units are set in position during manufacture, any repositioning will adversely affect the performance of the units. Dealers are strongly advised not to attempt to service these units.

RESISTORS

Ref.	Value (ohms)	Tolerance (±%)	Rating (watts)	Part Number
1R1	1k	5	0.125	2052 1789
1R2	560	5	0.125	2052 1716
1R3	100	5	0.125	2052 1522
1R4	8.2k	5	0.125	2052 2022
1R5	1.8k	5	0.125	2052 1844
1R6	8.2k	5	0.125	2052 2022
1R7	4.7k	5	0.125	2052 1960
1R8	8.2k	5	0.125	2052 2022
1R9	8.2k	5	0.125	2052 2022
1R10	1k	5	0.125	2052 1789
1R11	4.7k	5	0.125	2052 1960
1R12	2.2k	5	0.125	2052 1868
1R13	8.2k	5	0.125	2052 2022
1R14	30k	5	0.125	2052 2162

CAPACITORS

Ref.	Value (pF)	Tolerance (±%)	Rating (volts)	Part Number
1C1	270	+40 -20	3kV	2541 0167
1C2	10	20	3kV	2505 1301
1C3	10	±0.5p	40	2057 0067
1C4	2.7	±0.5p	250	2599 0068
1C5	22	10	250	2599 0056
1C6	220	10	500	2541 0313
1C7	10	±0.5pF	40	6882 0008
1C8	10	10	250	2599 0044
1C9	220	20	250	2599 0019
1C10	1.5	±0.5pF	250	2599 0081
1C11	22	10	250	2599 0056
1C12	220	10	500	2541 0313
1C13	10	±0.5pF	40	6882 0008
1C14	220	10	500	2541 0313
1C15	10	10	250	2599 0044
1C16	1000	+80 -20	300	2541 0210
1C17	10	10	250	2599 0044
1C18	1000	+80 -20	300	2541 0210
1C19	1.5	±0.5pF	250	2599 0081

CAPACITORS—continued

Ref.	Value (pF)	Tolerance (±%)	Rating (volts)	Part Number
1C20	220	10	500	2541 0313
1C21	220	20	250	2599 0019
1C22	4.7	±0.5pF	40	6882 0021
1C23	220	20	250	2599 0019
1C24	10	10	250	2599 0044
1C25	100	20	250	2599 0093
1C26	5.25	±0.5pF	300	2541 0295
1C27	12	10	300	2541 0301
1C28	0.7	±0.25pF	500	2505 1349
1C29	27	10	500	2541 0337

DIODES, VARICAP

Ref.	Type	Function	Part Number
1D1	BB105/B	Pre-selector tuning	3645 0029
1D2	BB105/B	Bandpass filter (primary) tuning	3645 0029
1D3	BB105/B	Bandpass filter (secondary) tuning	3645 0029
1D4	BB105/B	Oscillator tuning	3645 0029

INDUCTORS

Ref.	Description	Part Number
1L1	Choke, high-pass filter	6811 0352
1L2	Choke	6811 0443
1L3	Choke/capacitor (1C7)	6882 0008
1L4	Choke	6811 0340
1L5	Choke/capacitor (1C13)	6882 0008
1L6	Choke	6811 0364
1L7	Choke/capacitor (1C22)	6882 0021
1L8	Choke, rejector	6811 0364
1L9	Choke	6811 0364
1L10	I.F. output coil	7100 4786

TRANSISTORS

Ref.	Type	Function	Part Number
1VT1	BF262	R.F. amplifier	3632 0341
1VT2	BF262		3632 0341
1VT3	BF263	Mixer/oscillator	3632 0328

Z512 A.F.C. and Power Supply Panel

RESISTORS

Ref.	Value (ohms)	Tolerance (±%)	Rating (watts)	Part Number
1R18	27k	5	0.25	2055 5908
1R19	2.7k	5	0.25	2055 5647
1R20	1.5k	10	0.2	2001 0722
1R21	180	5	0.25	2055 5337
1R22	4.7k	10	0.125	2052 0797
1R23	100	5	0.25	2055 5271
1R24	22k	5	0.25	2055 5878
1R25	4.7k	5	0.25	2055 5702
1R26	1k	10	0.2	2001 0709
1R27	100	10	0.125	2052 0566
1R28	1.2k	10	0.3	2037 0702
1R29	27k	10	0.3	2037 0878
1R30	27k	10	0.3	2037 0878
1R31	220k	10	0.2	2001 1003
1R32	10k	10	0.2	2001 0837
1R33	6.8k	10	0.2	2001 0813
1R34	5.6k	10	0.2	2001 0801
1R35	100	10	0.2	2001 0564
1R36	4.7k	10	0.125	2052 0797
1R37	22k	5	0.25	2055 1113
1R38	150	10	0.2	2001 0588
1R39	22	5	0.25	2055 5088

RESISTORS, VARIABLE

Ref.	Value (ohms)	Rating (watts)	Function	Part Number
1RV2	22k	0.2	A.F.C. hold-in range	2355 0053
1RV3	2.2k	0.2	R.F. gain	2355 0089

CAPACITORS

Ref.	Value (μF)	Value (pF)	Tolerance (±%)	Rating (volts)	Part Number
1C31		100	10	500	2525 0486
1C32	0.01		+80 -20	50	2566 0019
1C33		22	2.5	125	2653 1306
1C34		1.5	10		2555 0007
1C35	0.01		+80 -20	50	2566 0019
1C36	0.01		+80 -20	50	2566 0019
1C37		100	2.5	125	2653 0284
1C38	0.01		+80 -20	50	2566 0019
1C39		100	2		2557 0195
1C40		33	5		2556 0207
1C41	0.01		+80 -20	50	2566 0019
1C42		56	2		2557 0158
1C43		56	2		2557 0158
1C44	0.01		+80 -20	50	2566 0019
1C45		1000	20		2561 0193

CAPACITORS

Ref.	Value (μ F) (pF)	Tolerance (\pm %)	Rating (volts)	Part Number
1C46	1.0			2751 0402
1C47	0.01	20	250	2601 0008
1C48	4.7	20	25	2759 0173
1C49	0.01	+80 -20	50	2566 0019
1C50		3900 20	500	2563 0040
1C51		1000 20	500	2535 0134
1C52		91 5		2701 0636
1C53	0.05	+80 -20	10	2566 0342

DIODES

Ref.	Type	Function	Part Number
1D5	AA119	F.M. detector diodes	3641 0020
1D6	AA119		3641 0020
1D7	1N4148	Clipping diodes.	3641 1601
1D8	1N4148		3641 1601
1D9	AA143	Temperature compensation diode	3641 1607

INTEGRATED CIRCUIT

Ref.	Type	Function
1S1C1	TAA550	Varicap supply stabilizer

INDUCTORS

Ref.	Function
1L11	Bandpass coil (collector)
1L12	Bandpass coil (output)
1L13	R.F. choke
1L14	F.M. detector coil primary
1L15	F.M. detector coil secondary
1L16	Rejector coil

TRANSISTORS

Ref.	Type	Function
1VT4	BF194	Narrow band i.f. amplifier
1VT5	BF197	F.M. detector driver
1VT6	BC108	Voltage regulator

manufacture, any
ply advised not to

Rating (volts)	Part Number
500	2541 0313
250	2599 0019
40	6882 0021
250	2599 0019.
250	2599 0044
250	2599 0093
300	2541 0295
300	2541 0301
500	2505 1349
500	2541 0337

Part Number
3645 0029
ary) tuning 3645 0029
ndary) tuning 3645 0029
3645 0029

Part Number
6811 0352
6811 0443
6882 0008
6811 0340
6882 0008
6811 0364
6882 0021
6811 0364
6811 0364
7100 4786

Part Number
3632 0341
3632 0341
3632 0328

Part Number
2355 0053
2355 0089

Mechanical Parts

Item	Part
Aerial socket moulding and lead	75
A.F.C. and Power Supply panel Z512 complete but less tuner	73
Contacts (5), for socket Z21	34
Contacts (3), for sockets Z25-1, 2 and 3Z12	34
Core, (2) iron dust, for coils 1L11, 12	32
Core, iron dust, for coil 1L14	32
Core, iron dust, for coil 1L15	32
Microswitch, used on Z564 conversion kit	34
Module AE, F.M. Detector, complete	72
Plug, 4 pin, black 1Z2	34
Plug, 9 pin, white, 1Z3	34
Socket moulding, for Z21, less contacts	34
Socket moulding (3), for Z25-1, 2 and 3Z12, less contacts	34
Tuner, Z511 complete	73
Tuner, Z565 complete	73

MODIFICATIONS

Rating (volts)	Part Number
500	2525 0486
50	2566 0019
125	2653 1306
	2555 0007
50	2566 0019
50	2566 0019
125	2653 0284
50	2566 0019
	2557 0195
	2556 0207
50	2566 0019
	2557 0158
	2557 0158
50	2566 0019
	2561 0193

INTEGRATED CIRCUIT

Ref.	Type	Function	Part Number
1S1C1	TAA550	Varicap supply stabilizer	3646 0175

INDUCTORS


Ref.	Function	Part Number
1L11	Bandpass coil (collector)	7100 4737
1L12	Bandpass coil (output)	7100 4749
1L13	R.F. choke	7100 1797
1L14	F.M. detector coil primary	7100 4713
1L15	F.M. detector coil secondary	7100 4725
1L16	Rejector coil	7100 0070

TRANSISTORS

Ref.	Type	Function	Part Number
1VT4	BF194	Narrow band i.f. amplifier	3632 0171
1VT5	BF197	F.M. detector driver	3632 0195
1VT6	BC108	Voltage regulator	3632 0201

Part Number

..	7500 4458
but less tuner	7300 3815
..	3439 0121
..	3439 0066
..	3242 0080
..	3242 0134
..	3242 0122
..	3416 0139
..	7200 1719
..	3431 0642
..	3431 0629
..	3435 0019
is contacts	3439 0145
..	7300 3797
..	7300 3943

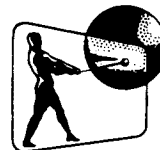THE SERVICE DEPARTMENT**RANK BUSH**

A COMPANY WITHIN

DRAYTON ROAD BOREHAM WOOD

Telephone: 01-953 6151

Telex: 26274

Issued by the Technical Publications Depa