

Service Service Service

Service Information



In the 21PT3942 and the two new 21" sets, 21PT3956 & 21PT3962, the mono-carrier PCB-layout L9.1A is introduced to increase the audio power.

Entering the SDM has changed. By connecting pin 20 to ground at cold start.

Entering the SAM has changed. Shorting pin M28 and M29 is no longer valid.

For the 21PT3942 one new panel is added:

- Side AV panel & Headphone (E1)

For the 21PT3956 & 21PT3962 two new panels are added:

- Side AV panel & Headphone (E1)
- Top Control RF (T)

For reference see Service Manual L9.2A - 4822 727 21704.

In the new 34" sets, 34PT4873 & 34PT4822, two new panels are introduced:

- Side AV panel & Headphone (E1)
- Top Control FSQ (T1)

For reference see Service Manual L9.1A - 4822 727 21705.

© Copyright 2000 Philips Consumer Electronics B.V. Eindhoven, The Netherlands.
All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted, in any form or by any means, electronic, mechanical, photocopying, or otherwise without the prior permission of Philips.




PHILIPS

Electrical diagrams and PWB's

Side AV panel & headphone

E 1 SIDE AV PANEL & HEADPHONE

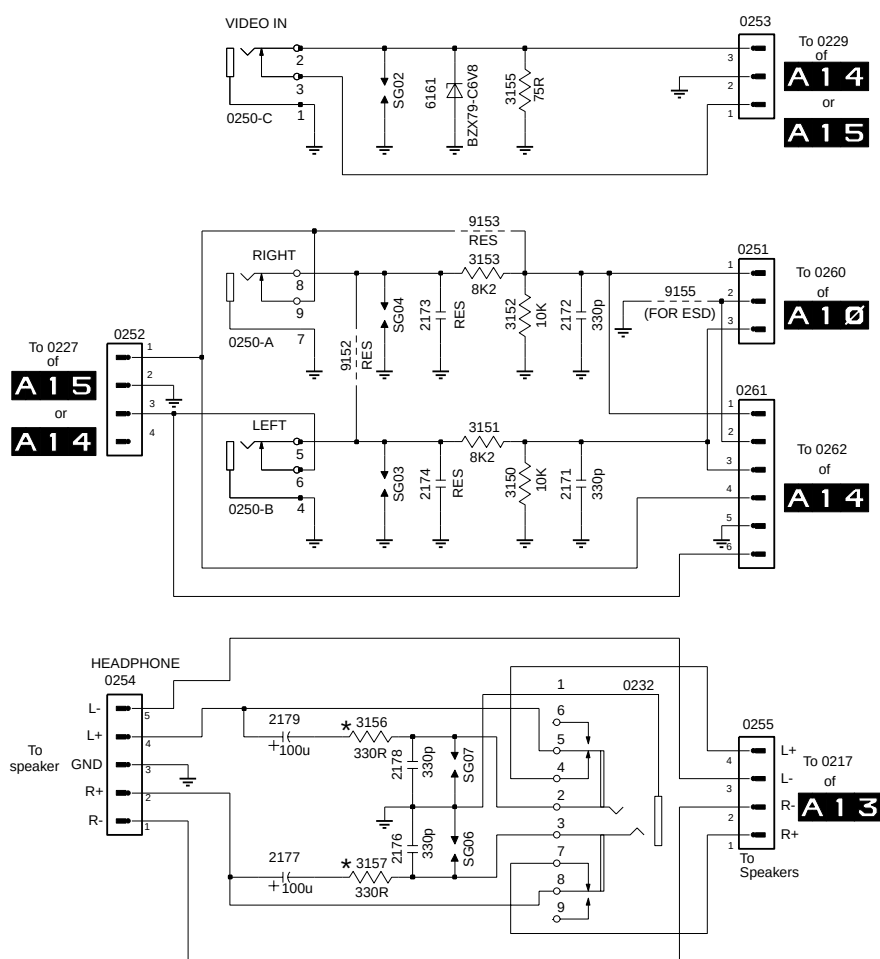


*	EUROPE	AP/INDIA/LATAM
3156	330R	120R
3157	330R	120R

0232 E4
0250-A C3
0250-B D3
0250-C B3
0251 C5
0252 D2
0253 B5
0254 E2
0255 E5
0261 D5
2171 D4
2172 C4
2173 C4
2174 D4
2176 F3
2177 F3
2178 F3
2179 E3
3150 D4
3151 D4
3152 C4
3153 C4
3155 B4
3156 E3
3157 F3
6161 B3
9152 D3
9153 C4
9155 C5
SG02 B3
SG03 D3
SG04 C3
SG06 F4
SG07 F4


Technical drawing of a PCB layout for a power supply unit. The drawing includes a coordinate grid with labels 1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47, 48, 49, 50, 51, 52, 53, 54, 55, 56, 57, 58, 59, 60, 61, 62, 63, 64, 65, 66, 67, 68, 69, 70, 71, 72, 73, 74, 75, 76, 77, 78, 79, 80, 81, 82, 83, 84, 85, 86, 87, 88, 89, 90, 91, 92, 93, 94, 95, 96, 97, 98, 99, 100, 101, 102, 103, 104, 105, 106, 107, 108, 109, 110, 111, 112, 113, 114, 115, 116, 117, 118, 119, 120, 121, 122, 123, 124, 125, 126, 127, 128, 129, 130, 131, 132, 133, 134, 135, 136, 137, 138, 139, 140, 141, 142, 143, 144, 145, 146, 147, 148, 149, 150, 151, 152, 153, 154, 155, 156, 157, 158, 159, 160, 161, 162, 163, 164, 165, 166, 167, 168, 169, 170, 171, 172, 173, 174, 175, 176, 177, 178, 179, 180, 181, 182, 183, 184, 185, 186, 187, 188, 189, 190, 191, 192, 193, 194, 195, 196, 197, 198, 199, 200, 201, 202, 203, 204, 205, 206, 207, 208, 209, 210, 211, 212, 213, 214, 215, 216, 217, 218, 219, 220, 221, 222, 223, 224, 225, 226, 227, 228, 229, 230, 231, 232, 233, 234, 235, 236, 237, 238, 239, 240, 241, 242, 243, 244, 245, 246, 247, 248, 249, 250, 251, 252, 253, 254, 255, 256, 257, 258, 259, 260, 261, 262, 263, 264, 265, 266, 267, 268, 269, 270, 271, 272, 273, 274, 275, 276, 277, 278, 279, 280, 281, 282, 283, 284, 285, 286, 287, 288, 289, 290, 291, 292, 293, 294, 295, 296, 297, 298, 299, 300, 301, 302, 303, 304, 305, 306, 307, 308, 309, 310, 311, 312, 313, 314, 315, 316, 317, 318, 319, 320, 321, 322, 323, 324, 325, 326, 327, 328, 329, 330, 331, 332, 333, 334, 335, 336, 337, 338, 339, 340, 341, 342, 343, 344, 345, 346, 347, 348, 349, 350, 351, 352, 353, 354, 355, 356, 357, 358, 359, 360, 361, 362, 363, 364, 365, 366, 367, 368, 369, 370, 371, 372, 373, 374, 375, 376, 377, 378, 379, 380, 381, 382, 383, 384, 385, 386, 387, 388, 389, 390, 391, 392, 393, 394, 395, 396, 397, 398, 399, 400, 401, 402, 403, 404, 405, 406, 407, 408, 409, 410, 411, 412, 413, 414, 415, 416, 417, 418, 419, 420, 421, 422, 423, 424, 425, 426, 427, 428, 429, 430, 431, 432, 433, 434, 435, 436, 437, 438, 439, 440, 441, 442, 443, 444, 445, 446, 447, 448, 449, 450, 451, 452, 453, 454, 455, 456, 457, 458, 459, 460, 461, 462, 463, 464, 465, 466, 467, 468, 469, 470, 471, 472, 473, 474, 475, 476, 477, 478, 479, 480, 481, 482, 483, 484, 485, 486, 487, 488, 489, 490, 491, 492, 493, 494, 495, 496, 497, 498, 499, 500, 501, 502, 503, 504, 505, 506, 507, 508, 509, 510, 511, 512, 513, 514, 515, 516, 517, 518, 519, 520, 521, 522, 523, 524, 525, 526, 527, 528, 529, 530, 531, 532, 533, 534, 535, 536, 537, 538, 539, 540, 541, 542, 543, 544, 545, 546, 547, 548, 549, 550, 551, 552, 553, 554, 555, 556, 557, 558, 559, 560, 561, 562, 563, 564, 565, 566, 567, 568, 569, 570, 571, 572, 573, 574, 575, 576, 577, 578, 579, 580, 581, 582, 583, 584, 585, 586, 587, 588, 589, 590, 591, 592, 593, 594, 595, 596, 597, 598, 599, 600, 601, 602, 603, 604, 605, 606, 607, 608, 609, 610, 611, 612, 613, 614, 615, 616, 617, 618, 619, 620, 621, 622, 623, 624, 625, 626, 627, 628, 629, 630, 631, 632, 633, 634, 635, 636, 637, 638, 639, 640, 641, 642, 643, 644, 645, 646, 647, 648, 649, 650, 651, 652, 653, 654, 655, 656, 657, 658, 659, 660, 661, 662, 663, 664, 665, 666, 667, 668, 669, 670, 671, 672, 673, 674, 675, 676, 677, 678, 679, 680, 681, 682, 683, 684, 685, 686, 687, 688, 689, 690, 691, 692, 693, 694, 695, 696, 697, 698, 699, 700, 701, 702, 703, 704, 705, 706, 707, 708, 709, 710, 711, 712, 713, 714, 715, 716, 717, 718, 719, 720, 721, 722, 723, 724, 725, 726, 727, 728, 729, 730, 731, 732, 733, 734, 735, 736, 737, 738, 739, 740, 741, 742, 743, 744, 745, 746, 747, 748, 749, 750, 751, 752, 753, 754, 755, 756, 757, 758, 759, 760, 761, 762, 763, 764, 765, 766, 767, 768, 769, 770, 771, 772, 773, 774, 775, 776, 777, 778, 779, 780, 781, 782, 783, 784, 785, 786, 787, 788, 789, 790, 791, 792, 793, 794, 795, 796, 797, 798, 799, 800, 801, 802, 803, 804, 805, 806, 807, 808, 809, 810, 811, 812, 813, 814, 815, 816, 817, 818, 819, 820, 821, 822, 823, 824, 825, 826, 827, 828, 829, 830, 831

0232	C1
0250	B1
0251	B2
0252	B2
0253	A2
0254	C2
0255	C2
0261	B2
2171	B2
2172	B2
2173	B1
2174	A1
2176	C1
2177	C1
2178	C1
2179	C1
3150	B1
3151	A1
3152	B2
3153	B1
3155	A1
3156	C2
3157	C2
6161	A1
9152	B1
9153	B1
9155	B2


TOP control panel (RF)

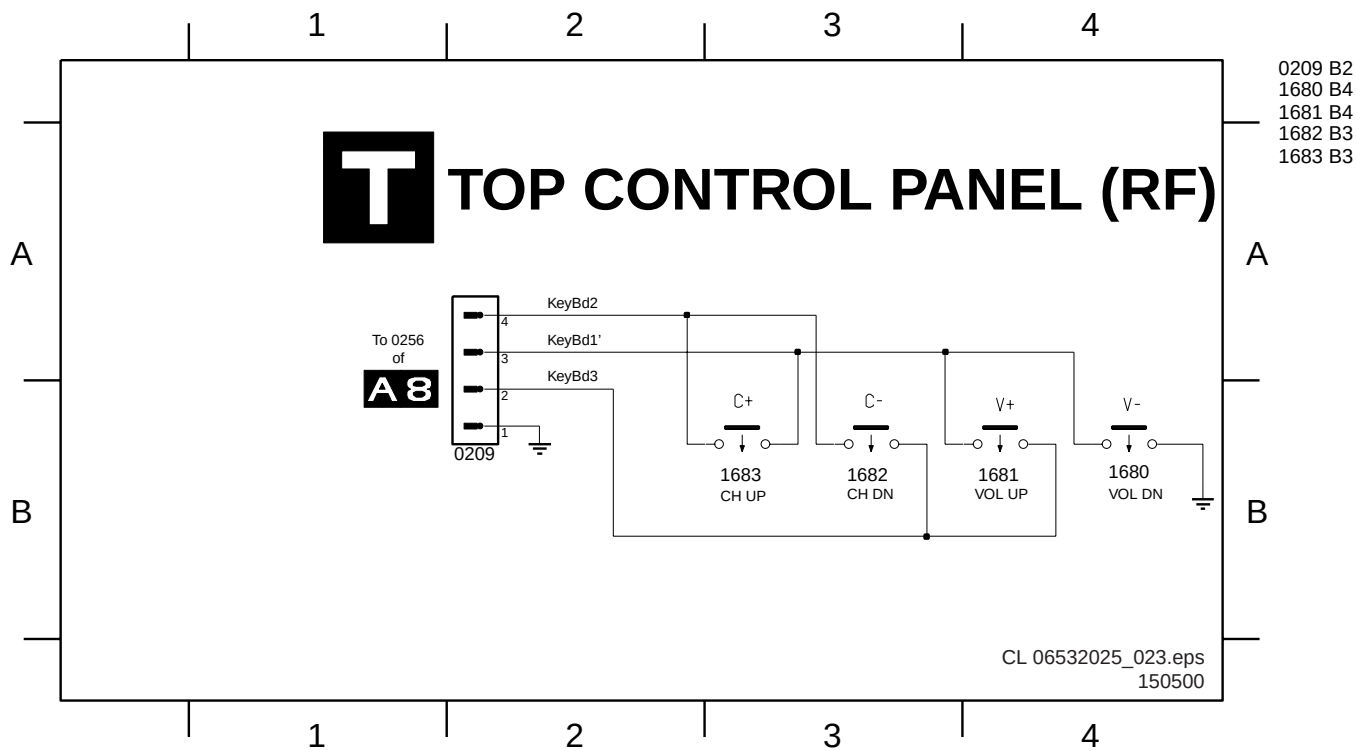


TOP control panel (RF)

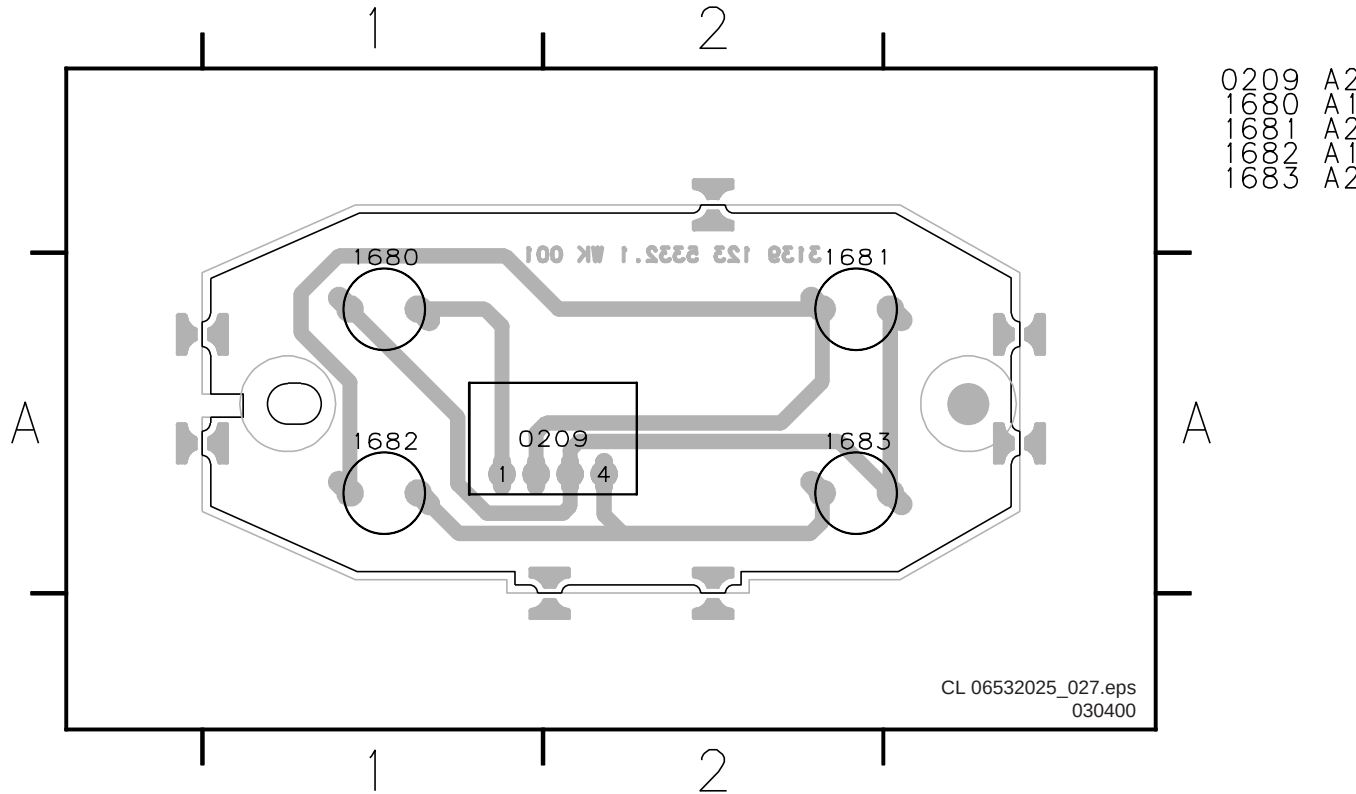

TOP control panel (FSQ)

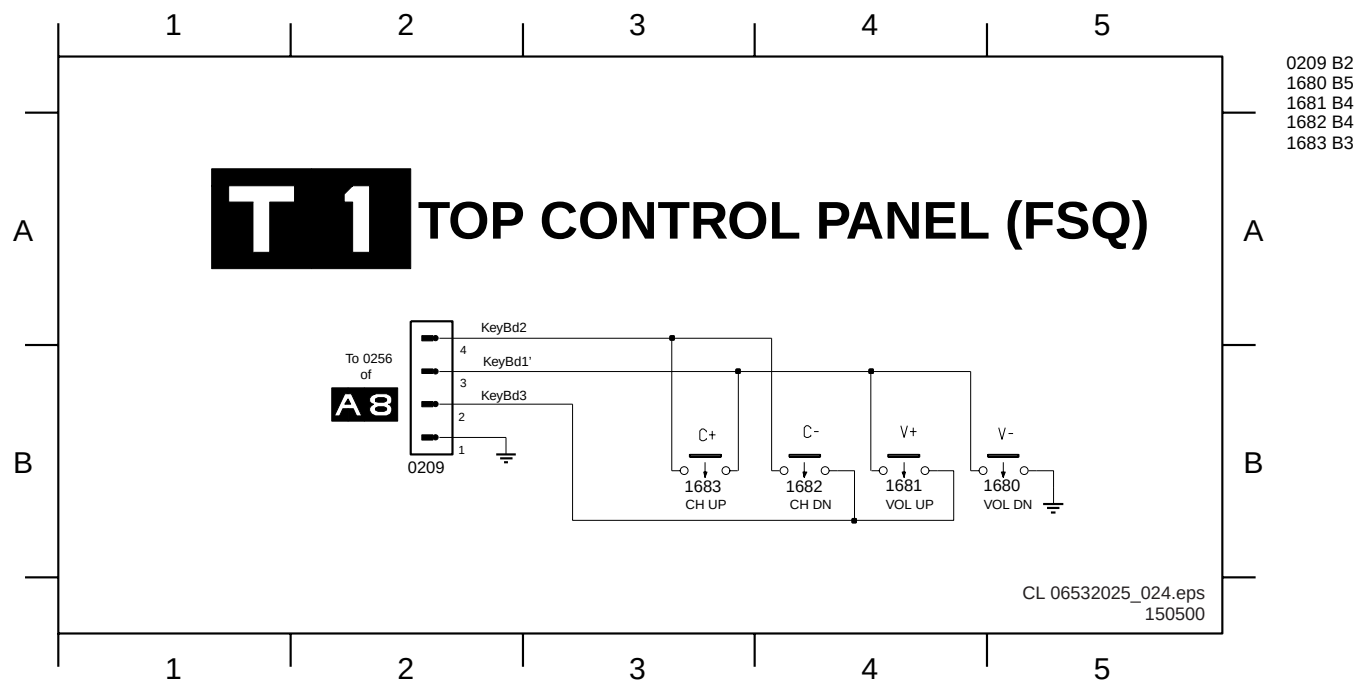



TOP control panel (FSQ)

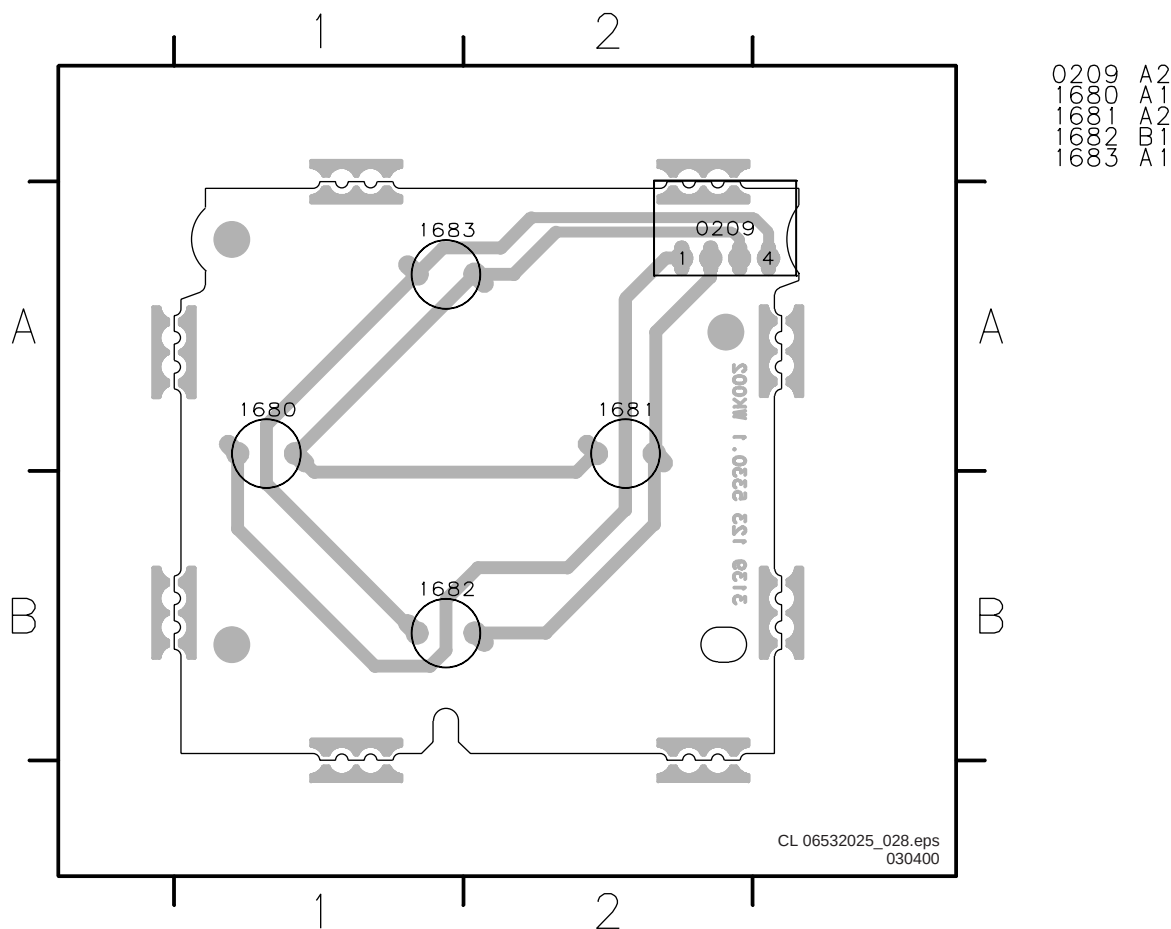



Spare parts list

[E] Side AV Panel				
Various				
0021▲	3139 124 33221	Side AV Bracket		
0232▲	4822 267 31014	Headphone Socket		
0250	4822 265 11606	3P YKC21-5599		
0253	4822 267 10735	Conn. 3P		
0254	4822 267 10734	Conn. 5P		
0255	4822 267 10565	Conn. 4P		
0261	2422 025 12482	Conn. 6P		
— —				
2171	4822 126 13512	330pF 10% 50V		
2172	4822 126 13512	330pF 10% 50V		
2173	4822 126 13512	330pF 10% 50V		
2174	4822 126 13512	330pF 10% 50V		
2176	4822 126 13512	330pF 10% 50V		
2177	4822 124 40207	100μF 20% 25V		
2178	4822 126 13512	330pF 10% 50V		
2179	4822 124 40207	100μF 20% 25V		
—□—				
3150	4822 050 21003	10k 1% 0.6W		
3151	4822 116 52303	8k2 5% 0.5W		
3152	4822 050 21003	10k 1% 0.6W		
3153	4822 116 52303	8k2 5% 0.5W		
3155	4822 116 52201	75Ω 5% 0.5W		
3156	4822 116 52219	330Ω 5% 0.5W		
3157	4822 116 52219	330Ω 5% 0.5W		
→ ←				
6161	4822 130 34278	BZX79-B6V8		
[T] Top Control Panel (RF)				
Various				
0011	3139 137 66921	Top Control Button		
0013	3139 124 30381	Top Control Bracket		
0158	3139 110 38741	Cable 4P 820mm		
0209	4822 267 10567	Conn. 4P		
1680	4822 276 13775	Switch		
1681	4822 276 13775	Switch		
1682	4822 276 13775	Switch		
1683	4822 276 13775	Switch		
[T1] Top Control Panel (FSQ)				
Various				
0011	3139 137 76961	Top Control Assy		
0158	3139 110 38741	Cable 4P 820mm		
0209	4822 267 10567	Conn. 4P		
0310	3139 124 26992	Top Control Bracket		
1680	4822 276 13775	Switch		
1681	4822 276 13775	Switch		
1682	4822 276 13775	Switch		
1683	4822 276 13775	Switch		

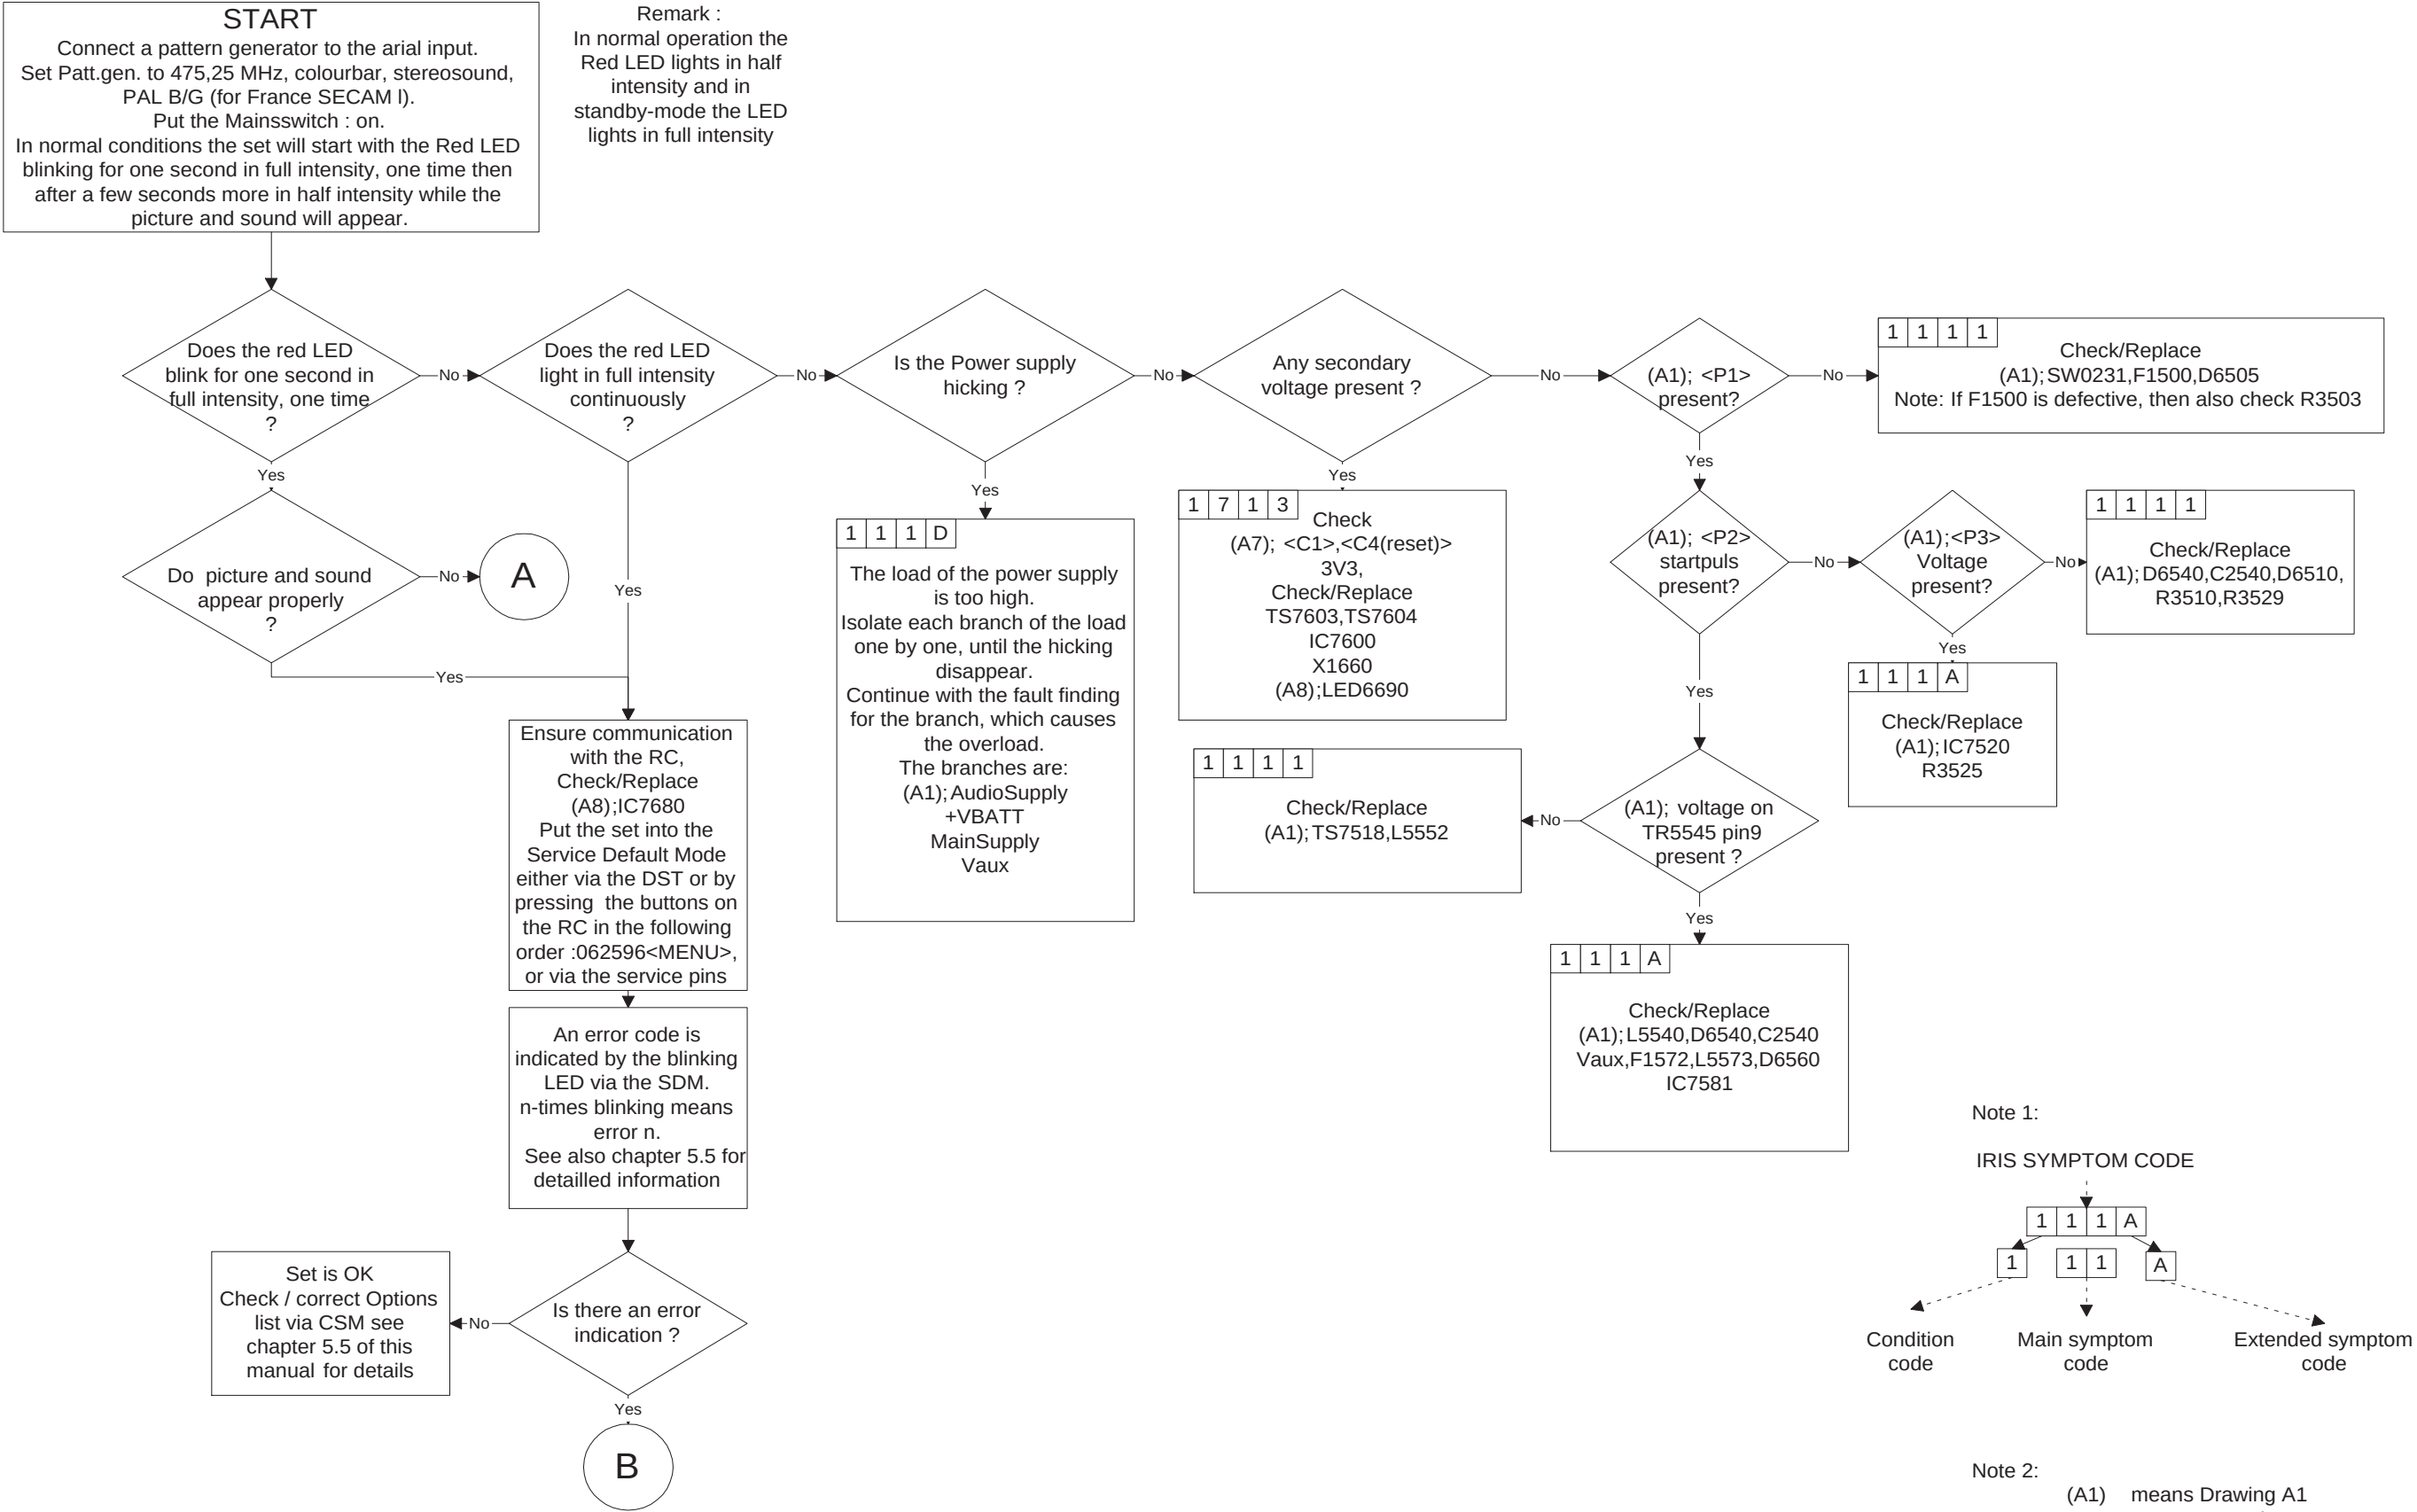


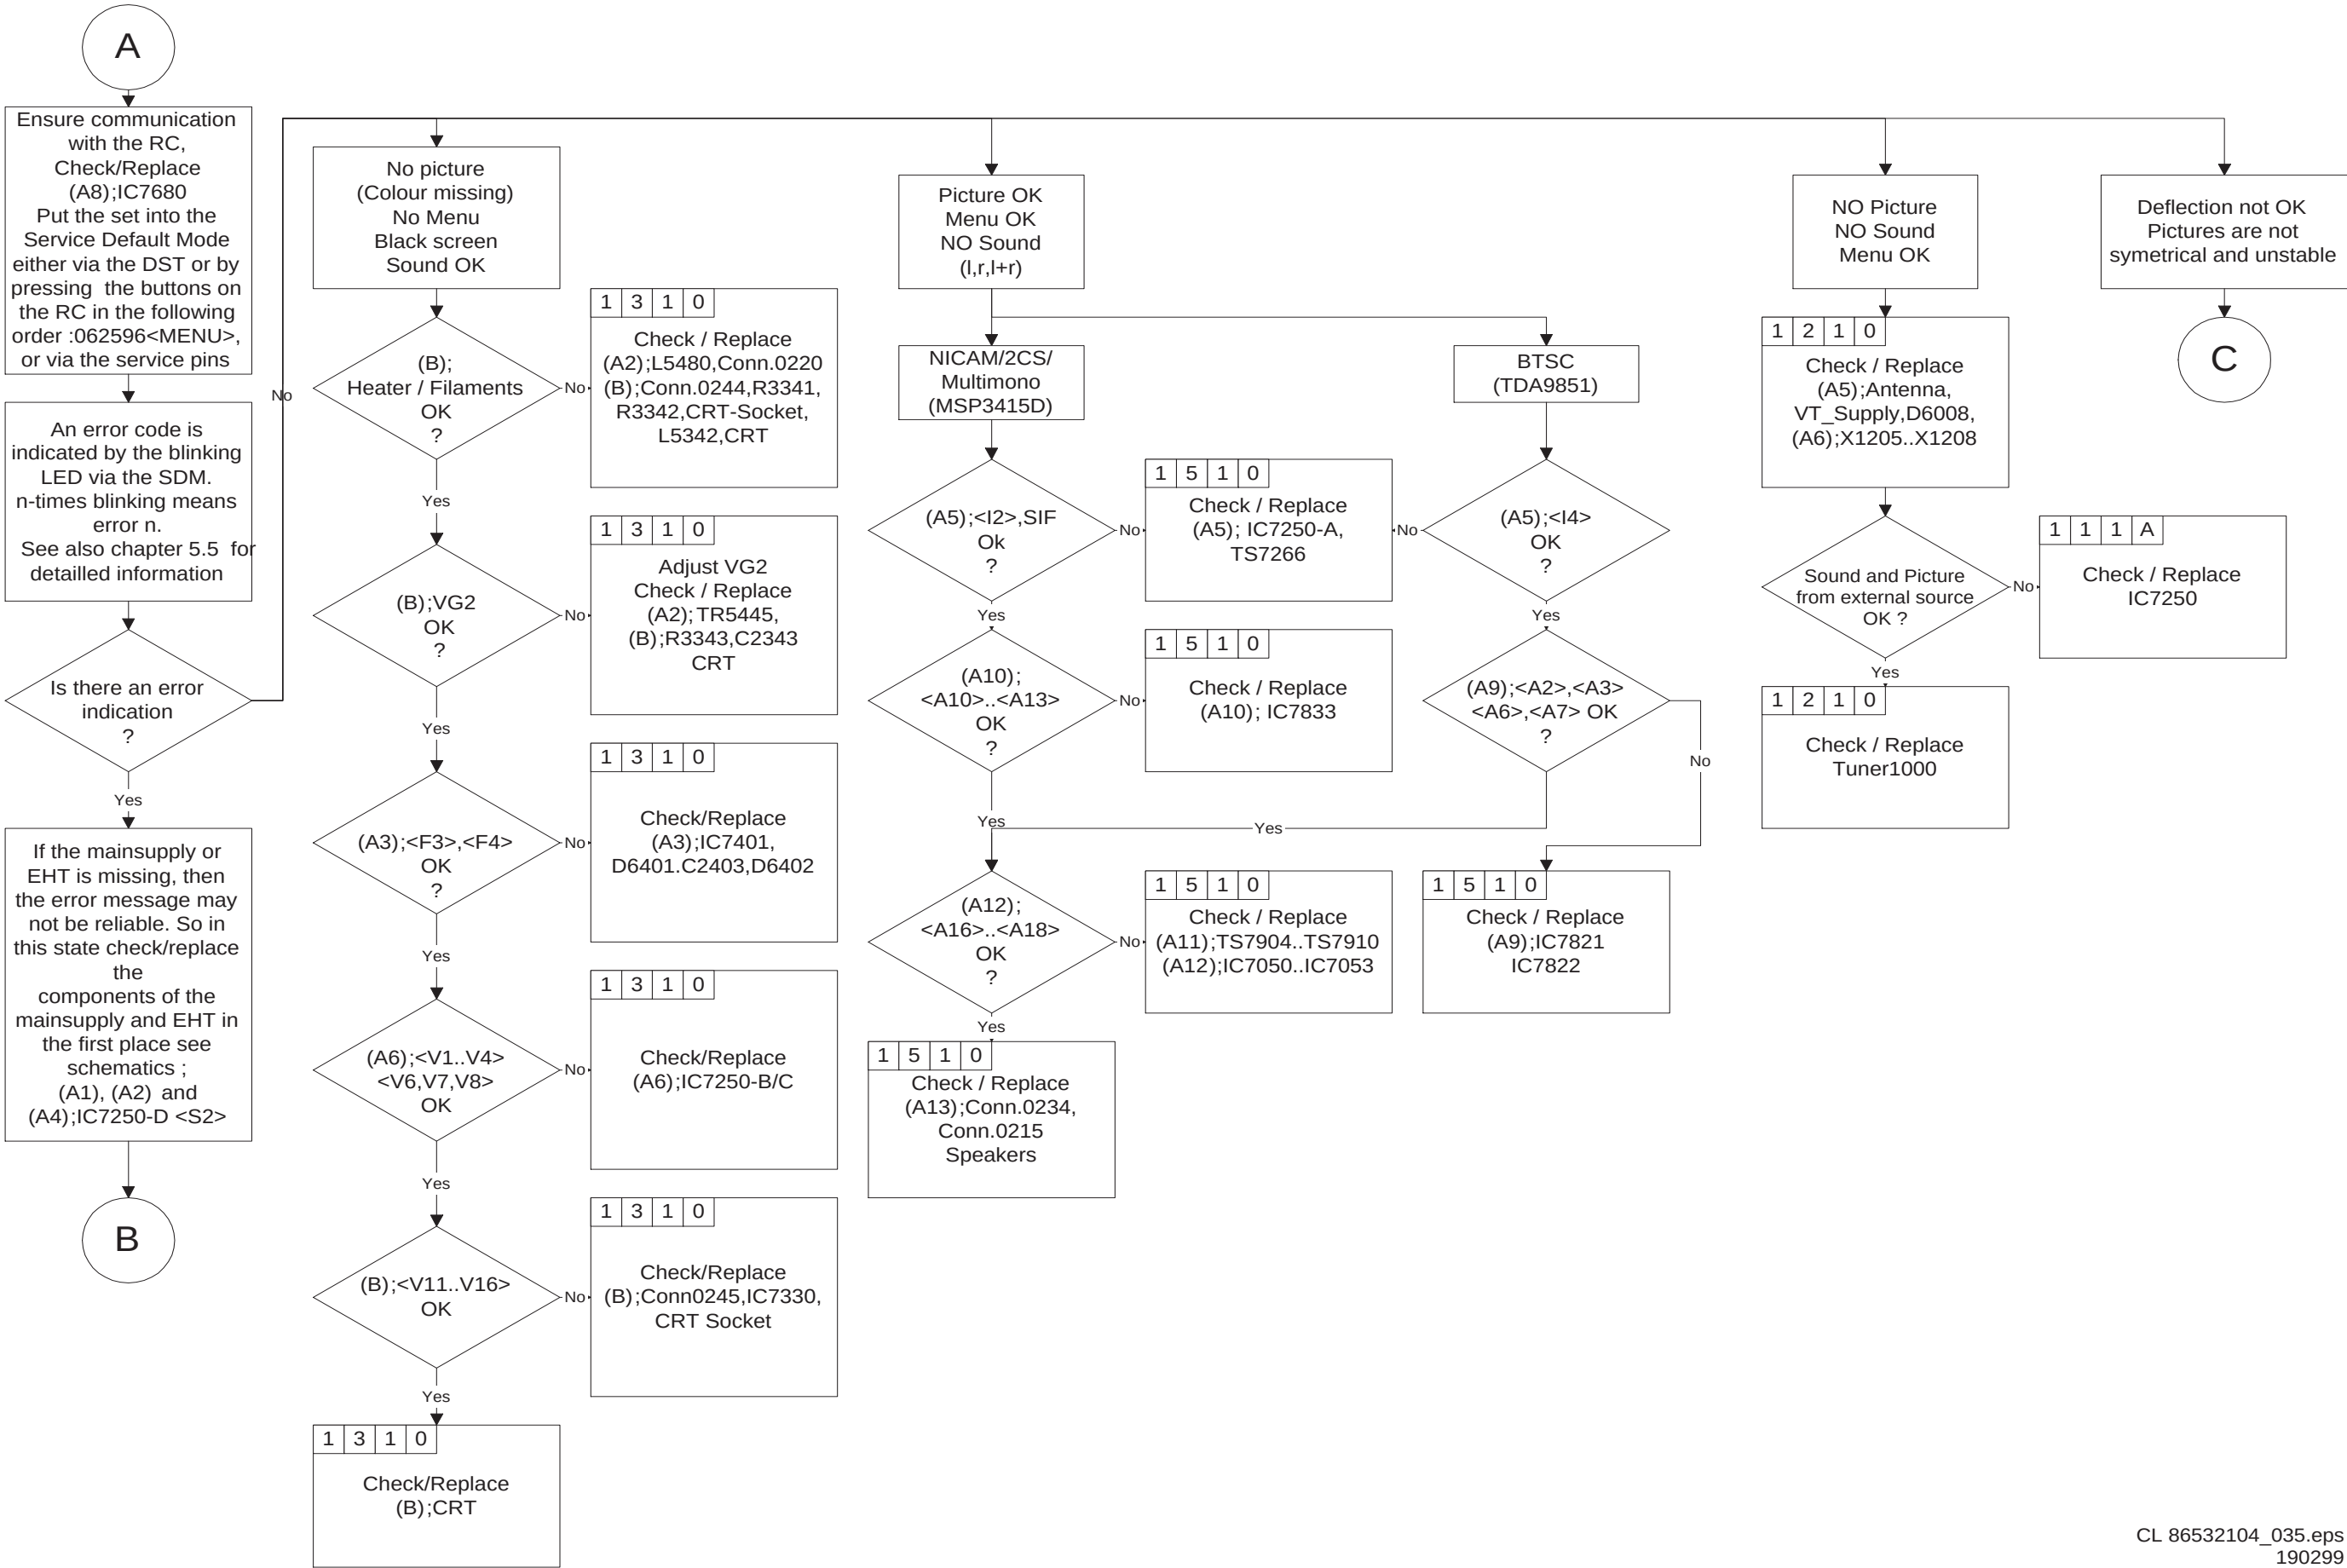

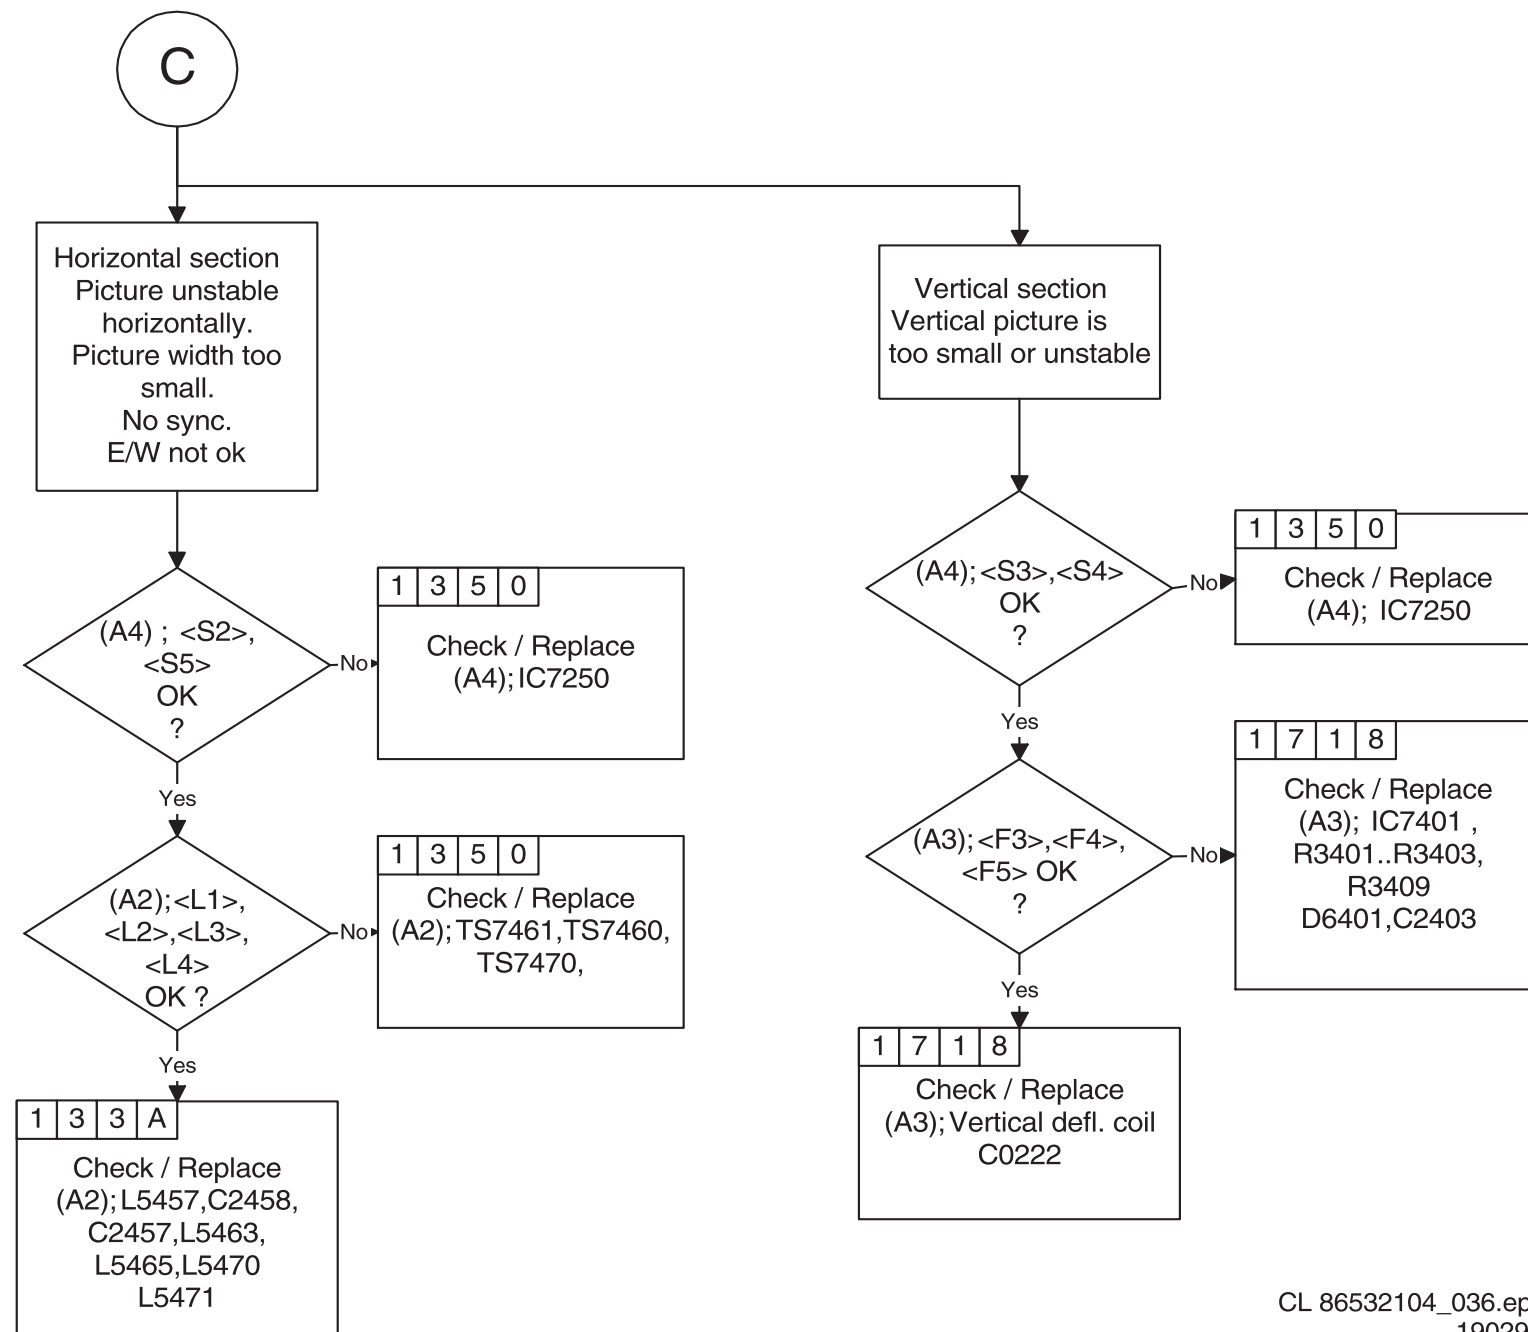

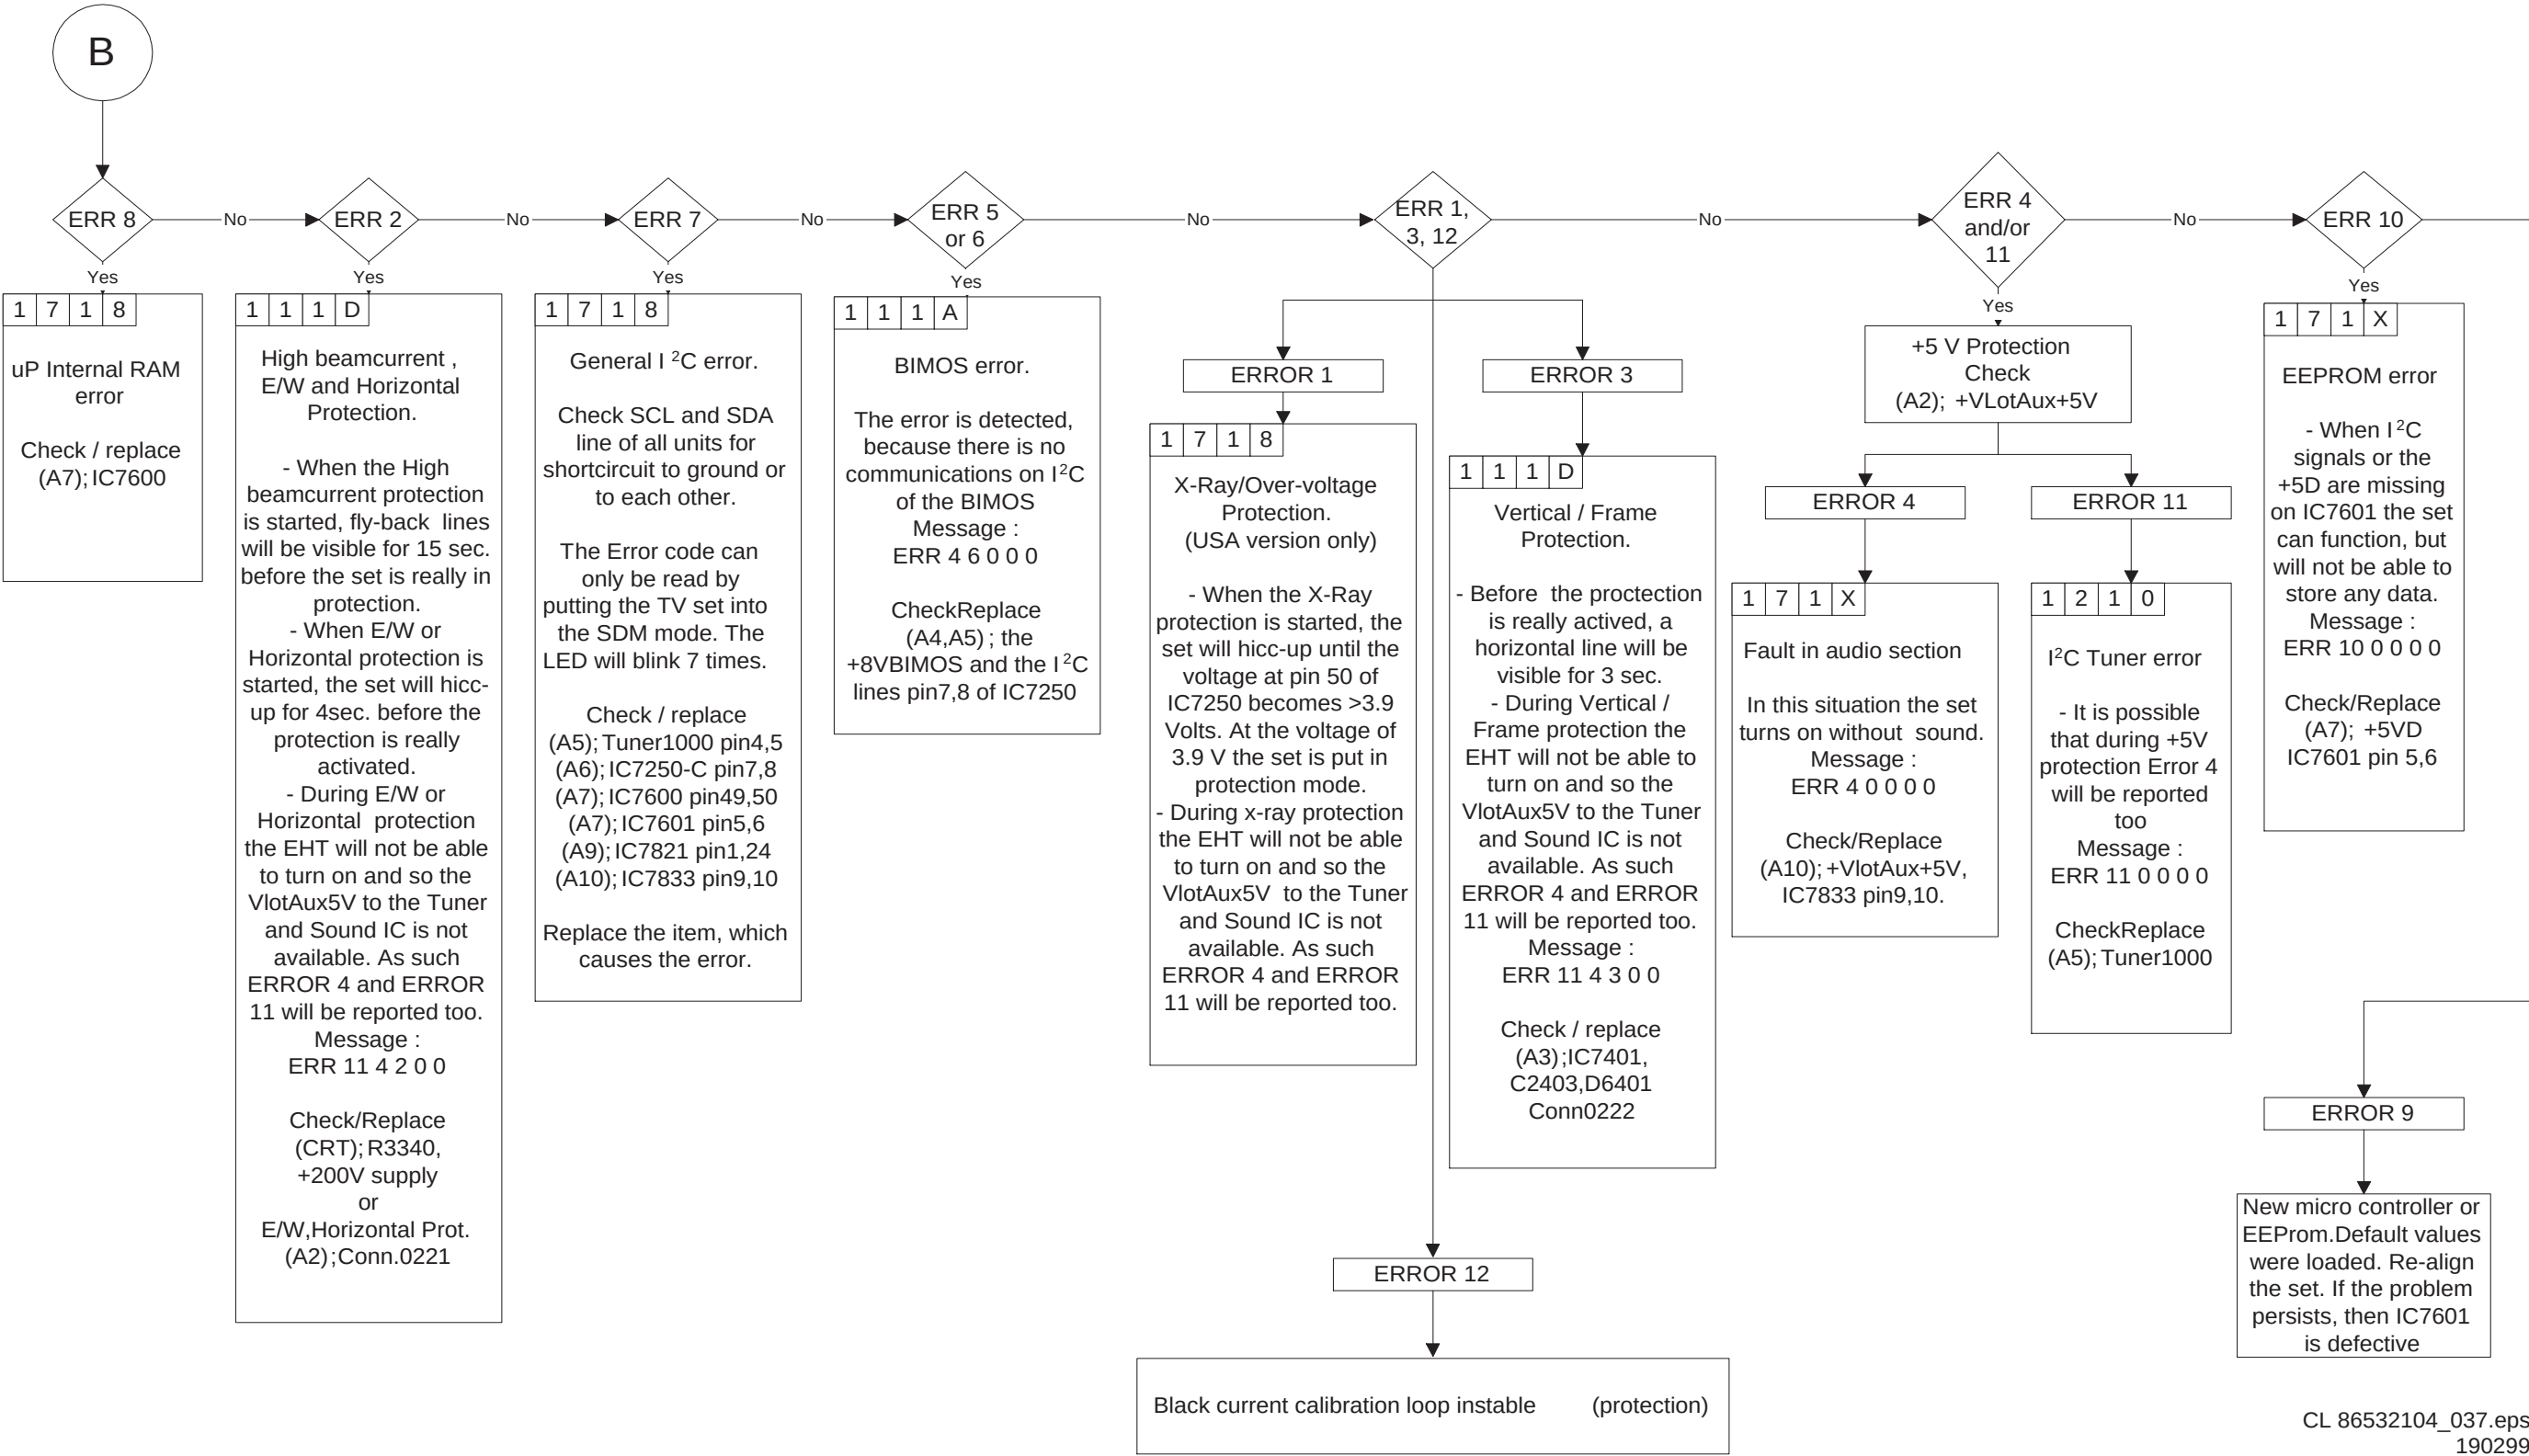


21


 



6 Fault finding trees, diagrams and overviews

L9.1E

22

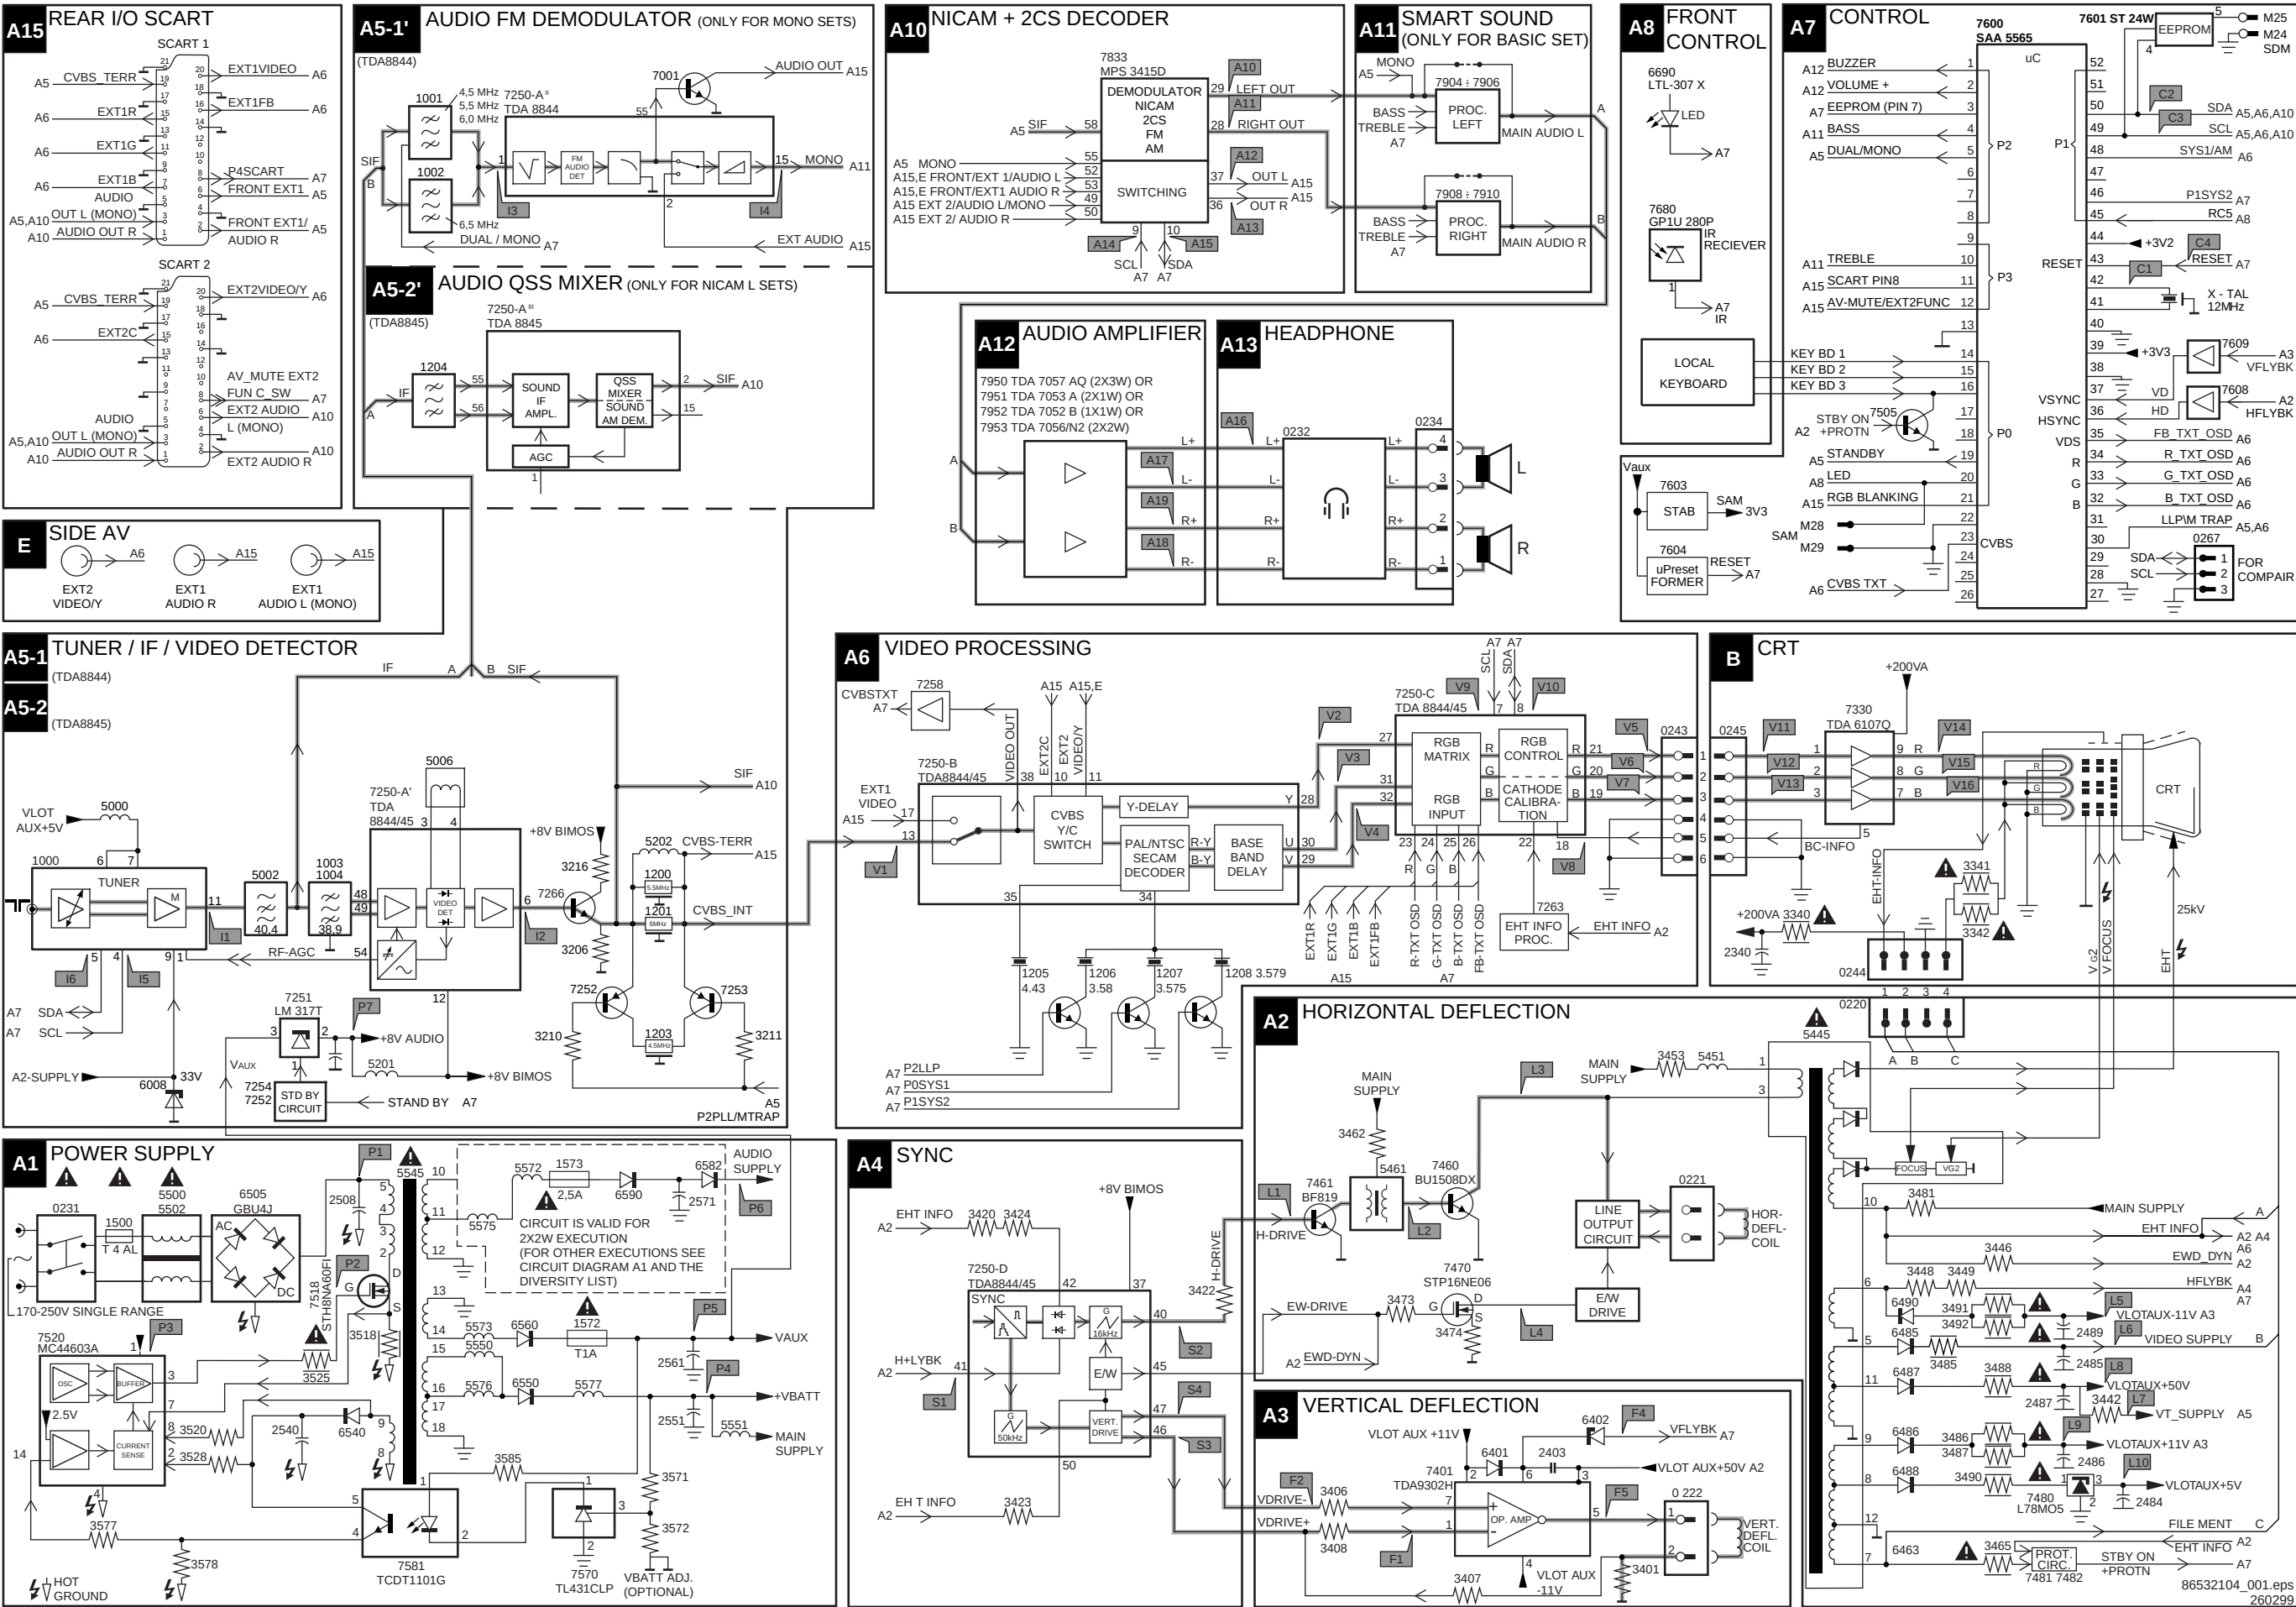

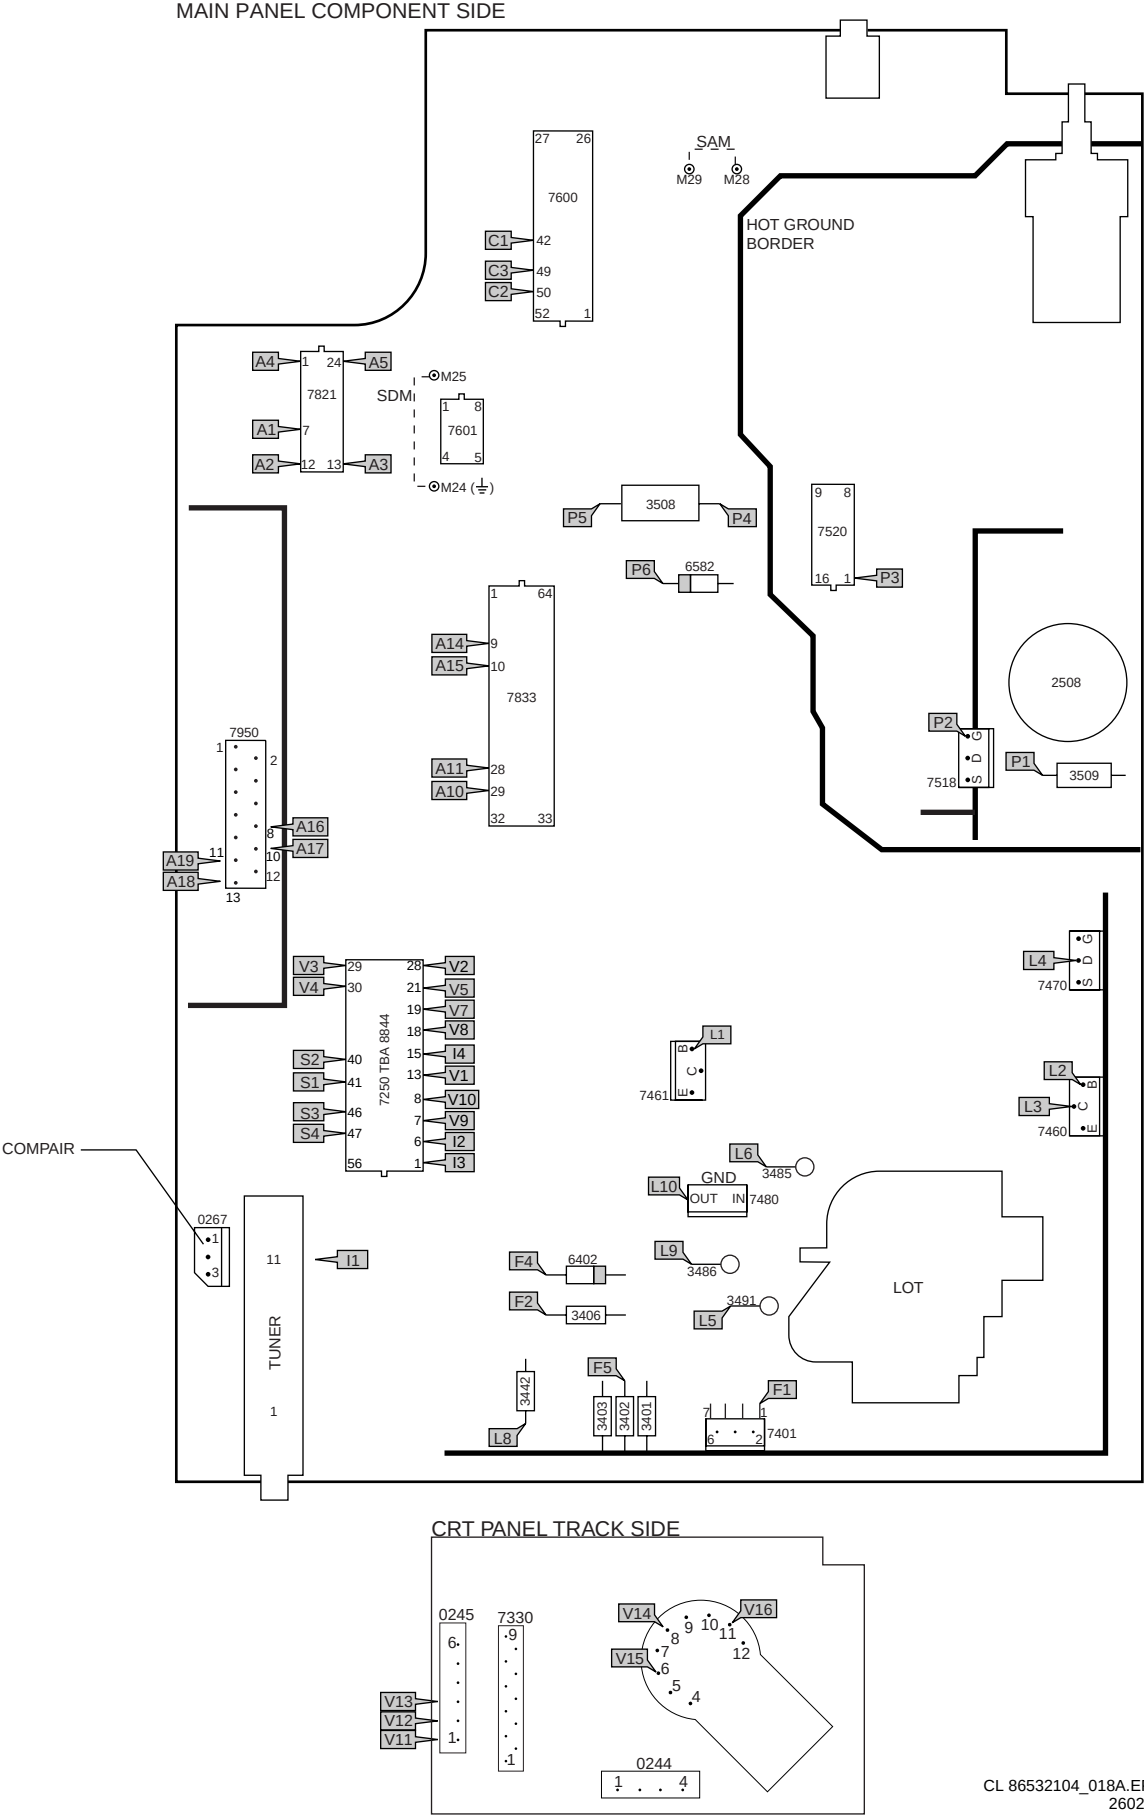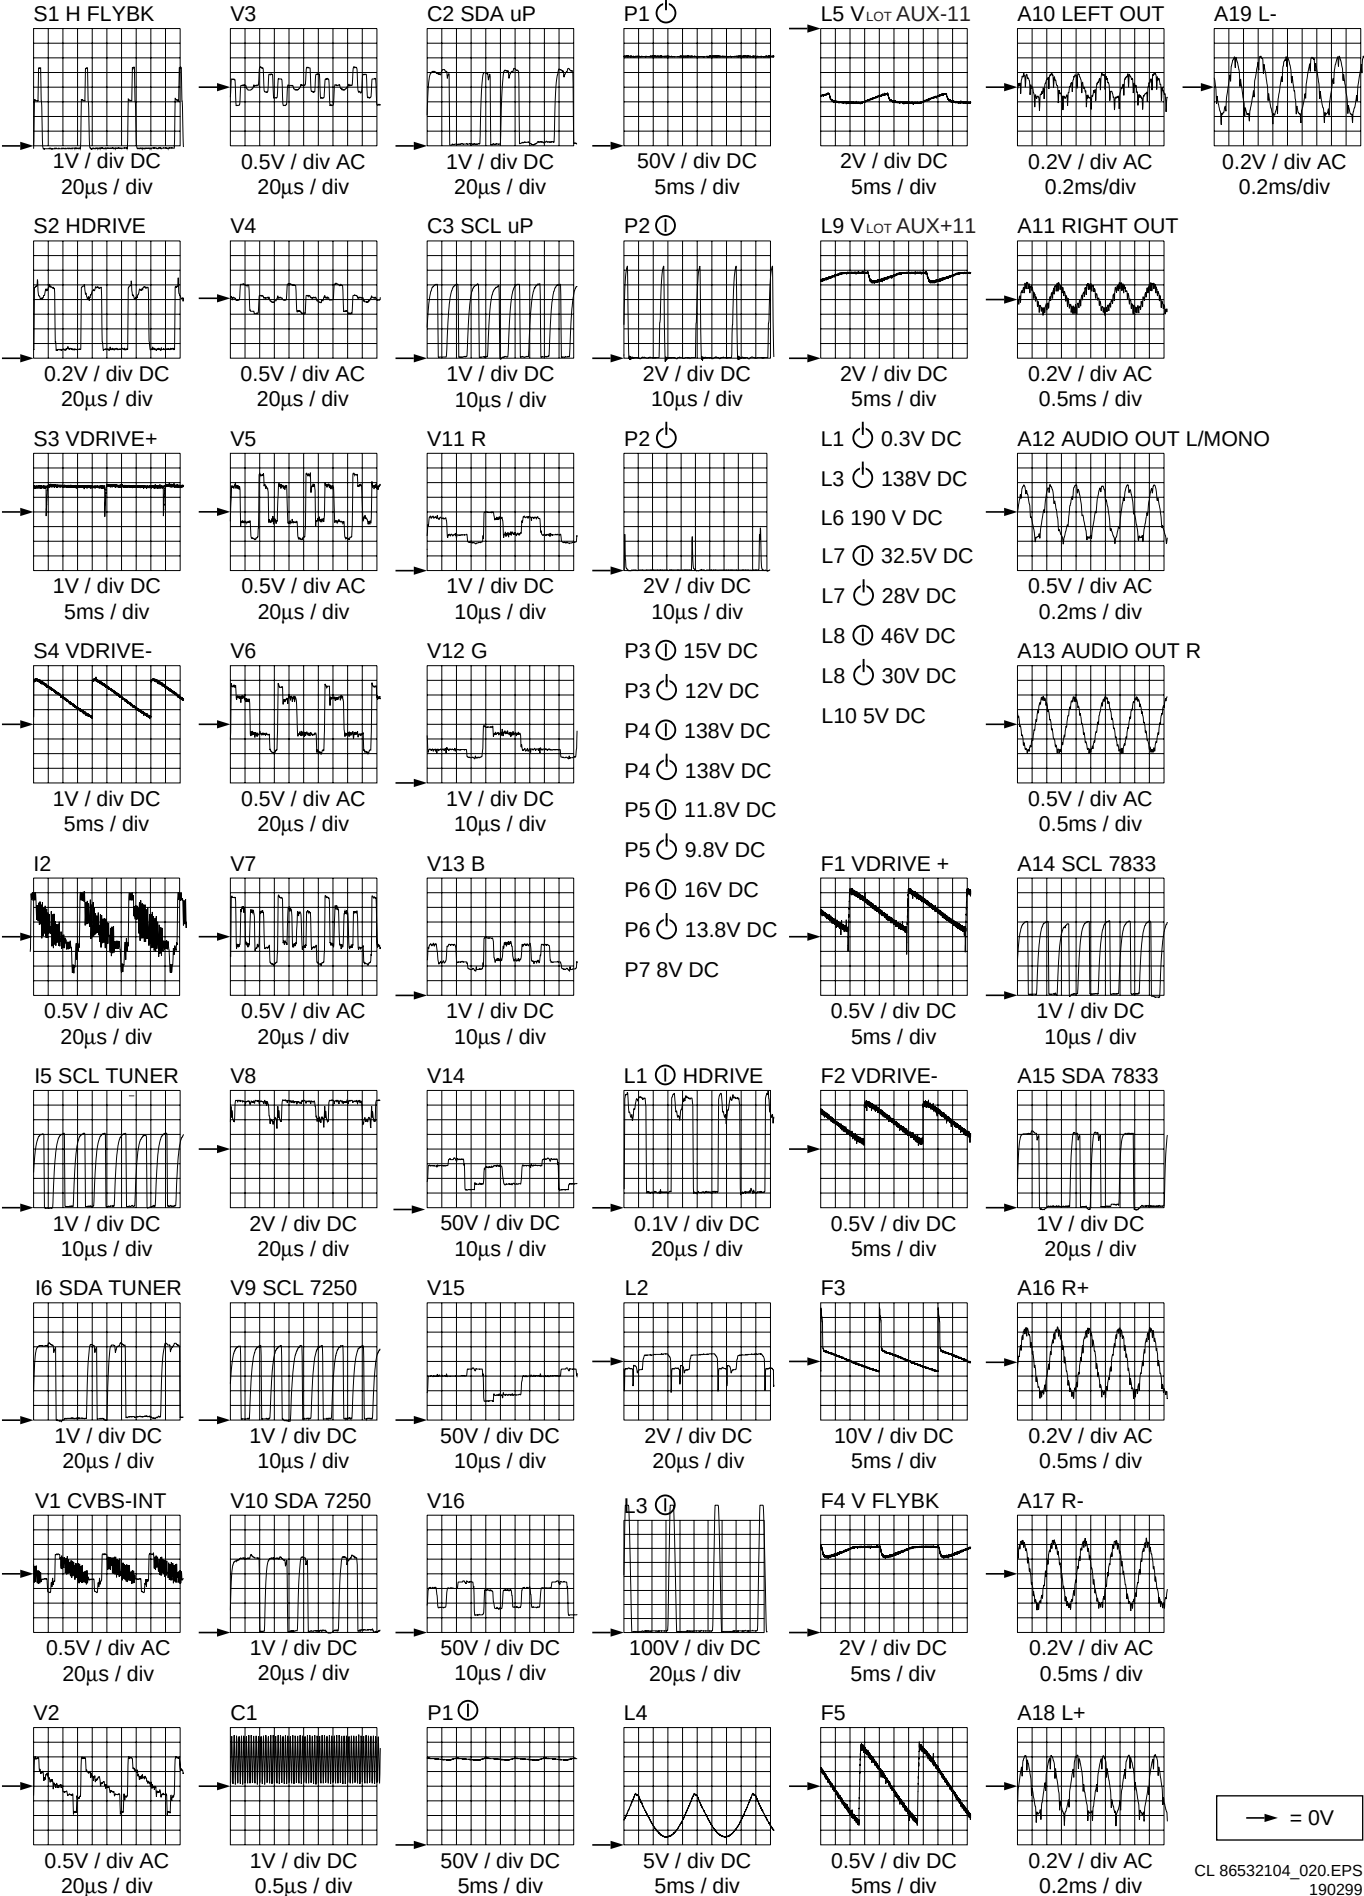

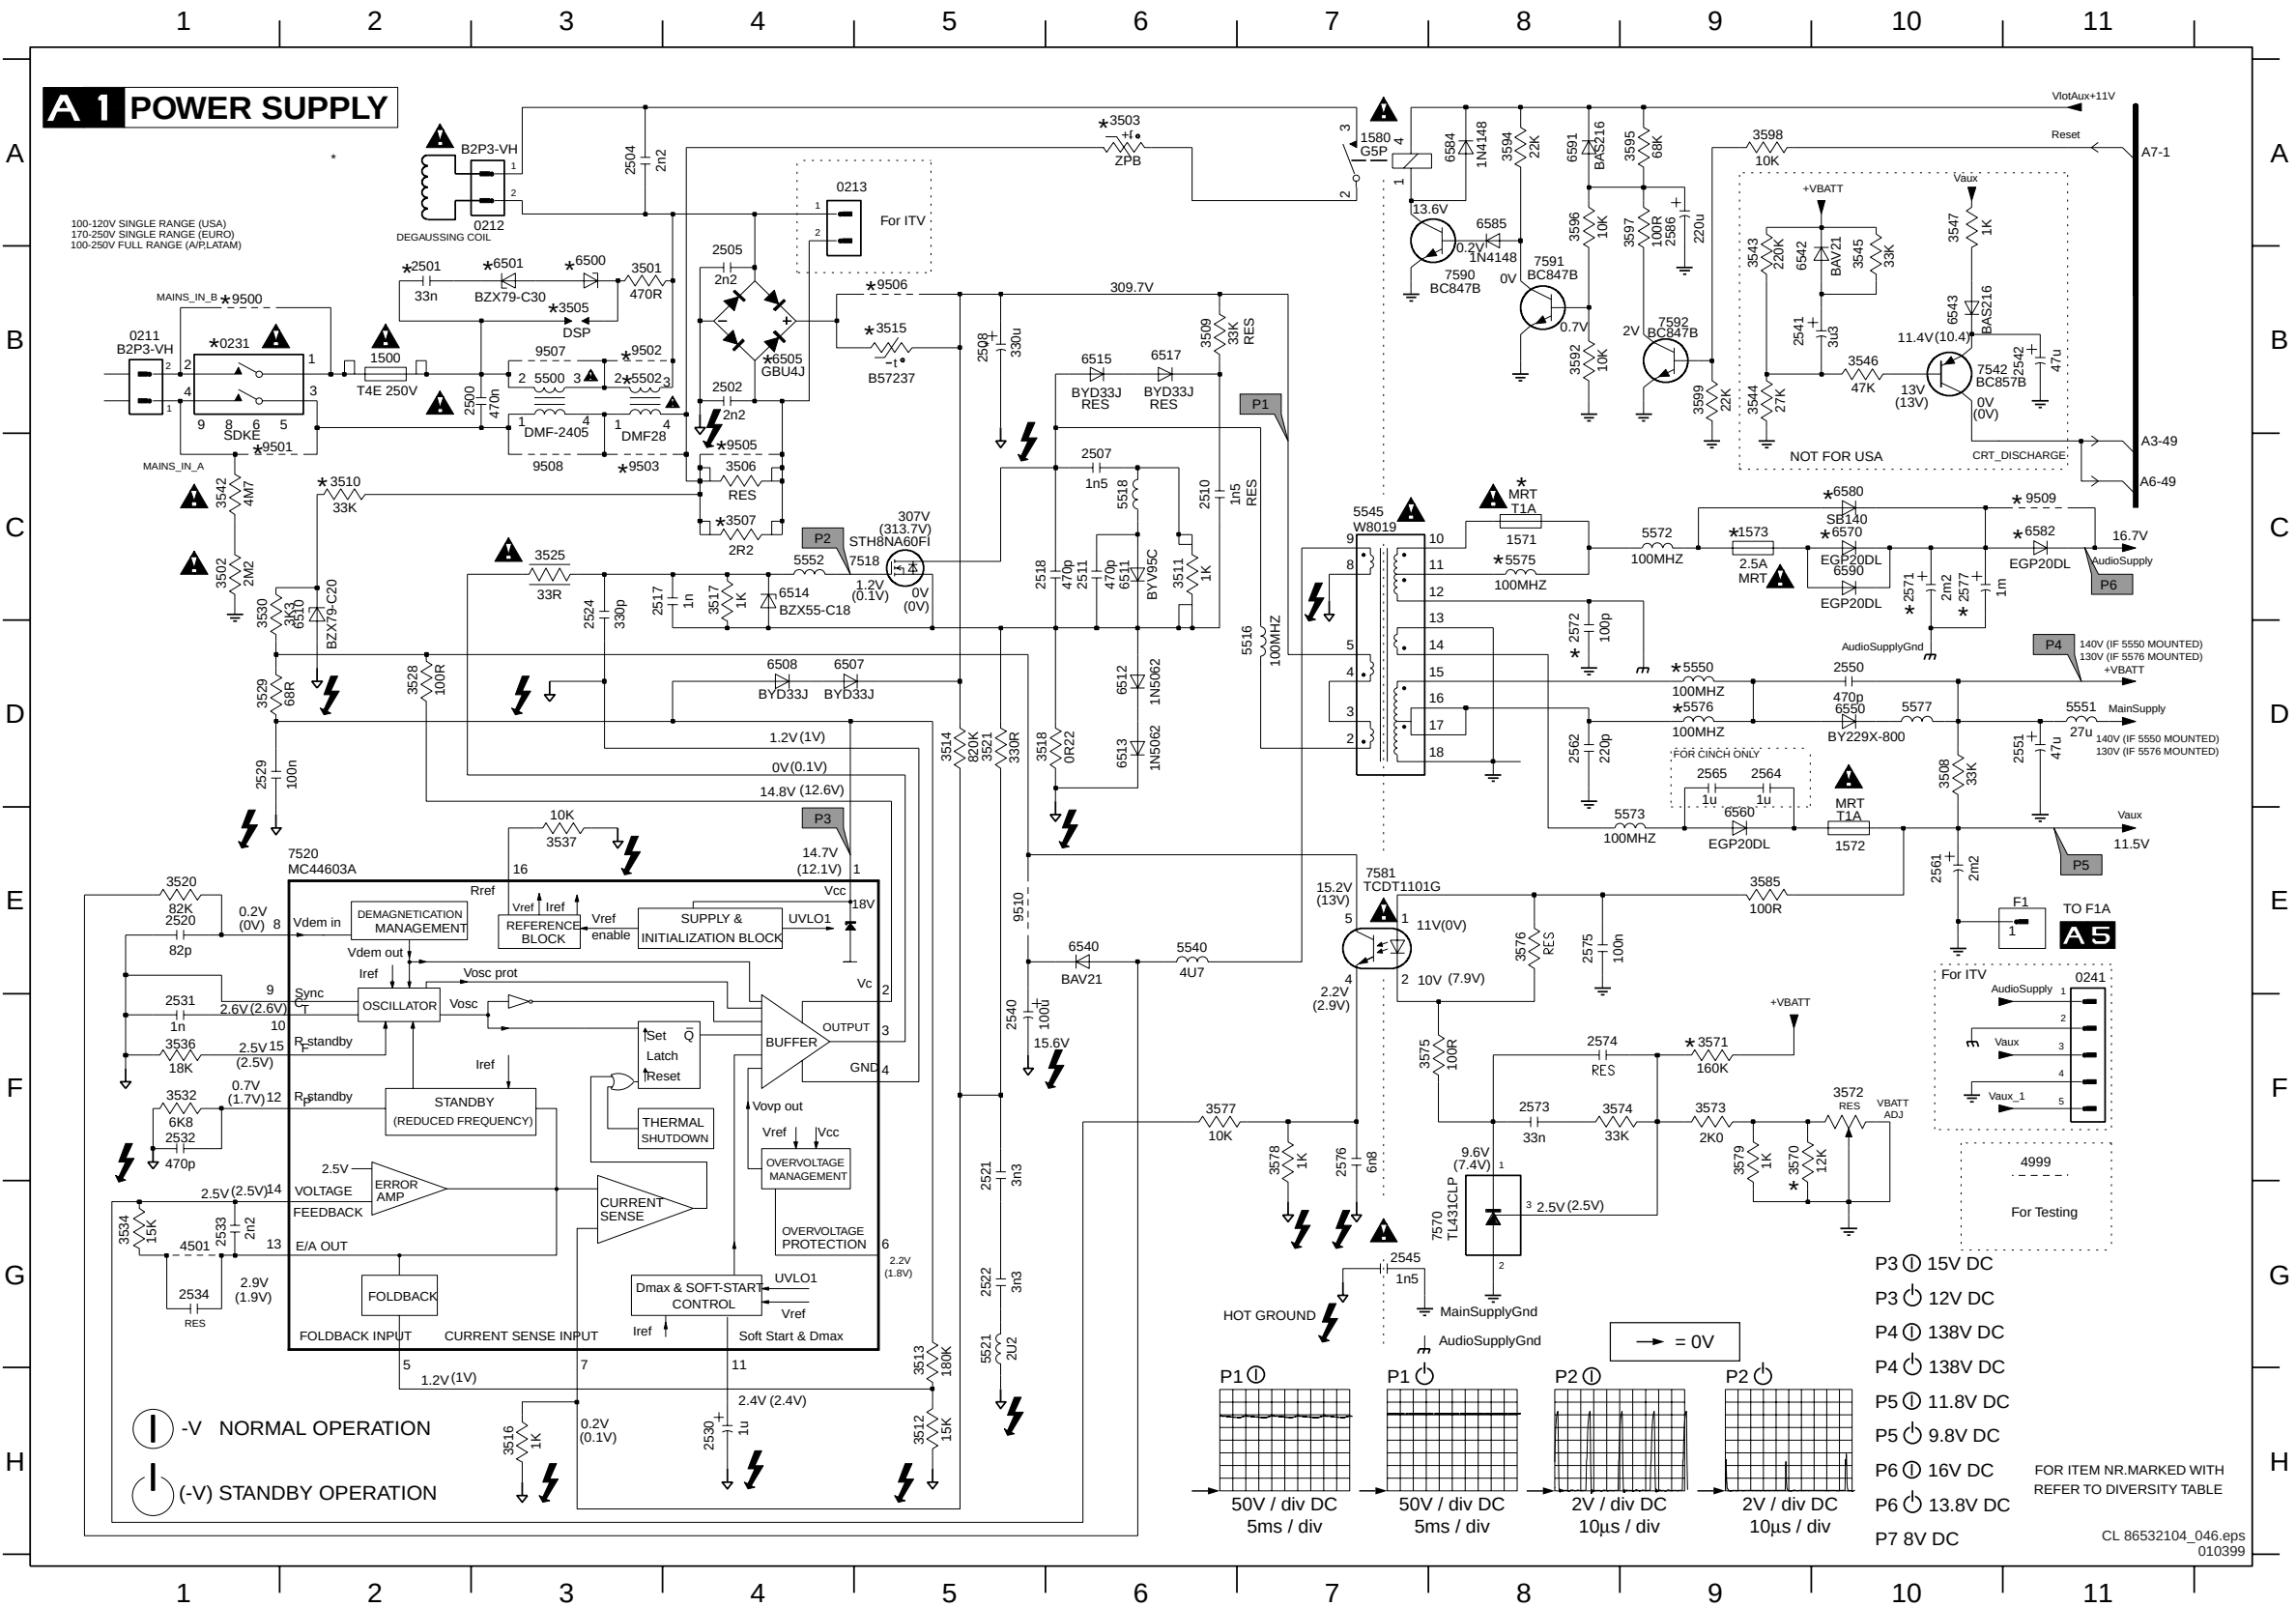


F1 E11	3596 A8
0211 B1	3597 A9
0212 A3	3598 A9
0213 A4	3599 B9
0231 B1	4501 G1
0241 E11	4999 F11
1500 B2	5500 B3
1571 C8	5502 B3
1572 E10	5516 D7
1573 C9	5518 C6
1580 A7	5521 G5
2500 B3	5540 E6
2501 B2	5545 C7
2502 B4	5550 D9
2504 A3	5551 D11
2505 A4	5552 C4
2507 C6	5572 C9
2508 B5	5573 E9
2510 C6	5575 C8
2511 C6	5576 D9
2517 C3	5577 D10
2518 C5	6500 B3
2520 E1	6501 B3
2521 F5	6505 B4
2522 G5	6507 D4
2524 C3	6508 D4
2529 D1	6510 C2
2530 H4	6511 C6
2531 F1	6512 D6
2532 F1	6513 D6
2533 G1	6514 C4
2534 G1	6515 B6
2540 F5	6517 B6
2541 B9	6540 E6
2542 B11	6542 B9
2545 G7	6543 B10
2550 D10	6550 D10
2551 D11	6560 D9
2561 E10	6570 C10
2562 D8	6580 C10
2564 D9	6582 C11
2565 D9	6584 A8
2571 C10	6585 A8
2572 D8	6590 C10
2573 F8	6591 A8
2574 F8	7518 C4
2575 E8	7520 E2
2576 F7	7542 B10
2577 C10	7570 G8
2586 A9	7581 E7
3501 B3	7590 B8
3502 C1	7591 B8
3503 A6	7592 B9
3505 B3	9500 B1
3506 C4	9501 C1
3507 C4	9502 B3
3508 D10	9503 C3
3509 B6	9505 C4
3510 C2	9506 B5
3511 C6	9507 B3
3512 H5	9508 C3
3513 G5	9509 C11
3514 D5	9510 E5
3515 B5	
3516 H3	
3517 C4	
3518 D6	
3520 E1	
3521 D5	
3525 C3	
3528 D2	
3529 D1	
3530 C1	
3532 F1	
3534 G1	
3536 F1	
3537 E3	
3542 C1	
3543 B9	
3544 B9	
3545 B10	
3546 B10	
3547 A10	
3570 F9	
3571 F9	
3572 F10	
3573 F9	
3574 F8	
3575 F8	
3576 E8	
3577 F6	
3578 F7	
3579 F9	
3585 E9	
3592 B8	
3594 A8	
3595 A9	


	1	2	3	4	5	6	7	8	9	10	11															
A	DIVERSITY TABLE FOR POWER SUPPLY												DIVERSITY TABLE FOR HORIZONTAL DEFLECTION						A							
	DIVERSITY TABLE FOR ALL ITEM NO. MARKED WITH *											DIVERSITY TABLE FOR ALL ITEM NO. MARKED WITH *														
	ITEM	FR_CIS 25I/29I AP	LR USA	FR_NONCIS AP	HR 25I/29I EUROPE	HR_CIS 25I/29I AP	PS_FR_US	PS_FR_LA	HR 25I/29I CHINA	PS_FR NONCIS IND	ITV	140V VBATT	130V VBATT	2X3w/5w AUDIO	2X1w AUDIO	1X1w AUDIO	2X2w AUDIO	INDIA SVBW006ER	ITEM	PHILIPS TUBE 25"/28" BLD EAST-WEST	HUA FEI TUBE 25" EAST-WEST	PHILIPS TUBE 25"/28" BLS EAST-WEST	PHILIPS TUBE 25V (26") NO EAST-WEST	PHILIPS TUBE 27V (29") NO EAST-WEST	PHILIPS TUBE 27V (29") EAST-WEST	
B	0231	YES	---	YES	YES	YES	---	YES	YES	---	YES	---	---	---	---	---	---	---	---	2451	15n	15n	15n	15n	15n	15n/ 12n China
	1571	---	---	---	---	---	---	---	---	---	---	---	---	---	T1.0A	T1.0A	---	---	---	2457	390n	390n	390n	390n	390n	360n
	1573	---	---	---	---	---	---	---	---	---	---	---	---	T2.5A	---	---	T2.5A	T2.5A	---	2463	1n	1n	820p	470p	680p	820p/1n China
	2501	---	---	YES	---	---	---	YES	---	YES	---	---	---	---	---	---	---	---	---	2464	---	---	---	---	---	2u2
	2508	330/400V	470/200V	330/400V	220/400V	220/400V	330/400V	330/400V	220/450V	330/450V	220/400V	---	---	---	---	---	---	---	---	2465	9n1	9n1	9n1	10n	10n	10n
	2561	3300u	1000u	3300u	3300u	3300u	1000u	3300u	3300u	3300u	---	---	---	---	---	---	---	---	---	2466	10n	10n	10n	---	---	---
	2571	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	2467	---	---	---	---	---	22n
	2572	---	330p	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	2468	18n	18n	18n	---	---	33n
	2577	---	---	---	---	---	---	---	---	---	---	---	---	---	---	1000/16V	1000/16V	---	---	2470	470p	470p	470p	---	---	470p
	3503	220V/9R	110V/10R	220V/9R	220V/9R	220V/9R	220V/9R	220V/9R	220V/9R	---	220V/9R	---	---	---	---	---	---	---	---	2471	470n	470n	470n	---	---	---
C	3505	YES	YES	---	YES	YES	YES	---	YES	---	---	---	---	---	---	---	---	---	---	2472	2u2	2u2	2u2	---	---	2u2
	3507	---	---	---	2R2/5w	2R2/5w	---	---	2R2/5w	---	2R2/5w	---	---	---	---	---	---	---	---	2473	47u	47u	47u	---	---	47u
	3510	33K/3w	33K/3w	33K/3w	68K/3w	68K/3w	33K/3w	33K/3w	68K/3w	33K/3w	---	---	---	---	---	---	---	---	---	2475	560n	560n	510n	---	---	---
	3515	NTC 2R5	NTC 2R5	NTC 2R5	---	---	NTC 2R5	NTC 2R5	---	NTC 2R5	---	---	---	---	---	---	---	---	---	425 (A4)	56k	56k	56k	150k	120k	150k
	3570	---	---	---	---	---	---	---	---	---	---	10K	15K	---	---	---	---	---	---	3452	33R	33R	33R	22R	22R	22R
	3571	---	---	---	---	---	---	---	---	---	---	160K	150K	---	---	---	---	---	---	3453	---	---	---	4R7	4R7	---
	5502	DMF2810	---	---	DMF2820	DMF2820	---	---	DMF2820	---	---	---	---	---	---	---	---	---	---	3470	33k	33k	33k	---	---	33k
	5550	---	---	---	---	---	---	---	---	---	---	YES	---	---	---	---	---	---	---	3471	220k	220k	220k	---	---	---
	5575	---	---	---	---	---	---	---	---	---	---	---	---	---	YES	---	---	YES	YES	3472	100k	100k	120k	---	---	82k
	5576	---	---	---	---	---	---	---	---	---	---	---	YES	---	---	---	---	---	---	3473	1k	1k	1k	---	---	1k
D	6500	---	---	BZX79-C30	---	---	---	BZX79-C30	---	BZX79-C30	---	---	---	---	---	---	---	---	---	3474	3R3	3R3	3R3	---	---	4R7
	6501	---	---	BZX79-C30	---	---	---	BZX79-C30	---	BZX79-C30	---	---	---	---	---	---	---	---	---	3475	3R3	3R3	3R3	---	---	4R7
	6505	GBU6JL	GBU6JL	GBU6JL	GBU4JL	GBU4JL	GBU6JL	GBU6JL	GBU4JL	GBU6JL	---	---	---	---	---	---	---	---	---	3477	100R	100R	100R	---	---	100R
	6570	---	---	---	---	---	---	---	---	---	---	---	---	EGP20D	---	---	---	---	---	3479	330R	330R	330R	---	---	330R
	6580	---	---	---	---	---	---	---	---	---	---	---	---	---	SB140	BYV27-200	---	---	---	3481/82	Refer to	part list	videococontrol	Depends on	country.	---
	6582	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	5445	242253102325	312813820681	242253102324	242253102326	242253102326	242253102326
	6590	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	USA:242253102327	China:312813820691	312813820691	---
	9500	---	YES	---	---	---	YES	---	---	---	---	---	---	---	---	---	---	---	---	5451	33uH	33uH	33uH	27uH	27uH	27uH
	9501	---	YES	---	---	---	YES	---	---	---	---	---	---	---	---	---	---	---	---	5457	312813853111	312813853111	312813853111	312813853241	312813853241	312813853241
	9502	---	YES	YES	---	---	YES	YES	---	YES	---	---	---	---	---	---	---	---	---	5463	---	---	---	---	---	312813834021
E	9503	---	YES	YES	---	---	YES	YES	---	YES	---	---	---	---	---	---	---	---	---	5465	312813834011	312813834011	312813834011	---	---	---
	9505	YES	YES	YES	---	---	YES	YES	---	YES	---	---	---	---	---	---	---	---	---	5470	311233830531	311233830531	311233830531	---	---	---
	9506	---	---	---	YES	YES	---	---	YES	---	YES	---	---	---	---	---	---	---	---	5471	---	---	---	---	---	1mH
	9509	---	---	---	---	---	---	---	---	---	---	---	---	---	YES	YES	---	---	---	5480	33uH	56uH	33uH	27uH	27uH	27uH/47uH China
																			6461	BYW95C/20	BYW95C/20	BYW95C/20	---	---	BYW95C/20	
																			6470	BZX79-C9V1	BZX79-C9V1	BZX79-C9V1	---	---	BZX79-C9V1	
																			6471	1N4148	1N4148	1N4148	---	---	---	
																			6472	1N4148	1N4148	1N4148	---	---	1N4148	
																			6473	BZX79-C39	BZX79-C39	BZX79-C39	---	---	---	
																			7470	STP16NE	STP16NE	STP16NE	---	---	STP16NE	
F																			9453	YES	YES	YES	---	---	YES	
																			9460	---	---	---	YES	YES	YES	
																			9461	---	---	---	YES	YES	---	
																			9462	YES	YES	YES	---	---	---	
																			9463	---	---	---	---	---	YES	
																			9464	YES	YES	YES	---	---	---	
											</															

7 Electrical diagrams and print lay-outs

L9.1E

 26

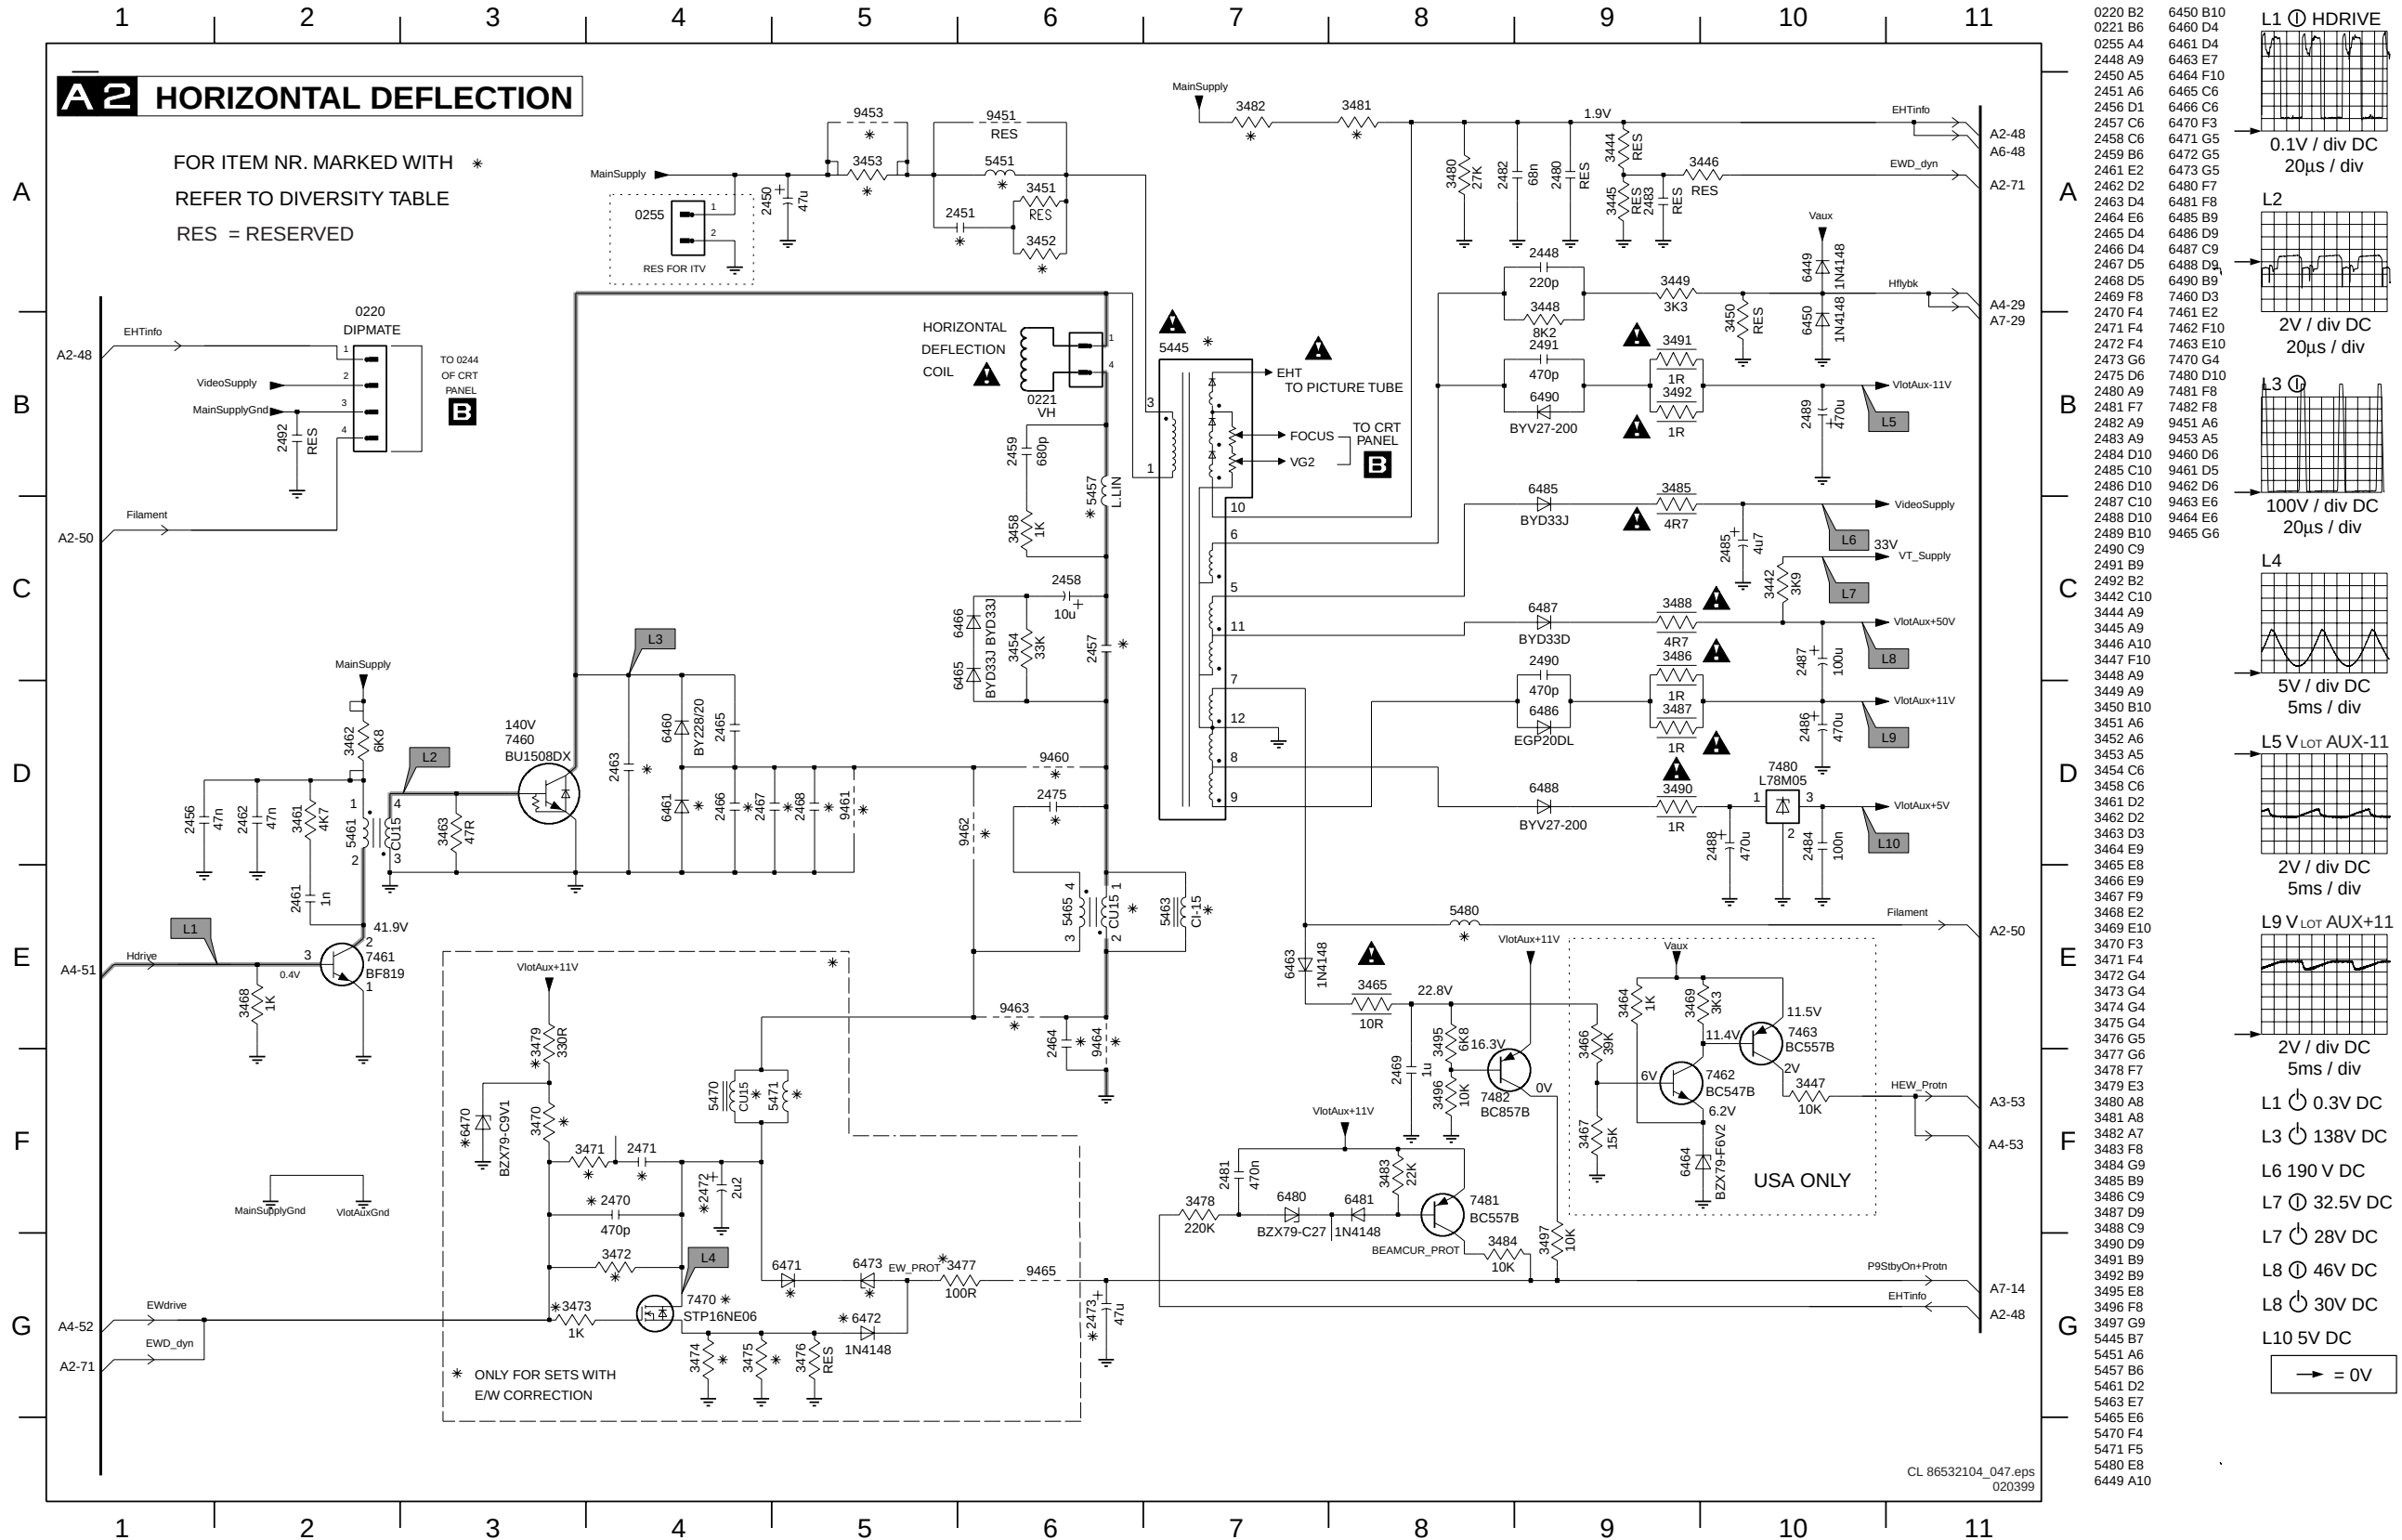





DIVERSITY TABLE FOR ALL ITEM NO. MARKED WITH *		
ITEM	TUBES WITH SADDLE COIL (BLD / BLS / HF)	TUBES WITH TOROID COIL (25V / 27V / NON PH.)
2403	100u	---
2404	---	220n
3405	2k2	1k8
3407	2k2	1k8
6402	BZX79-C18	BZX79-C33
6403	---	BYD33D
6404	---	BYD33D
7401	TDA9302H	STV9379FA
9401	---	YES


7 Electrical diagrams and print lay-outs

L9.1E

28


2228 D4	2426 D1	2430 B3	2438 C4	3420 B1	3423 D4	3426 D1	3431 B4	3437 E3
2420 B2	2428 C1	2431 B3	2440 E3	3421 E3	3424 B2	3428 C1	3432 C4	3438 D3
2421 C4	2429 C1	2437 E3	2441 E2	3422 E3	3425 B2	3429 C1	3436 C4	7250-D B2

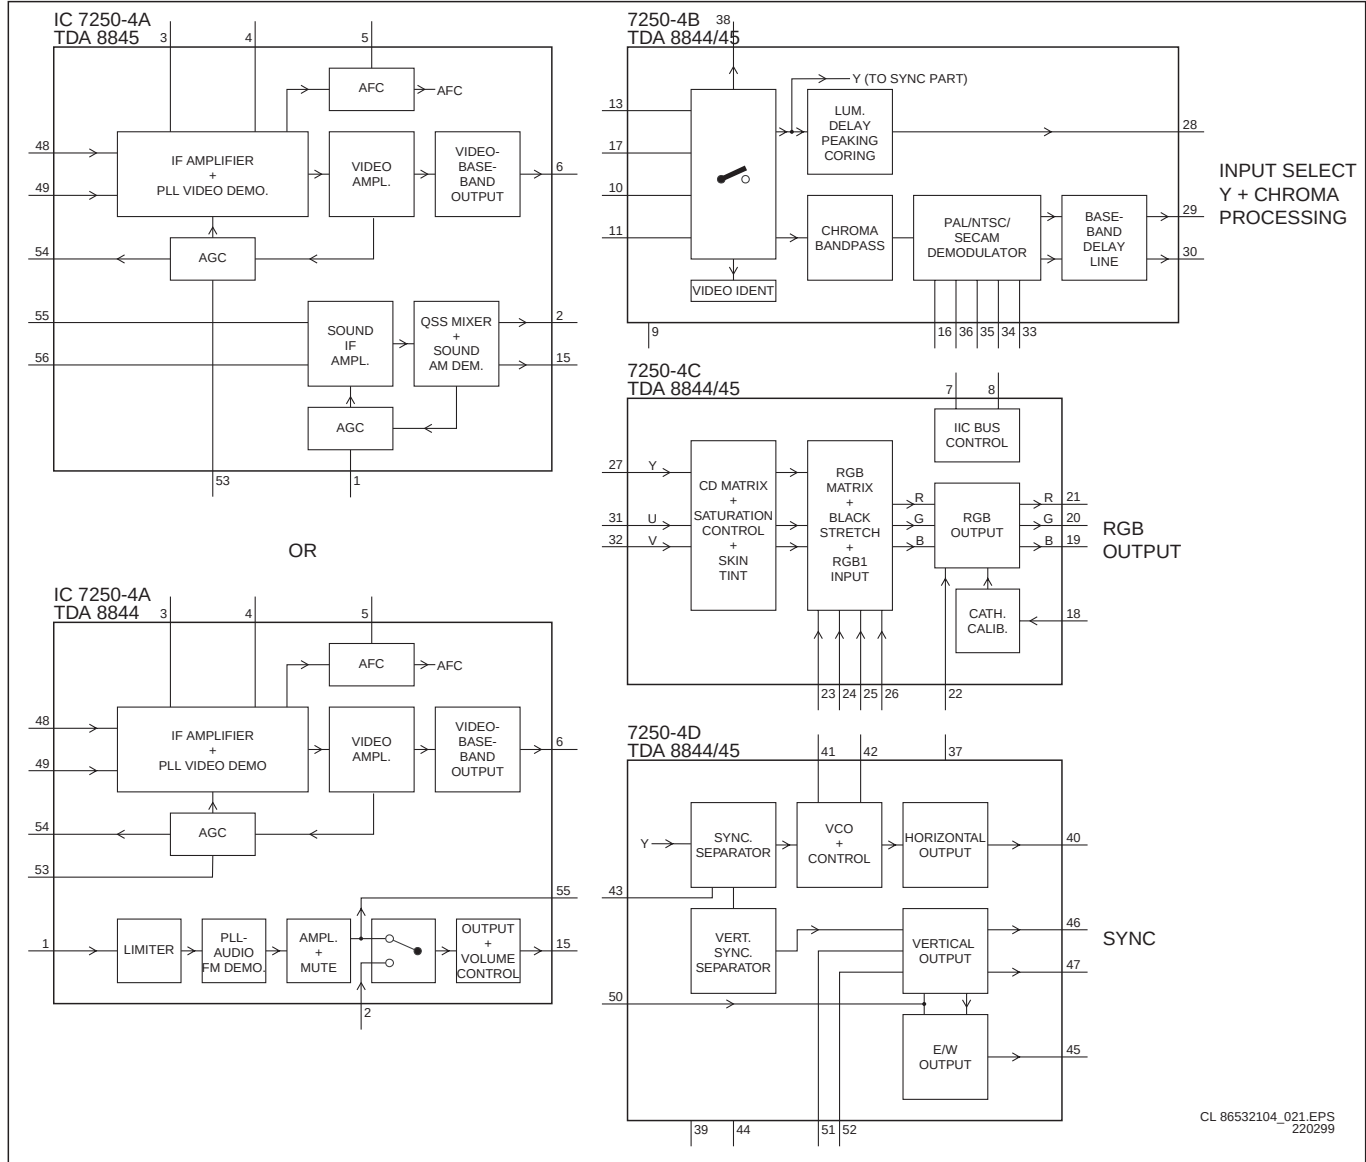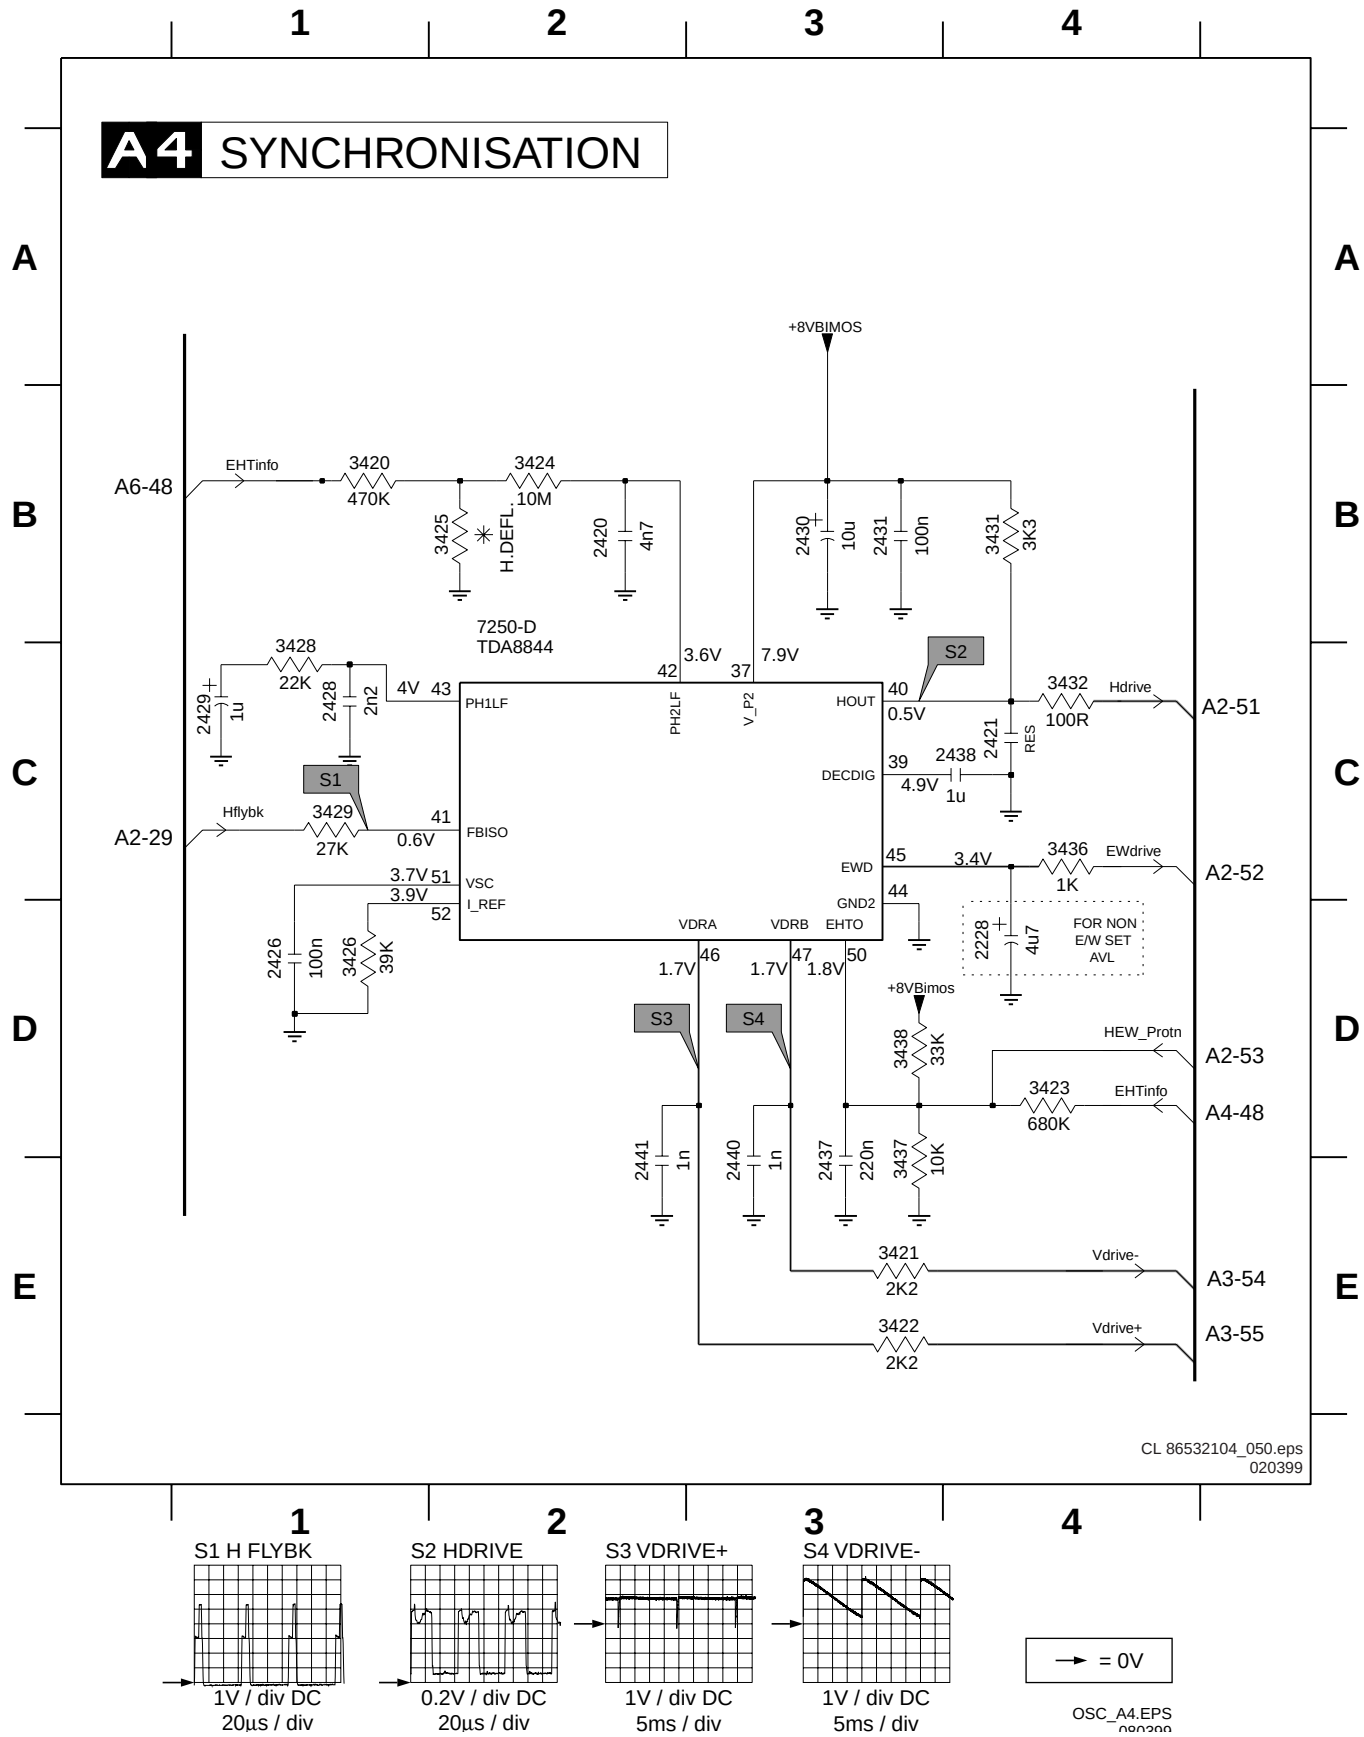

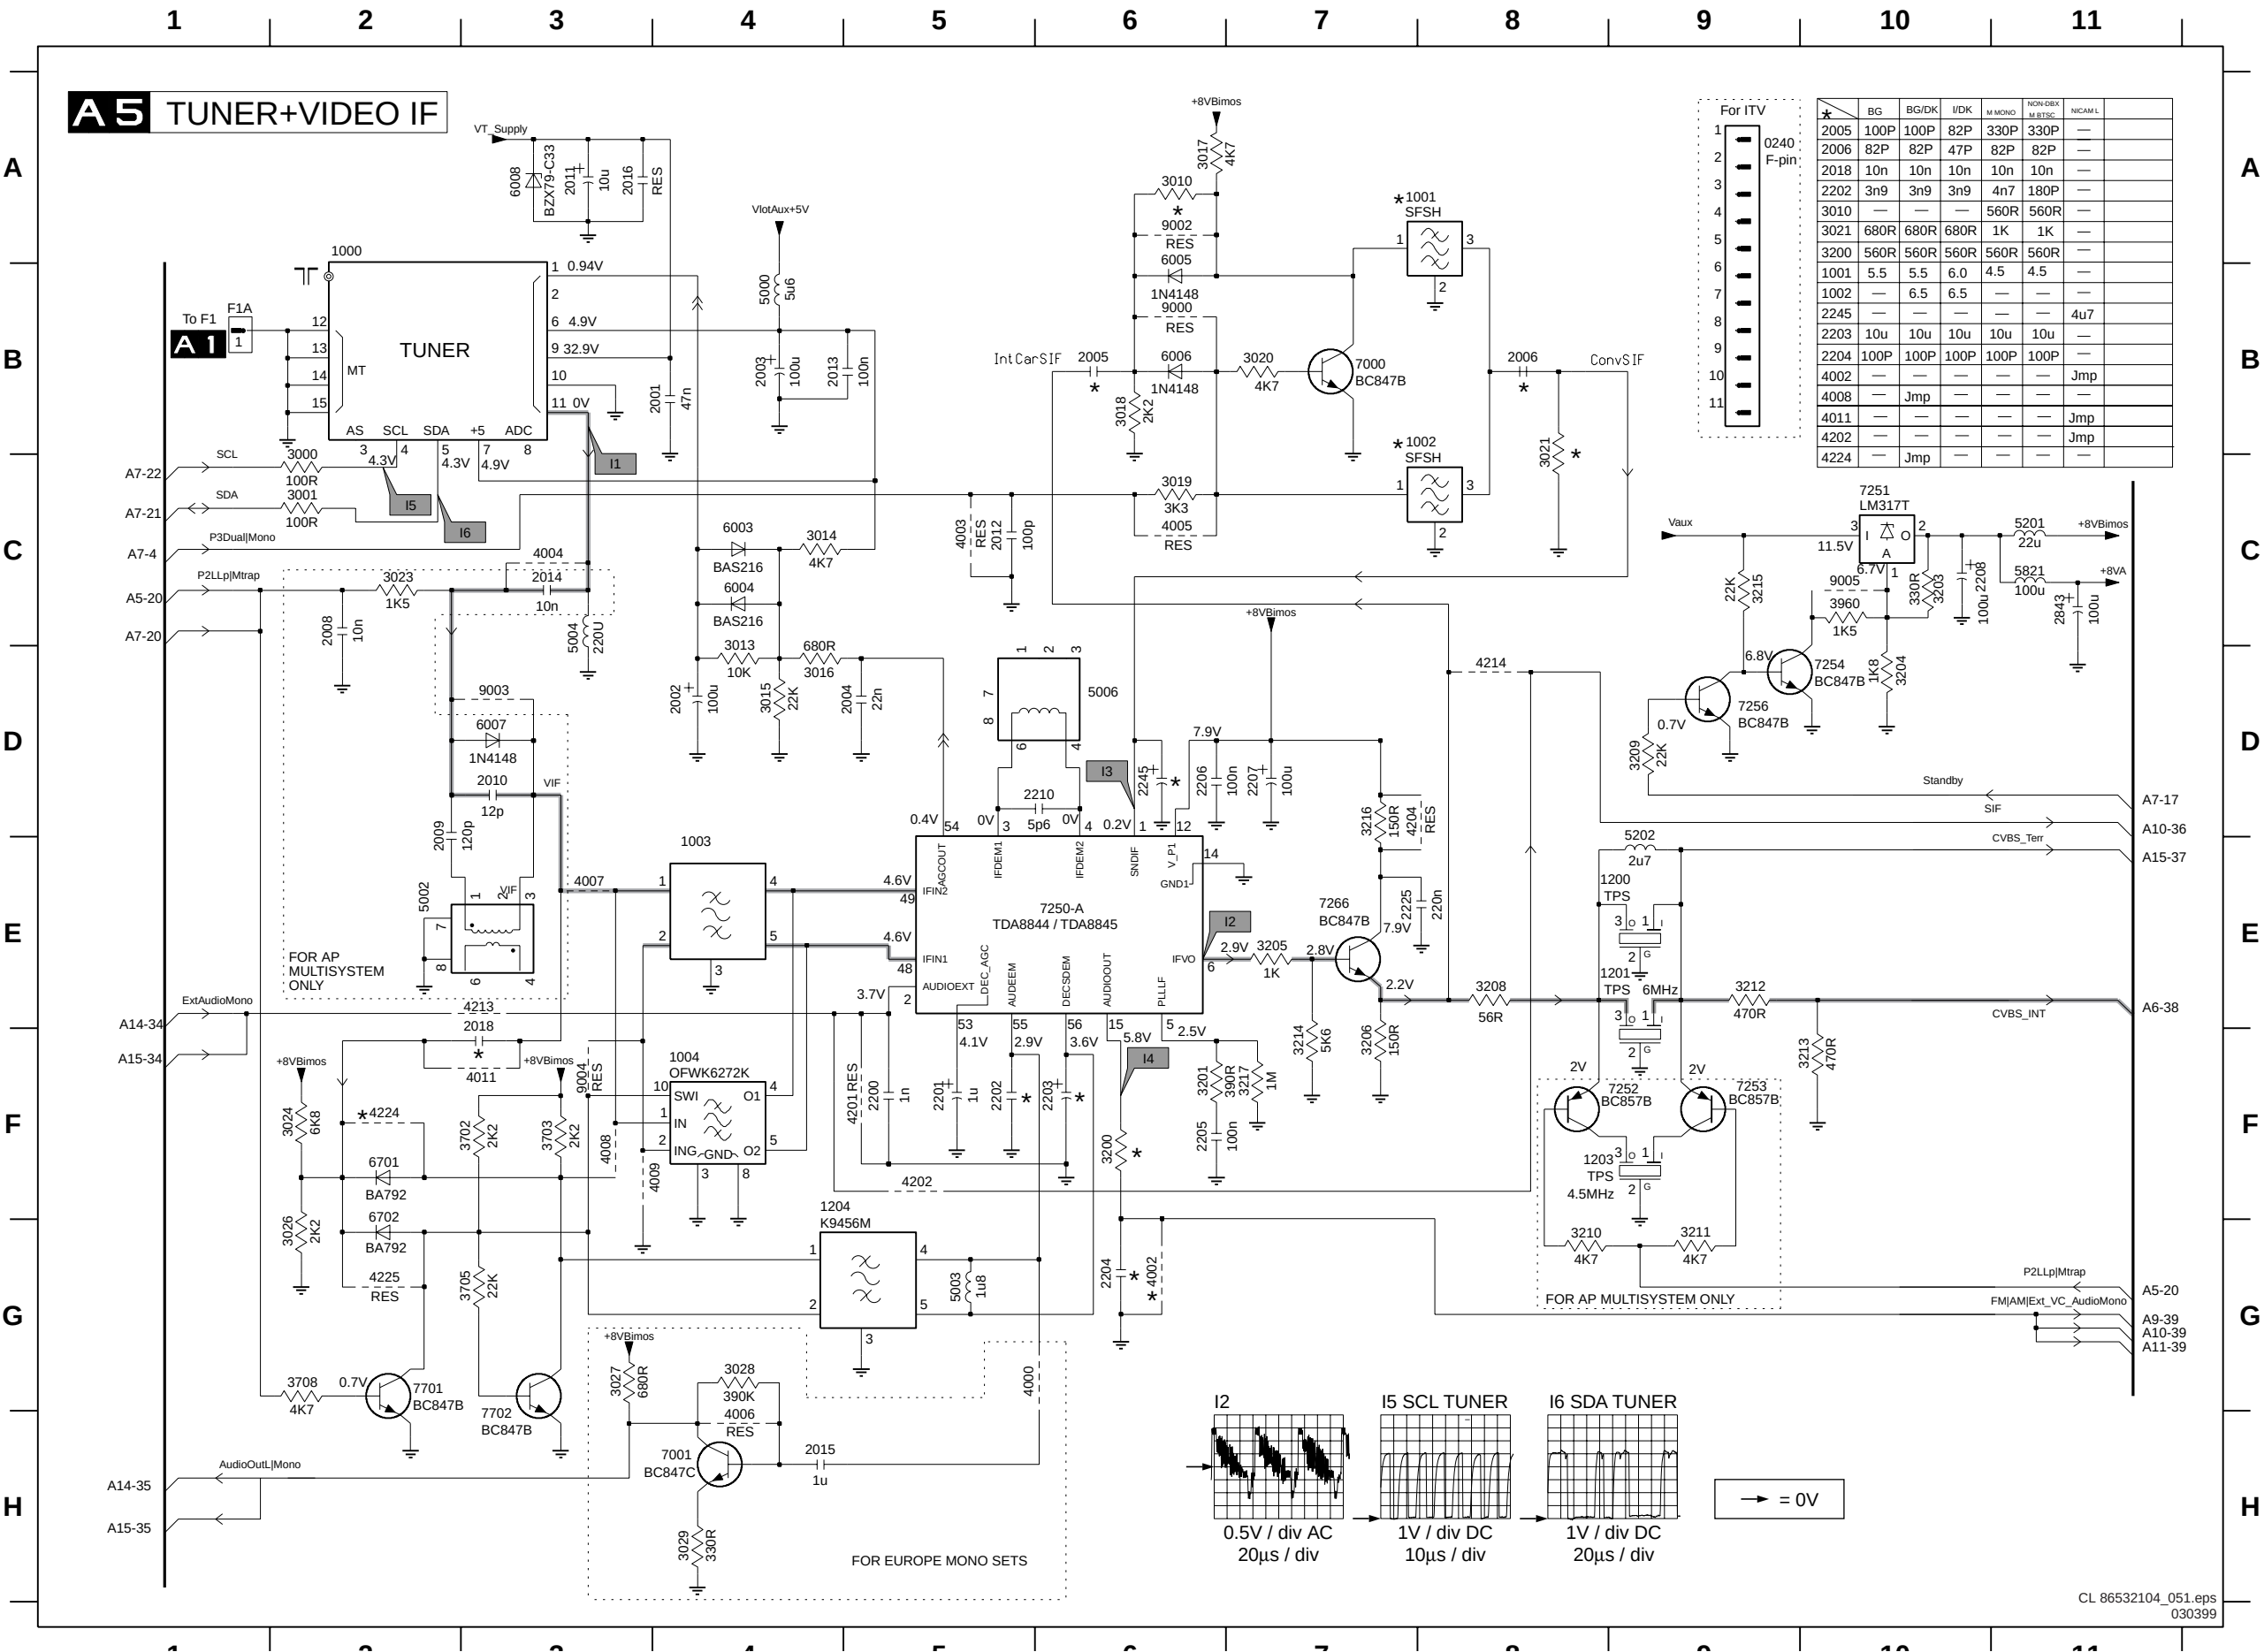


For ITV

	BG	BG/DK	V/DK	M MONO	NON-DKX M BTSC	NICAM L
2005	100P	100P	82P	330P	330P	—
2006	82P	82P	47P	82P	82P	—
2018	10n	10n	10n	10n	10n	—
2202	3n9	3n9	3n9	4n7	180P	—
3010	—	—	—	560R	560R	—
3021	680R	680R	680R	1K	1K	—
3200	560R	560R	560R	560R	560R	—
1001	5.5	5.5	6.0	4.5	4.5	—
1002	—	6.5	6.5	—	—	—
2245	—	—	—	—	4u7	—
2203	10u	10u	10u	10u	10u	—
2204	100P	100P	100P	100P	100P	—
4002	—	—	—	—	Jmp	—
4008	Jmp	—	—	—	—	—
4011	—	—	—	—	Jmp	—
4202	—	—	—	—	Jmp	—
4224	Jmp	—	—	—	—	—

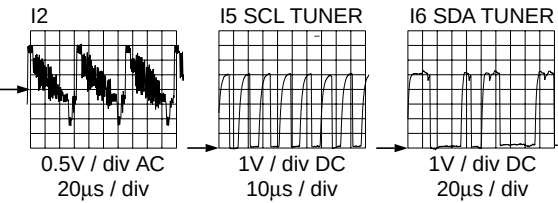

F1A B1	5004 C3
0240 A9	5006 D6
1000 A2	5201 C11
1001 A7	5202 E9
1002 B7	5821 C11
1003 E4	6003 C4
1004 F4	6004 C4
1200 E9	6005 B6
1201 E9	6006 B6
1203 F9	6007 D3
1204 G5	6008 A3
2001 B4	6701 F2
2002 D4	6702 G2
2003 B4	7000 B7
2004 D5	7001 H4
2005 B6	7250-A E6
2006 B8	7251 C10
2008 C2	7252 F8
2009 D2	7253 F9
2010 D3	7254 D10
2011 A3	7256 D9
2012 C5	7266 E7
2013 B4	7701 G2
2014 C3	7702 H3
2015 H4	9000 B6
2016 A3	9002 A6
2018 F3	9003 D3
2200 F5	9004 F3
2201 F5	9005 C10
2202 F5	
2203 F6	
2204 G6	
2205 F6	
2206 D6	
2207 D7	
2208 C10	
2210 D6	
2225 E7	
2245 D6	
2843 C11	
3000 C2	
3001 C2	
3010 A6	
3013 D4	
3014 C4	
3015 D4	
3016 D4	
3017 A6	
3018 B6	
3019 C6	
3020 B7	
3021 B8	
3023 C2	
3024 F2	
3026 G2	
3027 G3	
3028 G4	
3029 H4	
3200 F6	
3201 F6	
3203 C10	
3204 D10	
3205 E7	
3206 F7	
3208 E8	
3209 D9	
3210 G8	
3211 G9	
3212 E9	
3213 F10	
3214 F7	
3215 C10	
3216 D7	
3217 F7	
3702 F3	
3703 F3	
3705 G3	
3708 G2	
3960 C10	
4000 G5	
4002 G6	
4003 C5	
4004 C3	
4005 C6	
4006 H4	
4007 E3	
4008 F3	
4009 F4	
4011 F3	
4201 F5	
4202 F5	
4204 D7	
4213 E3	
4214 D8	
4224 F2	
4225 G2	
5000 B4	
5002 E2	
5003 G5	

 
L9.1E 30

CL 86532104_052.eps
020399

7 Electrical diagrams and print lay-outs

L9.1E


31

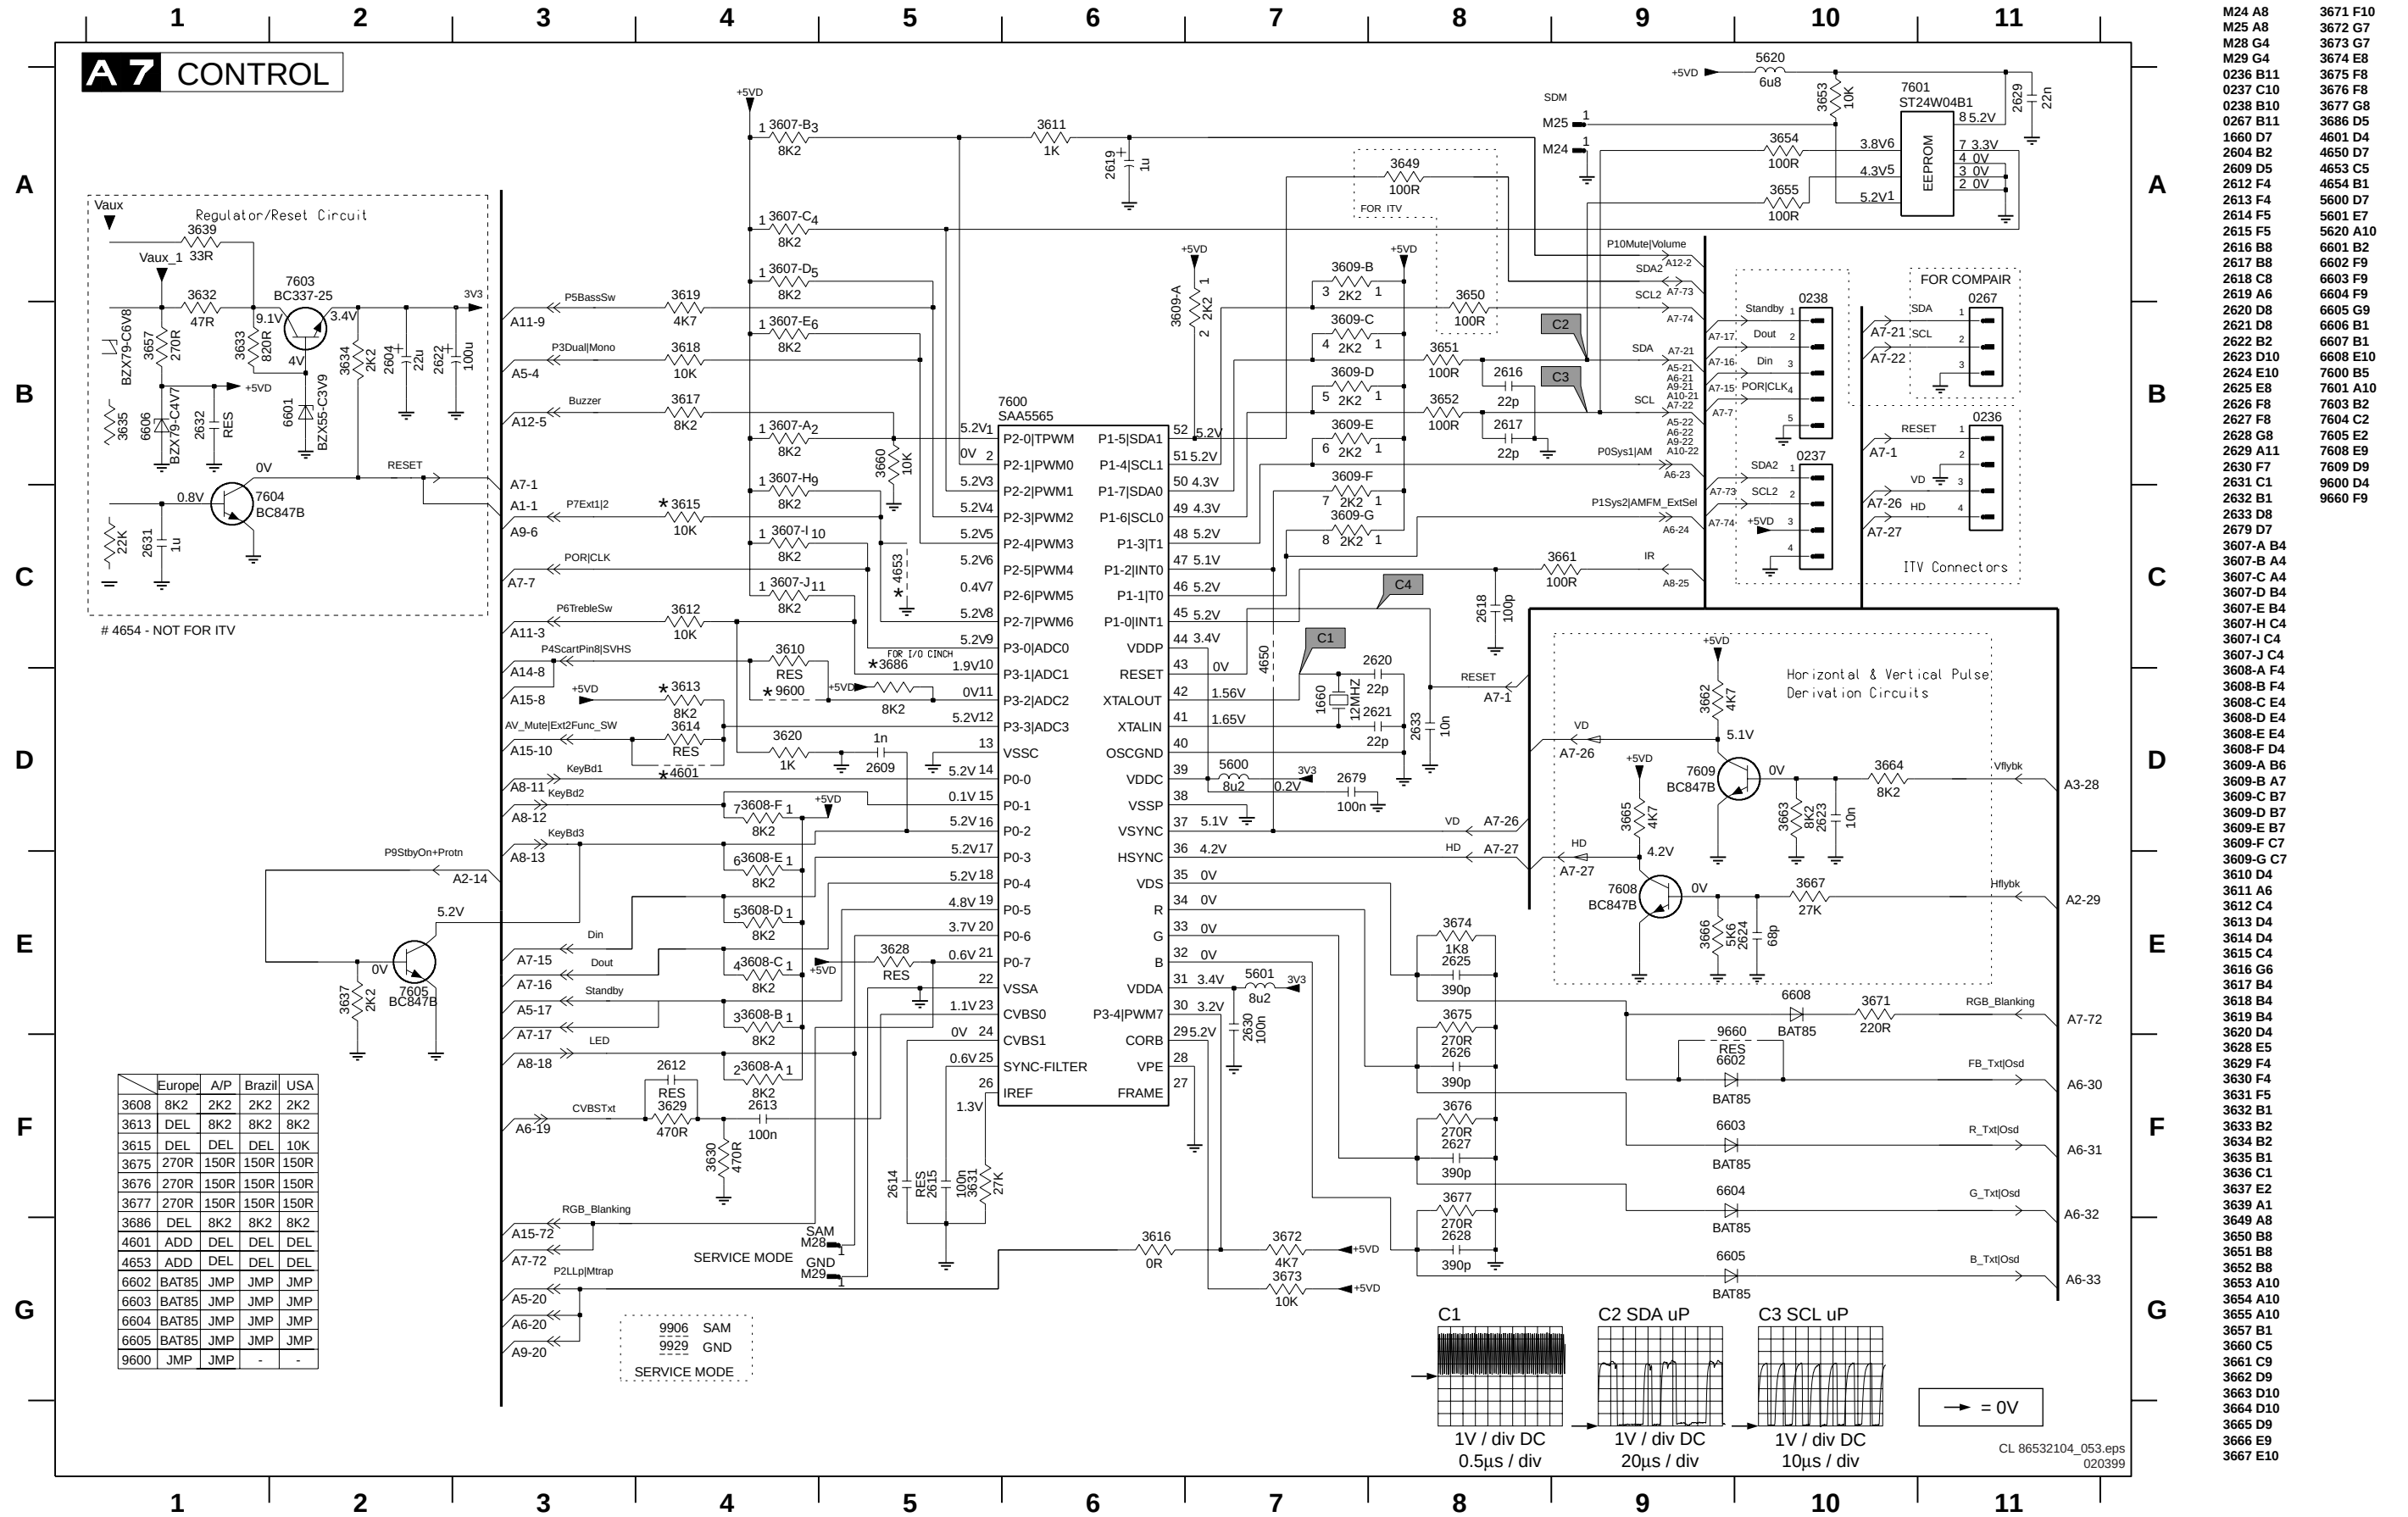

7 Electrical diagrams and print lay-outs


L9.1E


32

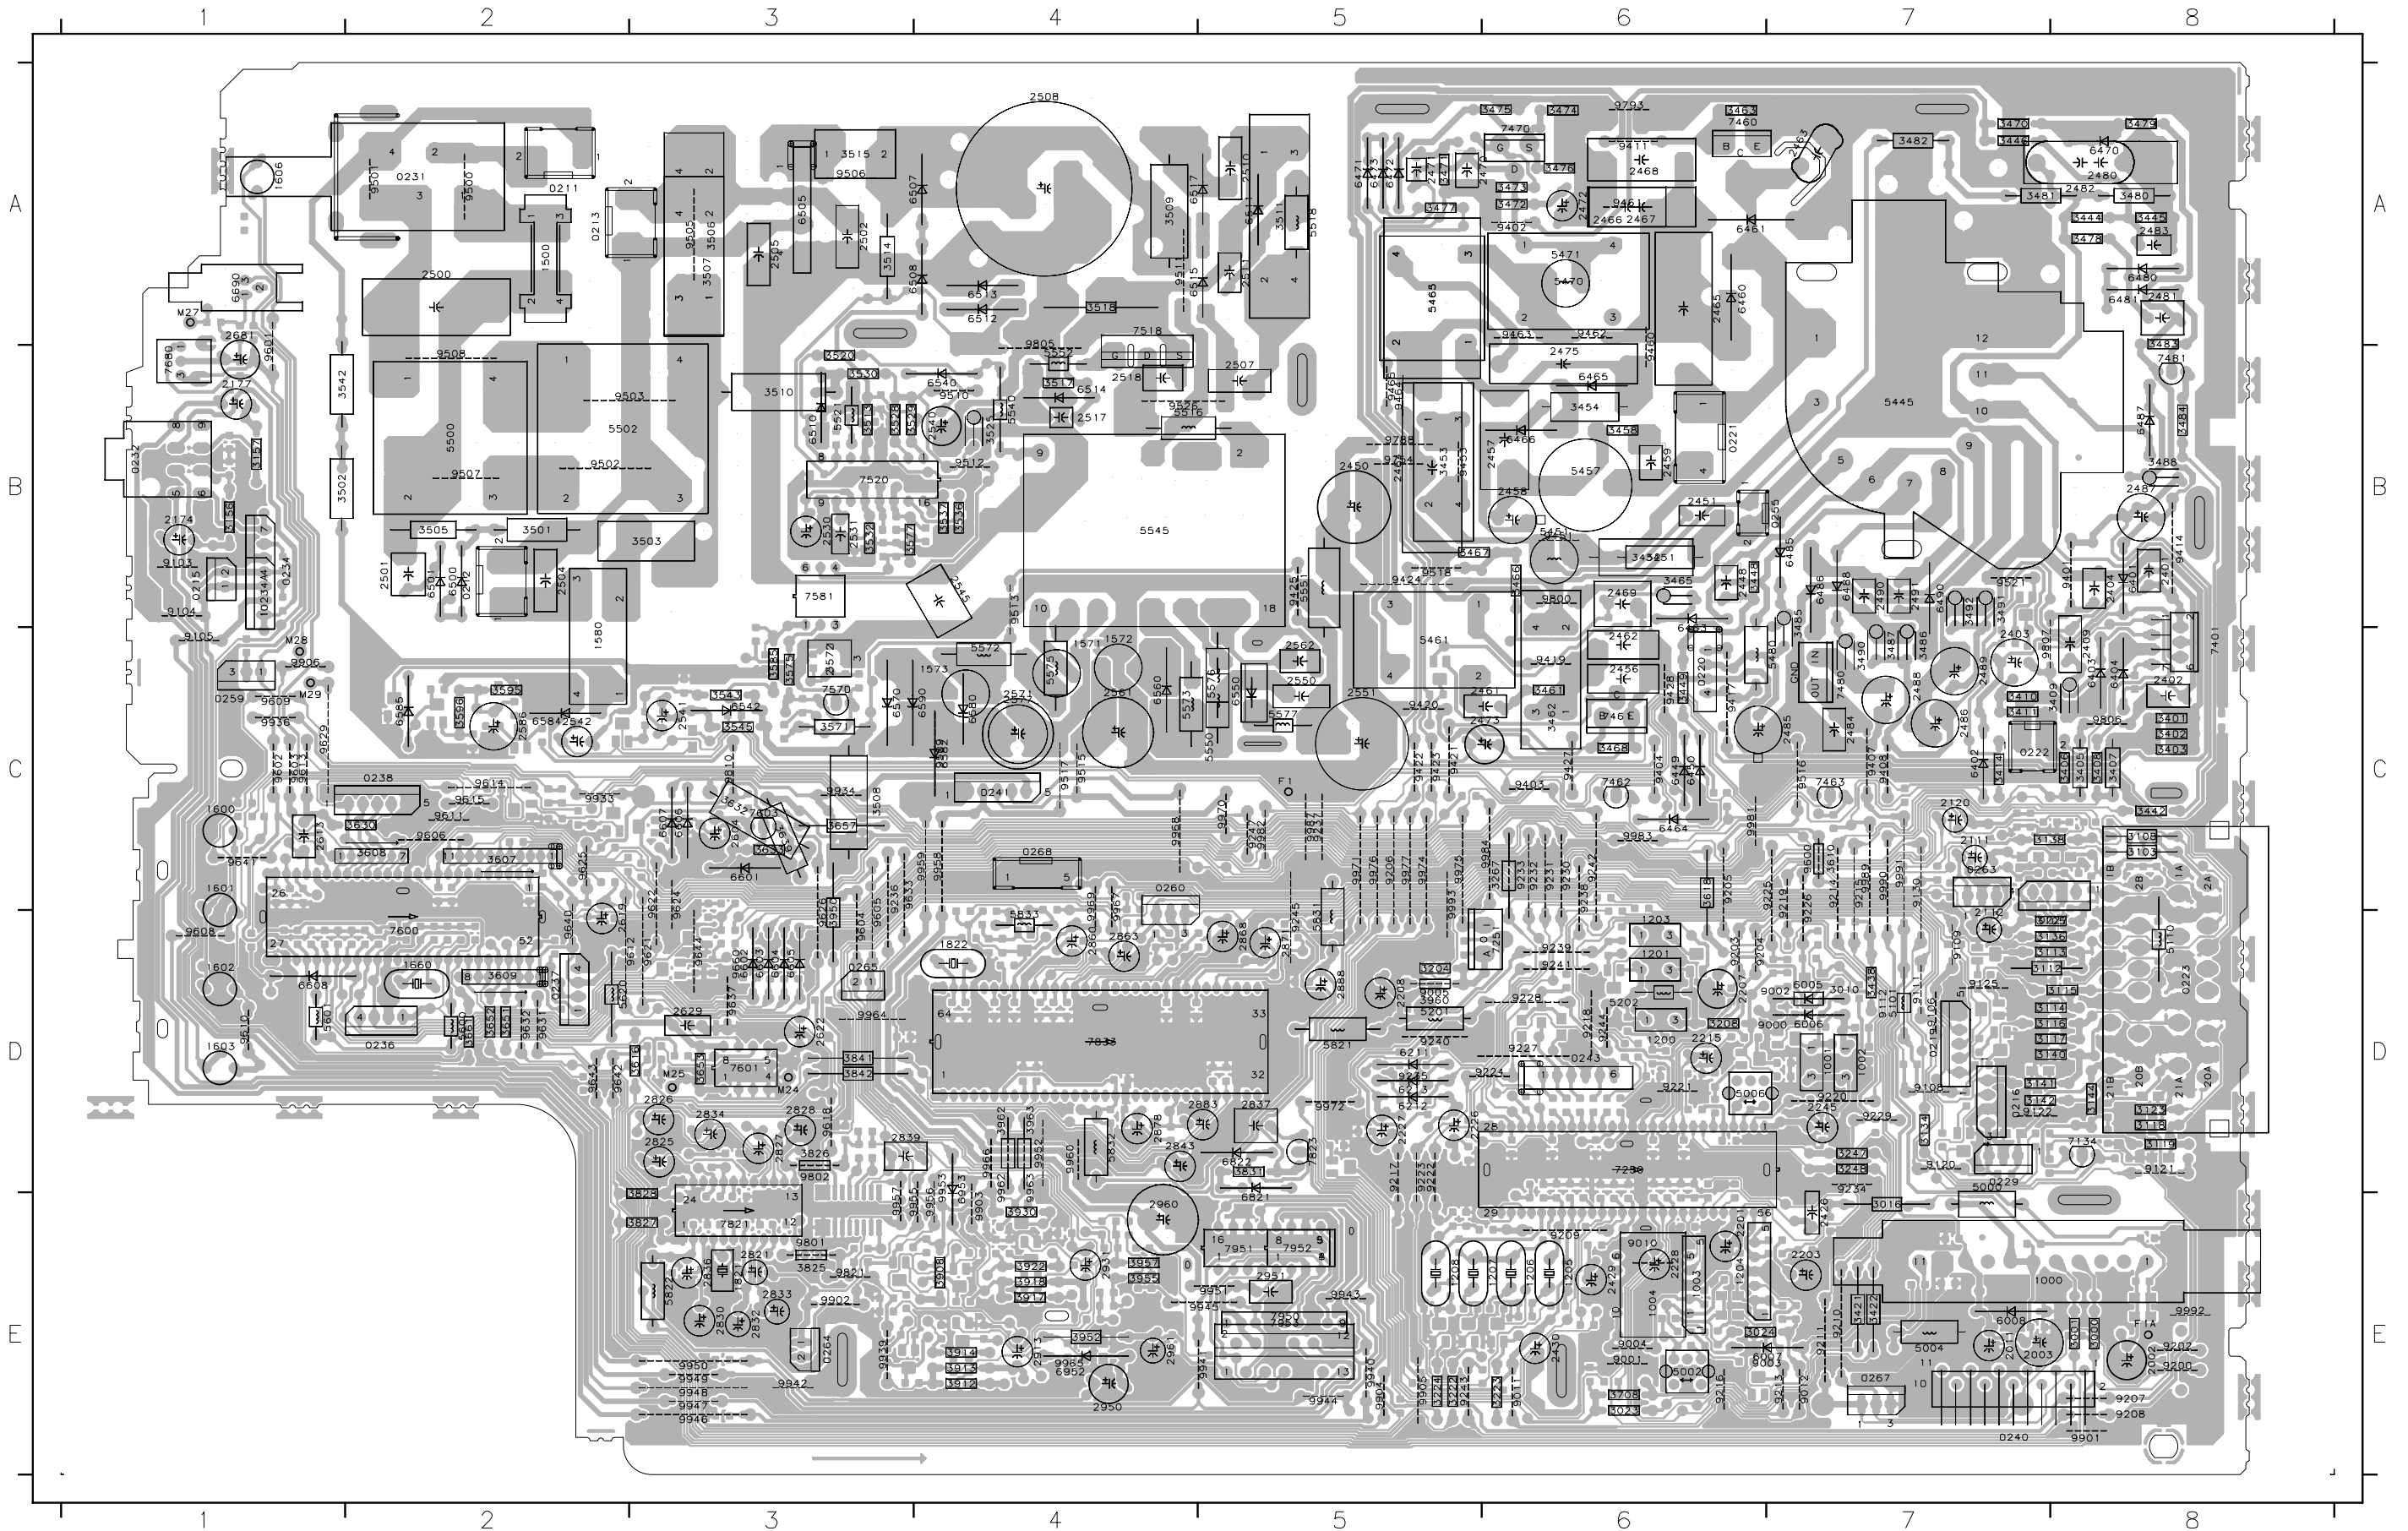

MAIN-MAPT. eps
260299


M27 C4	1600 B4	1602 B3	1606 B2	2697 B2	3681 D3	3683 B2	3685 C3	7680 D2
0259 D4	1601 B4	1603 B3	2681 E2	3680 C3	3682 B2	3684 D2	6690 C3	

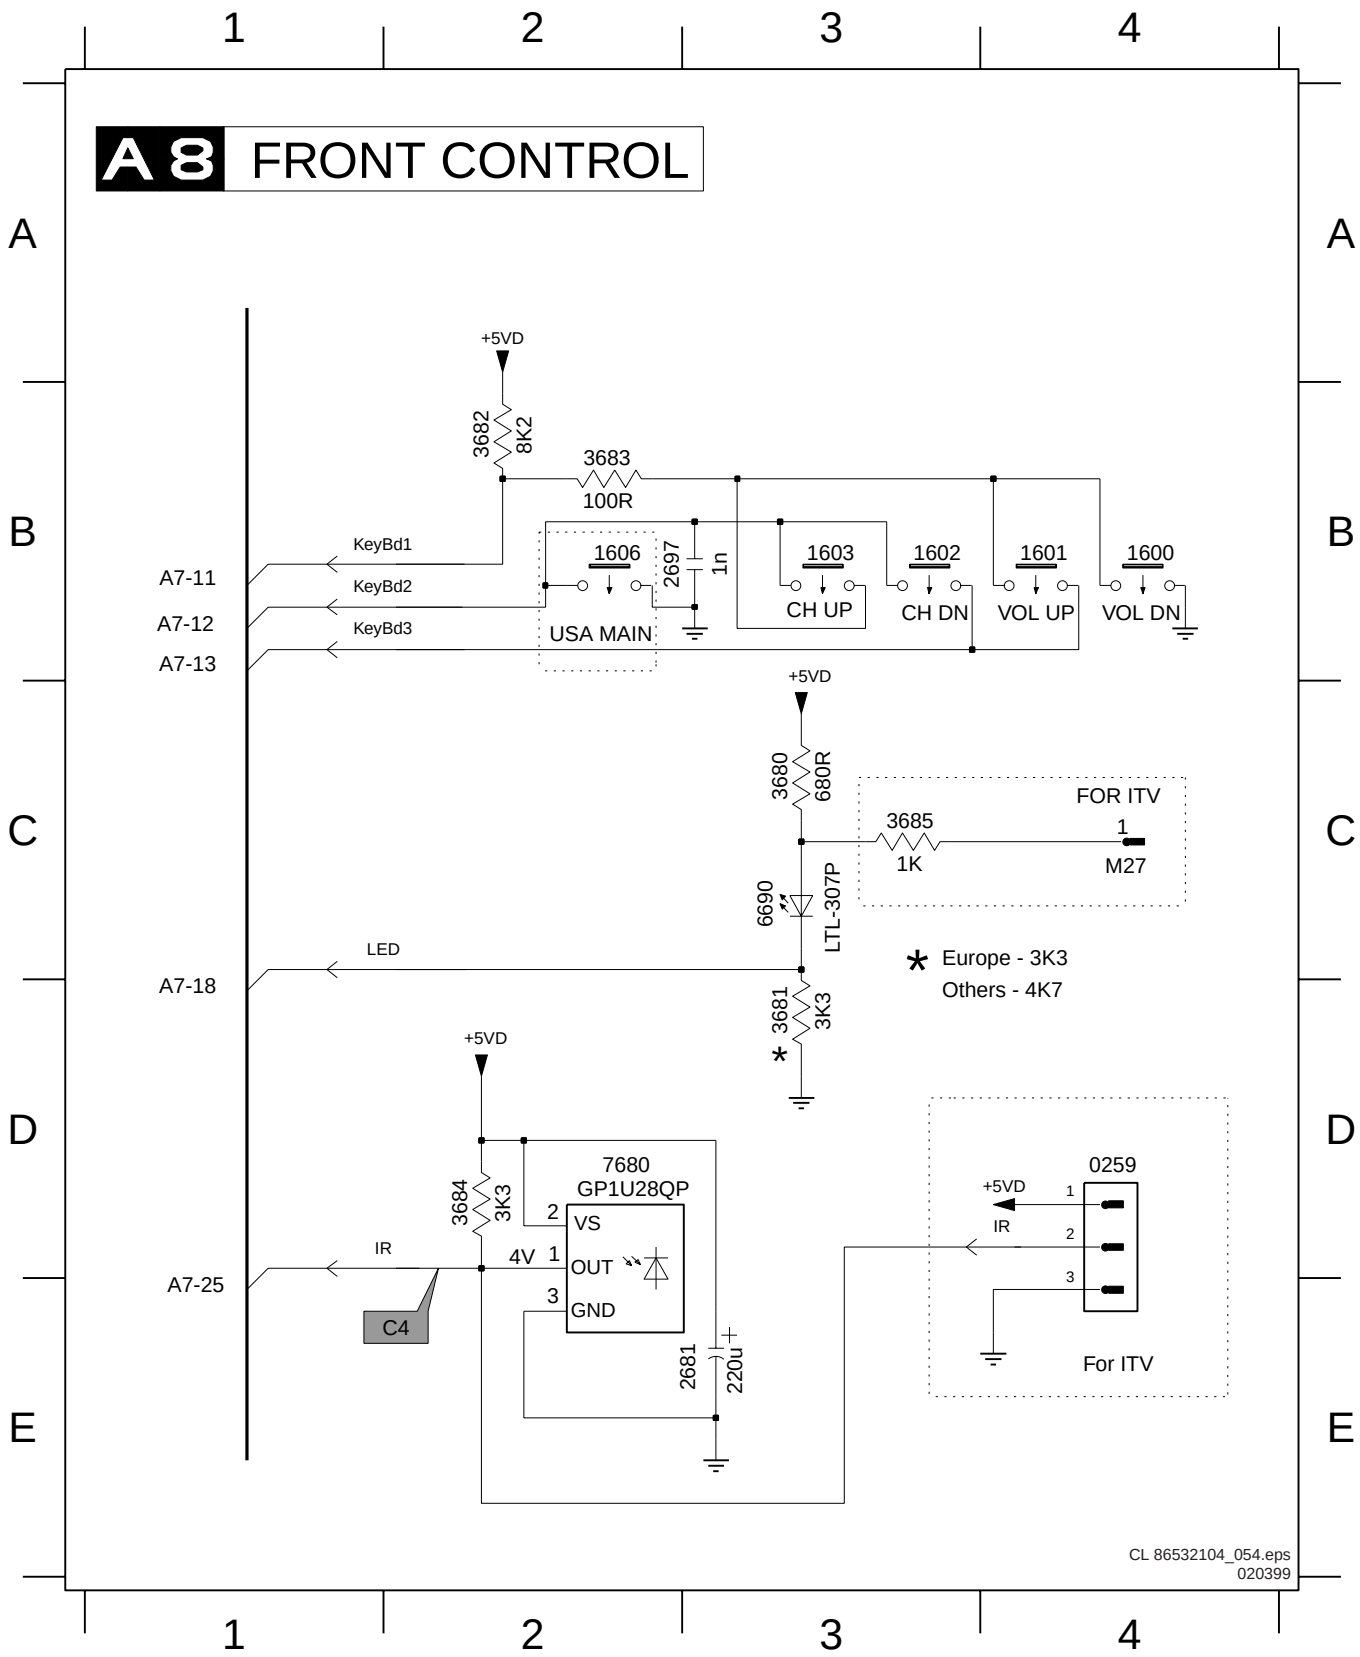

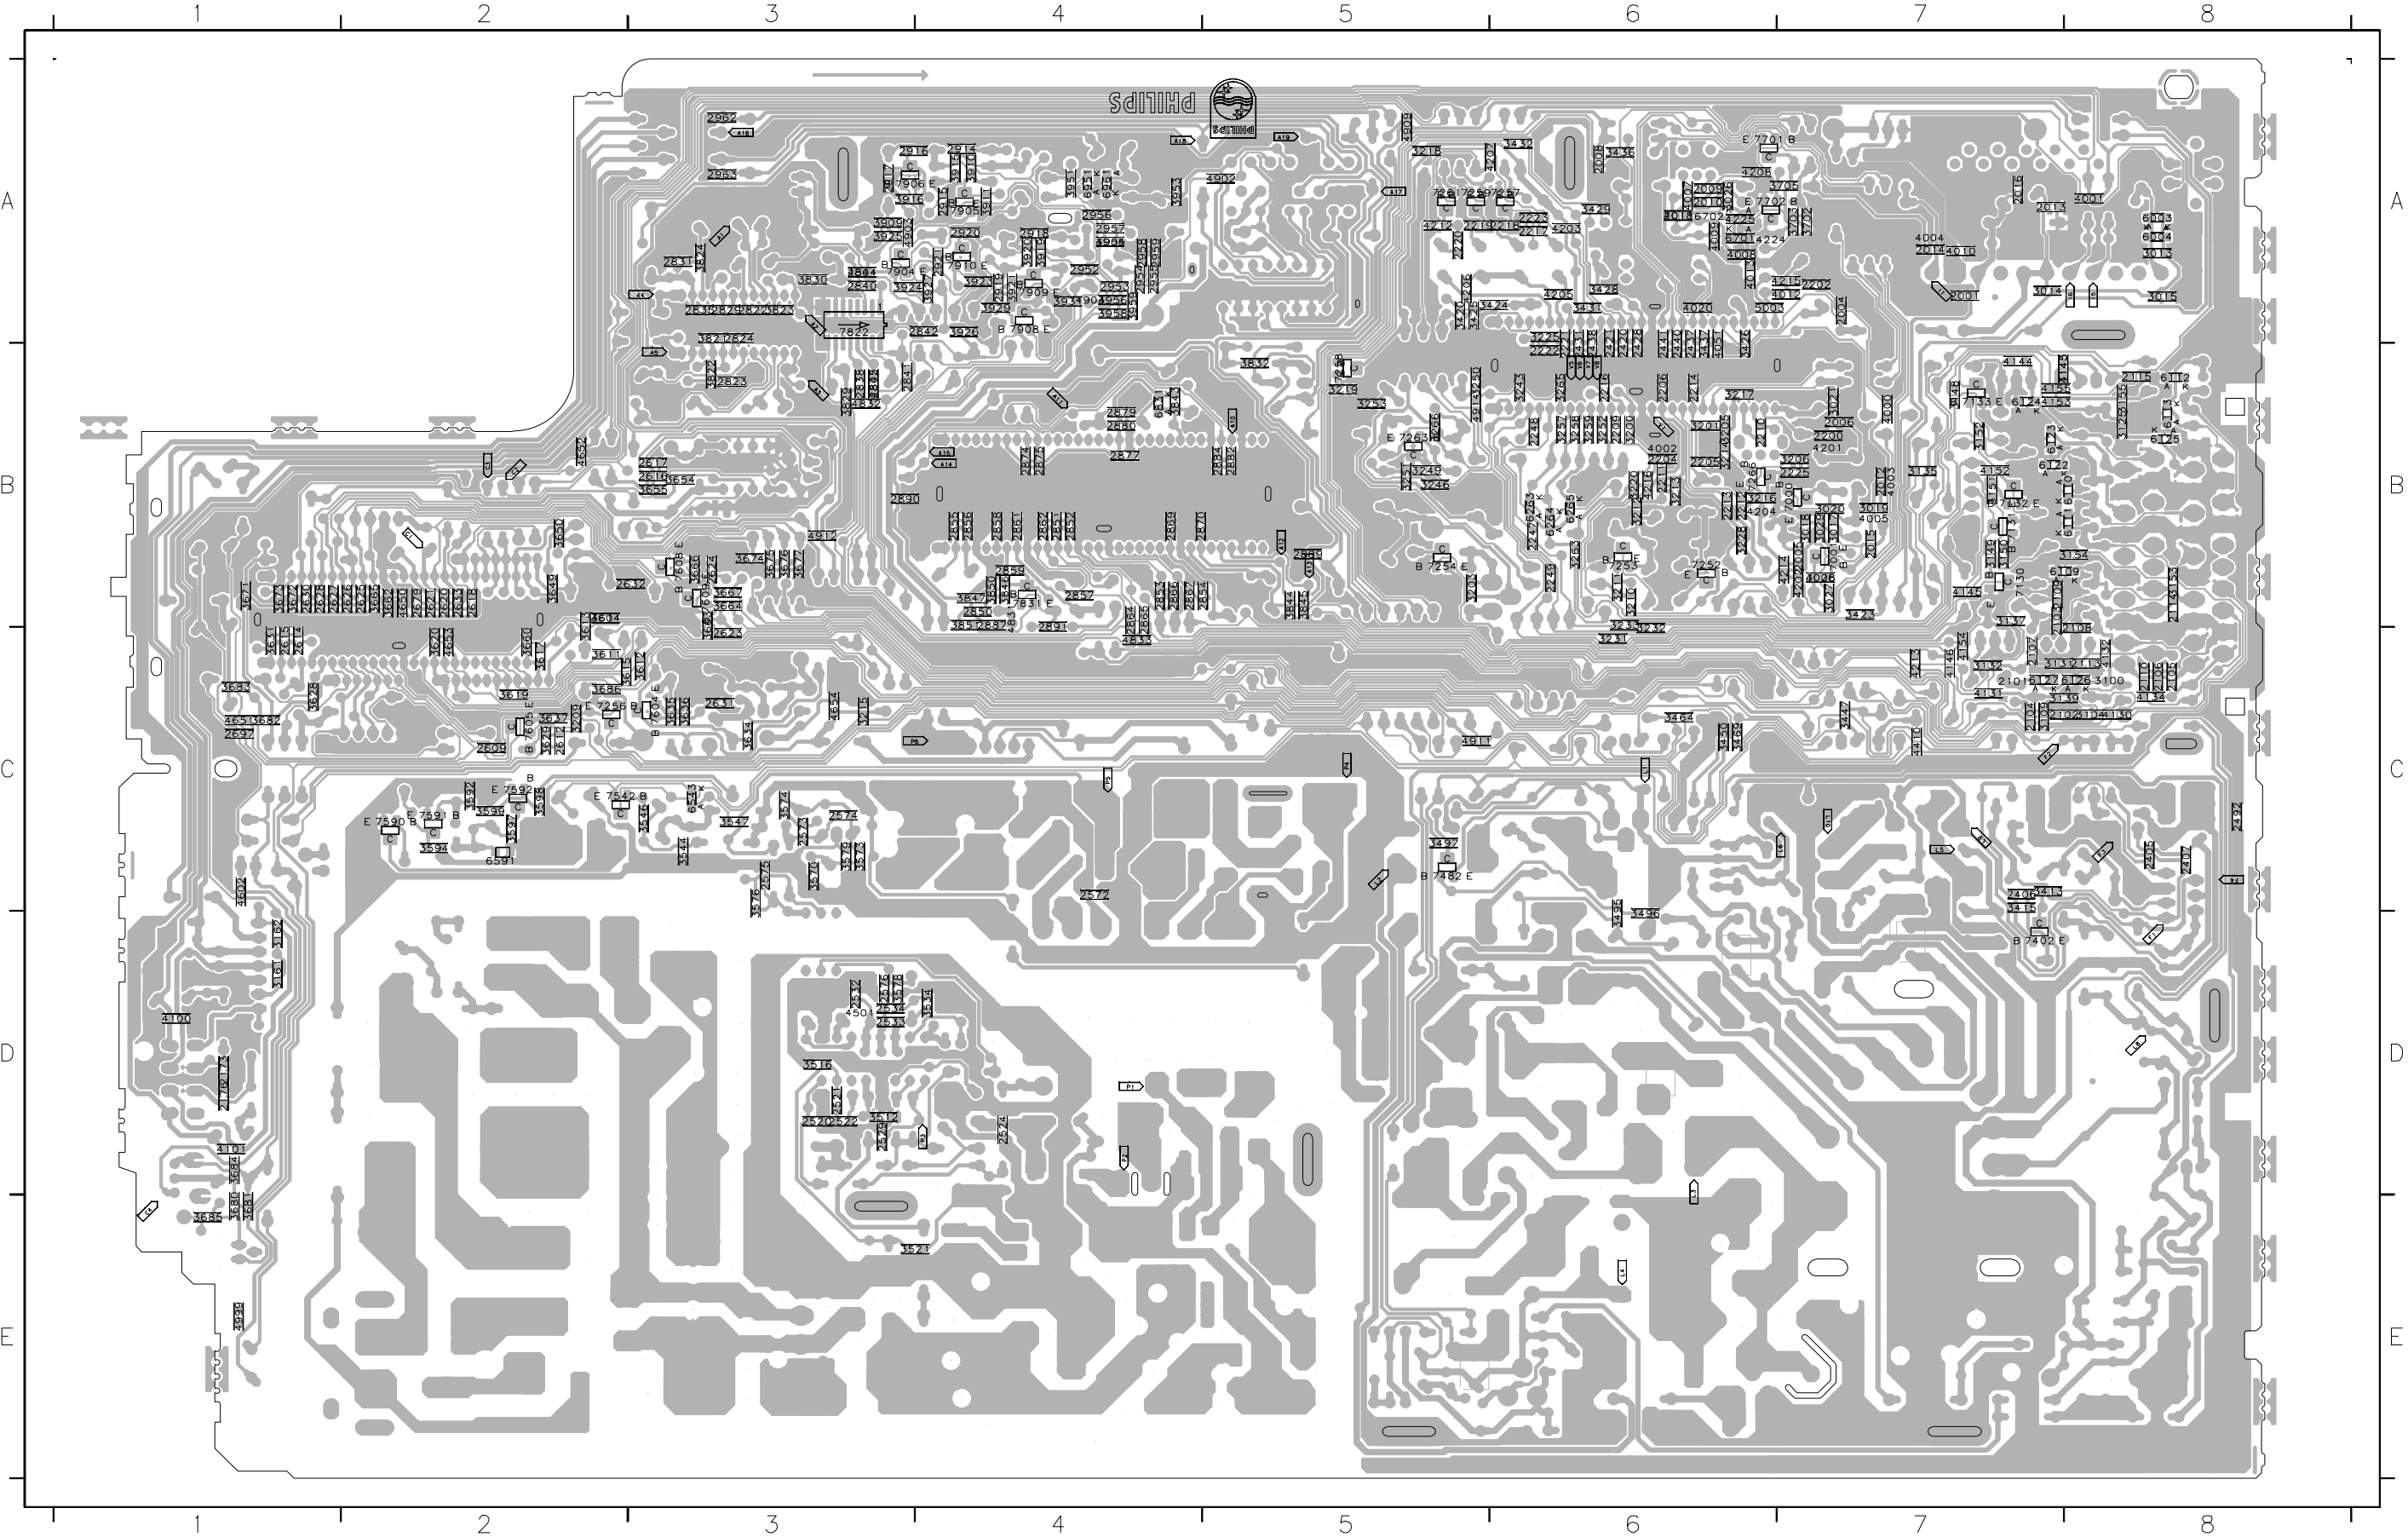



7 Electrical diagrams and print lay-outs

0264 B1	2915 B3	2919 E3	3908 A2	3912 A3	3916 C4	3920 D3	3924 A1	3929 D1	7904 A2	7909 E2	9939 A3
0265 E1	2916 B3	2920 D3	3909 B2	3913 A3	3917 D3	3921 E2	3925 B1	3930 D2	7905 B2	7910 F3	9953 F2
2913 A2	2917 B4	2921 E4	3910 B2	3914 B3	3918 D3	3922 E3	3926 D1	3931 D2	7906 C3	9902 B1	
2914 A2	2918 D2	2931 D2	3911 B2	3915 B3	3919 D2	3923 F4	3927 C2	6953 E2	7908 D2	9903 C3	

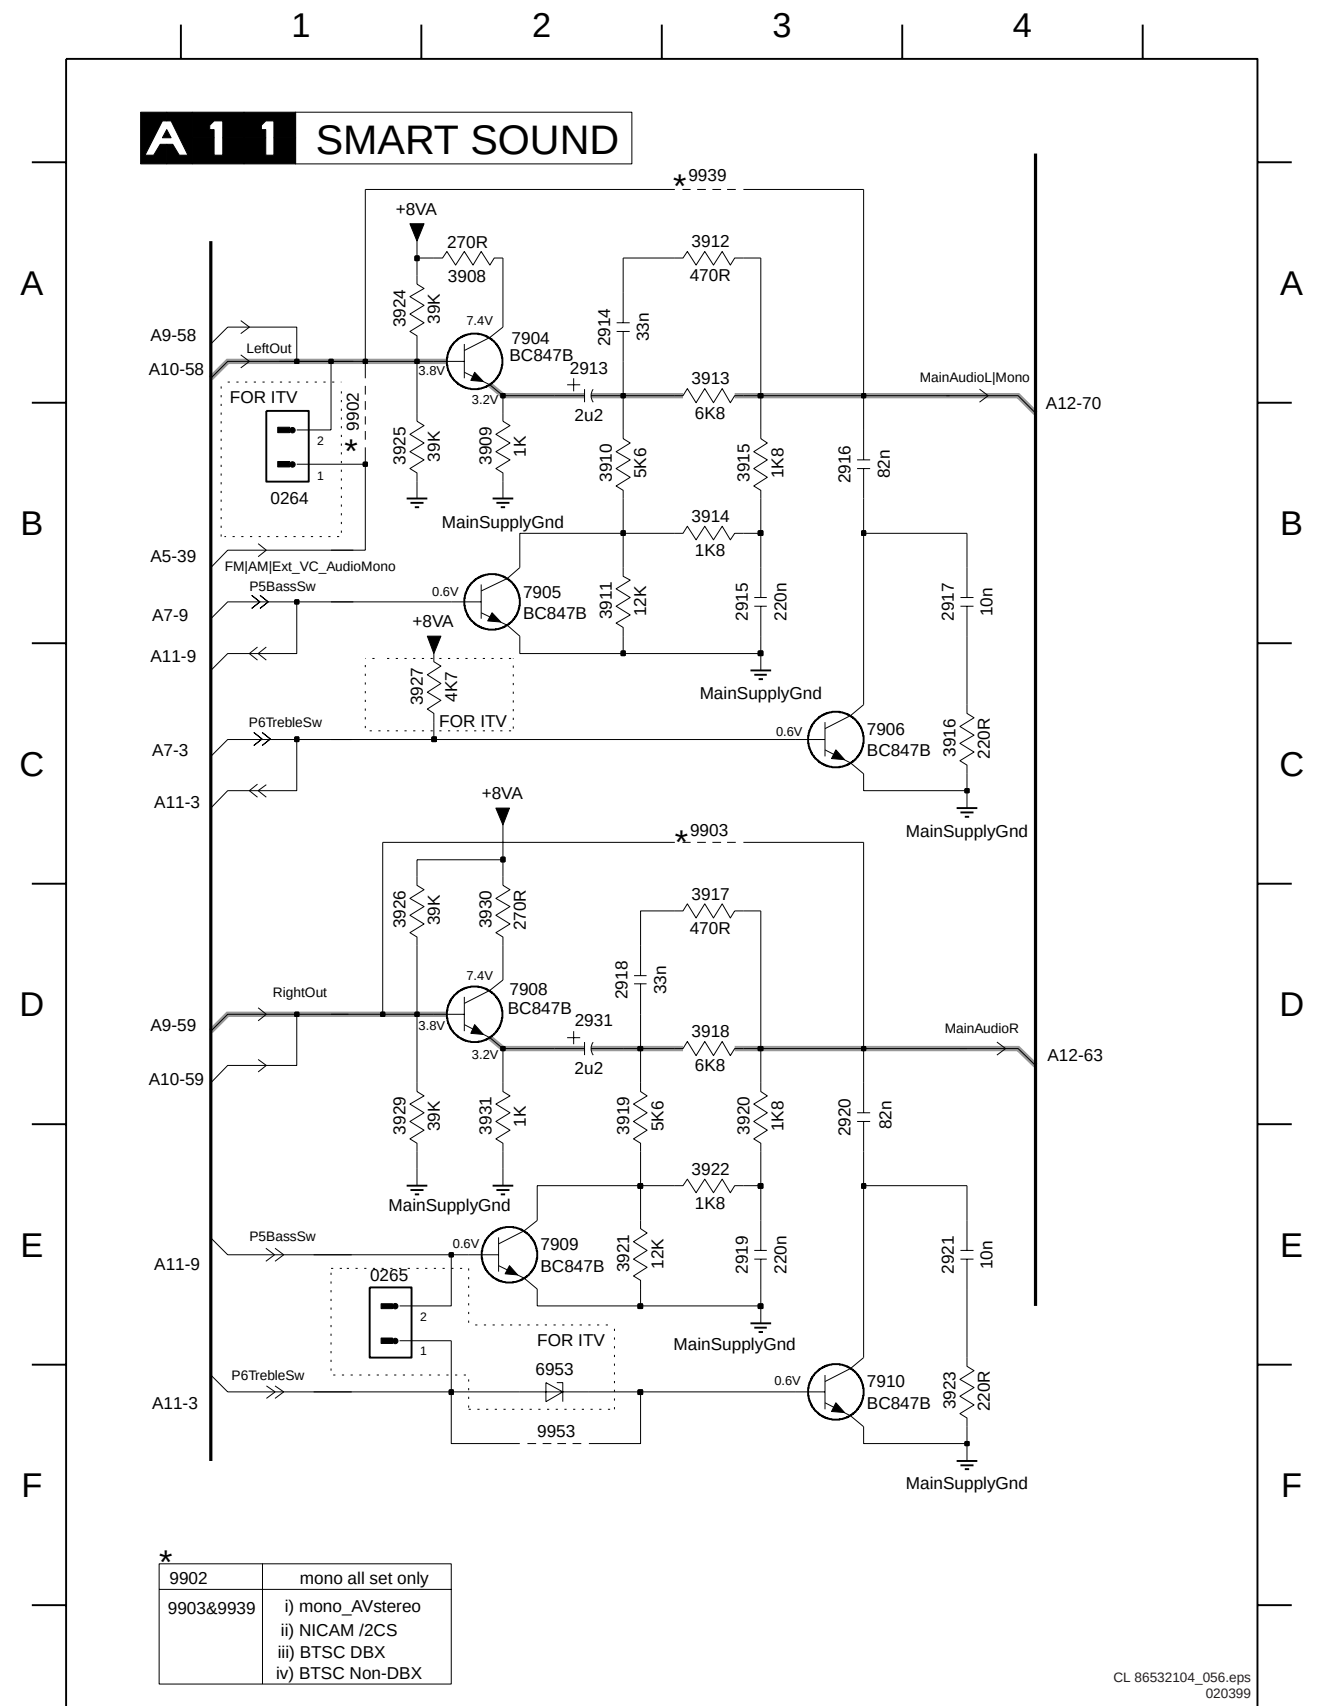

L9.1E 36

 


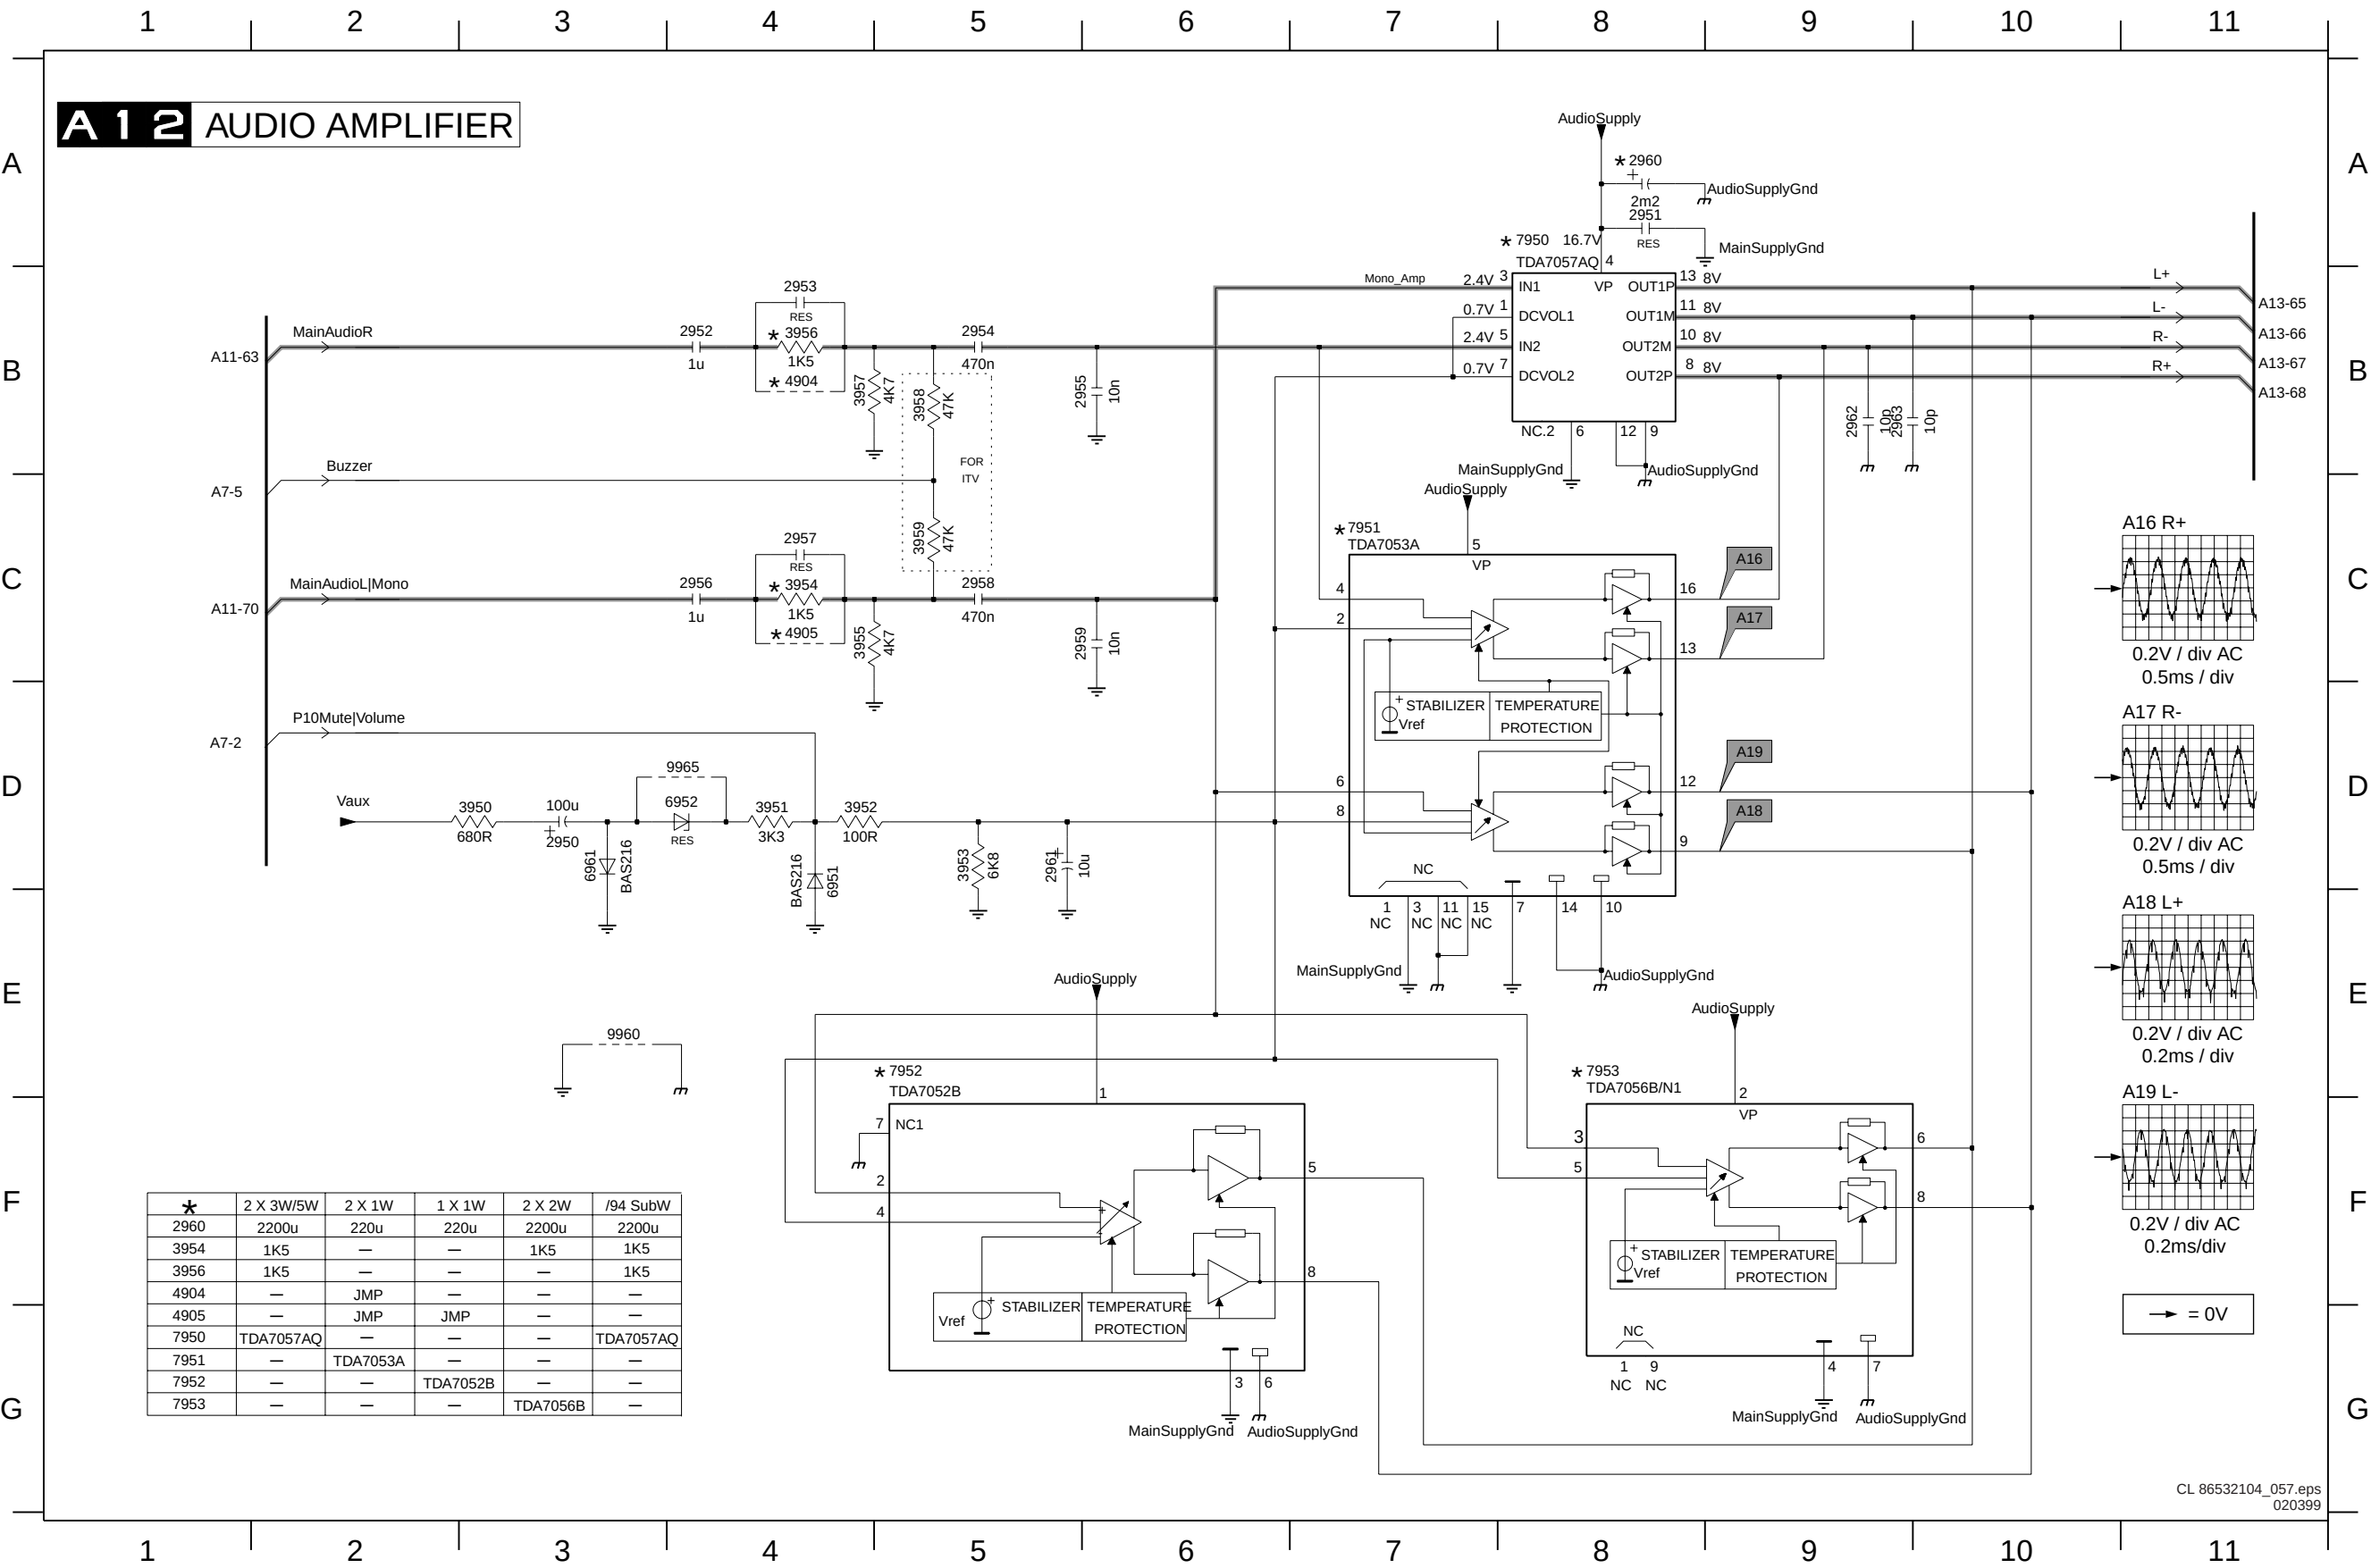


2950 D3
2951 A8
2952 B4
2953 B4
2954 B5
2955 B6
2956 C4
2957 C4
2958 C5
2959 C6
2960 A8
2961 D5
2962 B9
2963 B9
3950 D3
3951 D4
3952 D4
3953 D5
3954 C4
3955 C4
3956 B4
3957 B4
3958 B5
3959 C5
4904 B4
4905 C4
6951 D4
6952 D4
6961 D3
7950 A8
7951 C7
7952 E5
7953 E8
9960 E3
9965 D4

7 Electrical diagrams and print lay-outs


0215 D4	0234 C4	1150 C2	2173 C2	2176 C2	3156 B2	3161 C4	4100 B2	9104 C1
0232 B3	0234A D4	1151 C2	2174 B1	2177 C1	3157 C2	3162 C4	4101 D2	


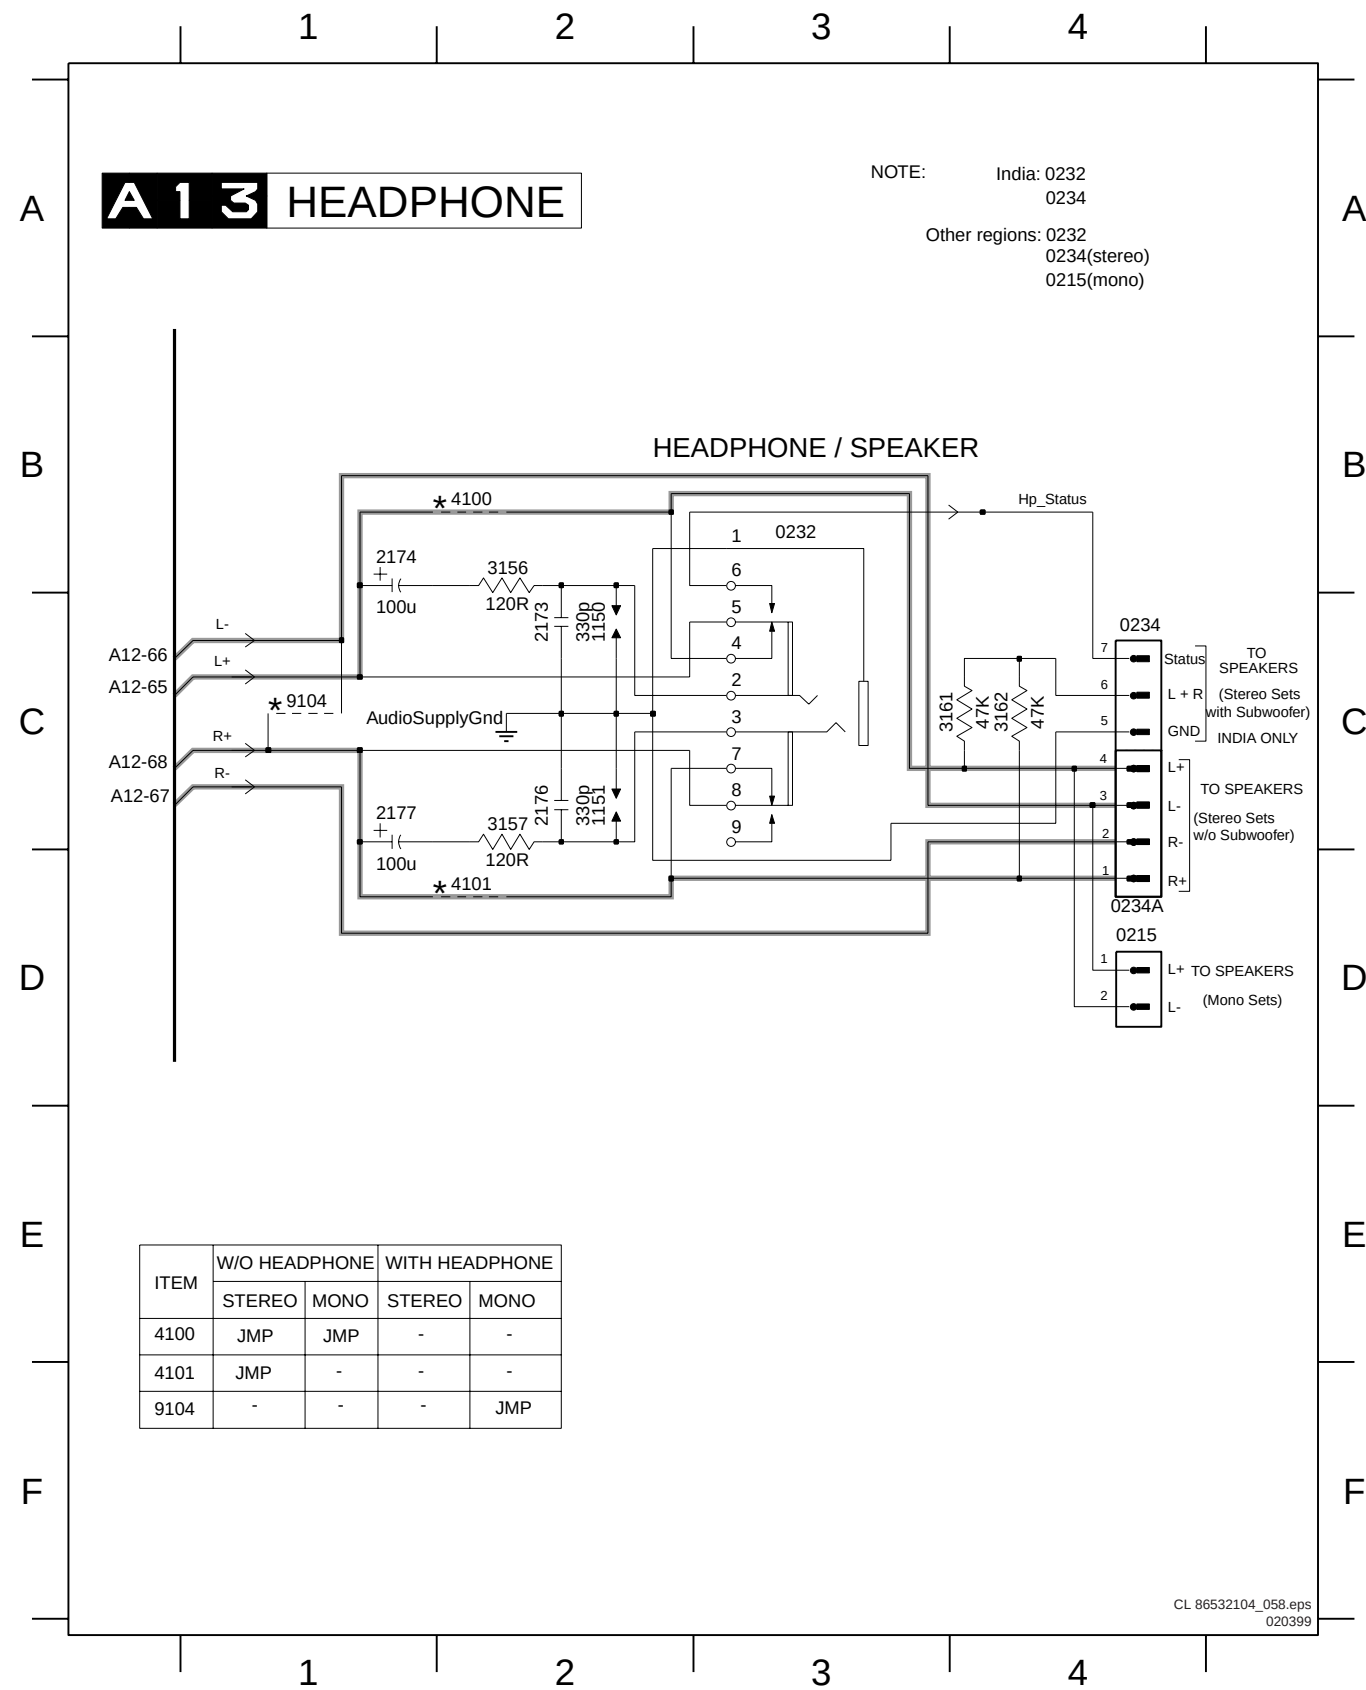


Personal notes:

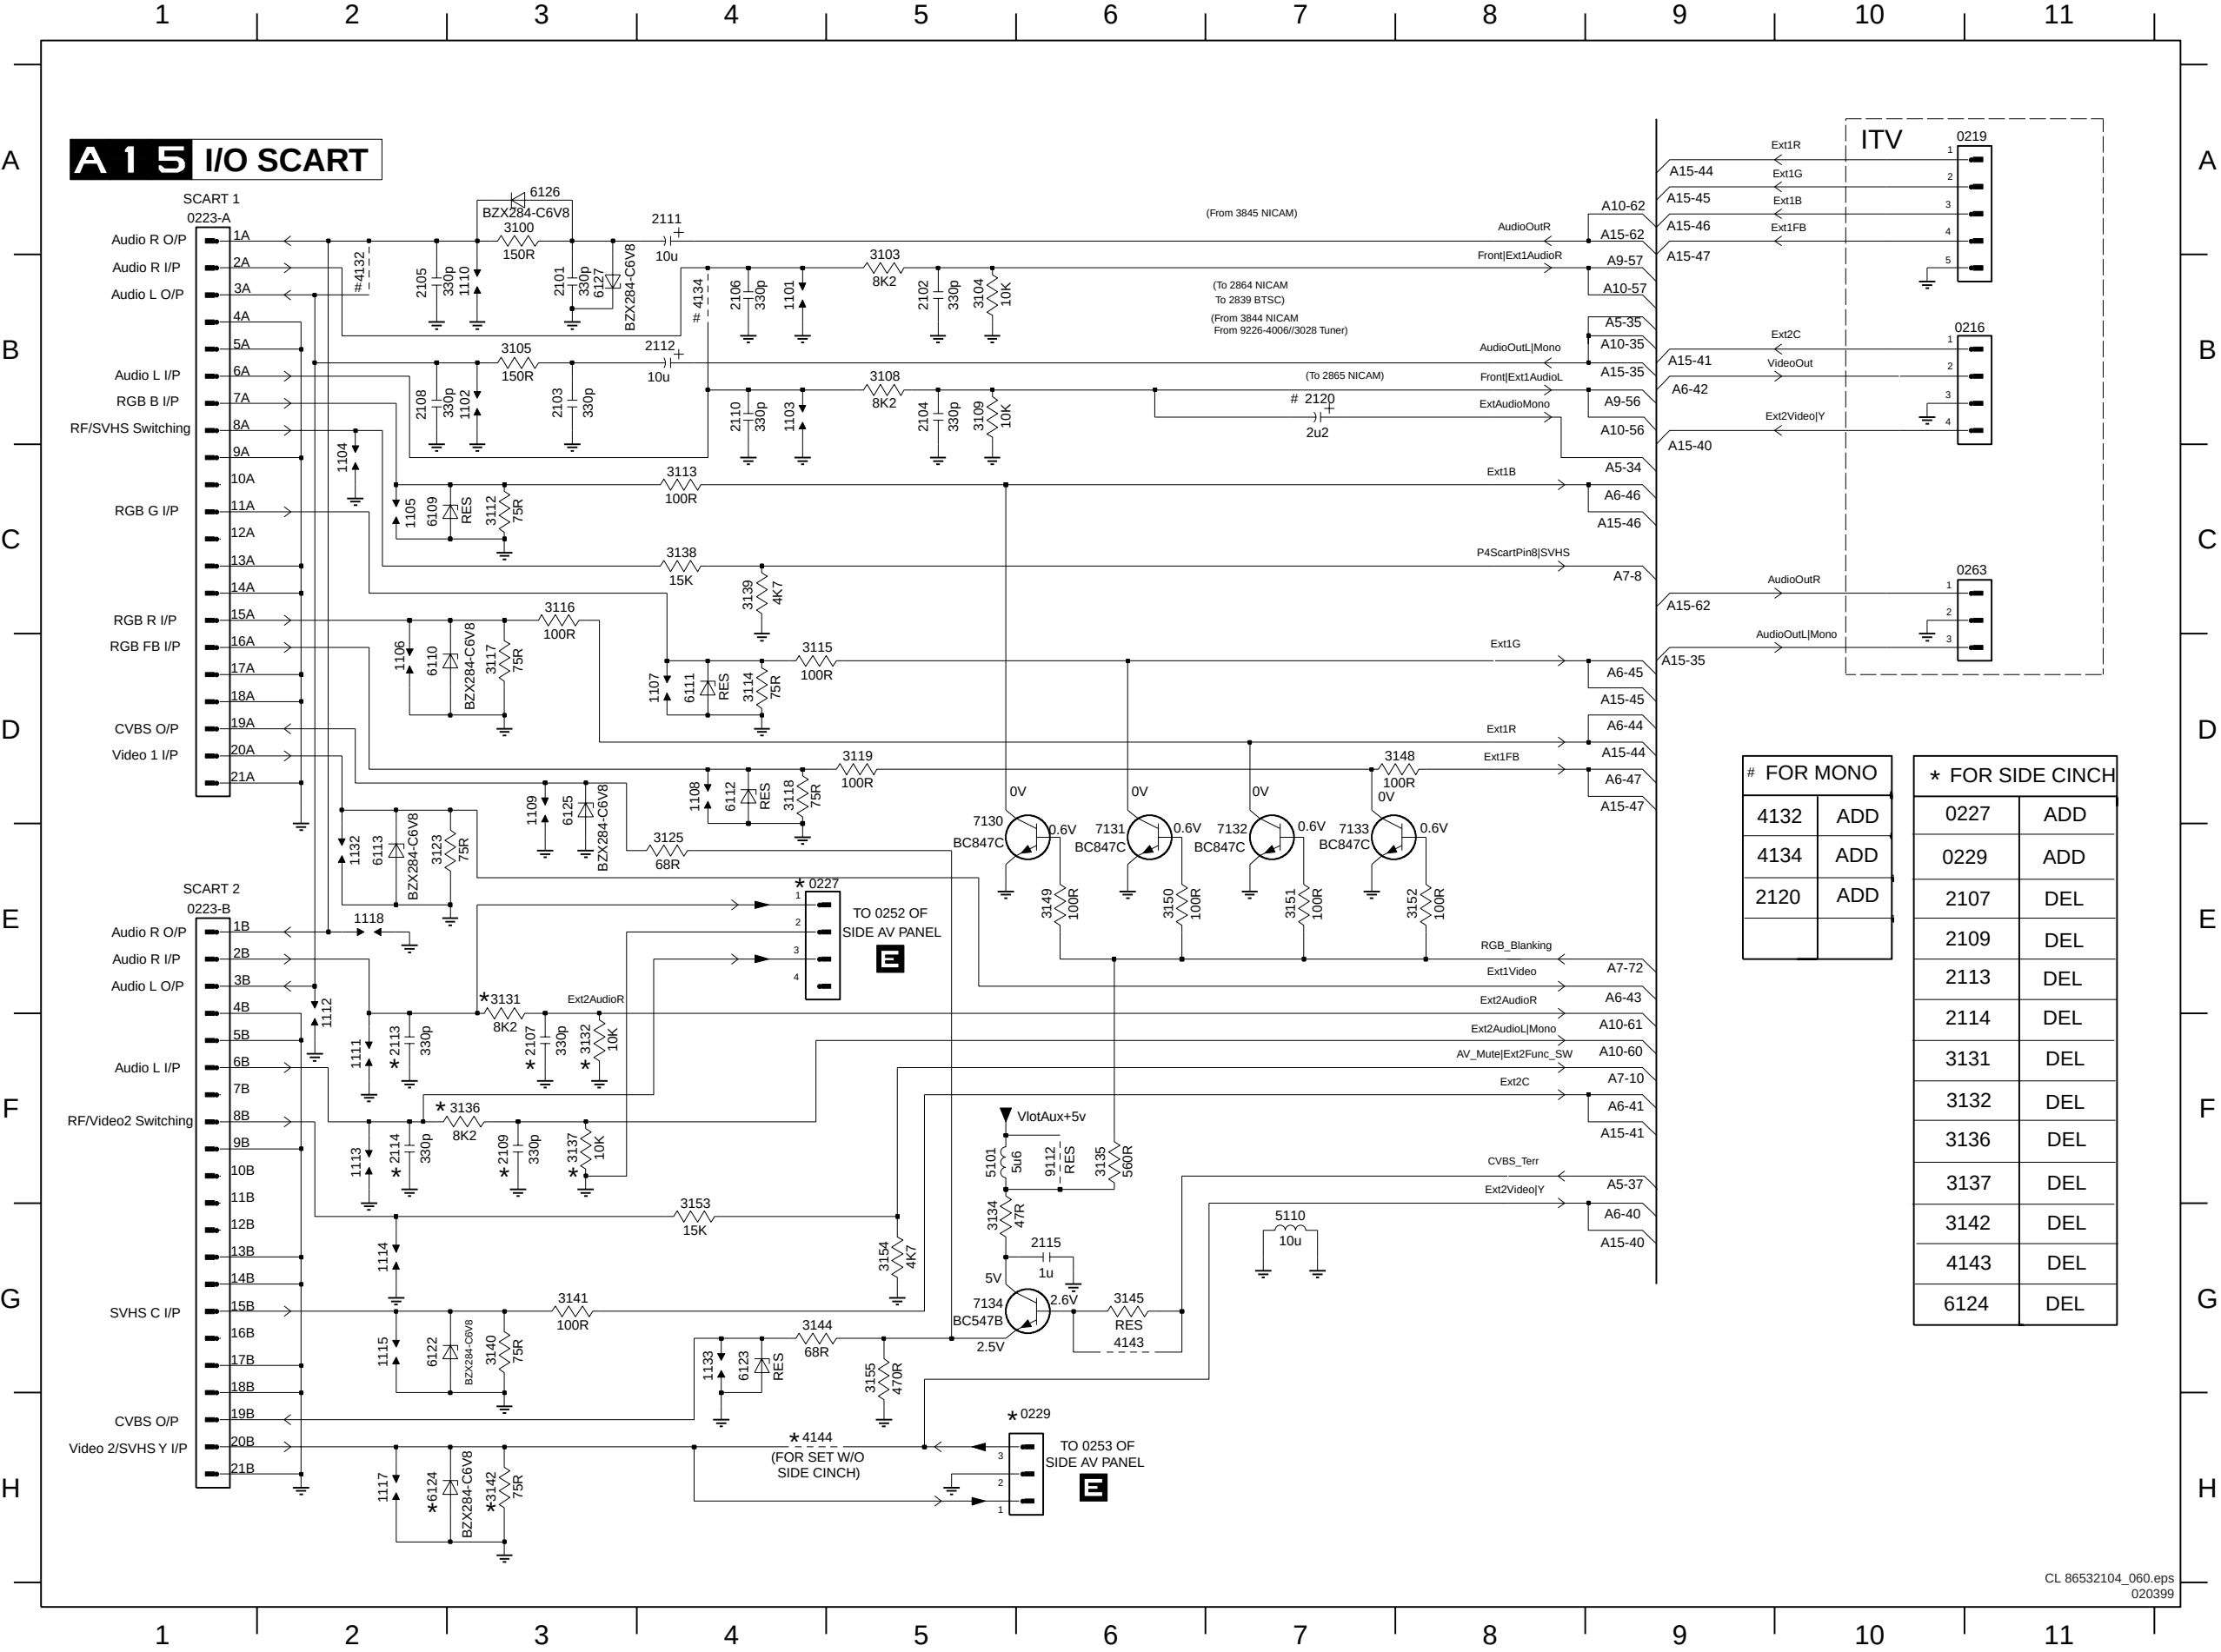

L9.1E 40

 

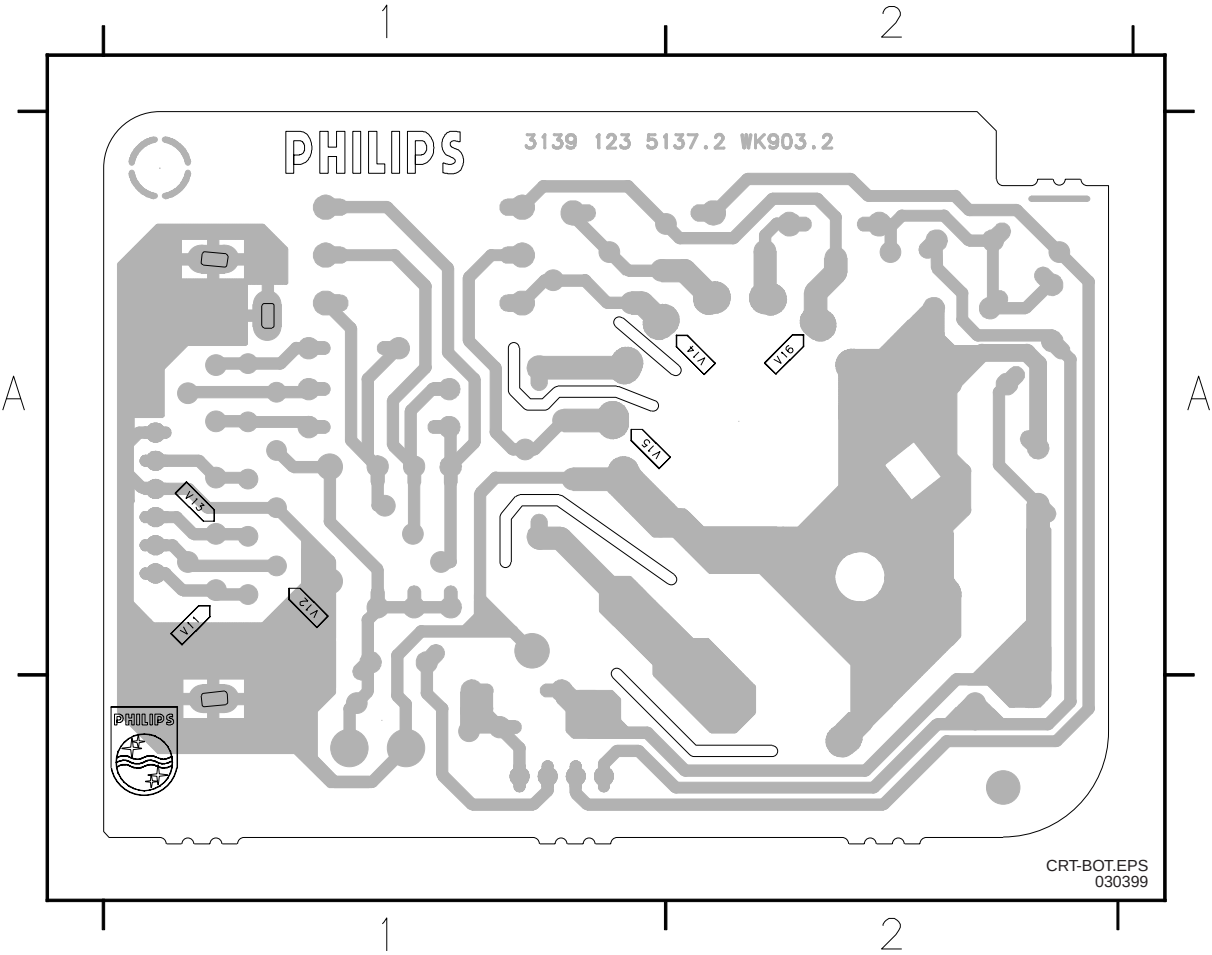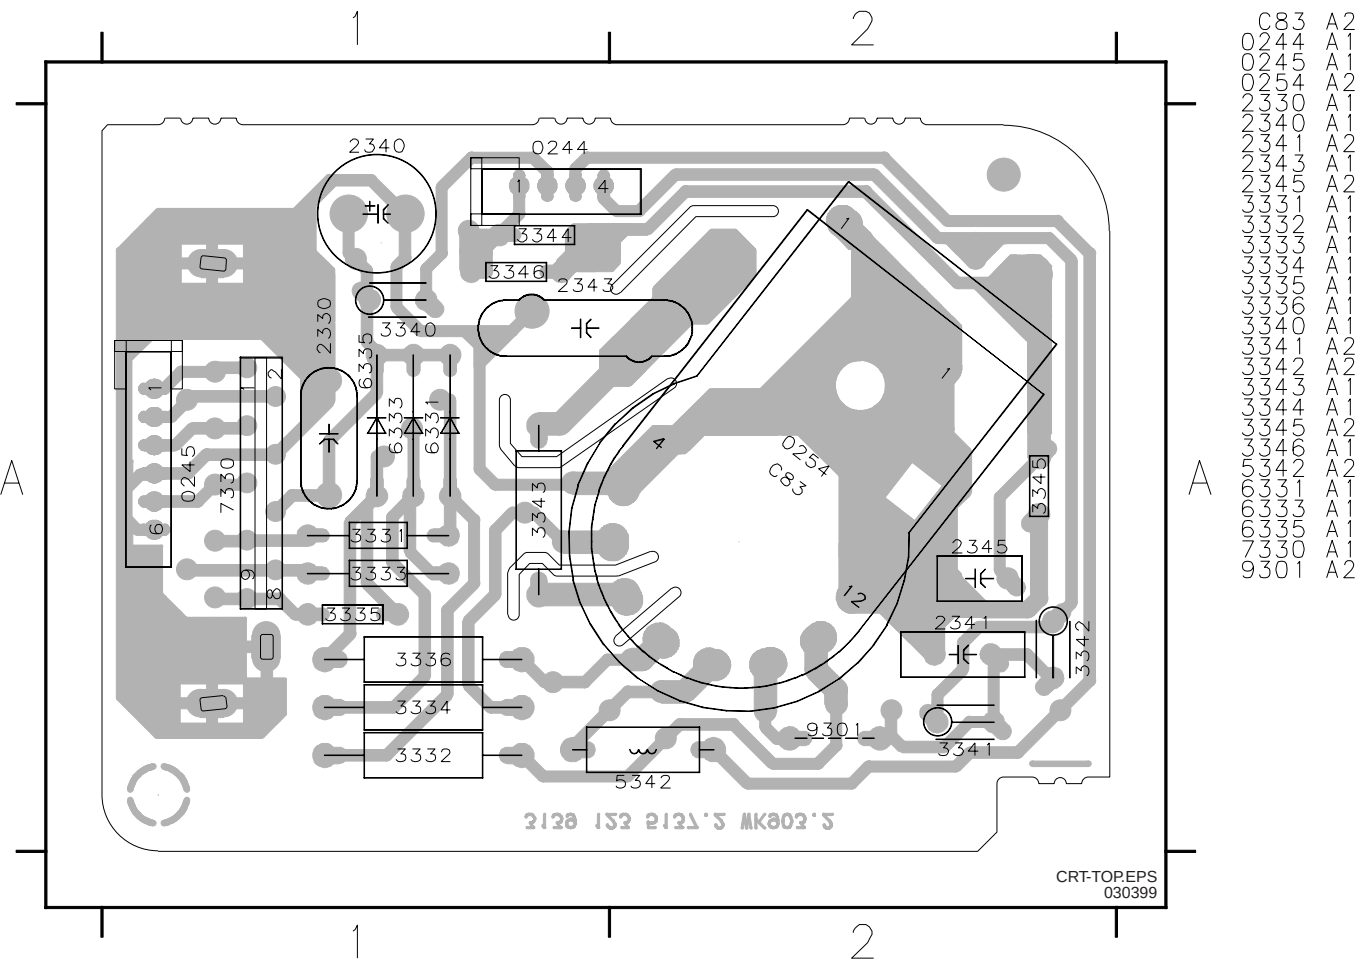

Personal notes:



C83	A2
244	A1
245	A1
254	A2
330	A1
340	A1
341	A2
343	A1
345	A2
331	A1
332	A1
333	A1
334	A1
335	A1
336	A1
337	A1
338	A1
339	A1
340	A2
341	A2
342	A2
343	A1
344	A1
345	A2
346	A1
347	A2
348	A1
349	A1
350	A1
351	A1
352	A1
353	A1
354	A1
355	A1
356	A1
357	A1
358	A1
359	A1
360	A1
361	A1
362	A1
363	A1
364	A1
365	A1
366	A1
367	A1
368	A1
369	A1
370	A1
371	A1
372	A1
373	A1
374	A1
375	A1
376	A1
377	A1
378	A1
379	A1
380	A1
381	A1
382	A1
383	A1
384	A1
385	A1
386	A1
387	A1
388	A1
389	A1
390	A1
391	A1
392	A1
393	A1
394	A1
395	A1
396	A1
397	A1
398	A1
399	A1
400	A1
401	A1
402	A1
403	A1
404	A1
405	A1
406	A1
407	A1
408	A1
409	A1
410	A1
411	A1
412	A1
413	A1
414	A1
415	A1
416	A1
417	A1
418	A1
419	A1
420	A1
421	A1
422	A1
423	A1
424	A1
425	A1
426	A1
427	A1
428	A1
429	A1
430	A1
431	A1
432	A1
433	A1
434	A1
435	A1
436	A1
437	A1
438	A1
439	A1
440	A1
441	A1
442	A1
443	A1
444	A1
445	A1
446	A1
447	A1
448	A1
449	A1
450	A1
451	A1
452	A1
453	A1
454	A1
455	A1
456	A1
457	A1
458	A1
459	A1
460	A1
461	A1
462	A1
463	A1
464	A1
465	A1
466	A1
467	A1
468	A1
469	A1
470	A1
471	A1
472	A1
473	A1
474	A1
475	A1
476	A1
477	A1
478	A1
479	A1
480	A1
481	A1
482	A1
483	A1
484	A1
485	A1
486	A1
487	A1
488	A1
489	A1
490	A1
491	A1
492	A1
493	A1
494	A1
495	A1
496	A1
497	A1
498	A1
499	A1
500	A1
501	A1
502	A1
503	A1
504	A1
505	A1
506	A1
507	A1
508	A1
509	A1
510	A1
511	A1
512	A1
513	A1
514	A1
515	A1
516	A1
517	A1
518	A1
519	A1
520	A1
521	A1
522	A1
523	A1
524	A1
525	A1
526	A1
527	A1
528	A1
529	A1
530	A1
531	A1
532	A1
533	A1
534	A1
535	A1
536	A1
537	A1
538	A1
539	A1
540	A1
541	A1
542	A1
543	A1
544	A1
545	A1
546	A1
547	A1
548	A1
549	A1
550	A1
551	A1
552	A1
553	A1
554	A1
555	A1
556	A1
557	A1
558	A1
559	A1
560	A1
561	A1
562	A1
563	A1
564	A1
565	A1
566	A1
567	A1
568	A1
569	A1
570	A1
571	A1
572	A1
573	A1
574	A1
575	A1
576	A1
577	A1
578	A1
579	A1
580	A1
581	A1
582	A1
583	A1
584	A1
585	A1
586	A1
587	A1
588	A1
589	A1
590	A1
591	A1
592	A1
593	A1
594	A1
595	A1
596	A1
597	A1
598	A1
599	A1
600	A1
601	A1
602	A1
603	A1
604	A1
605	A1
606	A1
607	A1
608	A1
609	A1
610	A1
611	A1
612	A1
613	A1
614	A1
615	A1
616	A1
617	A1
618	A1
619	A1
620	A1
621	A1
622	A1
623	A1
624	A1
625	A1
626	A1
627	A1
628	A1
629	A1
630	A1
631	A1
632	A1
633	A1
634	A1
635	A1
636	A1
637	A1
638	A1
639	A1
640	A1
641	A1
642	A1
643	A1
644	A1
645	A1
646	A1
647	A1
648	A1
649	A1
650	A1
651	A1
652	A1
653	A1
654	A1
655	A1
656	A1
657	A1
658	A1
659	A1
660	A1
661	A1
662	A1
663	A1
664	A1
665	A1
666	A1
667	A1
668	A1
669	A1
670	A1
671	A1
672	A1
673	A1
674	A1
675	A1
676	A1
677	A1
678	A1
679	A1
680	A1
681	A1
682	A1
683	A1
684	A1
685	A1
686	A1
687	A1
688	A1
689	A1
690	A1
691	A1
692	A1
693	A1
694	A1
695	A1
696	A1
697	A1
698	A1
699	A1
700	A1
701	A1
702	A1
703	A1
704	A1
705	A1
706	A1
707	A1
708	A1
709	A1
710	A1
711	A1
712	A1
713	A1
714	A1
715	A1
716	A1
717	A1
718	A1
719	A1
720	A1
721	A1
722	A1
723	A1
724	A1
725	A1
726	A1
727	A1
728	A1
729	A1
730	A1
731	A1
732	A1
733	A1
734	A1
735	A1
736	A1
737	A1
738	A1
739	A1
740	A1
741	A1
742	A1
743	A1
744	A1
745	A1
746	A1
747	A1
748	A1
749	A1
750	A1
751	A1
752	A1
753	A1
754	A1
755	A1
756	A1
757	A1
758	A1
759	A1
760	A1
761	A1
762	A1
763	A1
764	A1
765	A1
766	A1
767	A1
768	A1
769	A1
770	A1
771	A1
772	A1
773	A1
774	A1
775	A1
776	A1
777	A1
778	A1
779	A1
780	A1
781	A1
782	A

7 Electrical diagrams and print lay-outs

L9.1E

42

0250-A C2	0250-C B2	0252 B2	0261 D5	1153 D3	2171 D4	2173 C3	3150 D4	3152 C4	3155 A4	6161 A3	9153 B3
0250-B D2	0251 B5	0253 A5	1152 A3	1154 C3	2172 C4	2174 D3	3151 C3	3153 B3	5010 C4	9152 C3	9155 C4

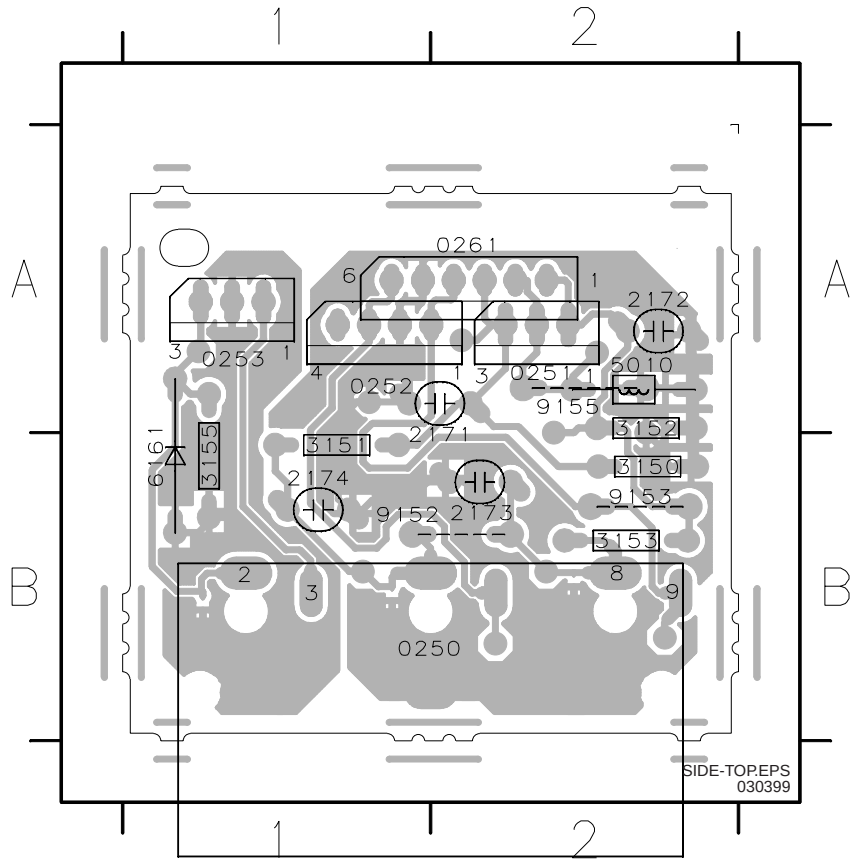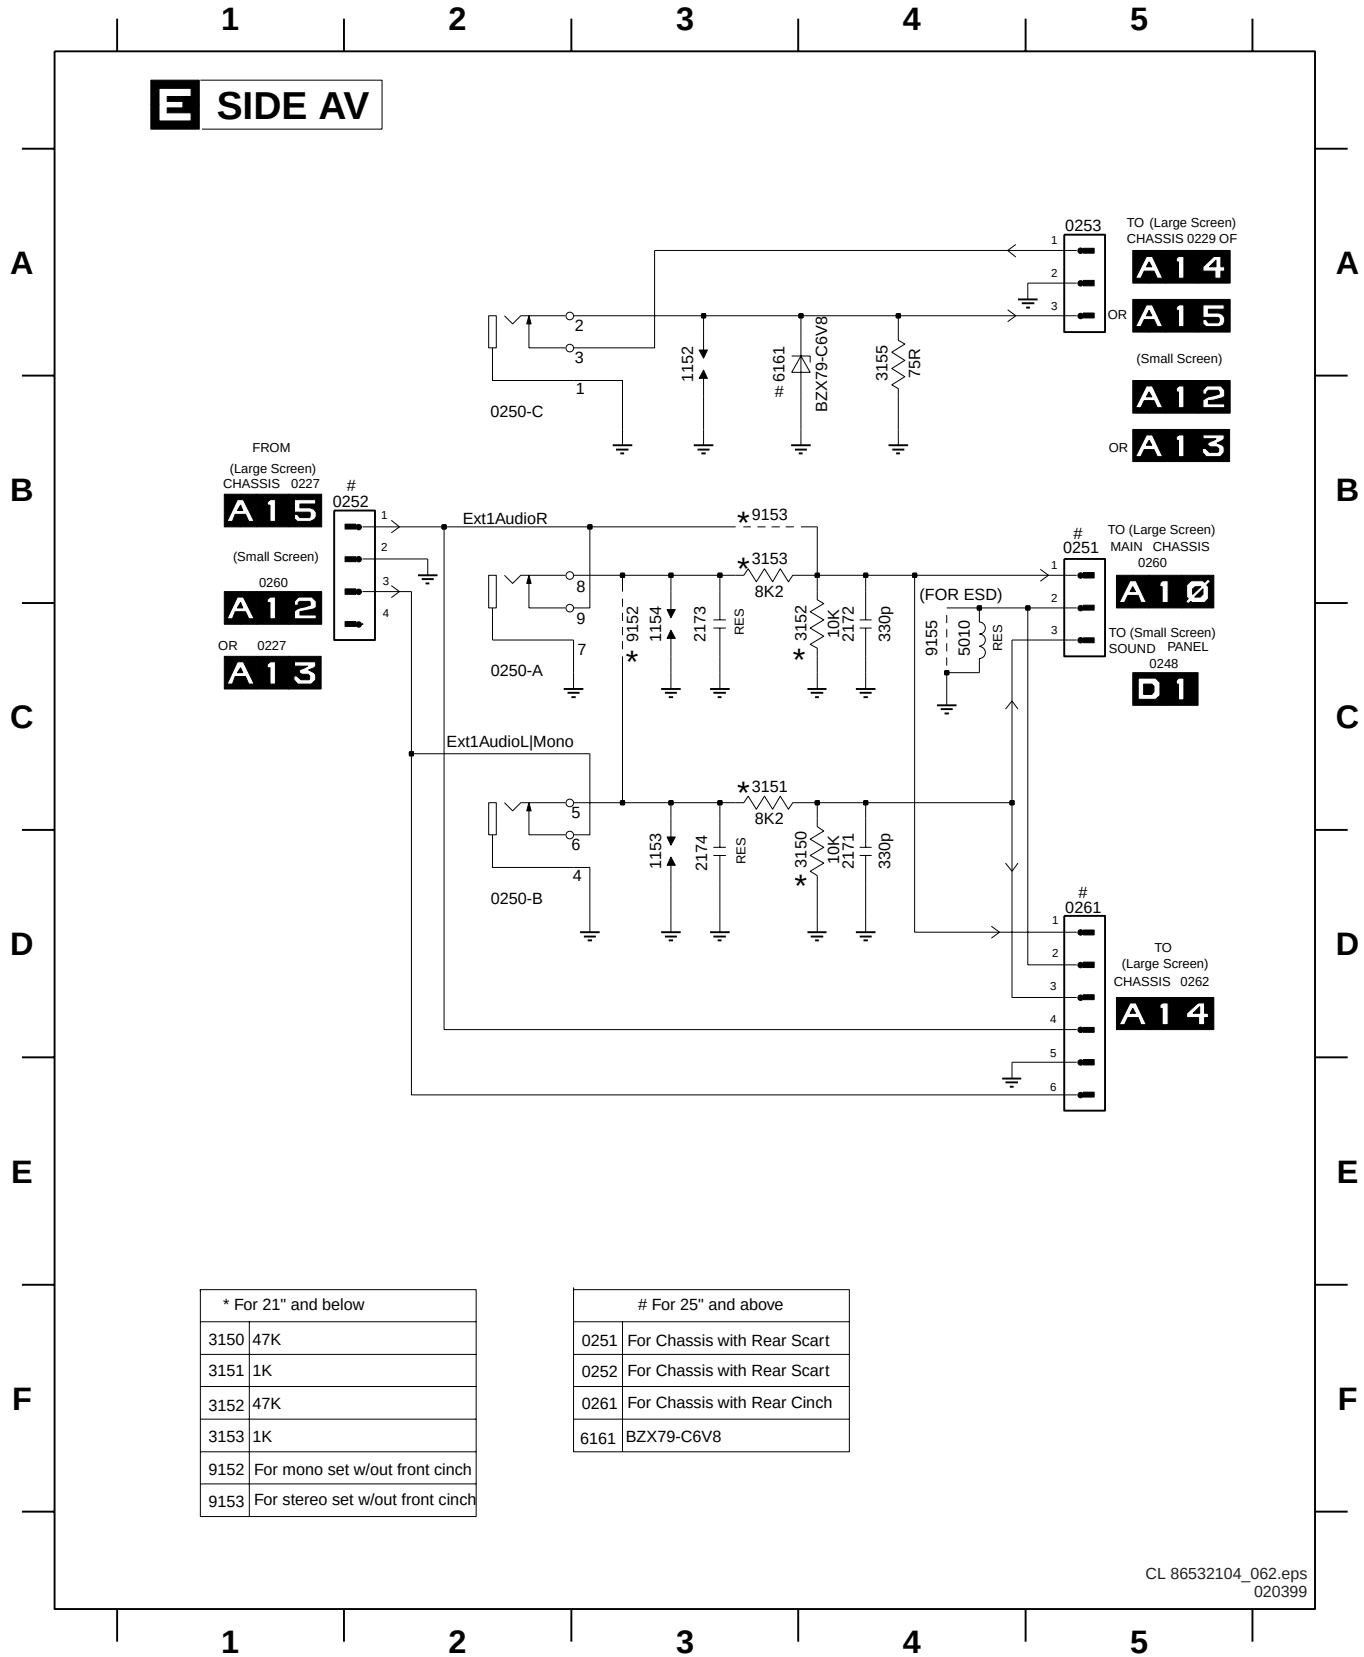[illegible]

Service
Service
Service

Service Information



In the 21PT3942 the mono-carrier PCB-layout L91A is introduced to improve the audio power and 1 new panel is added : Side AV panel & Headphone (E1).

Entering the SDM has changed. By connecting pin 20 to ground at cold start.

Entering the SAM has changed. Shorting pin M28 and M29 is no longer valid.

© Copyright 2000 Philips Consumer Electronics B.V. Eindhoven, The Netherlands.
All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted, in any form or by any means, electronic, mechanical, photocopying, or otherwise without the prior permission of Philips.




PHILIPS

Electrical diagram and PWB

Side AV panel & headphone

E 1 SIDE AV PANEL & HEADPHONE

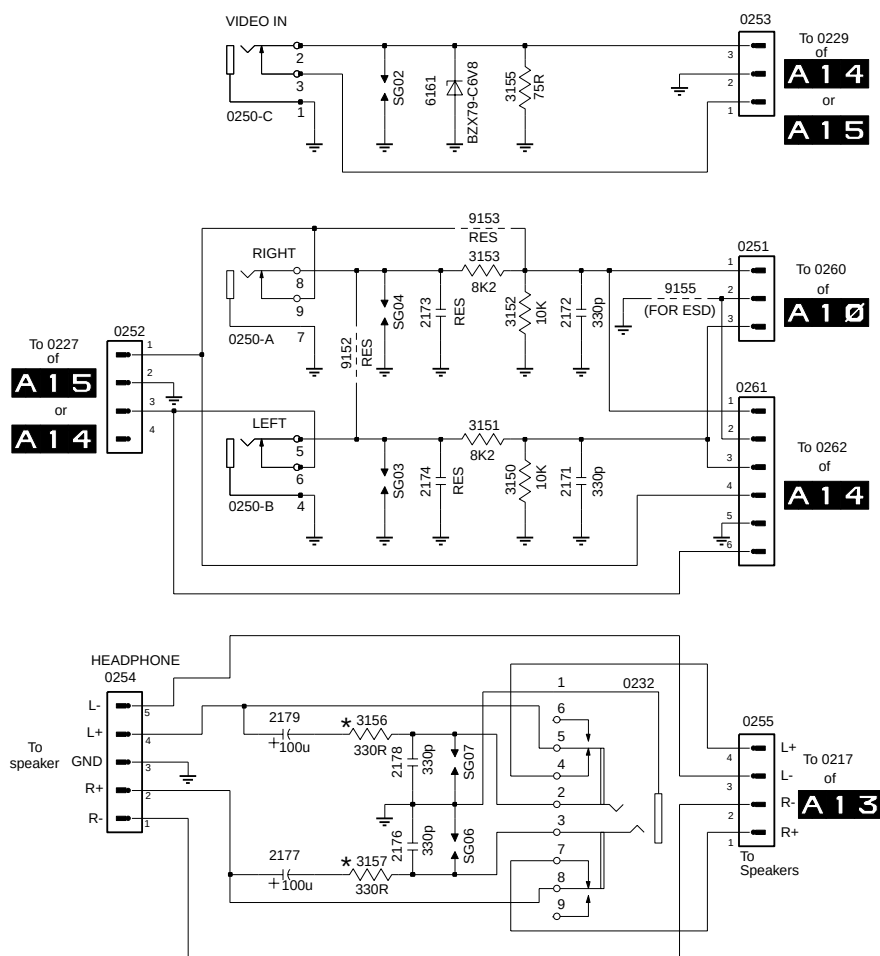

*	EUROPE	AP/INDIA/LATAM
3156	330R	120R
3157	330R	120R

0232 E4
0250-A C3
0250-B D3
0250-C B3
0251 C5
0252 D2
0253 B5
0254 E2
0255 E5
0261 D5
2171 D4
2172 C4
2173 C4
2174 D4
2176 F3
2177 F3
2178 F3
2179 E3
3150 D4
3151 D4
3152 C4
3153 C4
3155 B4
3156 E3
3157 F3
6161 B3
9152 D3
9153 C4
9155 C5
SG02 B3
SG03 D3
SG04 C3
SG06 F4
SG07 F4

Technical drawing of a PCB layout for a power supply unit. The drawing includes a coordinate grid with labels 1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47, 48, 49, 50, 51, 52, 53, 54, 55, 56, 57, 58, 59, 60, 61, 62, 63, 64, 65, 66, 67, 68, 69, 70, 71, 72, 73, 74, 75, 76, 77, 78, 79, 80, 81, 82, 83, 84, 85, 86, 87, 88, 89, 90, 91, 92, 93, 94, 95, 96, 97, 98, 99, 100, 101, 102, 103, 104, 105, 106, 107, 108, 109, 110, 111, 112, 113, 114, 115, 116, 117, 118, 119, 120, 121, 122, 123, 124, 125, 126, 127, 128, 129, 130, 131, 132, 133, 134, 135, 136, 137, 138, 139, 140, 141, 142, 143, 144, 145, 146, 147, 148, 149, 150, 151, 152, 153, 154, 155, 156, 157, 158, 159, 160, 161, 162, 163, 164, 165, 166, 167, 168, 169, 170, 171, 172, 173, 174, 175, 176, 177, 178, 179, 180, 181, 182, 183, 184, 185, 186, 187, 188, 189, 190, 191, 192, 193, 194, 195, 196, 197, 198, 199, 200, 201, 202, 203, 204, 205, 206, 207, 208, 209, 210, 211, 212, 213, 214, 215, 216, 217, 218, 219, 220, 221, 222, 223, 224, 225, 226, 227, 228, 229, 230, 231, 232, 233, 234, 235, 236, 237, 238, 239, 240, 241, 242, 243, 244, 245, 246, 247, 248, 249, 250, 251, 252, 253, 254, 255, 256, 257, 258, 259, 260, 261, 262, 263, 264, 265, 266, 267, 268, 269, 270, 271, 272, 273, 274, 275, 276, 277, 278, 279, 280, 281, 282, 283, 284, 285, 286, 287, 288, 289, 290, 291, 292, 293, 294, 295, 296, 297, 298, 299, 300, 301, 302, 303, 304, 305, 306, 307, 308, 309, 310, 311, 312, 313, 314, 315, 316, 317, 318, 319, 320, 321, 322, 323, 324, 325, 326, 327, 328, 329, 330, 331, 332, 333, 334, 335, 336, 337, 338, 339, 340, 341, 342, 343, 344, 345, 346, 347, 348, 349, 350, 351, 352, 353, 354, 355, 356, 357, 358, 359, 360, 361, 362, 363, 364, 365, 366, 367, 368, 369, 370, 371, 372, 373, 374, 375, 376, 377, 378, 379, 380, 381, 382, 383, 384, 385, 386, 387, 388, 389, 390, 391, 392, 393, 394, 395, 396, 397, 398, 399, 400, 401, 402, 403, 404, 405, 406, 407, 408, 409, 410, 411, 412, 413, 414, 415, 416, 417, 418, 419, 420, 421, 422, 423, 424, 425, 426, 427, 428, 429, 430, 431, 432, 433, 434, 435, 436, 437, 438, 439, 440, 441, 442, 443, 444, 445, 446, 447, 448, 449, 450, 451, 452, 453, 454, 455, 456, 457, 458, 459, 460, 461, 462, 463, 464, 465, 466, 467, 468, 469, 470, 471, 472, 473, 474, 475, 476, 477, 478, 479, 480, 481, 482, 483, 484, 485, 486, 487, 488, 489, 490, 491, 492, 493, 494, 495, 496, 497, 498, 499, 500, 501, 502, 503, 504, 505, 506, 507, 508, 509, 510, 511, 512, 513, 514, 515, 516, 517, 518, 519, 520, 521, 522, 523, 524, 525, 526, 527, 528, 529, 530, 531, 532, 533, 534, 535, 536, 537, 538, 539, 540, 541, 542, 543, 544, 545, 546, 547, 548, 549, 550, 551, 552, 553, 554, 555, 556, 557, 558, 559, 560, 561, 562, 563, 564, 565, 566, 567, 568, 569, 570, 571, 572, 573, 574, 575, 576, 577, 578, 579, 580, 581, 582, 583, 584, 585, 586, 587, 588, 589, 590, 591, 592, 593, 594, 595, 596, 597, 598, 599, 600, 601, 602, 603, 604, 605, 606, 607, 608, 609, 610, 611, 612, 613, 614, 615, 616, 617, 618, 619, 620, 621, 622, 623, 624, 625, 626, 627, 628, 629, 630, 631, 632, 633, 634, 635, 636, 637, 638, 639, 640, 641, 642, 643, 644, 645, 646, 647, 648, 649, 650, 651, 652, 653, 654, 655, 656, 657, 658, 659, 660, 661, 662, 663, 664, 665, 666, 667, 668, 669, 670, 671, 672, 673, 674, 675, 676, 677, 678, 679, 680, 681, 682, 683, 684, 685, 686, 687, 688, 689, 690, 691, 692, 693, 694, 695, 696, 697, 698, 699, 700, 701, 702, 703, 704, 705, 706, 707, 708, 709, 710, 711, 712, 713, 714, 715, 716, 717, 718, 719, 720, 721, 722, 723, 724, 725, 726, 727, 728, 729, 730, 731, 732, 733, 734, 735, 736, 737, 738, 739, 740, 741, 742, 743, 744, 745, 746, 747, 748, 749, 750, 751, 752, 753, 754, 755, 756, 757, 758, 759, 760, 761, 762, 763, 764, 765, 766, 767, 768, 769, 770, 771, 772, 773, 774, 775, 776, 777, 778, 779, 780, 781, 782, 783, 784, 785, 786, 787, 788, 789, 790, 791, 792, 793, 794, 795, 796, 797, 798, 799, 800, 801, 802, 803, 804, 805, 806, 807, 808, 809, 810, 811, 812, 813, 814, 815, 816, 817, 818, 819, 820, 821, 822, 823, 824, 825, 826, 827, 828, 829, 830, 831

CL 06532025_031.eps
030400

0232	C1
0250	B1
0251	B2
0252	B2
0253	A2
0254	C2
0255	C2
0261	B2
2171	B2
2172	B2
2173	B1
2174	A1
2176	C1
2177	C1
2178	C1
2179	C1
3150	B1
3151	A1
3152	B2
3153	B1
3155	A1
3156	C2
3157	C2
6161	A1
9152	B1
9153	B1
9155	B2


Spare parts list

Side AV (E1)				
Various				
0021	3139 124 32391	Side AV bracket		
0250	4822 265 11606	Cinch 3 AV		
0253	4822 267 10735	Connector 3P		
0261	2422 025 12482	Connector 6P		
-H-				
2171	4822 126 13512	50V 330pF 5%		
2172	4822 126 13512	50V 330pF 5%		
2173	4822 126 13512	50V 330pF 5%		
2174	4822 126 13512	50V 330pF 5%		
-□-				
3150▲	4822 050 21003	10k 5% 0.1W		
3151▲	4822 116 52303	8k2 5% 0.1W		
3152▲	4822 050 21003	10k 5% 0.1W		
3153▲	4822 116 52303	8k2 5% 0.1W		
3155▲	4822 116 52201	75Ω 5% 0.1W		
->H-				
6161	4822 130 10852	BZX284-C6V8		

Service Service Service

L9.1E

AA

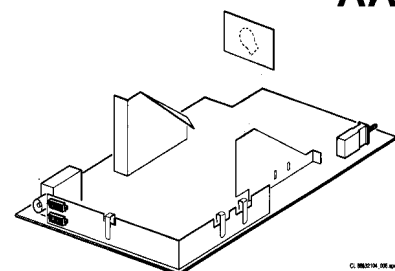

Service Manual

Table of contents

	Page			
1. Technical specifications	2	Tuner and VIF	diagram A5	29 32,34
2. Connection facilities and chassis overview	3	Video processing	diagram A6	30 32,34
3. Safety and maintenance instructions	5	Control	diagram A7	31 32,34
4. Mechanical instructions	7	Front Control	diagram A8	33 32,34
5. Faultfinding and repair tips	8	NICAM/2CS	diagram A10	36 32,34
6. Fault finding trees	17	Smart Sound	diagram A11	35 32,34
Supply voltages diagram	21	Audio amplifier	diagram A12	37 32,34
Blockdiagram	22	Headphone	diagram A13	38 32,34
Testpoint overviews	23	IO Scart (Europe)	diagram A15	39 32,34
7. Electrical Diagrams and print lay-outs		CRT panel	diagram B	40 41
		Side AV	diagram E	42 42
	<i>Diagram PWB</i>			
Power supply	diagram A1	24	32,34	
Diversity tables		25	32,34	
Horizontal deflection	diagram A2	26	32,34	
Vertical deflection	diagram A3	27	32,34	
Synchronisation	diagram A4	28	32,34	
		8. Alignments		43
		9. Circuit description new circuits		48
		10. Directions for use		54
		11. List of abbreviations		60
		12. Spare parts list		62

©Copyright reserved 1999 Philips Consumer Electronics B.V. Eindhoven, The Netherlands. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted, in any form or by any means, electronic, mechanical, photocopying, or otherwise without the prior permission of Philips.



PHILIPS

Mains voltage : 90V - 276Vac; 50-60Hz

Maximum power consumption

- 25" : 75W +/- 10%
- 28" : 90W +/- 10%
- 29" : 90W +/- 10%

Standby power consumption : 6W +/- 10%

Colour Synchronisation :

Sub-carrier pull in range : +/- 300Hz

Horizontal Synchronisation :

Catching range : +/- 600 Hz

Holding range : +/- 1200 Hz

Vertical Lock Range : 49 Hz - 61Hz

Tuners : UV 1316/AI-2 (PAL/SECAM)

2.1 Specification of the terminal sockets

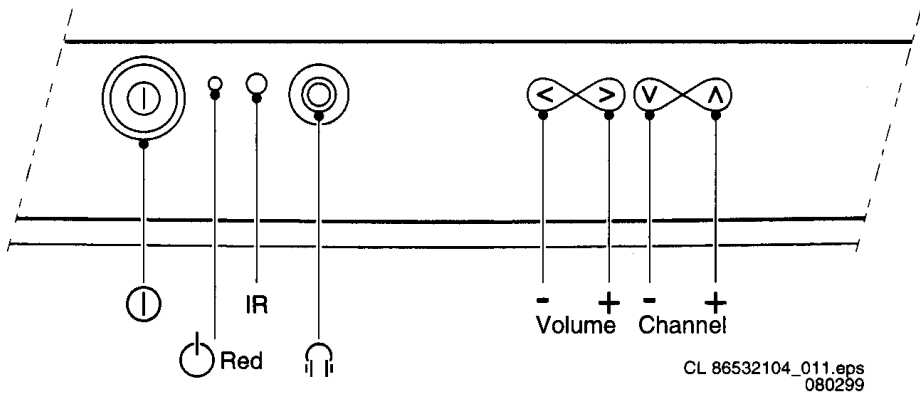


Figure 2-1

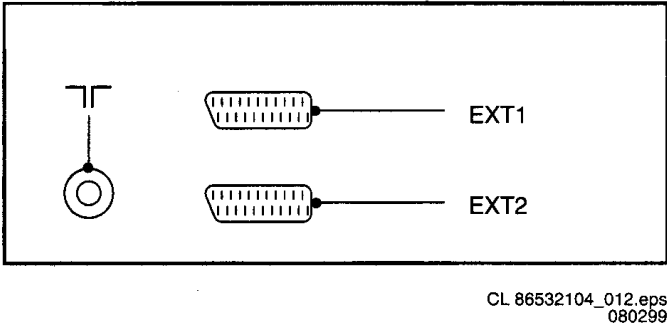



Figure 2-2

2.1.1 Scart 1: CVBS(in/out) + RGB(in) - tuner at output

- | | | |
|-----|--|---|
| 1- | Audio Out R (0.5Vrms <= 1kΩ) | ⊕ |
| 2- | Audio In R (0.2-2Vrms >= 10kΩ) | ⊕ |
| 3- | Audio Out L (0.5Vrms <= 1kΩ) | ⊕ |
| 4- | Earth screen | ⊥ |
| 5- | Earth screen | ⊥ |
| 6- | Audio In L (0.2-2Vrms >= 10kΩ) | ⊕ |
| 7- | Blue (0.7Vpp/75Ω) | ⊕ |
| 8- | CVBS status (INT = 0-2V, EXT(16:9) = 4.5-7V, EXT(4:3) = 9.5-12V) | ⊕ |
| 9- | Earth screen | ⊥ |
| 10- | - | |
| 11- | Green (0.7Vpp/75Ω) | ⊕ |
| 12- | - | |
| 13- | Earth screen | ⊥ |
| 14- | Earth screen | ⊥ |
| 15- | Red (0.7Vpp/75Ω) | ⊕ |
| 16- | FBL (>0.9V RGB mode) | ⊕ |
| 17- | Earth screen | ⊥ |
| 18- | Earth screen | ⊥ |
| 19- | CVBS | ⊕ |
| 20- | CVBS (1Vpp/75Ω) | ⊕ |
| 21- | Earth screen | ⊥ |

- | | |
|-----|-------------------|
| 9- | Earth screen |
| 10- | - |
| 11- | - |
| 12- | - |
| 13- | Earth screen |
| 14- | Earth screen |
| 15- | C (300mVpp/75Ω) |
| 16- | - |
| 17- | Earth screen |
| 18- | Earth screen |
| 19- | CVBS |
| 20- | CVBS/Y (1Vpp/75Ω) |
| 21- | Earth screen |

2.1.3 Cinch - audio/video in

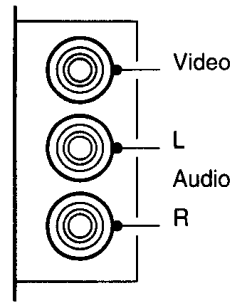

2.1.2 Scart 2: CVBS (in/out) + SVHS(in)

- Input = EXT2 => output = tuner
- Input = tuner/EXT1 => output = tuner/EXT1
- | | | |
|----|--|---|
| 1- | Audio Out R (0.5Vrms <= 1kΩ) | ⊕ |
| 2- | Audio In R (0.2-2Vrms >= 10kΩ) | ⊕ |
| 3- | Audio Out L (0.5Vrms <= 1kΩ) | ⊕ |
| 4- | Earth screen | ⊥ |
| 5- | Earth screen | ⊥ |
| 6- | Audio In L (0.2-2Vrms >= 10kΩ) | ⊕ |
| 7- | - | |
| 8- | CVBS status (INT = 0-2V, EXT(16:9) = 4.5-7V, EXT(4:3) = 9.5-12V) | ⊕ |

- | | | |
|----|----------------------------------|---|
| 1- | CVBS (yellow)(1Vpp 75Ω) | ⊕ |
| 2- | Audio L (red) (0.2-2Vrms 10kΩ) | ⊕ |
| 3- | Audio R (white) (0.2-2Vrms 10kΩ) | ⊕ |

2.1.4 Headphone

- | | | |
|----|--------------|---|
| 1- | 8-600Ω (4mW) | ⊕ |
|----|--------------|---|

2 Connection facilities and chassis overview

2.2 PCB location drawing

E

SIDE AV PANEL

CRT PANEL

B

POWER SUPPLY

A1

HOR. DEFLECTION

A2

VERT. DEFLECTION

A3

SYNCHRONISATION

A4

TUNER + VIDEO IF

A5

VIDEO PROCESSING

A6CONTROL (μ C)**A7**

FRONT CONTROL

A8

NICAM + 2CS DECODER

A10

SMART SOUND

A11

AUDIO AMPLIFIER

A12

HEADPHONE

A13

I/O SCART

A15MAIN
CHASSIS
PANEL

3.1 Safety instructions for repairs



Figure 3-1

1. Safety regulations require that during a repair:
 - the set should be connected to the mains via an isolating transformer;
 - safety components, indicated by the symbol (see fig. 3.1), should be replaced by components identical to the original ones;
 - when replacing the CRT, safety goggles must be worn.

2. Safety regulations require that after a repair the set must be returned in its original condition. In particular attention should be paid to the following points.
 - As a strict precaution, we advise you to resolder the solder joints through which the horizontal deflection current is flowing, in particular:
 - all pins of the line output transformer (LOT);
 - fly-back capacitor(s);
 - S-correction capacitor(s);
 - line output transistor;
 - pins of the connector with wires to the deflection coil;
 - other components through which the deflection current flows.

Note: This resoldering is advised to prevent bad connections due to metal fatigue in solder joints and is therefore only necessary for television sets older than 2 years. The wire trees and EHT cable should be routed correctly and fixed with the mounted cable clamps.

- The insulation of the mains lead should be checked for external damage.
- The mains lead strain relief should be checked for its function in order to avoid touching the CRT, hot components or heat sinks.
- The electrical DC resistance between the mains plug and the secondary side should be checked (only for sets which have a mains isolated power supply). This check can be done as follows:
 - unplug the mains cord and connect a wire between the two pins of the mains plug;
 - set the mains switch to the on position (keep the mains cord unplugged!);
 - measure the resistance value between the pins of the mains plug and the metal shielding of the tuner or the aerial connection on the set. The reading should be between 4.5 MΩ and 12 MΩ;
 - switch off the TV and remove the wire between the two pins of the mains plug.
- The cabinet should be checked for defects to avoid touching of any inner parts by the customer.

3.2 Maintenance instruction

It is recommended to have a maintenance inspection carried out by a qualified service employee. The interval depends on the usage conditions:

- When the set is used under normal circumstances, for example in a living room, the recommended interval is 3 to 5 years.

- When the set is used in circumstances with higher dust, grease or moisture levels, for example in a kitchen, the recommended interval is 1 year.
- The maintenance inspection contains the following actions:
 - Execute the above mentioned 'general repair instruction'.
 - Clean the power supply and deflection circuitry on the chassis.
 - Clean the picture tube panel and the neck of the picture tube.

3.3 Warnings



1. ESD

All ICs and many other semiconductors are susceptible to electrostatic discharges (ESD). Careless handling during repair can reduce life drastically. When repairing, make sure that you are connected with the same potential as the mass of the set by a wristband with resistance. Keep components and tools also at this same potential.

 - complete kit ESD3 small table mat, wristband, connectionbox, extensioncable and earthcable 4822 310 10671
 - wristband tester 4822 344 13999
2. In order to prevent damage to ICs and transistors, all high-voltage flashovers must be avoided. In order to prevent damage to the picture tube, the method shown in Fig. 3.2 should be used to discharge the picture tube. Use a high-voltage probe and a multimeter (position DC-V). Discharge until the meter reading is 0V (after approx. 30s).
3. Together with the deflection unit and any multipole unit, the flat square picture tubes used from an integrated unit. The deflection and the multipole units are set optimally at the factory. Adjustment of this unit during repair is therefore not recommended.
4. Be careful during measurements in the high-voltage section and on the picture tube.
5. Never replace modules or other components while the unit is switched on.
6. When making settings, use plastic rather than metal tools. This will prevent any short circuits and the danger of a circuit becoming unstable.
7. Wear safety goggles during replacement of the picture tube

3.4 Notes

1. The direct voltages and oscillograms should be measured with regard to the tuner earth, or hot earth as this is called (see fig. 3.3)
2. The direct voltages and oscillograms shown in the diagrams are indicative and should be measured in the Service Default Mode (see chapter 8) with a colour bar signal and stereo sound (L:3 kHz, R:1 kHz unless stated otherwise) and picture carrier at 475.25 MHz.
3. Where necessary, the oscillograms and direct voltages are measured with and without aerial signal. Voltages in the power supply section are measured both for normal operation and in standby. These values are indicated by means of the appropriate symbols (see fig. 3.3).
4. The picture tube PWB has printed spark gaps. Each spark gap is connected between an electrode of the picture tube and the Aquadag coating.
5. The semiconductors indicated in the circuit diagram and in the parts lists are completely interchangeable per position with the semiconductors in the unit, irrespective of the type indication on these semiconductors.

6. Manufactured under license from Dolby Laboratories Licensing Corporation.
7. DOLBY, the double D symbol and PRO LOGIC are trademarks of Dolby Laboratories Licensing Corporation.

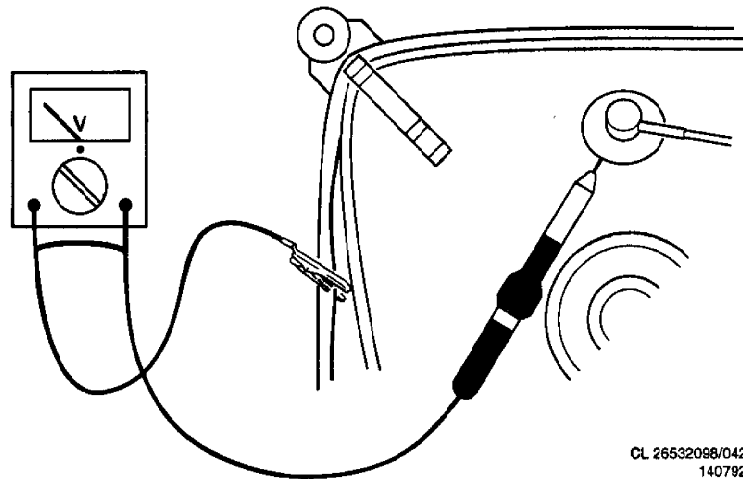


Figure 3-2

 tuner earth tuner aarde la masse du tuner Tuner-Erde massa del tuner tierra del sintonizador	 hot earth hete aarde la terre directe heißen Erde massa calda tierra caliente
 with aerial signal met antenne signaal avec signal d'antenne mit Antennensignal con segnale d'antenna con la señal de antena	 without aerial signal zonder antenne signaal sans signal d'antenne ohne Antennensignal senza segnale d'antenna sin la señal de antena
 normal condition normaal bedrijf fonctionnement normal normaler Betrieb funzionamento normale funcionamiento normal	 stand by stand by position de veille in Bereitschaft modo di attesa posición de espera

Figure 3-3

4 Mechanical instructions

L9.1E


7

4.1 Service positions

See figure 4.1 for the service position.

1. Disconnect the connecting cable feeding the right-hand speaker, also disconnect the degaussing cable.

2. The mono-carrier is removed by pushing the two centre clips (1) at both chassis brackets outwards and pulling the panel forward. (2)
3. Flip the mono-carrier over so that the component side of the board faces towards the CRT.
4. Slide the metal heat sink underneath the left chassis bracket (3) until the carrier is locked in position.

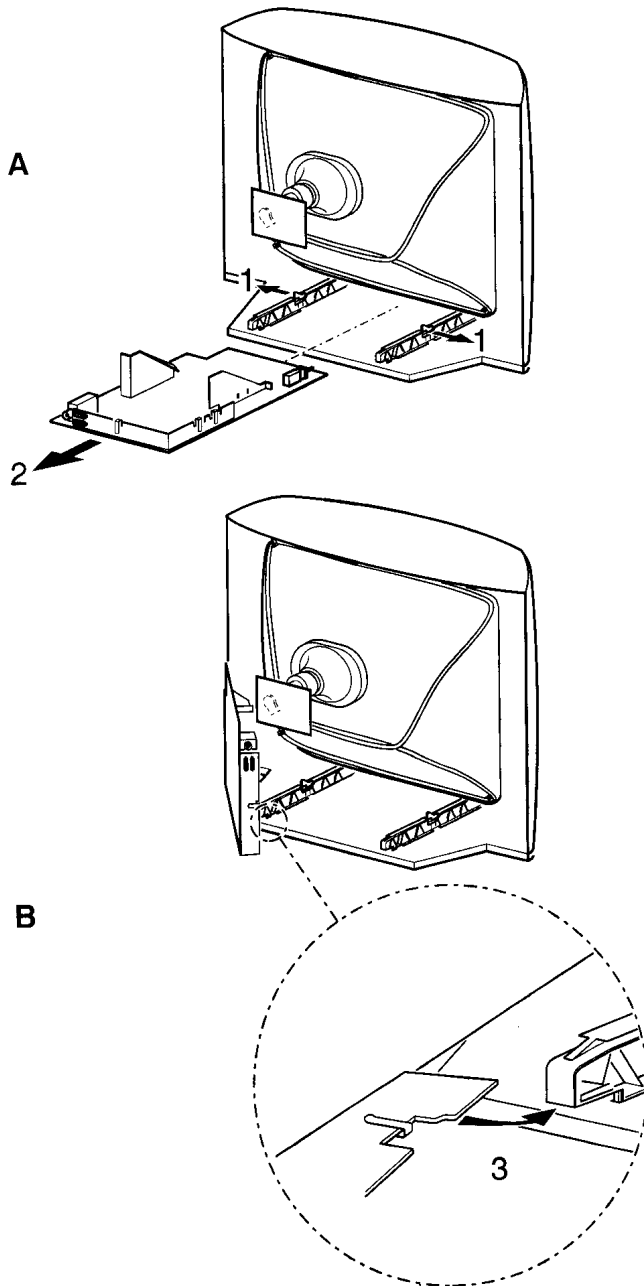

CL 86532104_007.ai
170299

Figure 4-1

This chapter includes information covering:

- 5.1 Test points
- 5.2 Service Modes and Dealer Service Tool (DST)
- 5.3 The menus and submenus
- 5.4 Error code buffer and error codes
- 5.5 The "blinking LED" procedure
- 5.6 Trouble shooting tips
- 5.7 Customer service mode
- 5.8 Compar
- 5.9 Ordering Compar

5.1 Test points

The L9.1E chassis is equipped with easily identifiable test points. These are clearly marked on the PCB. The test points refer to specific functional blocks, these are:

- A1-A2-A3, etc.: Test points for the Nicam + 2CS decoder / Audio amplifier
- C1-C2-C3, etc.: Test points for the control circuit / front control
- F1-F2-F3, etc.: Test points for the vertical deflection circuit
- I1-I2-I3, etc.: Test points for the intermediate frequency circuit
- L1-L2-L3, etc.: Test points for the horizontal deflection circuit
- P1-P2-P3, etc.: Test points for the power supply
- S1-S2-S3, etc.: Test points for the synchronisation circuit
- V1-V2-V3, etc.: Test points for the video processing circuitry / CRT panel

Measurements are performed under the following conditions:

Video: colour bar signal; audio: 3kHz left, 1kHz right

5.2 Service modes and Dealer Service Tool (DST)

For easy installation and diagnosis, the dealer service tool (DST) RC7150 can be used. When there is no picture (to access the error code buffer via the OSD). The DST can enable the set to display the entire contents of the error code buffers by using the flashing LED procedure.

Important Note: The L9.1E does not incorporate two way Infra red communication.

The part number for the DST (RC7150) is 4822 218 21232.

5.2.1 Installation features for the dealer

The dealer can use the RC7150 for programming the TV-set with presets. 10 Different program tables can be programmed into the DST via a GFL TV, MD or MG set (downloading from the TV to the DST; for example see the GFL service manuals) or by the DST-I (DST interface; part number 4822 218 21277). For an explanation of the installation features of the DST, please see the directions of use for use of the DST (for the L9.1E chassis, download code 4 should be used).

5.2.2 Diagnosis features for the service

L9.1E models can be put into either of the two available service modes by using the RC7150. These are the Service Default Mode (SDM) and the Service Alignment Mode (SAM).

5.2.3 Service Default Mode (SDM)

The purpose of the SDM is:

- Used to provide a pre defined situation (pre-defined parameters), so that the same measurements can be obtained as per the service manual.
- Overrides the 5V protection when the internal method of SDM is used (connecting together pin 24 and pin 25).
- starts the LED flashing procedure
- Setting up of options codes
- Inspect the error buffer

Entering the SDM:

- By transmitting the "DEFAULT" command with the RC7150 Dealer Service Tool (this works both while the set is in normal operation mode or in the SAM)
- Standard RC sequence 062596 followed by the key "MENU"
- By connecting test-points M25 and M24s together (on the mono-carrier) while switching on the set. After switching on the set the link should be removed (Caution!! By entering the SDM mode you Override the 5V protections).

Exit the SDM:

Switch the set to Standby or press EXIT on the DST (the error buffer is also cleared).

Note: When the mains power is switched off while the set is in SDM, the set will switch to SDM immediately when the mains is switched on again. (The error buffer will be cleared).

The SDM sets the following pre-defined conditions:

- Pal/Secam sets: tuning at 475.25 PAL (For France select the L'-signal)

Volume level is set to 25% (of the maximum volume level). Other picture and sound settings are set to 50%. The following functions are "ignored" in SDM since they interfere with diagnosing/repairing a set. "Ignoring" means that the event that is triggered is not executed, the setting remains unchanged.

- (Sleep)Timer
- Blue mute
- Auto switch off
- Hotel or Hospitality Mode
- Child lock or Parental lock
- Skipping, blanking of "Not favourite" present/channels
- Automatic storing of Personal Preset settings
- Automatic user menu time-out

All other controls operate normally.

5.2.4 Special functions in SDM

Access to normal user menu

Pressing the "MENU" button on the remote control will enter the normal user menu (TV lock, Installation, Brightness, colour and contrast) while "SMD" remains displayed in top of screen). Pressing the "MENU" key again will return to the last SDM status.

Error buffer

Pressing the "OSD" button of the remote control shows all OSD (incl. error buffer).

Access to SDM

By pressing the "CHANNEL DOWN" and "VOLUME DOWN" buttons on the local keyboard simultaneously the set switches from SDM to SAM or pressing "ALIGN" on the DST

In the SDM the following information is displayed on the screen:

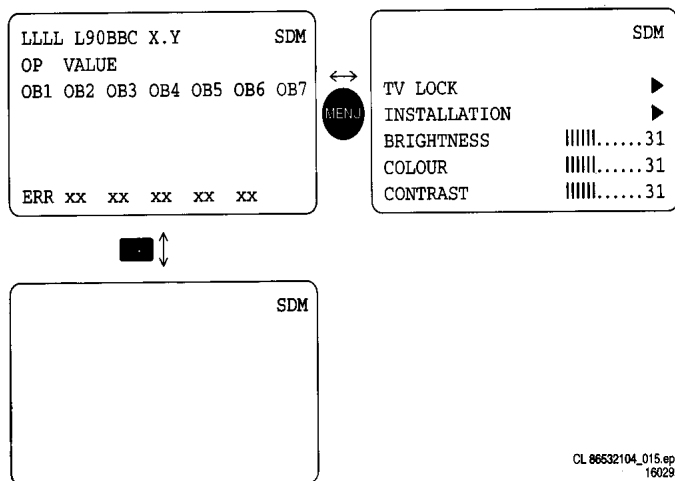


Figure 5-1 : Service Default Mode screens and structure

Explanation notes/references:

- (1) "LLLL" Operation hours timer (hexadecimal)
 - (2) Software identification of the main micro controller (L90BBC X.Y)
 - L90 is the chassis name for L9.0E
 - BBC is a 2 letter and 1 digit combination that indicates the software type and the supported languages:
 - X = (main version number)
 - Y = (subversion number) BB = (range specification)
 - (3) "SDM" To indicate that the TV set is in de service mode
 - (4) "OP" Options Code consist of 2 characters. It is possible to change each option code
- "VALUE" The value of the selected option (ON/OFF or a combination of 2 letters)
- "XXX" Value of the options bytes (OB1 .. OB7)

"ERR" The last five detected errors; The left most number indicates the most recent error detected.

The MENU UP or MENU DOWN command can be used to select the next/previous option; The MENU LEFT and MENU RIGHT command can be used to change the option value.

Remark: When the option-code RC = OFF, the P+ and the P- key have the same functions as the MENU UP/DOWN keys while the VOL+ and the VOL- key have the same function as the MENU LEFT/RIGHT keys. It is not possible to change the channel pre-set or to adjust the volume when in SAM/SDM menu when the option RC = OFF.

Using a L9.1E remote control, option-code RC = ON, the P+, P-, VOL- and VOL+ can be used to change the pre-set and/or to adapt the volume, while the menu-cursor keys are used to select the option and to change its value.

For an extended overview of the option codes see Chapter 8 - Options

5.2.5 Service Alignment Mode (SAM)

The SAM allows adjustment of the Demodulator I.F, align the white tone, adjust the picture geometry and sound adjustments.

For easy identification of the SAM mode, "SAM" is displayed in the top of the right side of the screen

Entering SAM:

- By transmitting the "ALIGN" command with the RC7150 Dealer Service Tool
- By pressing the "CHANNEL DOWN" and "VOLUME DOWN" key on the local keyboard simultaneously when the set is in SDM
- Standard RC sequence 062596 followed by the key "OSD"
- By shorting test-point M28 and M29 on the mono-carrier while switching on the set. After switching on the set the short-circuit can be removed. (Caution!! Override of 5V protections).

Exiting the SAM:

Switch the set to standby or press EXIT on the DST (the error buffer is not cleared).

Note: When the mains power is switched off while the set is in SAM, the set will switch to SAM immediately when the mains is switched on again. (The error buffer will not be cleared).

In the SAM the following information is displayed on the screen:

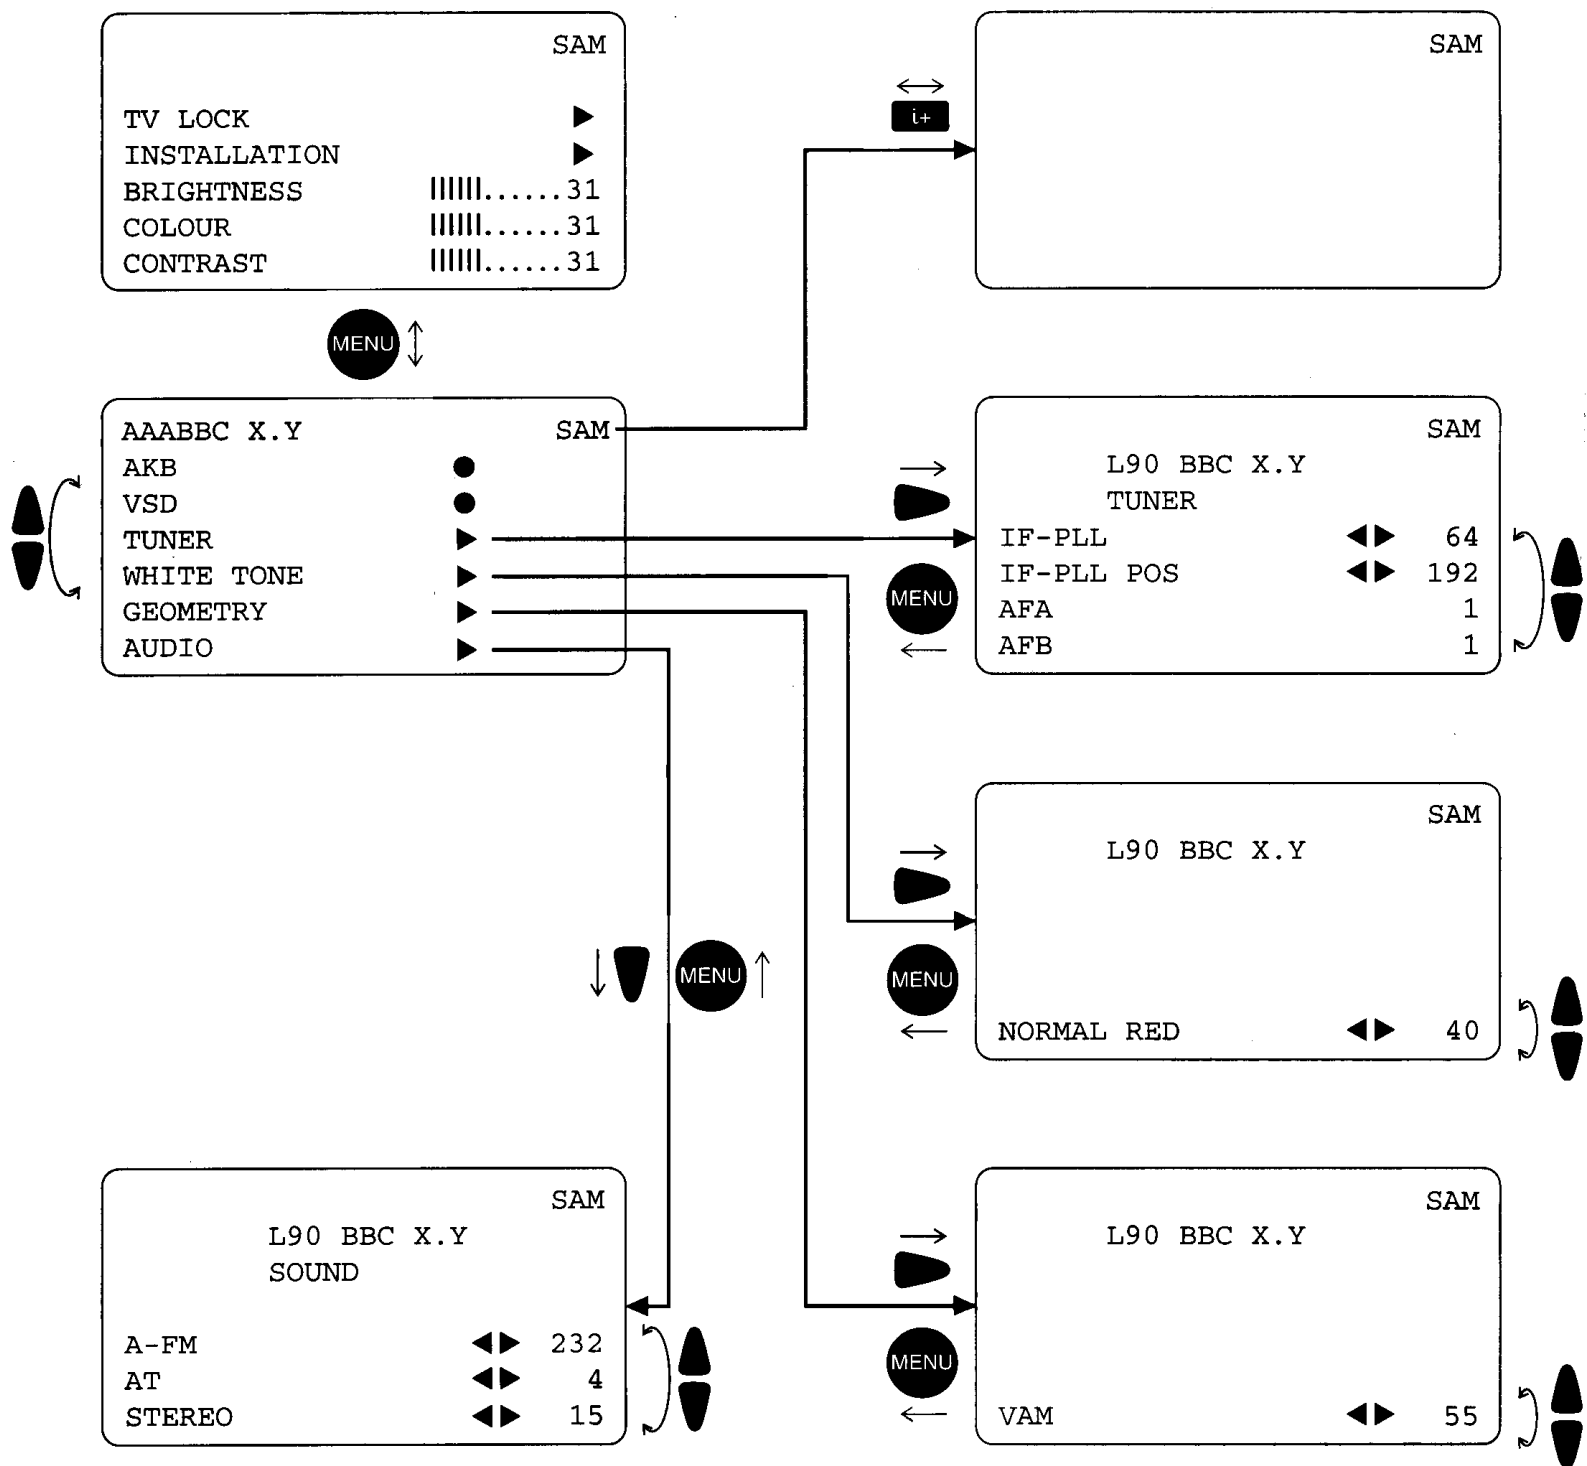


Figure 5-2 : Service Alignment Mode screens and structure

Access to normal user menu

Pressing the "MENU" button on the remote control will enter the normal user menu (TV lock, installation, brightness, colour and contrast) while "SAM" remains displayed in top of screen. Pressing the "MENU" key again will return to the last SAM status.

Pressing the "OSD" button of the remote control shows only "SAM" in the top of screen

Access to SDM

Pressing the "DEFAULT" button on the DST

SAM menu control

Menu items (AKB, VSD, Tuner, White tone, Geometry and Sound) can be selected with the MENU Up or MENU DOWN key. Entry into the selected items (sub menus) is done by the MENU LEFT or MENU RIGHT key. The selected item will be highlighted.

With the cursor LEFT/RIGHT keys, it is possible to increase/decrease the value of the selected item.

5.3 The menus and submenus

5.3.1 Tuner sub menu

The tuner sub menu contains the following items:

- IF_PLL: PLL Alignment for all PAL/SECAM systems, excluding SECAM-LL'
- IF_PLL POS: PLL Alignment for SECAM-LL'
- IF_PLL OFFSET: Default value = 48 ; Do not align
- AFW: AFC Window
- AGC: AGC take-over point
- YD: Default value = 12 ; Do not align
- CL: Default value = 4 ; Do not align
- AFA
- AFB

The items AFA and AFB can not be selected, they are for monitoring purposes only.

The commands MENU UP and MENU DOWN are used to select the next/previous item.

The commands MENU LEFT and MENU RIGHT are used to increase/decrease the value of the selected item. The changed values will be send directly to the related hardware.

The item values are stored in NVM if this sub menu is left.

5.3.2 White tone sub menu

The white tone sub menu contains the following items:

- NORMAL RED
- NORMAL GREEN
- NORMAL BLUE
- DELTA COOL RED
- DELTA COOL GREEN
- DELTA COOL BLUE
- DELTA WARM RED
- DELTA WARM GREEN
- DELTA WARM BLUE

OSD is kept to a minimum in this menu, in order to make white tone alignment possible.

The commands MENU UP and MENU DOWN are used to select the next/previous item.

The commands MENU LEFT and MENU RIGHT are used to increase/decrease the value of the selected item. The changed values will be send directly to the related hardware.

The item values are stored in NVM if this sub menu is left.

The Contrast Plus feature (black stretch) is set to OFF when the white tone submenu is entered.

5.3.3 Audio sub menu

The audio sub menu contains the following items:

- A-FM: Default value = 232 ; Do not align
- AT: Default value = 4 ; Do not align
- STEREO: Default value = 15 ; Do not align
- DUAL: Default value = 12 ; Do not align

The sound adjustments sub menu are not available in Mono sets.

The presence of an item in the menu is dependent on the selected soundboard (option SB).

The commands MENU UP and MENU DOWN are used to select the next/previous item.

The commands MENU LEFT and MENU RIGHT are used to increase/decrease the value of the selected item. The changed values will be sent directly to the related hardware.

The item values are stored in NVM if this sub menu is left.

5.3.4 Geometry sub menu

The geometry sub menu contains the following items:

- SBL : Service blanking
- VSL : Vertical slope
- VAM : Vertical amplitude
- VSH : Vertical shift
- HSH : Horizontal shift
- VSC : Vertical S correction
- H60 : Default value = 10 ; Do not align
- V60 : Default value = 12 ; Do not align
- EWC : E-W corner
- EWT : E-W trapezium
- EWP : E-W parabola
- EWW : E-W width

5.4 Error code buffer and error codes

5.4.1 Error code buffer

The error code buffer contains all errors detected since the last time the buffer was erased. The buffer is written from left to right.

- when an error occurs that is not yet in the error code buffer, the error is written at the left side and all other errors shift one position to the right
- the error code buffer will be cleared in the following cases:
 1. exiting SDM or SAM with the "Standby" command on the remote control
 2. transmitting the commands "EXIT" with the DST (RC7150)
 3. transmitting the commands "DIAGNOSE-9-9-OK" with the DST.
- By leaving SDM or SAM with the mains switch, the error buffer is not reset.

5 Fault finding and repair tips

Examples:

ERROR: 0 0 0 0 0 : No errors detected

ERROR: 6 0 0 0 0 : Error code 6 is the last and only detected error

ERROR: 5 6 0 0 0 : Error code 6 was first detected and error code 5 is the last detected (newest) error

5.4.2 Error codes

In the case of non-intermittent faults, clear the error buffer before starting the repair to prevent "old" error codes being present. If possible check the entire contents of the error buffers. In some situations an error code is only the **RESULT** of another error code (and not the actual cause).

Note: a fault in the protection detection circuitry can also lead to a protection.

Error 0 = No error

Error 1 = X-ray (Only for USA sets)

Error 2 = High beam current protection and E/W Horizontal protection

High beam protection active; set is switched to protection; error code 2 is placed in the error buffer; the LED will blink 2 times (repeatedly).

As the name implies, the cause of this protection is a too high beam current (bright screen with flyback lines). Check whether the +200V supply to the CRT panel is present. If the voltage is present, the most likely cause is a fault on the CRT panel. Disconnect the CRT panel to determine the cause. If the +200V voltage is not present, check R3340 (CRT panel - B), R3485 and D6485 (Horizontal Deflection - A2)

EW protection:

If this protection is active, the causes could be one of the following;

- horizontal deflection coil 5445
- linearity coil 5457
- S-correction capacitor 2466/2468
- flyback capacitor 2465
- line output stage
- short circuit of:
- flyback diode 6460
- EW transformer (bridge coil) 5465/5470 or 5463/5471 (version dependent)
- S-correction capacitor 2457
- EW power-transistor 7460 or driver-transistor 7461

Error 3 = Vertical / Frame protection

There are no pulses detected at pin 47 of the main microprocessor 7600 (panel A7).

If this protection is active, the causes could be one of the following items;

- IC 7401 is faulty
- Open circuit of vertical deflection coil
- Vlotaux +11V not present and/or Vlotaux -11V not present
- Resistor 3409

Error 4 = Sound processor I2C error (MSP3415D)

Sound processor does not respond to the micro controller

Error 5 = Bimos start-up error (POR bit)

Bimos start-up register is corrupted or the I2C line to the Bimos is always low or no supply at pin 12 of the Bimos). This error is usually detected during start-up and hence will prevent the set from starting up.

Error 6 = Bimos (TDA8844) I2C error

Note that this error may also be reported as a result of error codes 4 (in that case the Bimos might not be the actual problem)

Error 7 = General I2C error. This will occur in the following cases:

- SCL or SDA is shorted to ground
- SCL is shorted to SDA
- SDA or SCL connection at the micro controller is open circuit.

Error 8 = Microprocessor internal RAM error

The micro controller internal RAM test indicated an error of the micro controller internal memory (tested during start-up);

Error 9 = EEPROM Configuration error (Checksum error); EEPROM is corrupted.

Error 10 = I2C error EEPROM error. NV memory (EEPROM) does not respond to the micro controller

Error 11 = I2C error PLL tuner. Tuner is corrupted or the I2C line to the Tuner is low or no supply voltage present at pin 9, pin 6 or pin 7 of the tuner.

Error 12 = Black current loop instability protection. The black current could not be stabilised. The possible cause could be a defect in one or more of the RGB amplifiers, RGB guns or RGB driving signals.

5.5 The "blinking LED" procedure

The contents of the error buffer can also be made visible via the "blinking LED" procedure. This is especially useful when there is no picture. There are two methods of access:

1. When the SDM is entered, the LED will blink the number of times, equal to the value of the last (newest) error code (repeatedly).
2. With the DST all error codes in the error buffer can be made visible. Transmit the command: "DIAGNOSE x OK" where x is the position in the error buffer to be made visible x ranges from 1, (the last (actual) error) to 6 (the first error). The LED will operate in the same way as in point 1, but now for the error code on position x.

Example:

Error code position 1 2 3 4 5

Error buffer: 8 9 5 0 0

- after entering SDM: blink (8x) - pause - blink (8x) - etc.
- after transmitting "DIAGNOSE- 2- OK" with the DST blink (9x) - pause - blink (9x) - etc.
- after transmitting "DIAGNOSE- 3- OK" with the DST blink (5x) - pause - blink (5x) - etc.
- after transmitting "DIAGNOSE- 4- OK" with the DST nothing happens

5.6 TROUBLE SHOOTING TIPS

In this paragraph some trouble shooting tips for the deflection and power supply circuitry are described. For detailed diagnostics, use the fault finding tree or use COMPAIR.

5.6.1 THE DEFLECTION CIRCUIT:

1. Check that the +VBATT (140V) is present across 2551 (A1 POWER SUPPLY). If the voltage is not present, disconnect coil 5551 (A1 Power Supply) (Horizontal deflection stage is disconnected). If the voltage is present then the fault might be caused by the deflection circuit. Possible Candidates Are:
 - Transistor 7460 is faulty
 - The driver circuit around transistor 7461 is faulty
 - No horizontal drive signal coming from the BIMOS 7250-D pin 40 (A4 - Synchronisation)
2. Note: If the Collector of 7460 is shorted to the Emitter, a tripping noise will be heard from the power supply circuit.
3. To determine whether the fault is present in the horizontal deflection circuit or in the E/W circuit (A2 - Horizontal Deflection), de-solder jumper 9465 and insert a jumper into position number 9461. This disables the E/W protection. If the basic deflection stage now works correctly (parabolic picture) then the fault is present in the E/W circuit. If there is still no horizontal deflection, then the fault is present in the basic deflection circuitry.
4. The 25V-version (26" tube) and the 27V-version (29" tube) do not have an E/W correction circuit.
5. Also don't forget the protection circuits in the line output stage. If any of these circuits are activated, the set will shut down. Depending on the protection, the led will blink according to the fault defined. In order to determine which protection circuit is active, isolation of each separate circuit is necessary. These protection circuits are:
 - High beam current protection (LED blinks repetitively 2 times) - CRT panel (B)
 - E/W Horizontal protection (LED blinks repetitively 2 times) - Horizontal deflection (A2)
 - Vertical protection (LED blinks repetitively 3 times) - Vertical deflection (A3)

5.6.2 THE POWER SUPPLY

To trouble shoot the L9.1E SMPS, first check the Vaux voltage on C2561. If this voltage is not present, check fuse F1572 and D6560. If F1572 or D6560 is not open circuit, the problem might be caused on the primary side of the switching supply. Check the output of the bridge rectifier on the C2508 for approximately 300V DC. If this voltage is missing, check the bridge rectifier 6505 and the fuse 1500. If fuse F1500 is found to be open circuit, check MOSFET 7518 to make sure that there is no short circuit present and check R3518. If the 300V DC is present on C2508, check for a start-up voltage of approx. 13V on pin 1 of IC7520. If no start-up voltage is present, check if R3510 is open; zener 6510 is a short-circuit. It is necessary to have a feedback signal from the hot primary side of switch mode transformer T5545 at pin 8 and pin 9 for the power supply to oscillate. If this start-up voltage is present on pin 1 of IC7520 and the supply is not oscillating, check R3529 and D6540.

Check for a drive signal at the gate of MOSFET 7518, square wave signal - P2. Check pin 3 of IC7520, R3525 and D6514

To determined whether OVP is active, check whether Vaux is present at C2561.

5.7 Customer Service Mode (CSM)

All L9.1E sets are equipped with the "Customer Service Mode" (CSM). CSM is a special service mode that can be activated and deactivated by the customer, following a request from the service technician/dealer perhaps during a telephone conversation to identify the status of the set. This CSM is a 'read only' mode, therefore modifications or changes while the set is in this mode are not possible.

Entering the Customer Service Mode. The Customer Service Mode can be switched on by pressing simultaneously the button (MUTE) on the remote control and any key on the control buttons (P+, P-, VOL +, VOL -) on the TV for at least 4 seconds.

When the CSM is activated:

- picture and sound settings are set to nominal levels
- "Service unfriendly modes" are ignored

Exit the Customer Service Mode.

The Customer Service Mode will switch off after:

- pressing any key on the remote control handset (except "P+" or "P-")
- switching off the TV set with the mains switch.

All settings that were changed when CSM was activated are set back to the initial values

5.7.1 The Customer Service Mode information screen

The following information is displayed on screen:

- Line number for every line (to make CSM language independent)
- Operating hours
- Software version L90BBC X.Y)
- Text "CSM" on the first line
- Error buffer contents
- Option code information
- Configuration information
- Service unfriendly modes

```
1 HHHH L90BBC-X.Y          CSM
2 CODES xx xx xx xx xx
3 OP xxx xxx xxx xxx xxx xxx
4 SYS: xxxxxxxxxxxx
5 NOT TUNED
6 TIMER
7 LOCKED
8 (HOSPITAL) (HOTEL)
9 VOL LIM <value>
```

CL 86532104_014.eps
080299

Figure 5-3 : Screen lay-out Customer Service Mode

SYS: xxxxxx = xxxxxx is the SYSTEM THAT IS SET FOR THIS PRESET

NOT TUNED = no ident signal present

TIMER = (SLEEP) TIMER is activated

LOCKED = Channel/preset locked via parental lock, child lock

HOTEL = HOTEL mode activated; HOSPITAL = HOSPITAL mode activated

VOL LIM > = Volume limiter activated and set to >

5.7.2 Exit

Any key (RC or local keyboard) except "channel up" / "channel down" (standby switched to standby, mains OFF switches set off, other keys switch to normal operation)

5.8 Compair

5.8.1 Introduction

Compair (Computer Aided Repair) is a service tool for Philips Consumer Electronics products. Compair is a further development on the DST service remote control allowing faster and more accurate diagnostics. Compair has three big advantages:

- Compair helps you to quickly get an understanding how to repair the L9.1E in short time by guiding you step by step through the repair procedures.
- Compair allows very detailed diagnostics (on I2C level) and is therefore capable of accurately indicating problem areas. You do not have to know anything about I2C commands yourself; Compair takes care of this.
- Compair speeds up the repair time since it can automatically communicate with the L9.1E (when the micro processor is working) and all repair information is directly available. When Compair is installed together with the SearchMan L9.1E electronic manual, schematics and PCBs are only a mouse-click away.

Compair consists of a Windows based fault finding program and an interface box between PC and the (defective) product. The Compair interface box is connected to the PC via a serial or RS232 cable. In case of the L9.1E chassis, the Compair interface box and the L9.1E communicate via an I2C cable (bi-directional) and via infra red communication (uni-directional; from Compair interface box to L9.1E)

The Compair fault finding program is able to determine the problem of the defective television. Compair can gather diagnostic information in 2 ways:

1. Communication to the television (automatic)
2. Asking questions to you (manually)

Compair combines this information with the repair information in its database to find out how to repair the L9.1E.

Automatic information gathering

Reading out the error buffer, Compair can automatically read out the contents of the entire error buffer.

Diagnosis on I2C level. Compair can access the I2C bus of the television. Compair can send and receive I2C commands to the micro controller of the television. In this way it is possible for Compair to communicate (read and write) to devices on the I2C busses of the L9.1E.

Manual information gathering

Automatic diagnosis is only possible if the micro controller of the television is working correctly and only to a certain extend. When this is not the case, Compair will guide you through the fault finding tree by asking you questions and showing you examples. You can answer by clicking on a link (e.g. text or an waveform pictures) that will bring you to the next step in the faultfinding process.

A question could be: Do you see snow? (Click on the correct answer)

YES / NO

An example can be: Measure testpoint I7 and click on the correct oscillogram you see on the oscilloscope

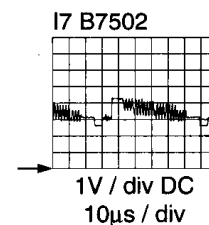


Figure 5-4

By a combination of automatic diagnostics and an interactive question/answer procedure, Compair will enable you to find most problems in a fast and effective way.

Additional features

Beside fault finding, Compair provides some additional features like:

- Uploading/downloading of presets
- Managing of preset lists
- Emulation of the Dealer Service Tool

5.8.2 Connecting the Compair interface

The Compair Browser software should be installed and setup before connecting Compair to the L9.1E. (See the Compair Browser Quick Reference Card for installation instructions.)

1. Connect the RS232 interface cable to a free serial (COMM) port on the PC and the Compair interface PC connector (connector marked with "PC").
2. Place the Compair interface box straight in front of the television with the infrared window (marked "IR") directed to the television LED. The distance between Compair interface and television should be between 0.3 and 0.6 meter. (Note: make sure that (also) in the service position, the Compair interface infra red window is pointed to the standby LED of the television set (no objects should block the infra red beam))
3. Connect the mains adapter to the connector marked "POWER 9V DC" on the Compair interface
4. Switch the Compair interface OFF
5. Switch the television set OFF with the mains switch
6. Remove the rear cover of the television set
7. Connect the interface cable (4822 727 21641) to the connector on the rear side of the Compair interface that is marked "I2C" (See Figure 5.6)
8. Connect the other end of the interface cable to the Compair connector on the monocarrier (see figure 5.7)
9. Plug the mains adapter in the mains outlet and switch ON the interface. The green and red LEDs light up together. The red LED extinguishes after approx. 1 second (the green LED remains lit).
10. Start-up Compair and select "File" menu, "Open...."; select "L9.1E Fault finding" and click "OK"
11. Click on the icon (fig. 5.5) to switch ON the communication mode (the red LED on the Compair interface wil light up)
12. Switch on the television set with the mains switch
13. When the set is in standby. Click on "Start-up in Compair mode from standby" in the Compair L9.1E fault finding tree, otherwise continue.



Figure 5-5

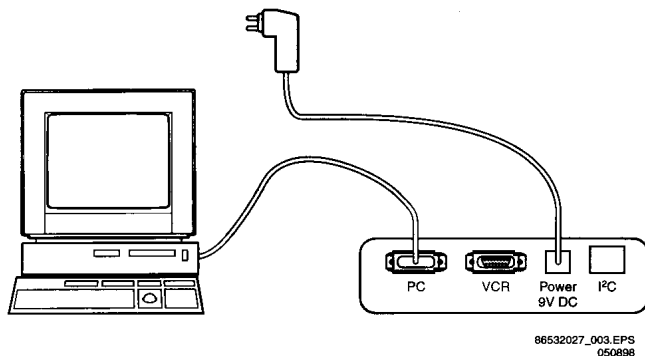


Figure 5-6

The set has now started up in Compair mode. Follow the instruction in the L9.1E fault finding tree to diagnose the set. Note that the OSD works but that the actual user control is disabled

5.8.3 Preset installation

Presets can be installed in 2 ways with the L9.1E.

- Via infra red
 - only sending TO the television
 - the rearcover does NOT have to be removed

Click on "File" "Open" and select "TV - use Compair as DST" to use infra red

- Via cable
 - sending TO the television and reading FROM the television
 - the rearcover has to be removed

Click on "File" "Open" and select "L9.1E fault finding" to use the cable

Presets can be installed via menu "Tools", "Installation", "Presets".

5.9 Ordering Compair

Compair order codes:

- Starterkit Compair+SearchMan software + Compair interface (excluding transformer): 4822 727 21629
- Compair interface (excluding transformer): 4822 727 21631
- Compair transformer (continental) Europe: 4822 727 21632
- Compair transformer United Kingdom: 4822 727 21633
- Starterkit Compair software: 4822 727 21634
- Starterkit SearchMan software: 4822 727 21635
- Starterkit Compair+SearchMan software: 4822 727 21636
- Compair CD (update): 4822 727 21637
- SearchMan CD (update): 4822 727 21638
- Compair interface cable (for L9.1E): 4822 727 21641



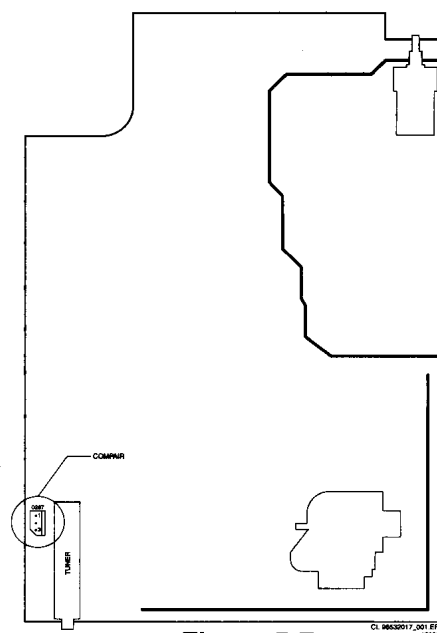



Figure 5-7

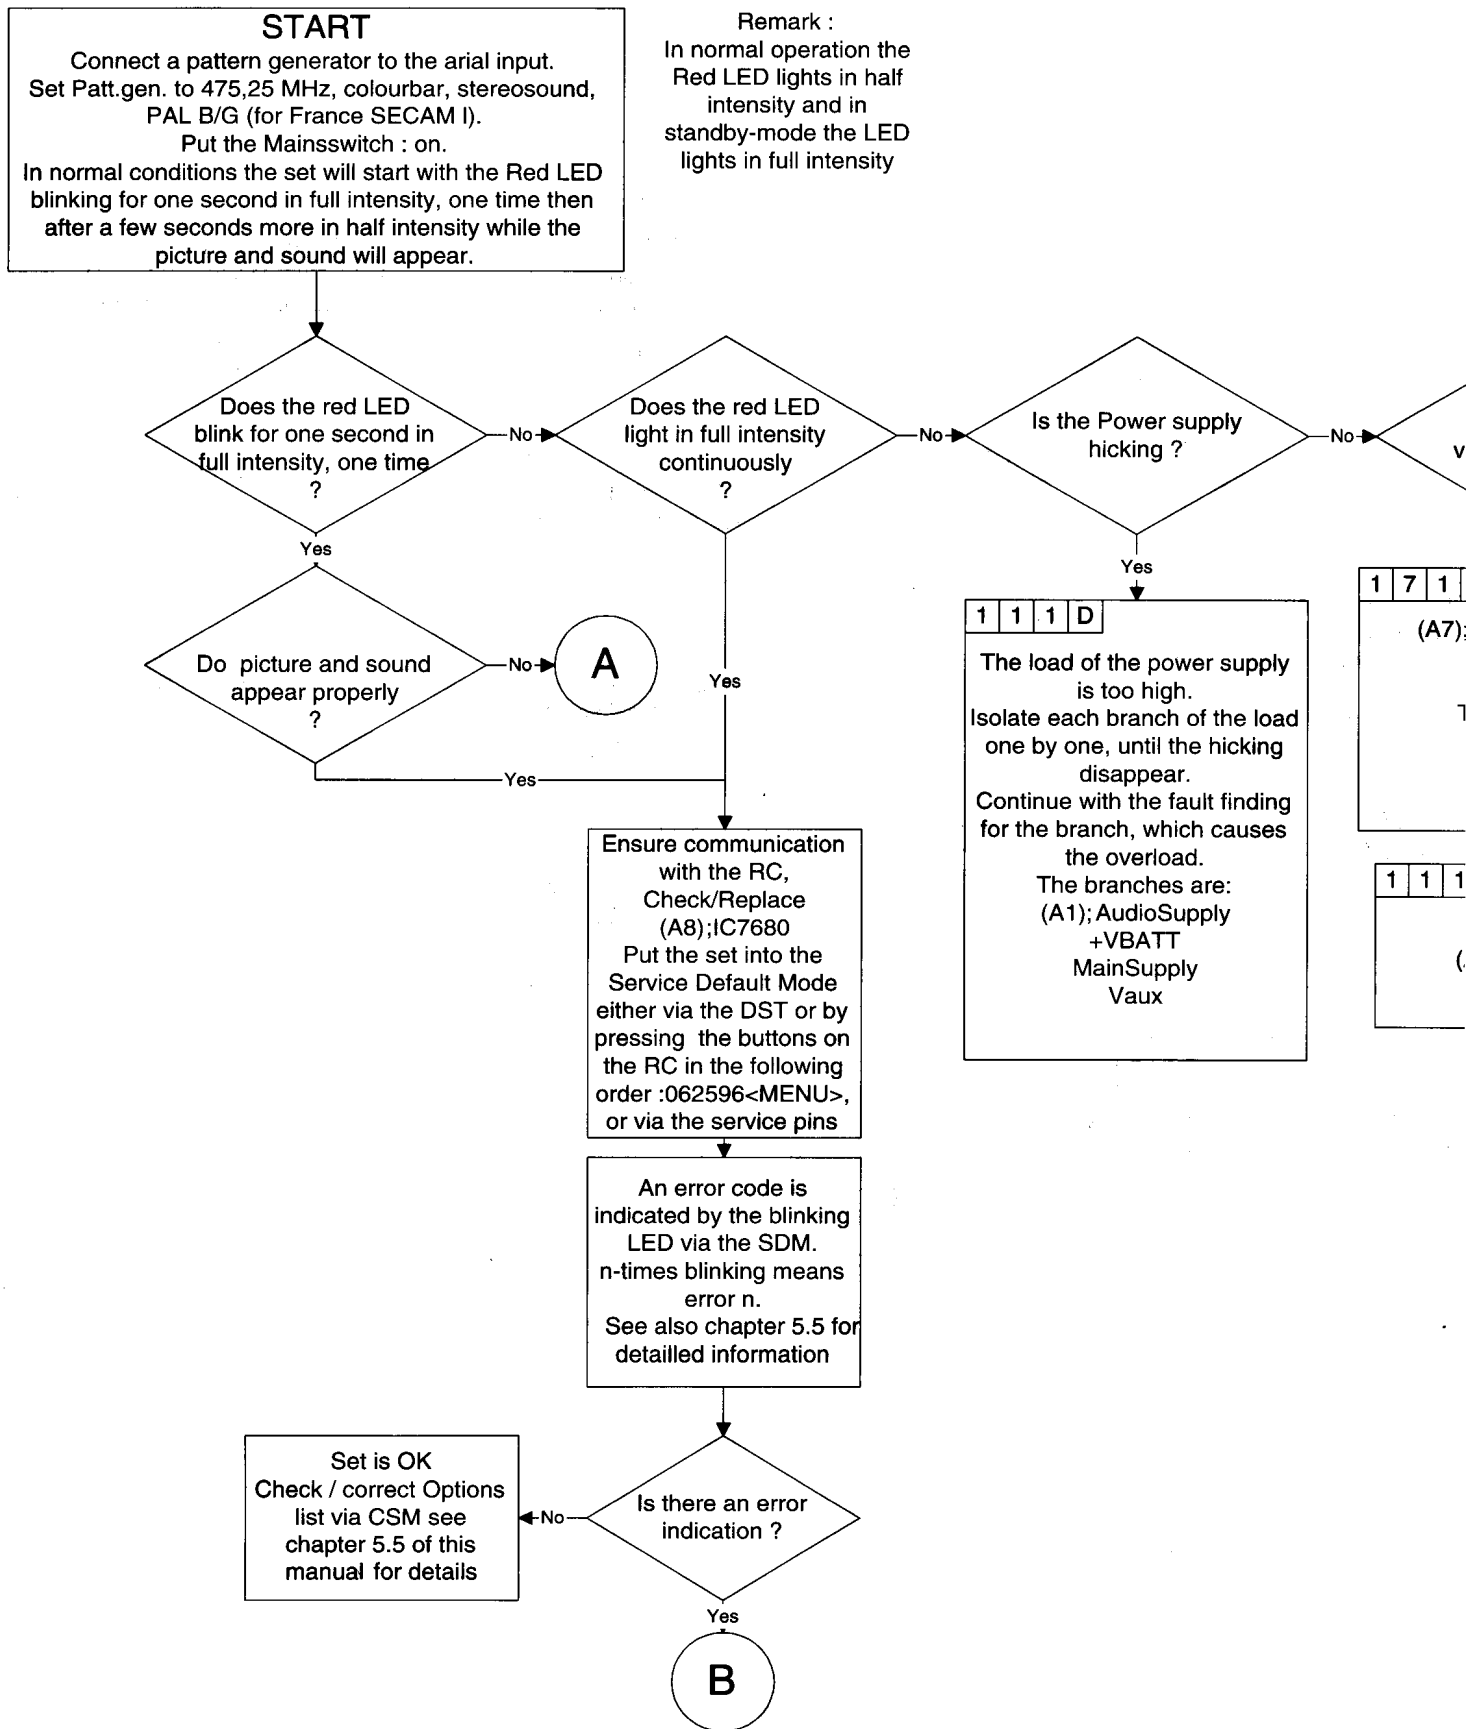

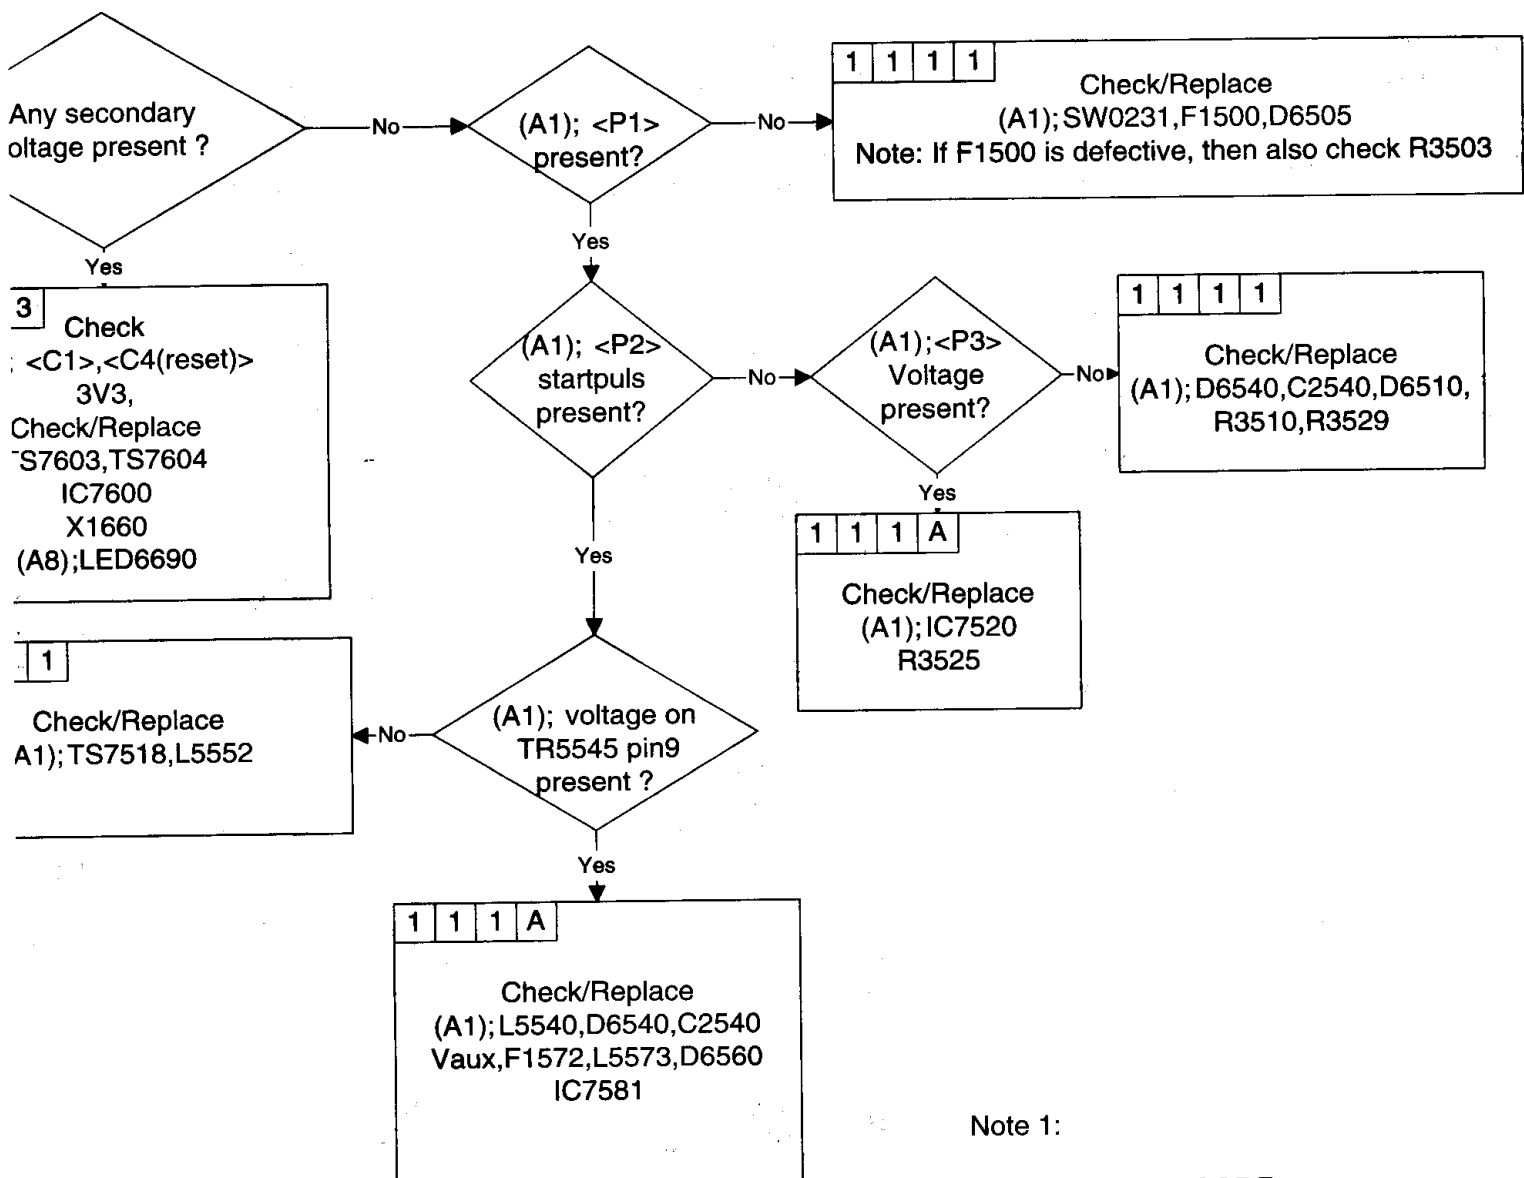


Note 1:


IRIS SYMPTOM CODE

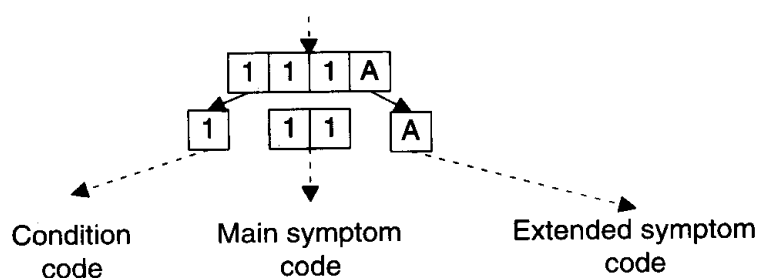

Note 2:


(A1) means Drawing A1
<P1> means Test point P1

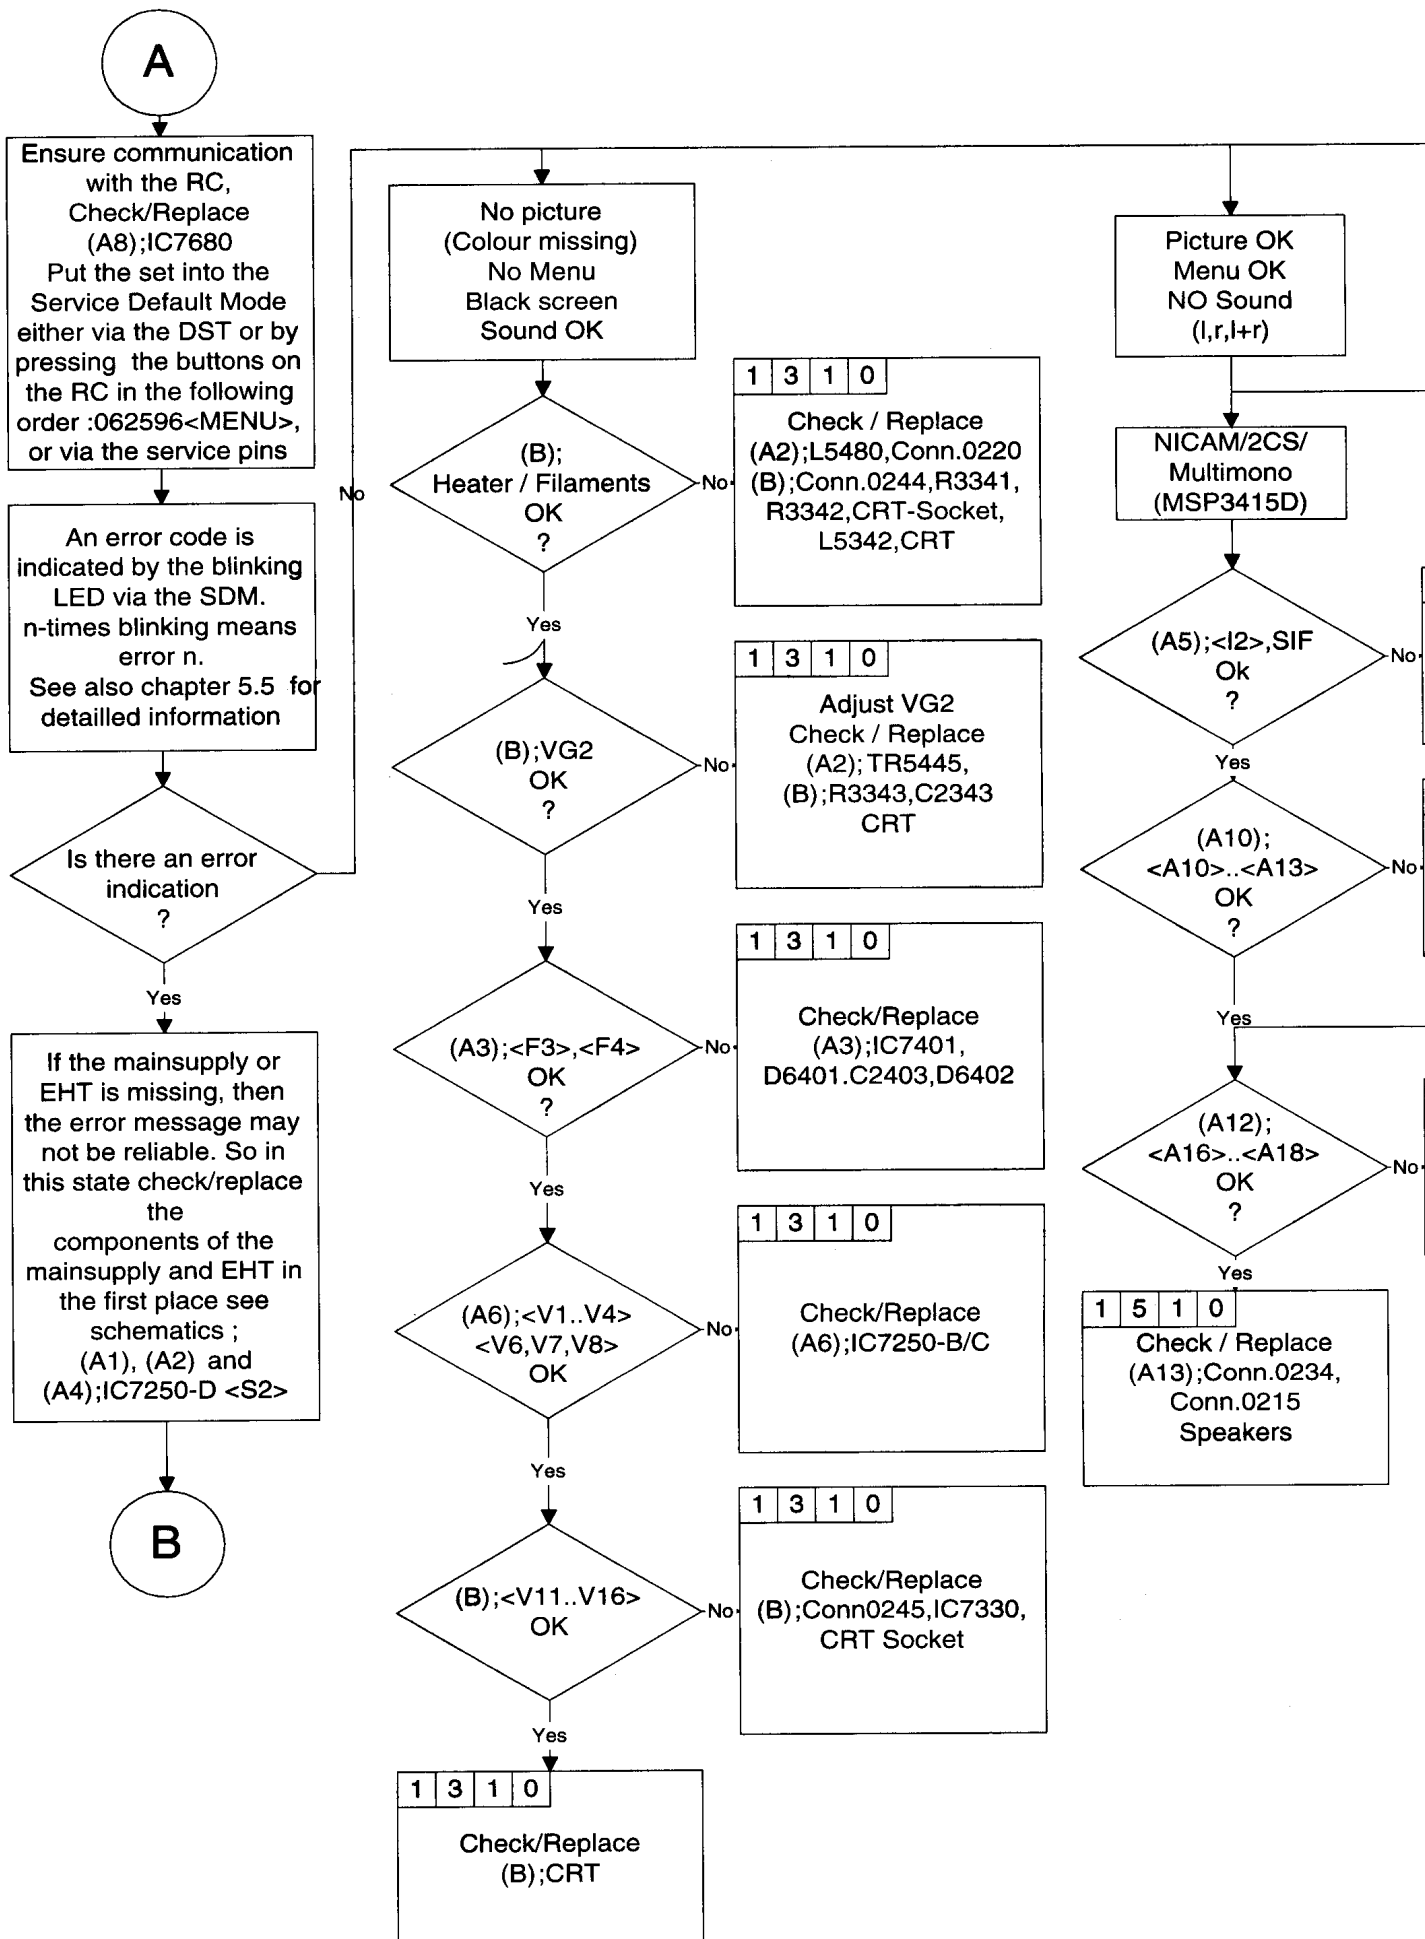

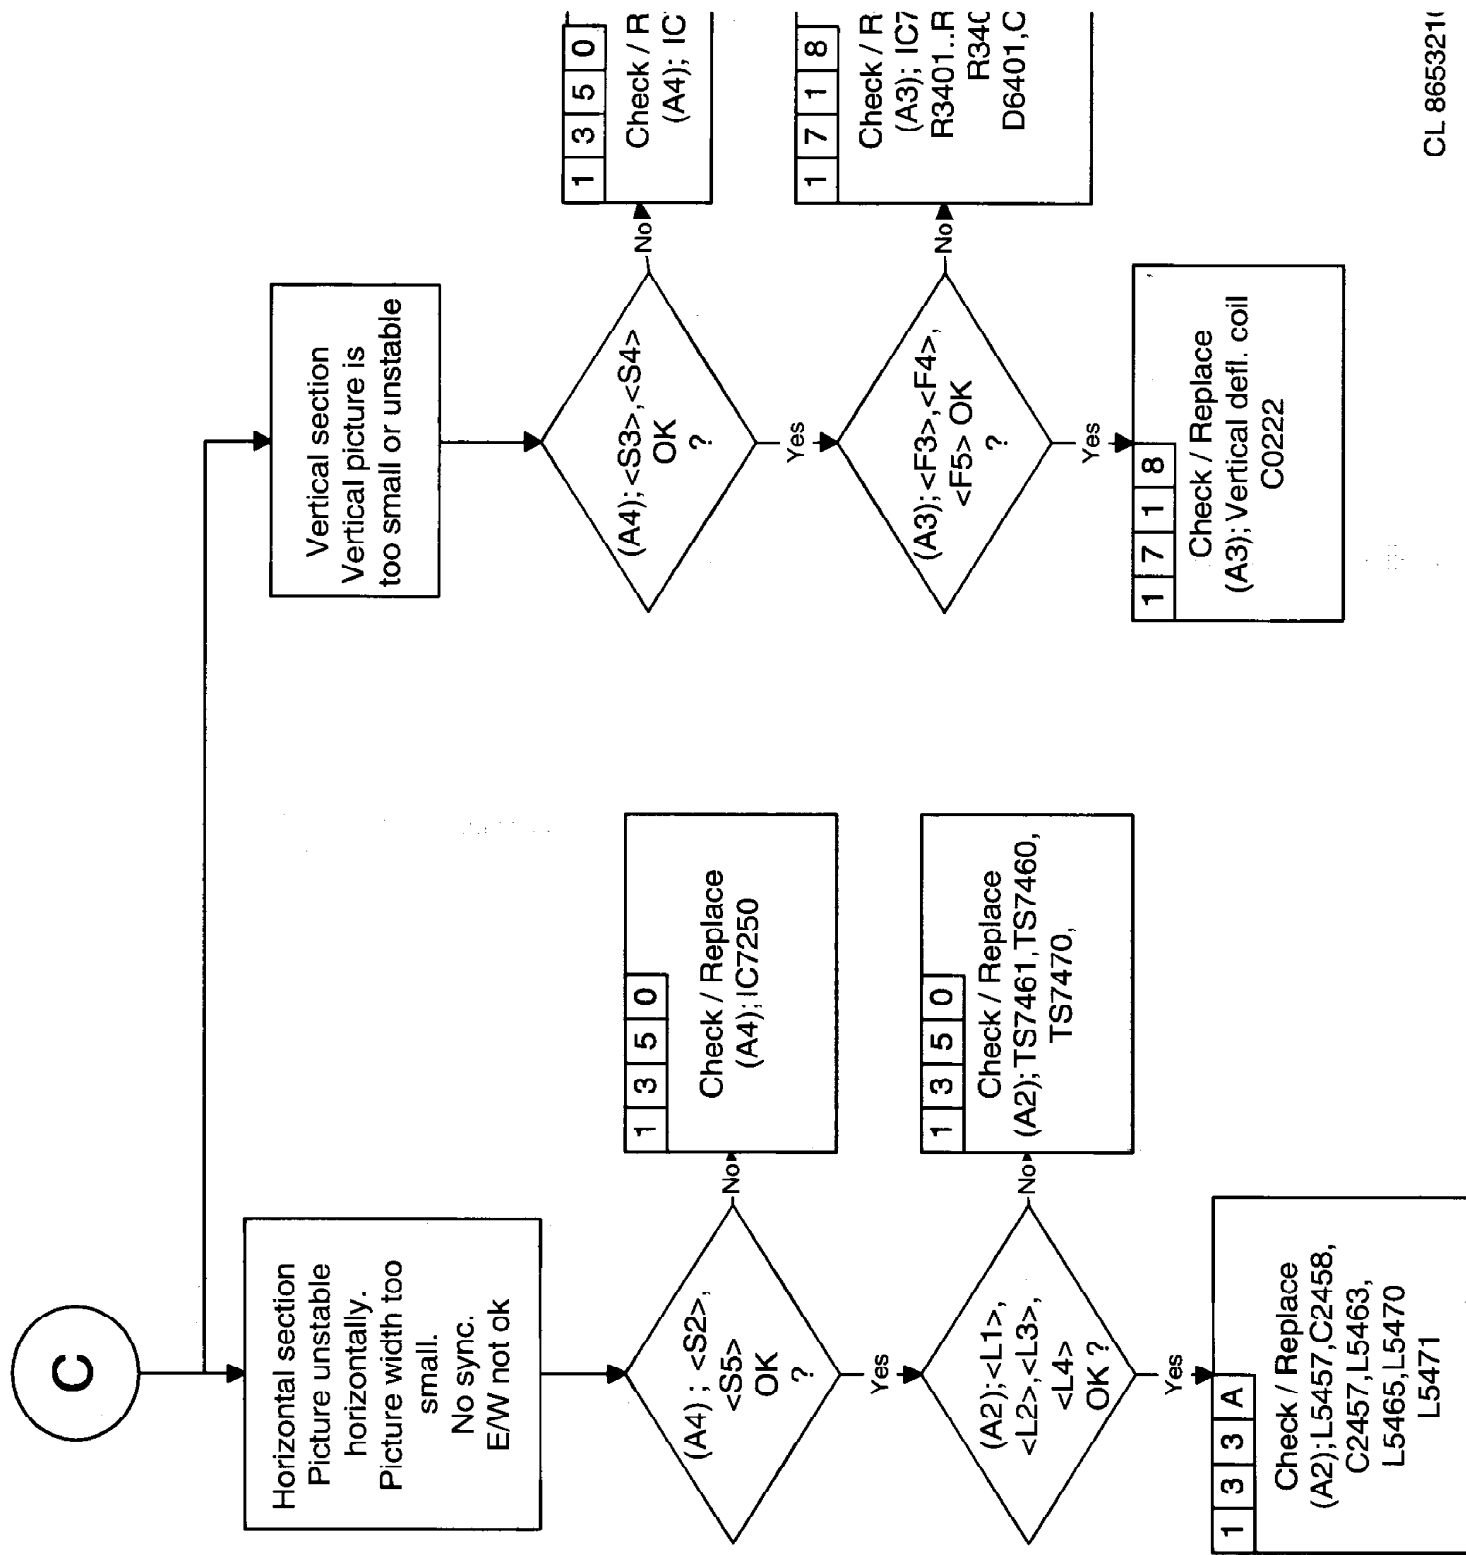



eplace
7250

eplace
'401 ,
3403,
19
2403

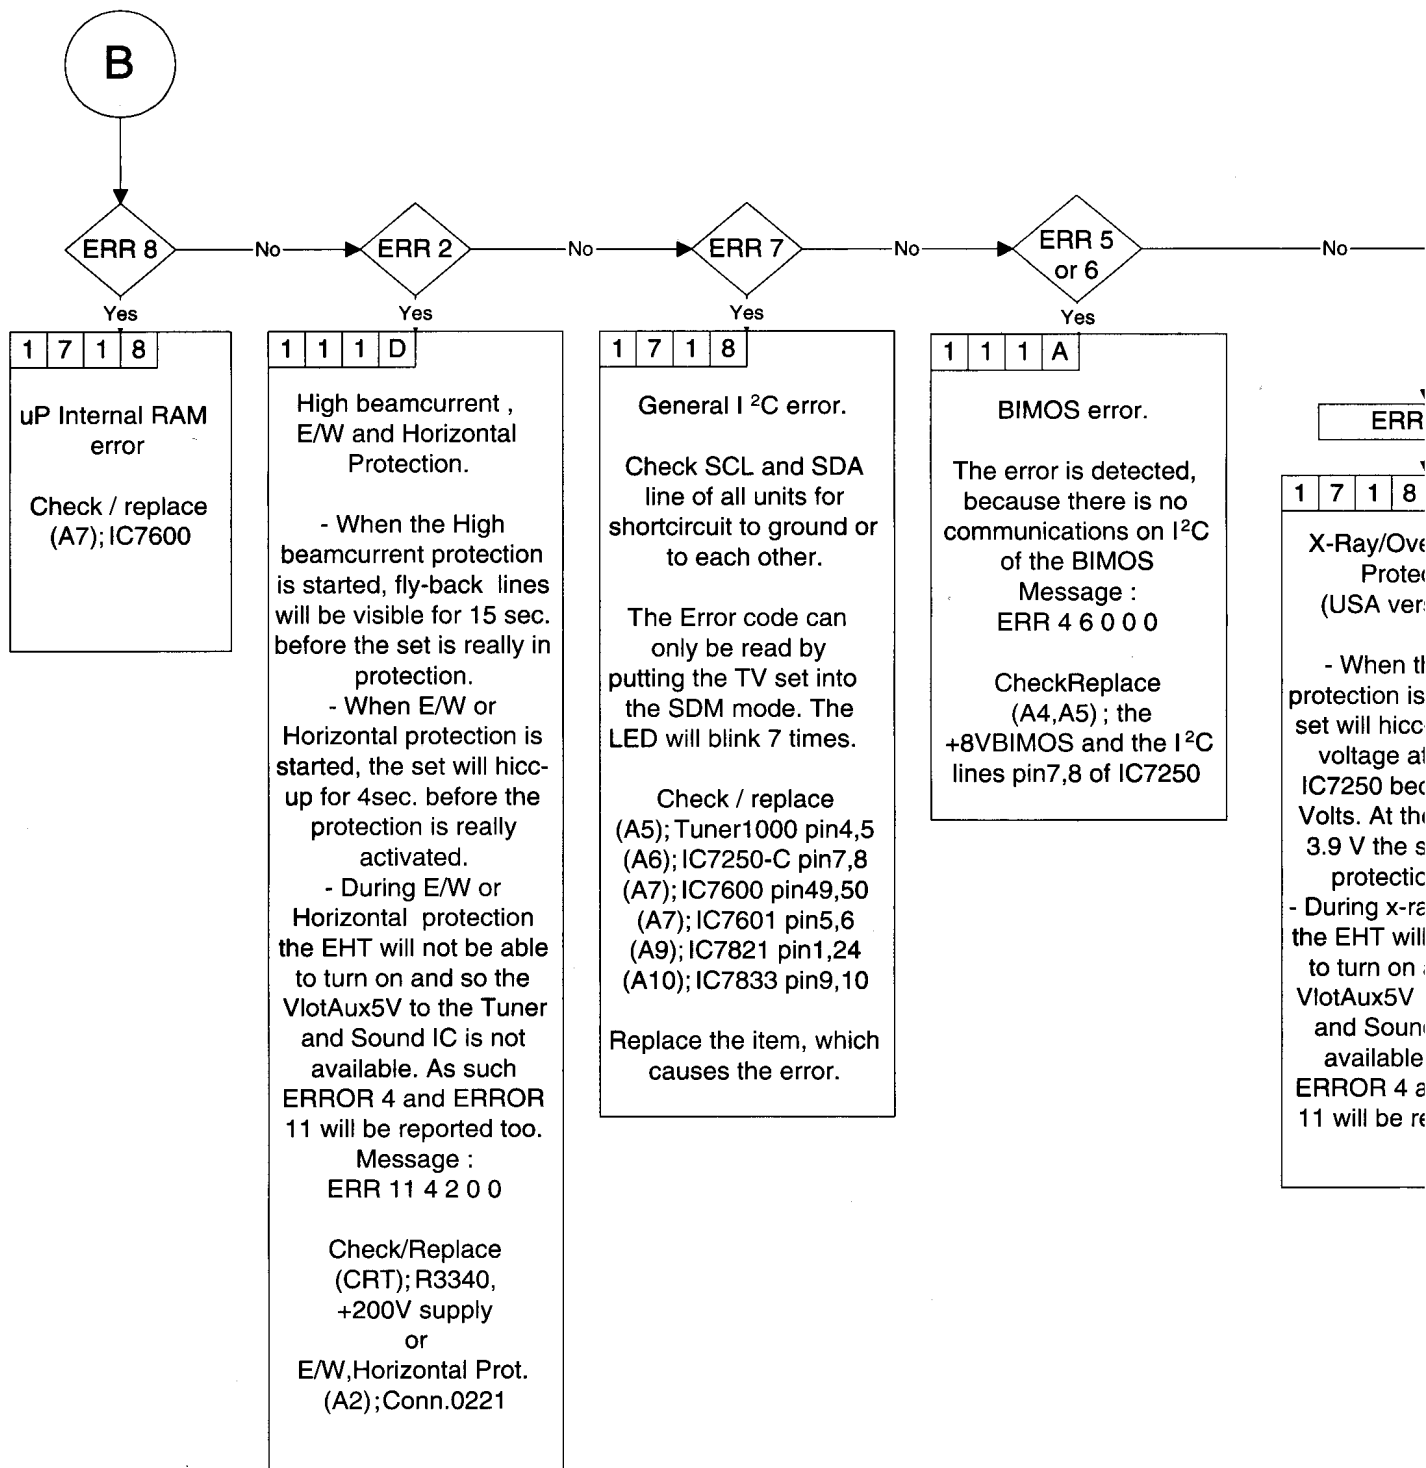


Black current

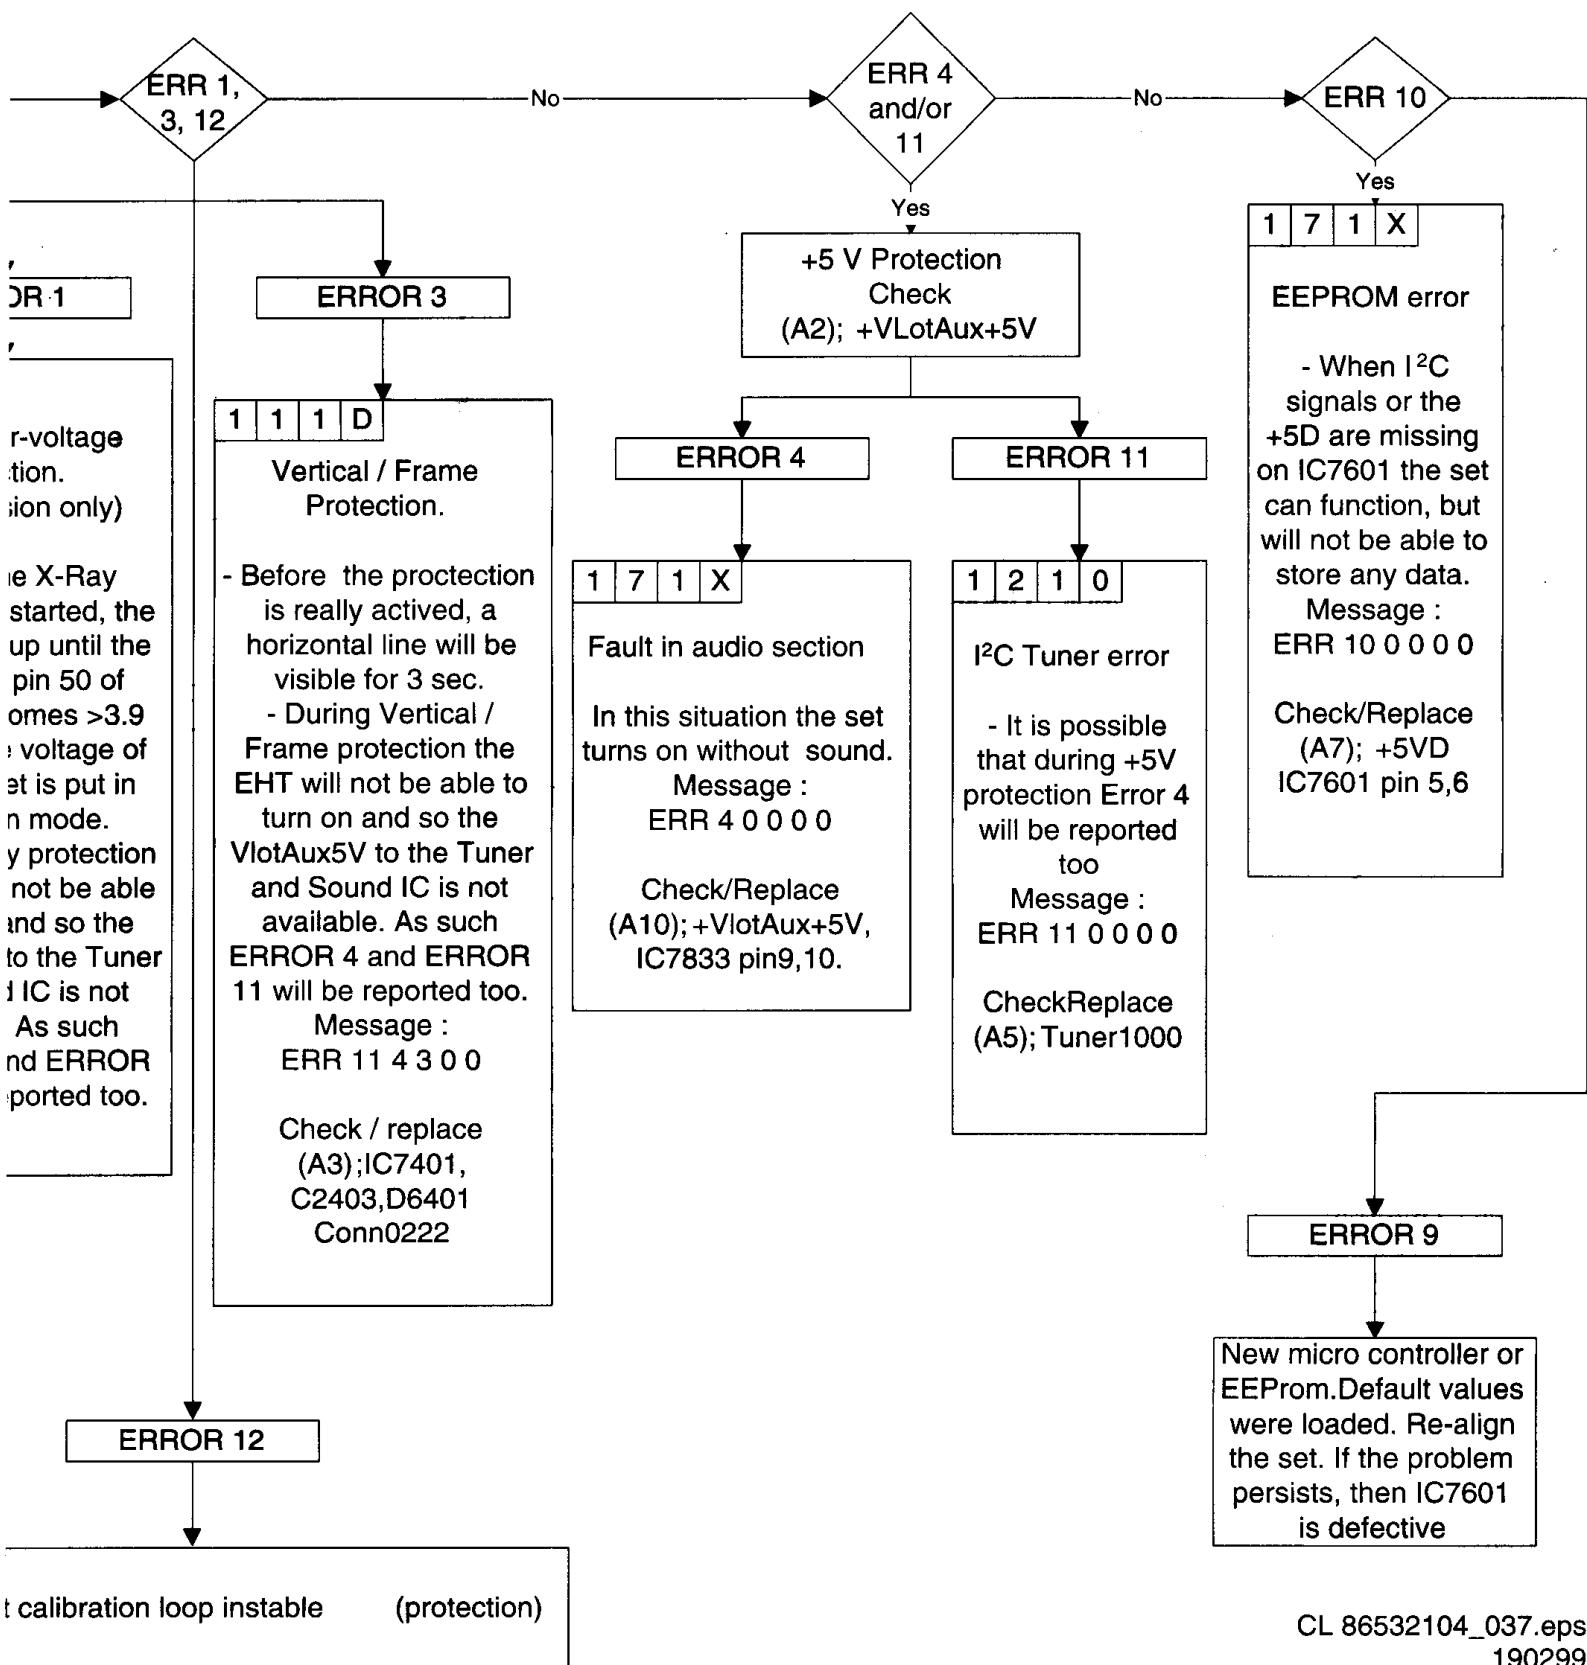


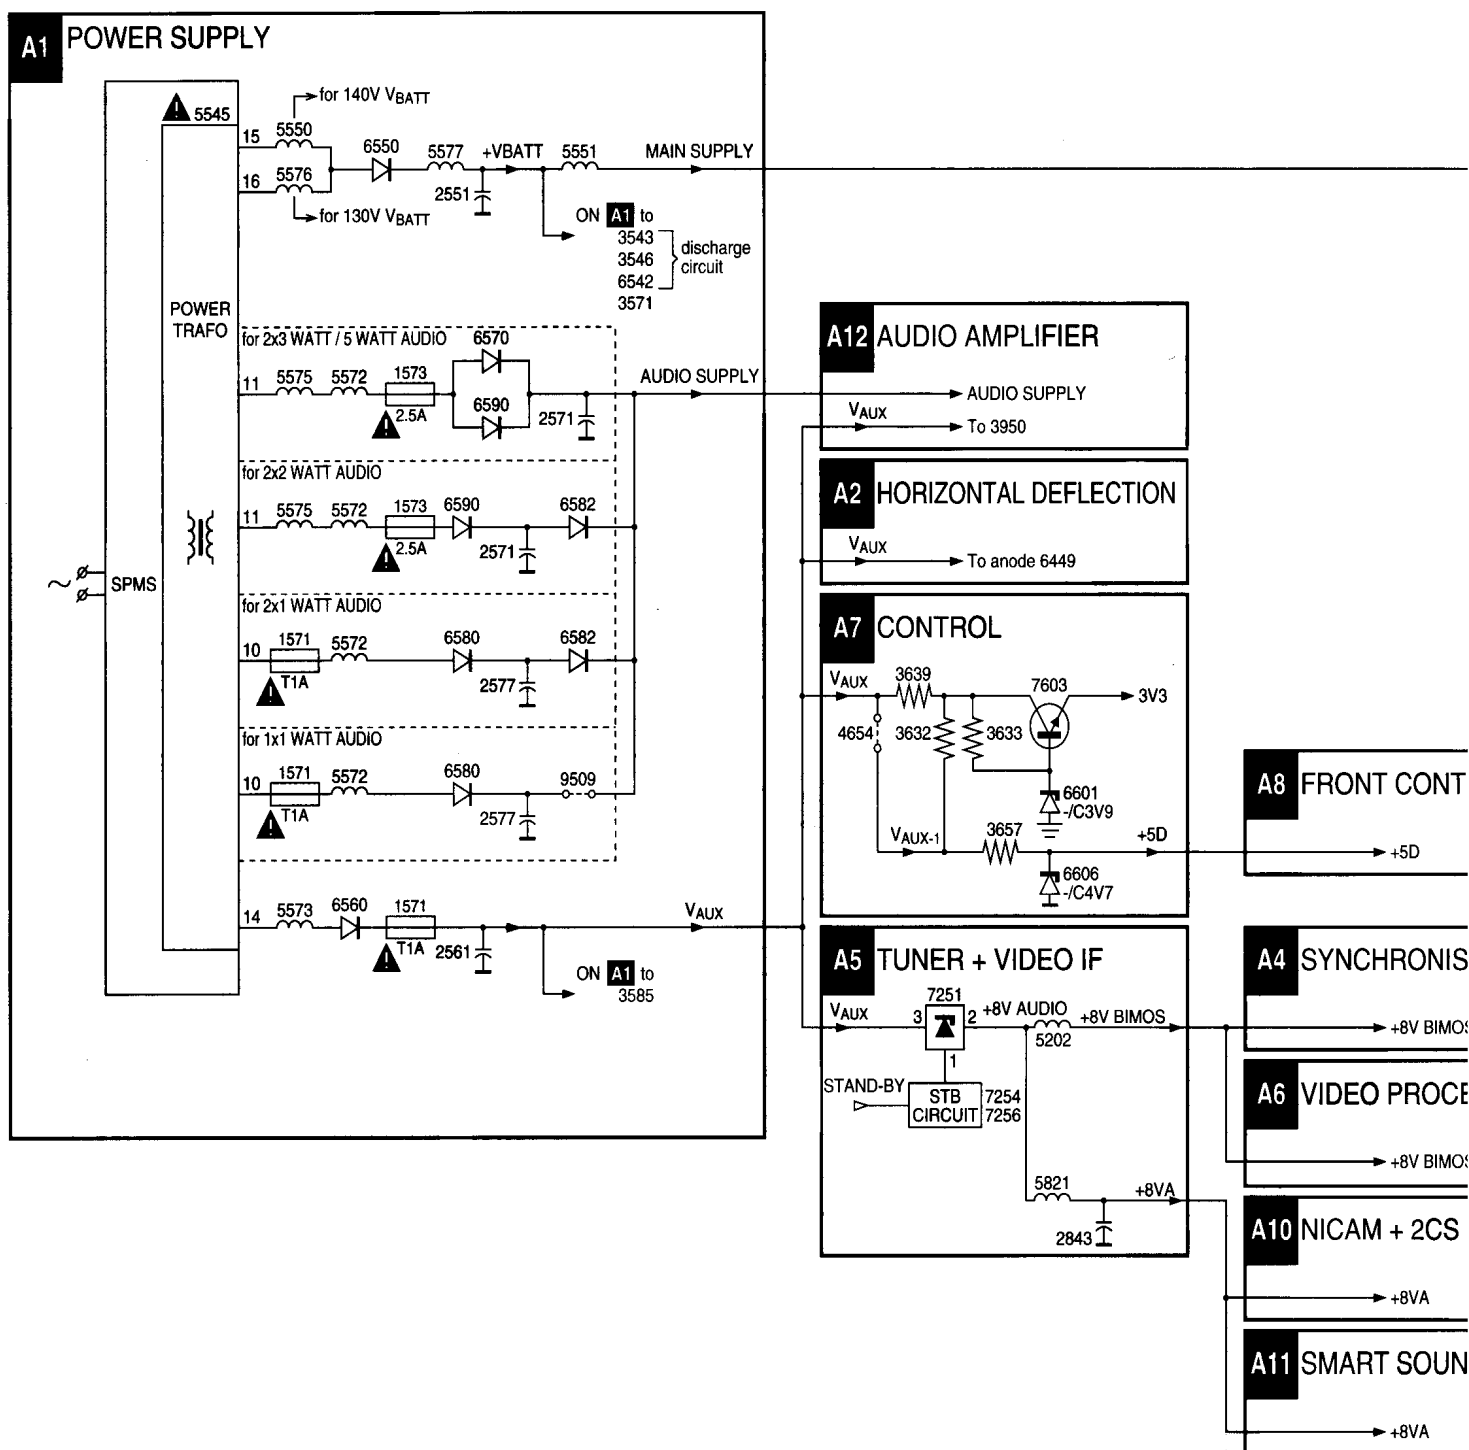


IIC BUS INTERCONNECTION DIAGRAM

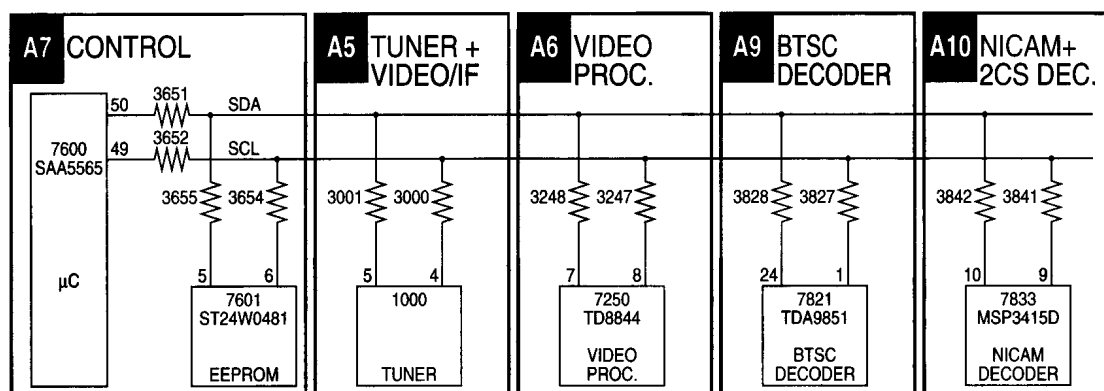


A2 HORIZONTAL DEFLECTION

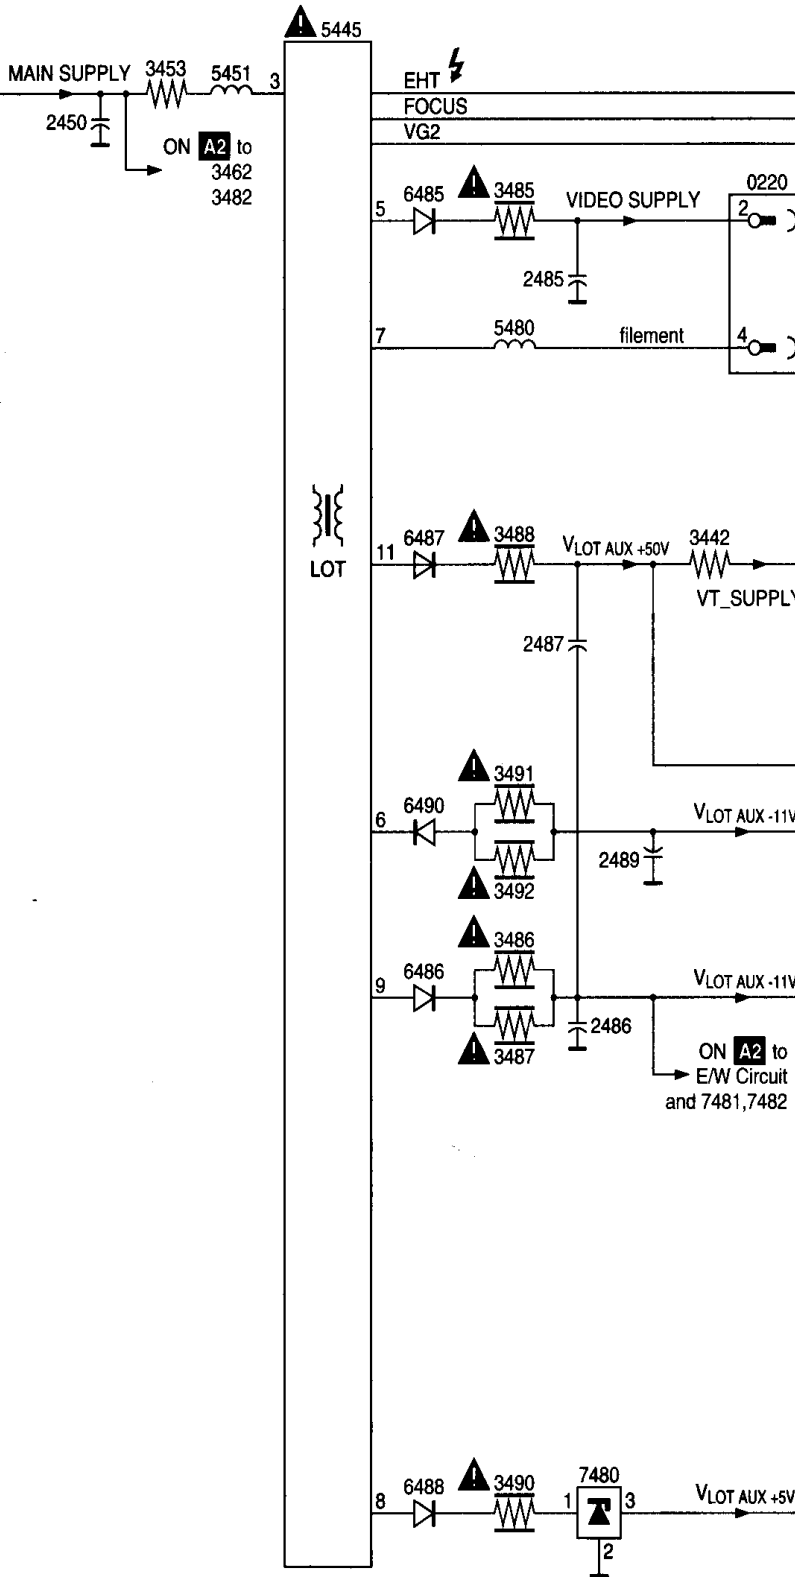


B CRT

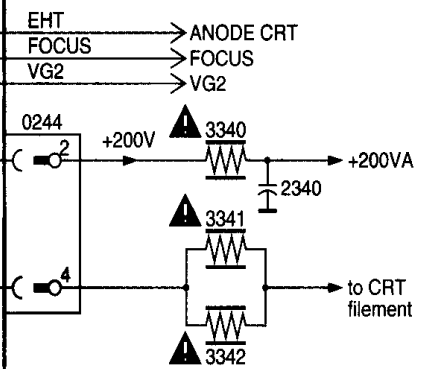


A5 TUNER

 


A3 VERTICAL DEFLECTION

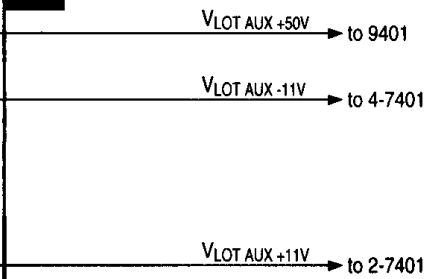


A1 POWER SUPPLY

 


A5 TUNER + VIDEO IF










 





A10 NICAM + 2CS DECODER

 


A15 REAR I/O SCART

 


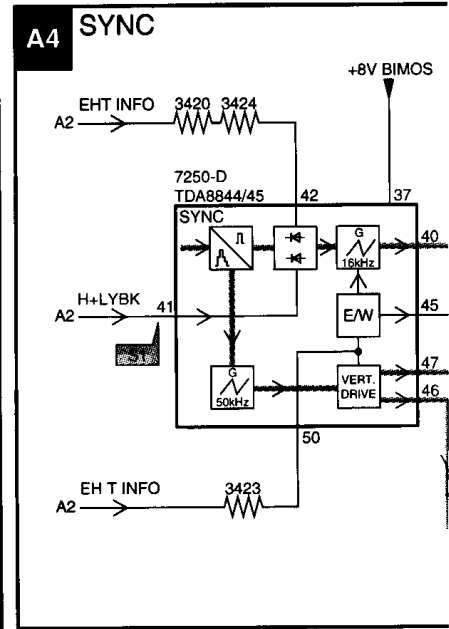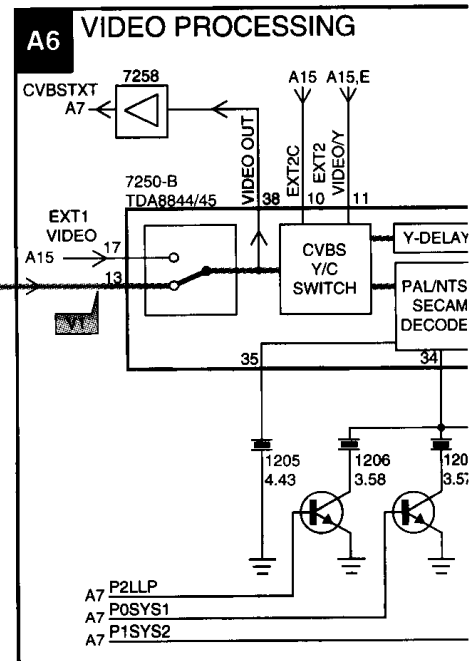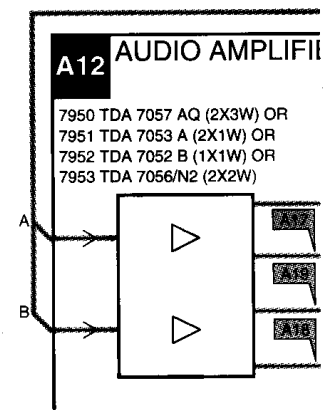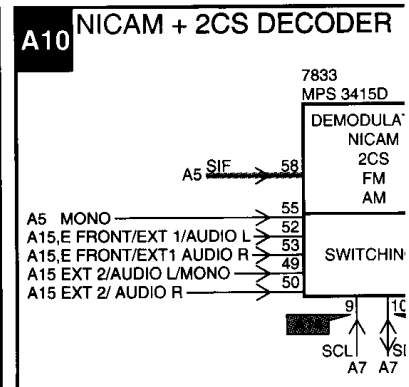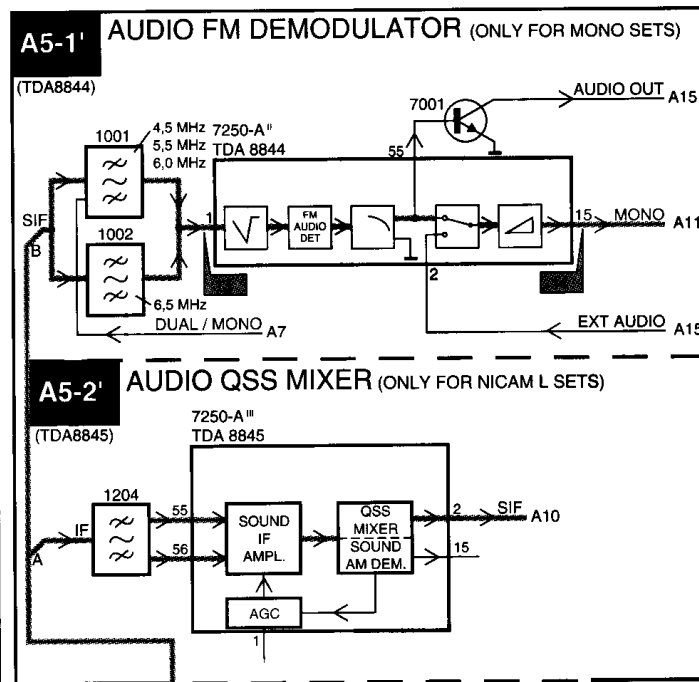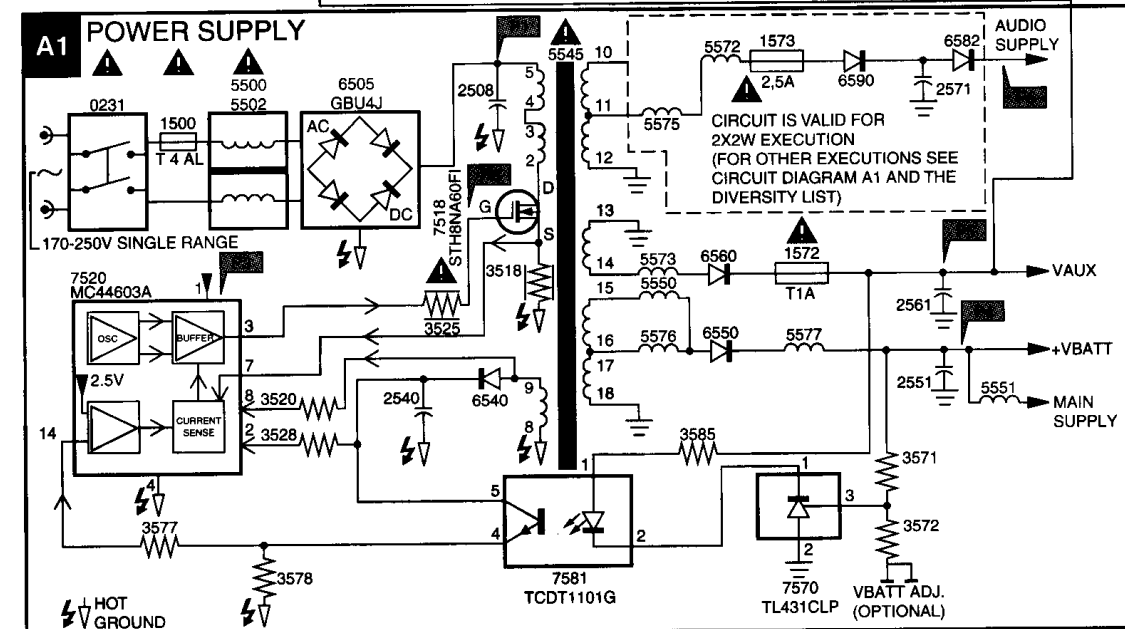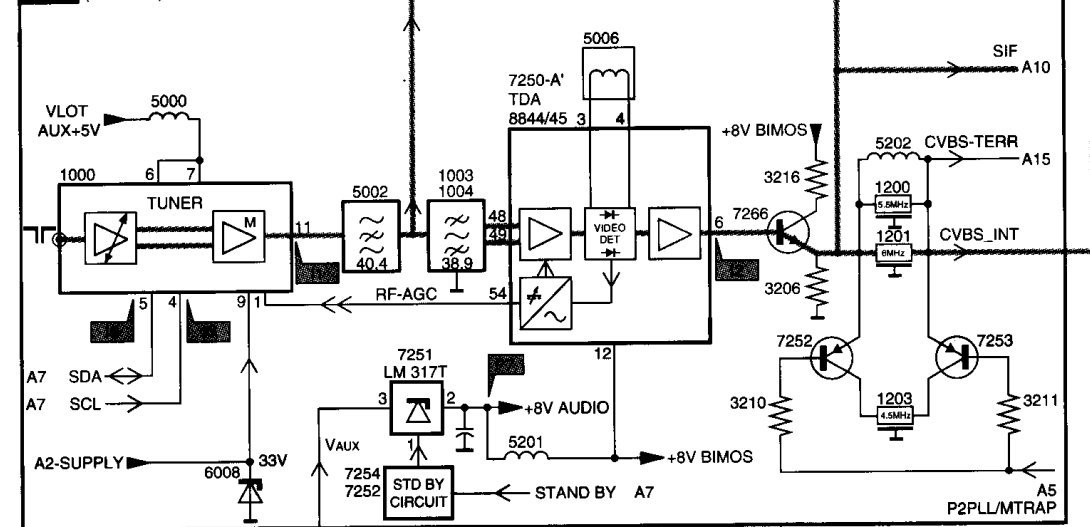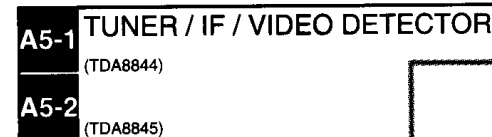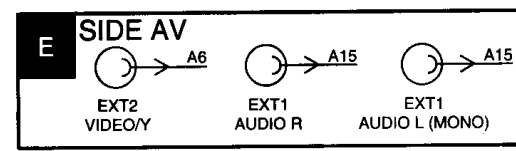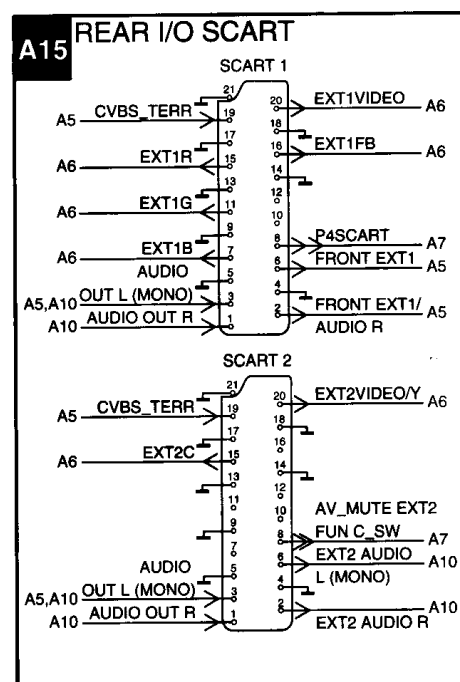

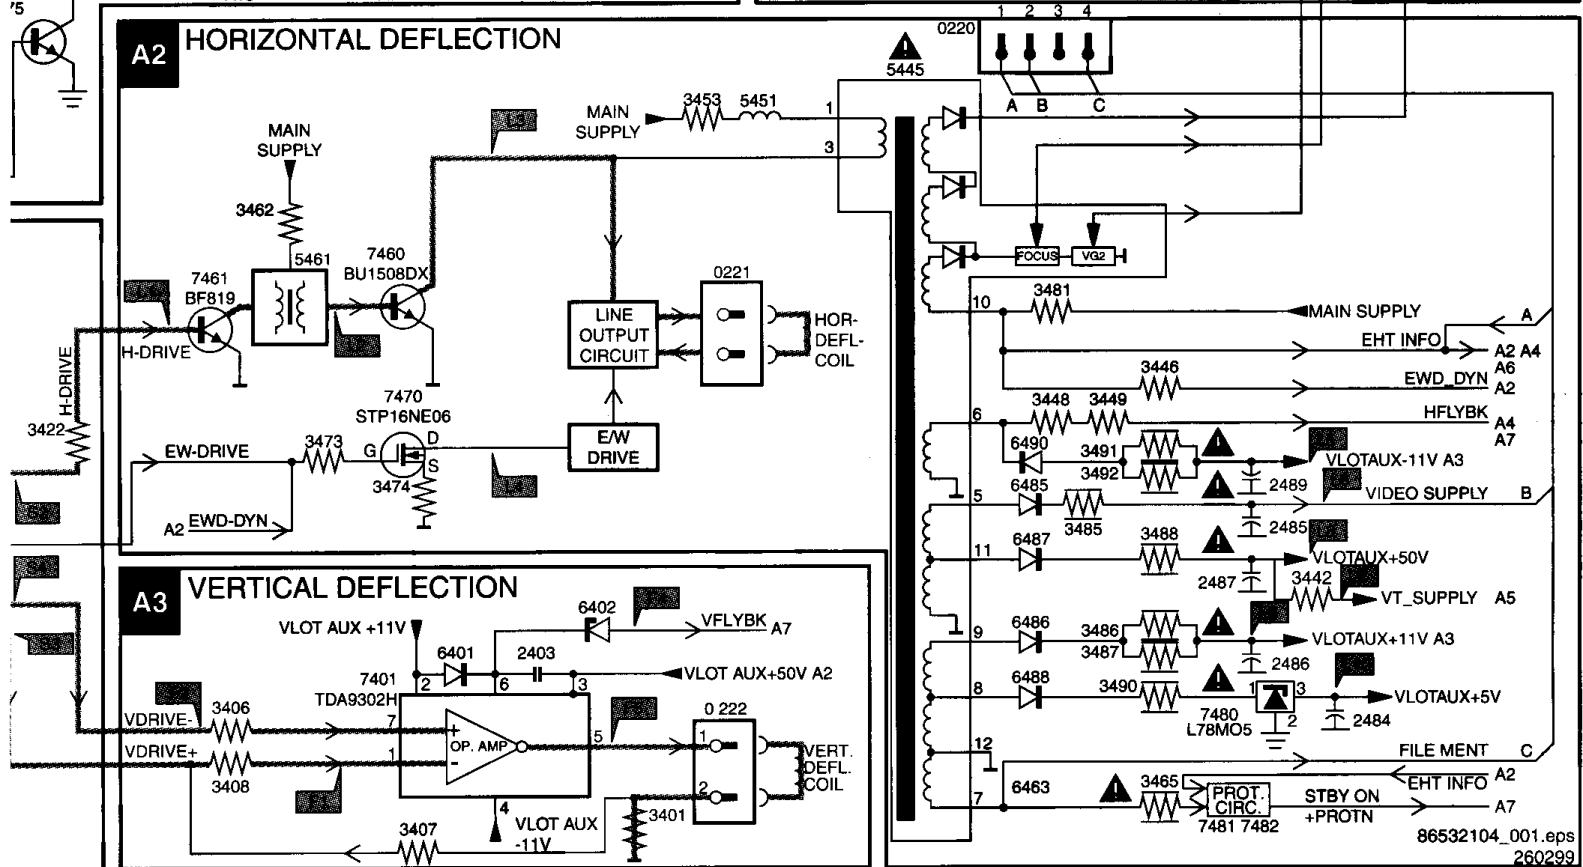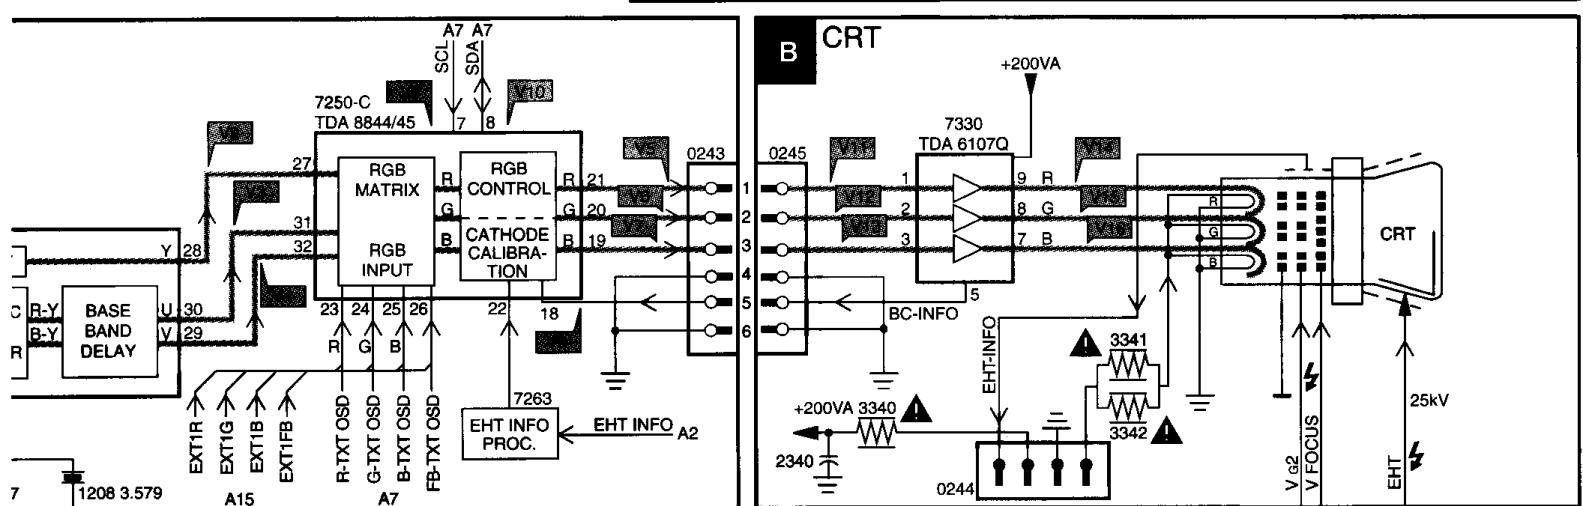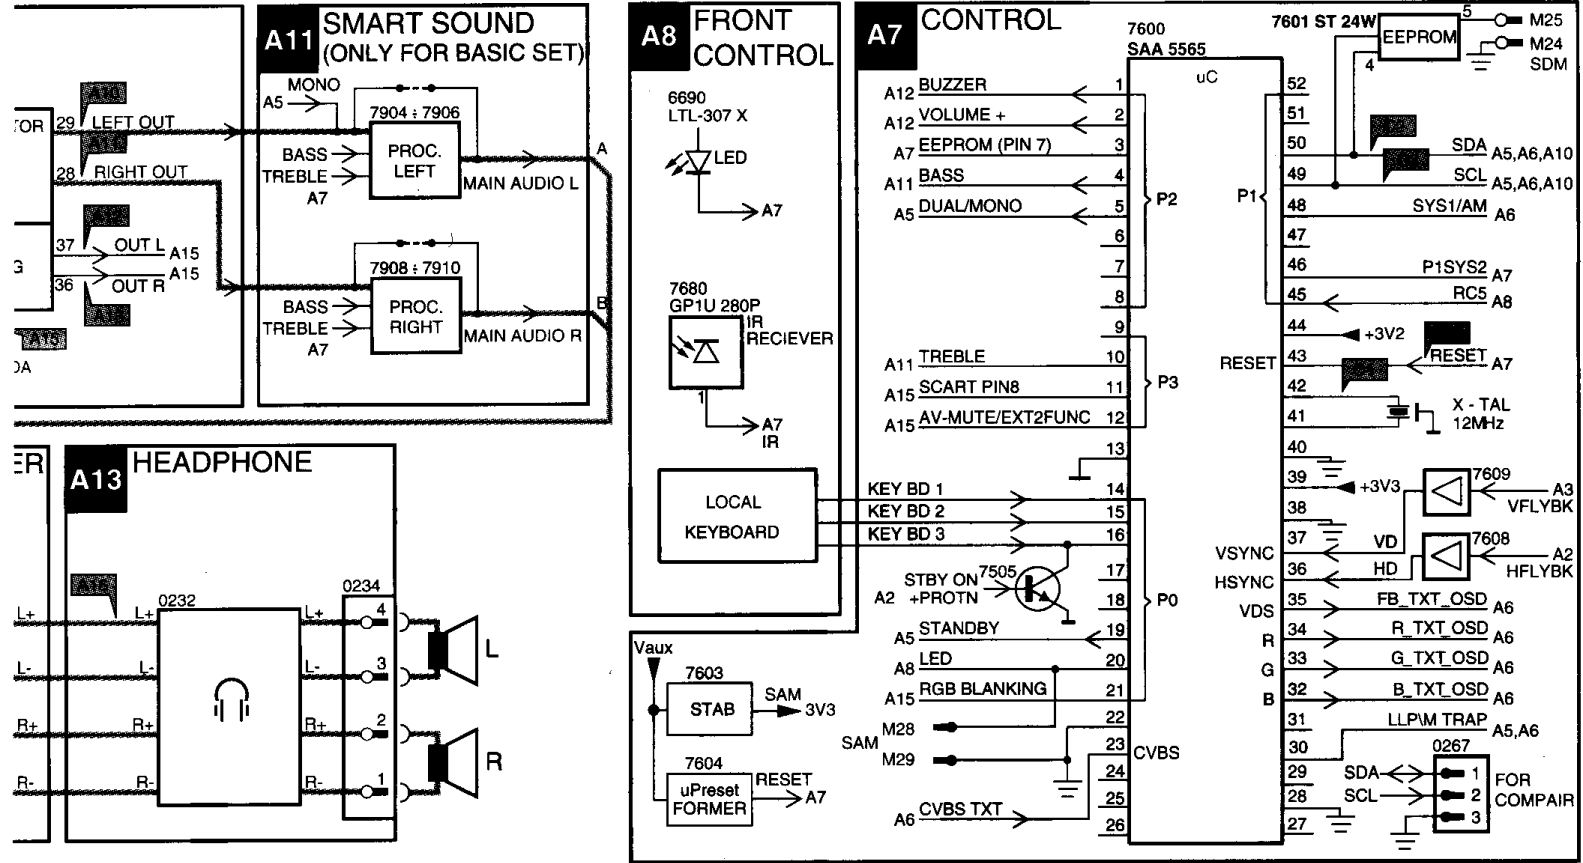


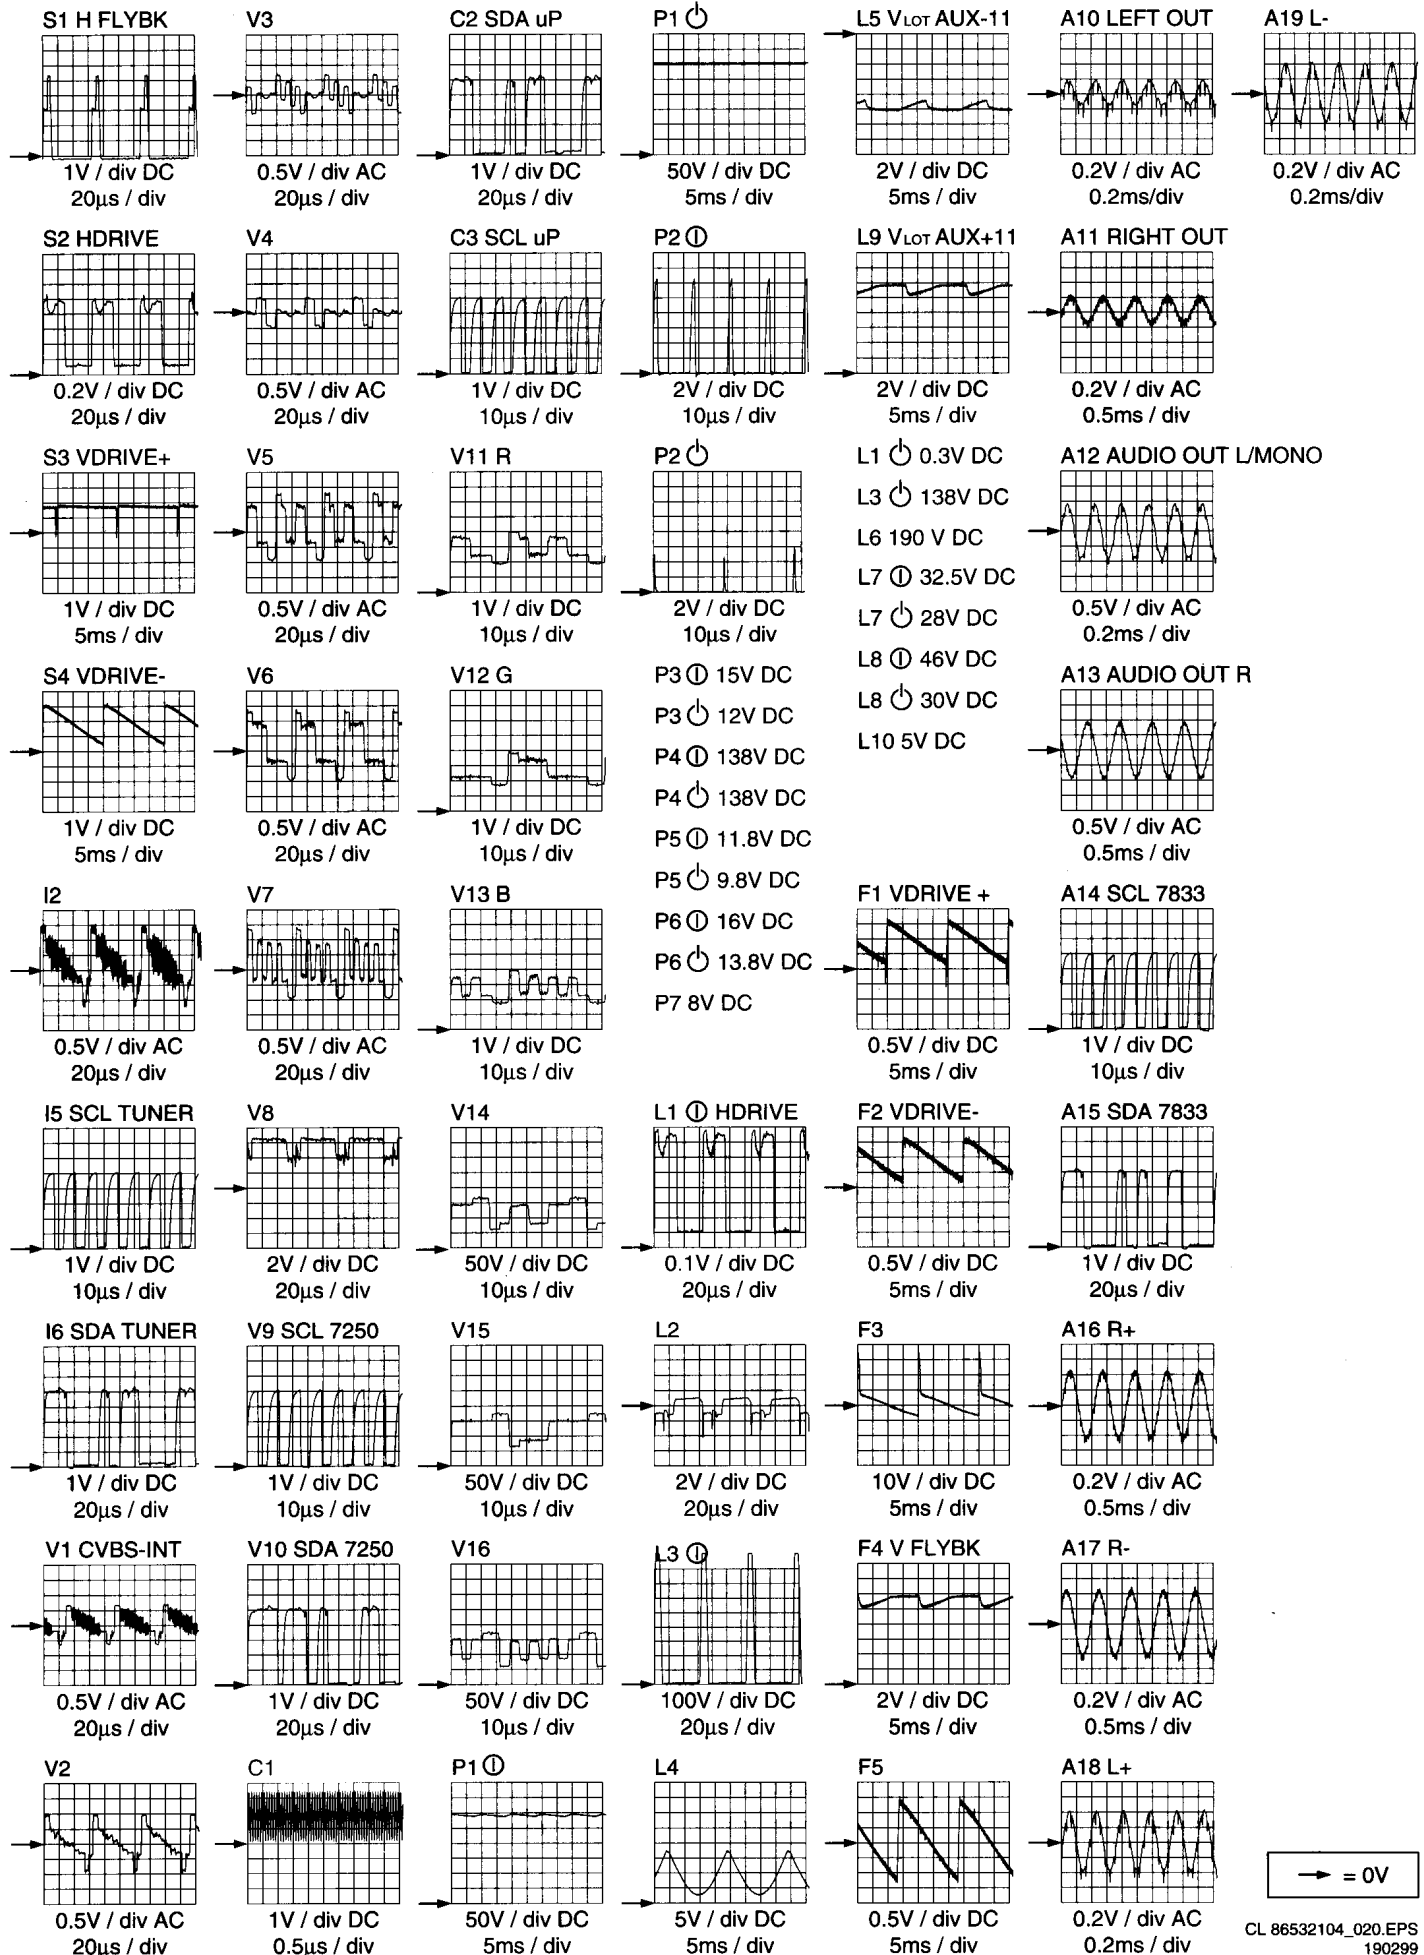


MAIN PANEL COMPONENT SIDE

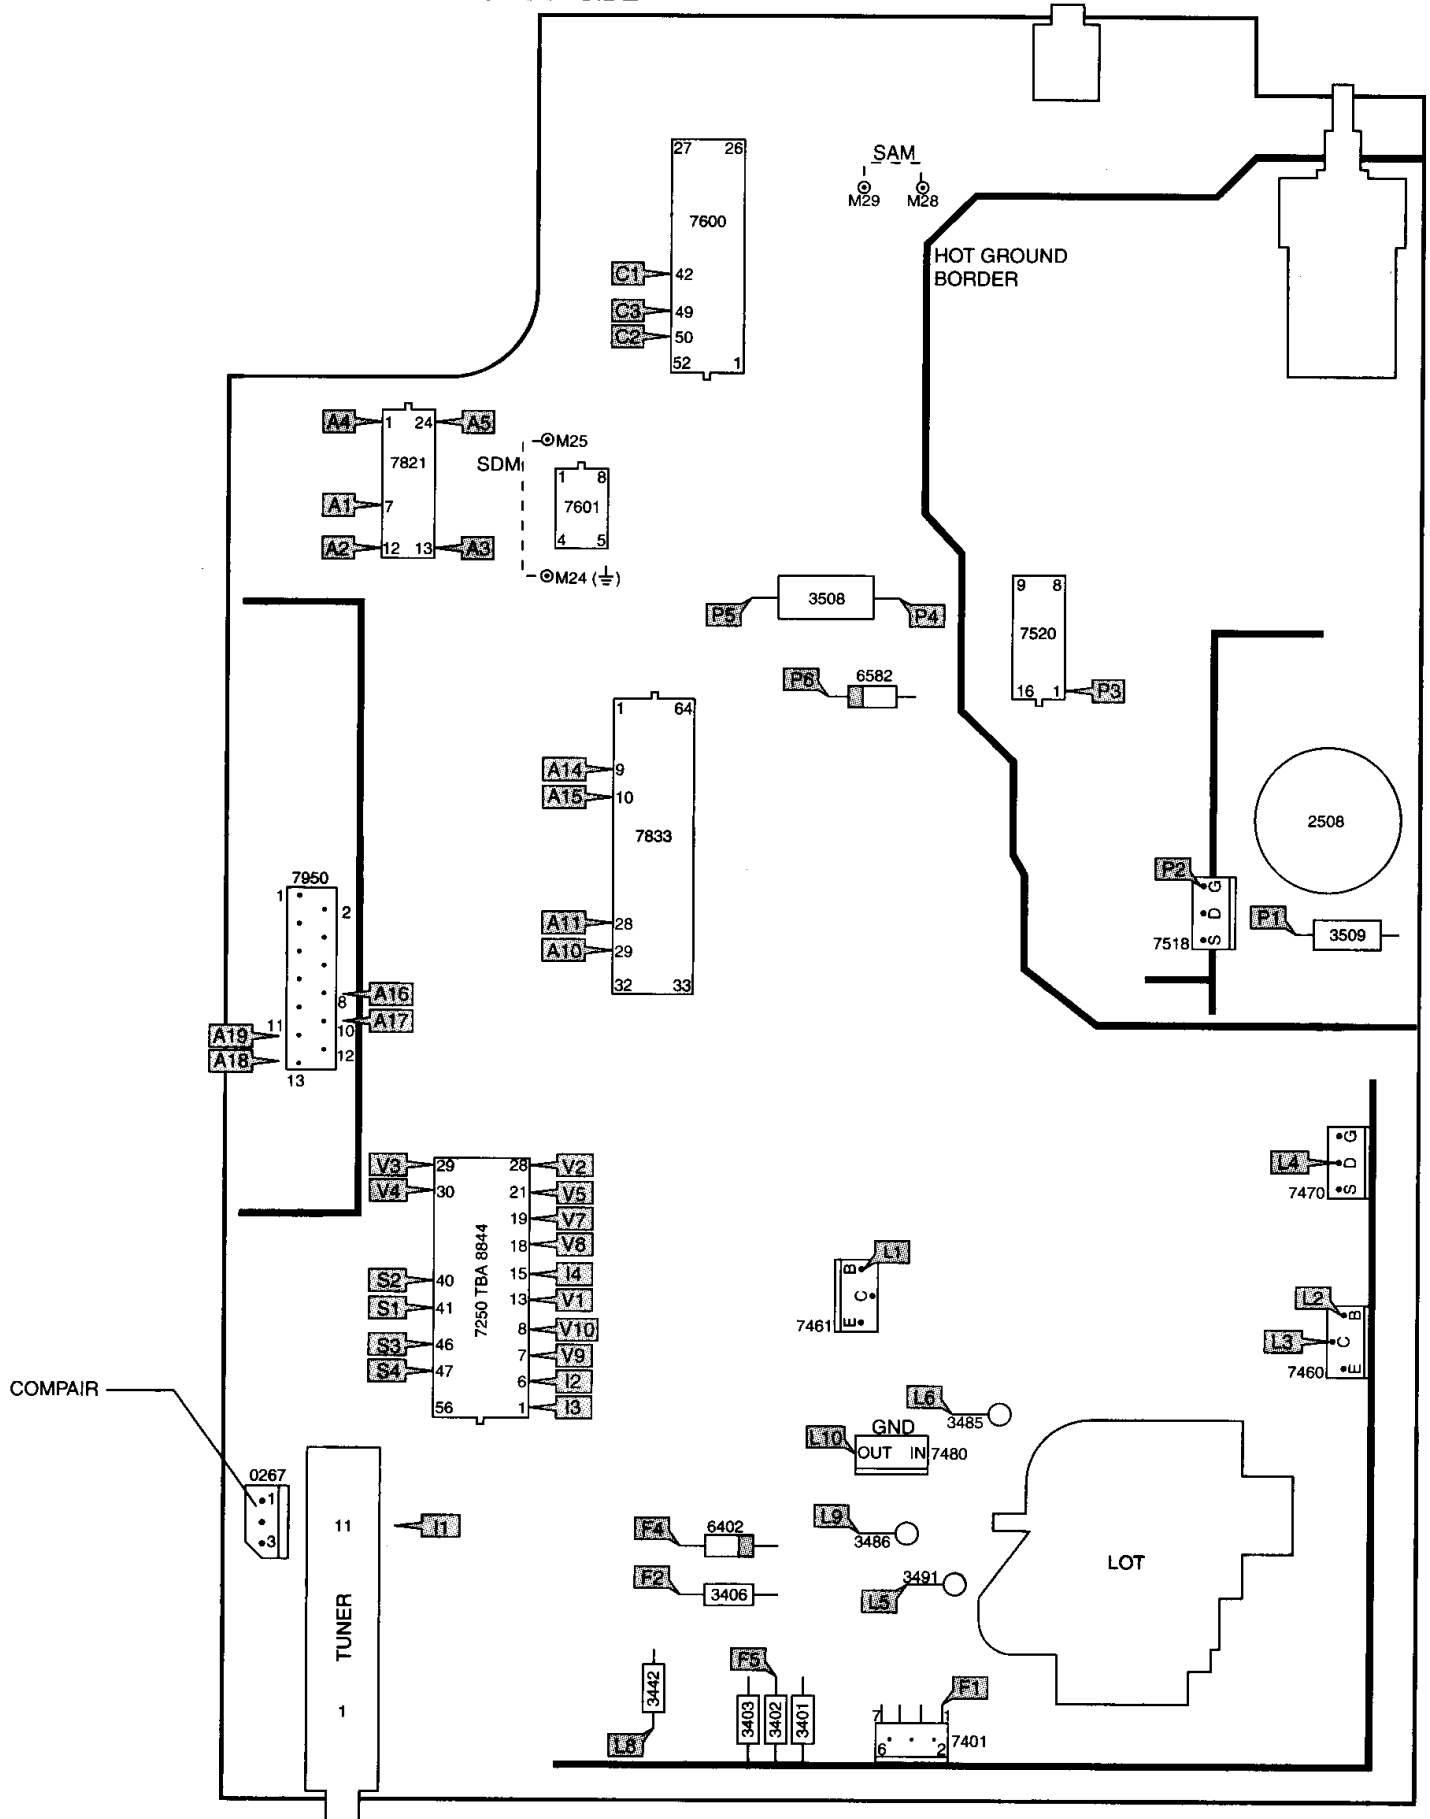


CRT PANEL TRACK SIDE

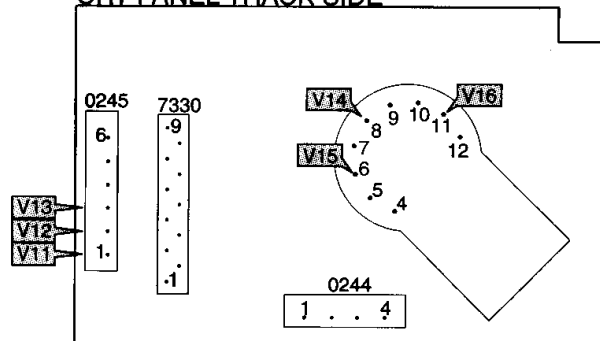

100-120V SINGLE RANGE (USA)
170-250V SINGLE RANGE (EURO)
100-250V FULL RANGE (A/P.LATAM)

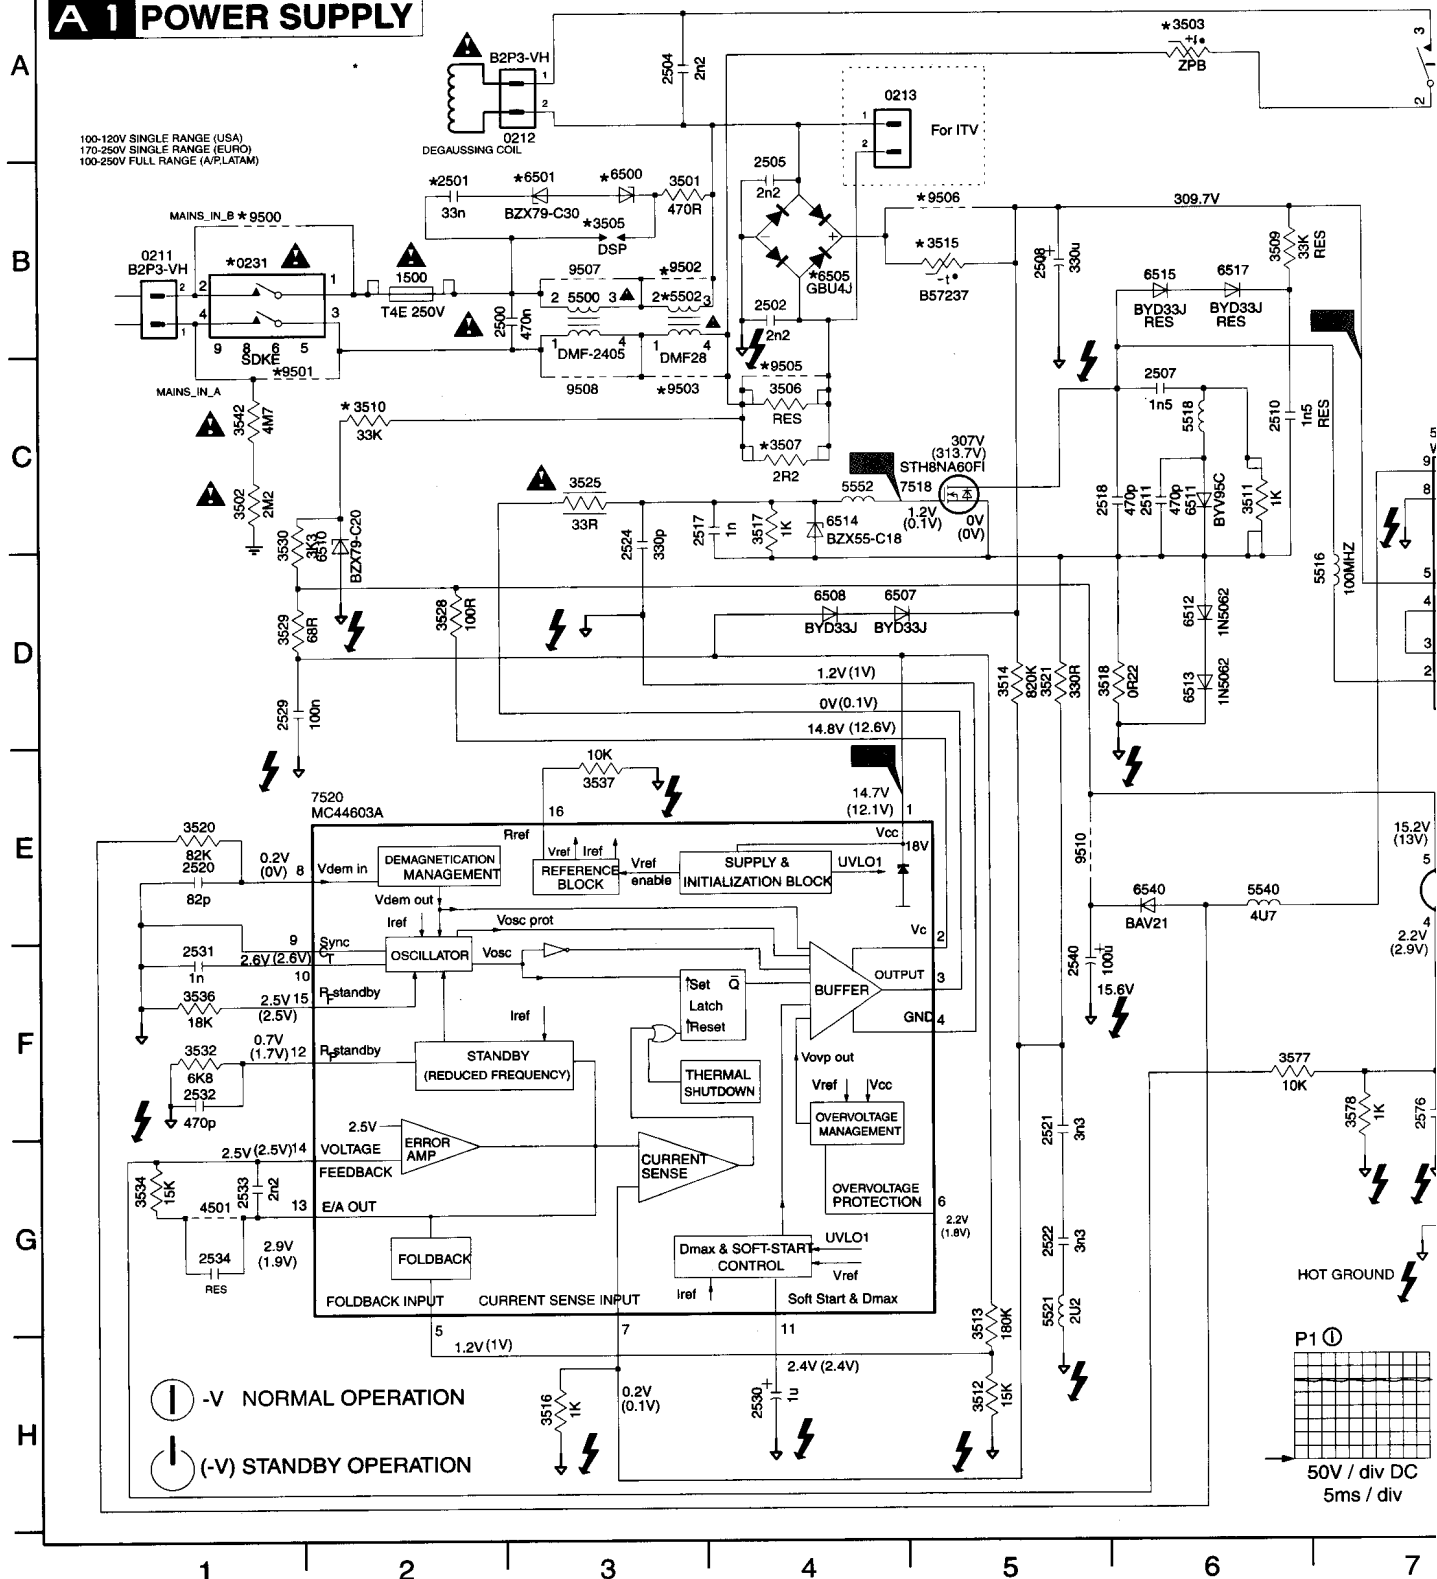

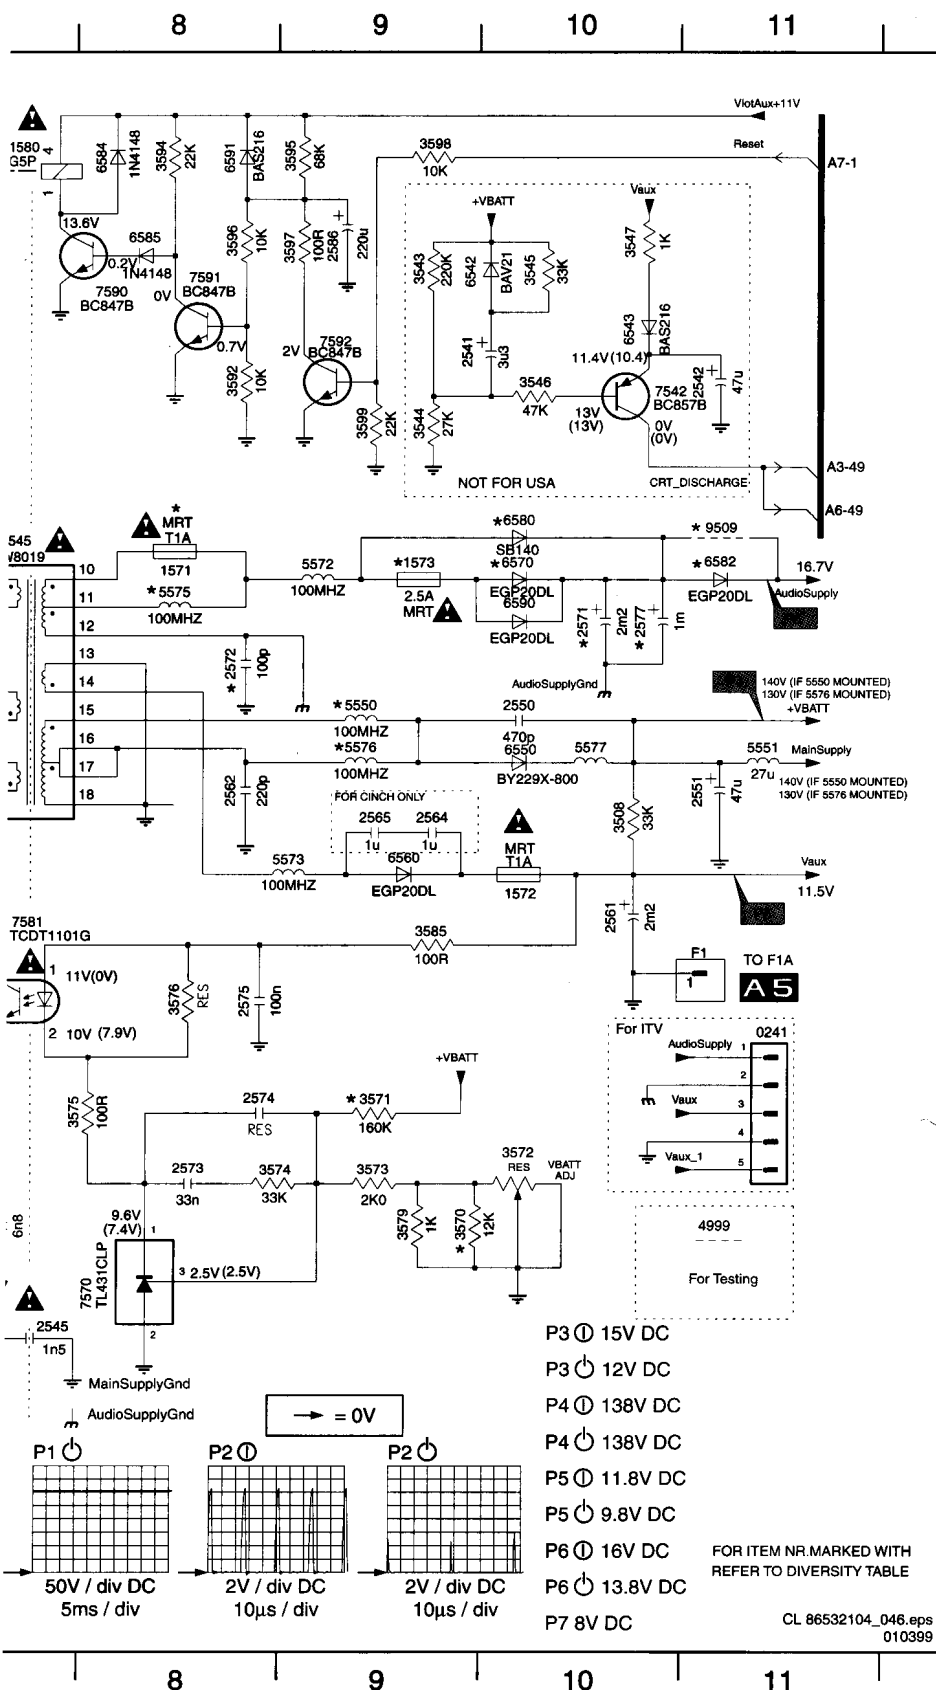

F1 E11	3596 A8
0211 B1	3597 A9
0212 A3	3598 A9
0213 A4	3599 B9
0231 B1	4501 G1
0241 E11	4999 F11
1500 B2	5500 B3
1571 C8	5502 B3
1572 E10	5516 D7
1573 C9	5518 C6
1580 A7	5521 G5
2500 B3	5540 E6
2501 B2	5545 C7
2502 B4	5550 D9
2504 A3	5551 D11
2505 A4	5552 C4
2507 C6	5572 C9
2508 B5	5573 E9
2510 C6	5575 C8
2511 C6	5576 D9
2517 C3	5577 D10
2518 C5	6500 B3
2520 E1	6501 B3
2521 F5	6505 B4
2522 G5	6507 D4
2524 C3	6508 D4
2529 D1	6510 C2
2530 H4	6511 C6
2531 F1	6512 D6
2532 F1	6513 D6
2533 G1	6514 C4
2534 G1	6515 B6
2540 F5	6517 B6
2541 B9	6540 E6
2542 B11	6542 B9
2545 G7	6543 B10
2550 D10	6550 D10
2551 D11	6560 D9
2561 E10	6570 C10
2562 D8	6580 C10
2564 D9	6582 C11
2565 D9	6584 A8
2571 C10	6585 A8
2572 D8	6590 C10
2573 F8	6591 A8
2574 F8	7518 C4
2575 E8	7520 E2
2576 F7	7542 B10
2577 C10	7570 G8
2586 A9	7581 E7
3501 B3	7590 B8
3502 C1	7591 B8
3503 A6	7592 B9
3505 B3	9500 B1
3506 C4	9501 C1
3507 C4	9502 B3
3508 D10	9503 C3
3509 B6	9505 C4
3510 C2	9506 B5
3511 C6	9507 B3
3512 H5	9508 C3
3513 G5	9509 C11
3514 D5	9510 E5
3515 B5	
3516 H3	
3517 C4	
3518 D6	
3520 E1	
3521 D5	
3525 C3	
3528 D2	
3529 D1	
3530 C1	
3532 F1	
3534 G1	
3536 F1	
3537 E3	
3542 C1	
3543 B9	
3544 B9	
3545 B10	
3546 B10	
3547 A10	
3570 F9	
3571 F9	
3572 F10	
3573 F9	
3574 F8	
3575 F8	
3576 E8	
3577 F6	
3578 F7	
3579 F9	
3585 E9	
3592 B8	
3594 A8	
3595 A9	

1 2 3 4 5 6

DIVERSITY TABLE FOR POWER SUPPLY

DIVERSITY TABLE FOR ALL ITEM NO. MARKED WITH *															
ITEM	FR_CIS 25I/29I AP	LR USA	FR_NONCIS AP	HR 25I/29I EUROPE	HR_CIS 25I/29I AP	PS_FR_US	PS_FR_LA	HR 25I/29I CHINA	PS_FR NONCIS IND	ITV	140V VBATT	130V VBATT	2X3w/5w AUDIO	2X1w AUDIO	1X AUD
0231	YES	---	YES	YES	YES	---	YES	YES	---	YES	---	---	---	---	---
1571	---	---	---	---	---	---	---	---	---	---	---	---	---	T1.0A	T1
1573	---	---	---	---	---	---	---	---	---	---	---	---	T2.5A	---	---
2501	---	---	YES	---	---	---	YES	---	YES	---	---	---	---	---	---
2508	330/400V	470/200V	330/400V	220/400V	220/400V	330/400V	330/400V	220/450V	330/450V	220/400V	---	---	---	---	---
2561	3300u	1000u	3300u	3300u	3300u	1000u	3300u	3300u	3300u	---	---	---	---	---	---
2571	---	---	---	---	---	---	---	---	---	---	---	---	2200/25V	---	---
2572	---	330p	---	---	---	---	---	---	---	---	---	---	---	---	---
2577	---	---	---	---	---	---	---	---	---	---	---	---	---	1000/16V	1000
3503	220V/9R	110V/10R	220V/9R	220V/9R	220V/9R	220V/9R	220V/9R	220V/9R	---	220V/9R	---	---	---	---	---
3505	YES	YES	---	YES	YES	YES	---	YES	---	---	---	---	---	---	---
3507	---	---	---	2R2/5w	2R2/5w	---	---	2R2/5w	---	2R2/5w	---	---	---	---	---
3510	33K/3w	33K/3w	33K/3w	68K/3w	68K/3w	33K/3w	33K/3w	68K/3w	33K/3w	---	---	---	---	---	---
3515	NTC 2R5	NTC 2R5	NTC 2R5	---	---	NTC 2R5	NTC 2R5	---	NTC 2R5	---	---	---	---	---	---
3570	---	---	---	---	---	---	---	---	---	---	10K	15K	---	---	---
3571	---	---	---	---	---	---	---	---	---	---	160K	150K	---	---	---
5502	DMF2810	---	---	DMF2820	DMF2820	---	---	DMF2820	---	---	---	---	---	---	---
5550	---	---	---	---	---	---	---	---	---	---	YES	---	---	---	---
5575	---	---	---	---	---	---	---	---	---	---	---	---	YES	---	---
5576	---	---	---	---	---	---	---	---	---	---	---	YES	---	---	---
6500	---	---	BZX79-C30	---	---	---	BZX79-C30	---	BZX79-C30	---	---	---	---	---	---
6501	---	---	BZX79-C30	---	---	---	BZX79-C30	---	BZX79-C30	---	---	---	---	---	---
6505	GBU6JL	GBU6JL	GBU6JL	GBU4JL	GBU4JL	GBU6JL	GBU6JL	GBU4JL	GBU6JL	---	---	---	---	---	---
6570	---	---	---	---	---	---	---	---	---	---	---	---	EGP20D	---	---
6580	---	---	---	---	---	---	---	---	---	---	---	---	---	SB140	BYV2
6582	---	---	---	---	---	---	---	---	---	---	---	---	EGP20D	---	---
6590	---	---	---	---	---	---	---	---	---	---	---	---	EGP20D	---	---
9500	---	YES	---	---	---	YES	---	---	---	---	---	---	---	---	---
9501	---	YES	---	---	---	YES	---	---	---	---	---	---	---	---	---
9502	---	YES	YES	---	---	YES	YES	---	YES	---	---	---	---	---	---
9503	---	YES	YES	---	---	YES	YES	---	YES	---	---	---	---	---	---
9505	YES	YES	YES	---	---	YES	YES	---	YES	---	---	---	---	---	---
9506	---	---	---	YES	YES	---	---	YES	---	YES	---	---	---	---	---
9509	---	---	---	---	---	---	---	---	---	---	---	---	---	YES	YES

1 2 3 4 5 6

7 8 9 10 11

DIVERSITY TABLE FOR HORIZONTAL DEFLECTION

			DIVERSITY TABLE FOR ALL ITEM NO. MARKED WITH •					
ITEM	PHILIPS TUBE 25"/28" BLD EAST-WEST	HUA FEI TUBE 25" EAST-WEST	PHILIPS TUBE 25"/28" BLS EAST-WEST	PHILIPS TUBE 25V (26") NO EAST-WEST	PHILIPS TUBE 27V (29") NO EAST-WEST	PHILIPS TUBE 27V (29") EAST-WEST		
2451	15n	15n	15n	15n	15n	15n/ 12n China		
2457	390n	390n	390n	390n	390n	360n		
2463	1n	1n	820p	470p	680p	820p/1n China		
2464	---	---	---	---	---	2u2		
2465	9n1	9n1	9n1	10n	10n	10n		
2466	10n	10n	10n	---	---	---		
2467	---	---	---	---	---	22n		
2468	18n	18n	18n	---	---	33n		
2470	470p	470p	470p	---	---	470p		
2471	470n	470n	470n	---	---	---		
2472	2u2	2u2	2u2	---	---	2u2		
2473	47u	47u	47u	---	---	47u		
2475	560n	560n	510n	---	---	---		
425 (A4)	56k	56k	56k	150k	120k	150k		
3452	33R	33R	33R	22R	22R	22R		
3453	---	---	---	4R7	4R7	---		
3470	33k	33k	33k	---	---	33k		
3471	220k	220k	220k	---	---	---		
3472	100k	100k	120k	---	---	82k		
3473	1k	1k	1k	---	---	1k		
3474	3R3	3R3	3R3	---	---	4R7		
3475	3R3	3R3	3R3	---	---	4R7		
3477	100R	100R	100R	---	---	100R		
3479	330R	330R	330R	---	---	330R		
3481/82	Refer to part list videocontrol						Depends on country.	
5445	242253102325	312813820681	242253102324	242253102326	242253102326	242253102326		
				USA: 242253102327 China: 312813820691				
5451	33uH	33uH	33uH	27uH	27uH	27uH		
5457	312813853111	312813853111	312813853111	312813853241	312813853241	312813853241		
5463	---	---	---	---	---	312813834021		
5465	312813834011	312813834011	312813834011	---	---	---		
5470	311233830531	311233830531	311233830531	---	---	---		
5471	---	---	---	---	---	1nH		
5480	33uH	56uH	33uH	27uH	27uH	27uH/47uH China		
6461	BYW95C/20	BYW95C/20	BYW95C/20	---	---	BYW95C/20		
6470	BZX79-C9V1	BZX79-C9V1	BZX79-C9V1	---	---	BZX79-C9V1		
6471	1N4148	1N4148	1N4148	---	---	---		
6472	1N4148	1N4148	1N4148	---	---	1N4148		
6473	BZX79-C39	BZX79-C39	BZX79-C39	---	---	---		
7470	STP16NE	STP16NE	STP16NE	---	---	STP16NE		
9453	YES	YES	YES	---	---	YES		
9460	---	---	---	YES	YES	YES		
9461	---	---	---	YES	YES	---		
9462	YES	YES	YES	---	---	---		
9463	---	---	---	---	---	YES		
9464	YES	YES	YES	---	---	---		

ITEM	PHILIPS TUBE 25"/28" BLD EAST-WEST	HUA FEI TUBE 25" EAST-WEST	PHILIPS TUBE 25"/28" BLS EAST-WEST	PHILIPS TUBE 25V (26") NO EAST-WEST	PHILIPS TUBE 27V (29") NO EAST-WEST	PHILIPS TUBE 27V (29") EAST-WEST		
2451	15n	15n	15n	15n	15n	15n/ 12n China		
2457	390n	390n	390n	390n	390n	360n		
2463	1n	1n	820p	470p	680p	820p/1n China		
2464	---	---	---	---	---	2u2		
2465	9n1	9n1	9n1	10n	10n	10n		
2466	10n	10n	10n	---	---	---		
2467	---	---	---	---	---	22n		
2468	18n	18n	18n	---	---	33n		
2470	470p	470p	470p	---	---	470p		
2471	470n	470n	470n	---	---	---		
2472	2u2	2u2	2u2	---	---	2u2		
2473	47u	47u	47u	---	---	47u		
2475	560n	560n	510n	---	---	---		
425 (A4)	56k	56k	56k	150k	120k	150k		
3452	33R	33R	33R	22R	22R	22R		
3453	---	---	---	4R7	4R7	---		
3470	33k	33k	33k	---	---	33k		
3471	220k	220k	220k	---	---	---		
3472	100k	100k	120k	---	---	82k		
3473	1k	1k	1k	---	---	1k		
3474	3R3	3R3	3R3	---	---	4R7		
3475	3R3	3R3	3R3	---	---	4R7		
3477	100R	100R	100R	---	---	100R		
3479	330R	330R	330R	---	---	330R		
3481/82	Refer to part list videocontrol						Depends on country.	
5445	242253102325	312813820681	242253102324	242253102326	242253102326	242253102326		
				USA: 242253102327 China: 312813820691				
5451	33uH	33uH	33uH	27uH	27uH	27uH		
5457	312813853111	312813853111	312813853111	312813853241	312813853241	312813853241		
5463	---	---	---	---	---	312813834021		
5465	312813834011	312813834011	312813834011	---	---	---		
5470	311233830531	311233830531	311233830531	---	---	---		
5471	---	---	---	---	---	1nH		
5480	33uH	56uH	33uH	27uH	27uH	27uH/47uH China		
6461	BYW95C/20	BYW95C/20	BYW95C/20	---	---	BYW95C/20		
6470	BZX79-C9V1	BZX79-C9V1	BZX79-C9V1	---	---	BZX79-C9V1		
6471	1N4148	1N4148	1N4148	---	---	---		
6472	1N4148	1N4148	1N4148	---	---	1N4148		
6473	BZX79-C39	BZX79-C39	BZX79-C39	---	---	---		
7470	STP16NE	STP16NE	STP16NE	---	---	STP16NE		
9453	YES	YES	YES	---	---	YES		
9460	---	---	---	YES	YES	YES		
9461	---	---	---	YES	YES	---		
9462	YES	YES	YES	---	---	---		
9463	---	---	---	---	---	YES		
9464	YES	YES	YES	---	---	---		

A

B

C


D



E

F



7 8 9 10 11


FOR ITEM NR. MARKED WITH *
REFER TO DIVERSITY TABLE
RES = RESERVED

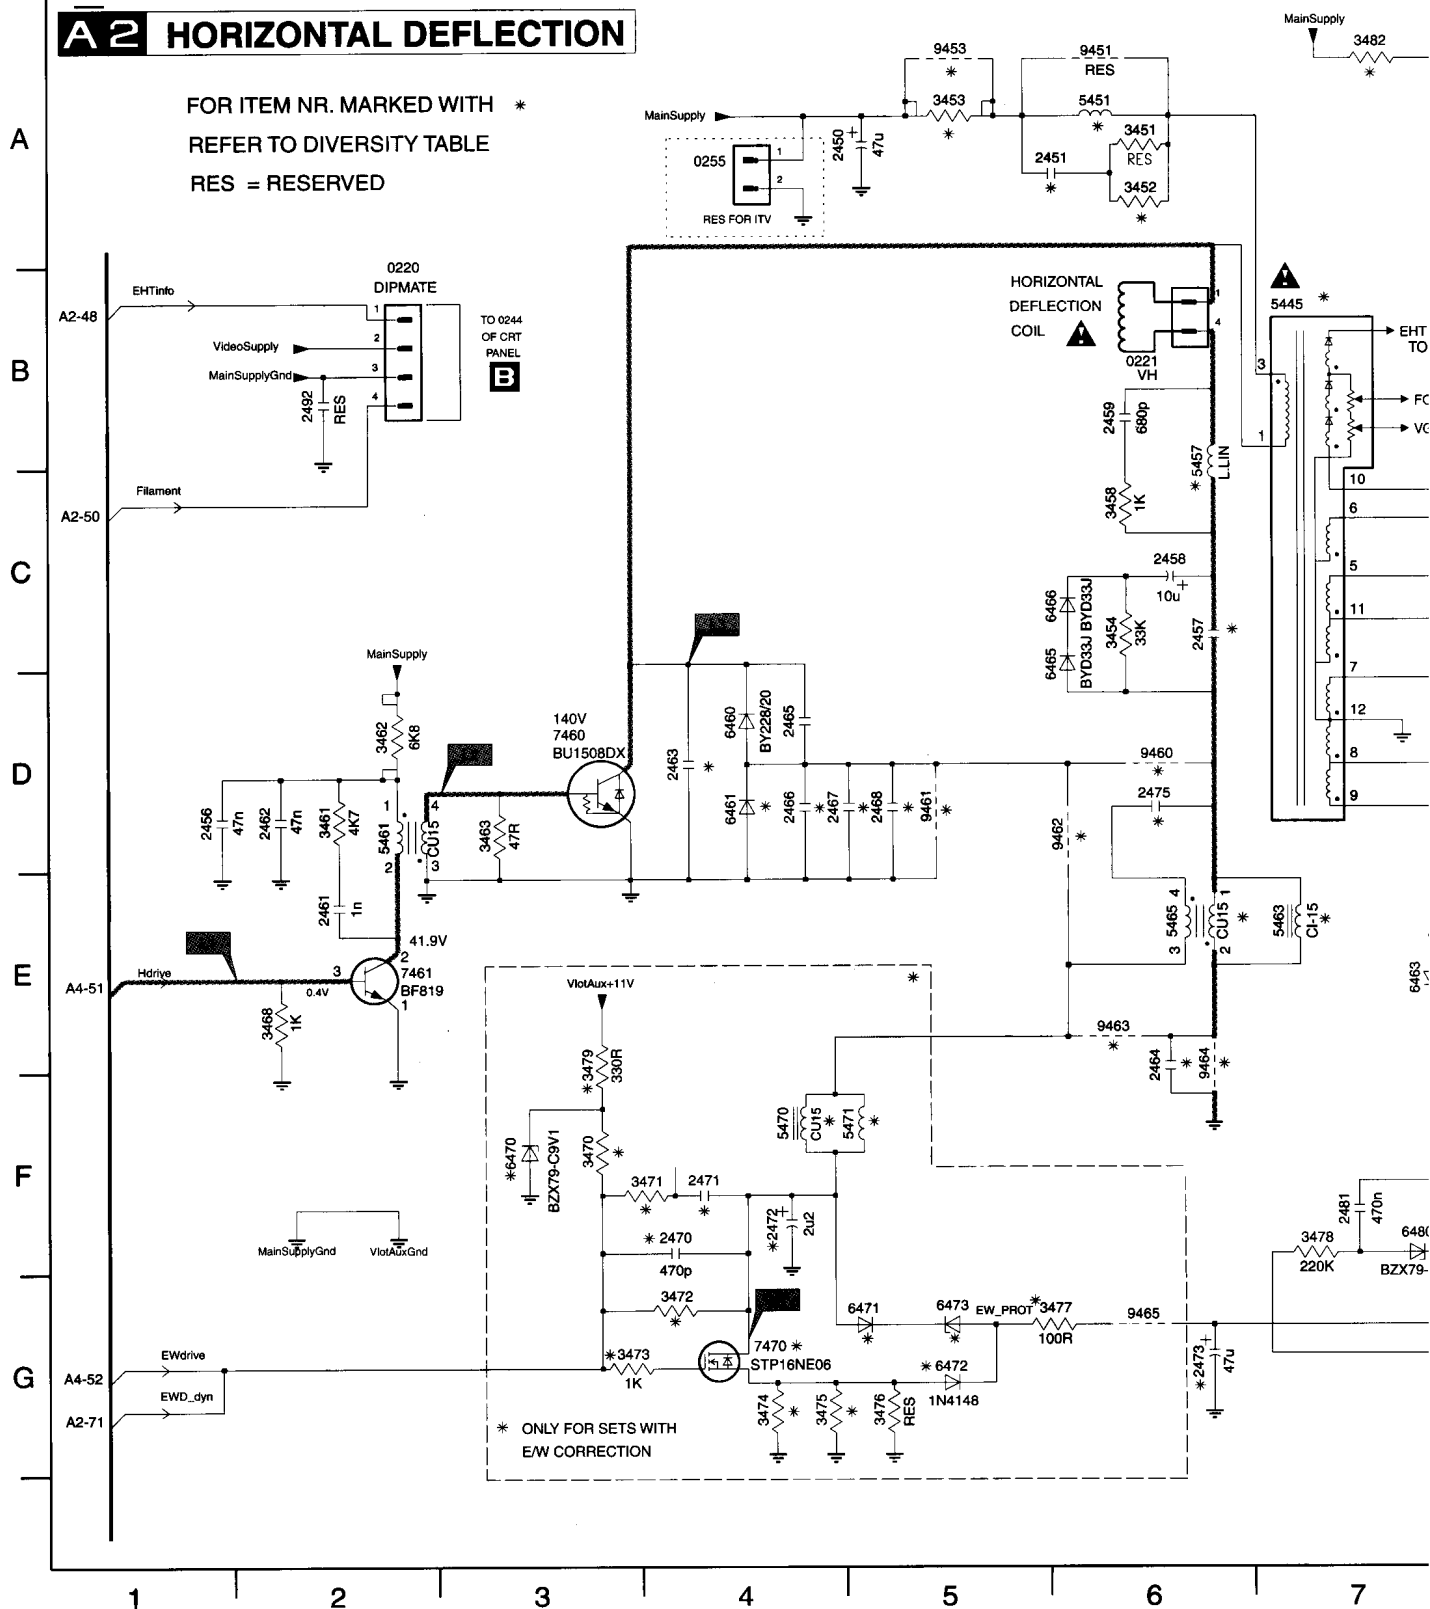

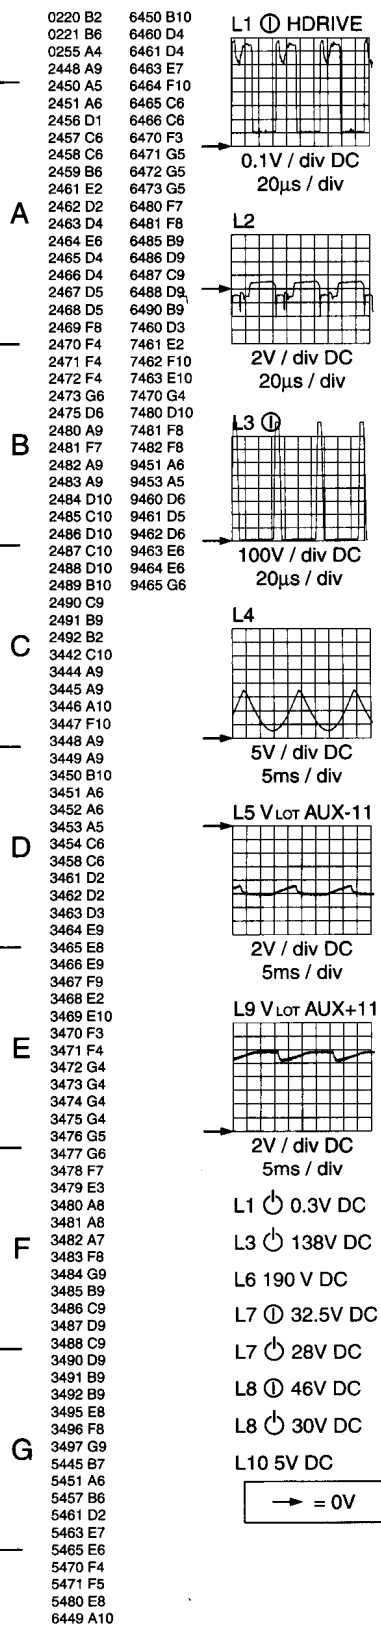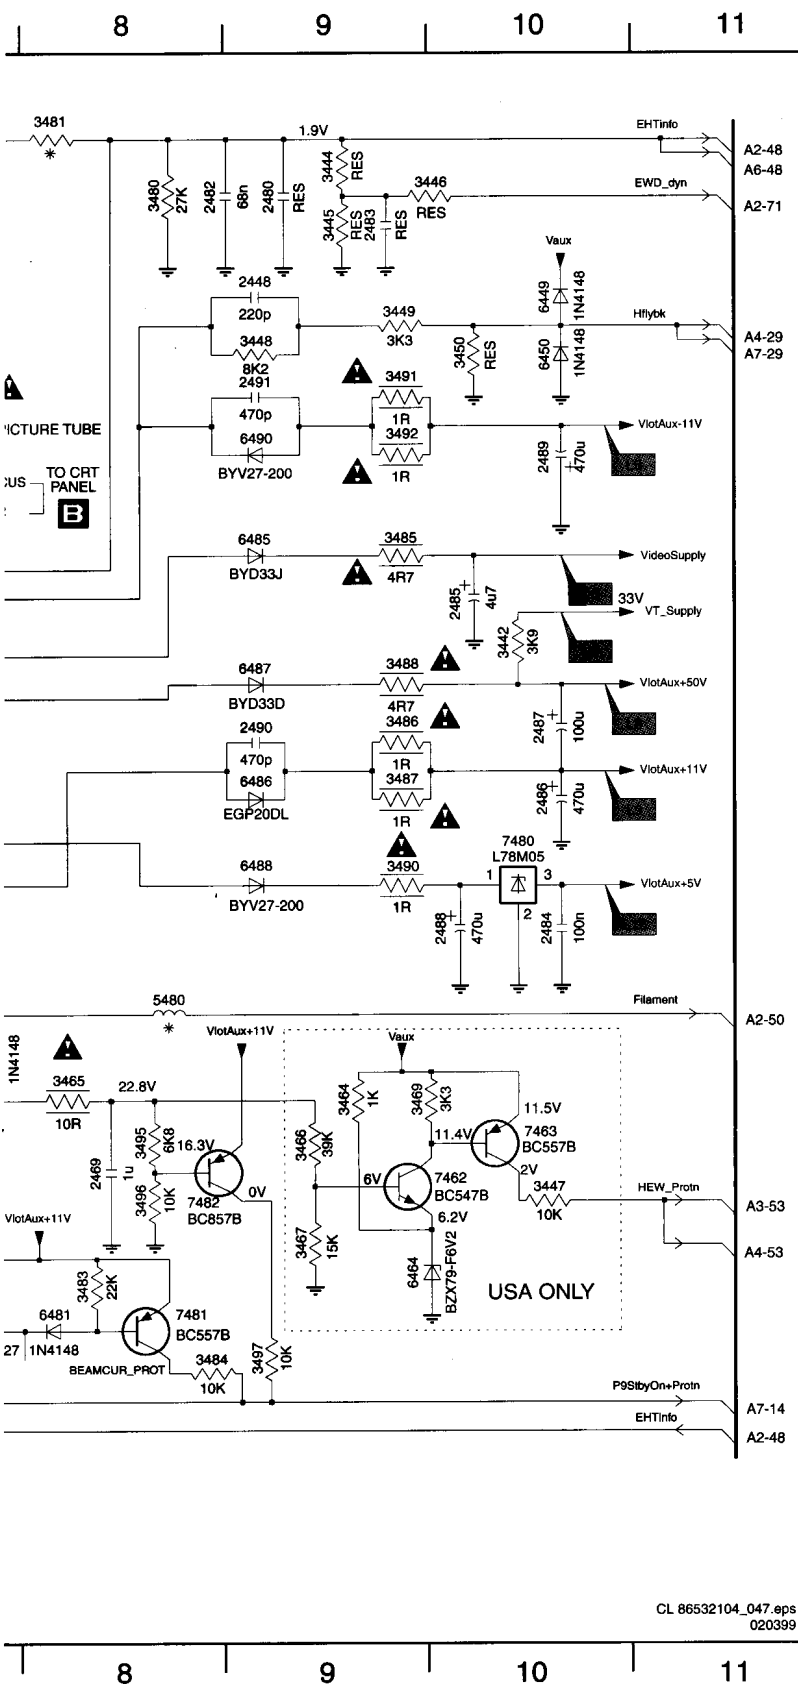

CL 86532104_047.aps
020399

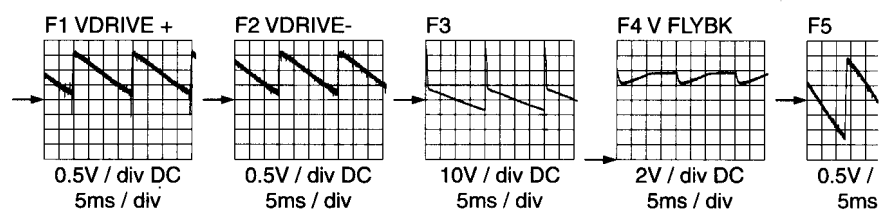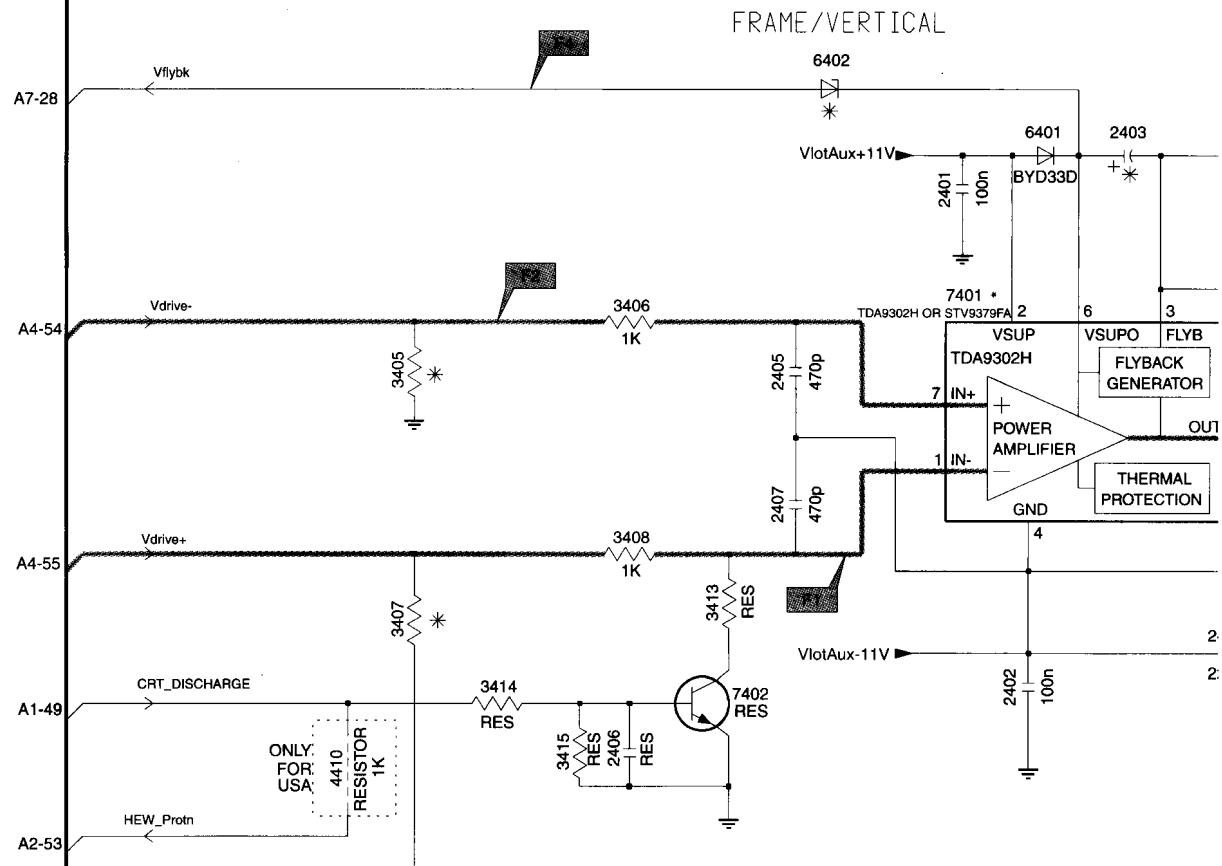A 3 VERTICAL DEFLECTION

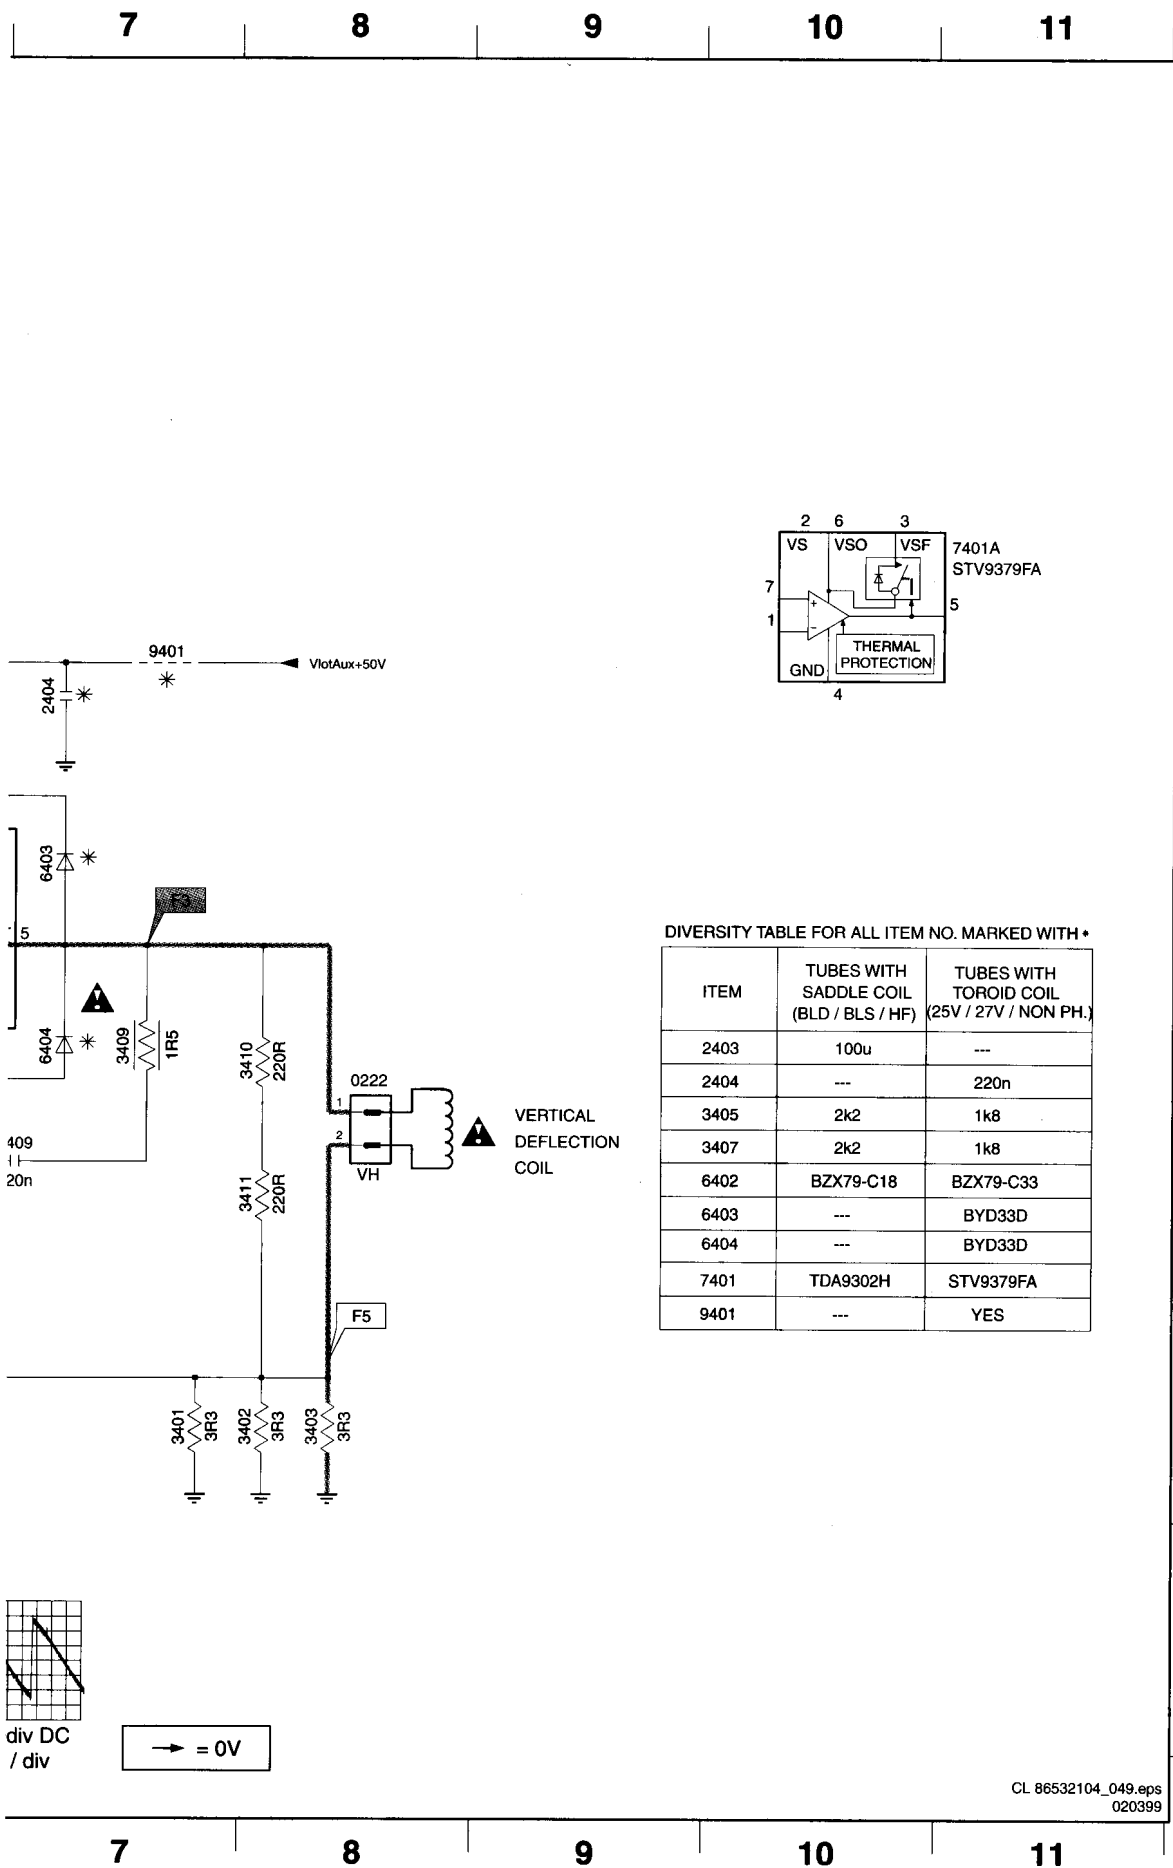

0222 E8
2401 C5
2402 E6
2403 C6
2404 C7
2405 D5
2406 E4
2407 D5
2409 E7
3401 F7
3402 F8
3403 F8
3405 D3
3406 C4
3407 E3
3408 D4
3409 D7
3410 E8
3411 E8
3413 E4
3414 E3
3415 E4
4410 E3
6401 C6
6402 B5
6403 D7
6404 D7
7401 C5
7401A B11
7402 E4
9401 C7

A

B

C


D

E


F

G

2228 D4	2426 D1	2430 B3	2438 C4	3420 B1	3423 D4	3426 D1	3431 B4	3437 E3
2420 B2	2428 C1	2431 B3	2440 E3	3421 E3	3424 B2	3428 C1	3432 C4	3438 D3
2421 C4	2429 C1	2437 E3	2441 E2	3422 E3	3425 B2	3429 C1	3436 C4	7250-D B2

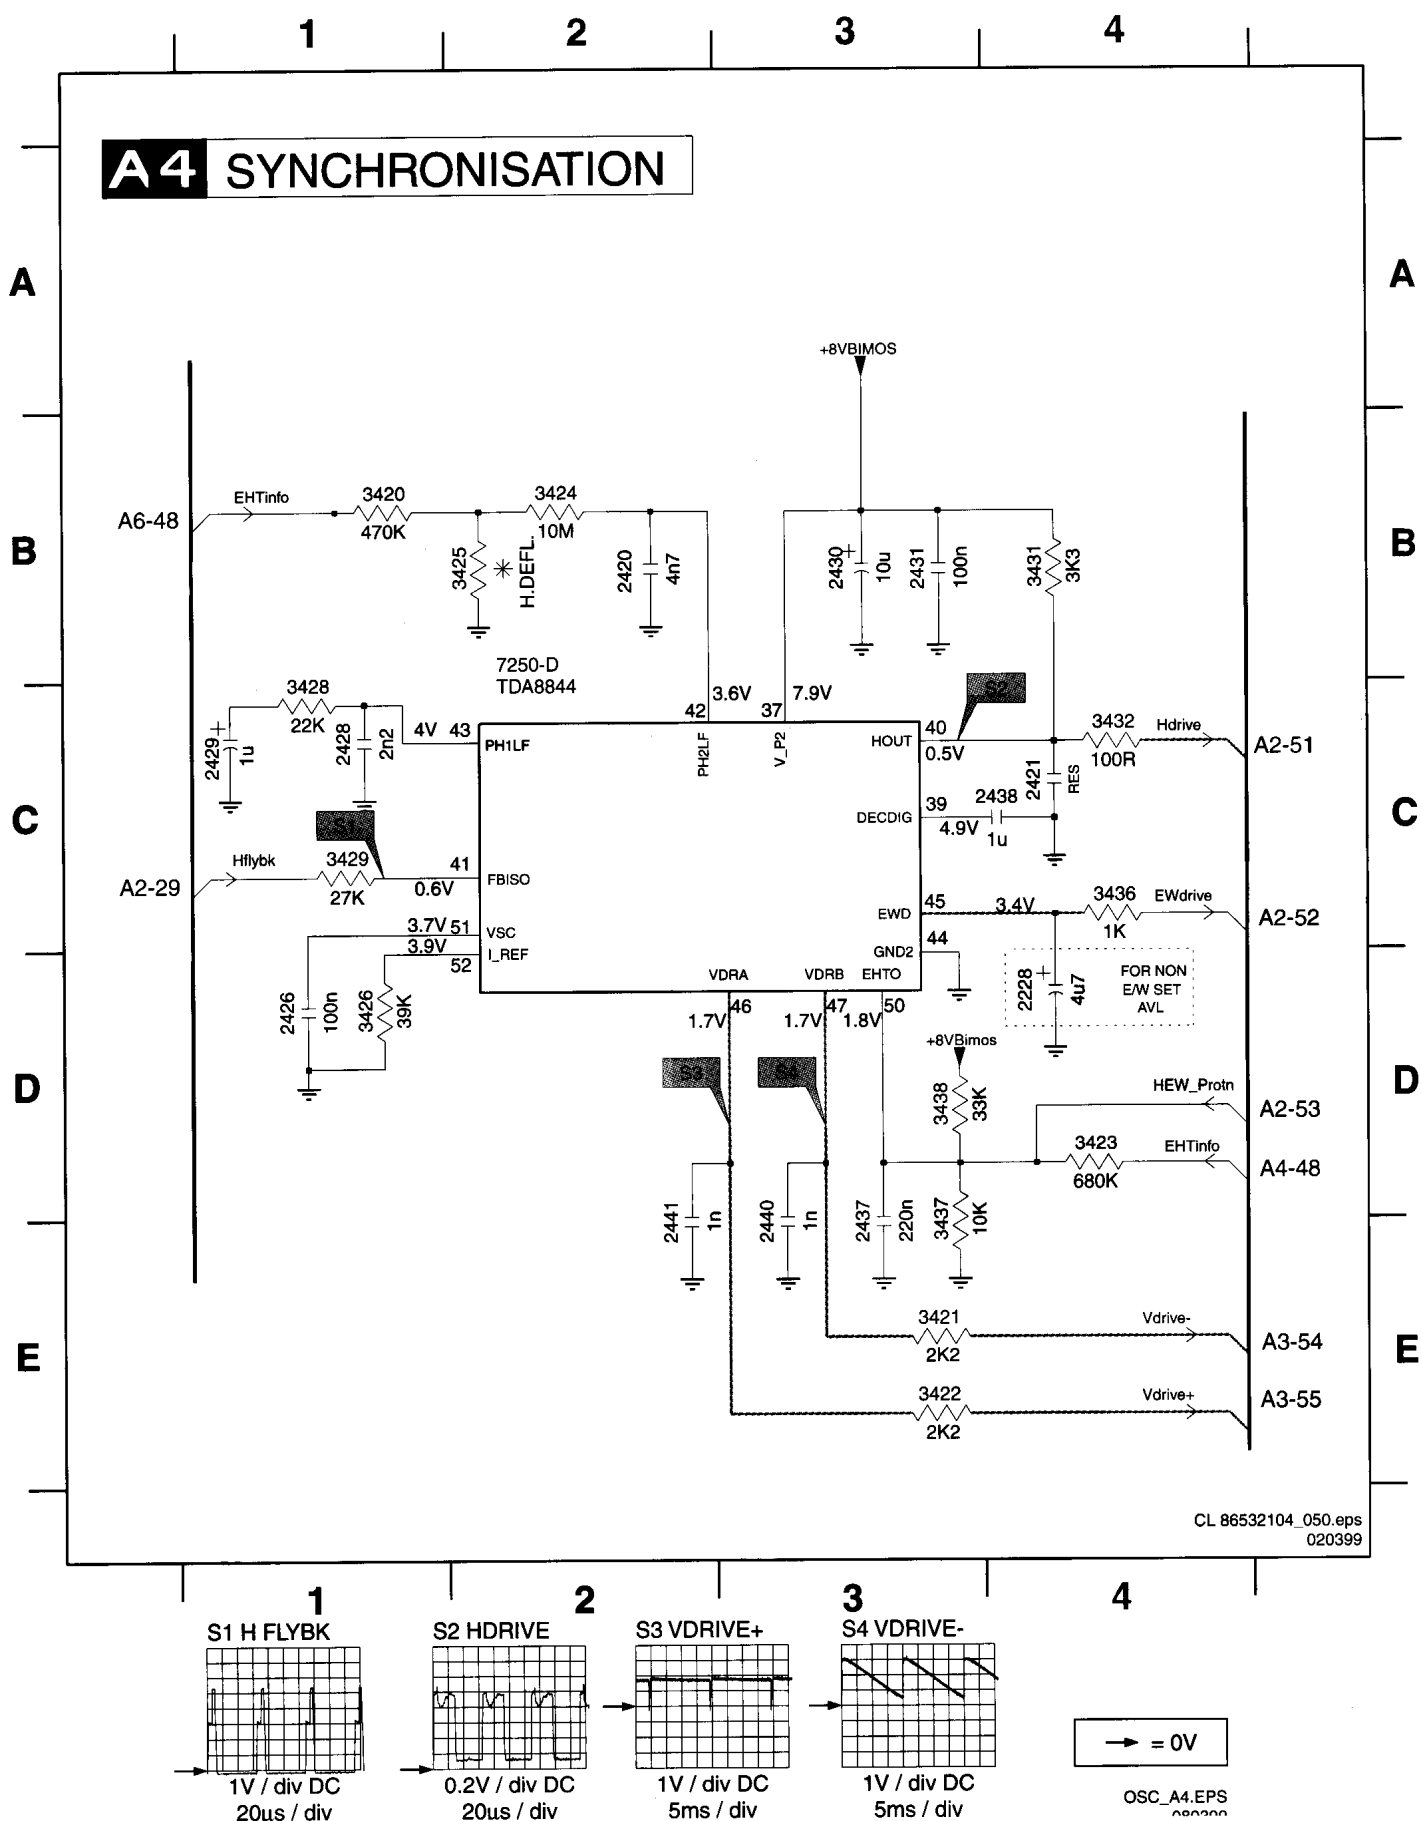


IC 7250-4A
TDA 8845

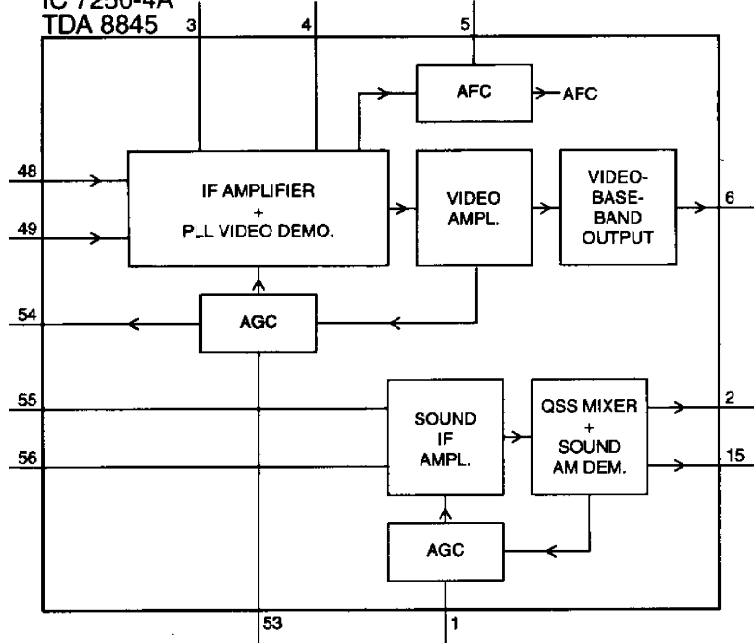


OR

IC 7250-4A
TDA 8844

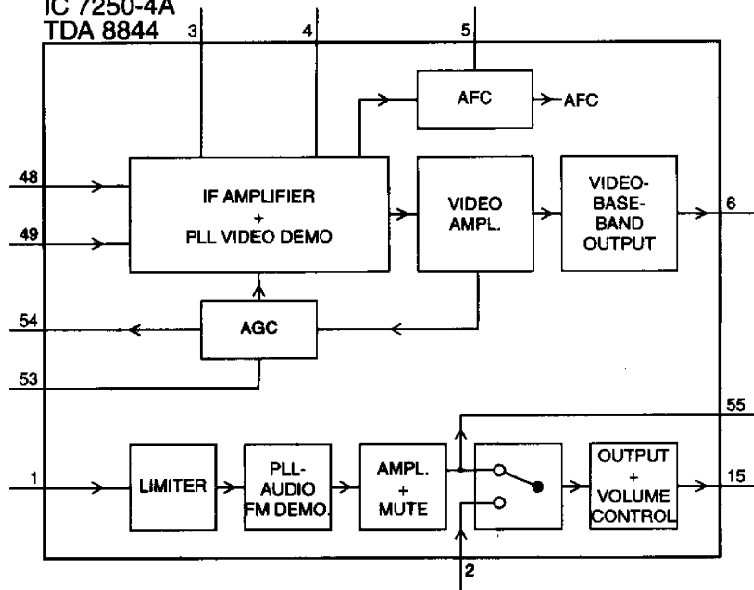


7250-4B
TDA 8844/45

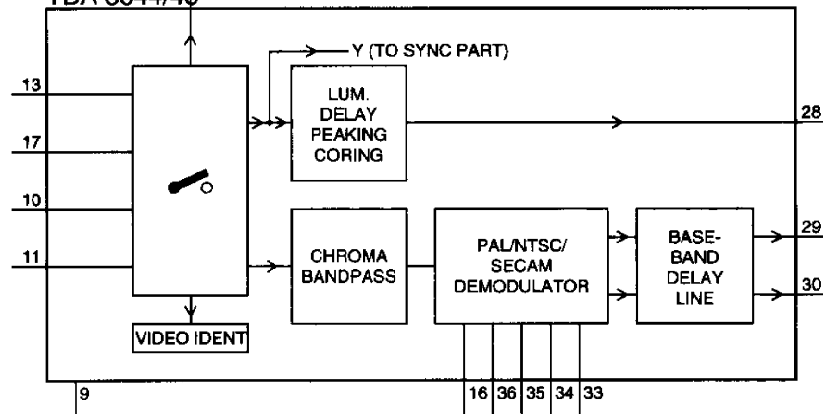


INPUT SELECT
Y + CHROMA
PROCESSING

7250-4C
TDA 8844/45

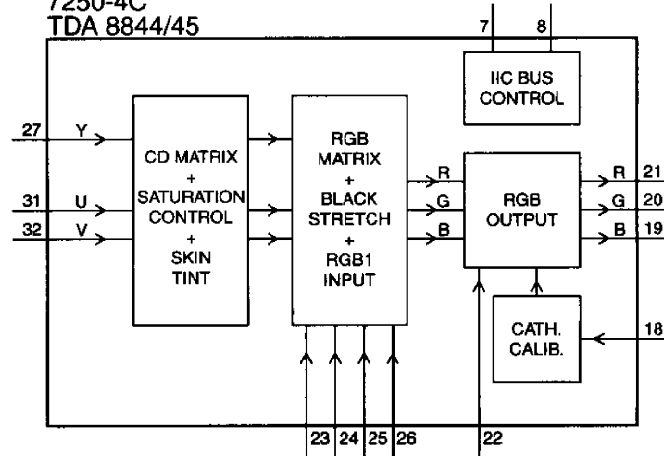

RGB
OUTPUT

7250-4D
TDA 8844/45

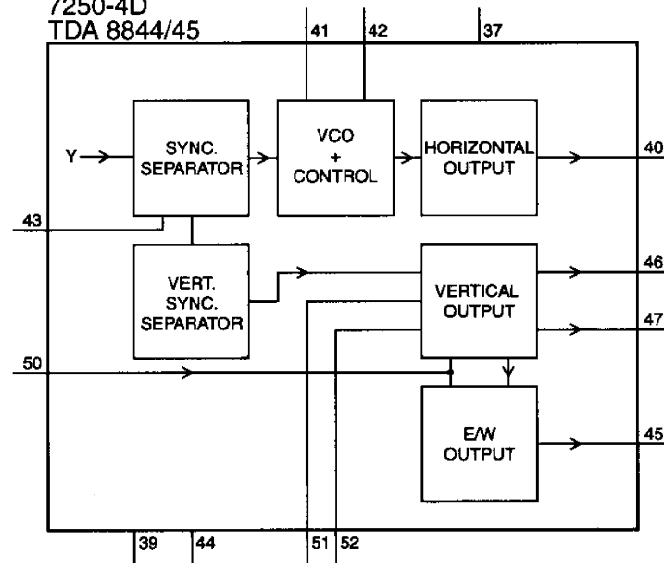

SYNC