 



Service
Service
Service

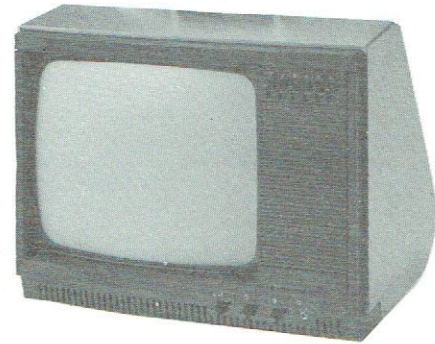

23 672A12

Service Manual

 Chassis TX-F

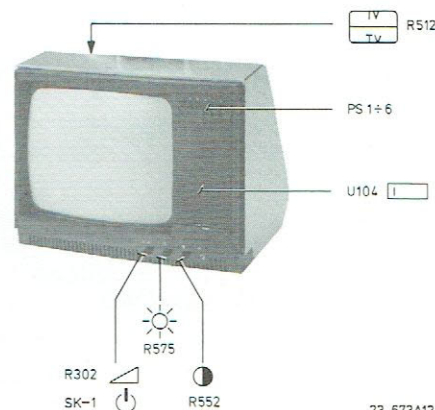

→ 220 V/32 W



→ 12 V/1,5 A



→ 75 Ω coax.



→ 3": 16 Ω /1 W
4822 240 30122



→ 4822 242 50015



→ 25x



→ 31x



→ 3x



→ 12VCUP4



→ 6,5 kg



→ 382 mm



→ 289 mm

 


→ 300 mm



VHF
E2-E4 : 47 - 60 MHz
E5-E12 : 174 - 223 MHz
UHF
E21-E69 : 470 - 862 MHz




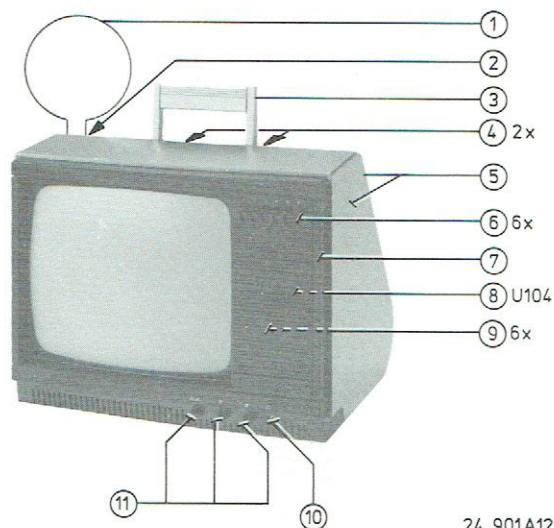

24 901A12

1	Antenne	4822 303 50001
2	Support d'antenne	4822 267 30232
3	Poignée	4822 498 10117
4	Broche de poignée (2x)	4822 535 91072
5	Ens. boîtier	4822 430 10107
6	Bouton de U104 (6x)	4822 413 30939
7	Couvercle de U104	4822 432 90952
8	U104	4822 218 20189
9	Commutateur de bande(6x)	4822 263 60039
10	Douille d'écouteur	4822 266 30071
11	Bouton (3x)	4822 413 30896

 Les normes de sécurité exigent que l'appareil soit remis à l'état d'origine et que soient utilisées les pièces de rechange identiques à celles spécifiées.

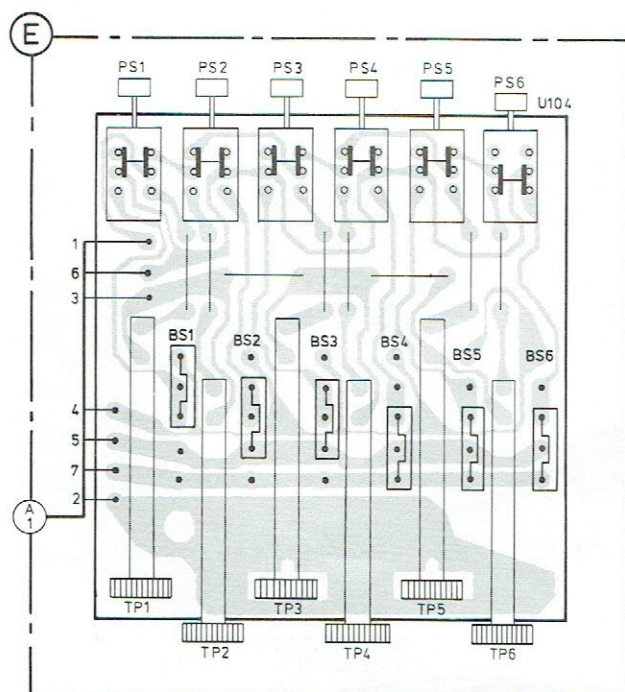

23 739B12