


-14-

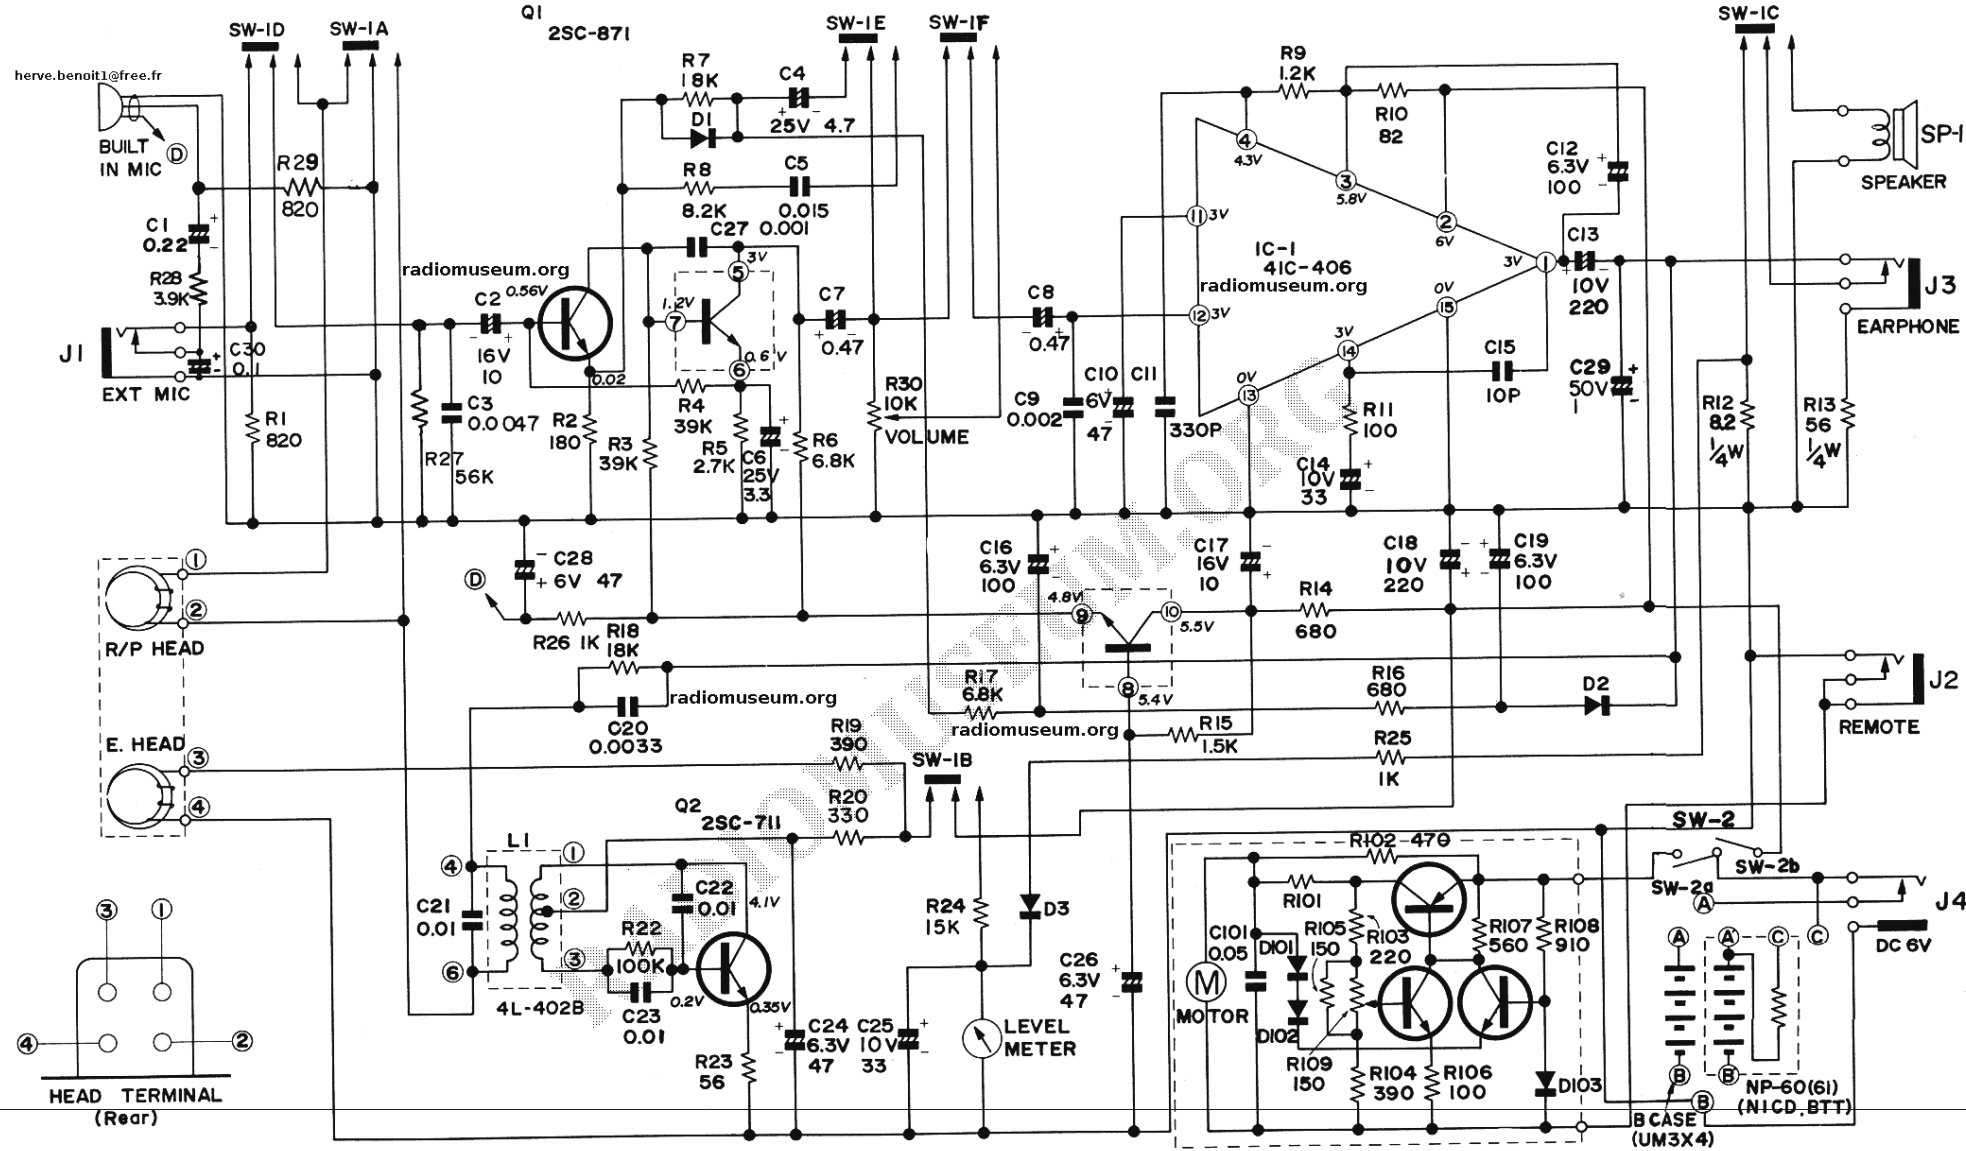


SW-1(A F) : RECORD PLAYBACK SWITCH. SHOWN IN RECORD POSITION.

SW-2 : MAIN SWITCH. SHOWN IN STOP POSITION.

SW-2a : TURNS OFF IN STOP MODE ONLY OR TURNS ON IN OTHER MODE.

SW-2b : TURNS ON IN PLAY AND RECORD, OR TURNS OFF IN OTHER MODE.

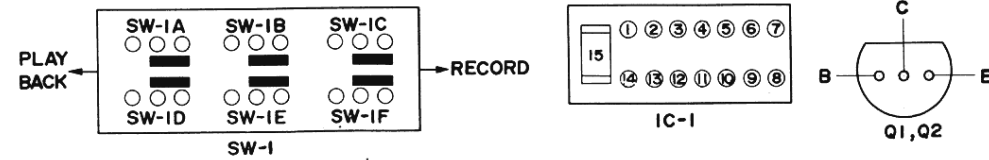

SCHMATIC DIAGRAM

A2905 - 1.5 MH
Printed in Japan