


Service
Service
Service

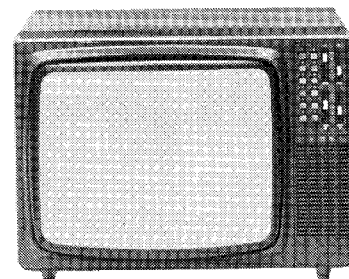


10370A2


00Z/12Z/16Z/18Z/20Z/23Z
30Z/33Z/38Z/95Z/96Z

Service Manual

CHASSIS KT2

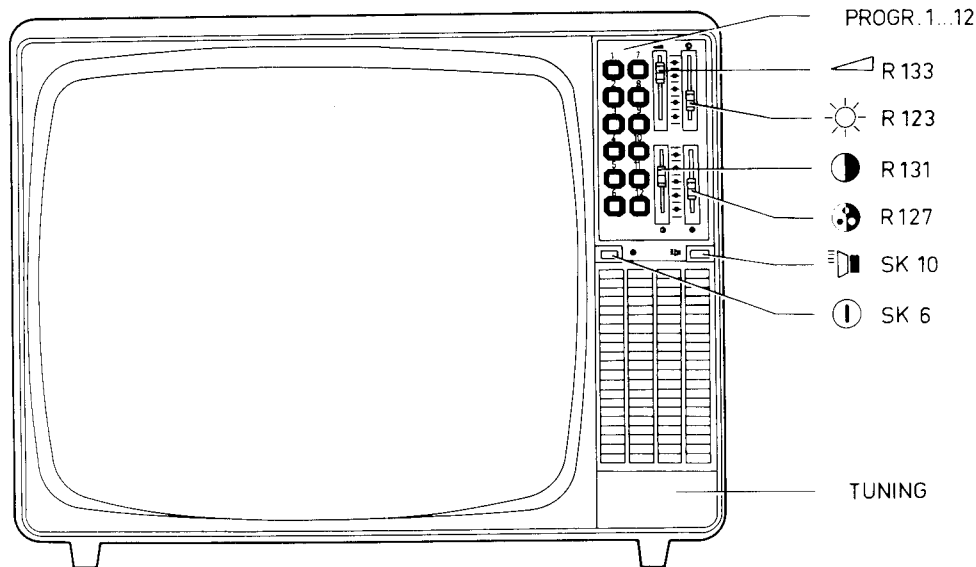

10348B13

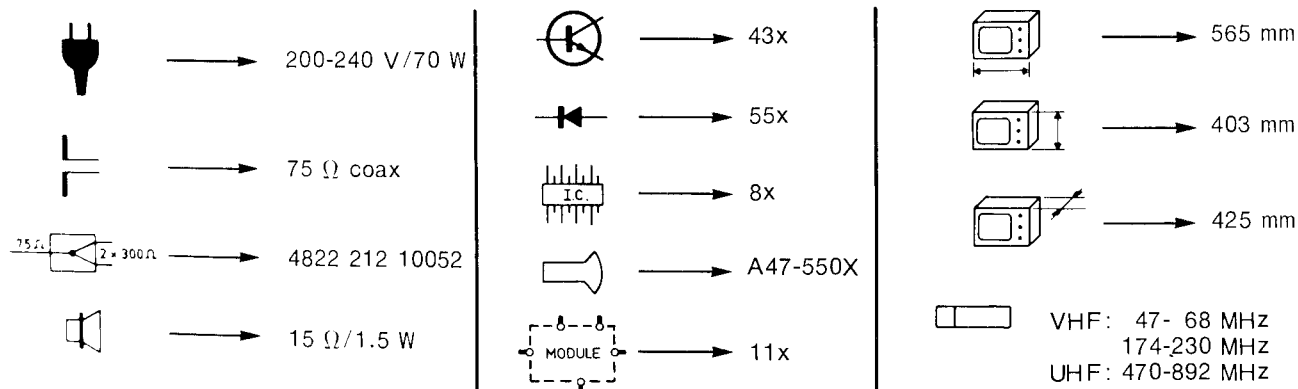

Documentation Technique Service Dokumentation Documentazione di Servizio Huolto-Ohje Manual de Servicio Manual de Servicio



(GB) (NL) (F) (D)


Subject to modification

4822 727 13053


Printed in The Netherlands

PHILIPS




DIAGRAM - SCHALTBILD A

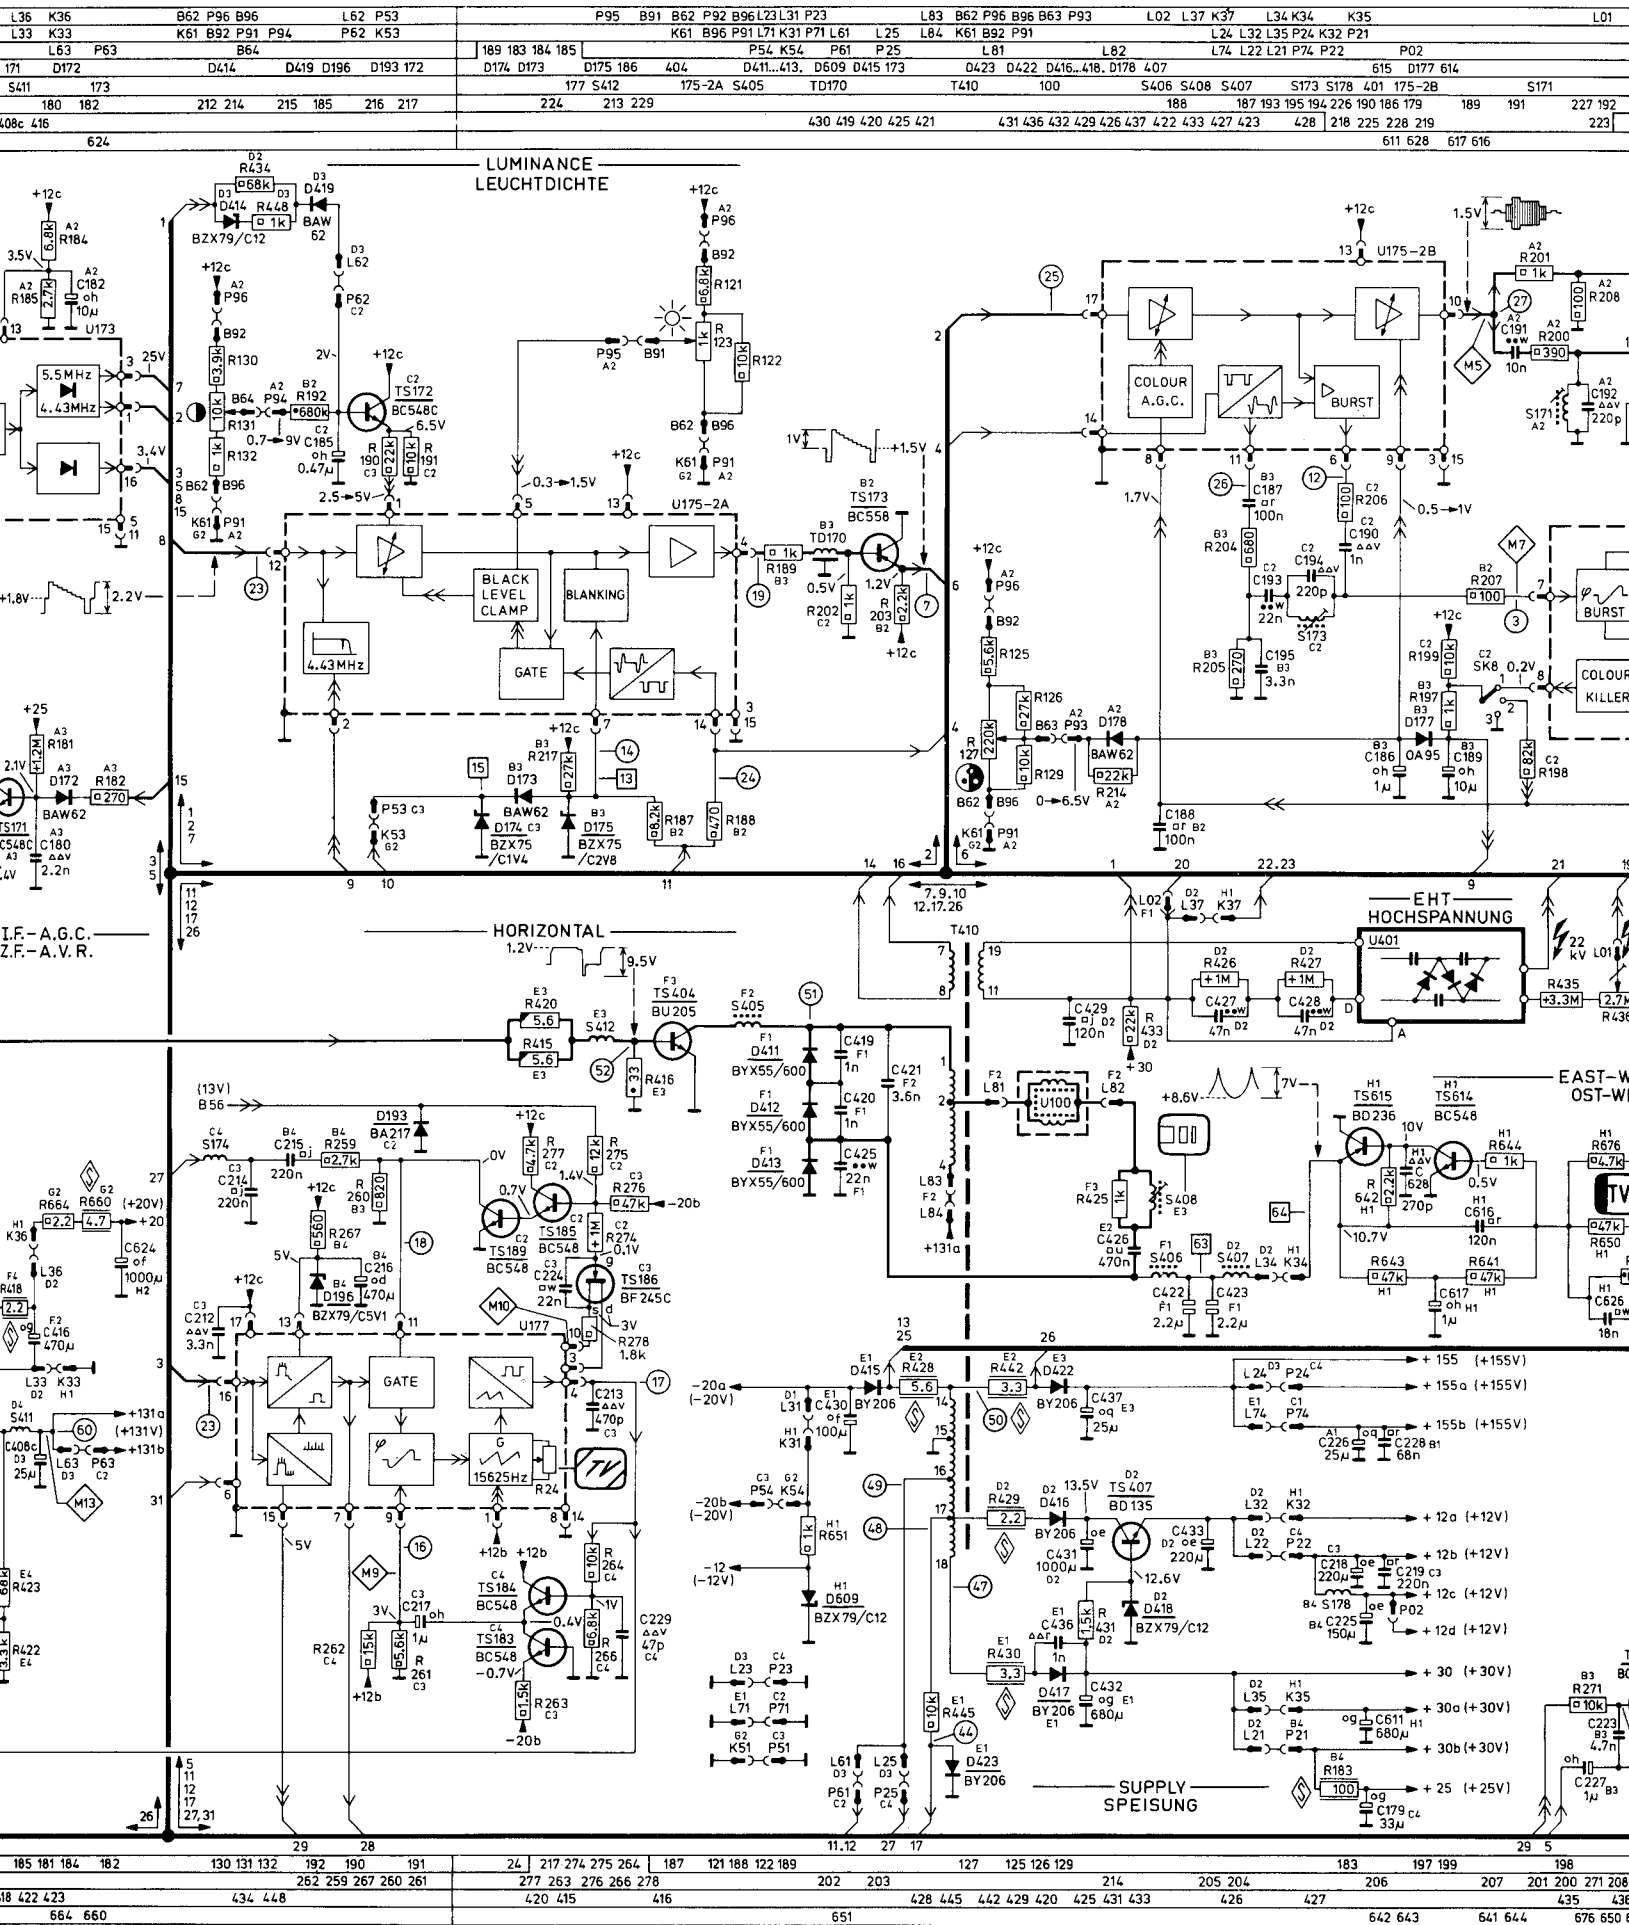

GRAM-SCHALTBILD A


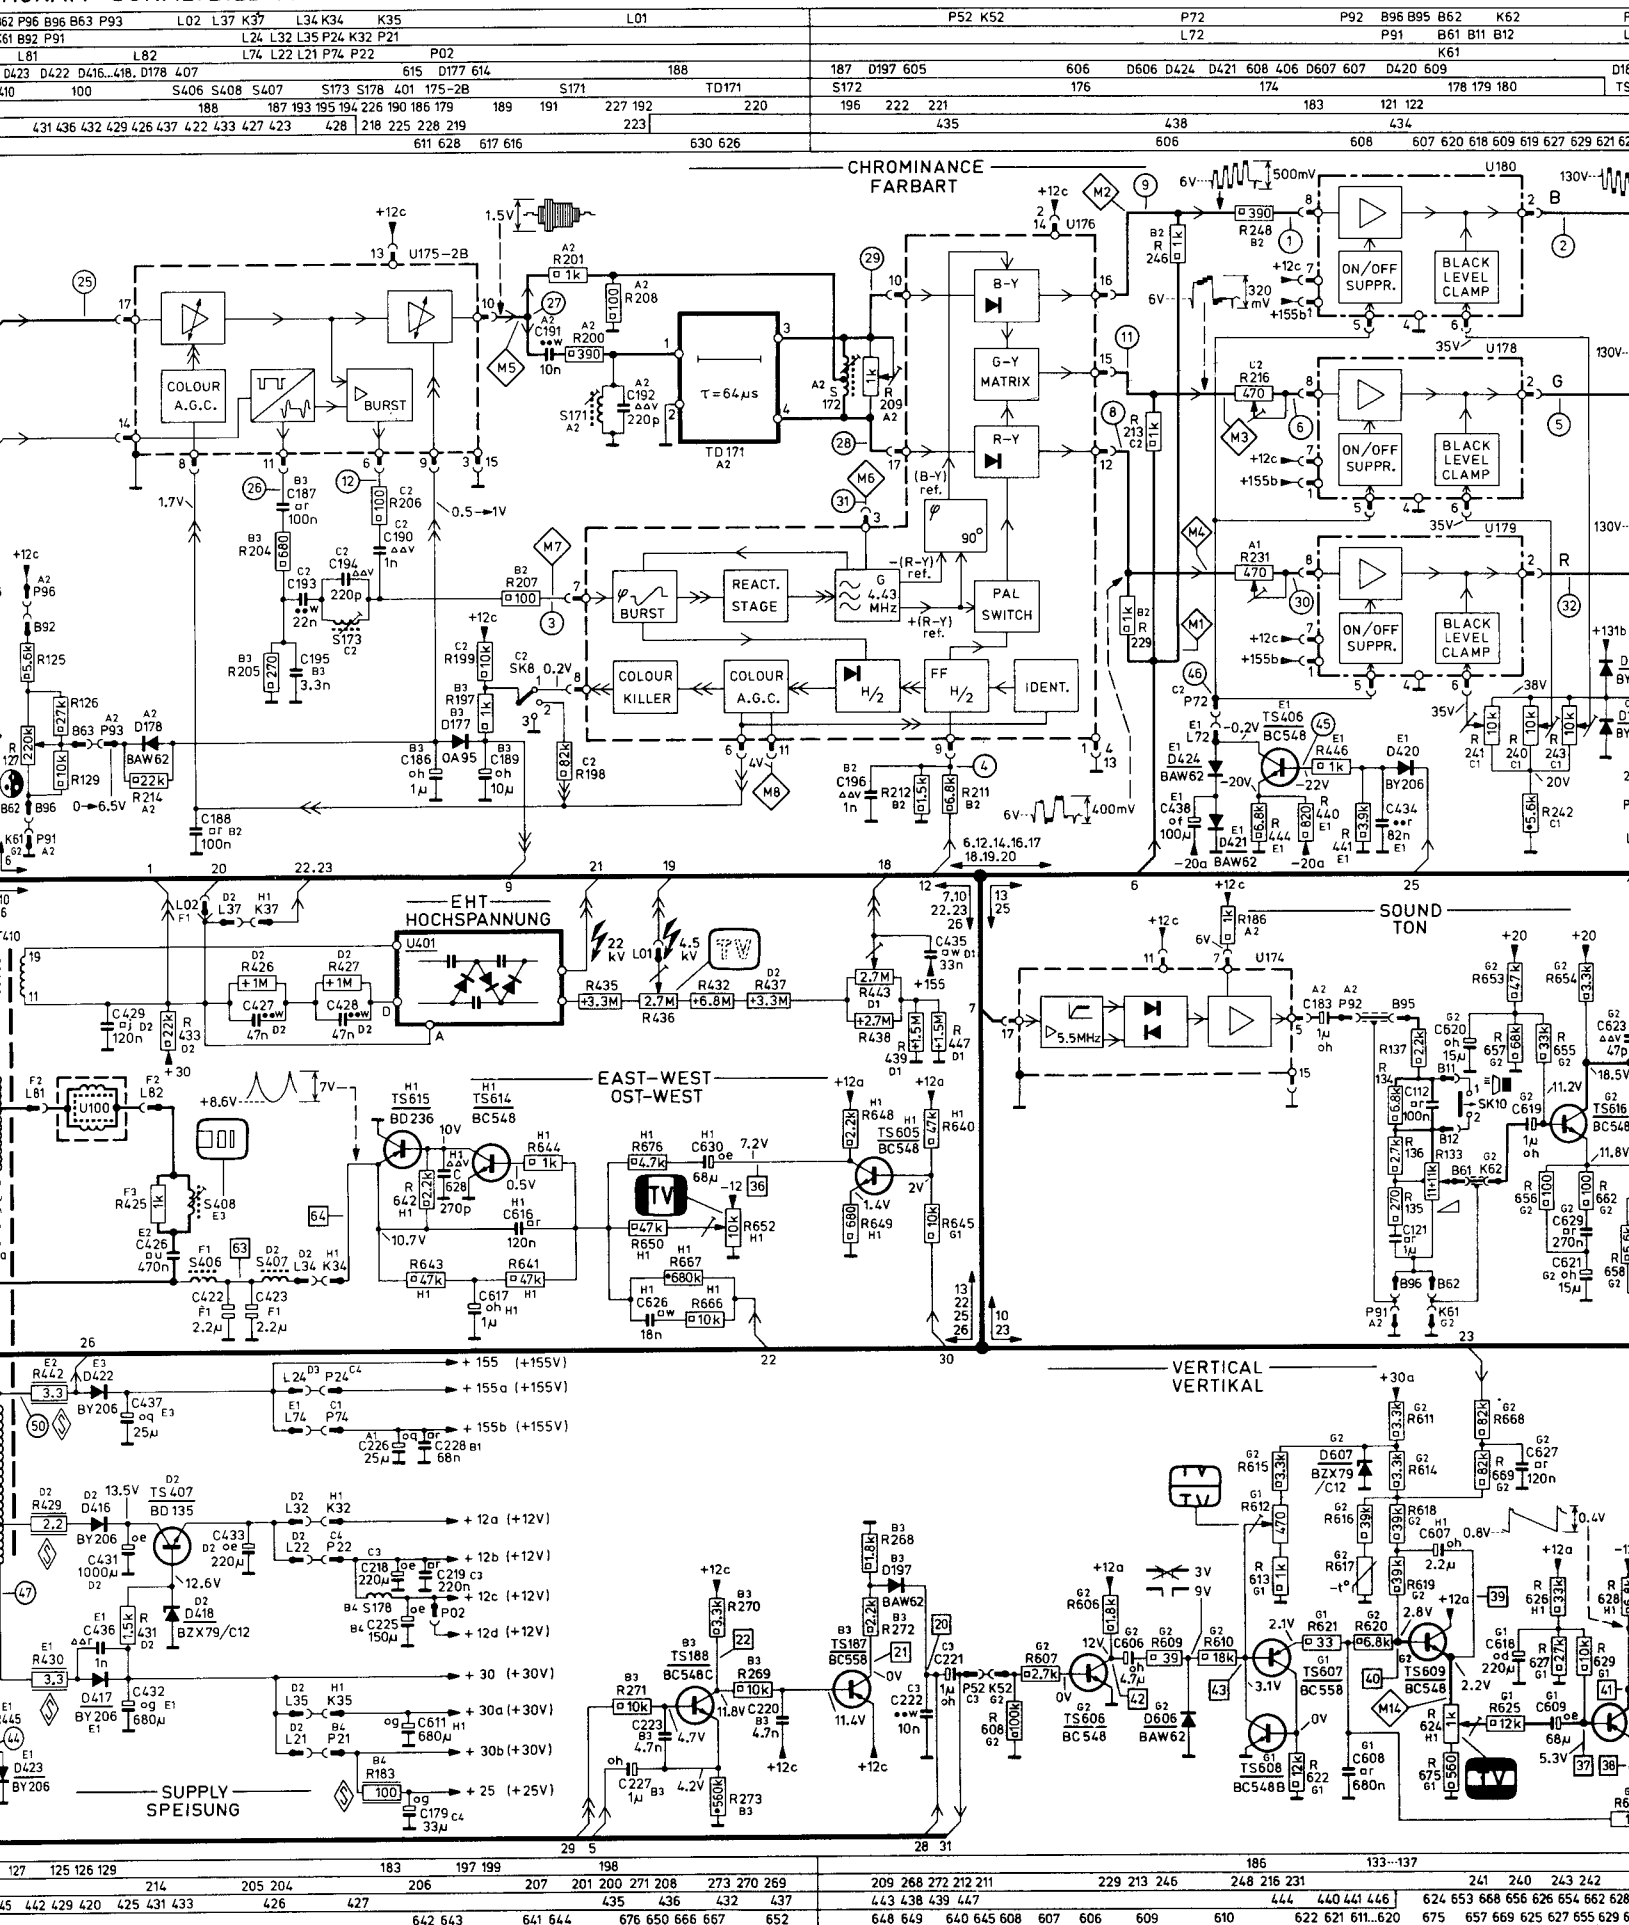


L01	P52 K52				P72	P92	B96 B95 B62	K62	P73	P83 S81 S03 S02 S42 K41 K11	S41 S01	
					L72	P91	B61 B11 B12		L73	S83 P82 L52 L51 L42 K42	L41 A22 A02	←
							K51			P81 S82	K12	A21 A01
188	TD171	187 D197 605	606	D606 D424	D421 608 406 D607 607	D420 609			D180 D181	TS616...619, TS610...613,	S142 S141	100 S100
227 192	220	196 222 221	176		174		121 122	178 179 180		141		1-299
223		435	438				434					400-499 C
	630 626		606		608	607 620 618 609 619 627 629 621 623 610 622 615				631 612 625 613 632 614		500-

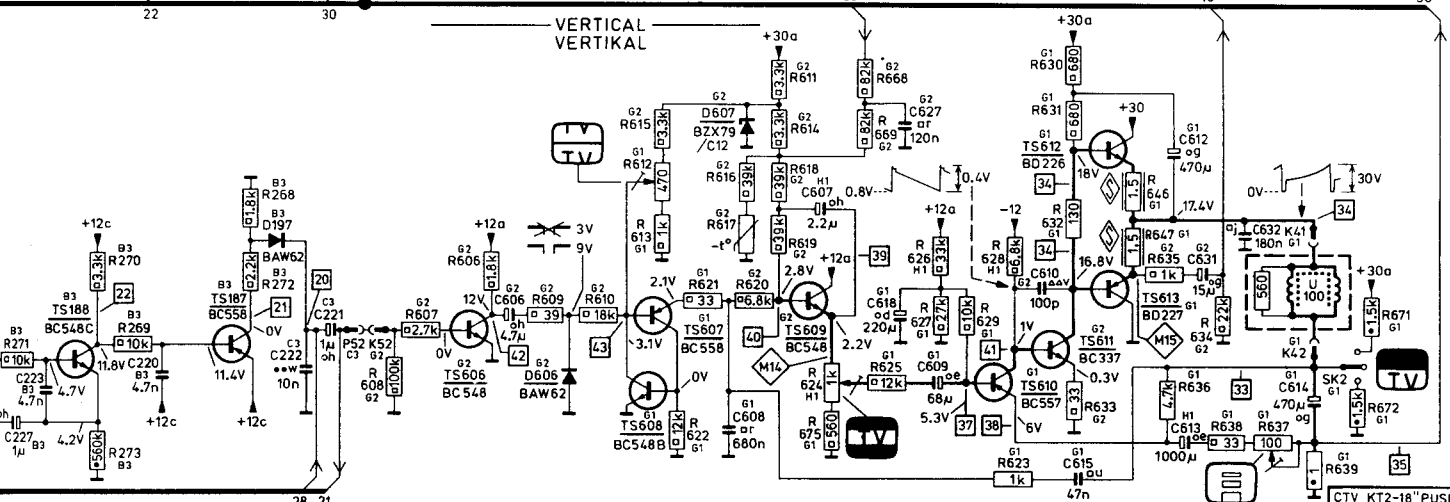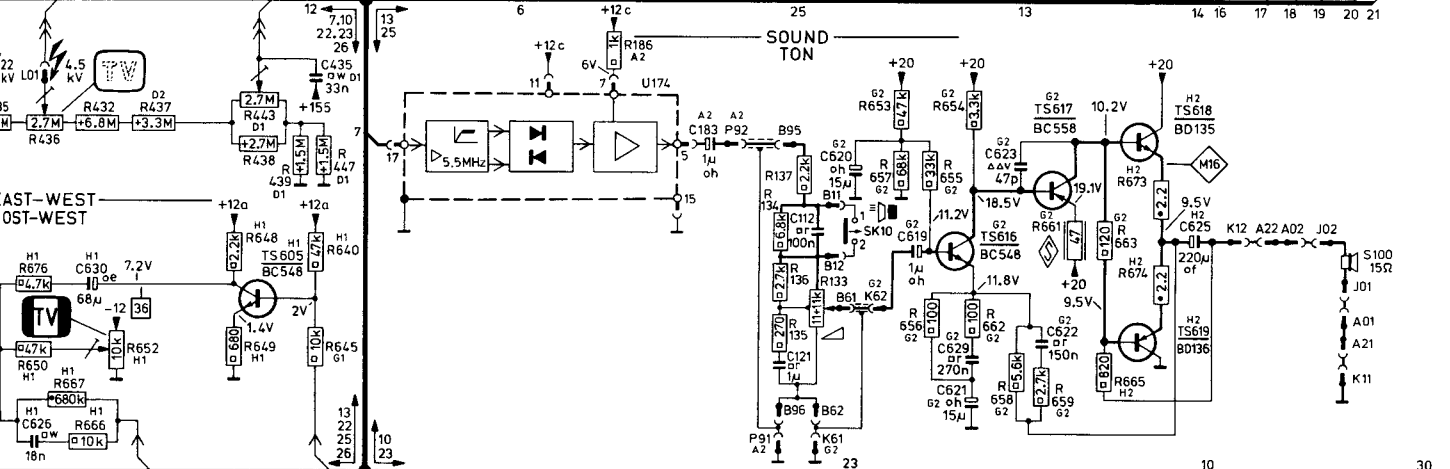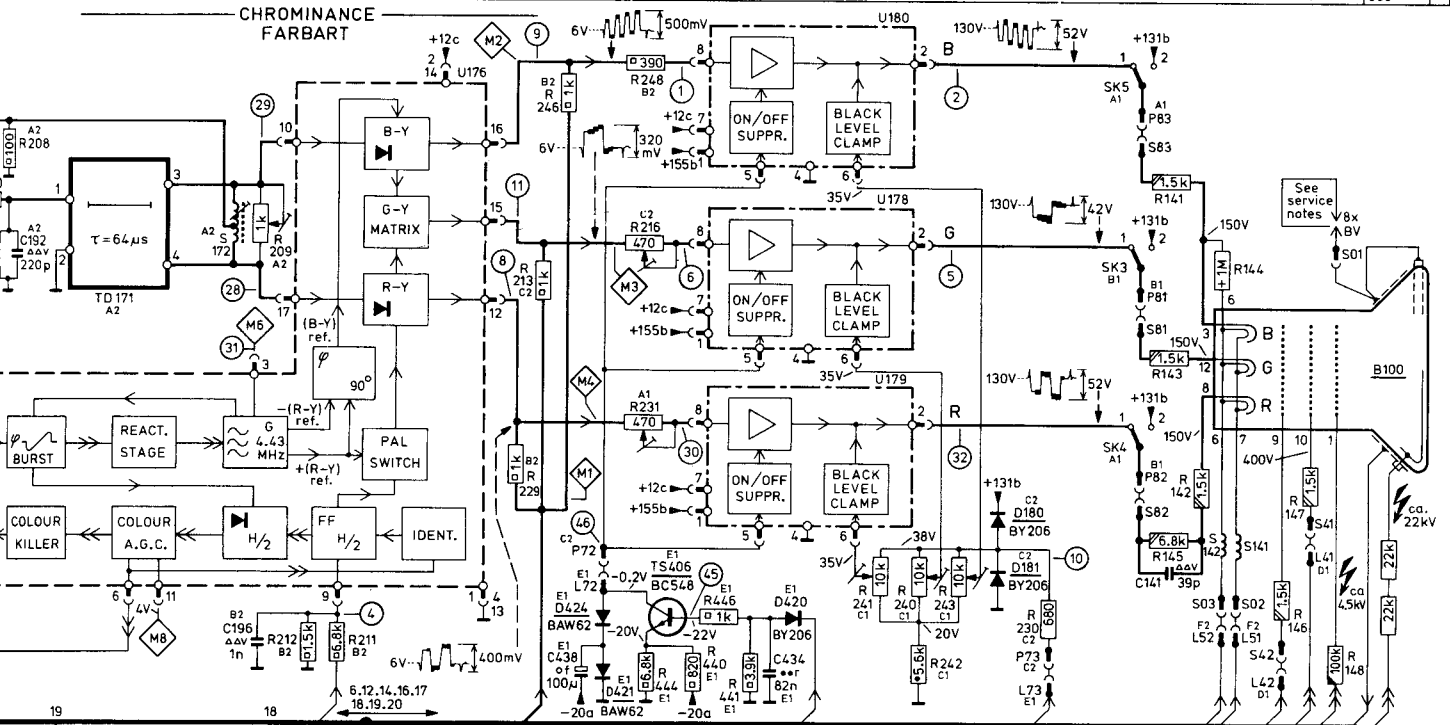

10 271 208	273 270 269	209 268 272 212 211	229 213 246	248 216 231	444	440 441 446	624 653 668 656 626 654 662 628 623 630 661 632 663 673 646 634	675	657 669 625 627 655 629 658 631 659 633 665 674 647 635	636...639	672 671	500-
35	436	432	437	443 438 439 447								200-299
676 650 666 667	652	648 649	640 645 608	607	606	609	610	622 621 611...620				400-499
												500-

DIAGRAM-SCHALTBILD B

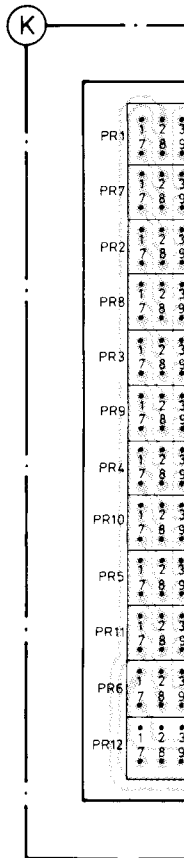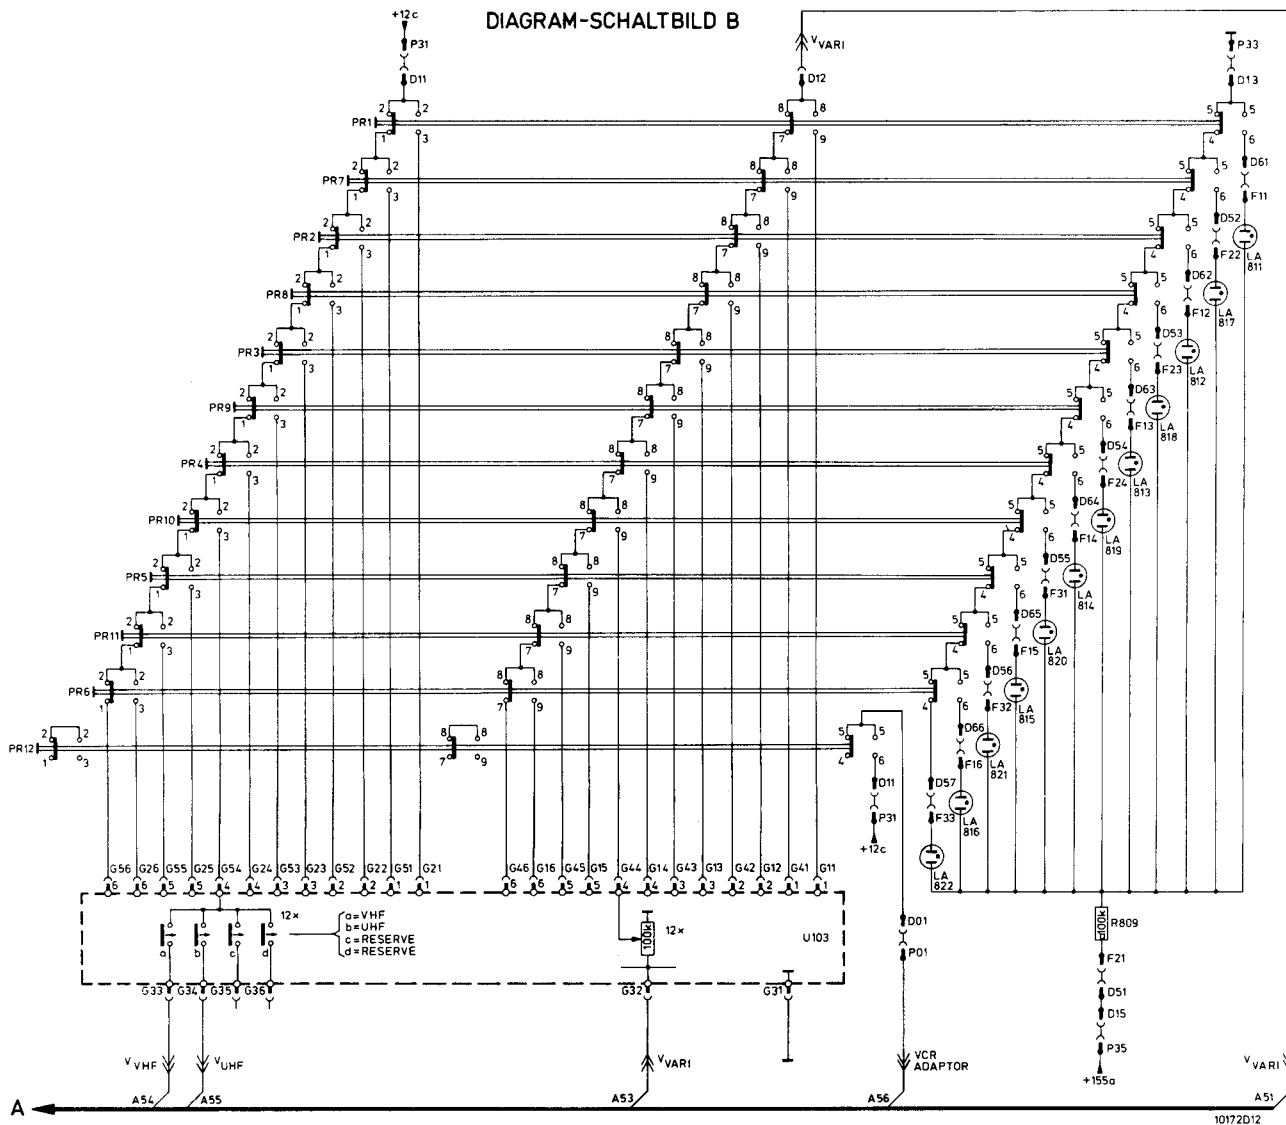

Deleted - Afge

S100
U100
U102
U103
R123
R127
R131
R133
R433
LA811 - 818