 
 


Service
Service
Service

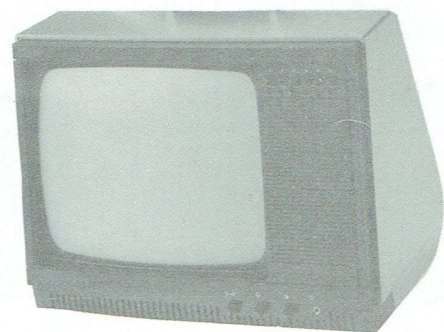

23 672A12

Service Manual

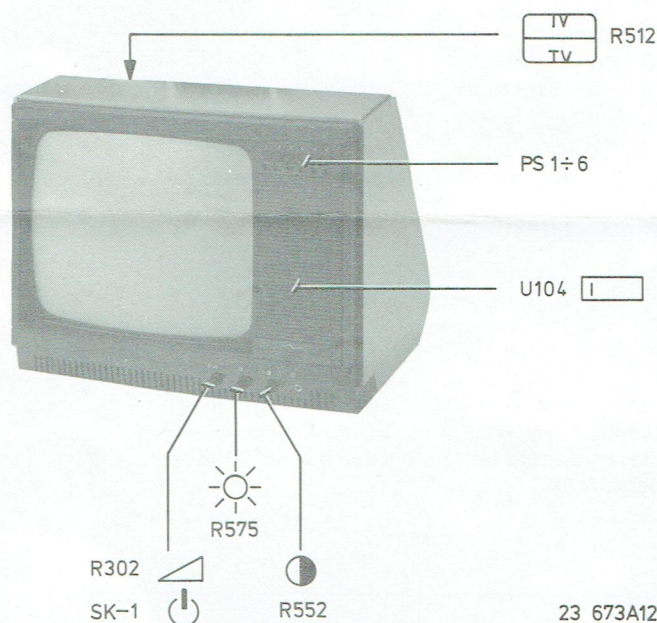

Chassis TX-F

23 673A12



→ 220V/29 W



→ 12 V/1.25A



→ 75 Ω - coax.



→ 3": 16 Ω/1 W
→ 4822 240 30122



→ 4822 242 50015



→ 25x



→ 31x



→ 3x



→ 12VCUP4



→ 6.5 kg



→ 382 mm



 
→ 290 mm



→ 300 mm




VHF : A ... C
1 ... 6
UHF : 21 ... 69

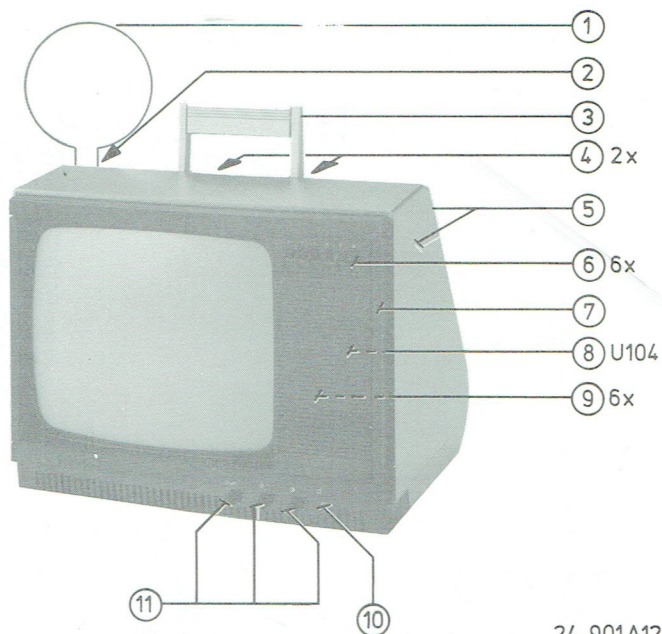

24 901A12

1	Antenne	4822 303 50001
2	Support d'antenne	4822 267 30232
3/18S	Poignée	4822 498 10117
3/19X	Poignée	4822 498 10136
4	Broche de poignée (2x)	4822 535 91072
5/18S	Ens. boîtier	4822 430 10107
5/19X	Ens. boîtier	4822 430 10113
6	Bouton de U104 (6x)	4822 413 30939
7	Couvercle de U104	4822 432 90952
8	U104	4822 276 80234
9	Commutateur de bande (6x)	4822 263 60039
10	Douille d'écouteur	4822 276 10106
11	Bouton (3x)	4822 413 30896

 Les normes de sécurité exigent que l'appareil soit remis à l'état d'origine et que soient utilisées les pièces de rechange identiques à celles spécifiées.

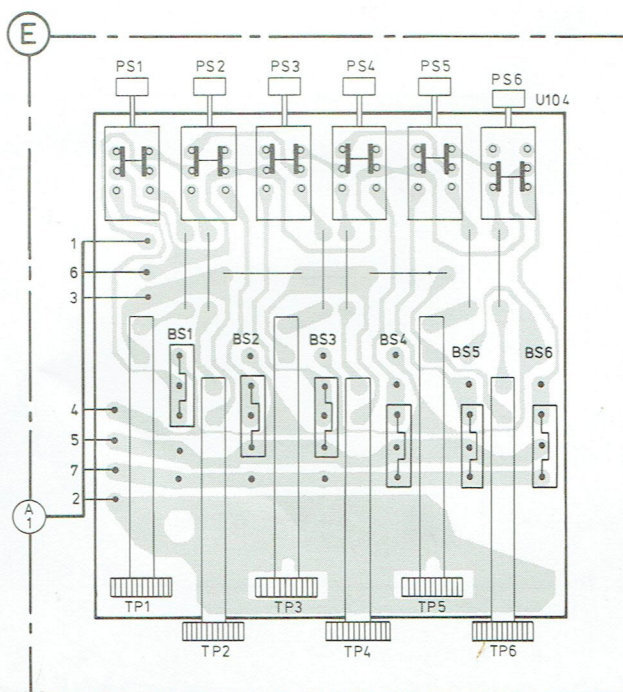

23 739B12