

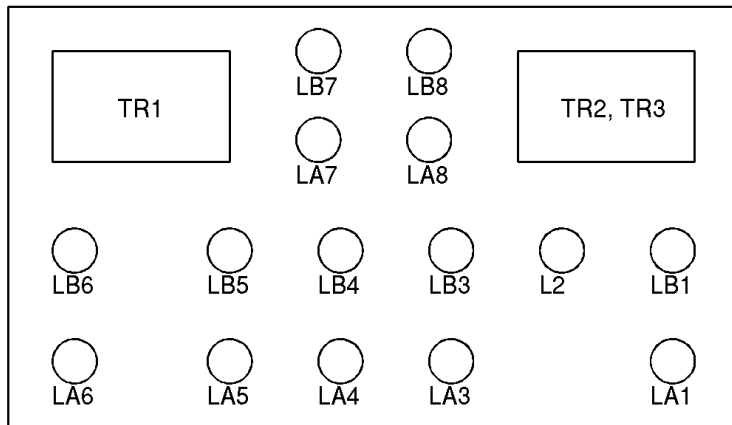


N.B. Primary voltage selector is not drawn
(110, 130, 145, 190, 220, 245V)

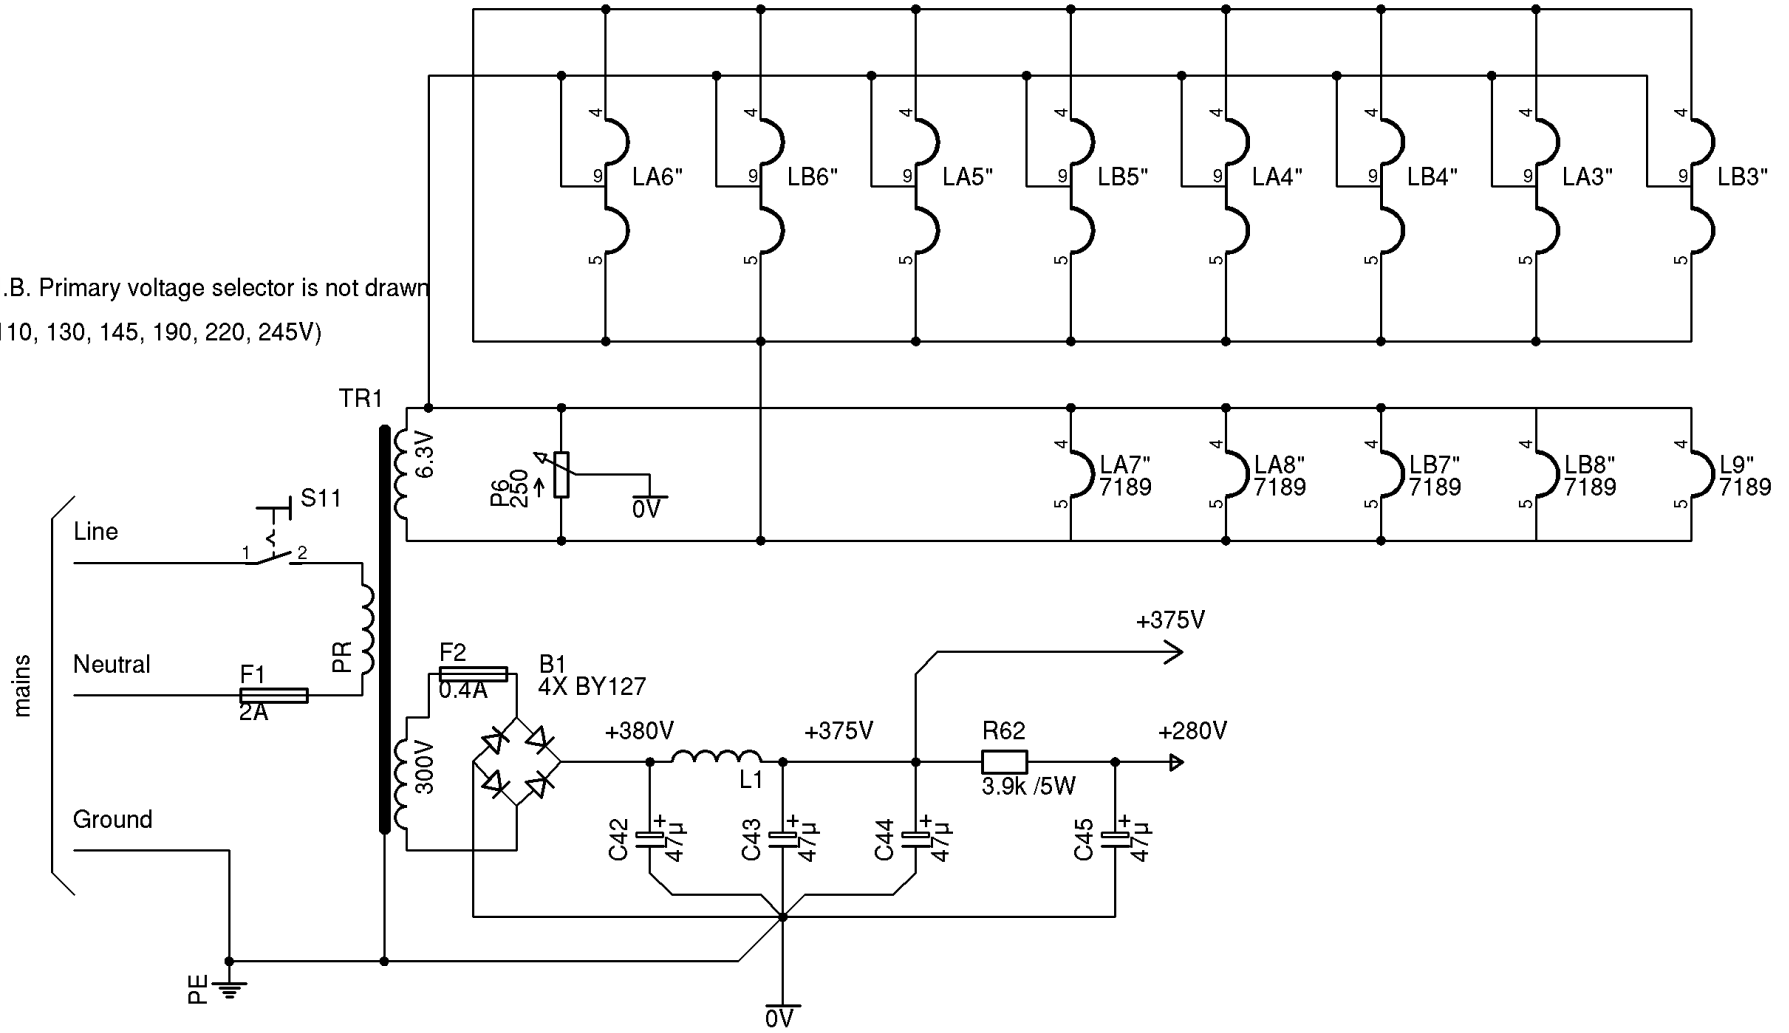

Tube position (component side)


L9 is the expander indicator
(near expander potmeter)

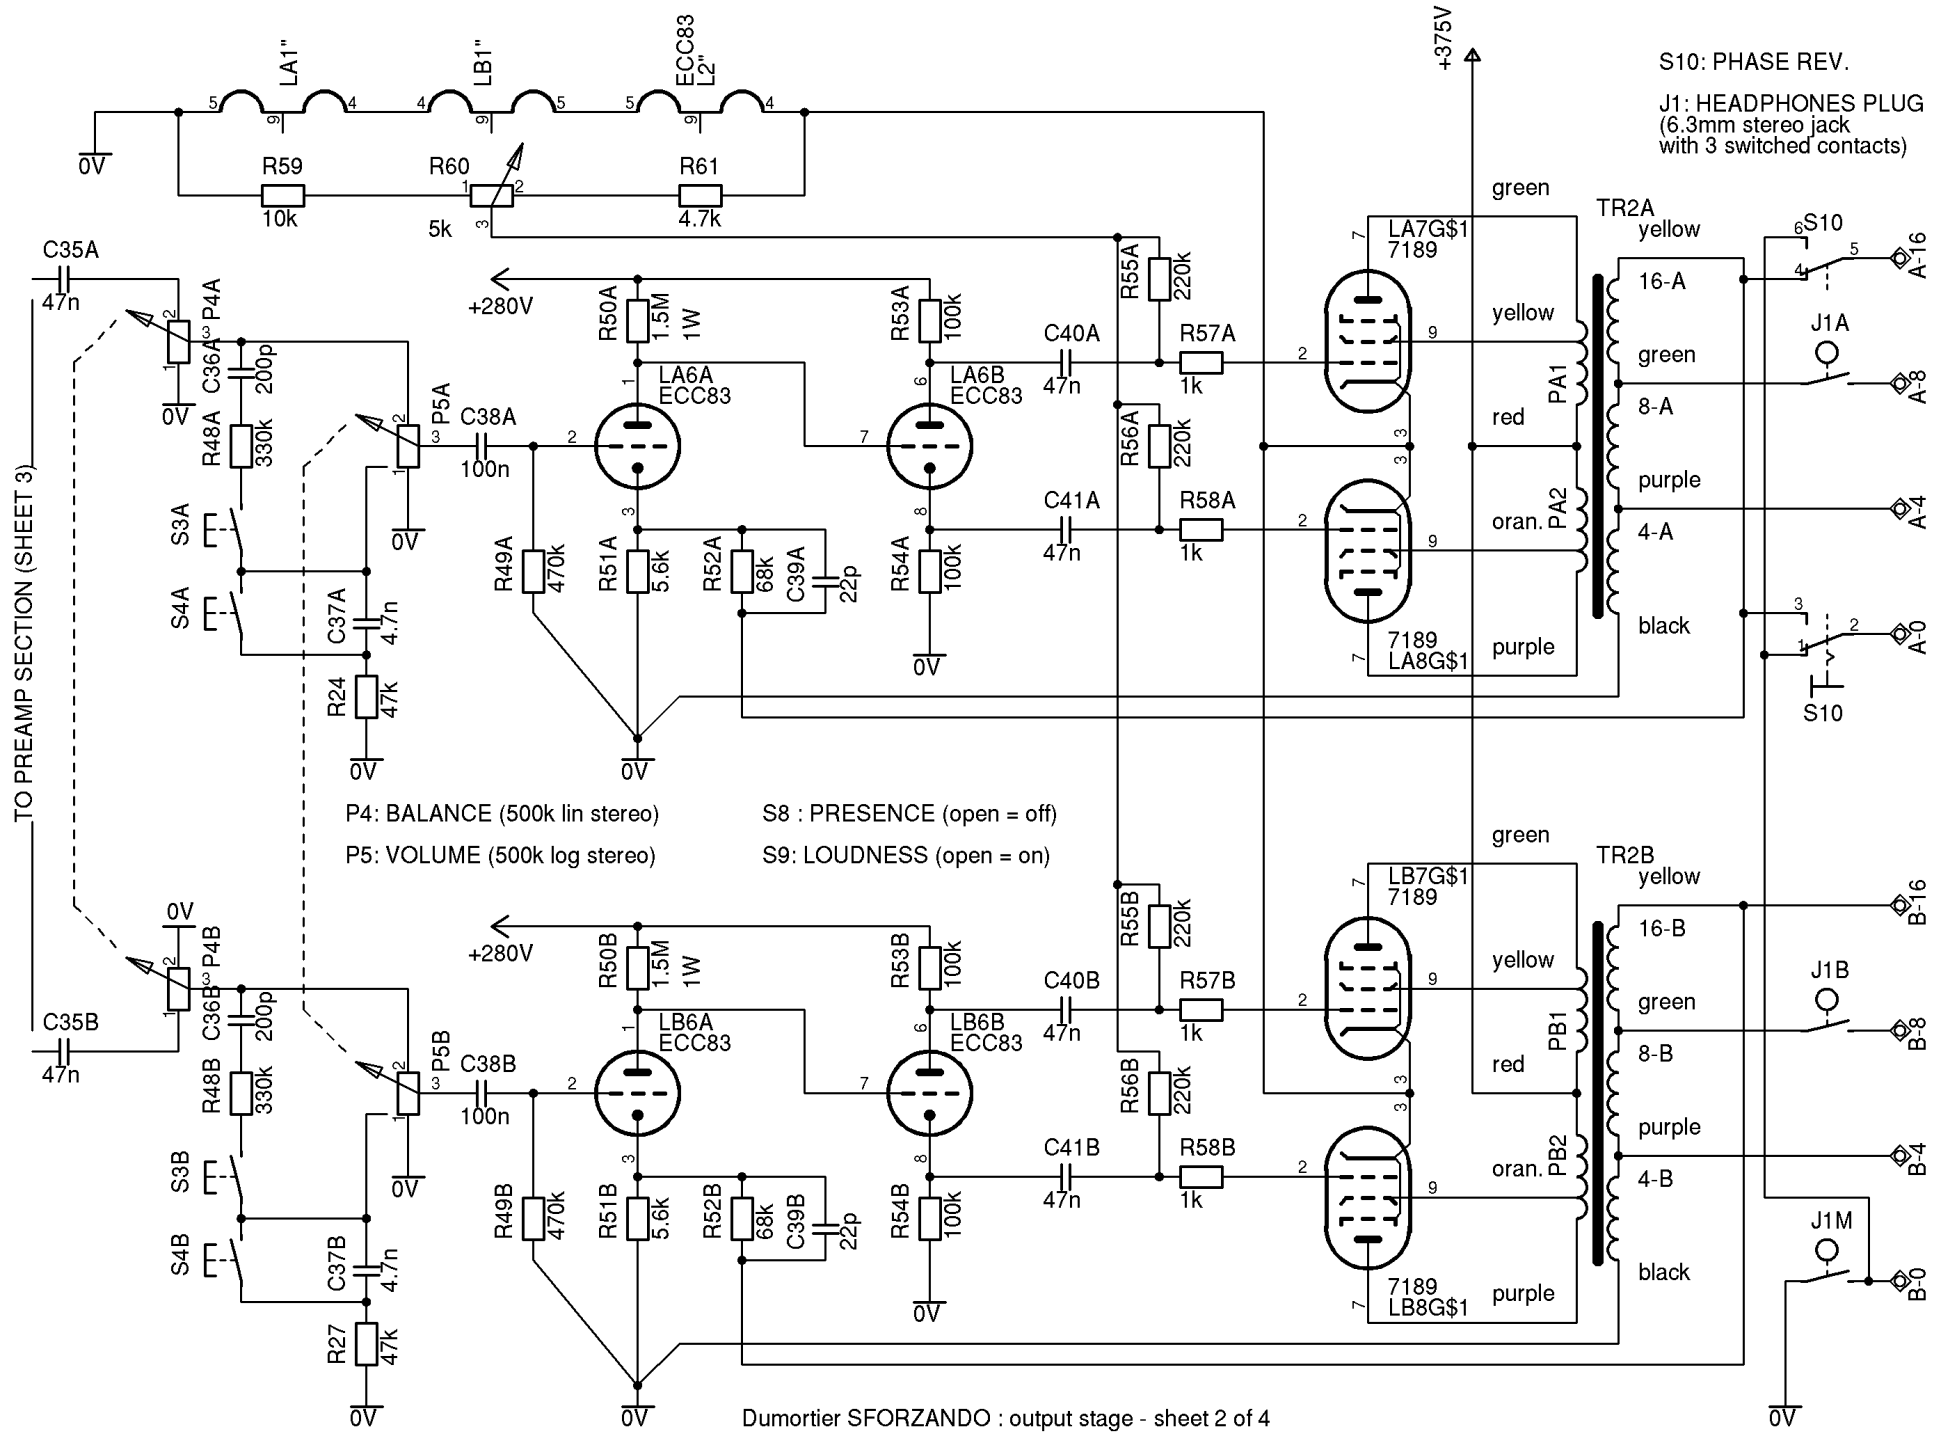

S10: PHASE REV.
 J1: HEADPHONES PLUG
 (6.3mm stereo jack
 with 3 switched contacts)

P4: BALANCE (500k lin stereo)
 P5: VOLUME (500k log stereo)
 S8 : PRESENCE (open = off)
 S9: LOUDNESS (open = on)


TO MODE / INPUT SELECTOR (SHEET14)

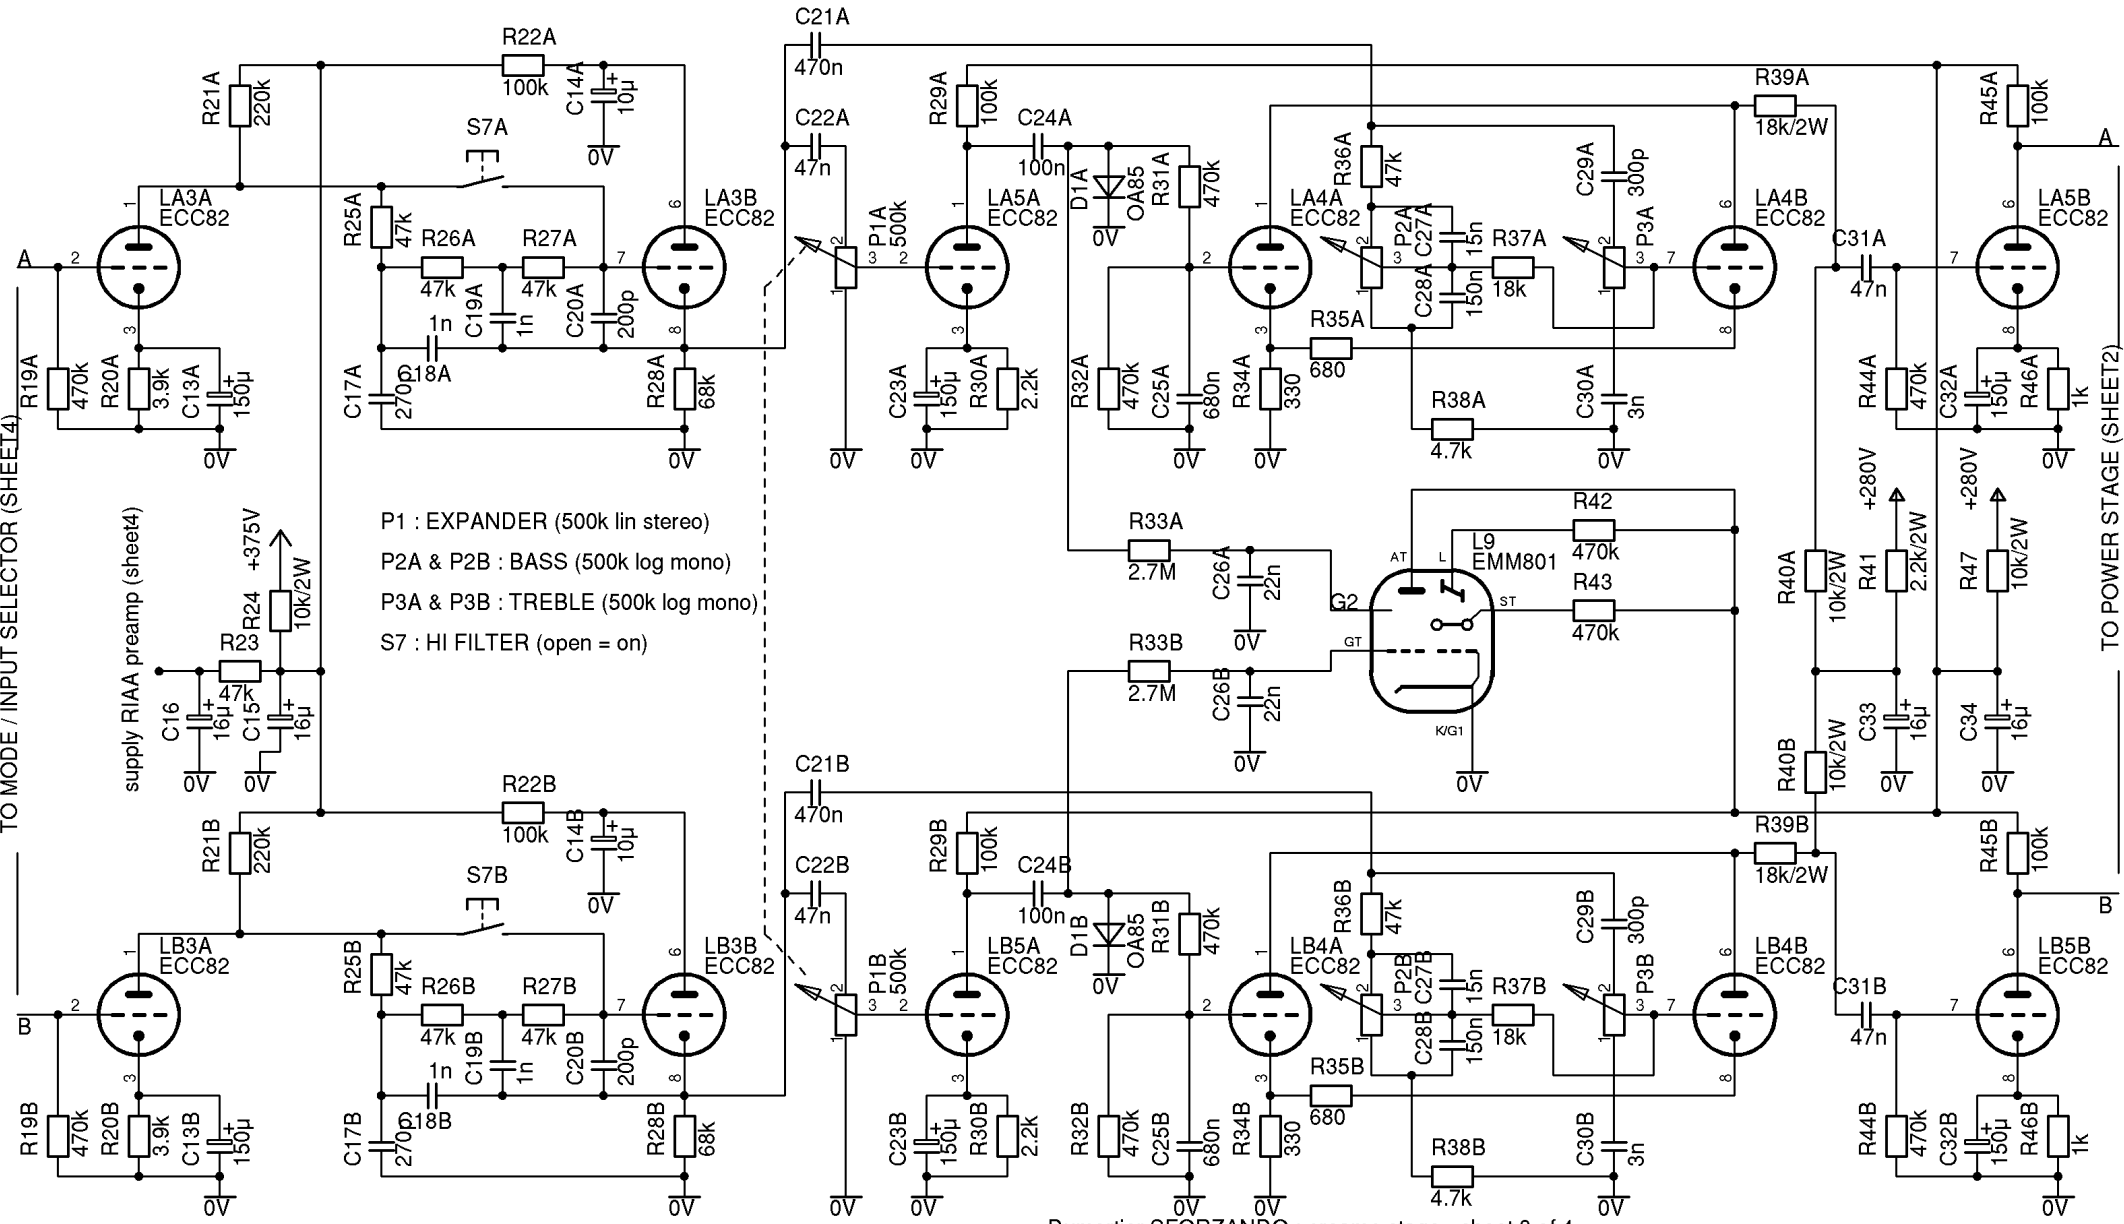

- P1 : EXPANDER (500k lin stereo)
- P2A & P2B : BASS (500k log mono)
- P3A & P3B : TREBLE (500k log mono)
- S7 : HI FILTER (open = on)

supply RIAA preamp (sheet4)

TO POWER STAGE (SHEET2)

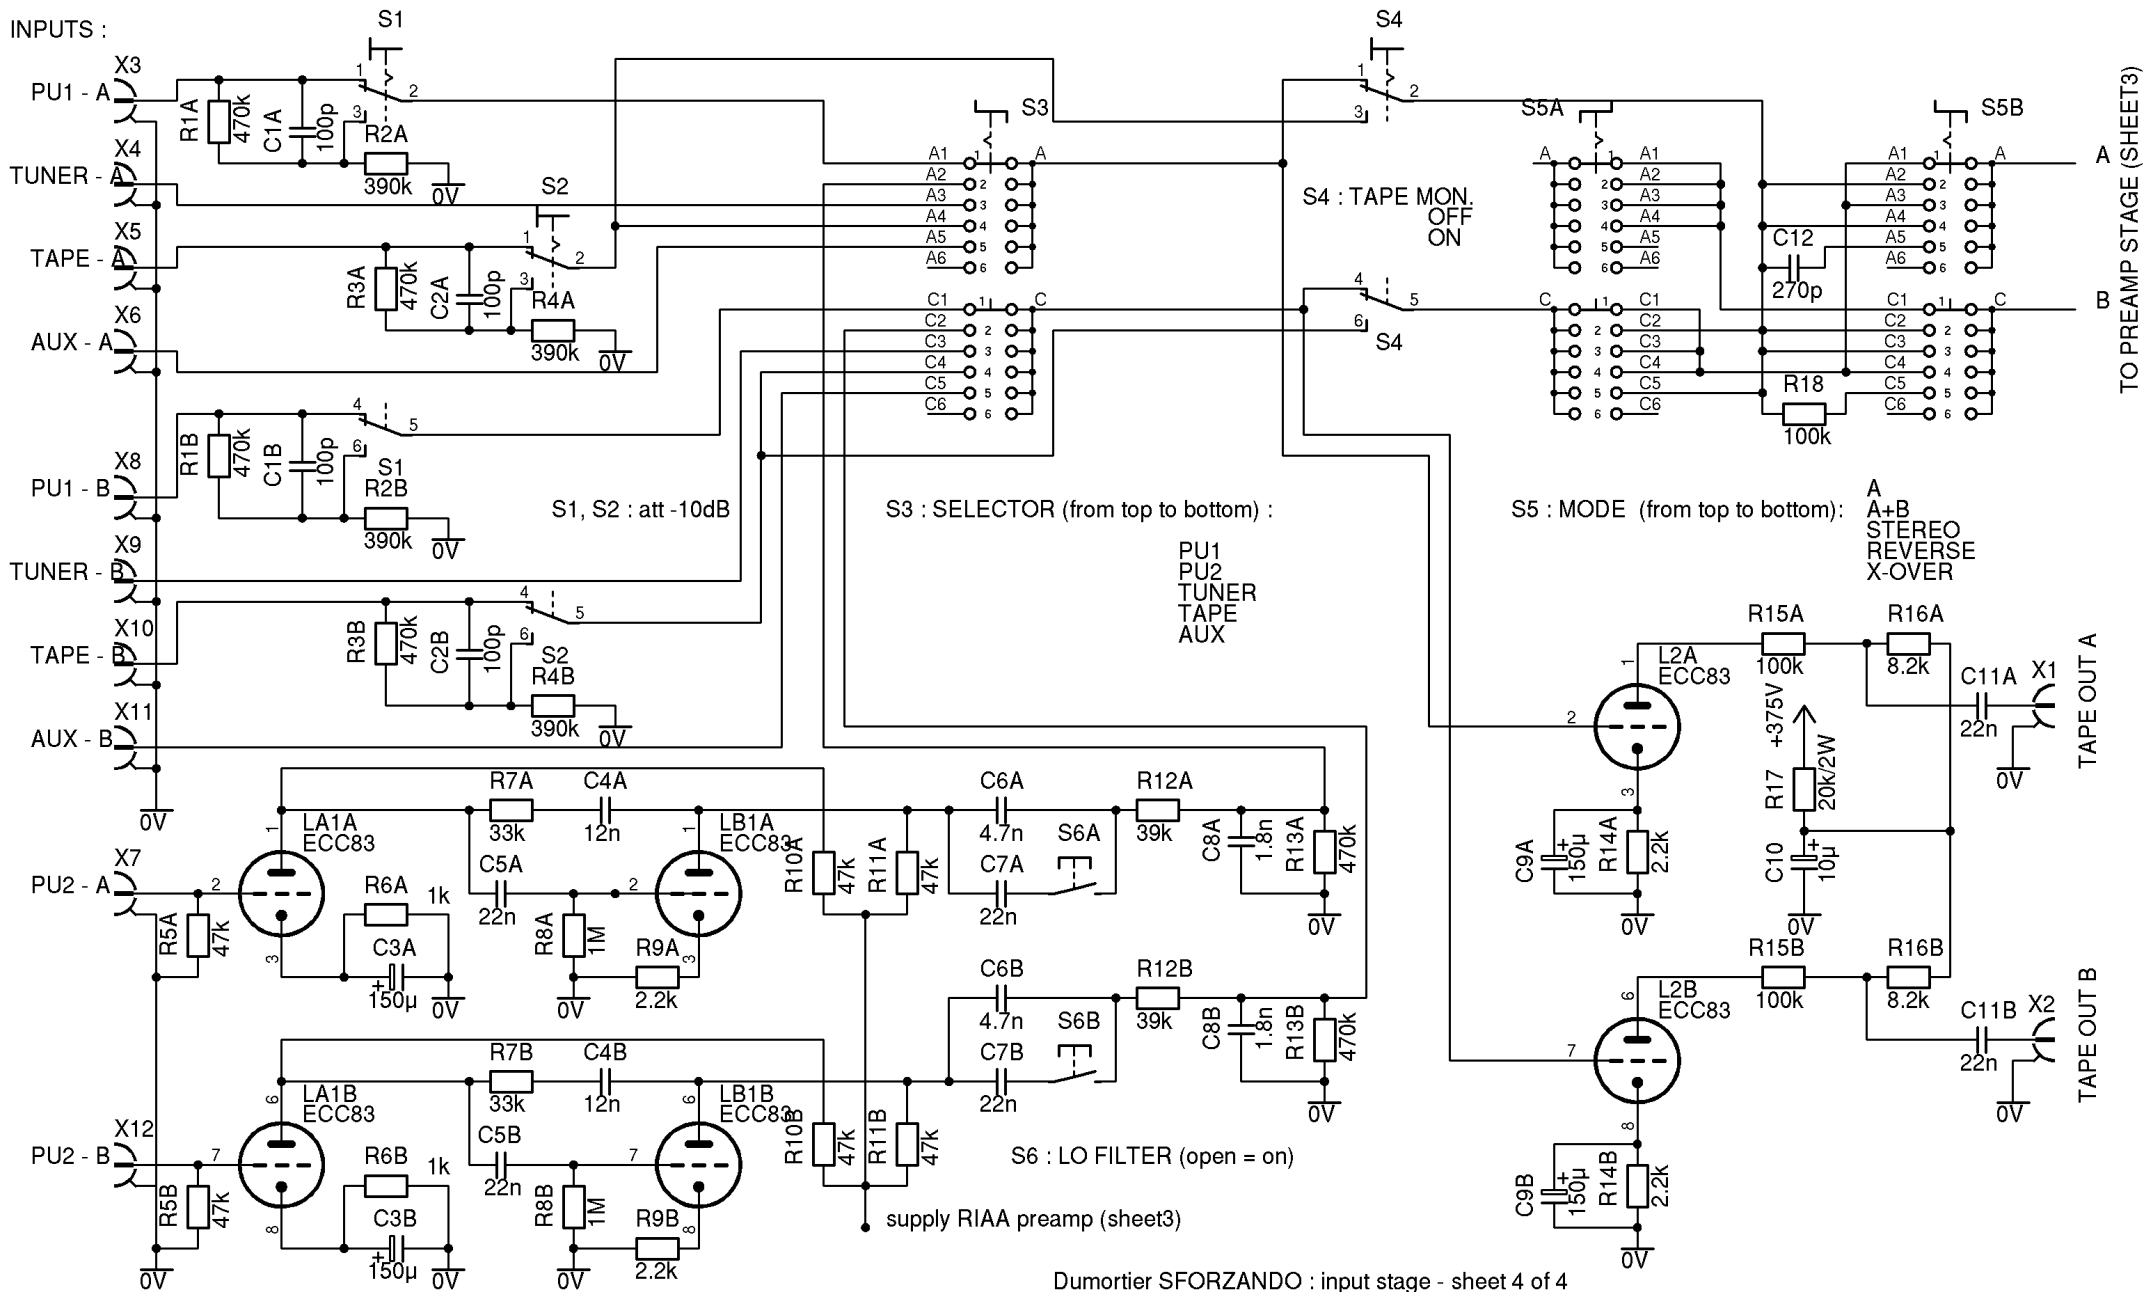

TO PREAMP STAGE (SHEET3)