3. Disassembly and Reassembly

This section of the service manual describes the disassembly and reassembly procedures for the LE19/22B45***, LE26/32B45*** LCD TV.

⚠ WARNING: This LCD TV contains electrostatically sensitive devices. Use caution when handling these components.

3-1. Disassembly and Reassembly

- ⚠ Cautions: 1. Disconnect the LCD TV from the power source before disassembly.
 - 2. Follow these directions carefully; never use metal instruments to pry apart the cabinet.

Description	Picture Description	Screws
Place the TV face down on cushioned table. Remove 4 screws from the Stand. Remove stand.		26/32"
		19/22"
	The state of the s	26/32"
		19/22"

3. Disassembly and Reassembly

Description	Picture Description	Screws
	The state of the s	26/32"
		19/22"
2. Remove the 10 secrews of rear-cover. 19": 2, 22": 3, 26"/32": 10		26/32"
		19/22"

Description	Picture Description	Screws
3. Lift up the rear-cover.		26/32"
	C. C. S. C.	19/22"
4. Remove the 5 screws of main board and 5 screws of IP board. And remove speaker and harness.		26/32"
		19/22"

	Description	Picture Description	Screws
Rer	nove the 2 screws of bracket TOP. nove the 8 screws of bracket stand link. P: 26/32": 2, Stand link: 26":6, 32": 8)		
Lift up the bracket TOP and stand link. and remove 4 screws of bracket(22")		26/32"	
			19/22"
		26/32"	
			19/22"

Description	Picture Description	Screws
7. Lift up the panel.		26/32"
		19/22"

 $[\]ensuremath{\, \times \,}$ Reassembly procedures are in the reverse order of disassembly procedures.