



A-1230

INSTRUCTION MANUAL



TEAC **A-1230**
STEREO TAPE DECK



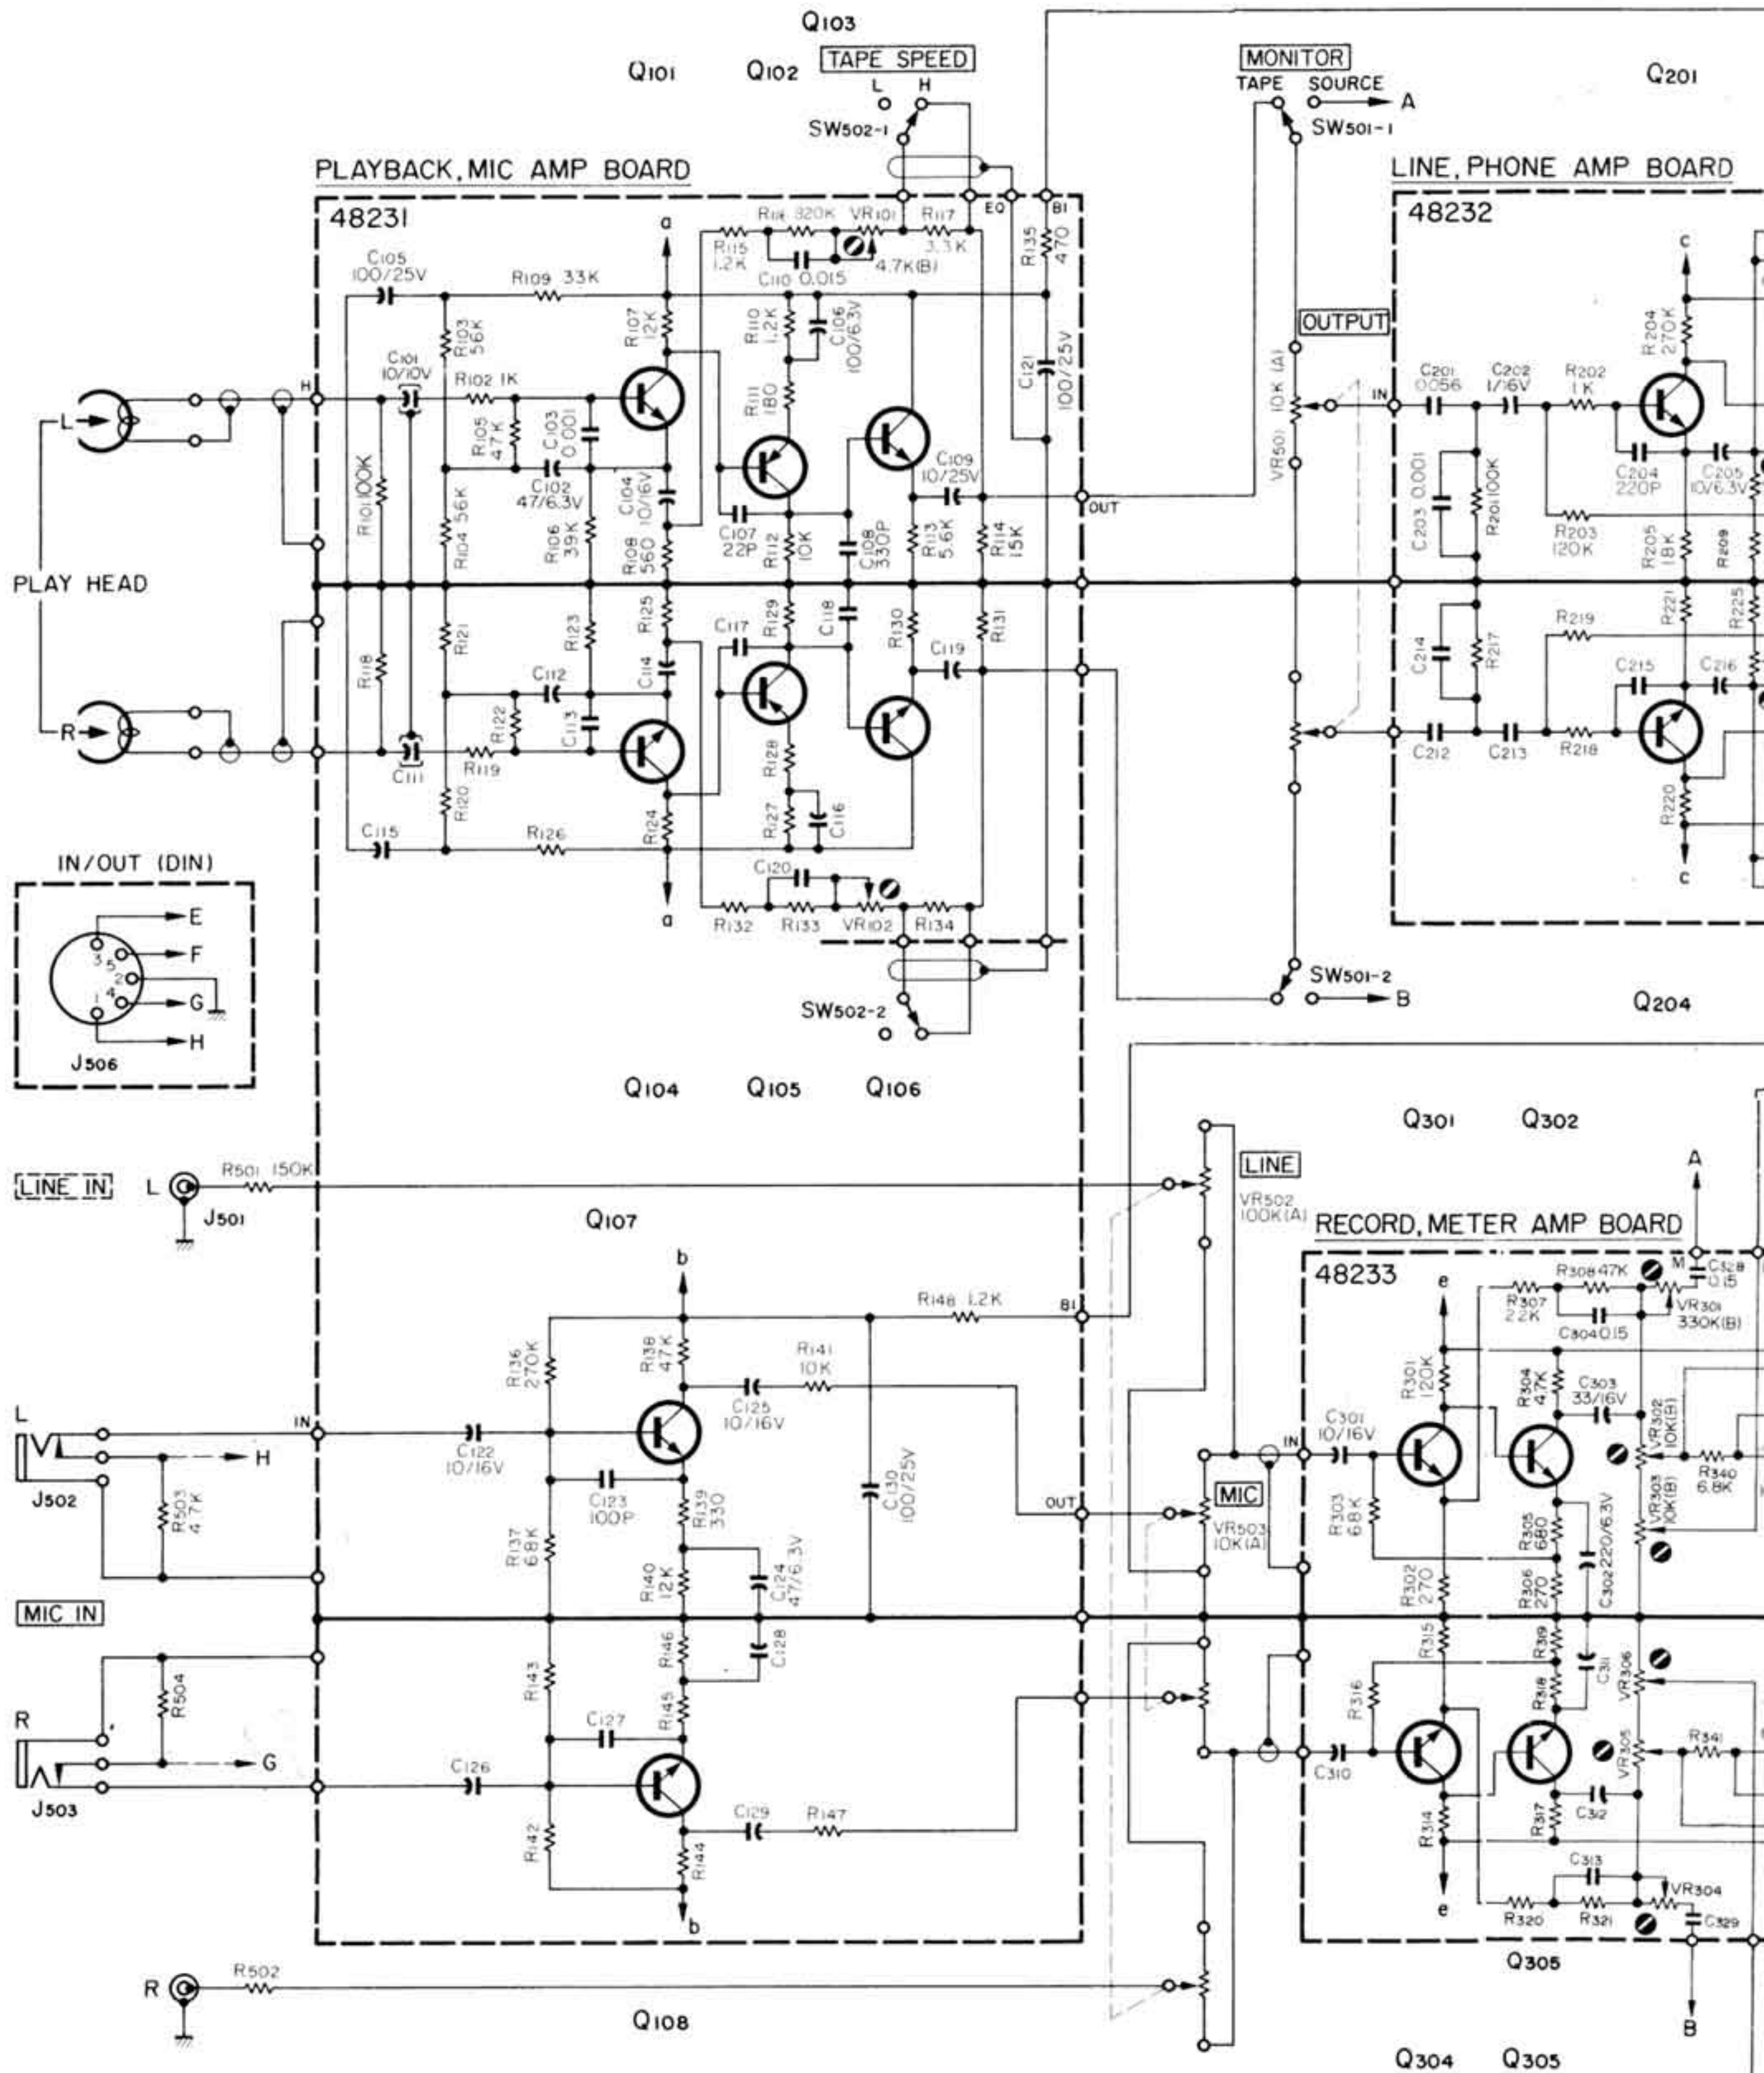


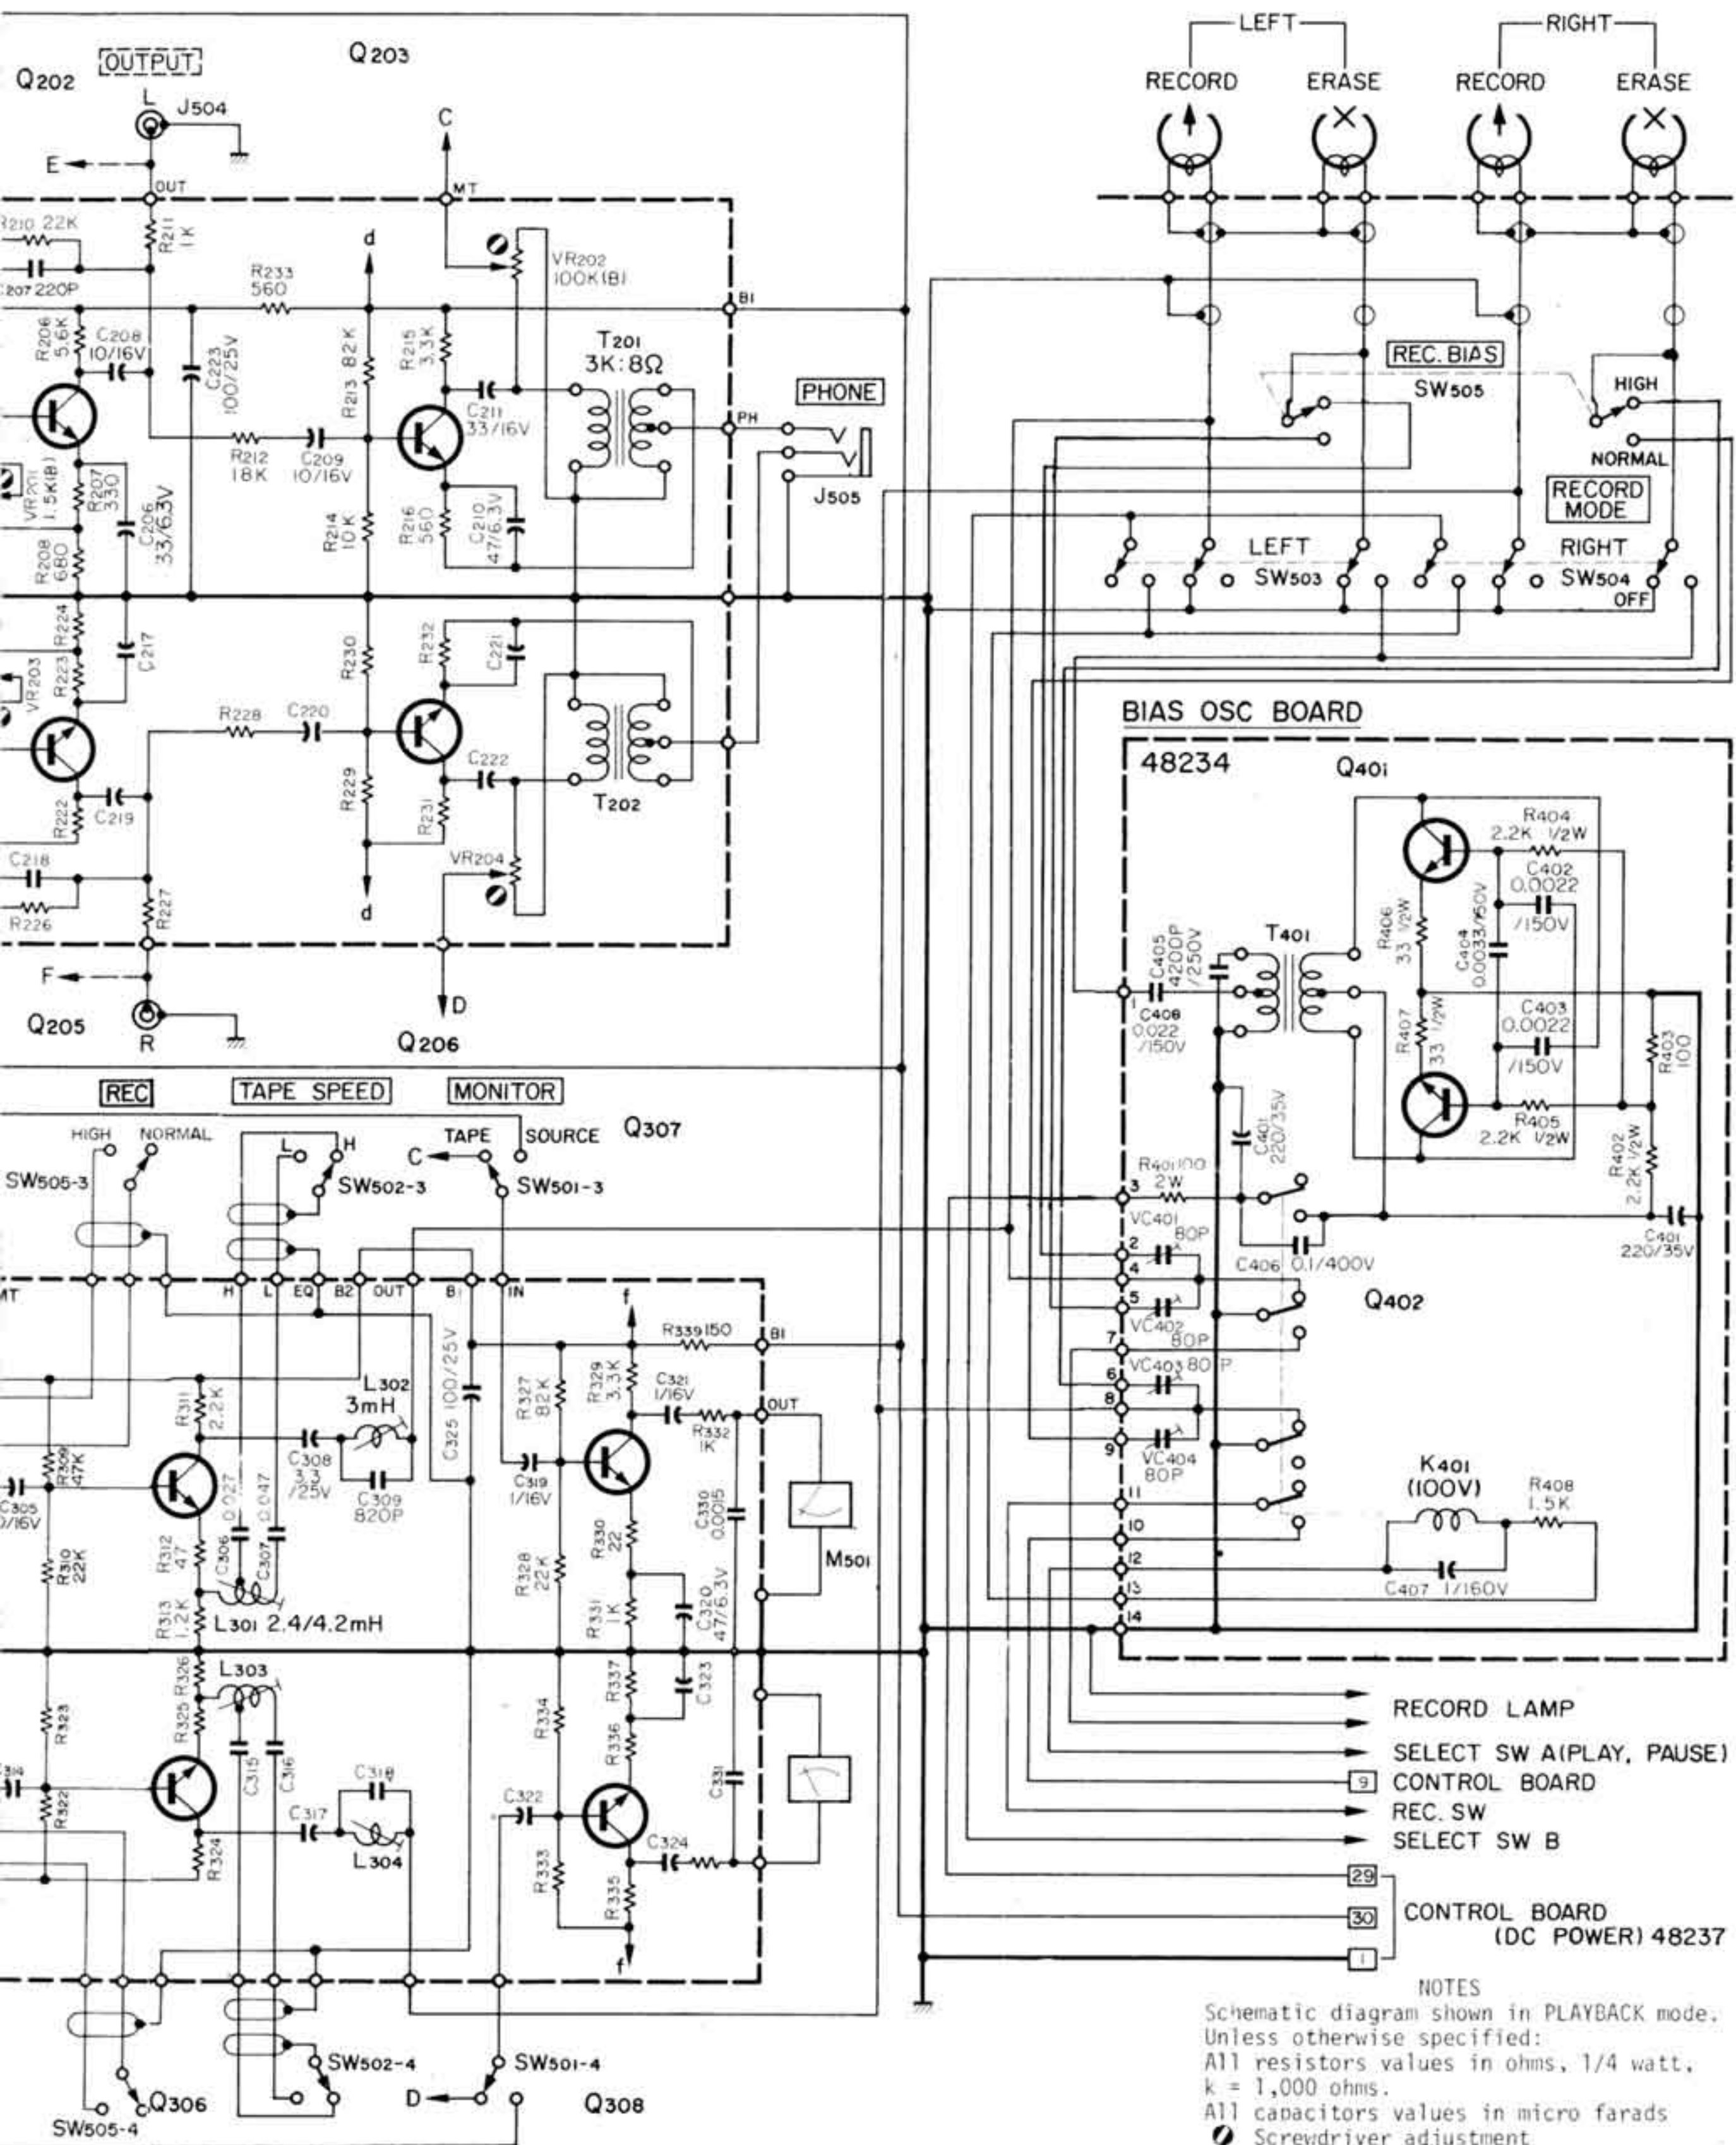


DESCRIPTION	CIRCUIT REF. NO.	DESCRIPTION
494(Y) or 572 or 666(S)	Q201/204 Q301/304 Q107/108	2SC644(T) or 2SC369(BL) or 2SC693(F)
693(F) or 828(S) or 369(BL)	Q203/205 Q204/206 Q307/308 Q302/305	2SC372(Y) or 2SC536(E) or 2SC828(S)
971(Y)		

6	.	
5	.	
4	.	
3	.	
2	.	
1	9-72	
REVISION	DATE	CHANGE NO.

STEREO TAPE DECK PREAMPLIFIER	
MODEL NO. A-1230	SHEET NO.
TEAC CORPORATION	

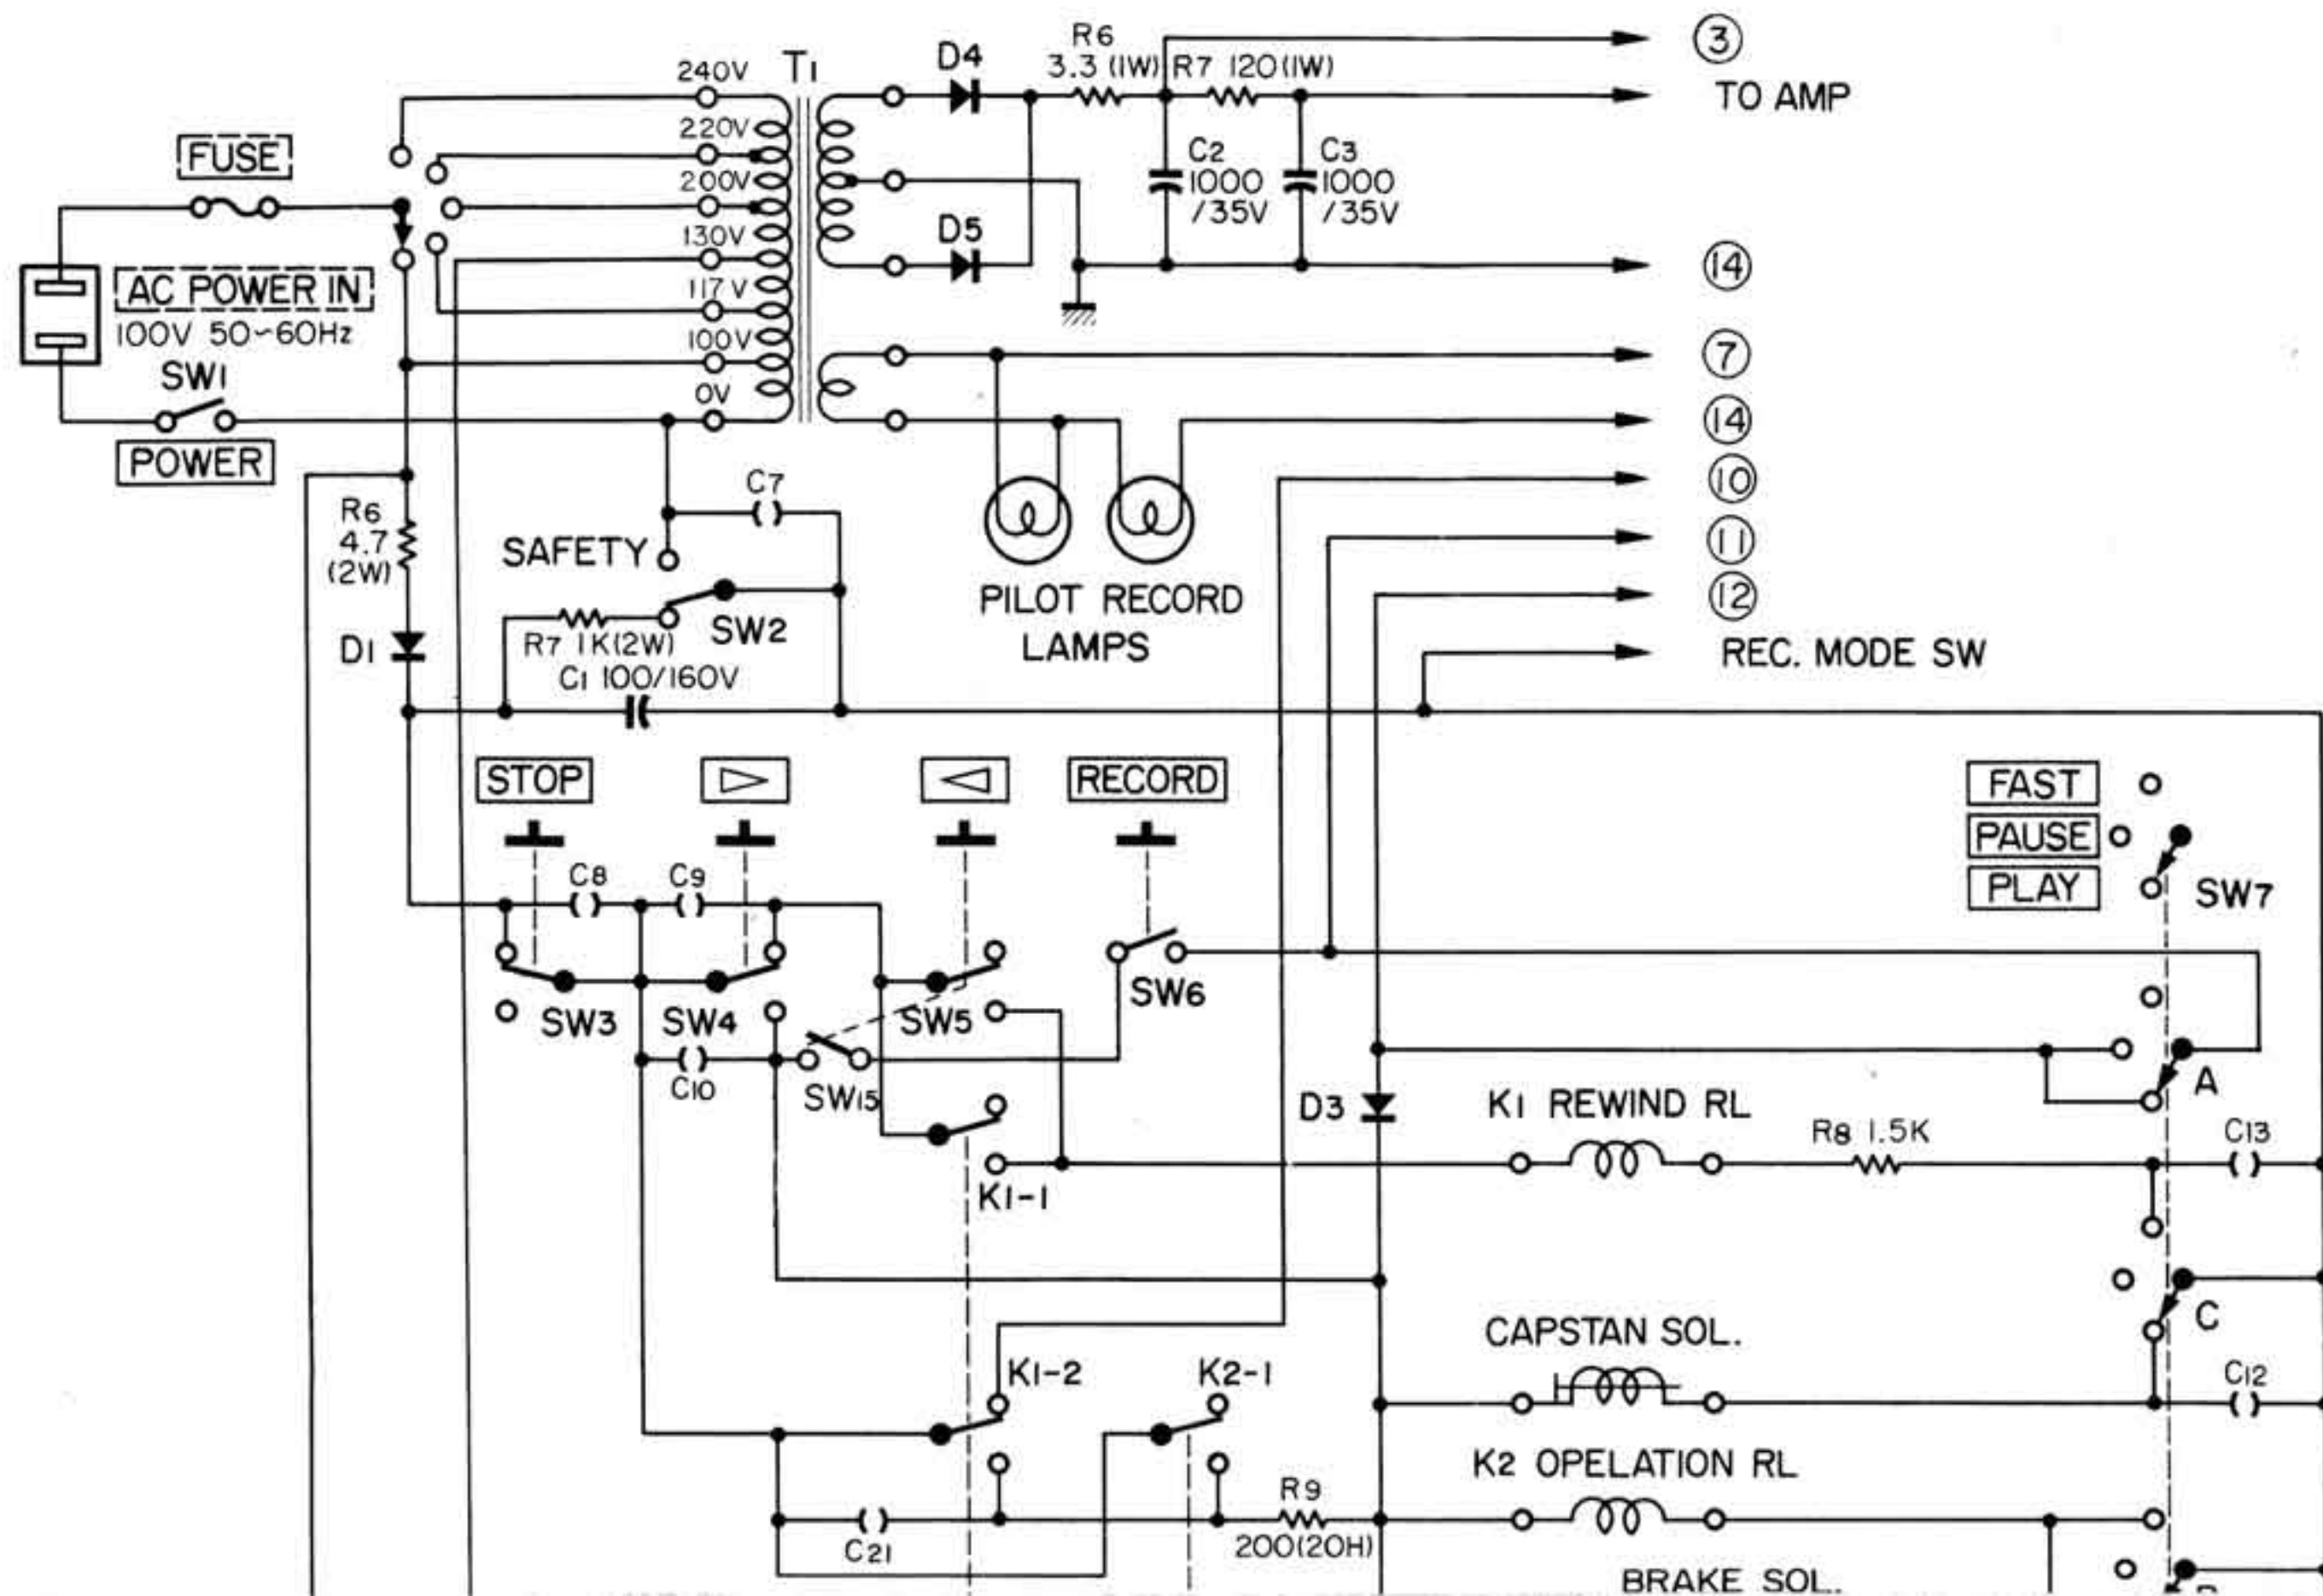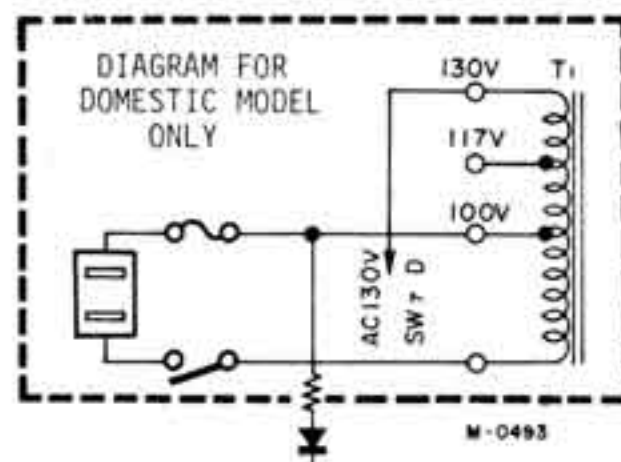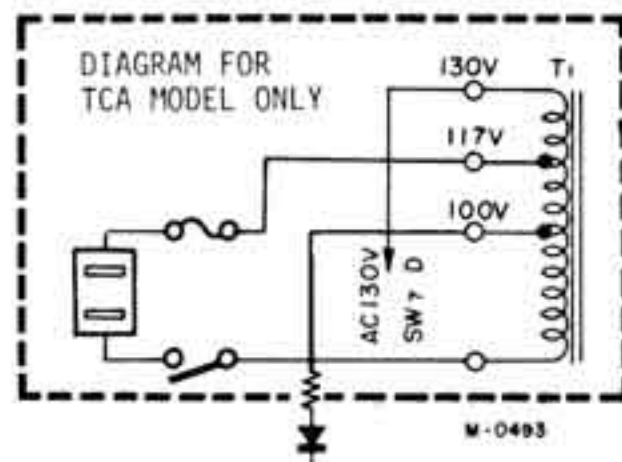

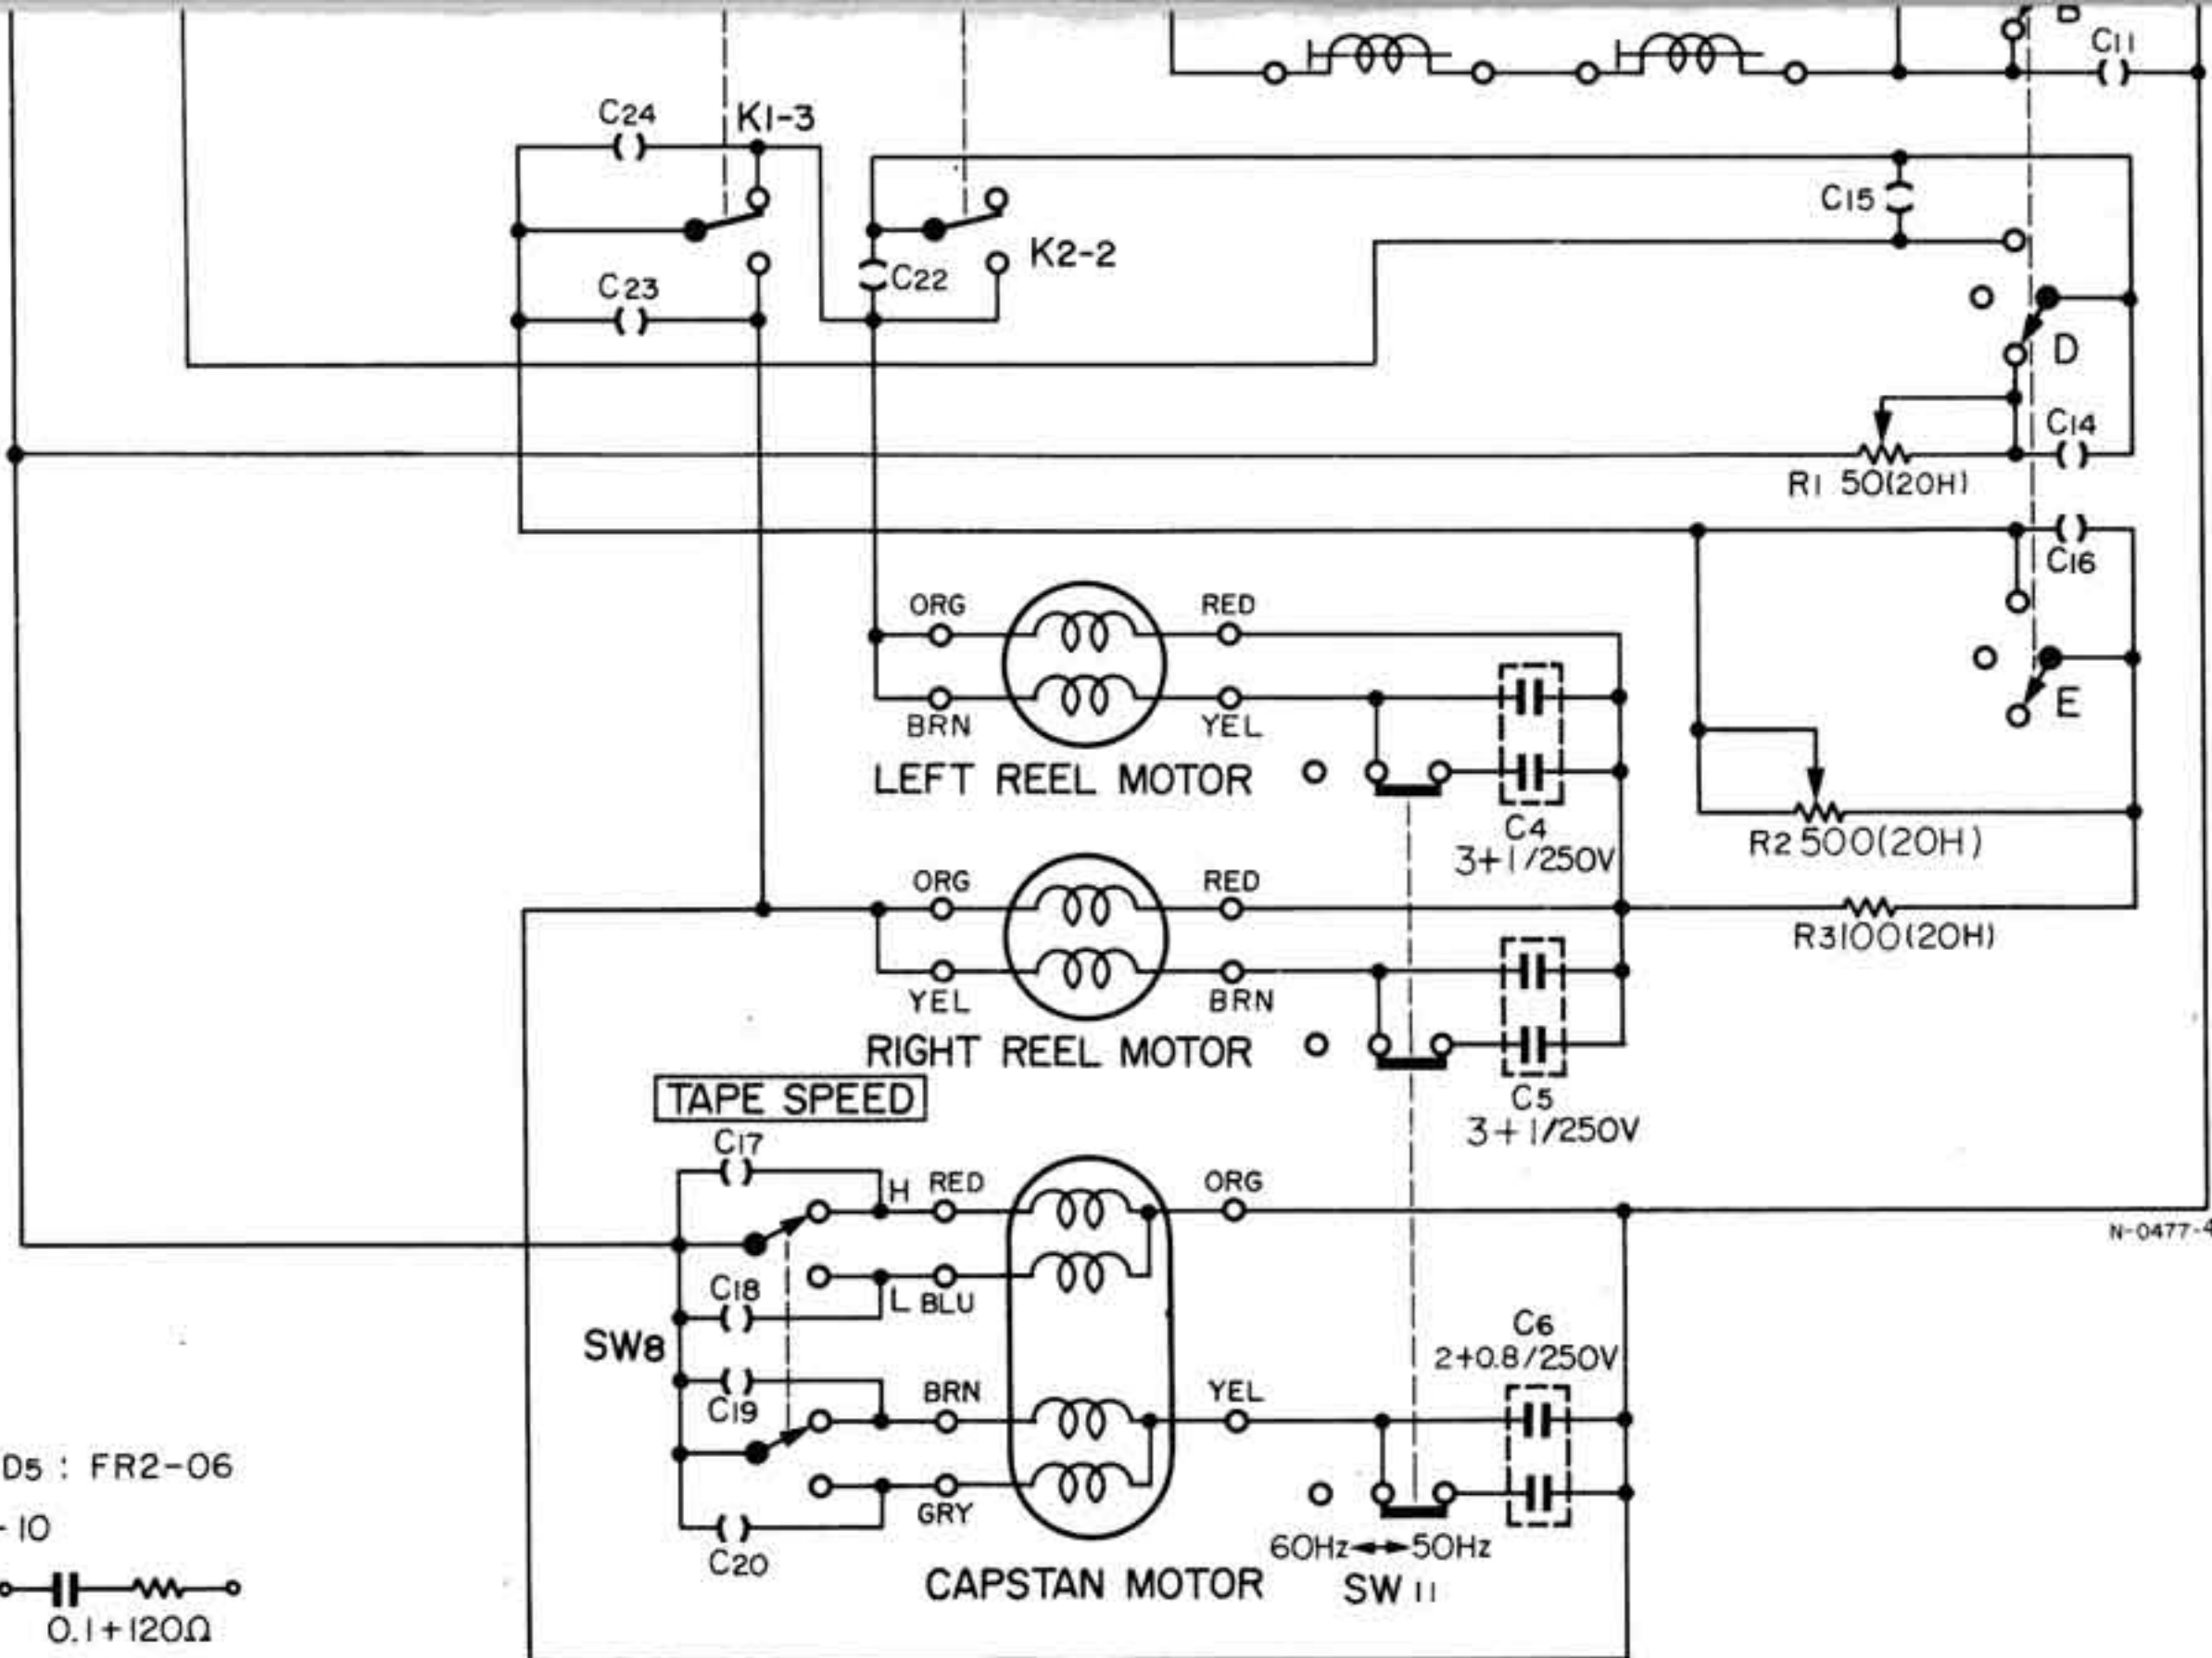

NOTES

D1, D2, D4, D5 : FR2-06

D3 : FR2-10

:
0.1+120Ω

NOTES

ALL RELAYS SHOWN NOT ENERGIZED (STOP MODE)
TAPE SPEED SWITCH SHOWN IN THE 7-1/2IPS POSITION
FREQUENCY CONVERSION SWITCH SHOWN IN THE 50Hz POSITION

REVISION	DATE	CHANGE NO.	STEREO TAPE DECK TAPE TRANSPORT	MODEL NO.	SHEET NO.
6					
5					
4					
3					
2					
1	9-72				
			A-1230		
			TEAC CORPORATION		

A0101