



| Ref. No.  | Switch                              | Mode         |
|-----------|-------------------------------------|--------------|
| S101, 201 | record/playback                     | playback     |
| S102, 202 | MONITOR (TAPE/SOURCE)               | TAPE         |
| S103      | EQ (TAPE SELECT) (NORMAL/SPECIAL)   | NORMAL       |
| S104, 204 | TAPE SPEED (19 cm, 7 1/2 cm, 3 1/2) | 19 cm, 7 1/2 |
| S105, 205 | MIC ATT (0-15/30)                   | 0            |
| S106      | BIAS (TAPE SELECT) (LOW/HIGH)       | LOW          |

## 3-5. SCHEMATIC DIAGRAM – SYSTEM CONTROL SECTION –

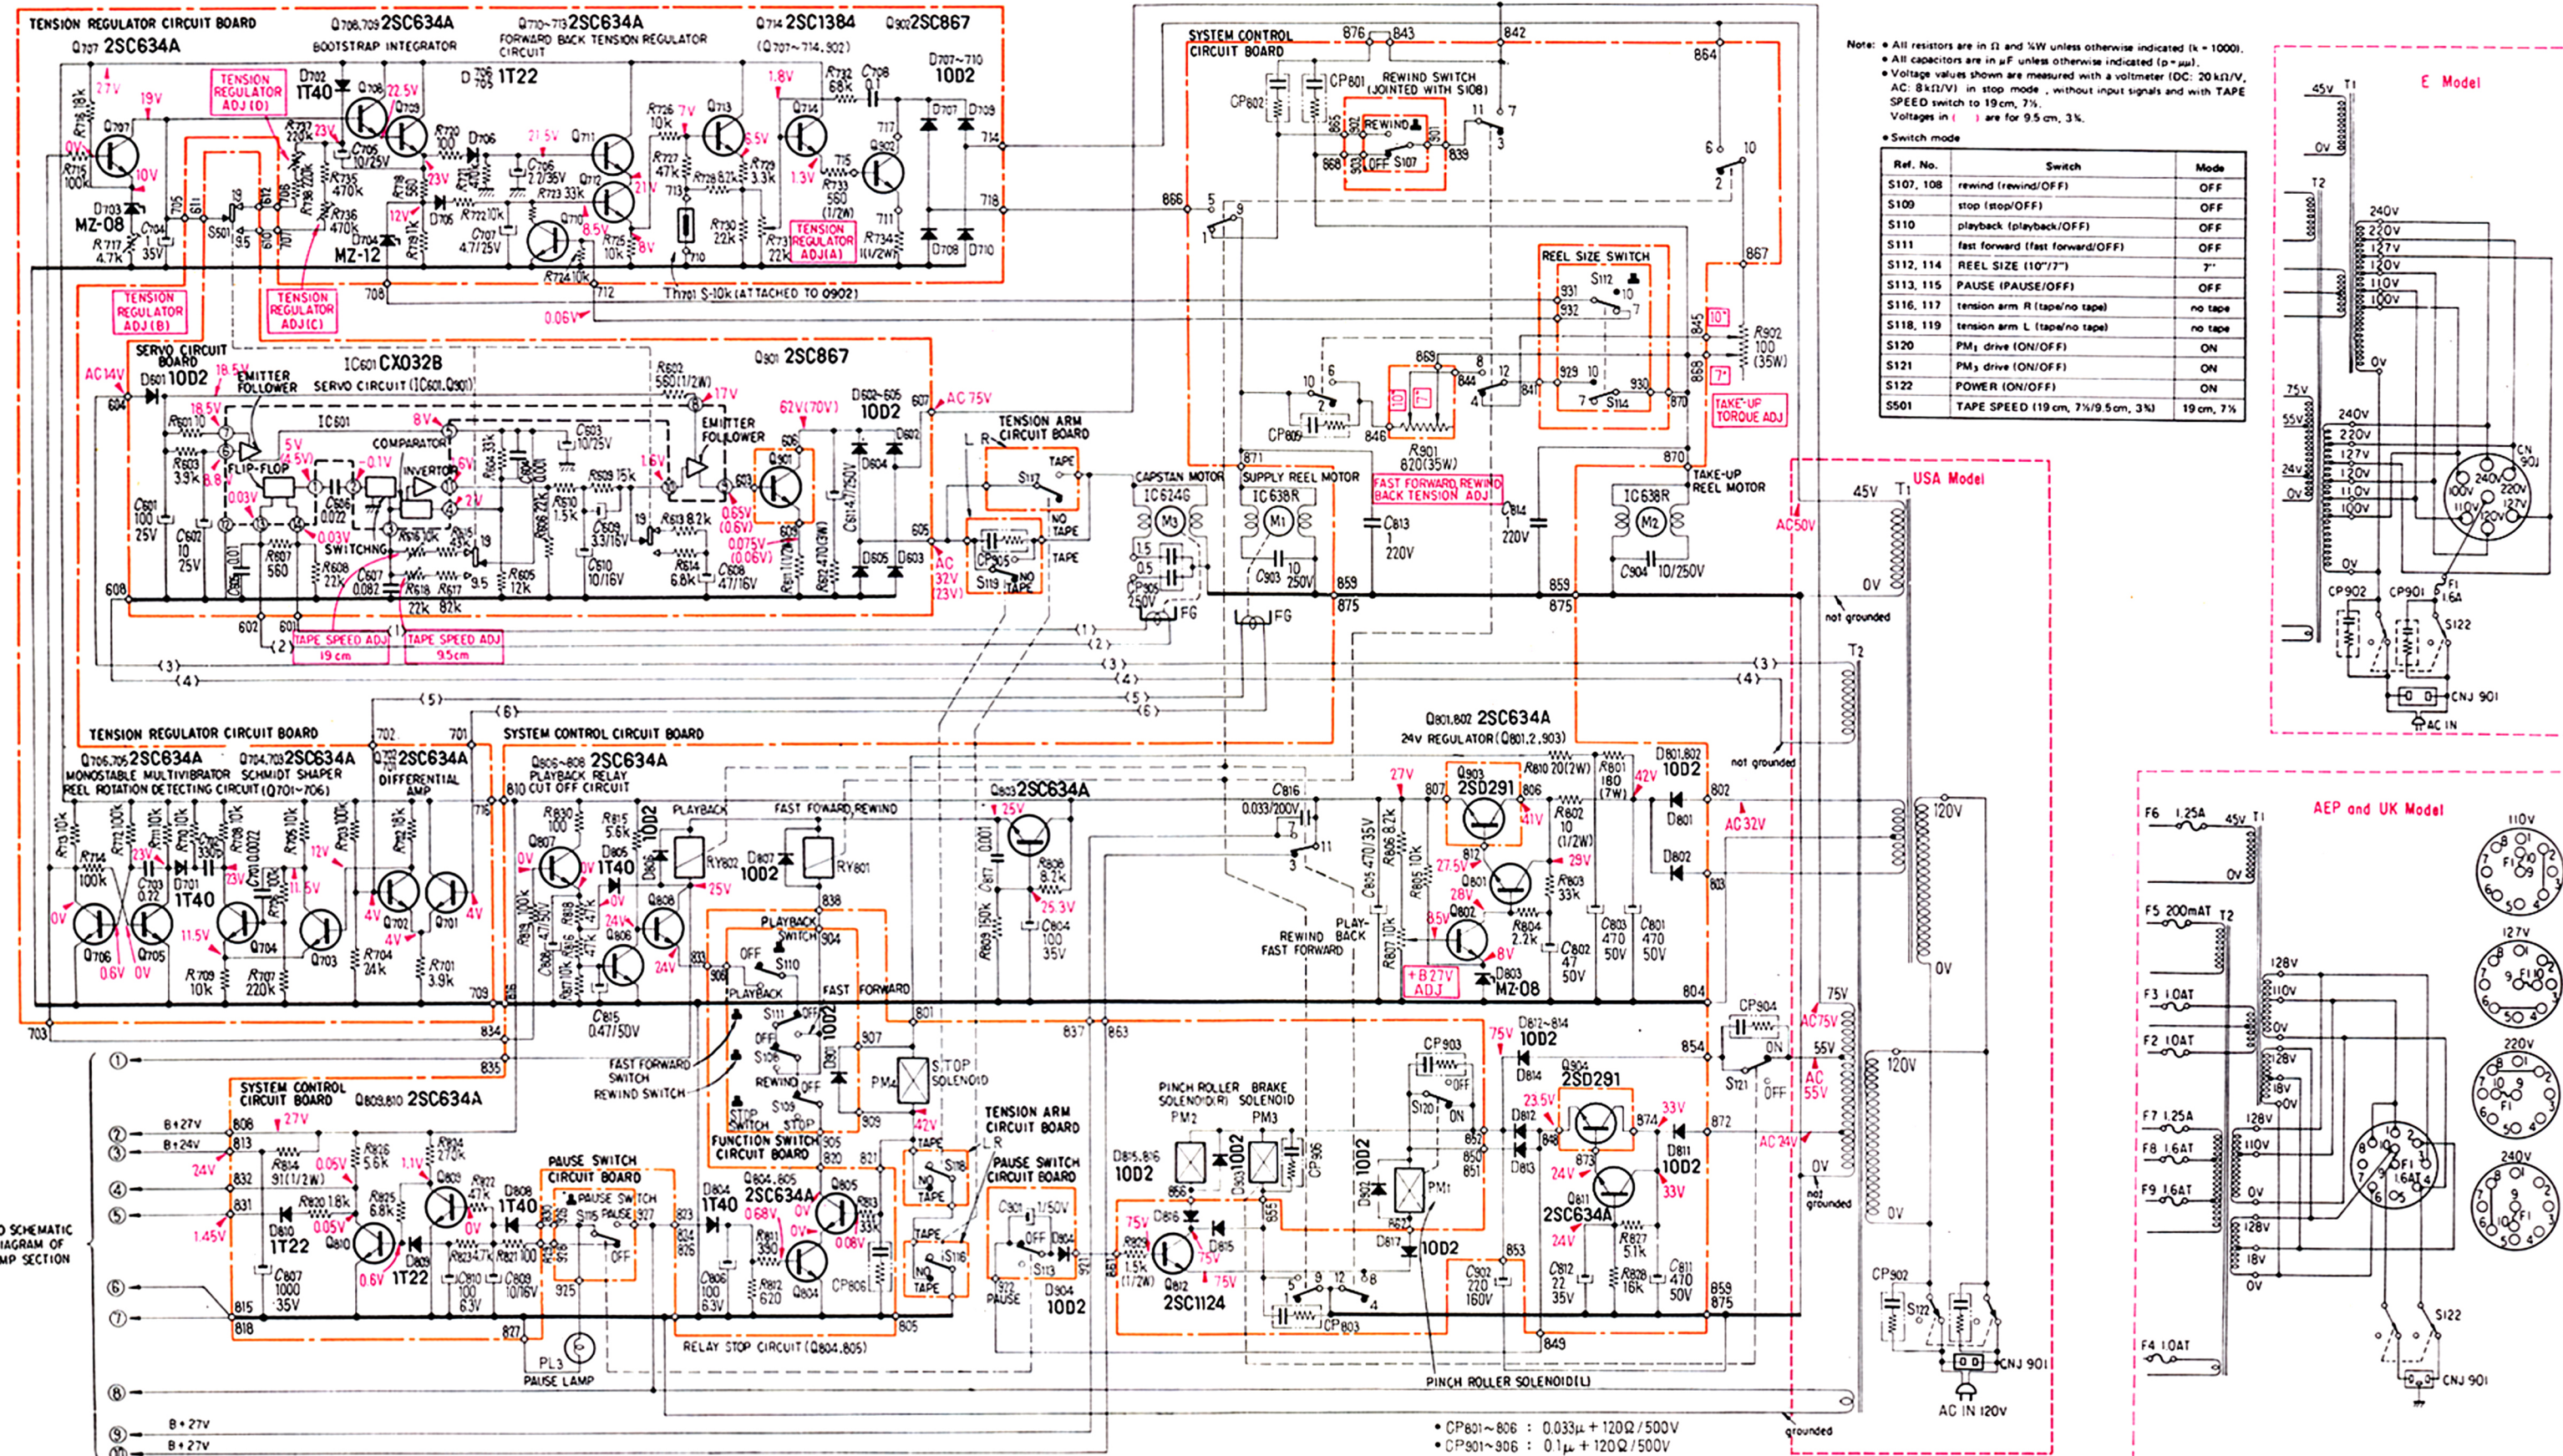

### 3-1. LEVEL DIAGRAMS

#### Playback Mode

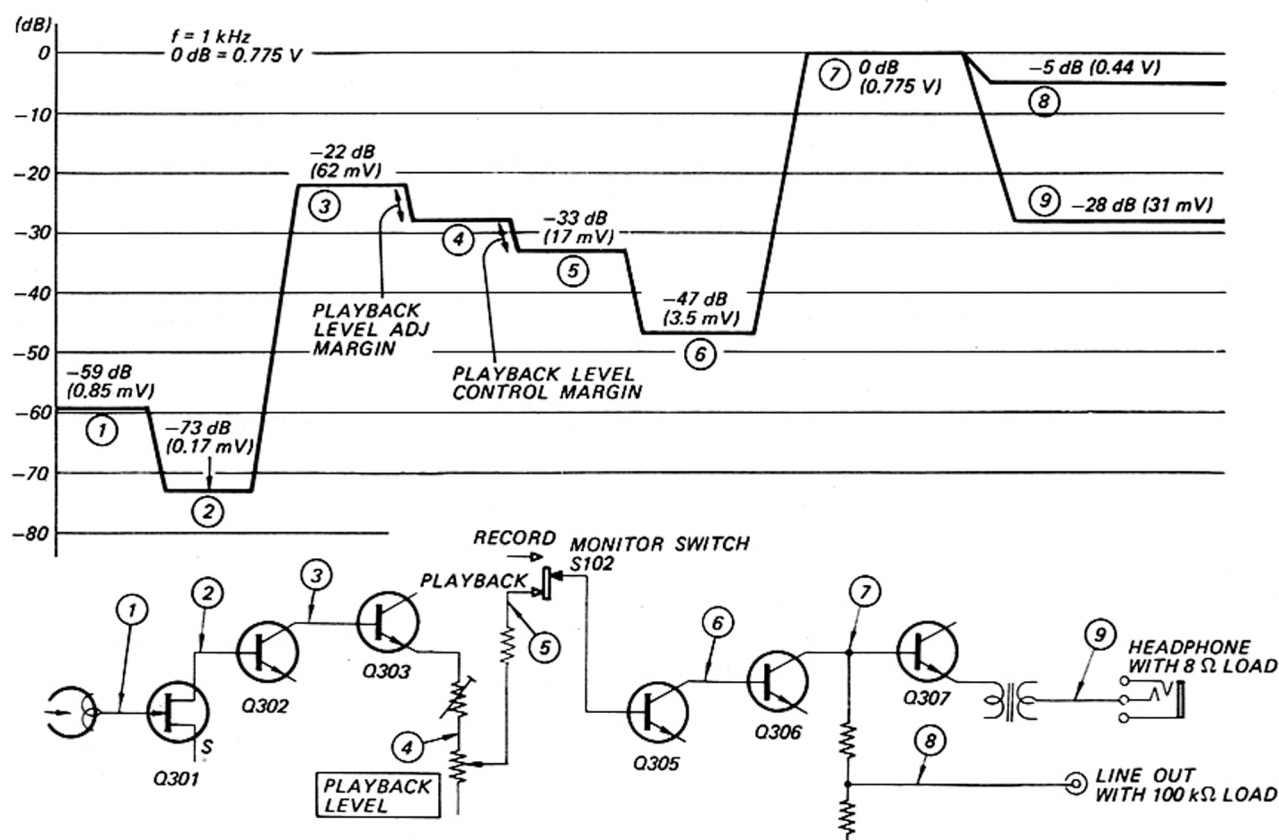

#### Record Mode

