

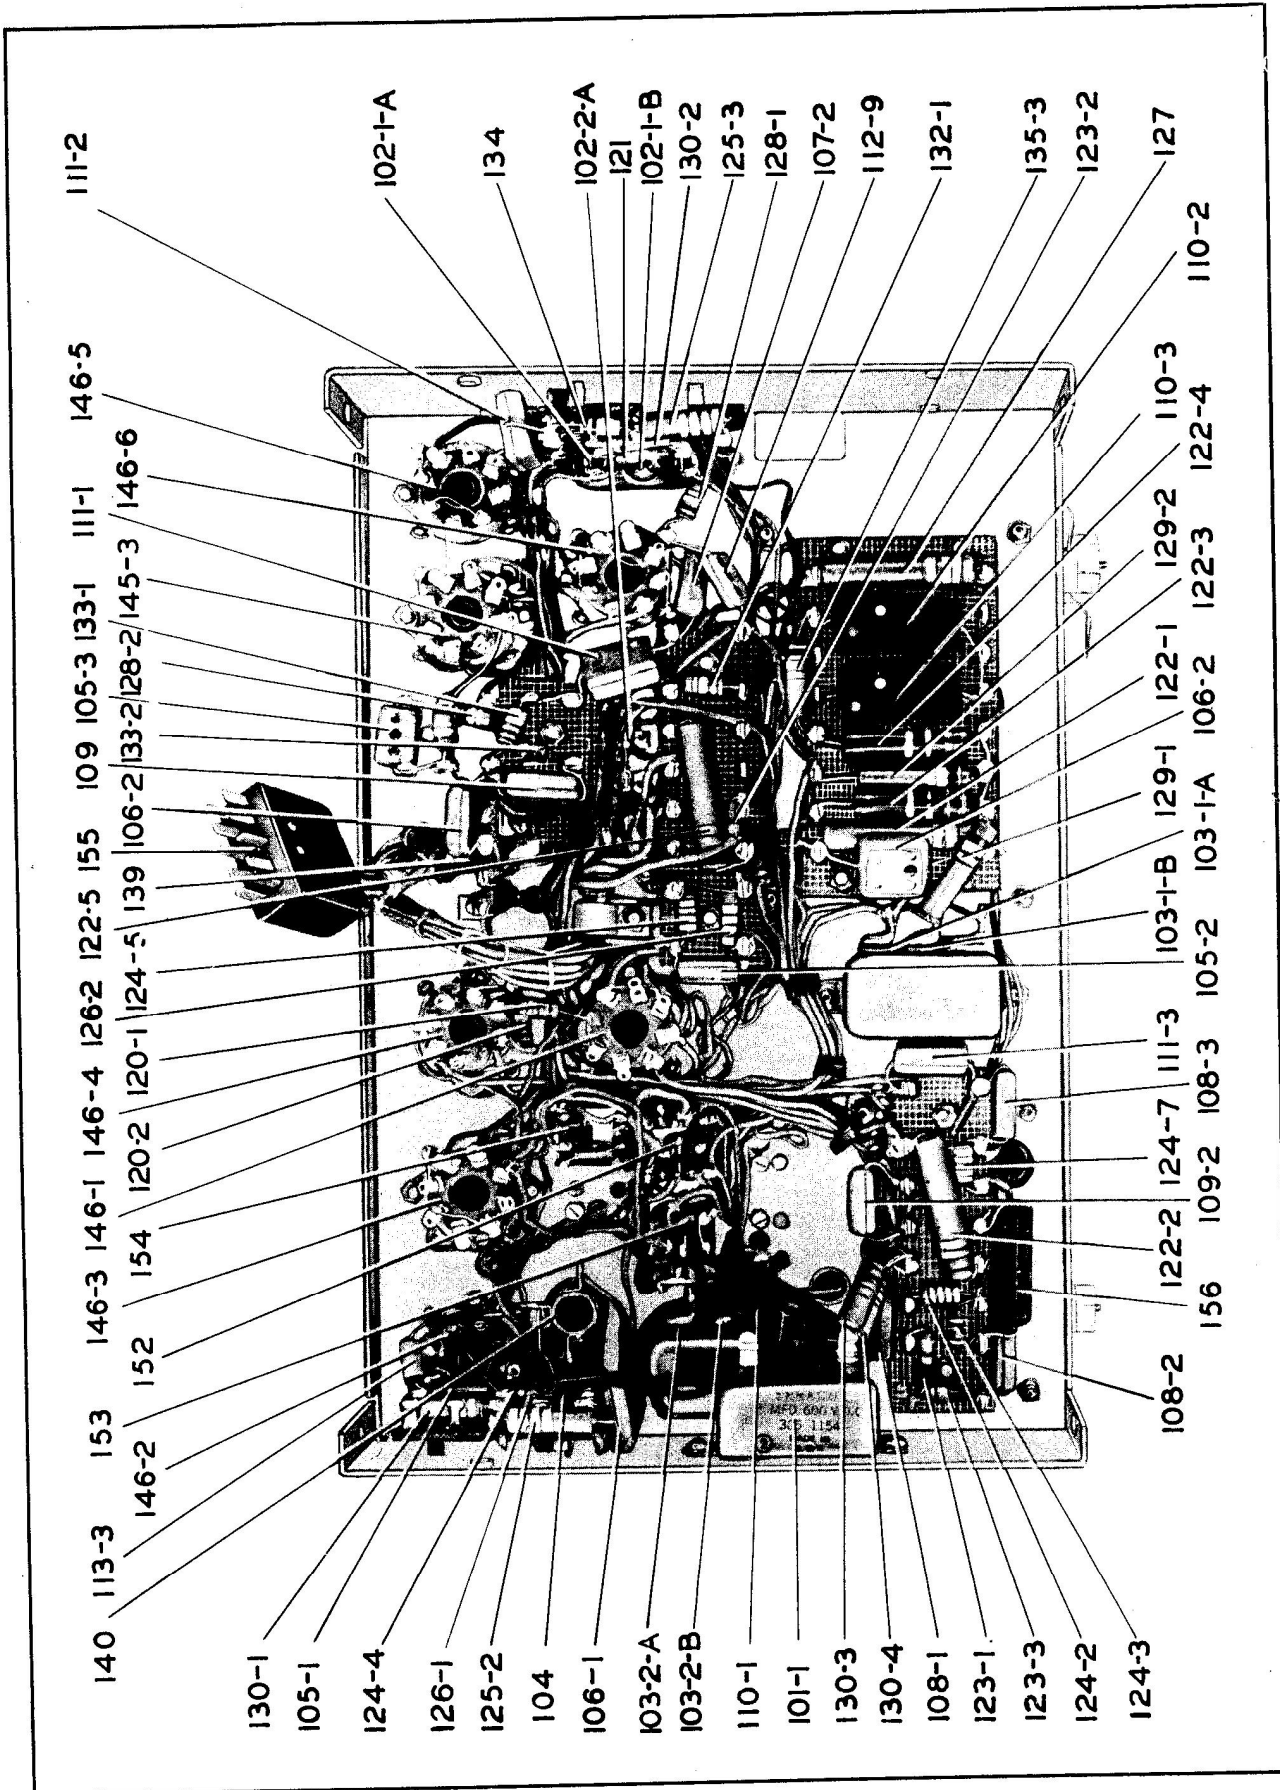


Figure 4-22 — Radio Receiver BC-966-A (Navy 43 ABM) or BC-966-AZ (Navy 43 ABL), Bottom View of Receiver Assembly
(Power Assembly Removed)

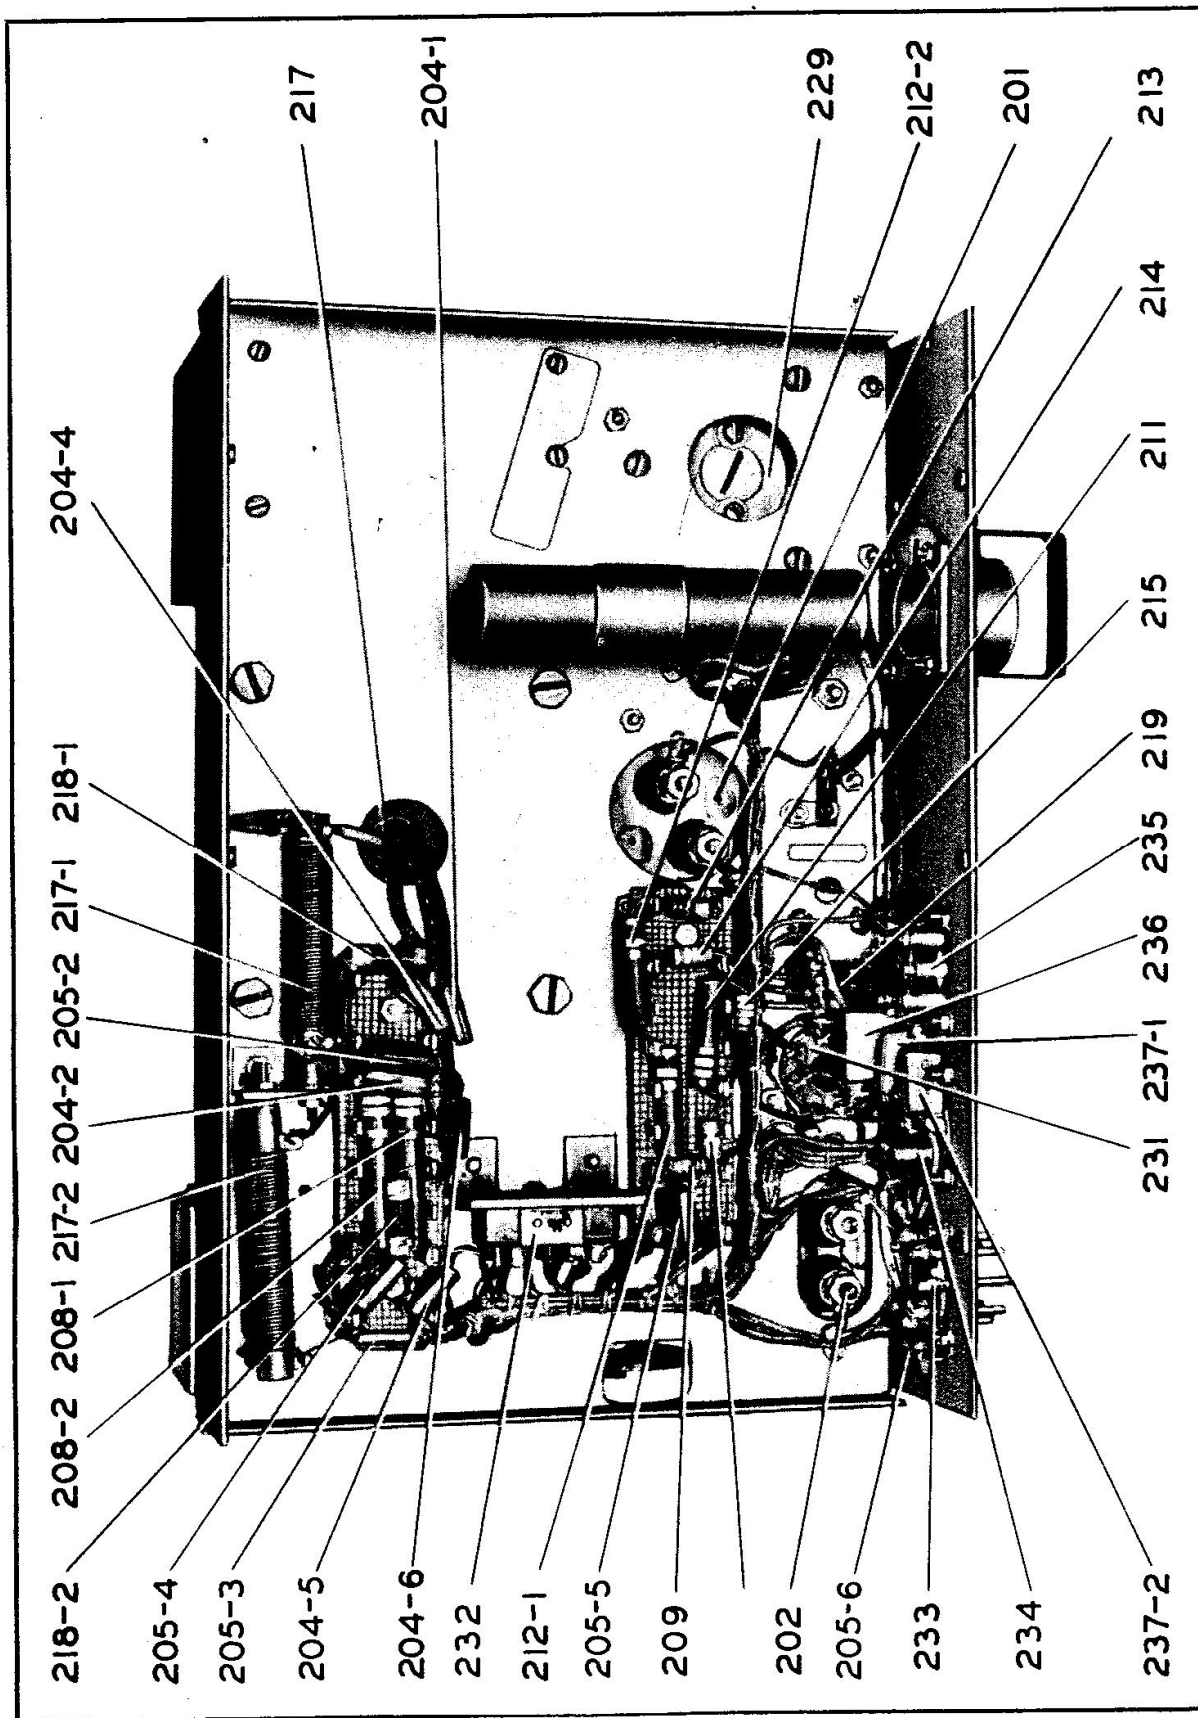


Figure 4-29 — Radio Receiver BC-966-A (Navy 43 ABM) or BC-966-AZ (Navy 43 ABL), Top View of Power Assembly with Receiver Assembly Removed

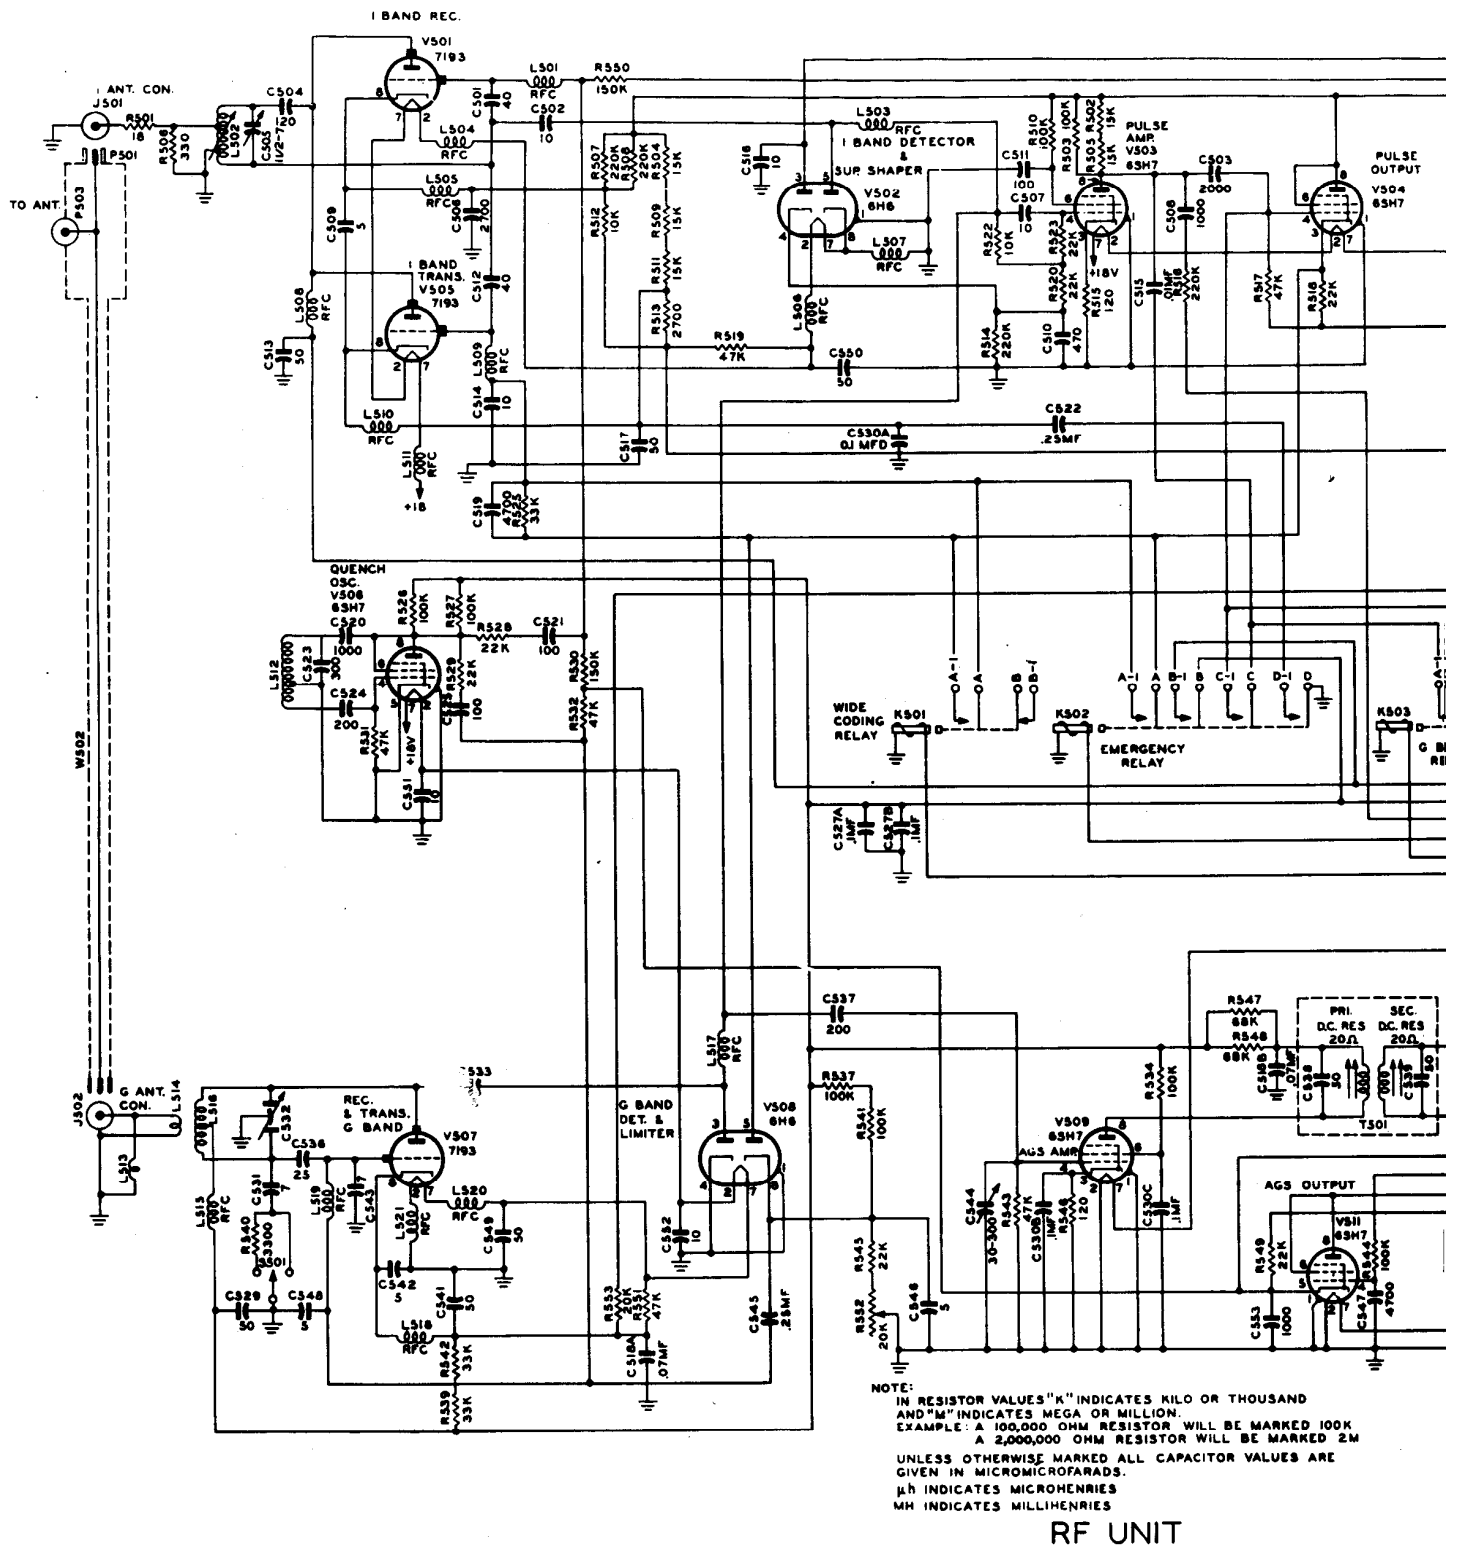


Figure 8-5 — Radio Receiver I

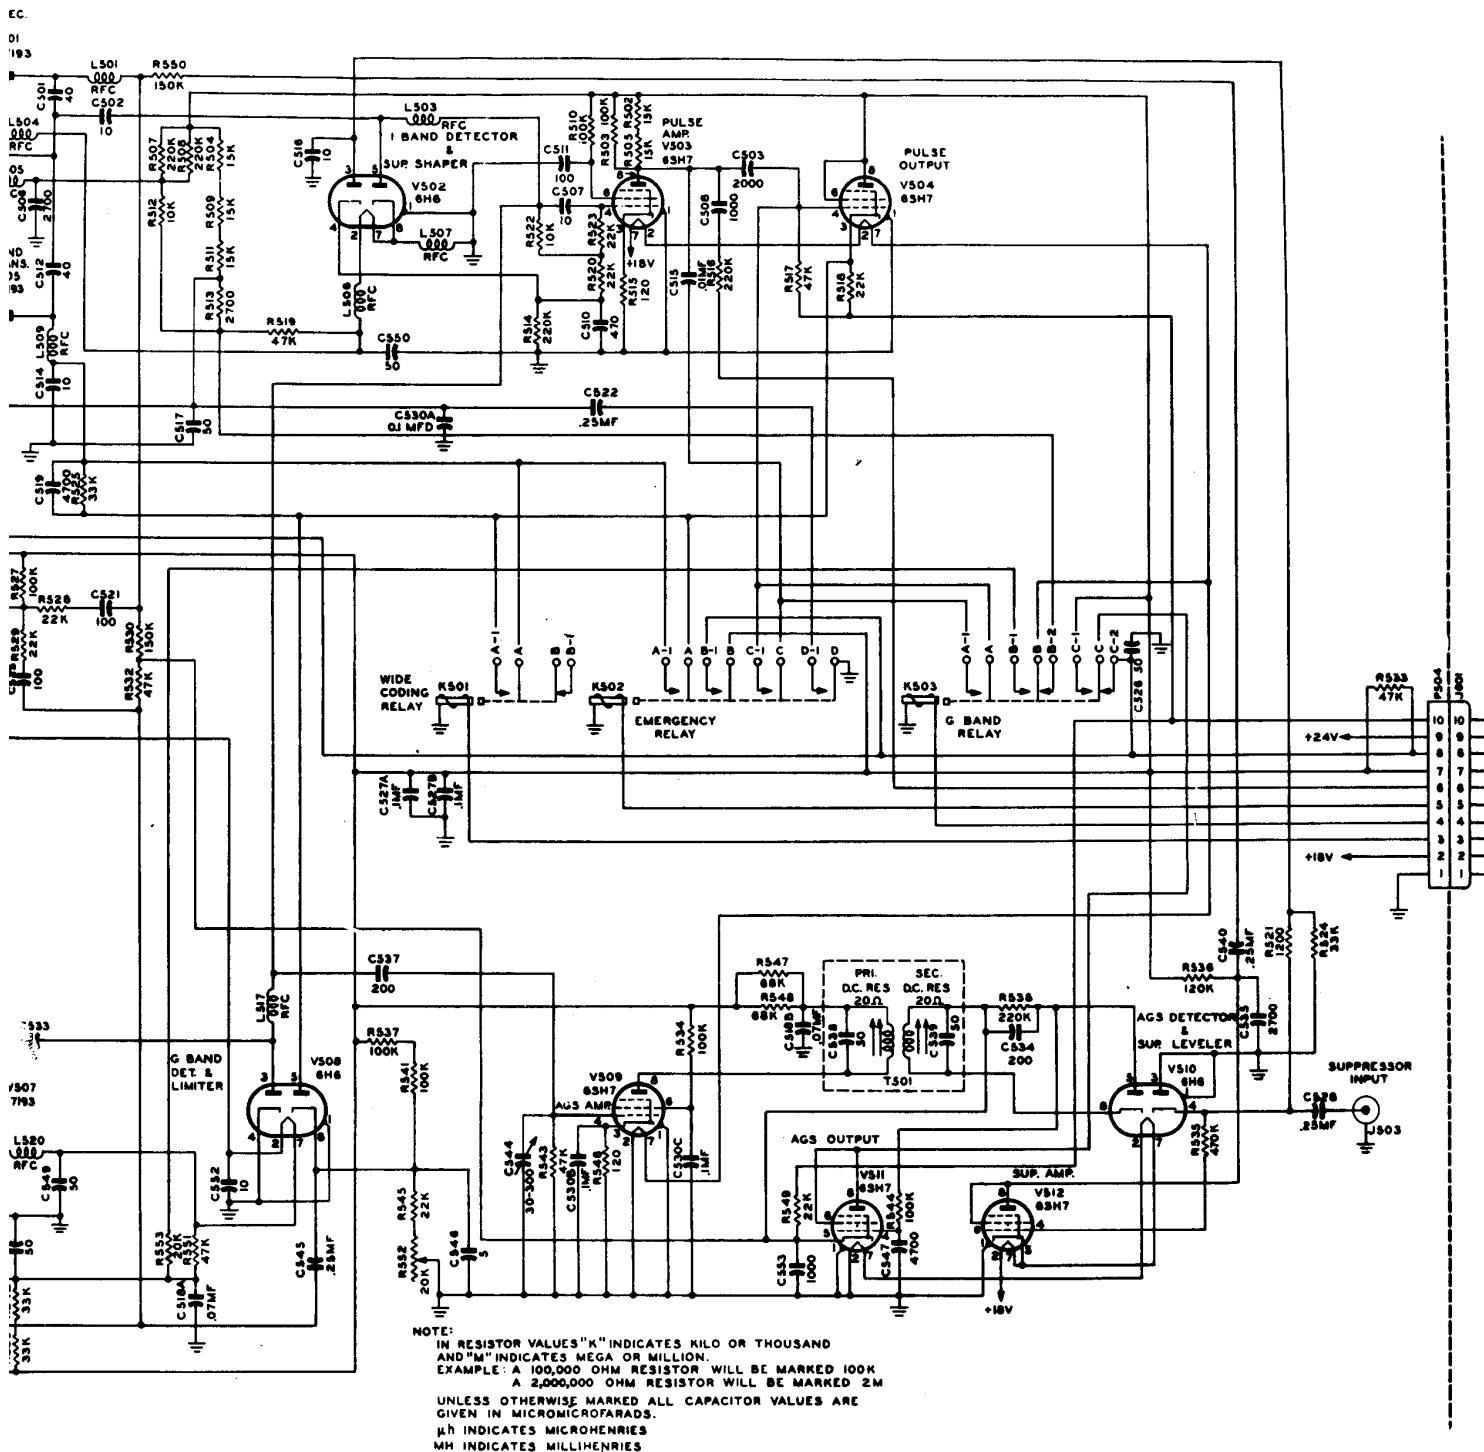


Figure 8-5 — Radio Receiver BC-966-B, Schematic Diagram of Receiver Section

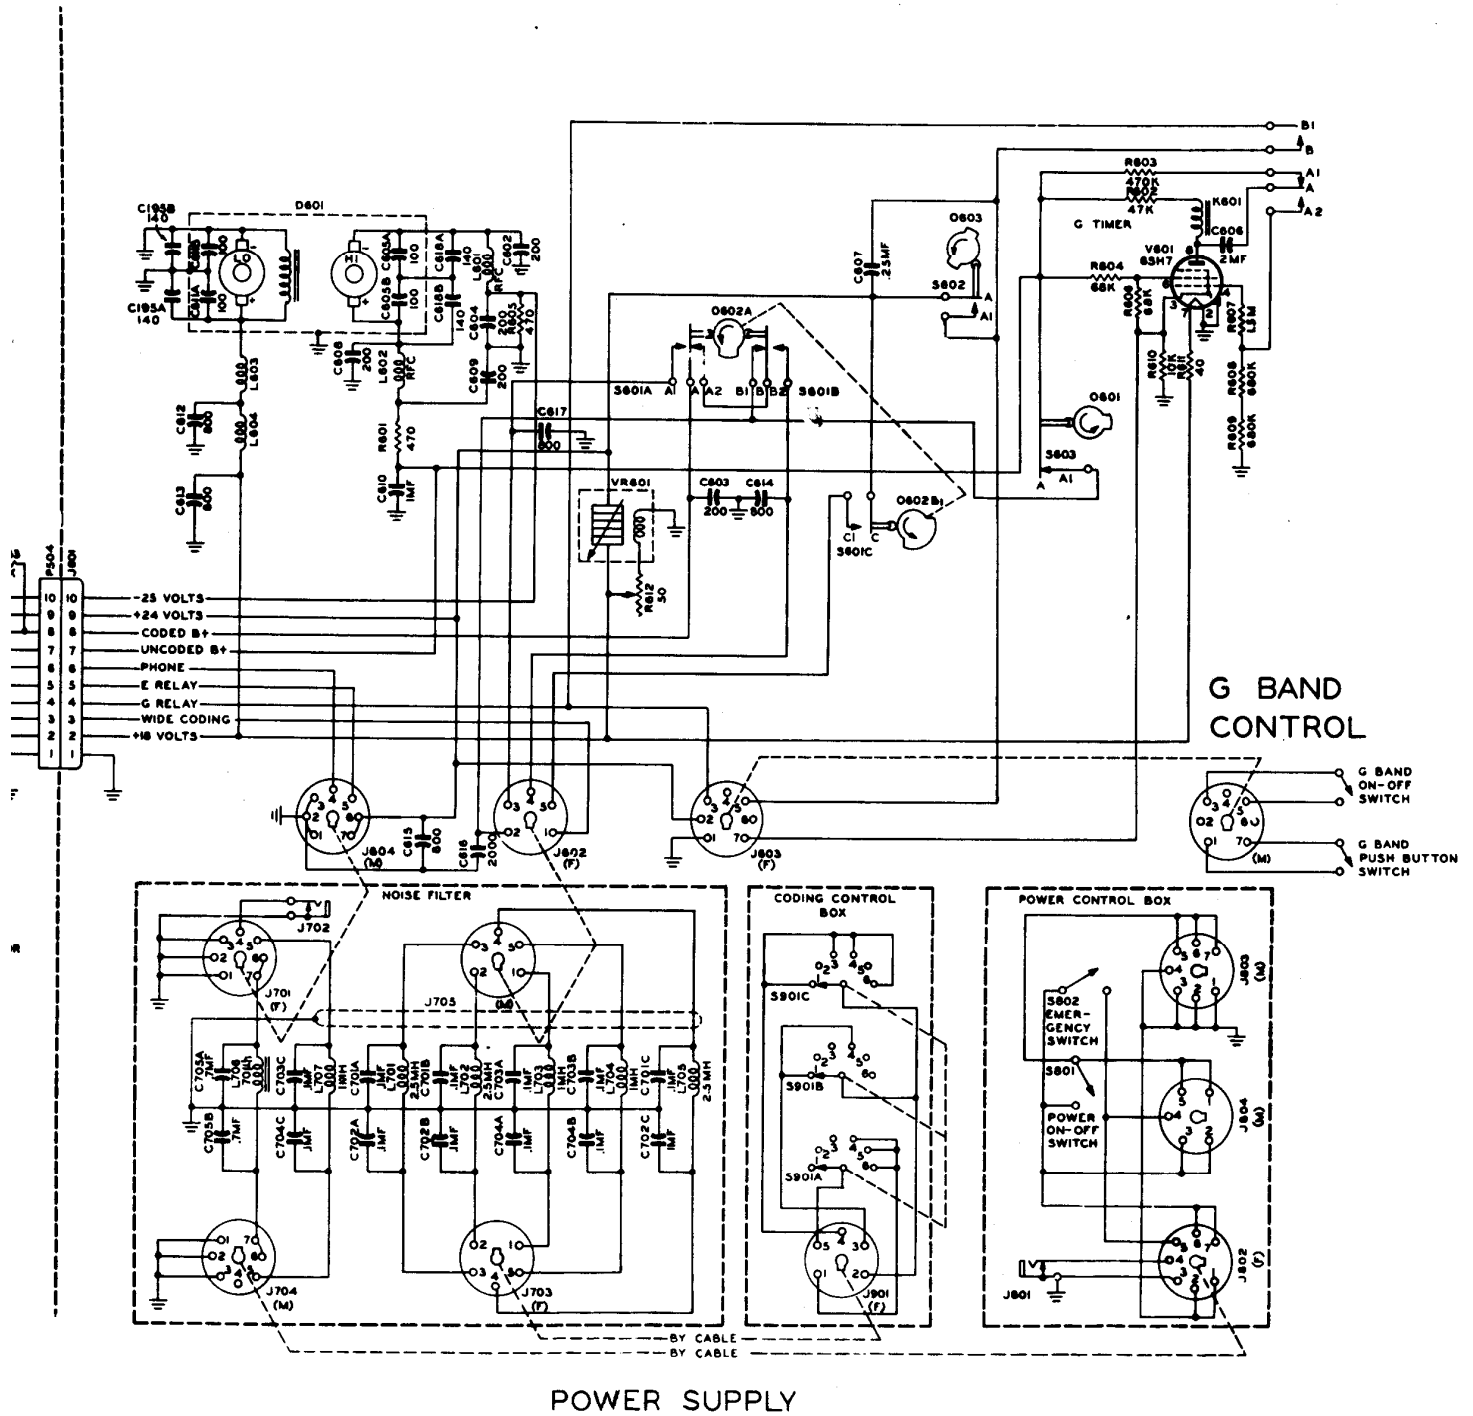


Figure 8-6 — Radio Receiver BC-966-B. Schematic Diagram of Power Assembly and of Control Equipment

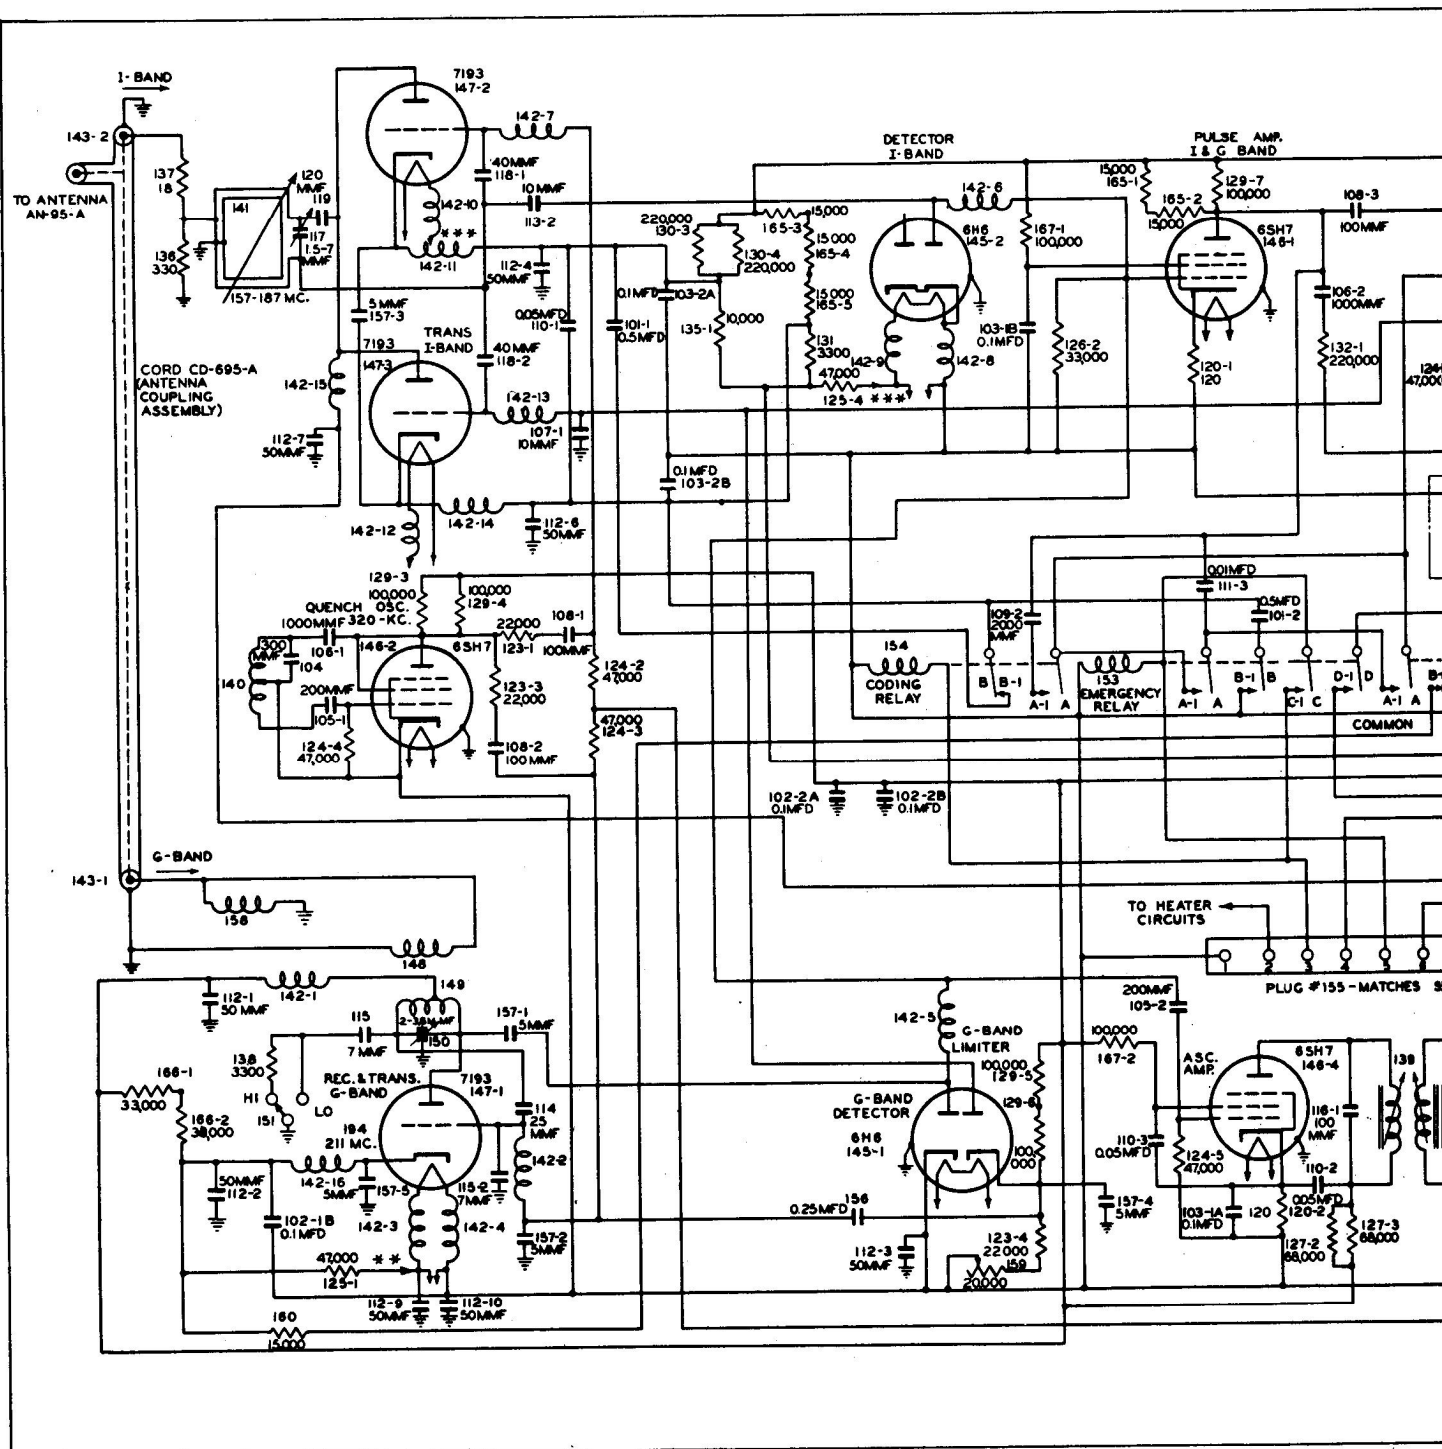


Figure 8-3 — R

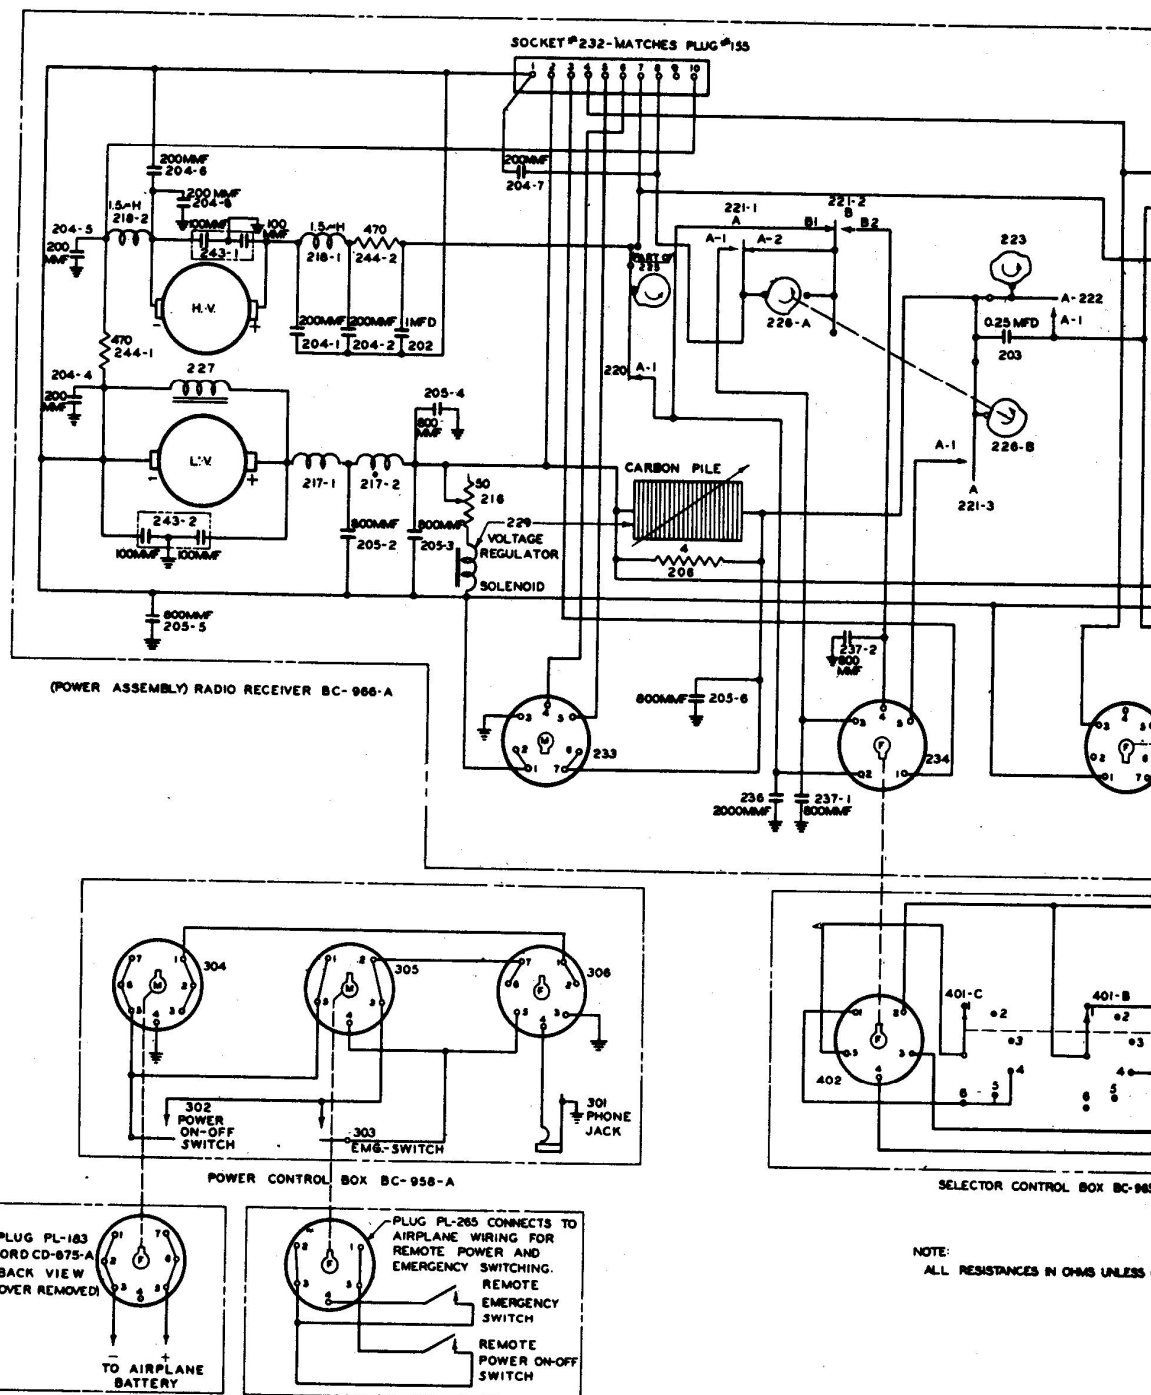
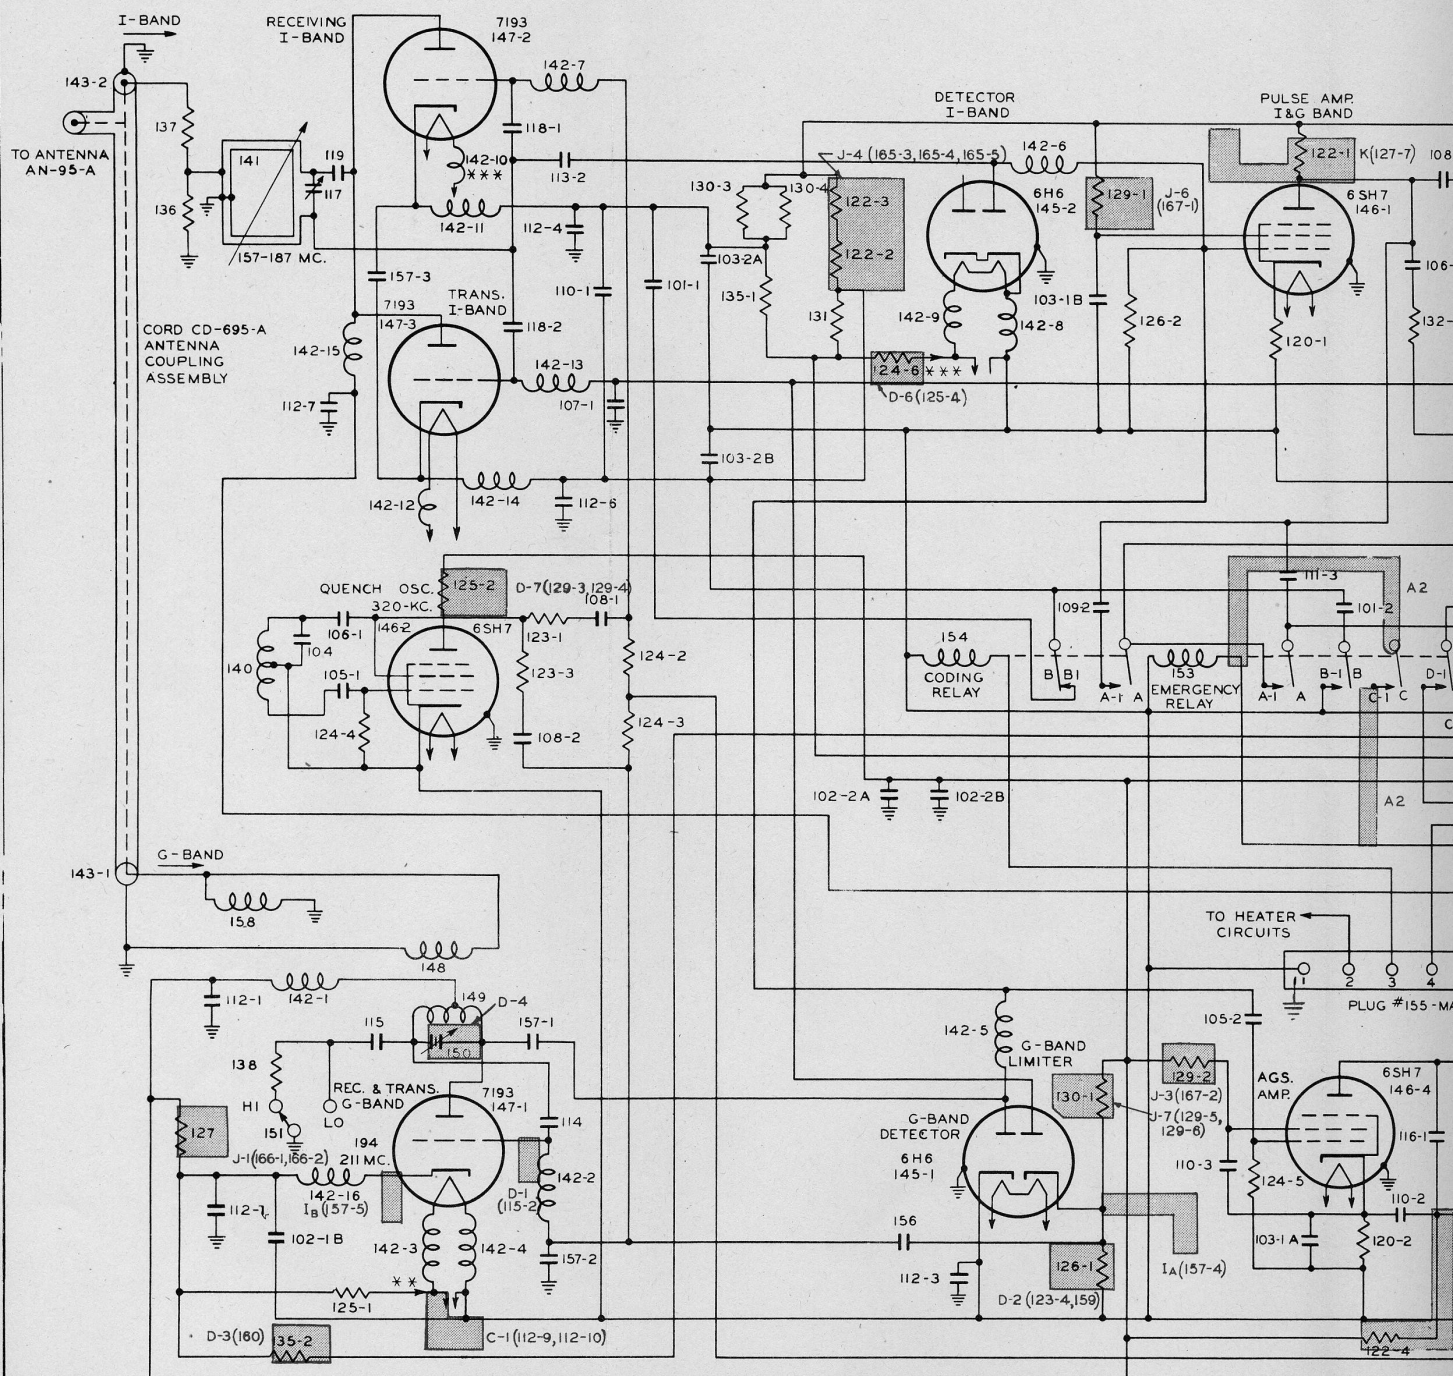


Figure 8-4 — Radio Receiver Inc





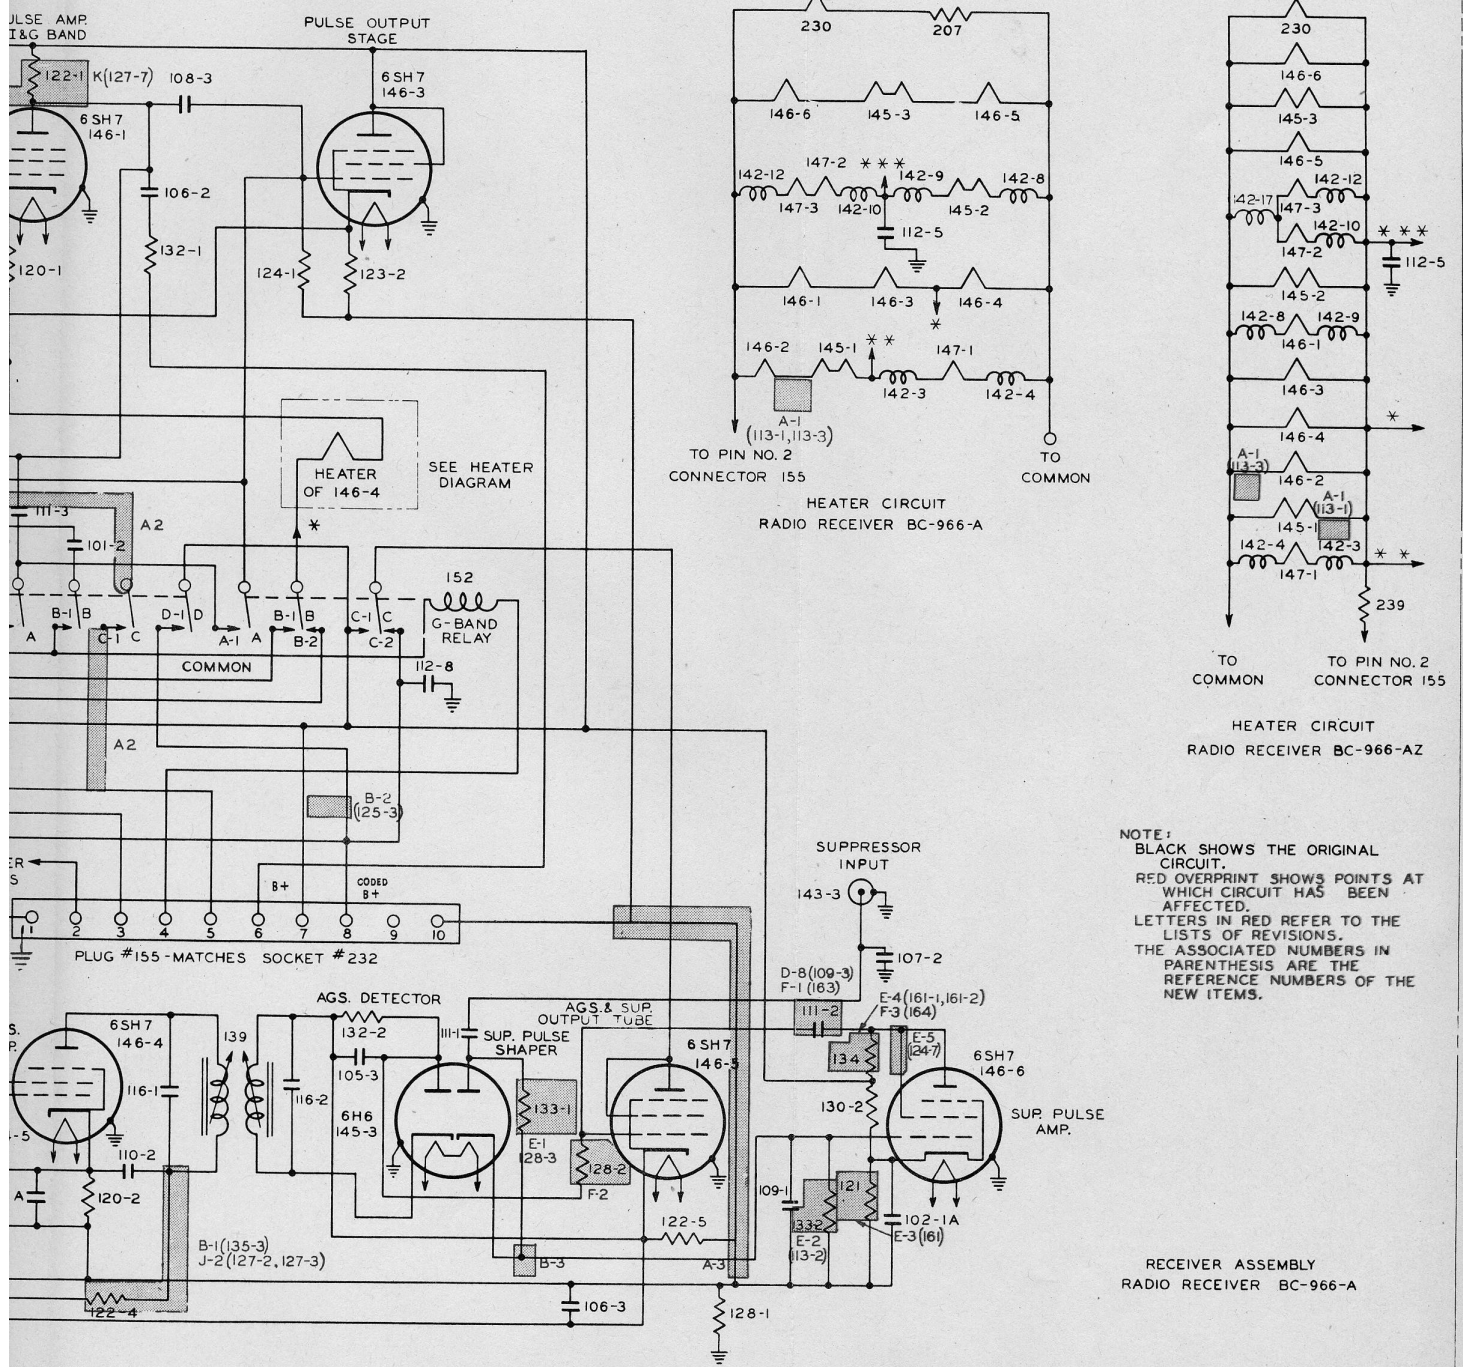


Figure 8-1 — Radio Receiver BC-966-A (Navy 43 ABM), Original Schematic Wiring Diagram of Receiver Section

RESTRICTED

8-3-8-4

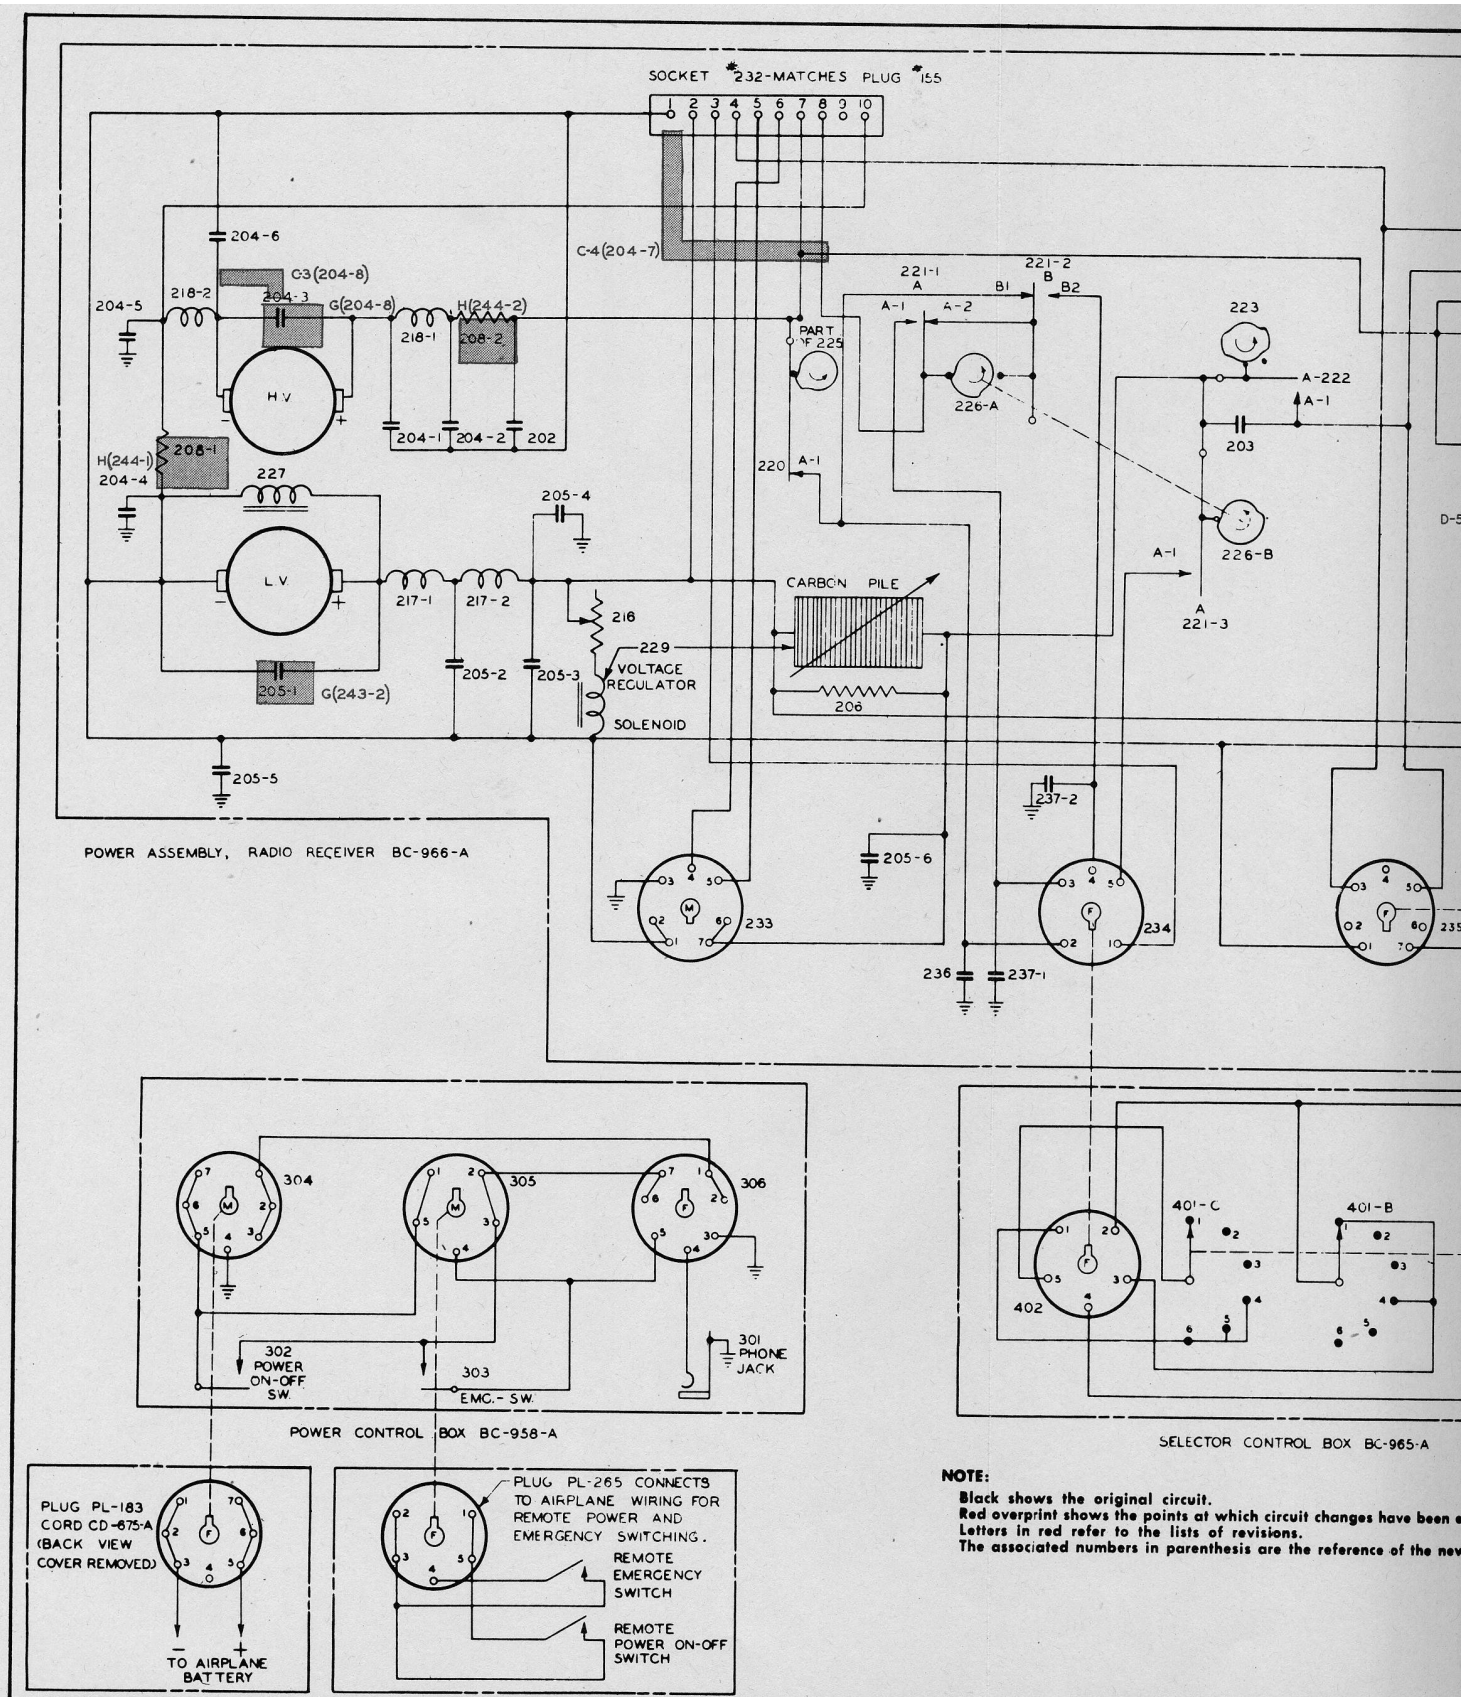


Figure 8-2 — Radio Receiver BC-966-A (Navy 43 ABM)

