

CD Stereo Radio Recorder

Service
Service
Service

AZ1574

all versions



Service Manual



TABLE OF CONTENTS

For repair information, we refer to manual AZ1575 (3140 785 22500), except the following mechanical parts. Please refer to AZ1575 Exploded View Diagram and Mechanical Partslist.

401	3140 117 61030	FRONT PLATE-CASS.ASSY
402	3140 114 38230	ORNAMENTAL PLATE
403	3140 114 38300	FRONT-PLATE
404	3140 117 61250	FRONT PANEL ASSY (FOR -/00)
404	3140 117 61020	FRONT PANEL ASSY (FOR -/17)
407	3140 117 60990	FRONT CABINET ASS'Y
423	3140 117 61010	TOP CAB. ASS'Y
424	3140 114 38270	KNOB-MODE
432	3140 114 38260	KNOB-VOLUME
436	3140 114 38240	DOOR-CD
437	3140 117 61110	HANDLE ASSY
439	3140 117 61040	REAR CABINET ASSY
446	3140 114 38280	DOOR-BATTERY
	3140 115 28460	INSTR MANUAL (FOR -/00)
	3140 115 28390	INSTR MANUAL (FOR -/17)

Safety regulations require that the set be restored to its original condition and that parts which are identical with those specified be used.

© Copyright 1995 Philips Consumer Electronics B.V. Eindhoven, The Netherlands
All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted, in any form or by any means, electronic, mechanical, photocopying, or otherwise without the prior permission of Philips.

**CLASS 1
LASER PRODUCT**



PHILIPS