

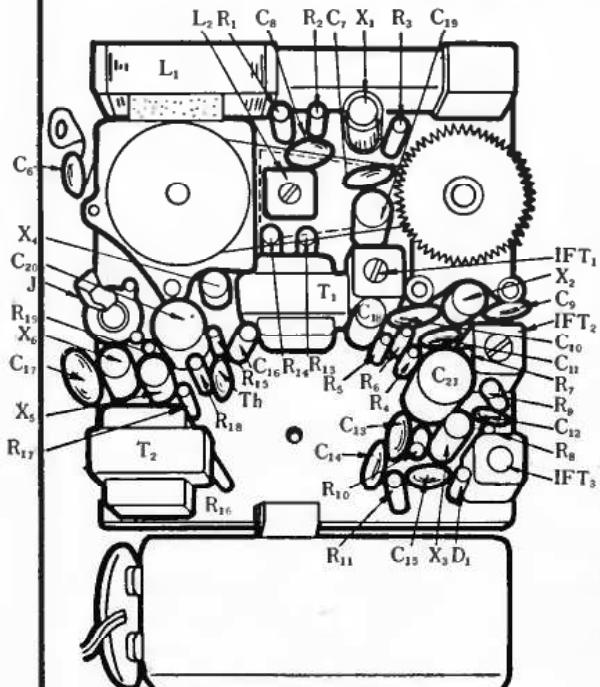


**SONY**

**TR - 620**

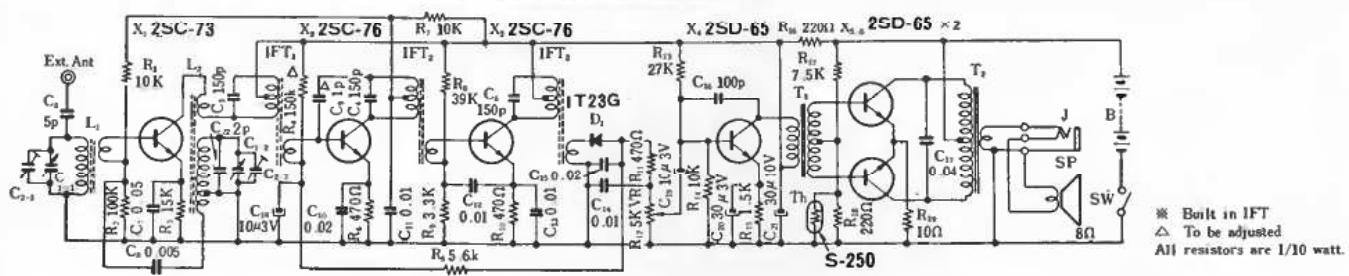

Mounting of TR-620

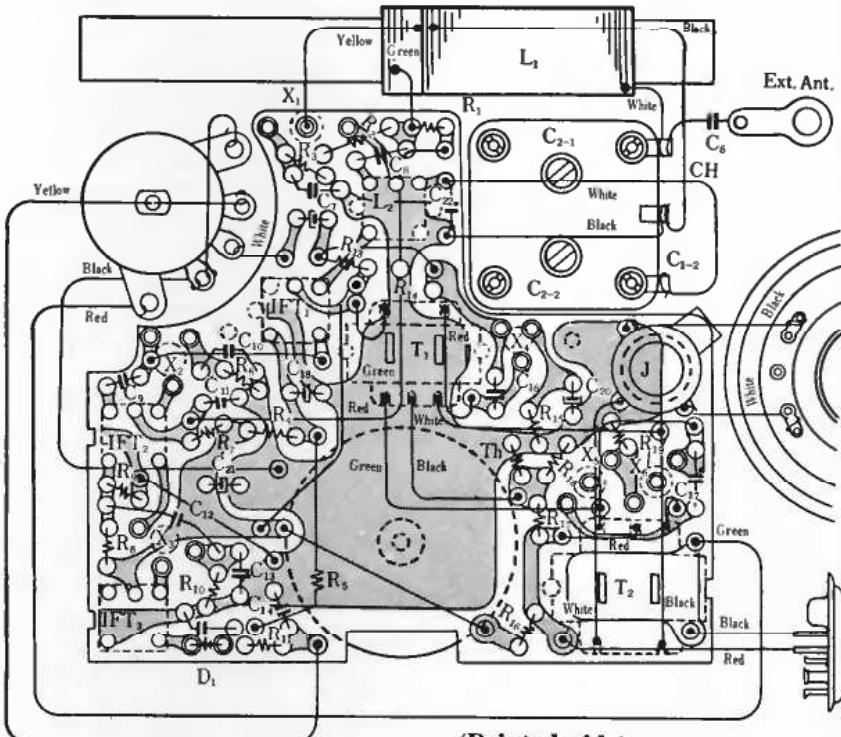

(Printed side)

#### Adjustment

- 1) Lower limit: 520 kc Adjust L<sub>2</sub>
- Upper limit: 1680 kc " C<sub>2-2</sub>

#### 2) Tracking adjustment

##### Checking point

- |         |        |                  |
|---------|--------|------------------|
| 620 kc  | Adjust | L <sub>1</sub>   |
| 1400 kc | "      | C <sub>2-1</sub> |

**Covering range:** 535~1605 kc

**IF frequency:** 455 kc

**Current drain:** 6 mA at 0 signal

**Speaker:** 2 1/4" PM dynamic (8 Ω)

#### Voltage & current distribution

	Collector current	Emitter voltage
X <sub>1</sub>	190~250 μA	2.85~3.75 V
X <sub>2</sub>	310~390 μA	0.145~0.18 V
X <sub>3</sub>	550~680 μA	0.26~0.32 V
X <sub>4</sub>	1.1~1.4 mA	1.65~2.1 V
X <sub>5</sub>	0.8~1.5 mA for 2	0.008~0.015 V
X <sub>6</sub>		

(Current drain at 0 signal: Approx. 6 mA)

#### How to remove the cabinet

- 1) Loosen and remove Philips screw on the back cover.
- 2) Loosen and remove Philips screw on the right below the tuning condenser.
- 3) Loosen and remove Philips screw on the left below the volume control.
- 4) Dismount external aerial jack.