

2-3. FRONT PANEL REMOVAL

1. Remove the three TUNING knobs and the CALIBRATOR knob by loosening their set-screws.
2. Pull out the five control knobs marked in Fig. 2-2.
3. Remove the six screws marked H and remove the main panel and the sub-panel.

2-4. SPEAKER REMOVAL

1. Remove the rear cover and battery case.
2. Remove the three truss head screws marked in Fig. 2-3.
3. Now, baffle board and two speakers are removable as shown in Fig. 2-3.

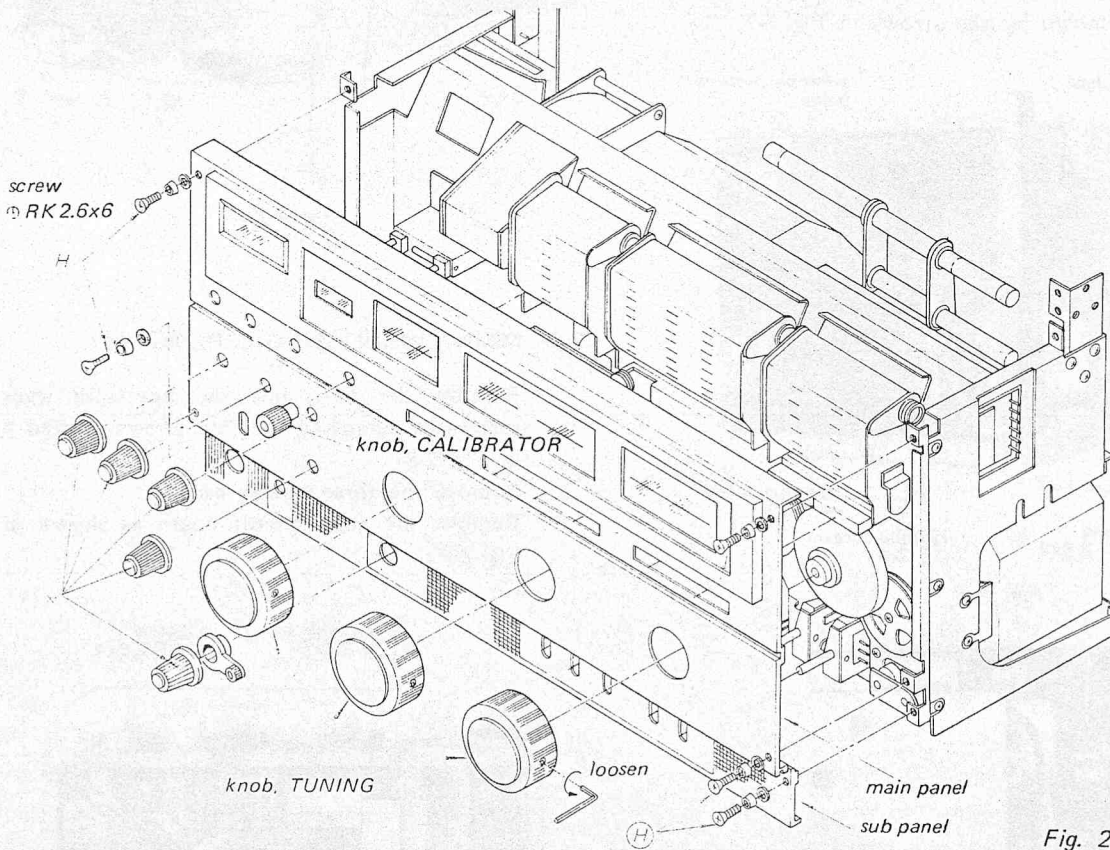


Fig. 2-2

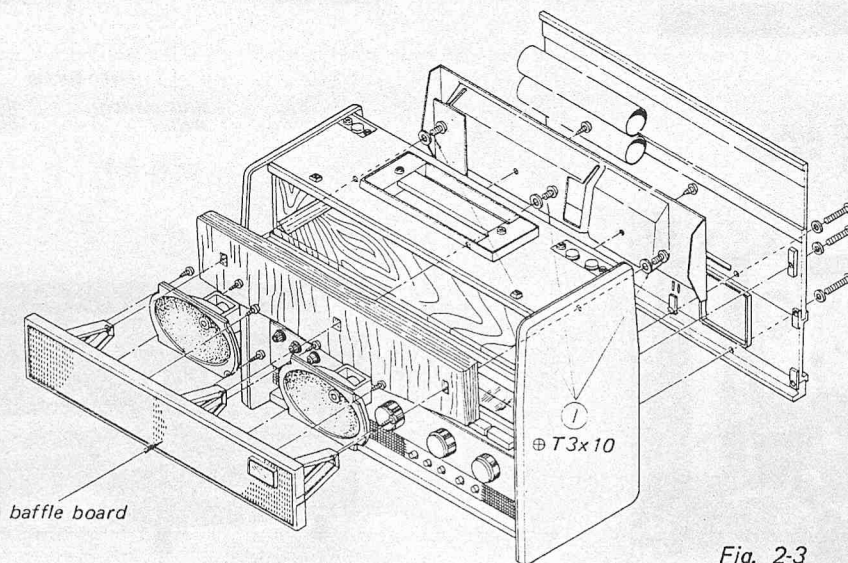


Fig. 2-3