

| Adjusting                | Rf Signal Generator Frequency | Receiver Tuning Knob Setting | Adjust  | Remarks                                   |
|--------------------------|-------------------------------|------------------------------|---|---|
| SW 19 Frequency Coverage | 29.2 MHz                      | Fully counterclockwise       | SW 19 osc coil L341                             | Band Selector: SW 19                      |
| SW 19 Tracking           | 29.7 MHz                      | Tune to 29.7 MHz signal      | SW 19 ant trimmer CT321, SW 19 rf trimmer CT339 | Adjust for maximum meter reading on VTVM. |

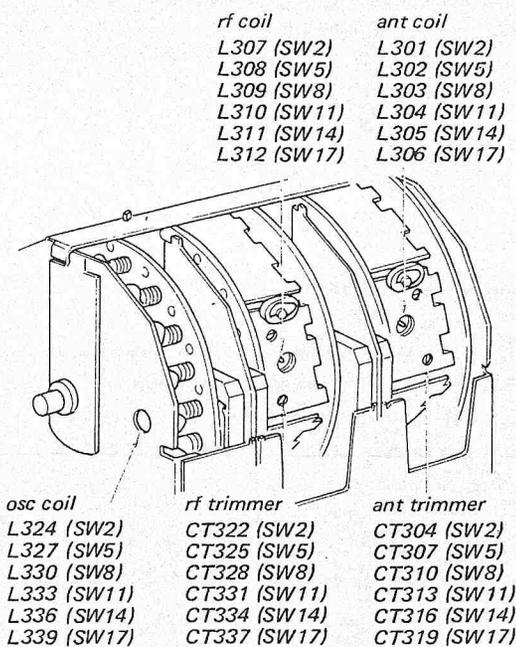


Fig. 3-16 Adjusting parts location for SW2, SW5, SW8, SW11, SW14 and SW17

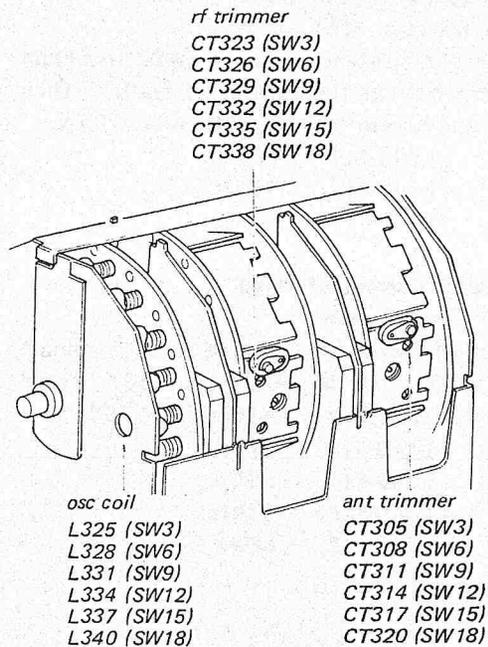


Fig. 3-17 Adjusting parts location for SW3, SW6, SW9, SW12, SW15 and SW18

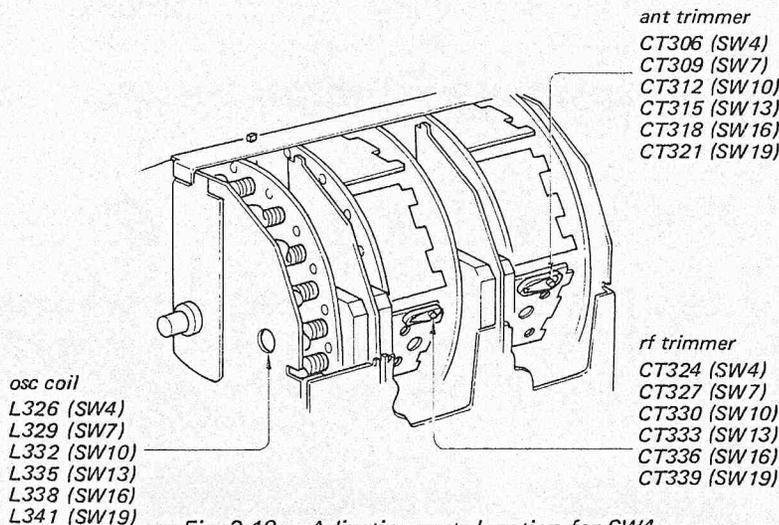


Fig. 3-18 Adjusting parts location for SW4, SW7, SW10, SW13, SW16 and SW19