


Universal-Schalter

Schalter	A	B	C	D
Druckknopf-Betrieb	X	X	X	X
Hand-Betrieb	X	X	X	X

Schalter	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27
Kurz I	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Kurz II	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Mittel	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Lang	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X

ZF=468/4,70 KHz

Schalter	I	II	III	IV	V
TA	X	X	X	X	X
Schmal	X	X	X	X	X
Normal	X	X	X	X	X
Breit	X	X	X	X	X
Nach	X	X	X	X	X

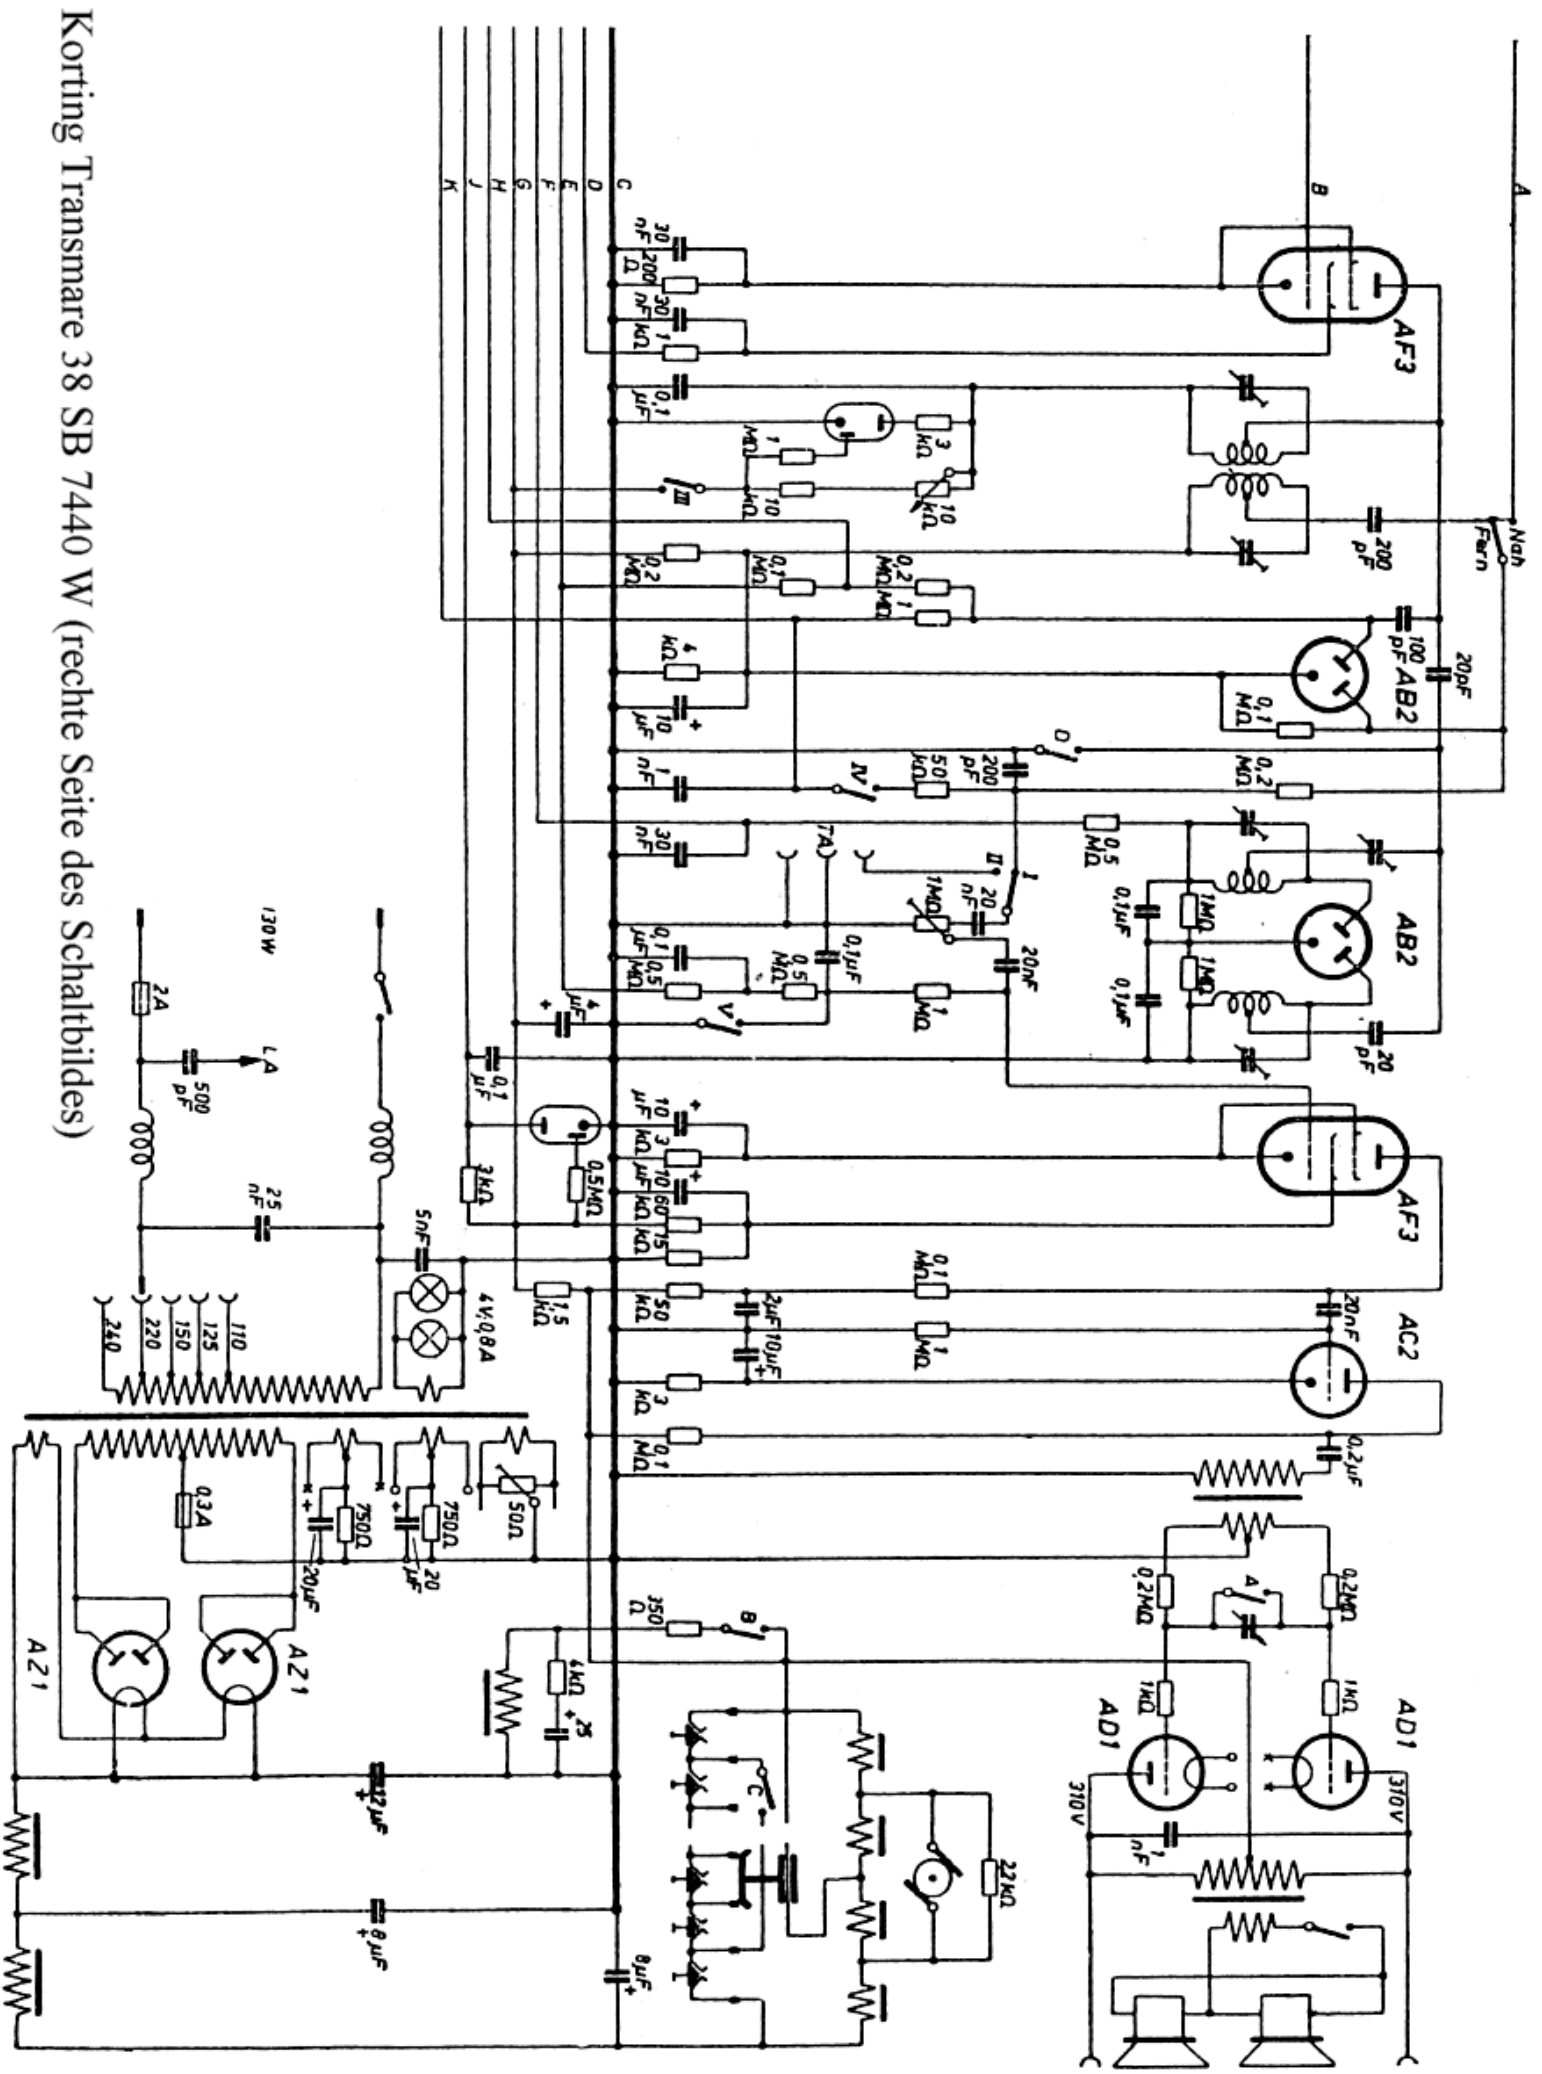

Korting Transmare 38 SB 7440 W (rechte Seite des Schaltbildes)