


BX670V

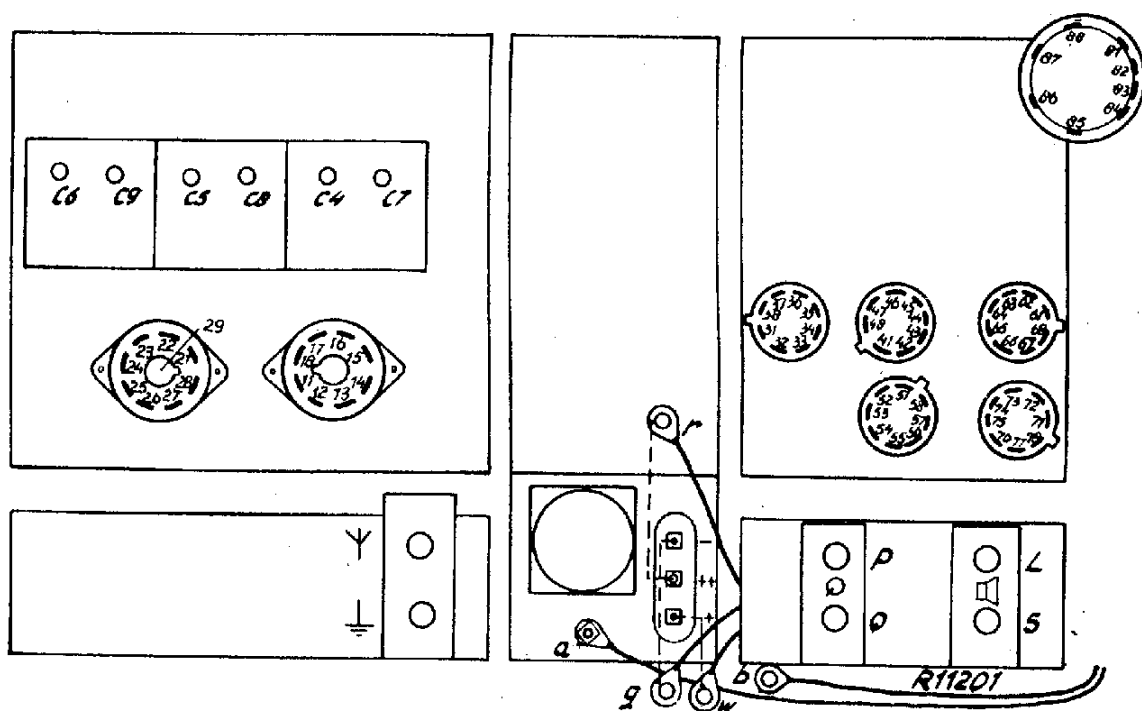

R																		
9	16	26	33	35	36	42	45	46	53	55	56	P*	66/9	67/9	85	86	88	
	50	39	236	395	85	390	315	95	105	315	110	175	167	167	140	85	140	
10	12	13	22	23	24	25	27	52										
	315	96	415	280	155	225	155	85										
11	14	17	29	32	44	47	54	57	62	72	Y C7							
	310	310	240	390	370	370	370	370	320	320	175/50/155 1560/155 350 50							
12	18	28	31	34	37	43	48	58	63	65	67	68	73	75	77	78	83	84
	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
12	57	Q	L	+	S	Y				C5		C8		C4		C7		
	0	0	25	280	0	13/19	10/31	30/57	50/195	50/195	175/560	19/31	30/51	50/195	175/560	19/31		
C																		
9																		
10																		
11																		
12																		

De groene verbinding "g", de grijze "w" en de zwarte "b" losnemen. De rode verbinding "r" van het aansluitingspunt "++" losnemen en verbinden met het chassis.

Kwaliteitschakelaar in stand 3-

Volumeregelaar op maximum-

Gramofoonschakelaar in stand "Radio"

*

Voor het meten van punt "P" gramofoonschakelaar in stand "Gramfoon".

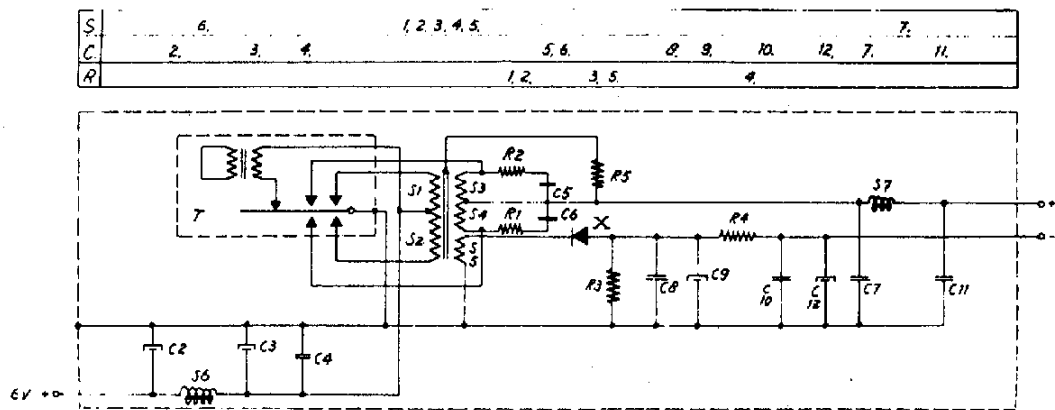


Fig. 12


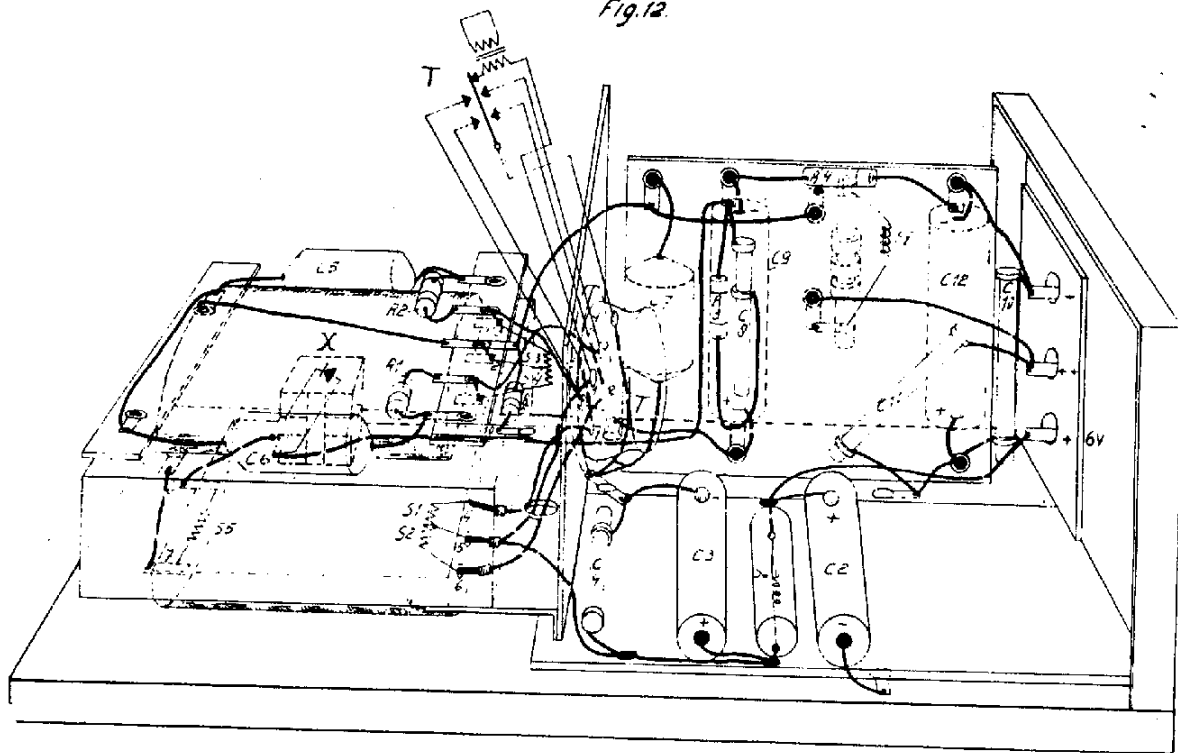



Fig. 13

R11205

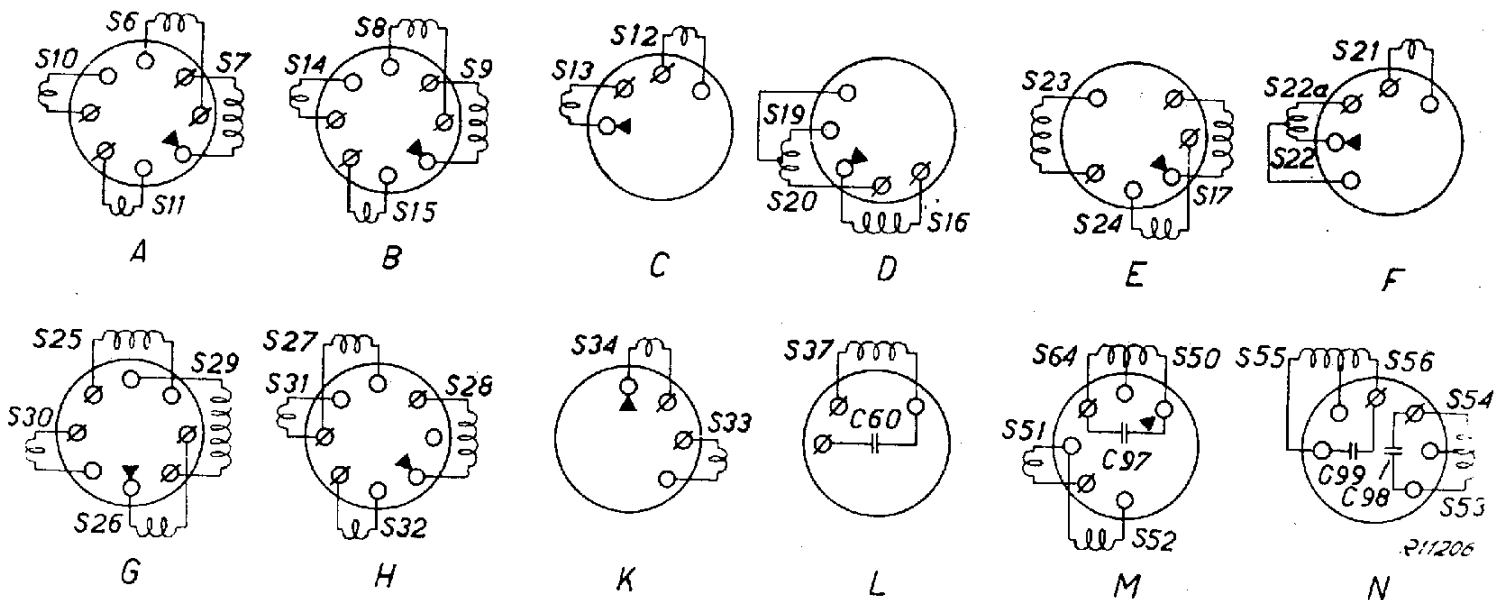

R11206

BX670V

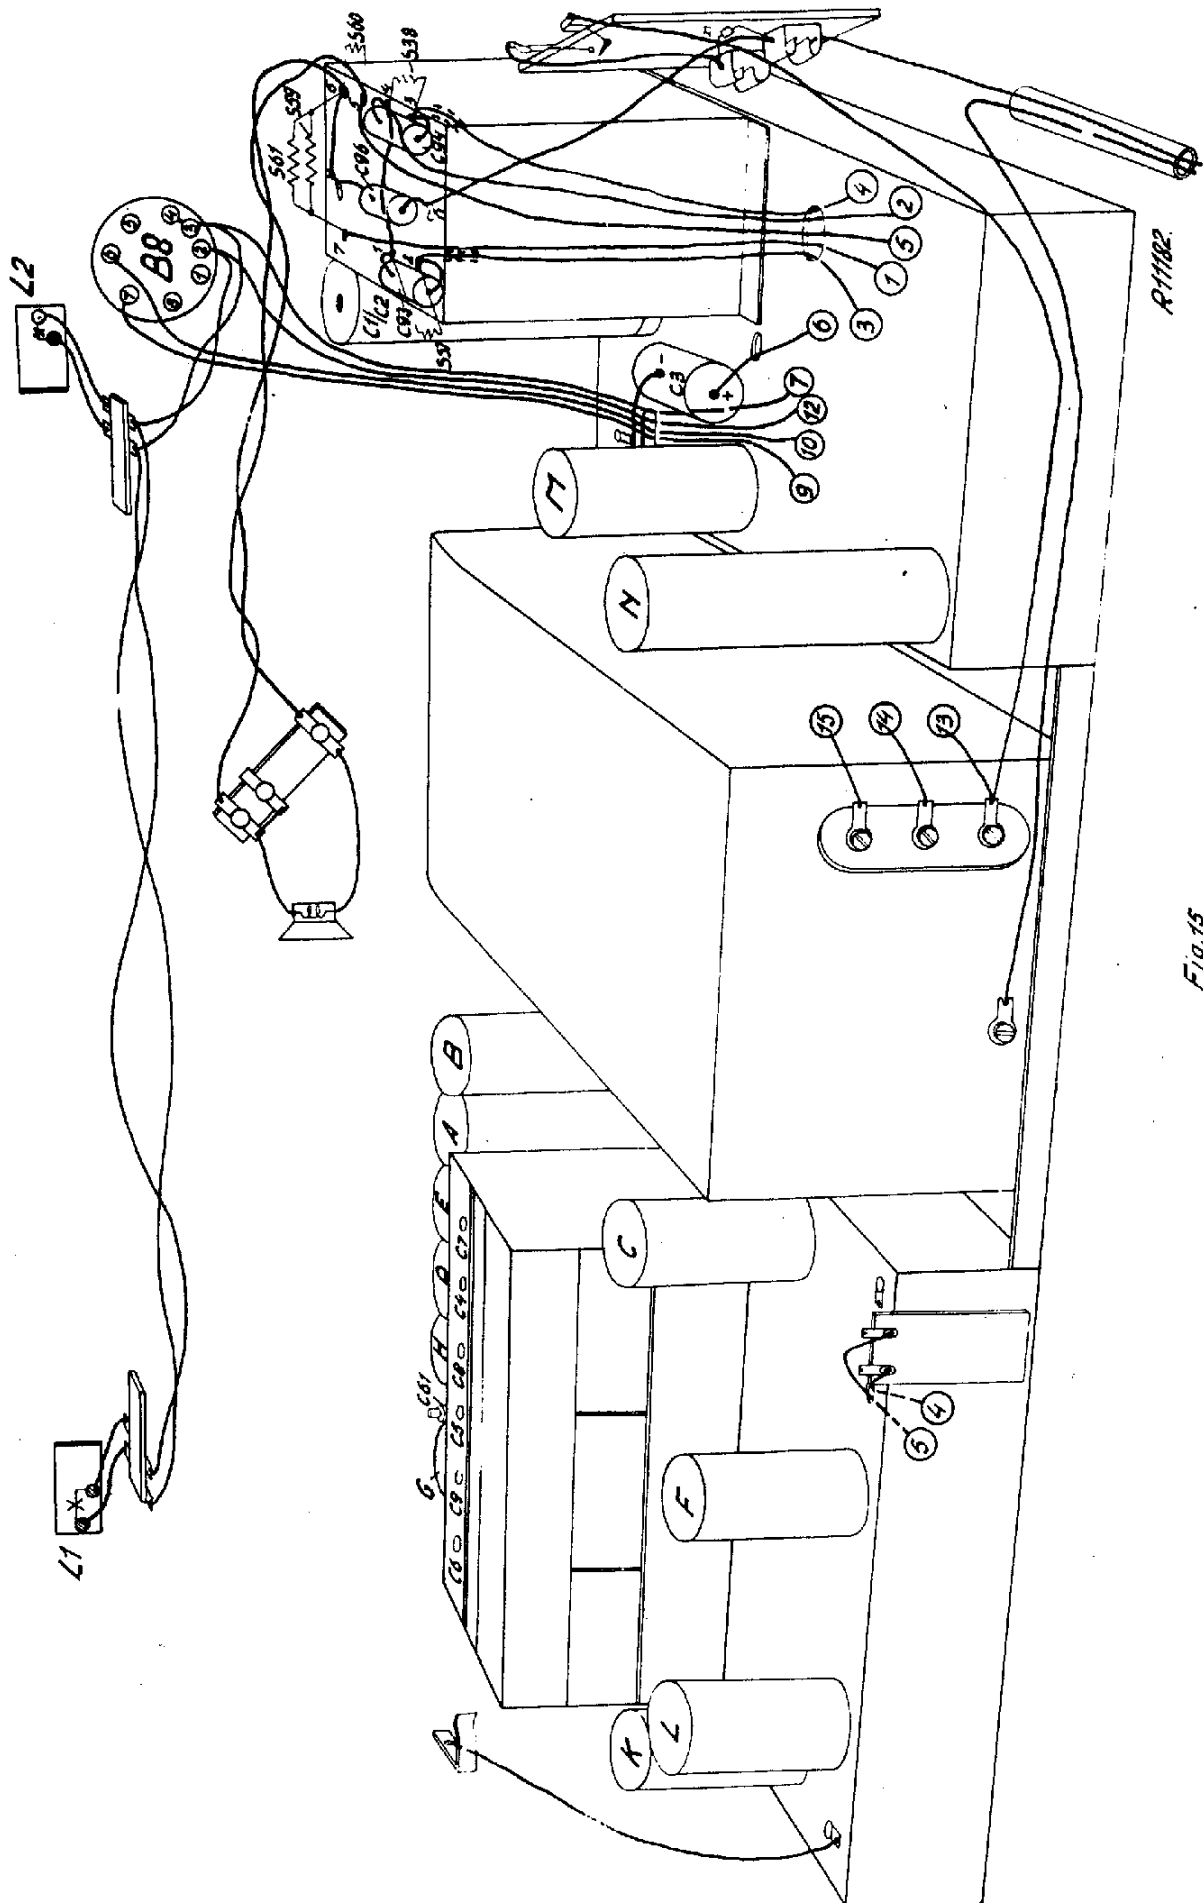

BX670V

S:	6, 7, 8, 9, 10, 11, 12, 13, 14, 15	35	19, 21, 23, 16, 17	20, 22, 24, 22a	36, 25, 27, 29, 31, 33, 26, 28, 30, 32, 34	37	50, 51, 52, 64
C:	64, 66, 29, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 21, 7, 4, 20, 22, 24, 23, 25	26, 27, 28, 32, 33, 34, 35, 36, 37, 62, 63, 5, 58, 39, 40, 38, 41, 42, 43, 44	58, 47, 48, 49, 50, 51, 52, 53, 54, 55, 56, 57, 9, 6, 59, 61, 60, 67, 68				
R:	5	6, 8, 9, 10	11, 12	15, 16, 17, 18	18, 19	7	

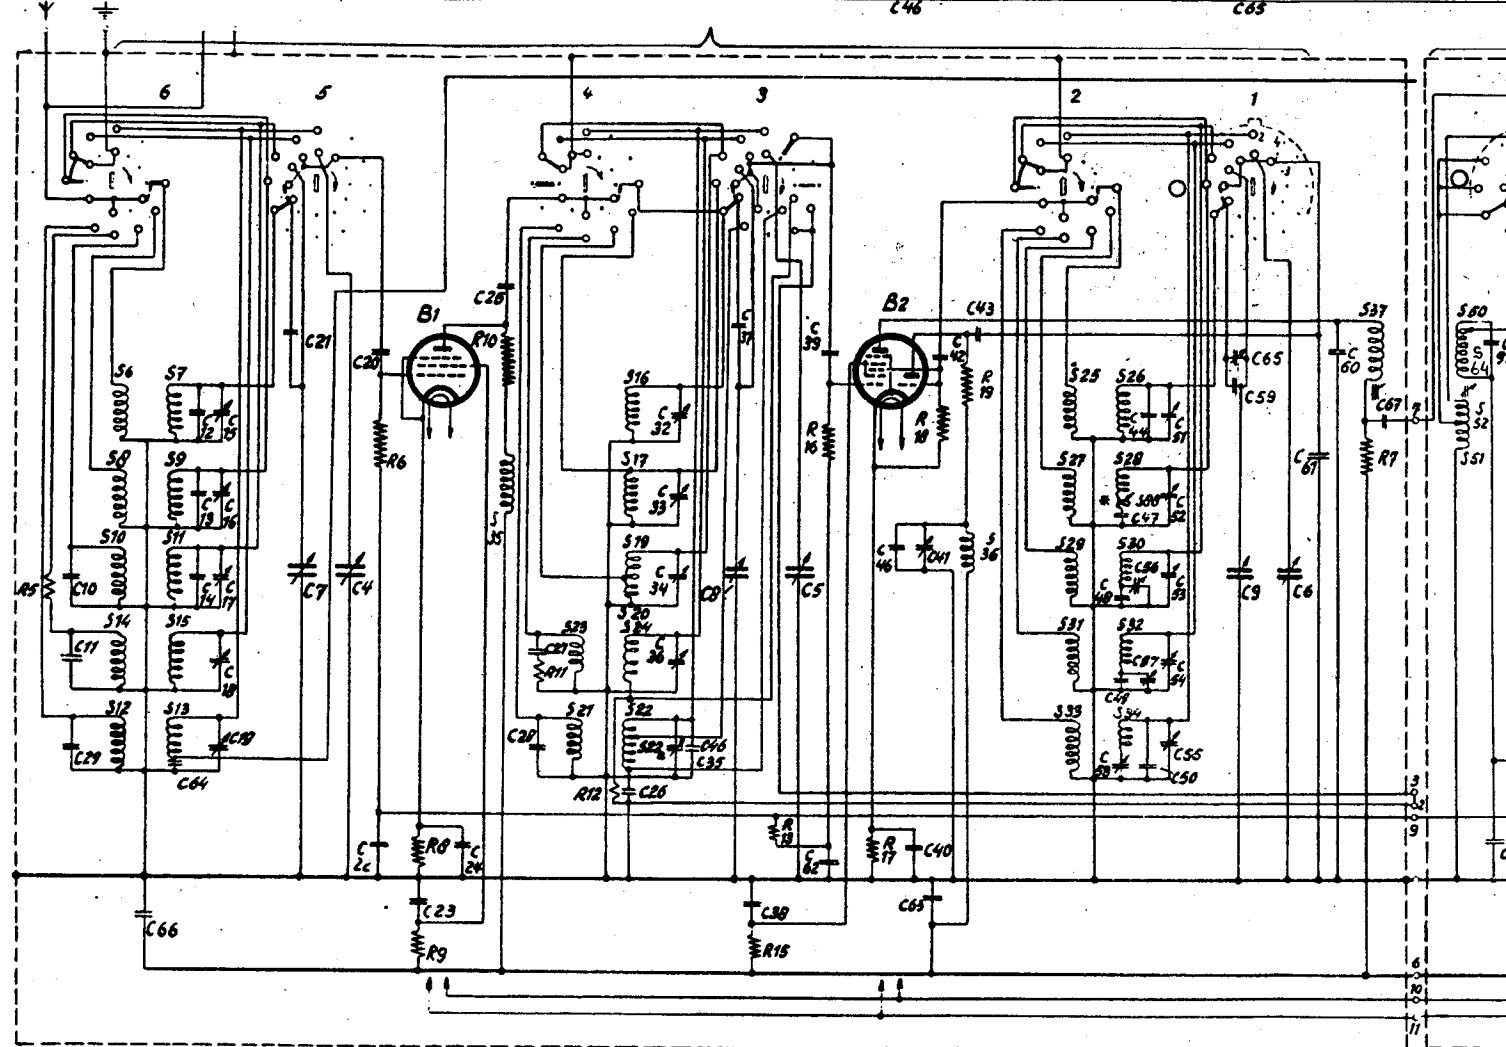


Fig. 16.

