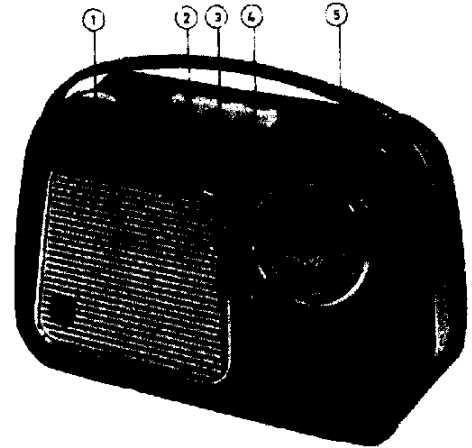


SERVICE NOTES**RADIO****L3X01T/00C/00G/00S**

R 197 74

<u>Controls</u>		<u>Bediening</u>	<u>Bedienung</u>	<u>Commande</u>		<u>Organos de mando</u>
From left to right		Van links naar rechts	Von links nach rechts	De gauche à droite		De izquierda a derecha
Volume control	1	Volume regelaar	Laustärkereglér	Contrôle de volume	1	Control de volume.
Battery switch	2	Batterijschakelaar	Batterieschalter	Comm. de batterie	2	Comm. para pila
Tone switch (high)	3	Toonschakelaar (hoog)	Tonschalter (hell)	Comm. de tonalité(aigues)	3	Comm de tono (agudos)
Tone switch (low)	4	Toonschakelaar (laag)	Tonschalter (dunkel)	Comm. de tonalité(graves)	4	Comm. de tono (bajos)
Tuning	5	Afstemming	Abstimmung	Syntonisation	5	Sintonía

<u>Specification</u>		<u>Specificatie</u>	<u>Spezifikation</u>	<u>Specification</u>		<u>Especificación</u>
Loudspeaker	LD 341 WZ/45	Luidspreker	Lautsprecher	Haut-parleur	LD 341 WZ/45	Altavoz
I.F.	452 Kc/s	M.F.	Z.F.	M.F.	452 Kc/s	F.I.
Battery voltage	9V (2x4,5 V)	Batterijspanning	Batteriespannung	Tens. de batterie	9 V(2x4,5 V)	Tens. de pila
Consumtion (with- out signal)	28 mA	Verbruik (zon- der signaal)	Verbrauch (ohne Signal)	Consommation (sans signal)	28 mA	Consumo (sin señal)
Dimensions	235x165x80 mm 9 $\frac{1}{4}$ "x6 $\frac{1}{2}$ "x3 $\frac{1}{8}$ "	Afmetingen	Abmessungen	Dimensions	235x165x80 mm 9 $\frac{1}{4}$ "x6 $\frac{1}{2}$ "x3 $\frac{1}{8}$ "	Dimensiones

Wave ranges - Golfbereiken - Wellenbereiche - Gammes d'ondes - Margen de ondas

M.W. - M.G. - M.W. - P.O. - O.N. : 185 - 580 m (1622 - 517 Kc/s)

Transistors - Transistoren - Transistoren - Transistors - Transistores

TS 1 - OC 44	X 1 - OA 85	TS 2 - OC 45	TS 3 - OC 45
TS 4 - OC 71	X 2 - OA 79	TS 5 - OC 71	TS 6, 7 - OC 45

SERVICE INFORMATION										
------------------------	--	--	--	--	--	--	--	--	--	--



Serv.-0.-Mecum E.-a.-1	Varco Varco Drehkondensator Condensateur variable Condensador variable	Signal Signaal Signal Signal Señal	Adjust to max. output Afregelen op max. uitgangsspanning Abgleichen auf max. Ausgangsspannung Régler au max. de sortie Ajustense al máx. de salida
I.P.-M.P.-Z.F.-M.P.-F.I.	max.	460 Kc/s to C1	S15, S12, S9, S7
R.F. circuits H.F.-kringen H.F.-Kreise Circuits H.F. Circuitos de R.F.	510 Kc/s	± 510 Kc/s	S4
	1620 Kc/s	± 1620 Kc/s	C4
	545 Kc/s	± 545 Kc/s	S1
	1400 Kc/s	± 1400 Kc/s	C3

- * The signals are applied to the ferroceptor by means of a couple winding.
- * De signalen worden d.m.v. een koppelwikkeling aan de ferroceptor toegevoerd.
- * Die Signale werden mittels einer Kopplungswicklung dem Ferroceptor zugeführt.
- * Les signaux sont appliqués au ferrocepteur au moyen d'un enroulement de couplage
- * Las señales se aplican al ferroceptor por medio de un arrollamiento de acaplo.

Cabinet OOC (grey)	JR 004 62	Kast OOC (grijs)	Gehäuse OOC (grün)	Coffret OOC (gris)	JR 004 62	Caja OOC (gris)
Cabinet OOC (brown)	JR 004 63	Kast OOC (bruin)	Gehäuse OOC (braun)	Coffret OOC (brun)	JR 004 63	Caja OOC (marrón)
Cabinet OOC (green)	JR 004 82	Kast OOC (groen)	Gehäuse OOC (grün)	Coffret OOC (vert)	JR 004 82	Caja OOC (verde)
Battery holder	JR 336 50	Batterijhouder	Batteriehalter	Porte-pile	JR 336 50	Porte-pila
Knob (tuning)	JR 656 76	Knop (afstemming)	Knopf (Abstimmung)	Bouton (syntonisation)	JR 656 76	Botón
Spring fix. tuning knob	JR 652 46	Veer, bev. afstemknop	Feder, Bef. Knopf (Abst.)	Resort, fix. bouton (aynt.)	JR 652 46	Resorte (fijación asa)
Ornamental strip around grid	JR 664 33	Sierstrand om luidspreker-rooster	Zierfenster um Lautsprecher-gitter	Fenêtre enjoliveuse autour grille	JR 664 33	Borde ornamental alrededor rejilla de altavoz
Ornamental strip around push buttons	JR 670 28	Sierstrand om drukknoppen	Zierfenster um Druckknopf	Fenêtre enjoliveuse autour touches	JR 670 28	Borde ornamental alrededor pulsador
Loudspeaker grid OOC version	JR 302 91	Luidsprekerrooster OOC	Lautsprechergitter OOC	Grille pour haut-parleur OOC	JR 302 91	Rejilla de altavoz OOC
Loudspeaker grill OOC-OOS	JR 302 92	Luidsprekerrooster OOC-OOS	Lautsprechergitter OOC-OOS	Grille pour haut-parleur OOC-OOS	JR 302 92	Rejilla de altavoz
Bracket fix. handle	JR 549 80	Beugel bev. handvat	Bügel Bef. Handgriff	Equerre fix. poignée	JR 549 80	Abrazadera (fij. asa)
Foot	JR 320 52	Pootje	Fuss	Pied	JR 320 52	Pie
Push button unit	JR 347 18	Drukknop eenheid	Druckkastenschalter	Unité de touches-pousadms	JR 347 18	Unidad de pulsador
Push button on-off	JR 327 23	Drukknop aan-uit	Drucktaste ein-aus	Touche-poussoire (en-hors circuit)	JR 327 23	Pulsador (conectado-desconectado)
Push button treble	JR 327 25	Drukknop hoge tonen	Drucktaste hell	Touche-poussoire (haute)	JR 327 24	Pulsador (agudo)
Push button bass	JR 327 25	Drukknop lage tonen	Drucktaste dunkel	Touche-poussoire (basse)	JR 327 25	Pulsador (bajos)
Knob, volume control	JR 656 77	Knop, volume regeling	Knopf, Lautstärkereglng	Bouton (contrôle de volume)	JR 656 77	Botón (control de volumen)
Dial	JR 219 68	SchaaI	Skala	Cadran	JR 219 68	Cuadrante
Perrceptor M.W. (S1, S1', S2, S2')	JR 132 56	Staaftentenne M.G.	Ferritstab M.W.	Perrcepteur (S1, S1', S2, S2')	JR 132 56	Ferrocaptor
Choke (S18)	JR 132 37	H.F. smoorspoel	H.F.-Drossel	Self (18)	JR 132 37	Choque de A.F.
Oscillator coil M.W. (3, S4)	JR 122 09	Oscillatorspoel M.G.	Oscillatorspule M.W.	Bobine d'oscillateur (S3, S4)	JR 122 09	Bobina de oscilador de O.M.
1st. I.F. band pass filter (S7)	JR 121 95	1e. M.F. bandfilter	Z.F.-Filter 1.	1er filtre pass-bande (S7)	JR 121 95	Filtro de F.I. 1
2nd I.F. band pass filter (S9, S10)	JR 121 96	2e M.F. bandfilter	Z.F.-Filter 2.	2me filtre pass-band de M.F. (S9, S10)	JR 121 96	Filtro de F.I. 2
3rd I.F. band pass filter (S12, S13)	JR 121 96	3e M.F. bandfilter	Z.F.-Filter 3.	3me filtre pass-band de M.F. (S12, S13)	JR 121 96	Filtro de F.I. 3
4th I.F. band pass filter (S15, S16)	JR 122 10	4e M.F. bandfilter	Z.F.-Filter 4	4me filtre pass-band de M.F. (S15, S16)	JR 122 10	Filtro de F.I. 4
Choke (S17)	JR 132 61	H.F. smoorspoel	Drossel	Self (S17)	JR 132 61	Choque de A.F.
Driver transformer (S18, S19, S20)	JR 161 28	Ingangstrafa	Treibertrafo	Transformateur de comande (S18, S19, S20)	JR 161 28	Transformador de entrada

C 29	909/W10	C 32	909/W1000	C 35	909/U2
C 30	909/U2	C 33	909/W100	R 7	JR 377 37
C 31	C 426 AM/A32	C 34	909/W100	R 28	JR 376 88
C 28	909/W10				

JH/KP

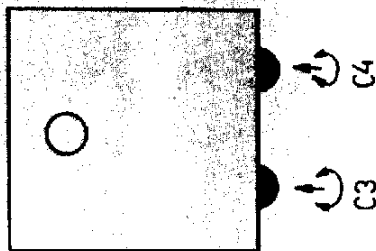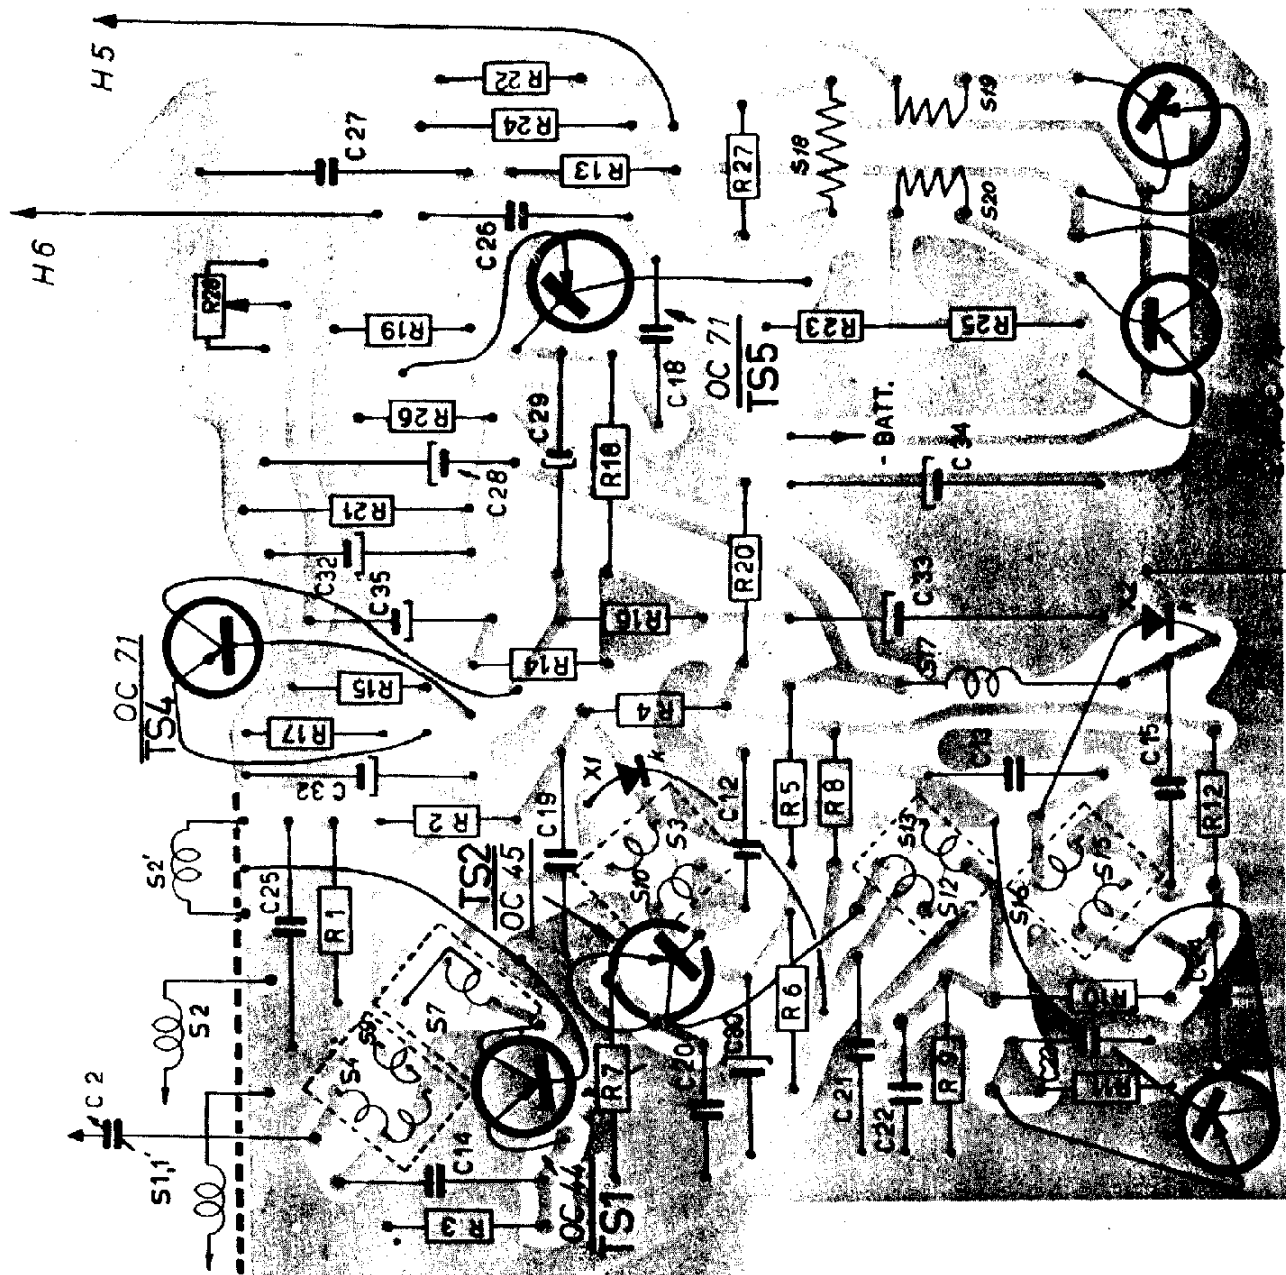






OC 45
TS3

2 x OC 74
TS6,7

R197 30

R:	1.	2.	3.	4.	5.	6.	7.	8.	9.	10.	11.	12.
C:	33. 31.	19.	25.	5 14.	2.10.4. 7. 16.	30.	8.12.20.21.	22.	23.	9. 13.		
S:	18. 2.	1.1'.	2'.	3. 4.	9. 10.	30.	12. 13.				15. 16.	

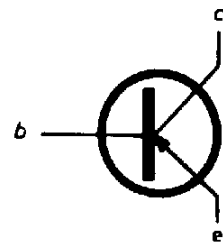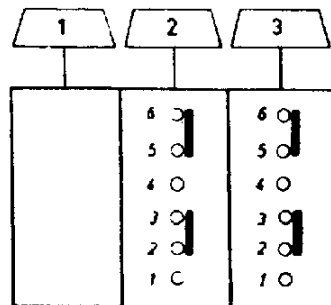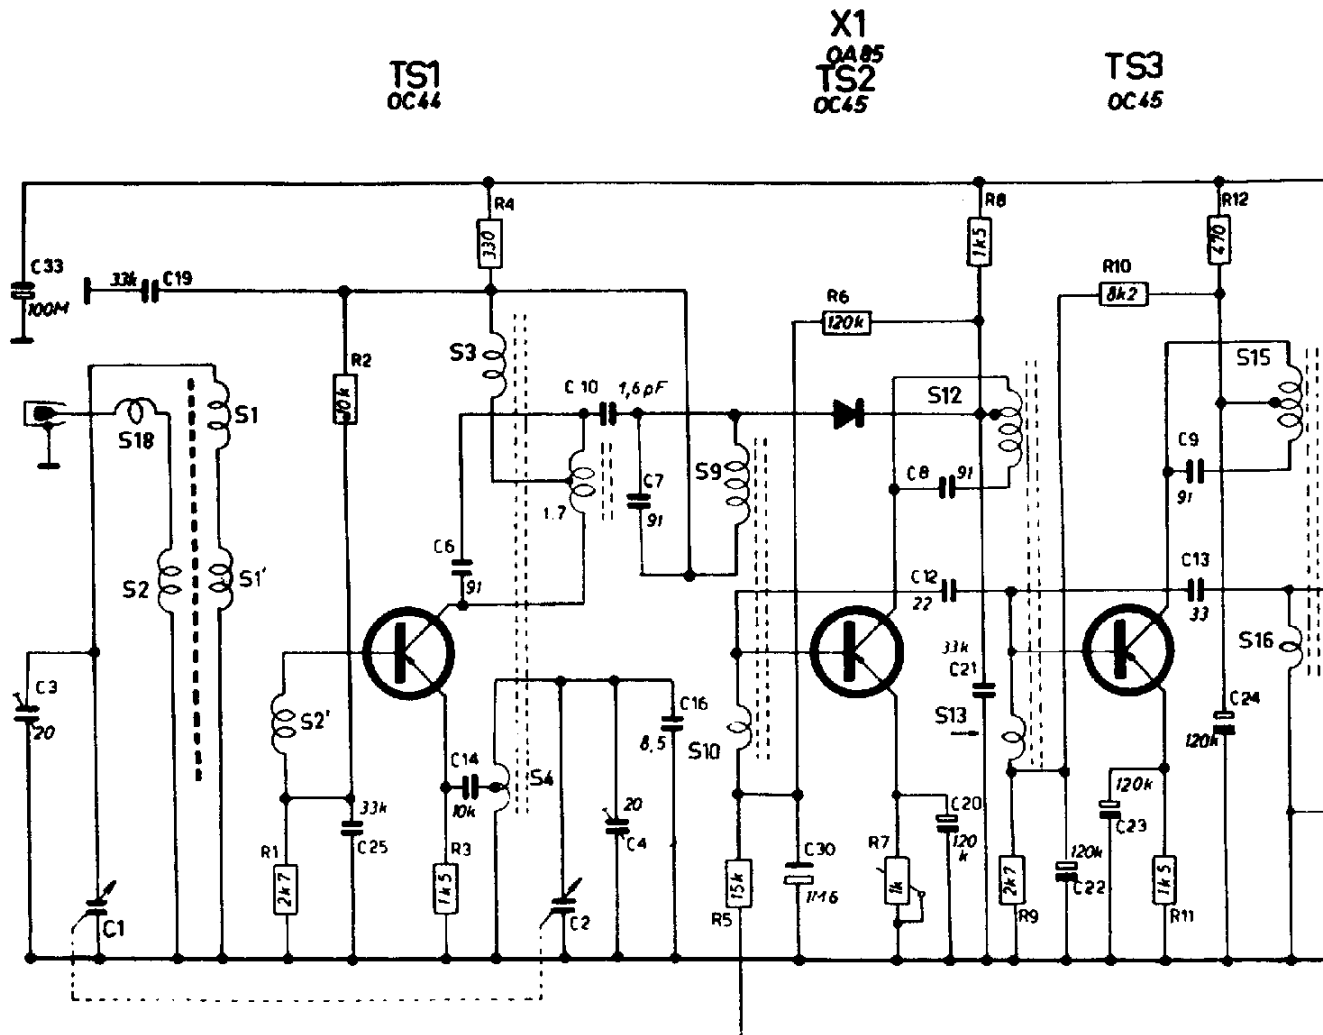

2.	28. 14.	15.	16.17.	18. 19. 20.	27. 26. 21.	22. 24. 23. 25. 13.
3.	15.	35.	29. 31.	18. 32.	27. 26.	34.
15. 16.	17.			18.	19. 20.	

