

Welcher GRUNDIG Stereo-Decoder für welches GRUNDIG Gerät?

Die Decoder-Typen 1, 2, 3 werden im Inland nicht verwendet.

Geräte-Typ	Decoder-Typ					Nach- rüst- bar	eingebaut
	4	5	6	8	10		
A) Stereo-Rundfunk-Tisch-Empfänger							
3070	●	●				●	
3070 M	●	●				●	
3397 St	●	●				●	
3397 St/a	●	●				●	
4070	●	●				●	
4070 M	●	●				●	
4097	●	●				●	
4097 M	●	●				●	
4570			●			●	
5490	●	●				●	
5570			●				●
5590	●	●				●	
RF 155			●				●
RF 160			●			●	
RF 255 St			●				●
RF 265 St				●			●
RF 270				●			●
B) Stereo-Rundfunk-Steuergeräte							
Stereomeister 10	●	●				●	
Stereomeister 15		●					●
Stereomeister 15 H		●					●
Stereomeister 35			●				●
Stereomeister 35 M			●				●
Stereomeister 155				●			●
Stereomeister 300			●				●
Stereomeister 3000			●				●
RT 50							●
RT 40 M							●
RT 100							●
RTV 340					●		●
RTV 350				●			●
RTV 360				●			●
RTV 370						●	●
RTV 380						●	●
RTV 400							●
RTV 600							●
RTV 650							●
Studio 80 A/B							●
Studio 260					●		●
Studio 350				●			●
Studio 360							●
Studio 380						●	●
Studio 400							●
Studio 500/A/B							●
Studio 505/a							●
Studio 600							●
Studio 650							●

Geräte-Typ	Decoder-Typ					nach- rüst- bar	eingebaut
	4	5	6	8	10		
C) Stereo-Musikschrank und HiFi-Stereo-Konzert- schrank							
KS 45	●	●				●	
KS 60 A	●	●				●	
KS 60 B	●	●				●	
KS 60 M	●	●				●	
KS 80	●	●				●	
KS 80 A	●	●				●	
KS 80 B	●	●				●	
KS 400	●	●				●	
KS 440	●	●				●	
KS 445	●	●				●	
KS 450	●	●				●	
KS 460	●	●				●	
KS 490	●	●				●	
KS 520	●	●				●	
KS 530	●	●				●	
KS 540	●	●				●	
KS 550	●	●				●	
KS 555	●	●				●	
KS 560	●	●				●	
KS 565	●	●				●	
KS 570	●	●				●	
KS 580	●	●				●	
KS 590	●	●				●	
KS 620			●			●	
KS 640			●			●	
KS 650			●			●	
KS 660			●			●	
KS 665			●			●	
KS 680 HiFi			●			●	●
KS 690 HiFi			●			●	●
KS 715				●		●	
KS 716				●		●	●
KS 717					●	●	●
KS 720			●			●	●
KS 723				●		●	●
KS 724					●	●	●
KS 730			●			●	●
KS 735				●		●	●
KS 736					●	●	●
KS 740			●			●	●
KS 741				●		●	●
KS 742				●		●	●
KS 750			●			●	●
KS 753				●		●	●
KS 754					●	●	●
KS 772					●	●	●
KS 792					●	●	●
Bergamo St				●		●	●
Bergamo 3					●	●	●
Como c/St,d/St,e St			●			●	●
Como 3					●	●	●
Ehrenfels	●	●				●	
Ehrenfels a			●			●	●
Linderhof	●	●				●	
Linderhof a			●			●	●

Locarno	•	•				•	
Mandello b	•	•				•	
Mandello c/St,d/St,e/St			•			•	
Mandello 3					•	•	
Merano	•	•				•	
Merano 3					•		•
Mozart HiFi							•
Nymphenburg			•				•
Nymphenburg 2/2 a/3					•		•
Rothenfels			•				•
Rothenfels 2/2 a/3					•		•
Rossini 2/3					•		•
Schönbrunn	•	•				•	
Schönbrunn a/HiFi			•				•
Schönbrunn b/HiFi							•
Stolzenfels	•	•				•	
Stolzenfels a/HiFi			•				•
Stolzenfels b/HiFi							•
Trento	•	•				•	
Verdi			•				•
Verdi 2/3					•		•
D) Stereo-Rundfunk-Empfangsteile der Bausteingeräte							
HF 10	•	•				•	
HF 10 L			•			•	
HF 20	•	•				•	
HF 30	•	•				•	
HF 35	•	•				•	
HF 35 L			•			•	
HF 45			•			•	
HF 260					•		•
HF 300			•			•	
HF 350				•			•
HF 500							•
HF 500 FET							•
HF 550							•
E) Stereo-Reisesuper Stereo-Concert-Boy 208/210							
							•
F) Fernseh-Rundfunk-Kombinationen und Fernseh-Stereo-Rundfunk-Musikschränke							
300 K 10	•	•				•	
300 K 10 B	•	•				•	
300 K 20	•	•				•	
300 K 40	•	•				•	
300 K 40 A	•	•				•	
300 K 40 B	•	•				•	
300 K 50	•	•				•	
400 K 20	•	•				•	
K 360	•	•				•	
K 410	•	•				•	
K 440	•	•				•	

K 450	•	•				•	
K 460	•	•				•	
K 600			•			•	
K 700			•			•	
K 710			•			•	
65 K 10	•	•				•	
65 K 50		•					•
Diadem 25			•				•
Mosaik			•				•
Mosaik electronic							•
Falkenstein	•	•				•	
Falkenstein a		•					•
Falkenstein b			•				•
Greifenstein a		•					•
Greifenstein b			•				•
Greifenstein electronic							•
Luisenburg	•	•				•	
Luisenburg a		•					•
Luisenburg b			•				•
Marienburg	•	•				•	
Marienburg a		•					•
Marienburg b			•				•
Marienburg electronic							•

Kostenloser Download von www.raupenhaus.de