



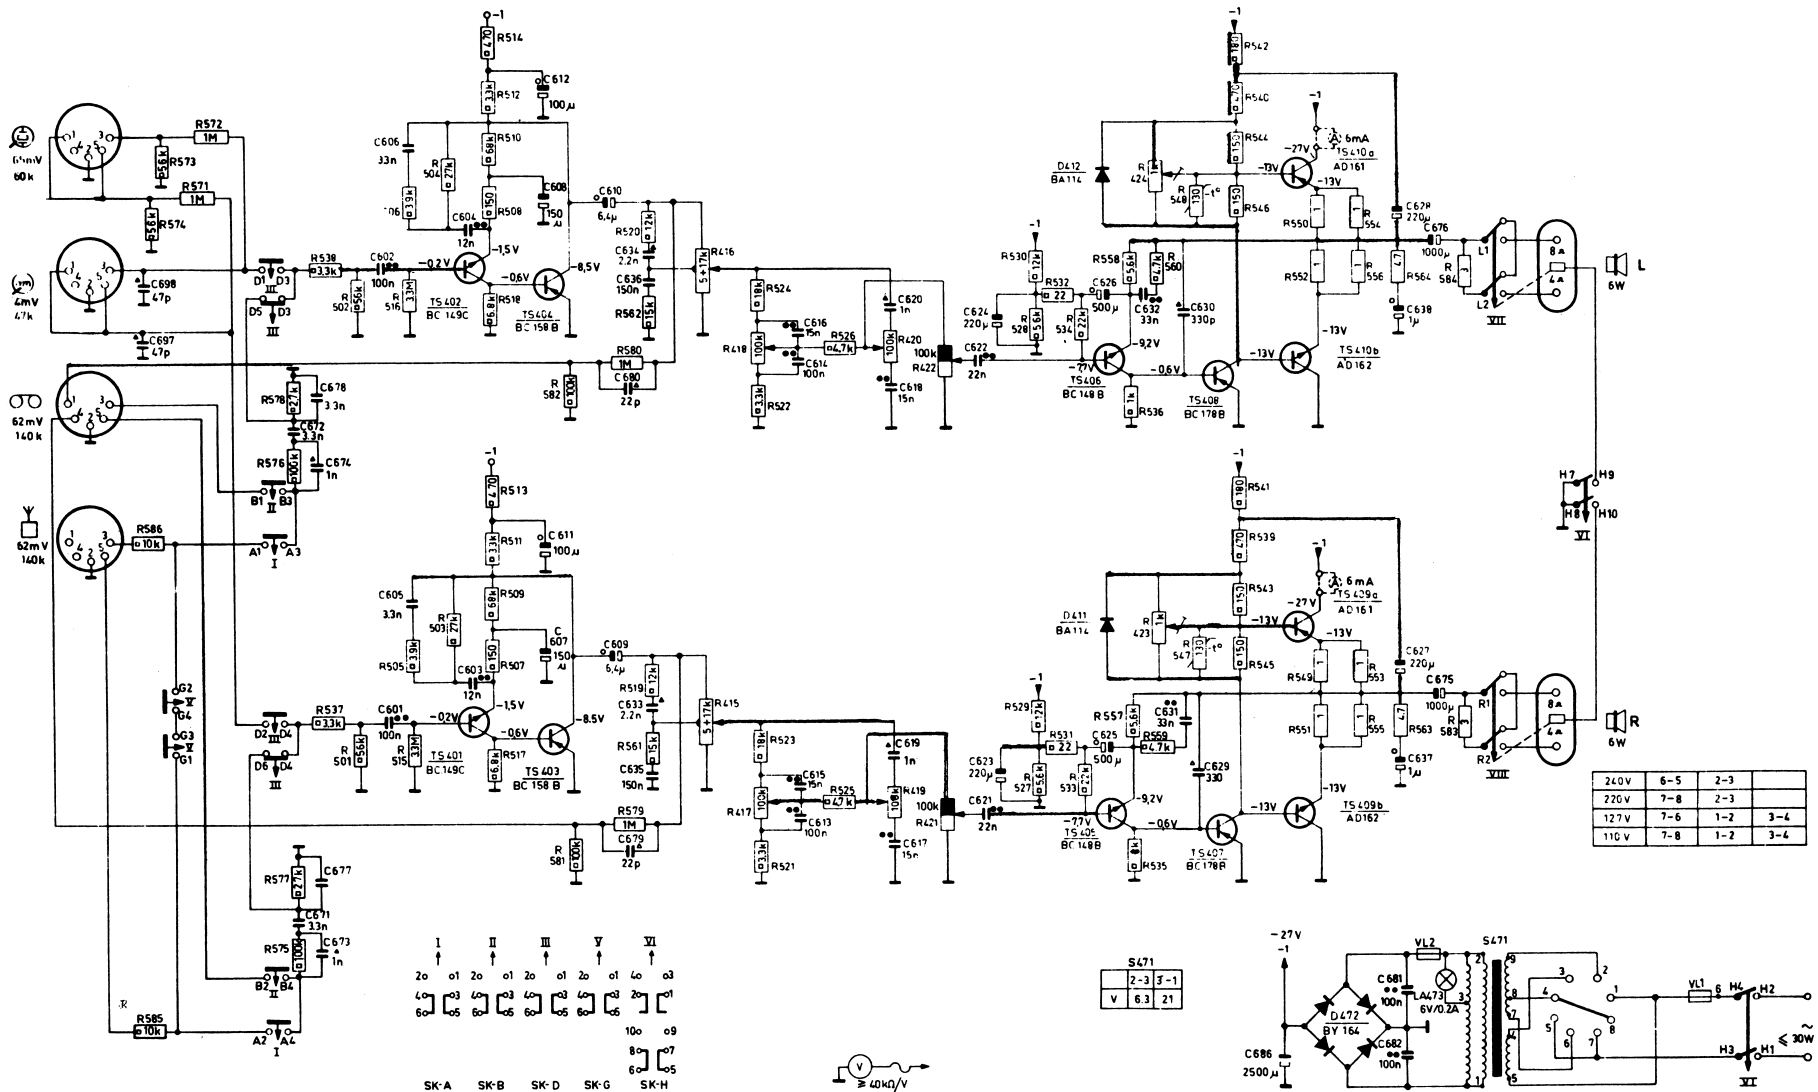
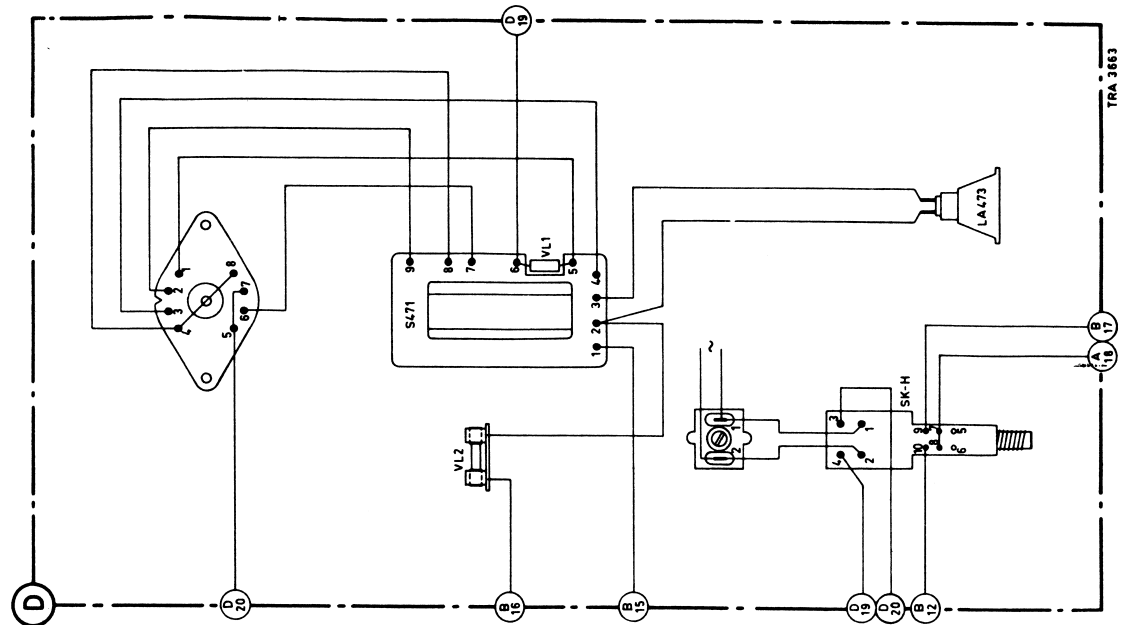
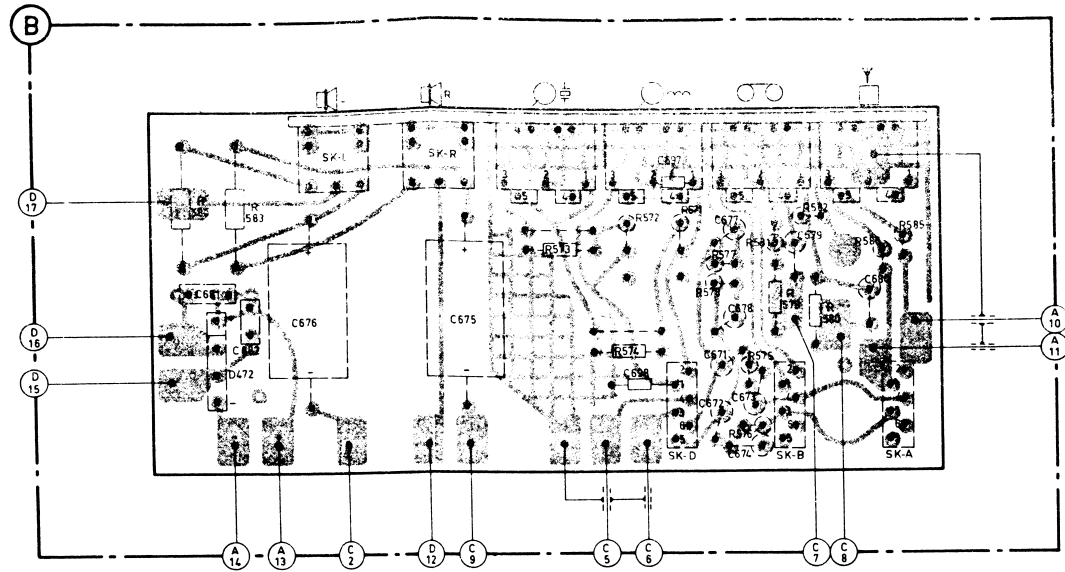


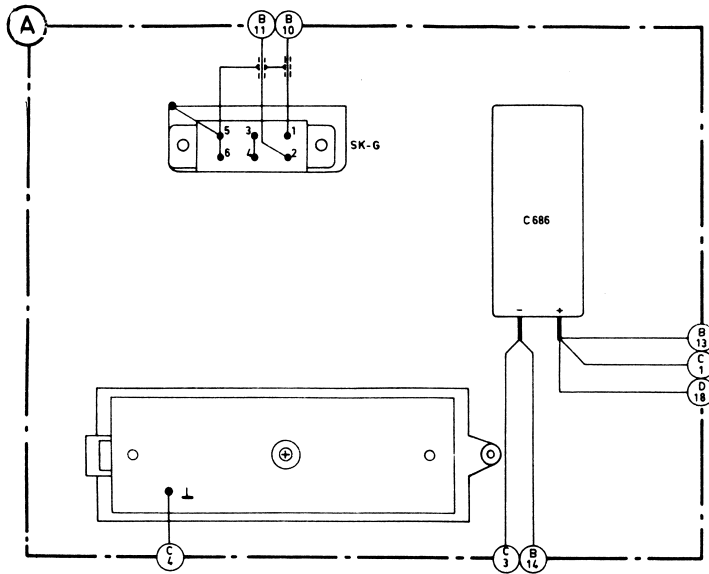

 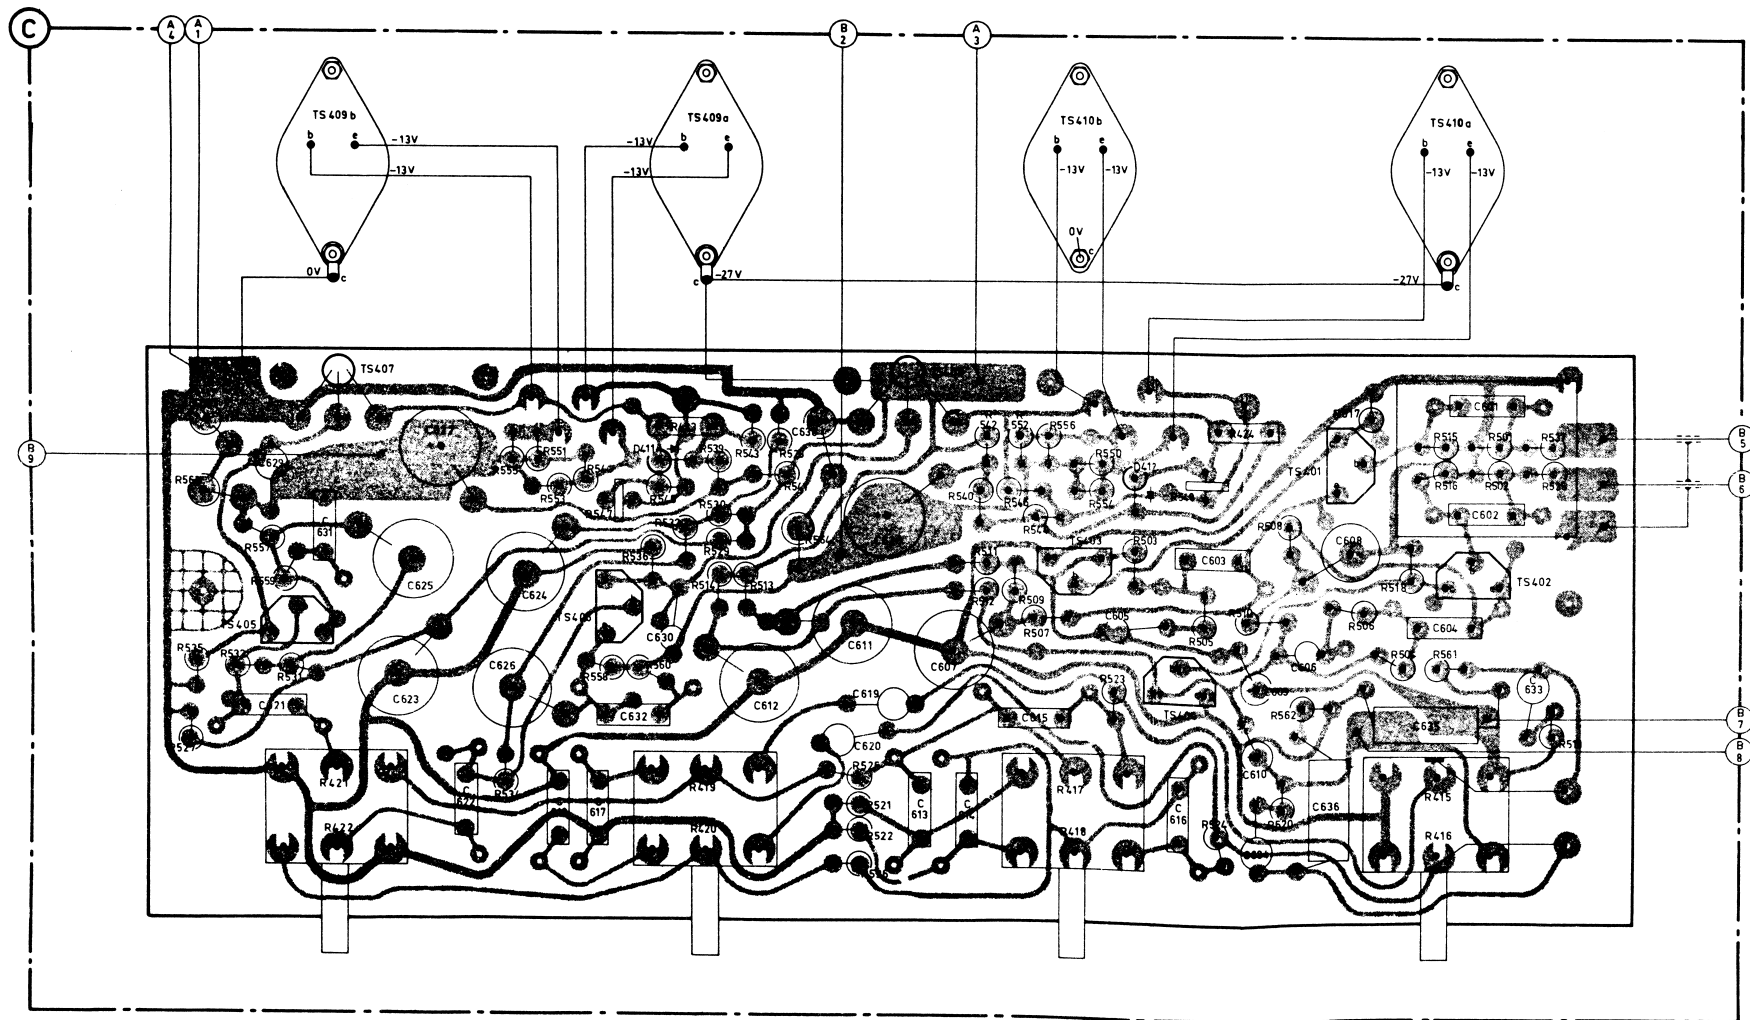


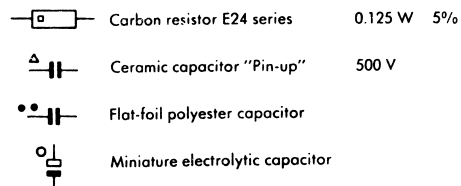

 
 
C	601. 602.										608.					603.					628.					638.					627.					631.					629.					637.					C																				
C	633.					604. 635.					636. 606. 609. 610. 634.					616.					605.					615.					614. 607. 613.					619. 611.					620. 612.					630. 632. 617. 619. 618. 624. 626.					625. 623.					621.					C										
R	537.538.					501.502.					515.516. 518. 517.					508. 524.					548.					503.					550.554.					556.544.552.546.					542.511.540.					564. 541.528.543.539.530.529.423.532.545.536.					547.549. 553.551.					555.					559. 557.					563.					R
R	519.					561.415.416. 504. 506.					562. 520.					510. 524. 505.					523.					417.418. 507. 509. 512.					525.521.522.526.					513.					514. 419.420.					560. 588.					534.					421.422.					531. 553.					535.527.					R

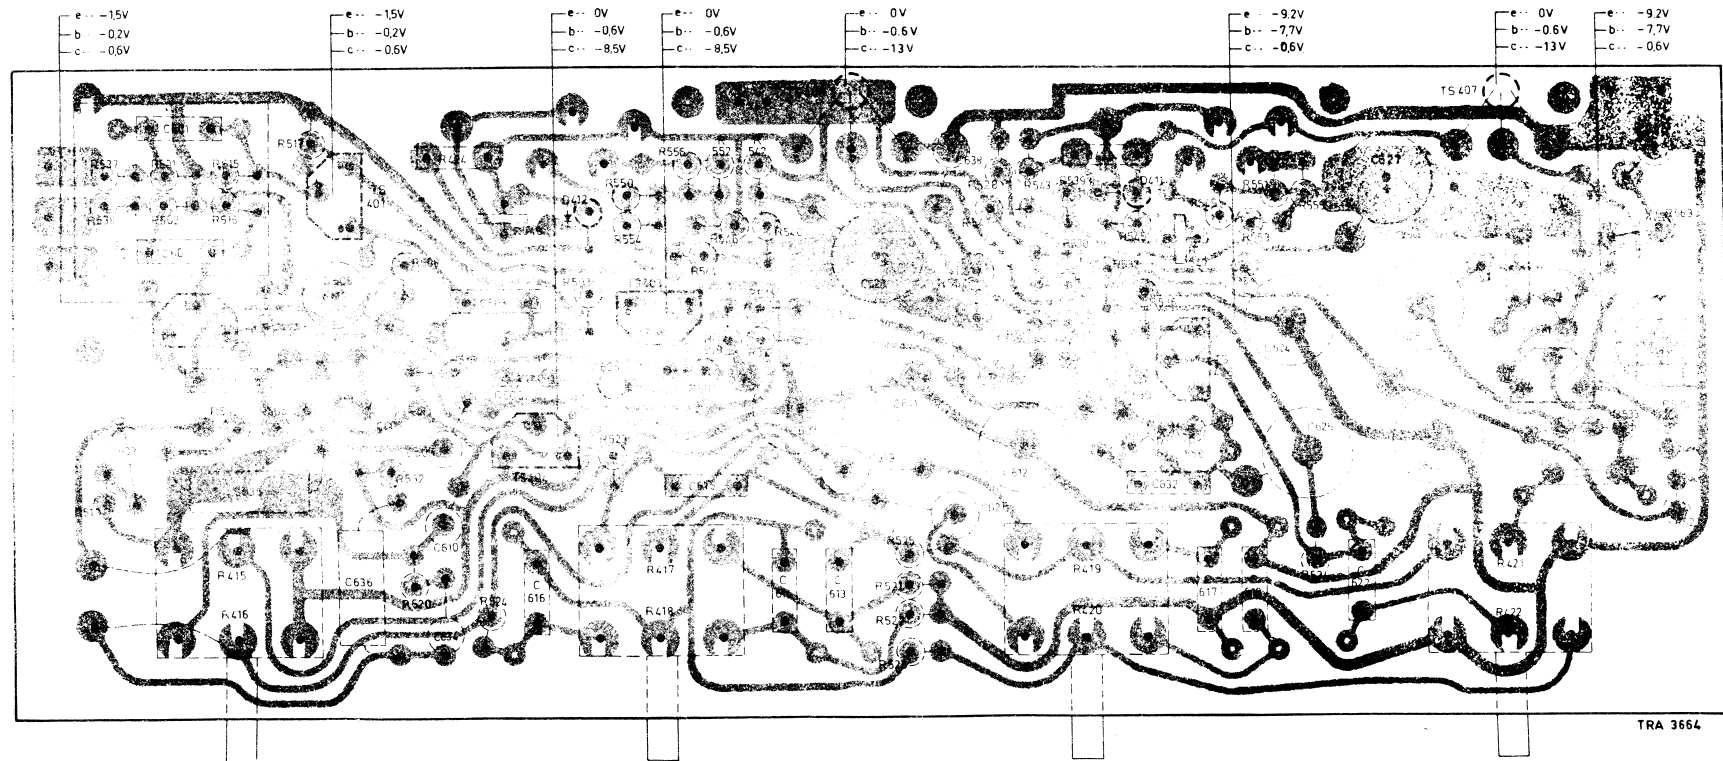

- | | | |
|------|---|-------------------|
| I | = | Tuner |
| II | = | Tape |
| III | = | PU |
| V | = | Mono |
| VI | = | On |
| VII | = | Loudspeaker left |
| VIII | = | Loudspeaker right |




TS401
TS402
TS403
TS404
TS405
TS406

TS407
TS408

TS409a-b
TS410a-b

PHILIPS*Service***notes****STEREO-AMPLIFIER****22RH580**

00/15/16/33/43

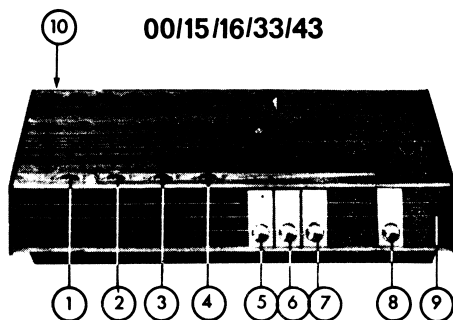

332x73x210 mm

TRA 3722

① Balance control	R421/422	④ Volume control	R415/416	⑧ On/off switch	SK-H
② Treble control	R419/420	⑤ PU switch	SK-D	⑨ On/off indicator	LA473
③ Bass control	R417/418	⑥ Recorder switch	SK-B	⑩ Mono/stereo switch	SK-G
		⑦ Tuner switch	SK-A		

Immediately after switching on the set, adjust the collector current of TS409a and TS410a to 6 mA d.c. with the aid of R423 and R424. After adjustment, these currents may decrease to 3 mA.

Cabinet /..P (palis.)	4822 425 30125	Stop device for push-button unit	4822 404 20113
Cabinet /..T (teak)	4822 425 30127	Socket, loudspeaker	4822 267 30198
Cabinet /..Z (walnut)	4822 425 30126	Plug, loudspeaker	4822 264 30041
Foot	4822 462 70646	Socket (5 poles)	4822 267 40133
Cover /..P (compl)	4822 426 40007	Plug (5 poles)	4822 264 40023
Cover /..T (compl)	4822 426 40006	Gear wheel	4822 522 30951
Cover /..Z (compl)	4822 426 40005	Fixing bracket for transformer (plastic)	4822 401 10512
Ornamental strip (lower)	4822 460 10243	Bracket electrolytic capacitor (plastic)	4822 401 10514
Ornamental strip (cover)	4822 454 10185	Cover in bottom plate	4822 426 60026
Fuse holder	4822 256 30117	Cap for indic. lamp	4822 462 70647
Knob	4822 413 40462	Lamp holder	4822 255 20068
Push-button	4822 410 20967	Set of insulation material	4822 466 90522
Push-button rod	4822 404 20112	output transistor	
Slide switch (complete)	4822 277 20136	Lens	4822 381 10058
Switch mono-stereo	4822 277 20135	Insulation piece for cooling plate	4822 466 90608
Mains switch + coupling piece	4822 276 20117		