


Service
Service
Service

Service Manual

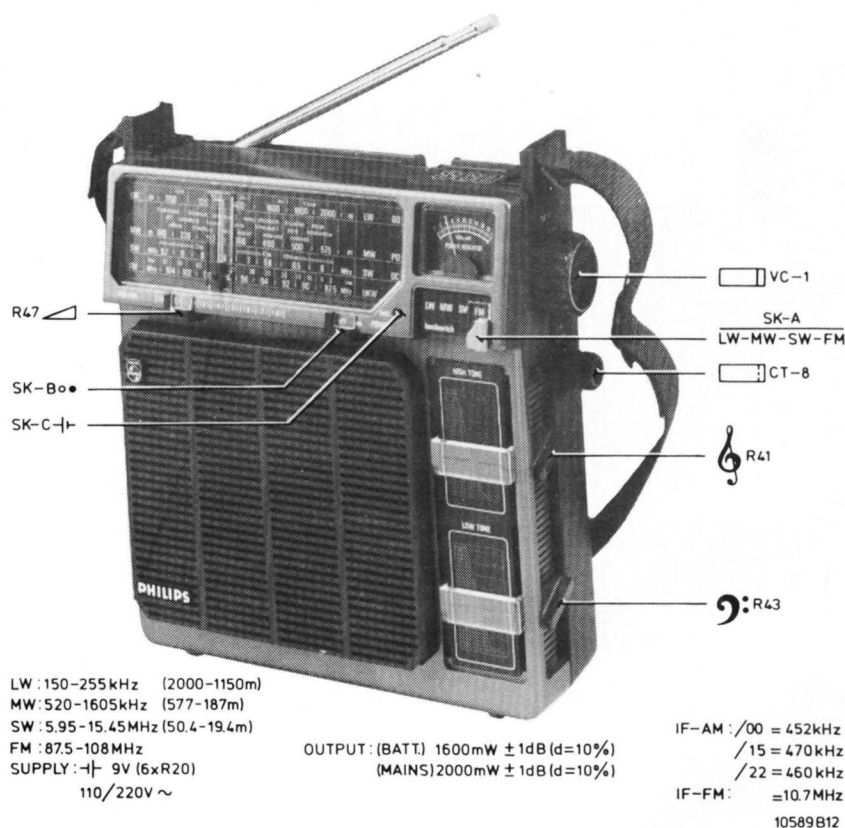

Wave range	Signal to		Varco	Detune	Adjust	Indication
SK ...						
MW (520 – 1605 kHz)	1 via 40 nF	A	Min. cap.	S9, S10, S12, S19	S12	1 max.
					S10	
					S9	
					S19	
	512 kHz	B	Max. cap.		S18	1 max.
	1635 kHz		Min. cap.		Ct-4	
	550 kHz		Tune-in		S15ab	
	1400 kHz				Ct-7	
LW (150 – 255 kHz)	147 kHz	B	Max. cap.		Ct-5	1 max.
	200 kHz		Tune-in		S16ab	
SW (5,95 – 15,45 MHz)	5,8 MHz	C via 10pF	Max. cap.		S17	1 max.
	16 MHz		Min. cap.		Ct-3	
	6,2 MHz		Tune-in		S14	
	15 MHz				Ct-6	
FM (87,5 – 108 MHz)	10,7 MHz Δf = 200 kHz (50 Hz)	D	Min. cap.	S13	S11	2 3
					S8	
					S7	
					S6	
					S5	
					S13	1 4
FM (87,5 – 108 MHz)	86,5 MHz	D	Max. cap.		S4	1 max.
	109 MHz		Min. cap.		Ct-2	
	90 MHz		Tune-in		S2	
	106 MHz				Ct-1	

Repeat - Herhalen - Répéter - Wiederholen - Repitanse - Ripetere - Repetera - Gentage - Gjentagelse - Toista

