

G5 AM/FM/Shortwave Radio with SSB

OWNER'S MANUAL



GRUNDIG

Grundig Radio Line By

ETÓN

re_inventing radio
www.etoncorp.com


DO YOU NEED HELP? Contact Us

Etón Corporation, 1015 Corporation Way, Palo Alto, CA 94303, USA. 1-800-872-2228 (U.S.); 1-800-637-1648 (Canada); 650-903-3866 (worldwide); M-F, 8:30-4:00, Pacific Standard Time; www.etoncorp.com.

WARNING

- Do not expose this appliance to rain or moisture.
- Do not submerge or expose for extended period to water.
- Protect from high humidity and rain.
- Only operate within specified temperature range (0 °C to 40 °C).
- Unplug immediately if liquid has been spilled or objects have fallen into the apparatus.
- Clean only with a dry cloth. Do not use detergents or chemical solvents as this might damage the finish.
- Unplug and disconnect external antennas (not included) during lightning storms.
- Do not remove cover [or back].
- Refer servicing to qualified service personnel.

ENVIRONMENT

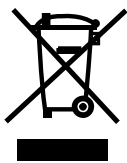

Disposal

According to the European Directive 2002/96/EC all electrical and electronic products must be collected separately by a local collection system.

Please act according to your local rules and do not dispose of your old products with your normal household waste.



MORE G5 INFORMATION

This operation guide provides instructions for the most commonly used aspects of the G5. Additional instructions and information can be found on our web site.

WHAT'S INCLUDED?

- AC adapter
- Carrying pouch
- Carrying strap (attached)
- Owner's manual

POWER SOURCES

Power the G5 by installing 4 AA alkaline, lithium or Ni-MH batteries or by plugging in the included AC adapter. A symbol appears in the upper right of the LCD, indicating battery or AC adapter power.

PREVENTING BATTERY LEAKAGE

To minimize the possibility of battery acid leakage, only use high quality alkaline, lithium or rechargeable nickel-metal-hydride batteries. Never intermix old with new, or different brands or types of batteries. Damage caused by battery acid leakage is not covered by this product's warranty.

TURNING THE G5 ON AND OFF

Press the POWER/SLEEP button.

F1-7 DUAL FUNCTION BUTTON DIAGRAM

The F1-7 buttons have dual functions, noted on the diagram under the G5's rear tilt flap.

CHARGING Ni-MH BATTERIES IN THE G5

With its included AC adapter/charger connected, the G5 internally recharges 4 Ni-MH (nickel-metal-hydride) rechargeable batteries (not included). Note that the G5 can still play while the batteries are charging and the alarm functions will work.

To charge batteries:

1. With the G5 turned off, install 4 NI-MH batteries and connect the AC adapter/charger.
2. Press the F7 button for about 3 seconds, or until CHG appears in the upper right of the display and the charging hours appear in the display.
3. Use the tuning knob to select the charging time in hours (00-23) based on the mAh rating of your batteries: 11 hours for 1100 mAH rating; 23 hours for 2300 mAH rating; etc.
4. Press the PAGE/TIME button when finished. In the display, the battery symbol's segments continuously activate from left to right during charging. Battery charging terminates once the set charge time has been reached.

INITIAL SETTINGS

Assure that it is powered with the AC adapter or batteries; that it is unlocked; that the DX/LOCAL switch is in the DX position.

SETTING UP AM AND FM OUTSIDE OF NORTH AMERICA

To use the G5 in North America (U.S. or Canada), no changes to the initial factory settings are needed.

In North America, AM stations are spaced by 10 KHz. In Europe and other areas, they are spaced by 9 KHz. In North America, the FM band begins at 87.5 MHz. In other parts of the world, it may begin at 87 MHz or 76 MHz. Follow these steps to set this for your area:

1. With the G5 off, press the F5 button for about 3 second - '9' or '10' flashes in the display.
2. Use sequential F5 presses to select 9 or 10, then press the 'PAGE/TIME' button – the FM frequency flashes in the display.
3. Sequentially press the F5 button until the beginning FM frequency of your area appears.
4. Press PAGE/TIME to finalize the procedure.

USING THE SLEEP TIMER

The sleep timer enables the G5 to play for a specified number of minutes (00-99), then shut off. It can be activated and programmed with the G5 turned on or off. In sleep mode, the sleep symbol appears in the display.

1. With the G5 on or off, use the numeric keypad to enter the desired time (00-99 minutes).
2. Within 3 seconds press the SLEEP button. The G5 plays for the specified time.

To change the sleep time:

After the sleep time has been selected, press SLEEP for about two seconds, then use the tuning knob to change it and press PAGE/TIME.

VOLUME CONTROL

With the G5 on or off, use the +/-VOL buttons or the numeric keypad to adjust to volume levels 0-31. The level number appears in the display. To adjust the volume with the numeric keypad, enter the desired volume level and press either the + or – VOL button within 3 seconds.

SELECTING FM, AM and SHORTWAVE

Turn on the G5. To select LW/AM press the AM BAND button; for FM press the FM BAND button. To enter a specific shortwave band, sequentially press the 'METERBAND' button to select the band of your choice. The most popular shortwave bands can also be accessed with the F1-F7 buttons (F1=49m, F2=41m, F3=31m, F4=25m, F5=22m, F6=19m and F7=16m).

When listening to FM or shortwave, fully extend the telescopic antenna. It need not be extended when listening to AM stations (the AM antenna is located inside the G5).

SHORTWAVE LISTENING

To learn about shortwave we recommend the two publications below, published yearly and available from major booksellers. Additionally, the Internet is a great resource for learning about shortwave.

PASSPORT TO WORLD BAND RADIO Published by International Broadcasting Services (IBS); IBS North America, Box 300, Penn's Park PA 18943. Phone: (215) 598-9018. www.passband.com.

WORLD RADIO TV HANDBOOK Published in the USA by Watson-Guptill Publications, 770 Broadway, 7th Floor, New York, NY 10003-9595. www.watsonguptill.com.

OPTIMIZING SHORTWAVE RECEPTION

Shortwave enables listening to broadcasts over vast distances including other countries and continents. The following information will help you get the best results.

- During the day, frequencies above 13 MHz are usually best.
- At night, frequencies below 13 MHz are usually best.
- Around sunset and sunrise, the entire shortwave range may be good.
- Getting very close to a window and holding the radio improves shortwave reception.

TUNING SSB (Single Side Band)

SSB enables listening to shortwave two way communications using the single-sideband mode such as amateur radio, Morse code, weather-fax transmissions and other signals often referred to as 'utility' signals. The Internet and your local library are great resources to learn more.

Turn on the G5. To use SSB, turn on the SSB circuit by pressing the SSB button. Note that SSB appears in the display. Tune to the shortwave frequency of your choice. Use the tuning knob to coarse-tune the SSB signal, then fine-tune with the –FINE+ knob. This SSB circuit allows tuning of both upper and lower sideband signals. For best SSB signal clarity, placing the DX/LOCAL switch in the LOCAL position may be desirable.

USING THE DX/LOCAL SWITCH

The DX/LOCAL switch on the left side of the G5 adjusts sensitivity. Use DX as the default setting for maximum sensitivity to signals. If

USING THE DX/LOCAL SWITCH *continued*

strong stations seem distorted, then use LOCAL. This switch does not function in FM mode.

TUNING IN STATIONS

Turn on the G5. Stations are tuned with the **▲▼** Buttons, Tuning-Knob, Direct Frequency Entry and Auto-Search. Quick, s hort, sequential presses of the **▲▼** buttons enables tuning up or down frequency. Alternately, the TUNING knob can be used. Continuous tuning in shortwave can only be done with the tuning knob and via direct frequency entry.

DIRECT FREQUENCY ENTRY

Turn on the G5. Use this method when the desired frequency of a radio station is known. AM and SW frequencies are entered in kilohertz (KHz), e.g. 810 KHz or 9475 KHz.; FM frequencies are entered in megahertz (MHz), e.g. 102.9 MHz, ignoring the decimal point.

1. Use the numeric buttons to enter the frequency.
2. Within 3 seconds, press the AM button if it's an AM or SW frequency, or the FM button for FM frequencies.

AUTO-SEARCH TUNING

With the G5 on, auto-search tuning starts by pressing either the up or down frequency button **▲▼** for about 2 seconds. The G5 has 3 selectable auto-search modes: STOP, ATS or D-5. The factory programmed default mode is STOP. These are described below. When

AUTO-SEARCH TUNING *continued*

auto searching shortwave stations, place the bandwidth switch into the WIDE position.

STOP: Auto-searching stops on the next encountered station.

D-5: Auto-searching stops for 5 seconds on each next encountered station, then moves on.

ATS: (Auto Tuning Storage): Auto-searching automatically stores the strongest FM local stations into memories starting with page 99 and counting downward until all are stored, e.g. 98, 97, 96, etc. Tune to the FM band and perform auto-search. After the ATS scan, select your memory with the **↑↓** buttons and the station with the F1-7 buttons. If too many memories are filled with static, try the scan again with the DX/LOCAL switch set in the LOCAL position.

To select an auto-search mode:

1. Hold down the F6 button for about 2 seconds, then release. Note that the last chosen mode flashes in the screen.
2. While the mode flashes, perform quick, short presses of the F6 button to select alternate modes.
3. Press PAGE/TIME button.

SETTING YOUR TIME ZONE

(Use this same procedure to change your time zone when traveling).

1. With the G5 turned on, perform a quick, short press of TIME ZONE button. 'Tzone' appears in the display.
2. Use the tuning knob to select your home time zone (see time zone abbreviation list below).
3. Long, 3 second press of TIME ZONE button. 'Tzone' disappears from the display.

SETTING YOUR TIME ZONE continued

Time Zone Abbreviation List:

ANC-Anchorage	BEG-Beijing
BKK-Bangkok	CAI-Cairo
CCS-Caracas	CHI-Chicago
DAC-Dhaka	DEL- Delhi
DEN-Denver	DXB-Dubai
GMT-GMT	HKG-Hong Kong
HNL-Honolulu	JED-Jeddah
KHI-Kashi	LAX-Los Angeles
LON-London	NOU-Noumea
NYC-New York City	PAR-Paris
RIO-De Janeiro	SYD-Sydney
TYO-Tokyo	WLG-Wellington

To view other time zones:

This allows viewing other time zones without changing the home time zone.

1. With the G5 off, use quick, short press of TIME ZONE button. 'Tzone' appears in the display.
2. Use tuning knob to select desired time zone. Once selected, that time zone's time appears in the display for about 30 seconds.
3. To exit T-zone mode earlier, use a quick, short press of the TIME ZONE button.

SETTING THE CLOCK AND WEEKDAY

The G5's clock is in 24-hour format. Turn off the G5.

1. With the G5 off, press the PAGE/TIME button for about 2 seconds or until the hour digits start flashing.
2. Within 3 seconds, use the tuning knob to set the correct hour; then press F1-7 to highlight the days you wish the alarm to activate.
3. Immediately press PAGE/TIME again, noting that the minute digits start flashing.
4. Within 3 seconds, use the tuning knob to set the correct minutes.
5. Immediately press PAGE/TIME again. The clock is set.

ACTIVATING AND DEACTIVATING THE ALARMS

For an alarm to turn on the radio, it must be activated. To activate the alarm to be used, turn off the G5 and press the appropriate alarm button, F1-4. This causes the timer activation symbol to appear in the upper left corner of the display, activating the selected alarm. To deactivate the alarm, press the appropriate F1-7 button, causing the alarm activation symbol to disappear.

STORING STATIONS INTO MEMORY

The G5 has 700 memories (also called presets), arranged in 100 pages, with each page holding 7 memories. Buttons F1-7 represent memory locations.

Note that when storing into an already occupied memory position, its contents will be replaced with your new entry.

1. Turn on the G5.
2. Tune to the desired station.

STORING STATIONS INTO MEMORY *continued*

3. Press the PAGE/TIME button to place the G5 into MEMO mode.
4. To select the desired memory page (00-99) use the **↑↓** buttons or hold down the STORE button and use the tuning knob.
5. While holding down the STORE button, press one of buttons F1-7, storing the station into that memory. Note that a box appears around the selected memory location.
6. Release the STORE button.
7. To store another station, tune to the station and repeat steps 4-6 above.
8. When finished storing stations, press the PAGE/TIME button to exit MEMO mode.

SETTING ALARMS 1 THROUGH 4

The G5 has 4, independently programmable alarm timers (buttons F1-4) to turn it on at a specified time. Additionally, each timer can be programmed for a specific weekday, volume, playtime and memory location.

To set an alarm:

1. With the G5 turned off, perform a long press of one of the F1-4 buttons (about 3 seconds), causing the hour to flash.
2. Use the tuning knob to set the hour; and press one of the F1-7 buttons to highlight the day of the week for turn on.
3. Press the PAGE/TIME button.
4. Use the tuning knob to set the minutes.
5. Press the PAGE/TIME button.
6. Use the tuning knob to set the wake-up volume.
7. Press the PAGE/TIME button.
8. Use the tuning knob to set the wake-up alarm's play minutes.
9. Press the PAGE/TIME button.
10. Use the tuning knob to set the page number or select no page number by selecting ----.
11. Press one of the F1-7 buttons to select the memory location on the selected page (the square flashes).
12. Press the PAGE/TIME button to finish the set-up.

CHECKING MEMORY CAPACITY

Turn on the G5. While holding down the CHECK button, turn the tuning knob to select memory pages. Empty memories do not have the box around them.

ACCESSING STORED MEMORIES

1. Turn on the G5 and enter MEMO mode by pressing the PAGE/TIME button, causing MEMO to appear in the display.
2. Select the desired memory page with the **▲▼** buttons.
3. Select the desired memory with buttons F1-7.

ERASING A SELECTED MEMORY

1. Turn on the G5 and enter MEMO mode by pressing the PAGE/TIME button, causing MEMO to appear in the display.
2. Select the desired memory page with the **▲▼** buttons.
3. While holding down the ERASE button, press the F1-7 button that you wish to erase. Note that the box surrounding the memory location disappears.
4. Release the ERASE button.

DELETING ALL MEMORY CONTENTS

With the G5 on, hold down the EDIT and SSB buttons simultaneously, then press RESET. This deletes the contents of all memory pages.

LABELING MEMORY PAGES

Memory pages can be uniquely labeled with four, intermixed digits or letters.

1. With the G5 turned on, select memory mode with the PAGE/TIME button. MEMO appears in the display.
2. Use the **↑↓** buttons to select the desired memory page.
3. Press the EDIT button until ' _ ' appears in the display (about 3 seconds).
4. Use the tuning knob to select the desired number or letter.
5. Press the PAGE/TIME button to select the next ' _ '.
6. Repeat until 4 letters/numbers are selected.
7. Press PAGE/TIME when finished.

CHECKING PAGES AND MEMORIES

Checking allows reviewing of pages and their contents, even while listening.

1. With the G5 turned on, press and release the PAGE/TIME button, causing PAGE to appear in the display.
2. Press **↑↓** or hold down the CHECK button and turn the tuning knob to select the desired page.
3. While holding down the CHECK button press one of the F1-F7 buttons noting that the stored frequency shows in the display.

USING THE PAGE COPY/PASTE FUNCTION

This feature enables copying memory contents from one page to another.

1. With the G5 turned on, press and release the PAGE/TIME button, causing PAGE to appear in the display.
2. Press **↑↓** or hold down the CHECK button and turn the tuning knob to select the page to be copied.

USING THE PAGE COPY/PASTE FUNCTION

continued

3. While holding down the CHECK button press and release the PAGE/TIME button. This copies the page.
4. Press **↑↓** or hold down the STORE button and turn the tuning knob, selecting the paste-to page.
5. While holding down STORE press and release PAGE. This pastes the content of the page.

USING THE PAGE COPY/PASTE FUNCTION

The light illuminates the display and buttons. There are three light modes.

Normal Mode: Pressing any button activates the light. The light automatically turns off after 15 seconds.

Always-On Mode: When powered by its AC adapter, the light remains always on when the G5 is turned on.

Manual Light-On/Off Mode: If the light is off, pressing the LIGHT button activates the light for 15 seconds. Pressing it again within 15 seconds turns the light off.

EXTERNAL ANTENNA SOCKET

The external antenna socket is used to connect the G5 to advanced performance shortwave antennas using a 50 or 75-Ohm coaxial cable feed-line.

STEREO/MONO BUTTON

When listening to FM stations this switch selects stereo or monaural. Select stereo when using earphones. When not using earphones, it's OK to leave it on stereo. In either case, if the FM signal is poor, selecting mono may improve it.

MUSIC/WIDE and NEWS/NARROW SWITCH

Note the wide/narrow diagram in the display.

AM/FM – The MUSIC/WIDE position creates a 'brighter' music sound. The NEWS/NARROW position creates a less 'bright' sound.

Shortwave – The MUSIC/WIDE position creates the best audio fidelity. The NEWS/NARROW position helps to minimize interference from other stations.

LINE-OUT SOCKET

This socket provides an industry standard, fixed level audio output source for safely routing the G5's audio to the line-in socket of a stereo system or recording device. Follow your external device's line-input instructions. The G5's volume control has no effect on this output.

EARPHONE SOCKET AND USING EARPHONES (not included)

Plug them into the earphone socket on the left side of the radio. Turn the volume down before wearing the earphones, then turn up the volume to your liking.

REAR FOLDING STAND

Pull the folding stand from the rear of the G5, allowing viewing at a comfortable angle.

RESET BUTTON

The reset button is located inside the small hole labeled RESET. If the G5 operates erratically, poke a paper clip into the reset hole to reset its microprocessor. This does not erase memory, but does reset the clock to 0:00.

USING THE LOCK FEATURE

With the G5 turned off, one press of the lock button prevents unwanted turn-on. When it is turned on, one press of the lock button prevents unwanted frequency changes; two presses lock all buttons except the POWER/SLEEP button. Deactivate lock with a long (about 2 second) press of the lock button.

SIGNAL STRENGTH INDICATOR

The signal strength indicator shows relative strength of AM and SW signals. When signal strengths are somewhat weak, it is normal for the indicator's level to fluctuate. The indicator is not functional with FM signals.

FM STEREO

To hear FM in stereo via earphones or the LINE-OUT socket, press the 'ST/MONO' button while tuned to a FM station. Note that 'STEREO' appears in the display.

WARRANTY REGISTRATION

To ensure full warranty coverage or product updates, registration of your product should be completed as soon as possible after purchase or receipt. You may use one of the following options to register your product:

1. By visiting our website at <http://www.etoncorp.com>.
2. Mail in enclosed warranty card.
3. Mail your registration card or information to following address; include your name, full mailing address, phone number, email address, model purchased, date purchased, retail vendor name:

Etón Corporation
1015 Corporation Way
Palo Alto, CA 94303 USA

LIMITED WARRANTY

Retain the warranty information from your warranty card with your proof of purchase or the Limited Warranty information can also be viewed at www.etoncorp.com.

SERVICE FOR YOUR PRODUCT

To obtain service for your product, we recommend first contacting an Etón service representative at 1-800-872-2228 US, 1-800-637-1648 Canada, (650) 903-3866 US, customersvc@etoncorp.com or your respective country distributor in Europe (see enclosed list) for problem determination and trouble-shooting. If further service is required, the technical staff will instruct how to proceed based on whether the radio is still under warranty or needs non-warranty service.

WARRANTY – If your product is still in warranty and the Etón service representative determines warranty service is needed, a return authorization will be issued and instructions will be given. **DO NOT** ship your radio back without obtaining the return authorization.

NON-WARRANTY – If your product is no longer under warranty and requires service, the Etón service representative will refer you to the nearest repair facility that will best handle the repair.

For service outside North America, please refer to the distributor information included at time of purchase/receipt.

FCC Note

The manufacturer is not responsible for any radio or tv interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

Grundig Radio Line By

etón
re_inventing radio
www.etoncorp.com

Etón Corporation

Corporate Headquarters
1015 Corporation Way
Palo Alto, California 94303 USA
tel +1 650-903-3866
tel +1 800-872-2228
fax +1 650-903-3867

Etón Europe/Lextronix Germany

Rosenstrasse 2
D-10178 Berlin, Germany
tel +49 [0]30 243102142

Etón Canada

1 Yonge Street, Suite 1801
Toronto, Ontario M5E 1W7 Canada
tel +1 416-214-6885

GRUNDIG

Standard of Quality

Limited Warranty and Product Registration

USA

Etón Corporation
Corporate Headquarters
1015 Corporation Way
Palo Alto, CA 94303

www.etoncorp.com

Germany

Etón Europe / Lextronix Germany
Berlin Office
Rosenstrasse 2
D-10178 Berlin

www.lextronixusa.de

Canada

Etón Electronics Canada LTD
Toronto Office
1 Yonge Street, Suite 1801
Toronto, Ontario M5E 1W7

www.etoncorp.com

Grundig Radio Line By

eTÓN

re_inventing radio
www.etoncorp.com

1-800-793-6542

LIMITED WARRANTY

Etón Corporation (Etón) offers a limited warranty to the original customer against manufacturing defects in material and workmanship on this product. This warranty is valid only for the original purchaser and is not transferable.

**TWO (2) YEARS PARTS AND LABOR - Europe
ONE (1) YEAR PARTS AND LABOR - North America**

This limited warranty begins on the original date of purchase, and is valid only on products purchased through an authorized Etón retailer. Warranty repairs must be performed by Etón or an authorized service center. To receive warranty service, the original dated bill of sale, or a copy, must be presented upon request as proof of purchase. Installation, removal or reinstallation of the product is not included under this warranty. Shipping to Etón or the authorized service center is the responsibility of the purchaser. For products purchased in Europe, please return to your dealer or the distributor of your country, which is listed on a sheet included in the packaging.

Etón will repair or replace this product, at our option and at no charge, with new or reconditioned parts if this product is found to be defective during the limited warranty period. To be eligible for warranty coverage, the product must be returned with shipping charges prepaid no later than 15 days after the expiration of the warranty period to Etón or the designated service center. Prior to returning any product

for warranty service, the purchaser must contact Etón or the designated service center for troubleshooting and service procedure instructions. Damaged parts or products become the property of Etón. Parts and products replaced by Etón assume the remaining original warranty, or ninety (90) days, whichever is longer.

This limited warranty covers manufacturing defects in material and workmanship encountered in normal, noncommercial use of this product and shall not apply to the following, including, but not limited to: damage that occurs due to applications and uses for which the product was not intended; failures or problems that are caused by products or equipment not supplied by Etón; accidents, misuse, abuse, neglect, misapplication, fire, water, lightning, or other acts of nature; incorrect line voltage, fluctuations, or surges; damage caused by improper or faulty installation; damage caused by acid leakage from improperly installed or defective batteries; product alteration or modification; or use of unauthorized parts, supplies, accessories, or equipment that damage this product or result in service problems.

SERVICE INFORMATION

To obtain service for your Etón product, first contact an Etón service representative at 1-800-872-2228 US, 1-800-637-1648 Canada or your respective country distributor in Europe (see enclosed list) for troubleshooting. Many common questions and problems can be resolved over the phone.

WARRANTY REGISTRATION

To ensure full warranty coverage or product updates, registration of your product should be completed as soon as possible after purchase or receipt. You may use one of the following options to register your product:

1. By visiting our website at <http://www.etoncorp.com>.
2. Mail in enclosed warranty card.
3. Mail your registration card or information to following address; include your name, full mailing address, phone number, email address, model purchased, date purchased, retail vendor name:

Etón Corporation	Etón Europe
1015 Corporation Way	Rosenstrasse 2
Palo Alto, CA 94303 USA	D-10178 Berlin, Germany

service is needed, a return authorization will be issued and instructions will be given. DO NOT ship your radio back without obtaining the return authorization.

NON-WARRANTY – If your product is no longer under warranty and requires service, the Etón service representative will refer you to the nearest repair facility that will best handle the repair. For service outside North America, please refer to the distributor information included at time of purchase/receipt.

LIMITED WARRANTY

Retain the warranty information from your warranty card with your proof of purchase or the Limited Warranty information can also be viewed at www.etoncorp.com.

SERVICE FOR YOUR PRODUCT

To obtain service for your product, we recommend first contacting an Etón service representative at: 1-800-872-2228 US, 1-800-637-1648 Canada, 1-800-903-3866 or customersvc@etoncorp.com for problem determination and trouble-shooting. If further service is required, the technical staff will instruct how to proceed based on whether the radio is still under warranty or needs non-warranty service. WARRANTY – If your product is still in warranty and the Etón service representative determines warranty

*Denotes Required Field

Etón Product Registration

Go to: www.etoncorp.com/productregistration, or mail this form today.

Cell Phone Model #:

Serial number*:
(located in the back of the unit)

Date of purchase*:

Dealers name*:

City*:

Country/Territory*:

Name*:
_____|_____

Address*:

City*:

State/Province*:

Postal Code/ZIP Code*:

Country/Territory*:

Telephone Number*:
_____|_____

Email*:

1. Your annual income?

- Under \$14,999 \$50,001 to \$75,000
 \$15,000 to \$30,000 \$75,001 to \$150,000
 \$30,001 to \$50,000 Over \$150,001

2. Your age?

- Under 16 31-35 51-55
 16-20 36-40 56-60
 21-25 41-45 61 and over
 26-30 46-50

3. What are your listening interests? (Check all that apply)

- Satellite Radio Shortwave/International Broadcast
 Local AM/FM

4. Did you consider another unit before choosing this product?

- Yes (Please Specify Model): _____
 No

5. What is your occupation? _____

6. How did you hear about Etón?

- Newspaper ad Article
 Radio ad Web Search
 Through a retailer Other _____

- Yes!** I would like Etón to send me information on products including special offers, new product launches, and product updates/information:

- Email Mail

