

# Service

# Service

# Service



# Service Manual



## TABLE OF CONTENTS

Handling Chip Components and Safety .....	1 - 1
Technical Specification & Service tools.....	2 - 1
Service Measurement.....	2 - 2
Connections and controls.....	3 - 1 to 3- 2
Instructions for Use .....	3 - 3 to 3 - 8
Disassembly Diagram.....	4 - 1
Pin-description of ICs .....	4 - 2 to 4 - 5
Block Diagram .....	5 - 1
Wiring Diagram.....	6 - 1
<b>Tuner And Power Amplifier Board</b>	
Circuit Diagram.....	7 - 1
Layout Diagram .....	7 - 2
Radio Alignment .....	7 - 2

### VCD Board And LCD Board

Circuit Diagram .....	8 - 1
Layout Diagram(LCD Board) .....	8 - 2
Layout Diagram(VCD Board) .....	8 - 3 to 8-4

### Tape Board

Circuit Diagram.....	9 - 1
Layout Diagram.....	9 - 2

### Exploded Views Diagram

Cabinet .....	10 - 1
Tape Deck .....	10 - 2

### Mechanical Partslist.....

Electrical Partslist .....	11 - 1 to 11 - 2
----------------------------	------------------

© Copyright 2001 Philips Consumer Electronics B.V. Eindhoven, The Netherlands  
All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted, in any form or by any means, electronic, mechanical, photocopying, or otherwise without the prior permission of Philips.

Published by LX 0333Service Audio Printed in The Netherlands Subject to modification


**CLASS 1  
LASER PRODUCT**

GB 3140 785 32650



**PHILIPS**

## HANDLING CHIP COMPONENTS

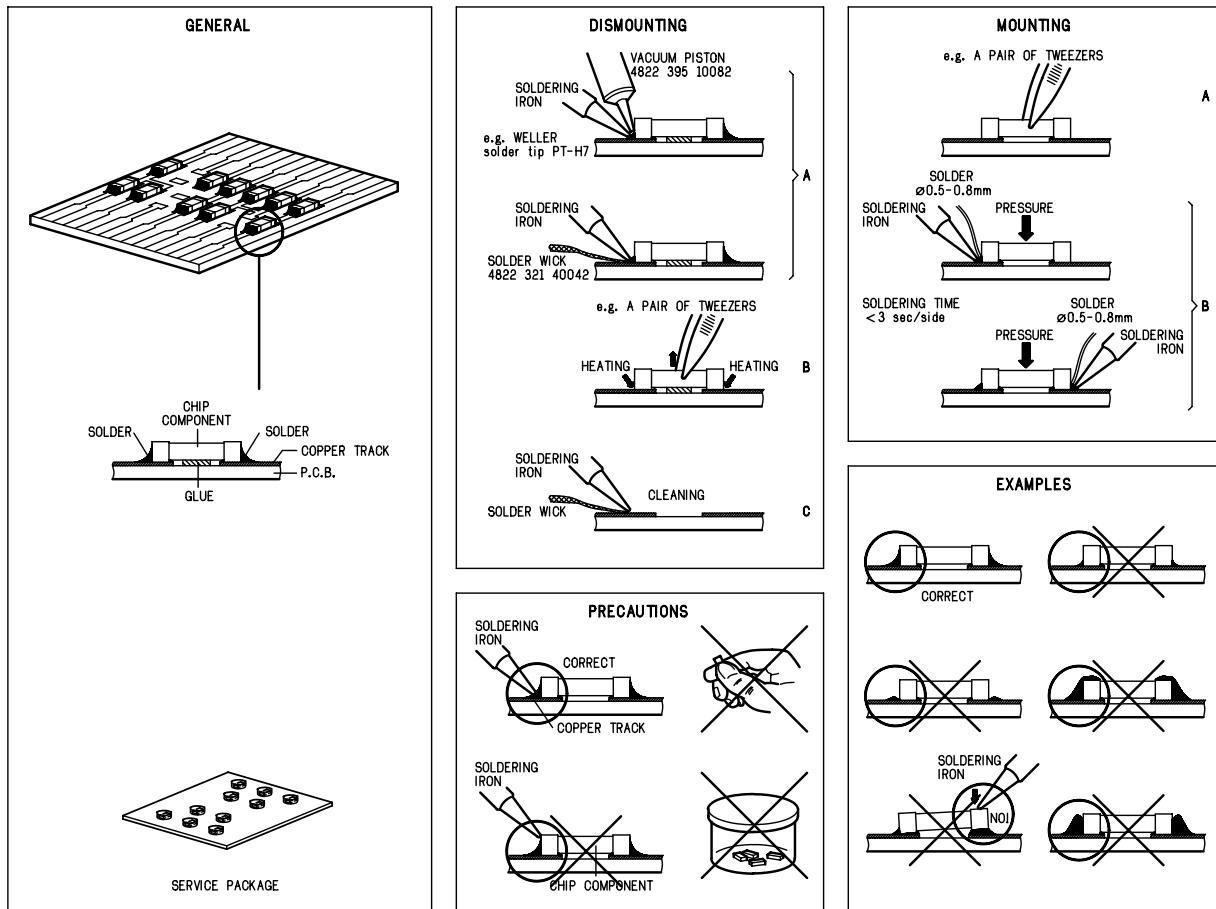

### GB WARNING

All ICs and many other semiconductors are susceptible to electrostatic discharges (ESD). Careless handling during repair can reduce life drastically. When repairing, make sure that you are connected with the same potential as the mass of the set via a wristband with resistance. Keep components and tools at this potential.



### F ATTENTION

Tous les IC et beaucoup d'autres semi-conducteurs sont sensibles aux décharges statiques (ESD). Leur longévité pourrait être considérablement écourtée par le fait qu'aucune précaution n'est prise à leur manipulation. Lors de réparations, s'assurer de bien être relié au même potentiel que la masse de l'appareil et enfile le bracelet servi d'une résistance de sécurité. Veiller à ce que les composants ainsi que les outils que l'on utilise soient également à ce potentiel.

### GB

Safety regulations require that the set be restored to its original condition and that parts which are identical with those specified be used. Safety components are marked by the symbol

### F

Les normes de sécurité exigent que l'appareil soit remis à l'état d'origine et que soient utilisées les pièces de rechange identiques à celles spécifiées. Les composants de sécurité sont marqués

**GB DANGER:** Invisible laser radiation when open. AVOID DIRECT EXPOSURE TO BEAM.

### S Varning !

Osynlig laserstrålning när apparaten är öppnad och spärren är urkopplad. Betrakta ej strålen.

### DK Advarsel !

Usynlig laserstrålning ved åbning når sikkerhedsafbrydere er ude af funktion. Undgå utsættelse for stråling.

## SAFETY



## CLASS 1 LASER PRODUCT

### FIN Varoitus !

Avatussa laitteessa ja suoja-alueen ohittamassa olet alttiina näkymättömiin laserisäteilyille. Älä katso säteeseen !

### GB

After servicing and before returning the set to customer perform a leakage current measurement test from all exposed metal parts to earth ground, to assure no shock hazard exists.

The leakage current must not exceed 0.5mA.


### F

"Pour votre sécurité, ces documents doivent être utilisés par des spécialistes agréés, seuls habilités à réparer votre appareil en panne".




## SERVICE MEASUREMENT

### Tuner SW

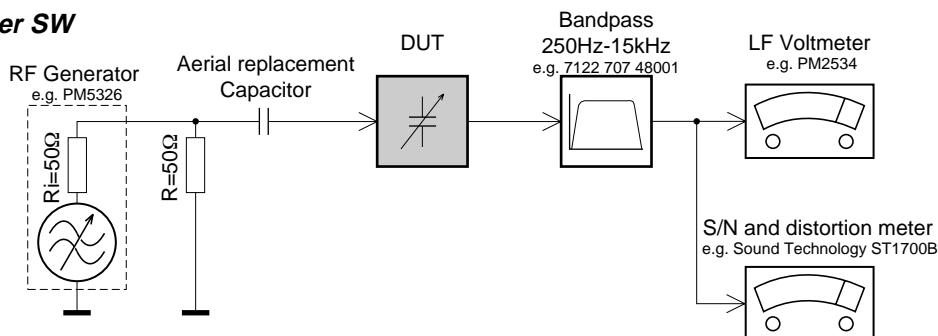

To avoid atmospheric interference all AM-measurements have to be carried out in a Faraday's cage.  
Use a bandpass filter (or at least a high pass filter with 250Hz) to eliminate hum (50Hz, 100Hz).


### Tuner AM (MW,LW)

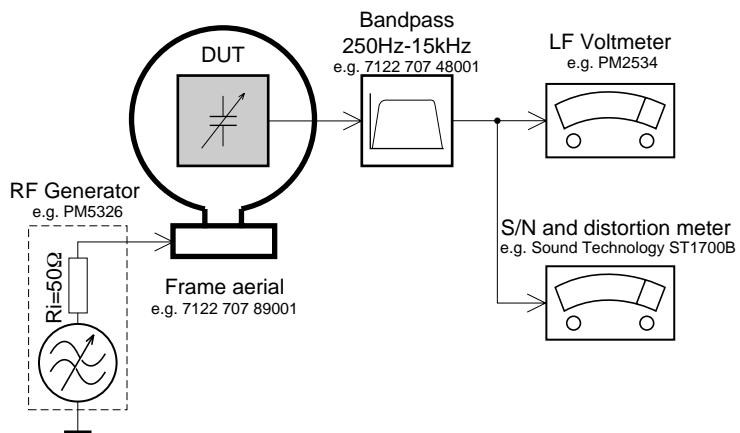

To avoid atmospheric interference all AM-measurements have to be carried out in a Faraday's cage.

### CD

Use Audio Signal Disc SBC429 4822 397 30184 (replaces test disc 3)  
L.P.F. = 13<sup>th</sup> order filter 4822 395 30204

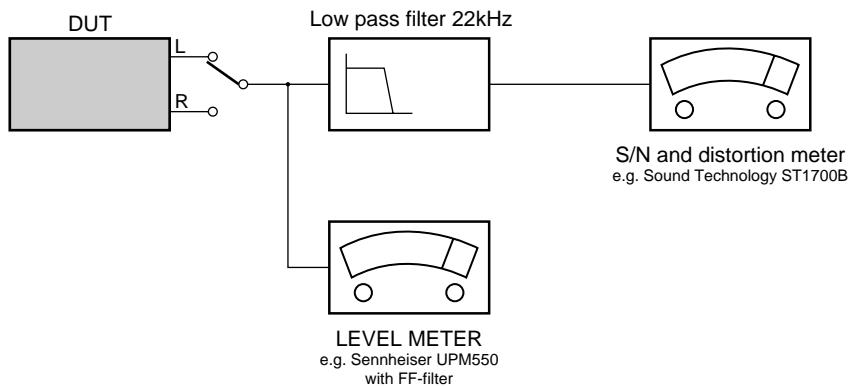


## CONNECTIONS AND CONTROLS

### CONTROLS

#### TOP AND FRONT PANEL

- ① **LIFT TO OPEN** - to open the CD door.
- ② **Source selector** - POWER ON/OFF switch and to select source of sound source:  
**CD/CD/MW/FM/TAPE**.
- ③ **Cassette Keys:**  
**PAUSE II** - to interrupt recording or playback.  
**STOP OPEN ▲** - To stop the tape and to open the cassette holder.  
**SEARCH ◀◀ or ▶▶** - to fast wind/rewind the tape.
- ④ **PLAY ▶** - to start playback.  
**RECORD ●** - to start recording.
- ⑤ **REMOTE SENSOR** - infrared sensor for remote control
- ⑥ **TUNING** - to tune to radio stations
- ⑦ **PLAY•PAUSE ▶||** - To start or interrupt CD playback.
- ⑧ **STOP ■** - to stop playback
- ⑨ **SEARCH ◀◀ or ▶▶** - to skip or search a passage or a track
- ⑩ **DBB (Dynamic Bass Boost)** - for a more vivid bass response.
- ⑪ **REPEAT** - to repeat a track/programme/entire CD playback
- ⑫ **SHUFFLE** - to play all tracks in random order
- ⑬ **VOLUME** - to adjust volume level.

English

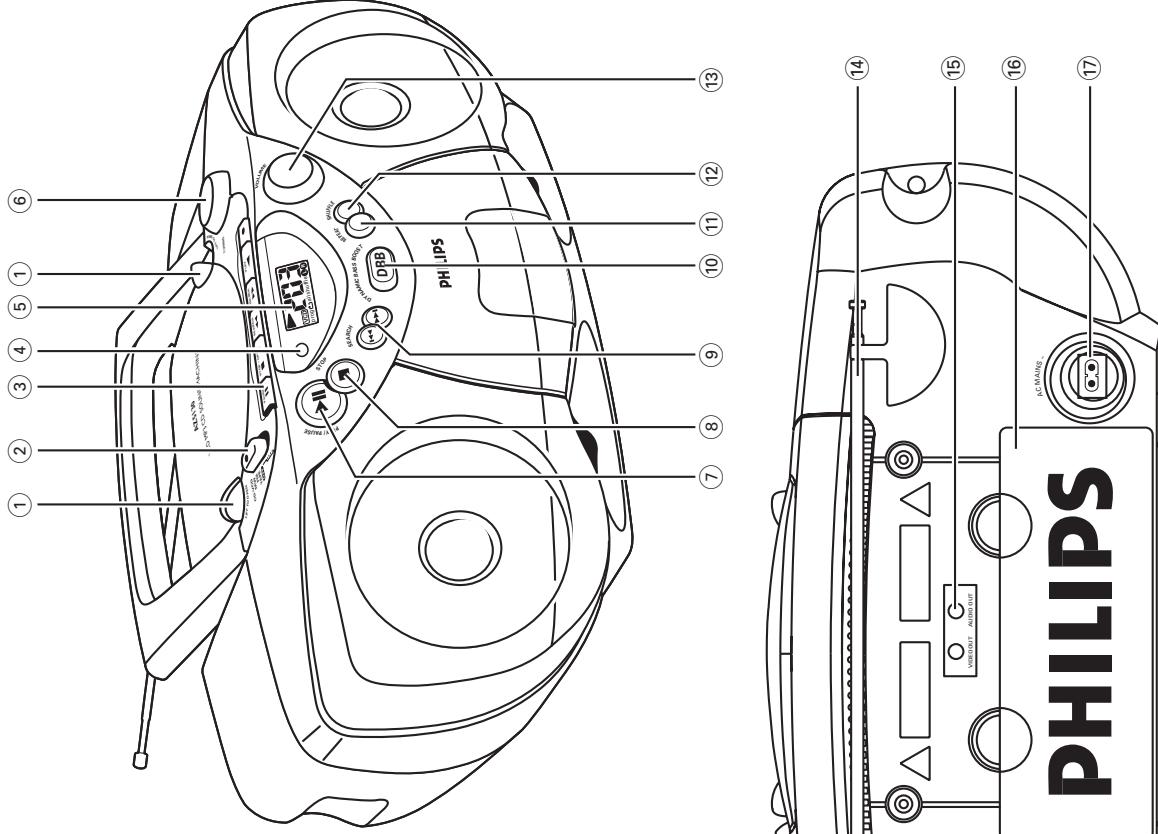

#### BACK PANEL

- ⑭ **Telescopic aerial** - to improve FM radio reception
- ⑮ **VIDEO/AUDIO OUT** - connect to the TV or VCR VIDEO/AUDIO IN
- ⑯ **Battery door** - to open the battery compartment
- ⑰ **AC MAINS ~** - socket for mains lead

#### SUPPLIED ACCESSORIES

- Remote Control ..... 1 pc  
Mains Cord ..... 1 pc  
Audio / Video Cable ..... 1 pc

#### REMOTE CONTROL

- ① **PBC (PLAYBACK CONTROL)** - to switch on or off PBC mode (for VCD version 2.0 only).
- ② **RETURN** - to return to the previous MENU level during playback (for VCD with PBC on).
- ③ **VIEW** - to scan through a VCD with 9 pictures display on TV screen. Only when PBC mode is switched off (for VCD operation only).
- ④ **OSD** - to switch on/off the on screen display on the TV screen.
- ⑤ **SLOW** - to watch a VCD at a slower speed (for VCD operation only).
- ⑥ **RESUME** - to resume playback in stop mode.
- ⑦ **GOTO** - to start playback at any chosen time on the disc (for CD/VCD) operation only and PBC mode is off.
- ⑧ **PROG** for CD/N/CD/MP3-CD ... to programme disc tracks.

## CONNECTIONS AND CONTROLS

### POWER SUPPLY

**English**

- (9) **REPEAT** for MP3-CD ..... to repeat a track, or whole disc.
- (10) **A - B** - to playback a certain scene or passage repeatedly (for CD/VCD operation only).
- (11) **ZOOM** for VCD only ..... to zoom in or zoom out picture.
- (12) **SHUFFLE** - When in CD/VCD mode, press to start or stop shuffle play mode.
- (13) **MIX/SEL** - to select disc format (CD / MP3-CD) in a mixed mode disc.
- (14) **NTSC/PAL** - to select the video output for NTSC or PAL system.
- (15) **R/L/ST** - to select channel left / channel right / stereo sound, or to select a language in a bilingual VCD.
- (16) **DIGITS 0 - 9** for CD/VCD/MP3-CD - to select a track number. (*numbers consisting more than 2 figures must be keyed in within 2 seconds*)
- (17) **PLAY/PAUSE ▶||** - to start or interrupt playback.
- (18) **SEARCH ▶| or ▷▶** (for CD/VCD/MP3-CD) - to search back or forward.
- (19) **ALBUM |◀|▶** for MP3-CD only ..... to select previous / next album
- (20) **TRACK ▶| |◀|** for MP3-CD only ..... to select previous/next title.
- (21) **STOP ■** - to stop playback or to clear a programme.

**IMPORTANT!**  
For best CD/MP3-CD/VCD play/back, please plug in your set to an AC power supply where convenient.  
If operated in DC mode, see below approximate playtime. (Playtime is also varied from different brand batteries):

	Battery type	Playtime
	Alkaline	approximate 9 hrs
	Zinc Cartonate	approximate 45 minutes

The CD part of this system also serves as a Video CD player if you connect it to your TV set. Before viewing the Video CD, ensure that the set is switched to corresponding PAL or NTSC system of your TV set (exception Multi-system TV).

### BATTERIES (NOT SUPPLIED)


Whenever convenient, use the mains supply if you want to conserve battery life. The battery supply will be switched off when the set is connected to the mains. Make sure you remove the plug from the set and wall outlet before inserting batteries.

#### Batteries

1. Open the battery compartment and insert six batteries, type **R14**, **UM2** or **C-cells**, (**preferably alkaline**) with the correct polarity as indicated by the "+" and "-" symbols inside the compartment.
2. Replace the compartment door, making sure the batteries are firmly and correctly in place.
3. Remove the batteries if they are exhausted or if they will not be used for a long period.

#### Remote control

Open the battery compartment and insert two batteries, type **AAA**, **R03** or **UM4** (preferably alkaline).

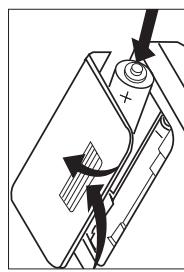

#### Notes:

- The battery supply is switched off when the set is connected to the mains.

**TV screen is disabled during CD / MP3-CD playing if your AZ5130 is battery powered.**


**Batteries contain chemical substances, so they should be disposed of properly**

# INSTRUCTIONS FOR USE

## GENERAL OPERATION

### MAINS


- Check if the mains voltage as shown on the type plate (on the bottom of the set) corresponds to your local mains voltage. If it does not consult your dealer or service organization.  
→ The set is now ready for use.
- Connect the mains lead to the **AC MAINS ~** socket and the wall socket.  
→ Disconnect the mains lead when you change over to battery supply, or to protect the set during heavy thunderstorms.

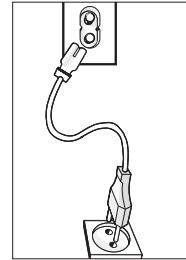

*The type plate is located on the bottom of the set.*



### GENERAL OPERATION

- Switch on the set, adjust the source selector.
- Adjust the sound using the **VOLUME** and **DBB** controls.
- Switch off the set, adjust the source selector to the **TAPE/OFF** position, with the cassette keys released.

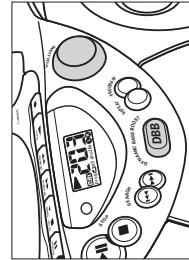

### RADIO RECEPTION

- Set the source selector to **FM** or **MW**.
- Adjust the sound using the **VOLUME** controls and the **DBB** switch.
- Tune to a radio station using the **TUNING** knob.
  - For FM, pull out the telescopic aerial. To improve FM-reception, incline and turn the aerial. Reduce its length if the FM-signal is too strong (very close to a transmitter).
  - For MW, the set is provided with a built-in aerial, so the telescopic aerial is not needed. Direct the aerial by turning the whole set.
- To switch off, set the source selector to the **TAPE/OFF** position (with the cassette keys released).

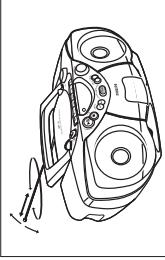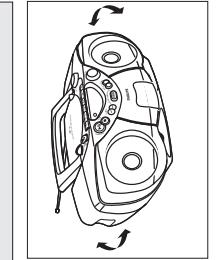

## CD/VCD/MP3-CD

### CAUTION

**Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.**

#### Environmental information

All unnecessary packaging material has been omitted. We have done our utmost to make the packaging easily separable into three mono materials: cardboard, polystyrene and plastic.

Your set consists of materials which can be recycled if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

### DISCS FOR PLAYBACK

This set can play all digital audio CD, video CD, finalised digital audio CD-Recordable (CDR) discs and finalised digital audio CD-Rewritable (CDRW) discs.

#### Support following MP3-CD formats:

- ISO 9660 or ISO 9660 + Joliet format - Max. 30 characters
- Max. Track number is 400
- Max. nested directory is 8 levels
- The max. album number is 99
- The max. MP3 programme track number is 20
- The max. length of each track is 99 minutes 59 seconds
- The player can play mixed mode disc of CD / MP3-CD
- Supported VBR bit-rate
- Supported sampling frequencies for MP3 disc : 8 kHz to 48 kHz (44.1kHz preferably)
- Supported bit-rates of MP3 disc are: 32 - 320 kbps (128 kbps preferably)

#### Following formats are not supported

- The files like \*.WMA, \*AAC, \*ALF, \*.M3U, \*.PLS, MP3 PRO
- The non-session closed discs

### LOADING A DISC

- Set the source selector to **CD/VCD**.

- Lift to open the CD door.


- "L/F" will be displayed

- Insert a disc with the label side facing up.

- Close the CD door.

- The total number of tracks of the disc appear on the display.

- "Txx" will be displayed if no disc is inserted or error in CD operation

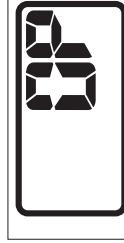

#### For MP3-CD only

→ The total track number "Txx" and album number "PLxx" will be displayed interchangeably.

# INSTRUCTIONS FOR USE

## CD/VCD/MP3-CD

- On TV screen, the total ALBUM and TRACK number will display, also with the album list (max. 10 lines per page). The current selected music is highlighted.
- Notes :** - To ensure good system performance, wait until the disc completely reads before proceeding.
  - For MP3-CD, the disc reading time may exceed 1 minute due to the large number of songs compiled into one disc.

### PLAYING A NORMAL DISC


1. Press **▶■** to start playback.

→ The track number of the current track and **▶** appear on the display.

- Press **◀■** or **▶■** on the set repeatedly (or use digits 0 - 9 buttons on the remote control) until the desired track appears on the display.

- To interrupt playback, press **▶■** again.

2. To stop playback, press **■**.

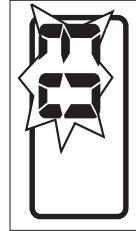

### SELECTING A DESIRED TRACK/PASSAGE

#### To select a desired track

- Press **◀■** or **▶■** on the set repeatedly (or use digits 0 - 9 buttons on the remote control) until the desired track appears on the display.

- If playback is stopped, press **▶■** to start playback.

#### To search for a particular passage during playback

- Press and hold **◀■** or **▶■** on the set for 1 second (or on the remote control, press **◀■** or **▶■**)
- During searching, the volume will be muted.

### For MP3-CD only

#### To select a desired album

- On the remote control, press **◀■** or **▶■** until the desired album number appear on the display.

- "ALBUM" will be displayed.

- On TV screen, the arrow will move forward/backward in the ALBUM menu.

#### To select a desired track

- Press **◀■** or **▶■** on the set repeatedly (or on the remote control, press **◀■** or **▶■**) to select a desired track from the current album.

- "TRACK" will be displayed.

- On TV screen, the arrow will move forward/backward in the TRACK menu.

- Use the digital keys on the remote control to select the track under current album directly.

### To select and playback another track during playback mode

1. Press **◀■** or **▶■** repeatedly to select another track.

- The new selected track will show on the display screen and TV screen and playback continuously.

2. Press **▶■** to start playback the new selected track.

### For VCD only

- Either press **◀■** or **▶■** on the remote control repeatedly to select fast search speed (x1, x2, x3 or x4).
- or
- press & hold **◀■** or **▶■** on the set for 1 second and then release **◀■** or **▶■** to select fast search speed (x1). Repeat this step to select other speed (x2, x3, x4).

## PROGRAMMING TRACKS

Programming tracks of disc is possible when playback is stopped. Up to 20 tracks can be stored in the memory in any order.

→ **PROG** will flash on the display.

1. In stop mode, press **PROG** (on remote control) to enter programme setting.  
→ **PROG** will flash on the display.
2. Press **PROG** to store the select track. The number "xxx" represents the track no.
3. Press **PROG** to store the select track. The number "xxx" represents the track no.
- Repeat steps **1** to **3** to store other tracks.
4. Press **■** to end programme setting.  
→ **PROG** will remain on the display.
- Press **PROG** (on remote control) in stop mode to review the programme sequence.
5. Press **▶■** to play the programmed tracks.
- If you press **REPEAT** during programme playback, the current track or all programmed tracks will be played repeatedly.  
→ **REPEAT/REPEAT ALL** icon and **PROG** will appear on the display.
6. Press **■** in stop mode to clear the programme.  
→ **PROG** will disappear from the display.

**Notes :** - The programming is automatically cleared as soon as the CD compartment is opened.  
- The function of programme setting is disabled in PLAY/PAUSE mode.

- Programme cannot be used for VCDs when PBC is switched on. Switch off PBC before storing tracks from such a VCD.

### For MP3-CD only

1. In stop mode, press **PROG** on the remote control to enter programme setting.  
→ **PROG** will start flashing and "PROG" will be displayed.
- On TV screen, "PROG" program list (5 lines per page) will be displayed.
2. Press **PROG** to store the select album. The number "xxx" represents the album no.
3. Press **PROG** to store the select album. The number "xxx" represents the album no.
4. Press **◀■** / **▶■** repeatedly (or **digits 0 - 9** on the remote control) to select the desired TRACK for programming.
5. Press **PROG** to store the select track.  
→ **PROG** will remain on the display.
- Repeat steps **1** to **5** to store other desired album and track.
6. Press **■** to end programme setting.
- Press **PROG** in stop mode can review the programme sequence.
7. Press **▶■** to start programme playback. You can press **◀■** / **▶■** to select the programmed track to play.
8. Press **■** once stop programme playback or **twice** to clear the programme.

## INSTRUCTIONS FOR USE

CD/VCD/MP3-CD	CD/VCD/MP3-CD
<p><b>SHUFFLE</b></p> <p>You can play all the tracks in random order.</p> <ol style="list-style-type: none"> <li>During playing, pause or stop mode, press <b>SHUFFLE</b> to enable SHUFFLE play mode. → <b>SHUFFLE</b> will appear on the display.</li> <li>To exit shuffle mode, press <b>SHUFFLE</b> again or ■. → <b>SHUFFLE</b> will disappear from the display.</li> </ol> <p><b>Note :</b> - If the Shuffle function enabled, and the Repeat function is set on, will disable the Shuffle play mode.</p>	<p><b>VIDEO CD</b></p> <p><b>Playing a Video CD with PBC</b></p> <p>VCD with PBC (Playback Control) will be indicated on your TV screen as soon as they are inserted. PBC is a predefined play sequence stored on the VCD.</p> <ol style="list-style-type: none"> <li>Switch on the TV, insert a VCD with PBC.</li> <li>Menu appears on the TV screen.</li> </ol> <p><b>If the menu consists of a list of titles, you can select a sequence directly</b></p> <ol style="list-style-type: none"> <li>Press digits <b>0 - 9</b> on the remote control to select your choice. → The VCD starts playing of the selected sequence automatically.</li> <li>Press <b>RETURN</b> on the remote control to go back to the previous menu.</li> </ol> <p><b>Note :</b> - If a menu consists of more than one page, press ■/■ to go through the pages.</p>
<p><b>REPEAT</b></p> <p>You can play the current track or the whole disc repeatedly.</p> <ol style="list-style-type: none"> <li>During CD/ MP3-CD playing or pause mode, press <b>REPEAT</b> on the remote control or on the set. → <b>REPEAT</b> icon ↻ - to repeat the current track. → <b>REPEAT ALL</b> icon ↻ all- to repeat the whole disc.</li> <li>To exit the repeat mode, press <b>REPEAT</b> until the <b>REPEAT/REPEAT ALL</b> icon disappears from the display.</li> </ol> <p><b>Notes :</b> - If the Repeat function is enable, and the Shuffle function is set on, will disable all the Repeat play modes. - If the Repeat function is enable, and the Stop button is pressed, will disable all the Repeat play modes.</p>	<p><b>Switching off PBC</b></p> <ul style="list-style-type: none"> <li>In stop mode, press <b>PBC</b>. → On TV screen, "PBC OFF" will be displayed shortly.</li> </ul> <p><b>Pause</b></p> <ol style="list-style-type: none"> <li>During playback, press ■/■ to have a still picture on the TV screen. → The sound will be muted. → On TV screen, "PAUSE --:" will be displayed.</li> <li>Press ■/■ again to continue playback.</li> </ol> <p><b>Goto</b></p> <ol style="list-style-type: none"> <li>Press <b>GOTO</b> on the remote control. → On TV screen, "GOTO --:" will be displayed.</li> <li>Press digits <b>0 - 9</b> on the remote control to key in the disc time which you want the disc to begin playback.</li> </ol> <p><b>Note :</b> - The disc time entered should not be greater than the total disc time. - Goto mode is not available whenever PBC mode is switched on.</p>
<p><b>VIDEO CD</b></p> <p><b>Adjusting the TV System</b></p> <p>Before viewing the Video CD, ensure that the set is switched to corresponding PAL or NTSC system of your TV set (exception Multi - system TV).</p> <ol style="list-style-type: none"> <li>On the remote control, press <b>NTSC/PAL</b> to switch between NTSC and PAL TV system.</li> </ol> <p><b>OSD - On Screen Display</b></p> <p>If you insert VCD/CD, your TV screen will serve as an additional display for messages (e.g. PLAY, STOP), and information stored on the VCD/CD.</p> <ul style="list-style-type: none"> <li>Press OSD on the remote control to select viewing various information. → The current track and current /elapsed time in the track/disc appear on the display.</li> </ul>	<p><b>Slow</b></p> <ol style="list-style-type: none"> <li>Press <b>SLOW</b> on the remote control to watch a VCD at a slower speed. There are 4 types of slow modes to select. → The sound will be muted → On TV screen, "SLOW 1/2", "SLOW 1/4", "SLOW 1/8" or "SLOW 1/16" will be displayed.</li> <li>To resume playback at normal speed, press <b>SLOW</b> repeatedly until "PLAY" appears on the TV screen or press ■/■.</li> </ol> <p><b>A-B repeat</b></p> <p>This feature is also applicable to audio CD (except for MP3-CD). To Play a certain scene or passage of the disc repeatedly.</p>

# INSTRUCTIONS FOR USE

## CD/VCD/MP3-CD

### VIDEO CD

- 1.** Press **A-B** on the remote control during playback to mark the start point of the chosen scene or passage.

→ "REPEAT A" will appear on the screen.

- 2.** Press **A-B** again to mark the end of the chosen scene or passage.

→ "REPEAT AB" will appear on the screen.

- The selected scene or passage will start playing repeatedly.

**3.** Press **A-B** once more to return to normal playback.

→ "REPEAT AB" will disappear from the display.

- Notes :** - You can also cancel A-B repeat by pressing **◀** or **▶**.  
- A-B repeat marking can cross from one track to another. But for VCD 2.0, you are only able to set the A-B repeat marking within the same track.

### Resume

- In stop mode, press **RESUME** on the remote control to start playback again from where you have stopped.

- Note :** - Resume will not be available if you have changed the disc, opened the disc tray or disconnected the system from the power supply.

### View

This feature allows you to scan through a VCD for a quick review. PBC mode must be switched off.

- 1.** In stop mode, press **VIEW** on the remote control to go to disc view function.

→ On TV screen, up to 9 pictures will be displayed. If a menu consists of more than one page, press **◀** or **▶** to view the previous/next page.

→ The first several seconds of each track will be played.

To exit review mode, press **digits 0 - 9** to play the desired track or **▶▶** to play the current selected track.

- 2.** In playback mode, press **VIEW** on the remote control to go to track view function.

→ press **◀◀** or **▶▶** to select the track.

→ On TV screen, up to 9 pictures within the track will be displayed.

→ The first several seconds of each picture will be played.

To exit review mode, press **digits 0 - 9** to play the desired position within the track or **▶▶** to play the current selected position.

- Note :** - If the disc is AVCD disc and there're no video tracks on the same viewed page, cannot use the direct digital key to play the track.

### Return

- Press **RETURN** on the remote control to return to the previous VCD disc MENU level. It is functional only for Video CD when PBC is switched on.

### R/L/ST

- You can use it to select the different audio modes.

- Press **R/L/ST** on the remote control repeatedly to select the following modes:  
**① ② ③** on the LCD represents channel left/channel right / dual channel on a bilingual VCD or mono left / mono right / stereo on single language VCD.

## CD/VCD/MP3-CD

**English**


**English**

This set can play a mixed mode disc.  
– mixture of audio CD and MP3-CD  
– mixture of other combination may not be operated normally.


1. As default, audio CD tracks will be read first.  
→ **①** will be displayed.
2. Press **MIXSEL** (on the remote control) repeatedly to select other disc modes.

- **MP3-CD**:
- **MP3** is displayed.  
→ TV screen, MP3 menu is displayed.

**Notes :** - For protected CDs, "MIX CD-DA" is displayed on your TV screen even if the disc does not have other format. The **MIXSEL** normal functions are not available for protected CDs.

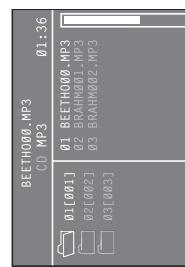

## PLAYING A MIXED MODE DISC

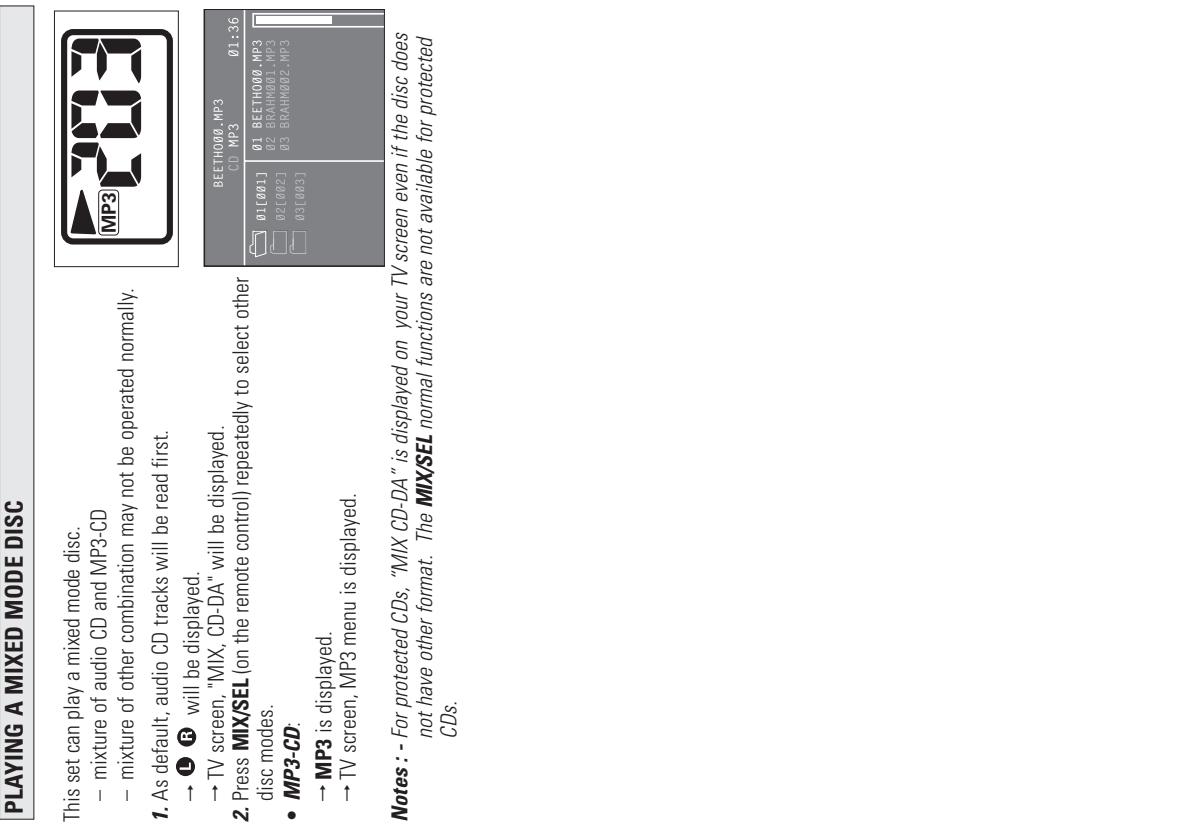


# INSTRUCTIONS FOR USE

## CASSETTE RECORDER


### CASSETTE PLAYBACK

1. Set the source selector to **TAPE/OFF**.
  2. Press **STOP•OPEN** □▲ to open the cassette holder.
  3. Insert a recorded cassette.
  4. Press **PLAY** ▲ and playback will start.
  5. Adjust the sound using the **VOLUME** and **DBB** controls.
  6. For brief interruptions, press **PAUSE II**. Press **PAUSE II** again to resume playback.
  7. By pressing ▲ or ▶, fast winding of the tape is possible in both directions.
  8. To stop playback, press **STOP•OPEN** □▲
- The keys are automatically released at the end of the tape.

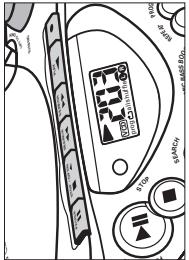


## CASSETTE RECORDER

### RECORDING FROM THE RADIO

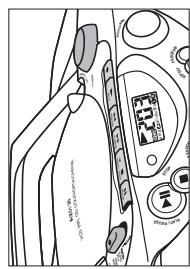

1. Set the source selector to **FM** or **MW**.
2. Tune to the desired radio station using the **TUNING** knob.
3. Press **STOP•OPEN** □▲ to open the cassette holder.
4. Insert a blank tape.
5. Press **RECORD** ● to start recording.
6. For brief interruptions, press **PAUSE II**. To resume recording, press **PAUSE II** again.
7. To stop recording, press **STOP•OPEN** □▲


### SYNCHRO START CD RECORDING

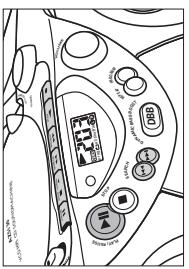

1. Set the source selector to **CD•VCD**.
  2. Insert a CD and if desired, programme track numbers.
  3. Press **STOP•OPEN** □▲ to open the cassette holder.
  4. Insert a blank cassette.
  5. Press **RECORD** ● to start recording.
- Playing of the CD programme starts automatically from the beginning of the programme. It is not necessary to start the CD player separately.
6. For brief interruptions, press **PAUSE II**. To resume recording, press **PAUSE II** again.
  7. To stop recording press **STOP•OPEN** □▲

**To select and record a particular passage within a track**

1. Press and hold **SEARCH** ▲ or ▼ on the set to select a passage.
2. Put the CD player in **PAUSE II** position at the selected passage.  
→ Recording will start from this exact point when you press **RECORD** ●.

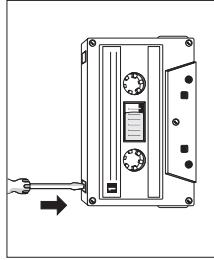

### CASSETTE RECORDING

#### General information on cassette recording

- Recording is permissible insofar as copyright or other rights of third parties are not infringed.
- This deck is not suitable for recording on CHROME (IEC II) or METAL (IEC IV) type cassettes. For recording you should use NORMAL type cassettes (IEC I) on which the tabs have not been broken.
- Check and tighten slack tape before use with a pencil, to avoid jamming the deck mechanism.
- The recording level is set automatically. Altering the **VOLUME** and **DBB** controls will not affect the recording in progress.
- No recording will take place during the 3 seconds, when the leader tape passes the recorder heads.

**Notes :** -No recording will take place during the 7 seconds in the beginning of the tape.



- To prevent the accidental erasure of a recording, keep the cassette side to be safeguarded in front of you and break out the left tab. Recording on this side is no longer possible.

# INSTRUCTIONS FOR USE

## MAINTENANCE



### PRECAUTIONS & GENERAL MAINTENANCE

- Place the set on a hard, flat surface so that the system does not tilt.
- Always shut the CD door to keep the CD compartment dust-free. To clean, dust the compartment with a soft dry cloth.
- The mechanical parts of the set contain self-lubricating bearings and must not be oiled or lubricated.
- To clean the set, use a soft, slightly dampened chamois leather. Do not use any cleaning agents containing alcohol, ammonia, benzene or abrasives as these may harm the housing.

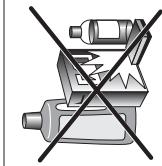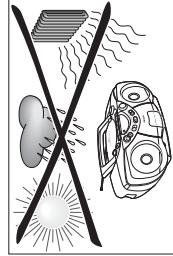

### CD PLAYER AND CD HANDLING

- The lens of the CD player should *never be touched*.
- Sudden changes in the surrounding temperature can cause condensation to form and the lens of your CD player to cloud over. Playing a CD is then not possible. Do not attempt to clean the lens but leave the set in a warm environment until the moisture evaporates.
- Use only Digital Audio CDs.
- To take a CD out of its box, press the centre spindle while lifting the CD.

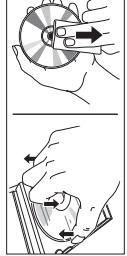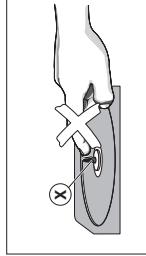

- Always pick up the CD by the edge and replace the CD back in its box after use to avoid scratching and dust.
- To clean the CD, wipe in a straight line from the centre towards the edge using a soft, lint-free cloth. Do not use cleaning agents as they may damage the disc.
- Never write on a CD or attach stickers to it.*

### TAPE DECK MAINTENANCE

To ensure a good recording and playback of the tape deck, clean parts (A), (B) and (C) show in the diagram below, after approx. 50 hours of operation, or on average once a month. Use a cotton bud slightly moistened with alcohol or a special head cleaning fluid to clean the deck.

- Open the cassette holder by pressing **STOP•OPEN** □▲.
- Press **PLAY** ▲ and clean the rubber pressure rollers (C).
- Press **PAUSE** II and clean the magnetic heads (A) and also the capstans (B).
- After cleaning, press **STOP•OPEN** □▲.

Cleaning of the heads can also be done by playing a cleaning cassette through once.

### GENERAL

The system does not react when buttons pressed/set does not work/no display on LCD. Sound cannot be heard or is of poor quality

The remote control does not function properly

- Slide the source sector to TAPE/OFF. Remove and reconnect the AC power plug for 30 seconds and switch on the system again.
- Adjust the volume.
- Make sure the MP3-CD was recorded within 32-320 kbps (128kbps preferably) with sampling frequencies at 8 - 48 kHz (44.1kHz preferably).
- Reduce the distance between the remote control and the system.
- Insert the batteries with their polarities (+/- signs) aligned as indicated.
- Replace the batteries.
- Point the remote control in the direction of the system's IR sensor.

## TROUBLESHOOTING

English

### Problem

#### CD/VCD OPERATION

"**NO DISC**" is displayed

- Insert a disc.
- Check if the disc is inserted upside down.
- Wait until the moisture condensation at the lens has cleared.
- Replace or clean the disc, see "Maintenance".
- Use a readable disc or correct recorded format MP3-CD.
- Connect the cable between the system and TV.
- Change the system to the respective PAL or NTSC setting.

#### RADIO RECEPTION


Radio reception is poor  
No picture on TV  
No colour on TV

- If the signal is too weak, adjust the antenna for better reception.
- Increase the distance between the Receiver and your TV or VCR.

#### TAPE OPERATION/RECORDING

Recording or playback cannot be made

- Clean deck parts, see "Maintenance".
- Use only NORMAL (IEC I) tape.
- Apply a piece of adhesive tape over the missing tab space.

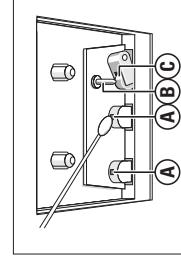

## DISASSEMBLY DIAGRAM

### A. REMOVE BACK CABINET ASSEMBLY

- REMOVE SCREWS A1(3x35) 7PCS
- REMOVE SCREWS A2(3x20) 2PCS
- REMOVE SCREWS A3(3x12) 2PCS(under the handle)
- REMOVE FRONT CABINET




### B. REMOVE CD PANEL ASSEMBLY

- REMOVE SCREWS B1(3x12) 2PCS
- REMOVE CD PANEL



### C REMOVE VCD BOARD

- REMOVE SCREWS C4(2.5x10) 4PCS, THEN REMOVE LCD BOARD
- REMOVE SCREWS C5(3x10) 4PCS, THEN REMOVE BRACK-LCD
- REMOVE SCREWS C6(3x12) 4PCS, THEN REMOVE CASSETTE BOARD
- REMOVE SCREWS C7(3x10) 6PCS, THEN REMOVE VCD BOARD.

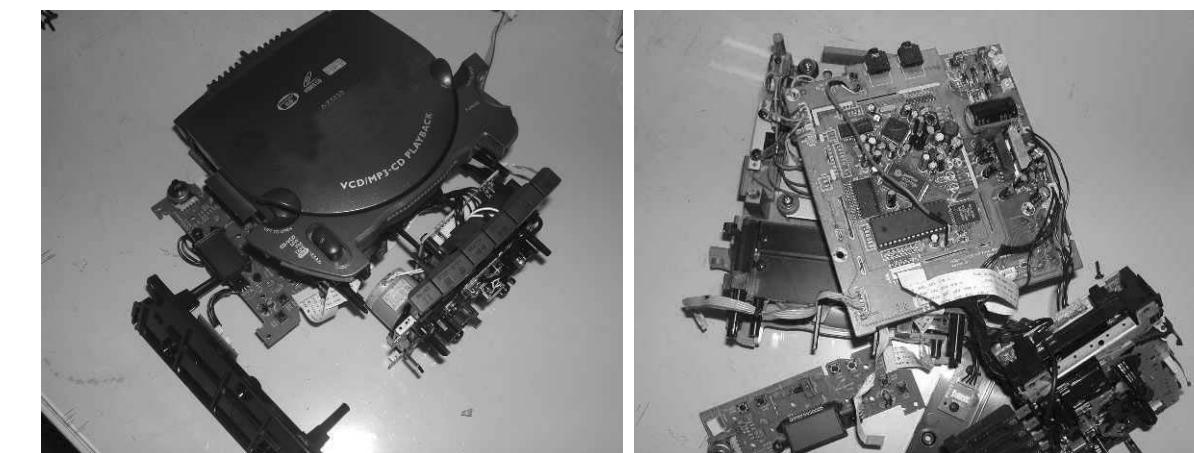

## ABBREVIATIONS AND PIN-DESCRIPTION OF ICS

## S1A902X01

## PIN DESCRIPTION

Terminal voltage: Typical terminal voltage at no signal with test circuit.

VCC = 3V, Ta = 25°C

Pin No.	Characteristic	Internal Circuit	Terminal Voltage	
			AM	FM
1	FMRFIN		0	0.8
2	RFGND		0	0
3	FMMUTE		2.2	2.2
4	MIXOUT		3.0	2.9

Pin No.	Characteristic	Internal Circuit	Terminal Voltage	
			AM	FM
11	STLED (Stereo LED)		-	-
12	QUAD (FM QUAD. Detector)		2.5	2.2
13 14	R-OUT (R-ch out) L-OUT (L-ch out)		1.1	1.1
15	LPF1 - LPF terminal for sync. Detector - Bias terminal for MO/ST SW ckt. V16 = Vcc → MONO V16 = OPEN → STEREO		2.2	2.2


## ABBREVIATIONS AND PIN-DESCRIPTION OF ICS

S1A902X01

Pin No.	Characteristic	Internal Circuit	Terminal Voltage	
			AM	FM
11	STLED (Stereo LED)		-	-
12	QUAD (FM QUAD. Detector)		2.5	2.2
13 14	R-OUT (R-ch out) L-OUT (L-ch out)		1.1	1.1
15	LPF1 - LPF terminal for sync. Detector - Bias terminal for MO/ST SW ckt. V16 = Vcc → MONO V16 = OPEN → STEREO		2.2	2.2

Pin No.	Characteristic	Internal Circuit	Terminal Voltage	
			AM	FM
16	LPF2 - LPF terminal for phase detector - Bias terminal for AM/FM SW ckt. V16=Vcc→AM V16=OPEN→FM		3	2.2
17	MPXIN		0.8	0.8
18	DETOUT		1.0	0.9
19	AFC		-	-

AMBIAS: AM mode → ON, FM mode → OFF  
 FMBIAS: AM mode → OFF, FM mode → ON

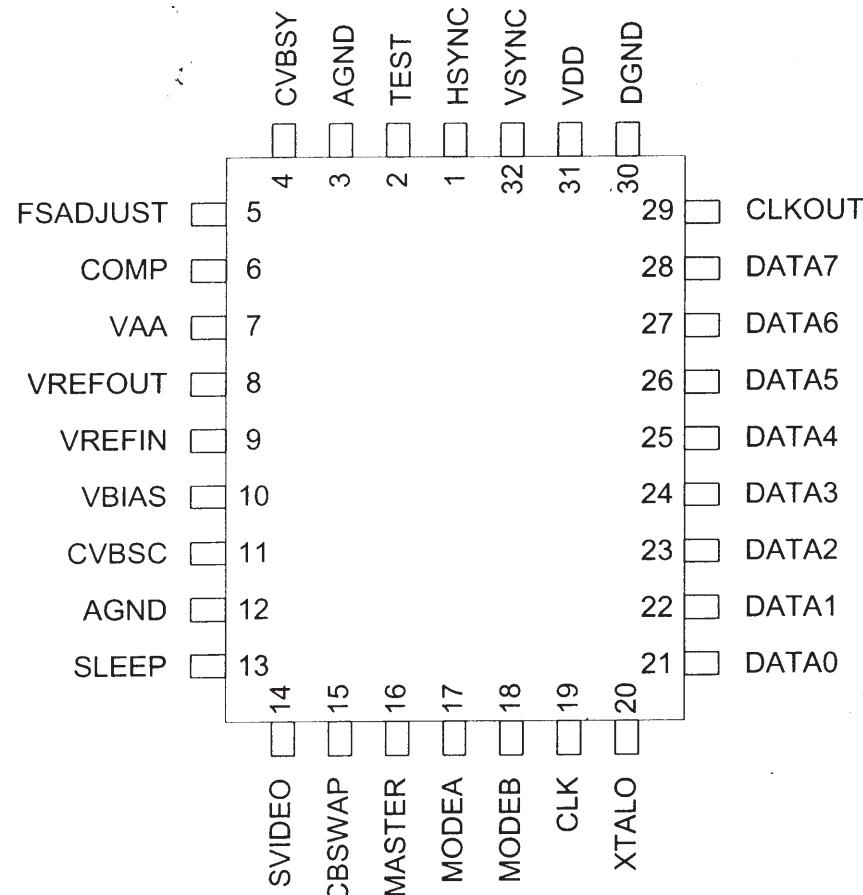**BLOCK DIAGRAM OF INTEGRATED CIRCUIT****SPCA711A****PINOUT and DESCRIPTION****(Table 1.)**

Mnemonic	PIN No.	Type	Description
DATA[7:0]	21 - 28	I	YCrCb pixel inputs. They are latched on the rising edge of CLK. YCrCb input data conform to CCIR 601.
CLKOUT	29	O	Pixel clock output
VSYNC	32	I/O	Vertical sync input/output. VSYNC is latched/output following the rising edge of CLK.
HSYNC	1	I/O	Horizontal sync input/output. HSYNC is latched/output following the rising edge of CLK.
MASTER	16	I	Master/slave mode selection. A logical high for master mode operation. A logical 0 for slave mode operation.
CBSWAP	15	I	Cr and Cb pixel sequence configuration pin. A logic high swap the

Mnemonic	PIN No.	Type	Description
			Cr and Cb sequence.
SVIDEO	14	I	SVIDEO select input pin. A logic high selects Y/C output. A logic low selects composite video output.
SLEEP	13	I	Power save mode. A logic high on this pin puts the chip into power-down mode. This pin is equal to reset pin. An external logic high pulse should input to the pin when power on.
MODEA	17	I	Mode configuration pin.
MODEB	18	I	Mode configuration pin.
CLK	19	I	27MHz crystal oscillator input. A crystal with 27MHz clock frequency can be connected between this pin and XTALO.
XTALO	20	O	Crystal oscillator output.
TEST	2	I	Test pin. These pins must be connected to DGND.
VREFIN	9	I	Voltage reference input. An external voltage reference must supply typical 1.235V to this pin. A 0.1μF ceramic capacitor must be used to de-couple this input to GND. The decoupling capacitor must be as closed as possible to minimize the length of the load. This pin may be connected directly to VREFOUT.
VREFOUT	8	O	Voltage reference output. It generates typical 1.2V voltage reference and may be used to drive VREFIN pin directly.
FSADJ	5	-	Full-Scale adjust control pin. The Full-Scale current of D/A converters can be adjusted by connecting a resistor (RSET) between this pin and ground.
COMP	6	-	Compensation pin. A 0.1μF ceramic capacitor must be used to bypass this pin to VAA. The lead length must be kept as short as possible to avoid noise.
VBIAS	10	-	DAC bias voltage. Potential normally 0.7V less than COMP.
VDD	31	-	Digital power pin
DGND	30	-	Digital ground pin
CVBSY	4	O	Composite/Luminance output. This is a high-impedance current source output. The output format can be selected by the PAL pin. The CVBSY can drive a 37.5 Ω load.
CVBSC	11	O	Composite/Chroma output. This is a high impedance current source Output. The output format can be selected by the PAL pin. The pin can drive a 37.5 Ω load.






**BLOCK DIAGRAM OF INTEGRATED CIRCUIT****MM1469AH****SPCA718A****4. SIGNAL DESCRIPTIONS**


Figure 4-1 SPCA718A Pin Map

**BLOCK DIAGRAM**

**WIRING DIAGRAM**

## TUNER AND POWER AMPLIFIER BOARD - CIRCUIT DIAGRAM

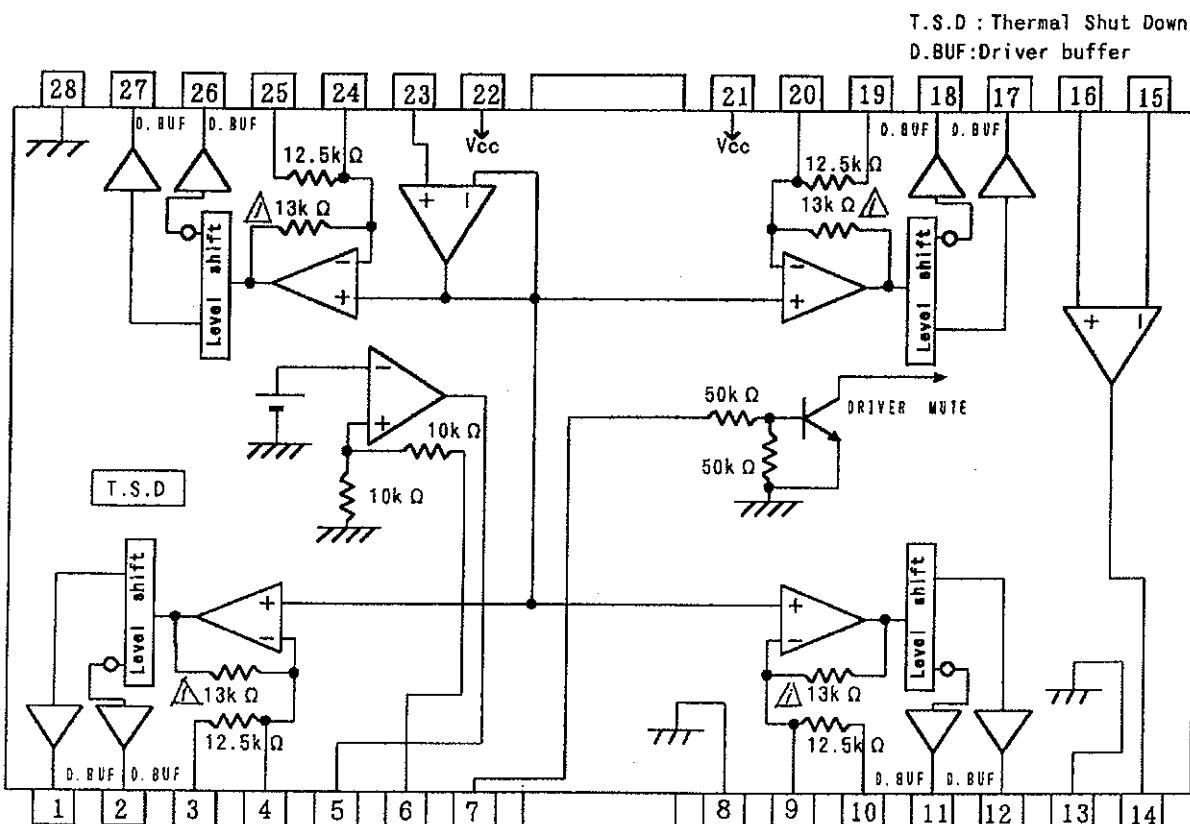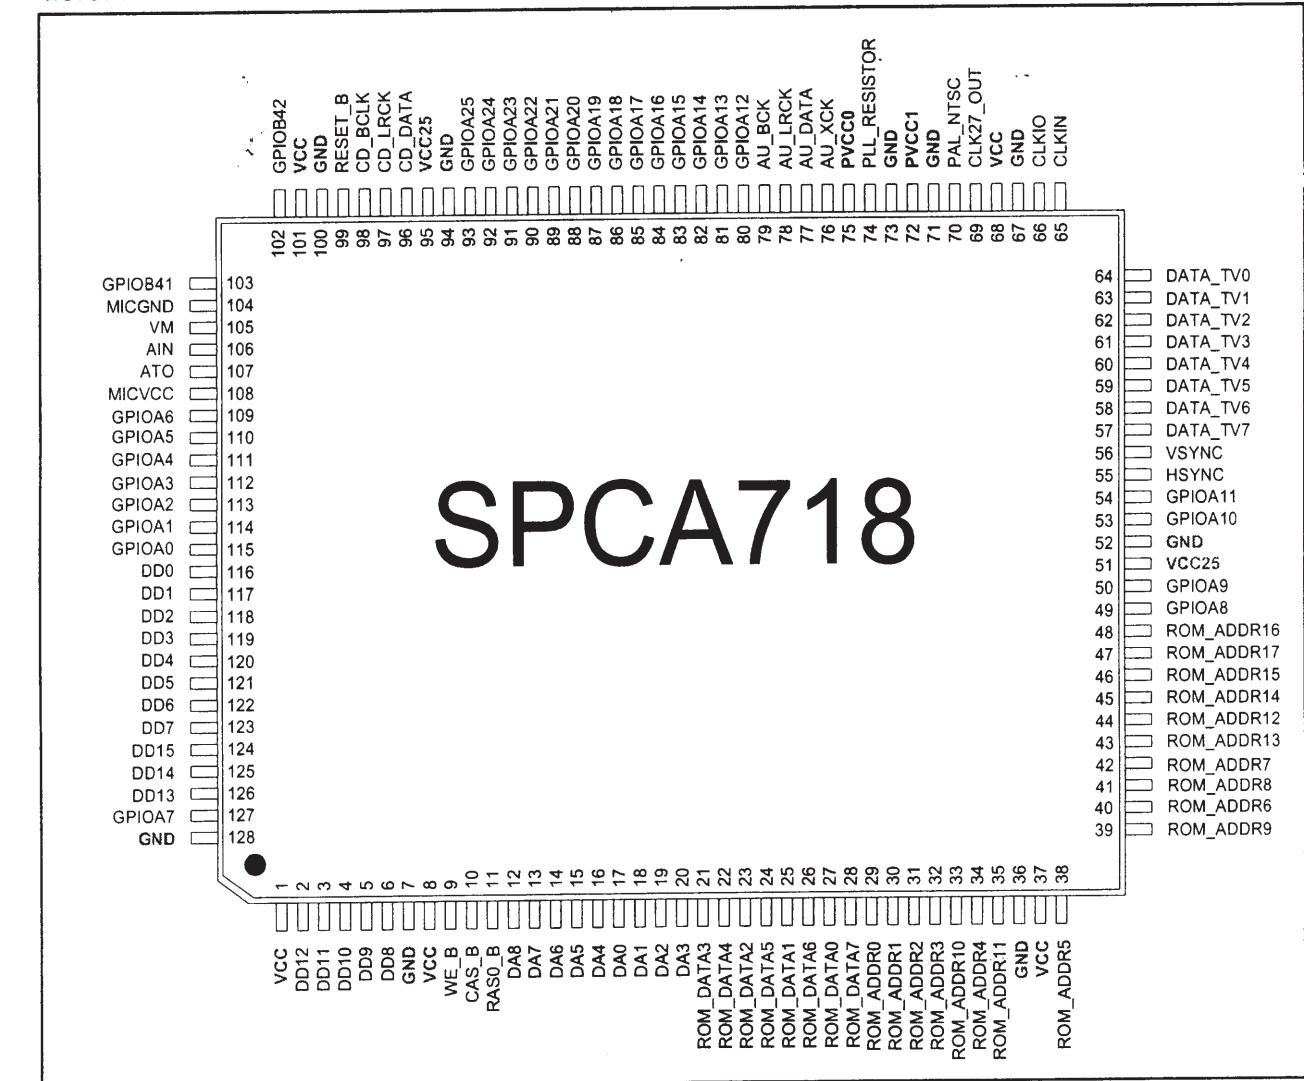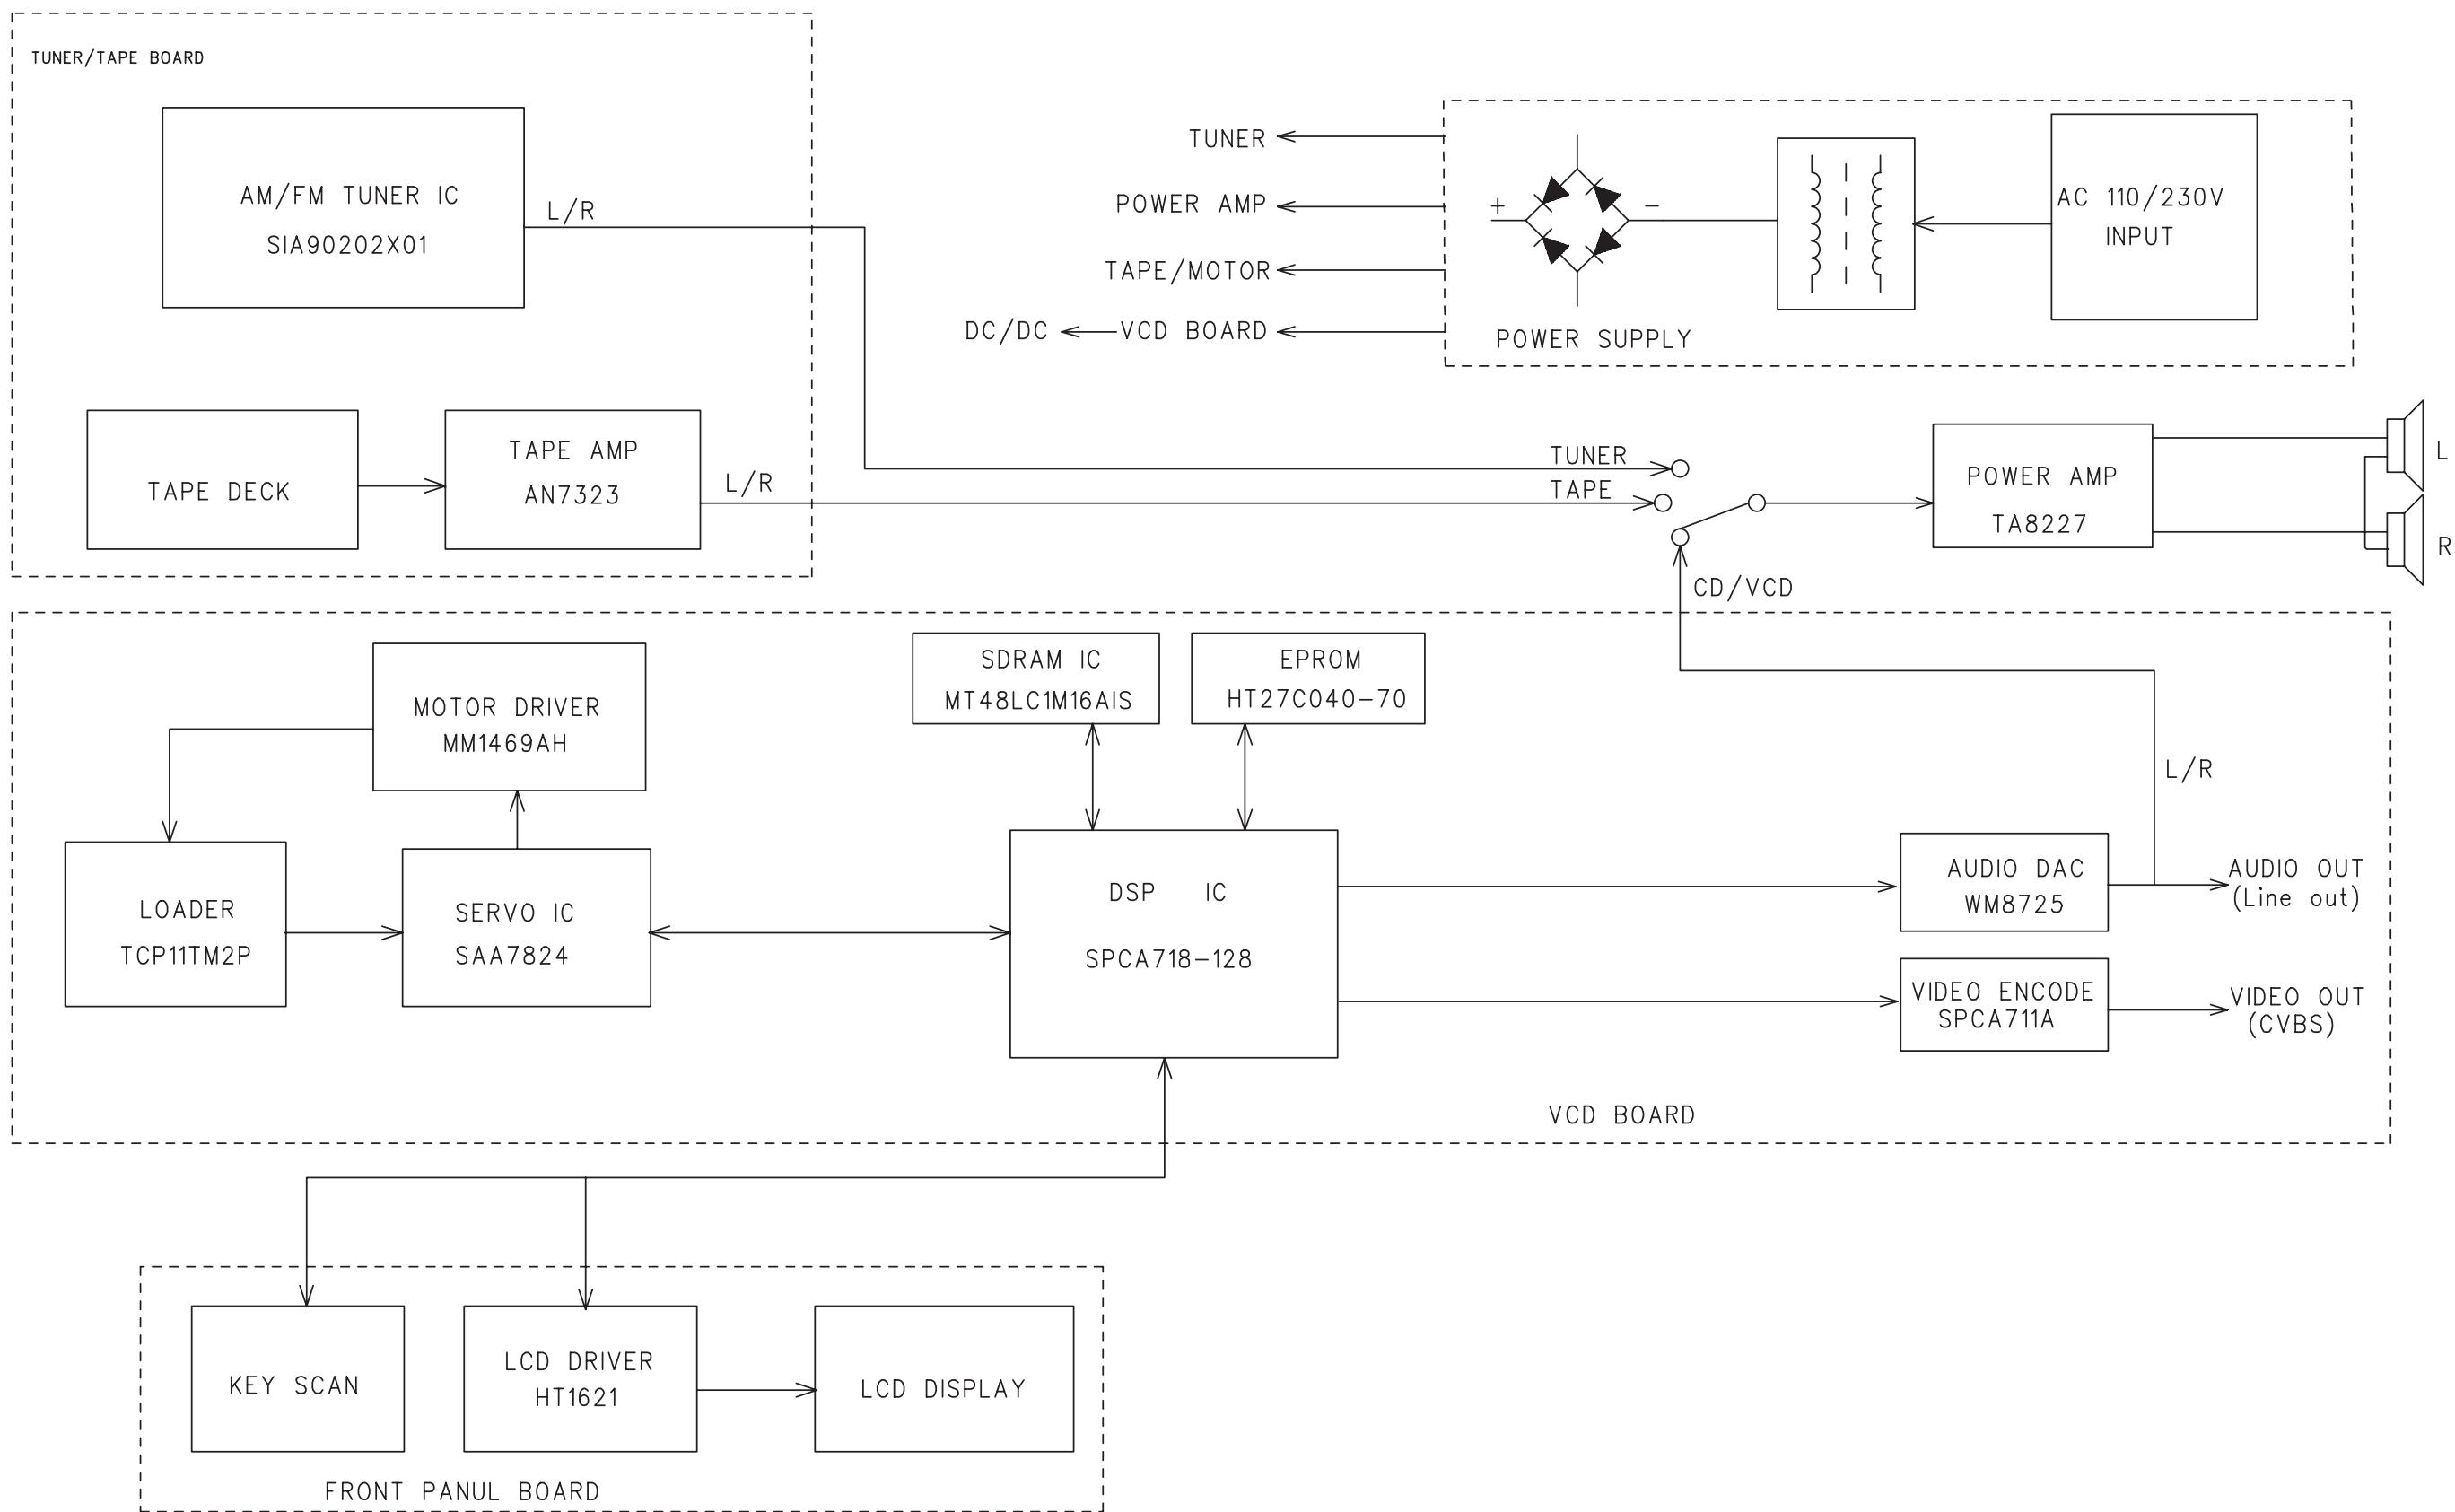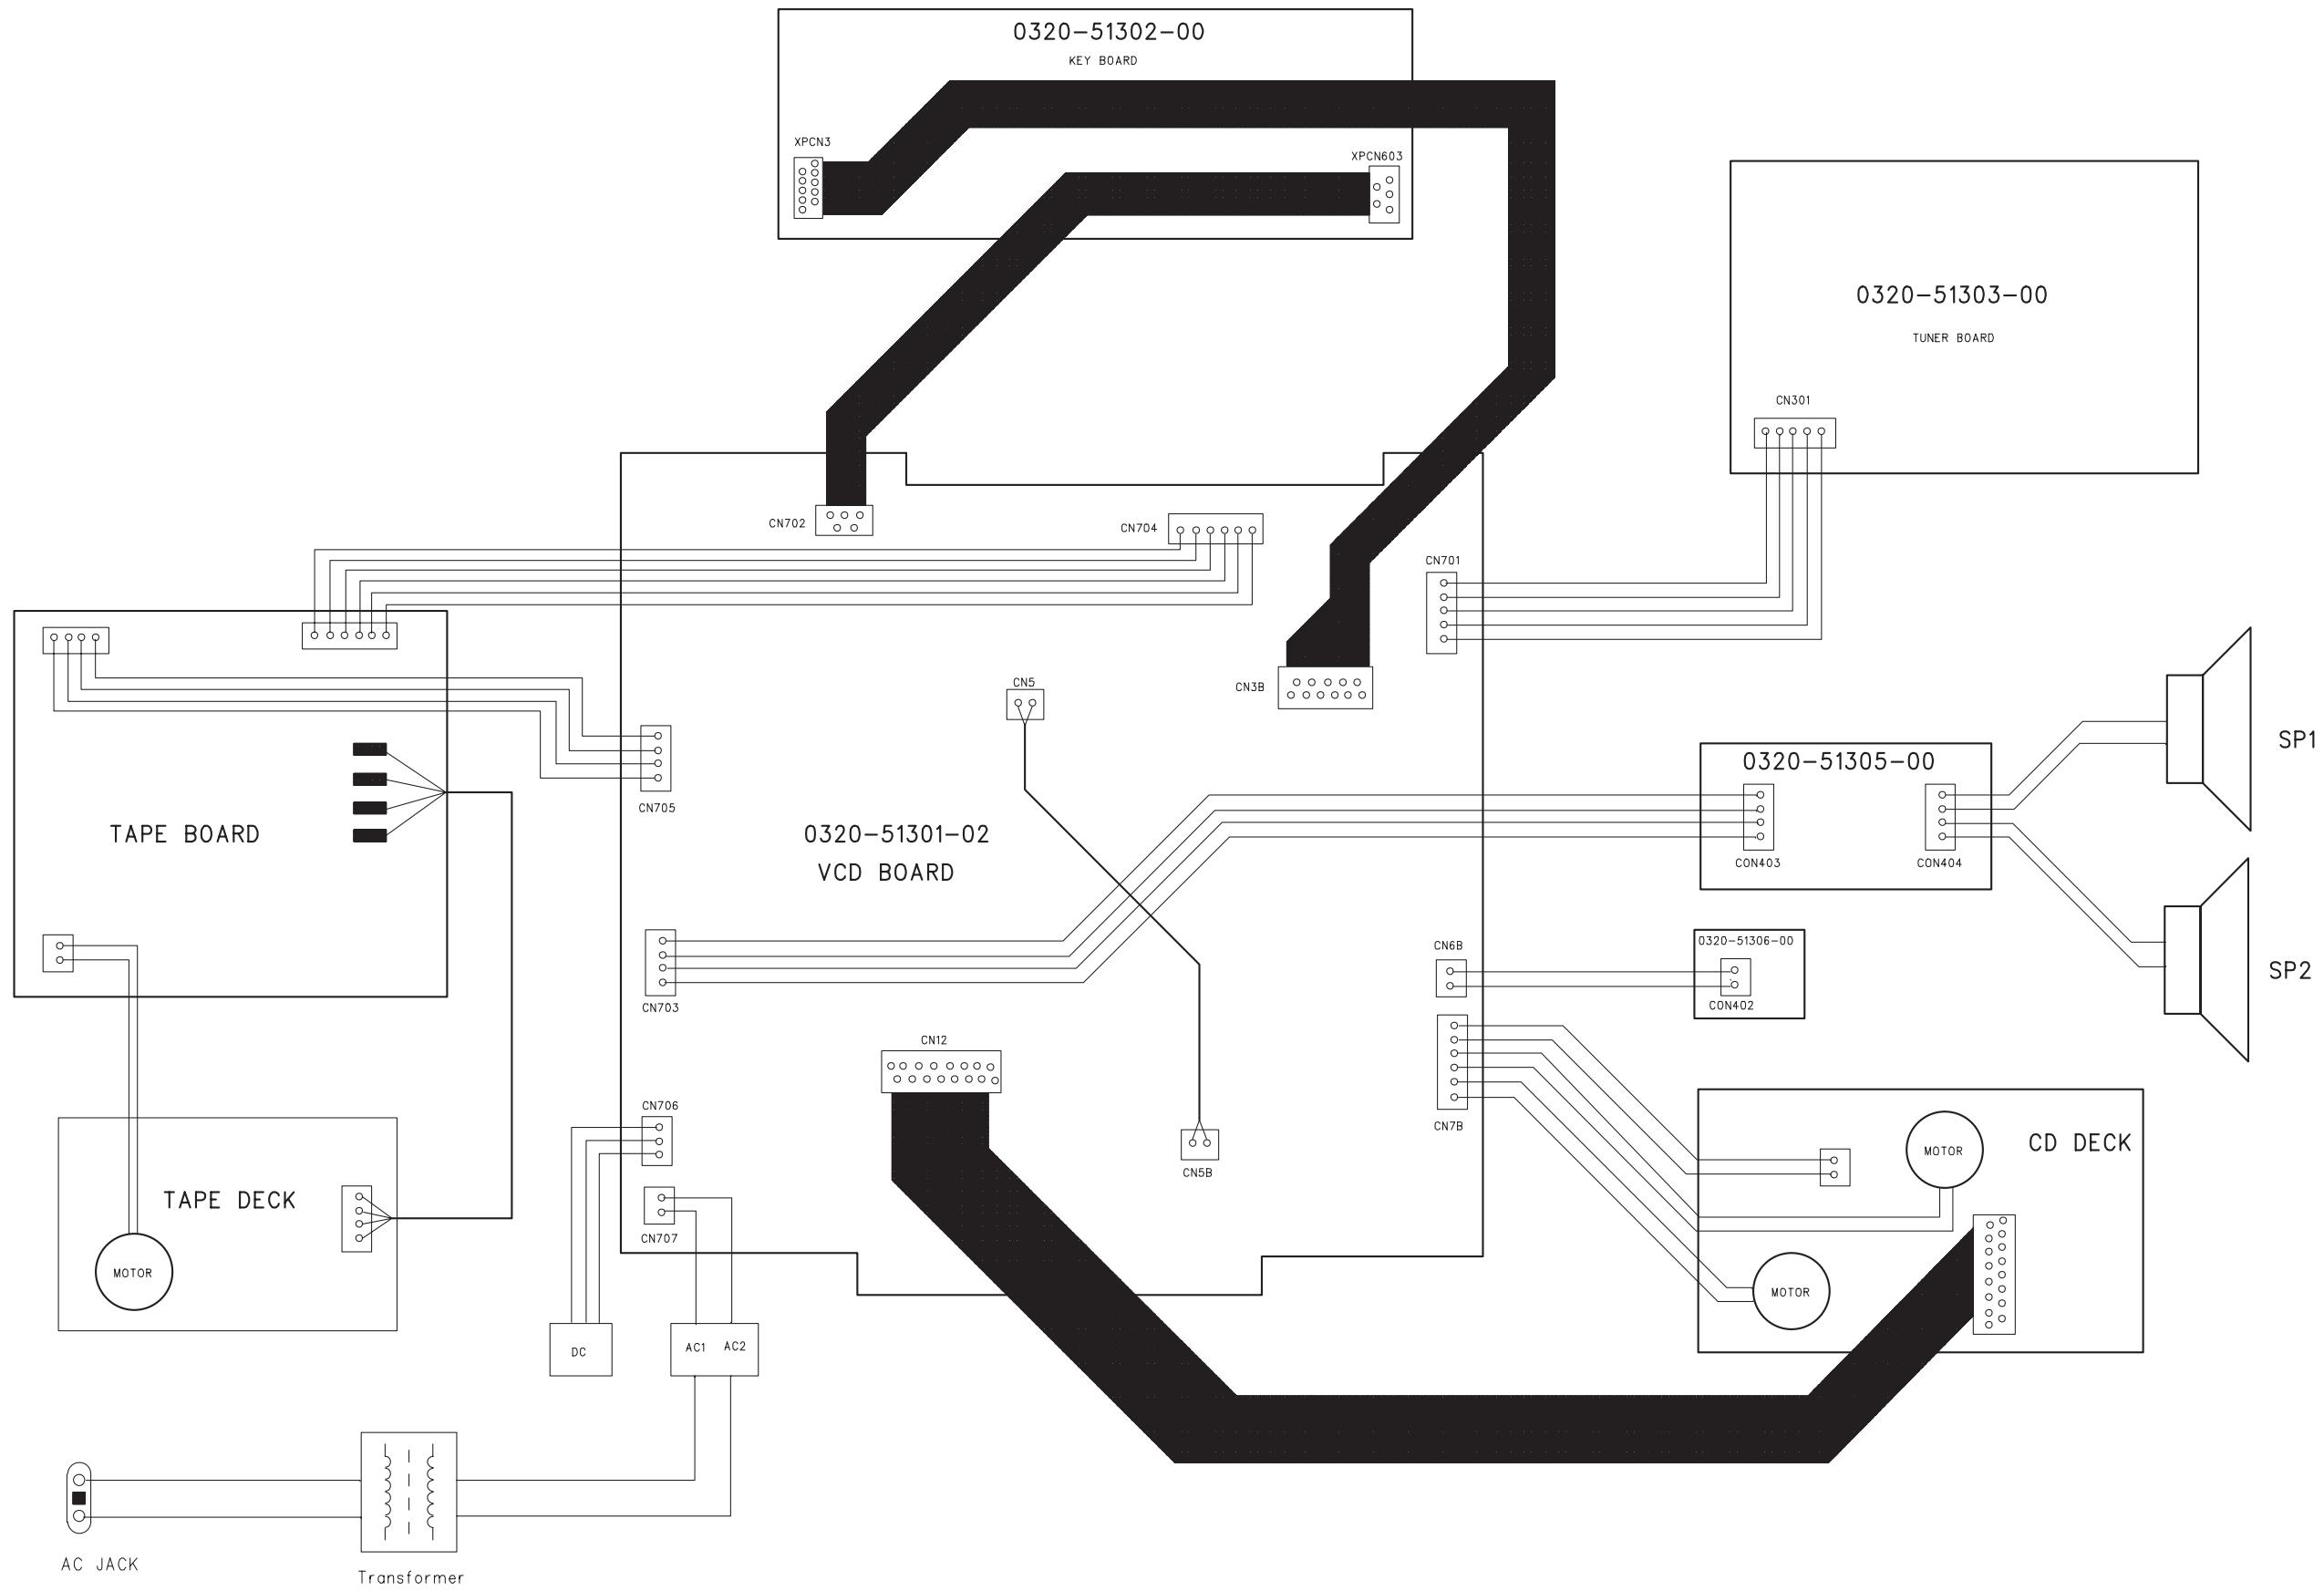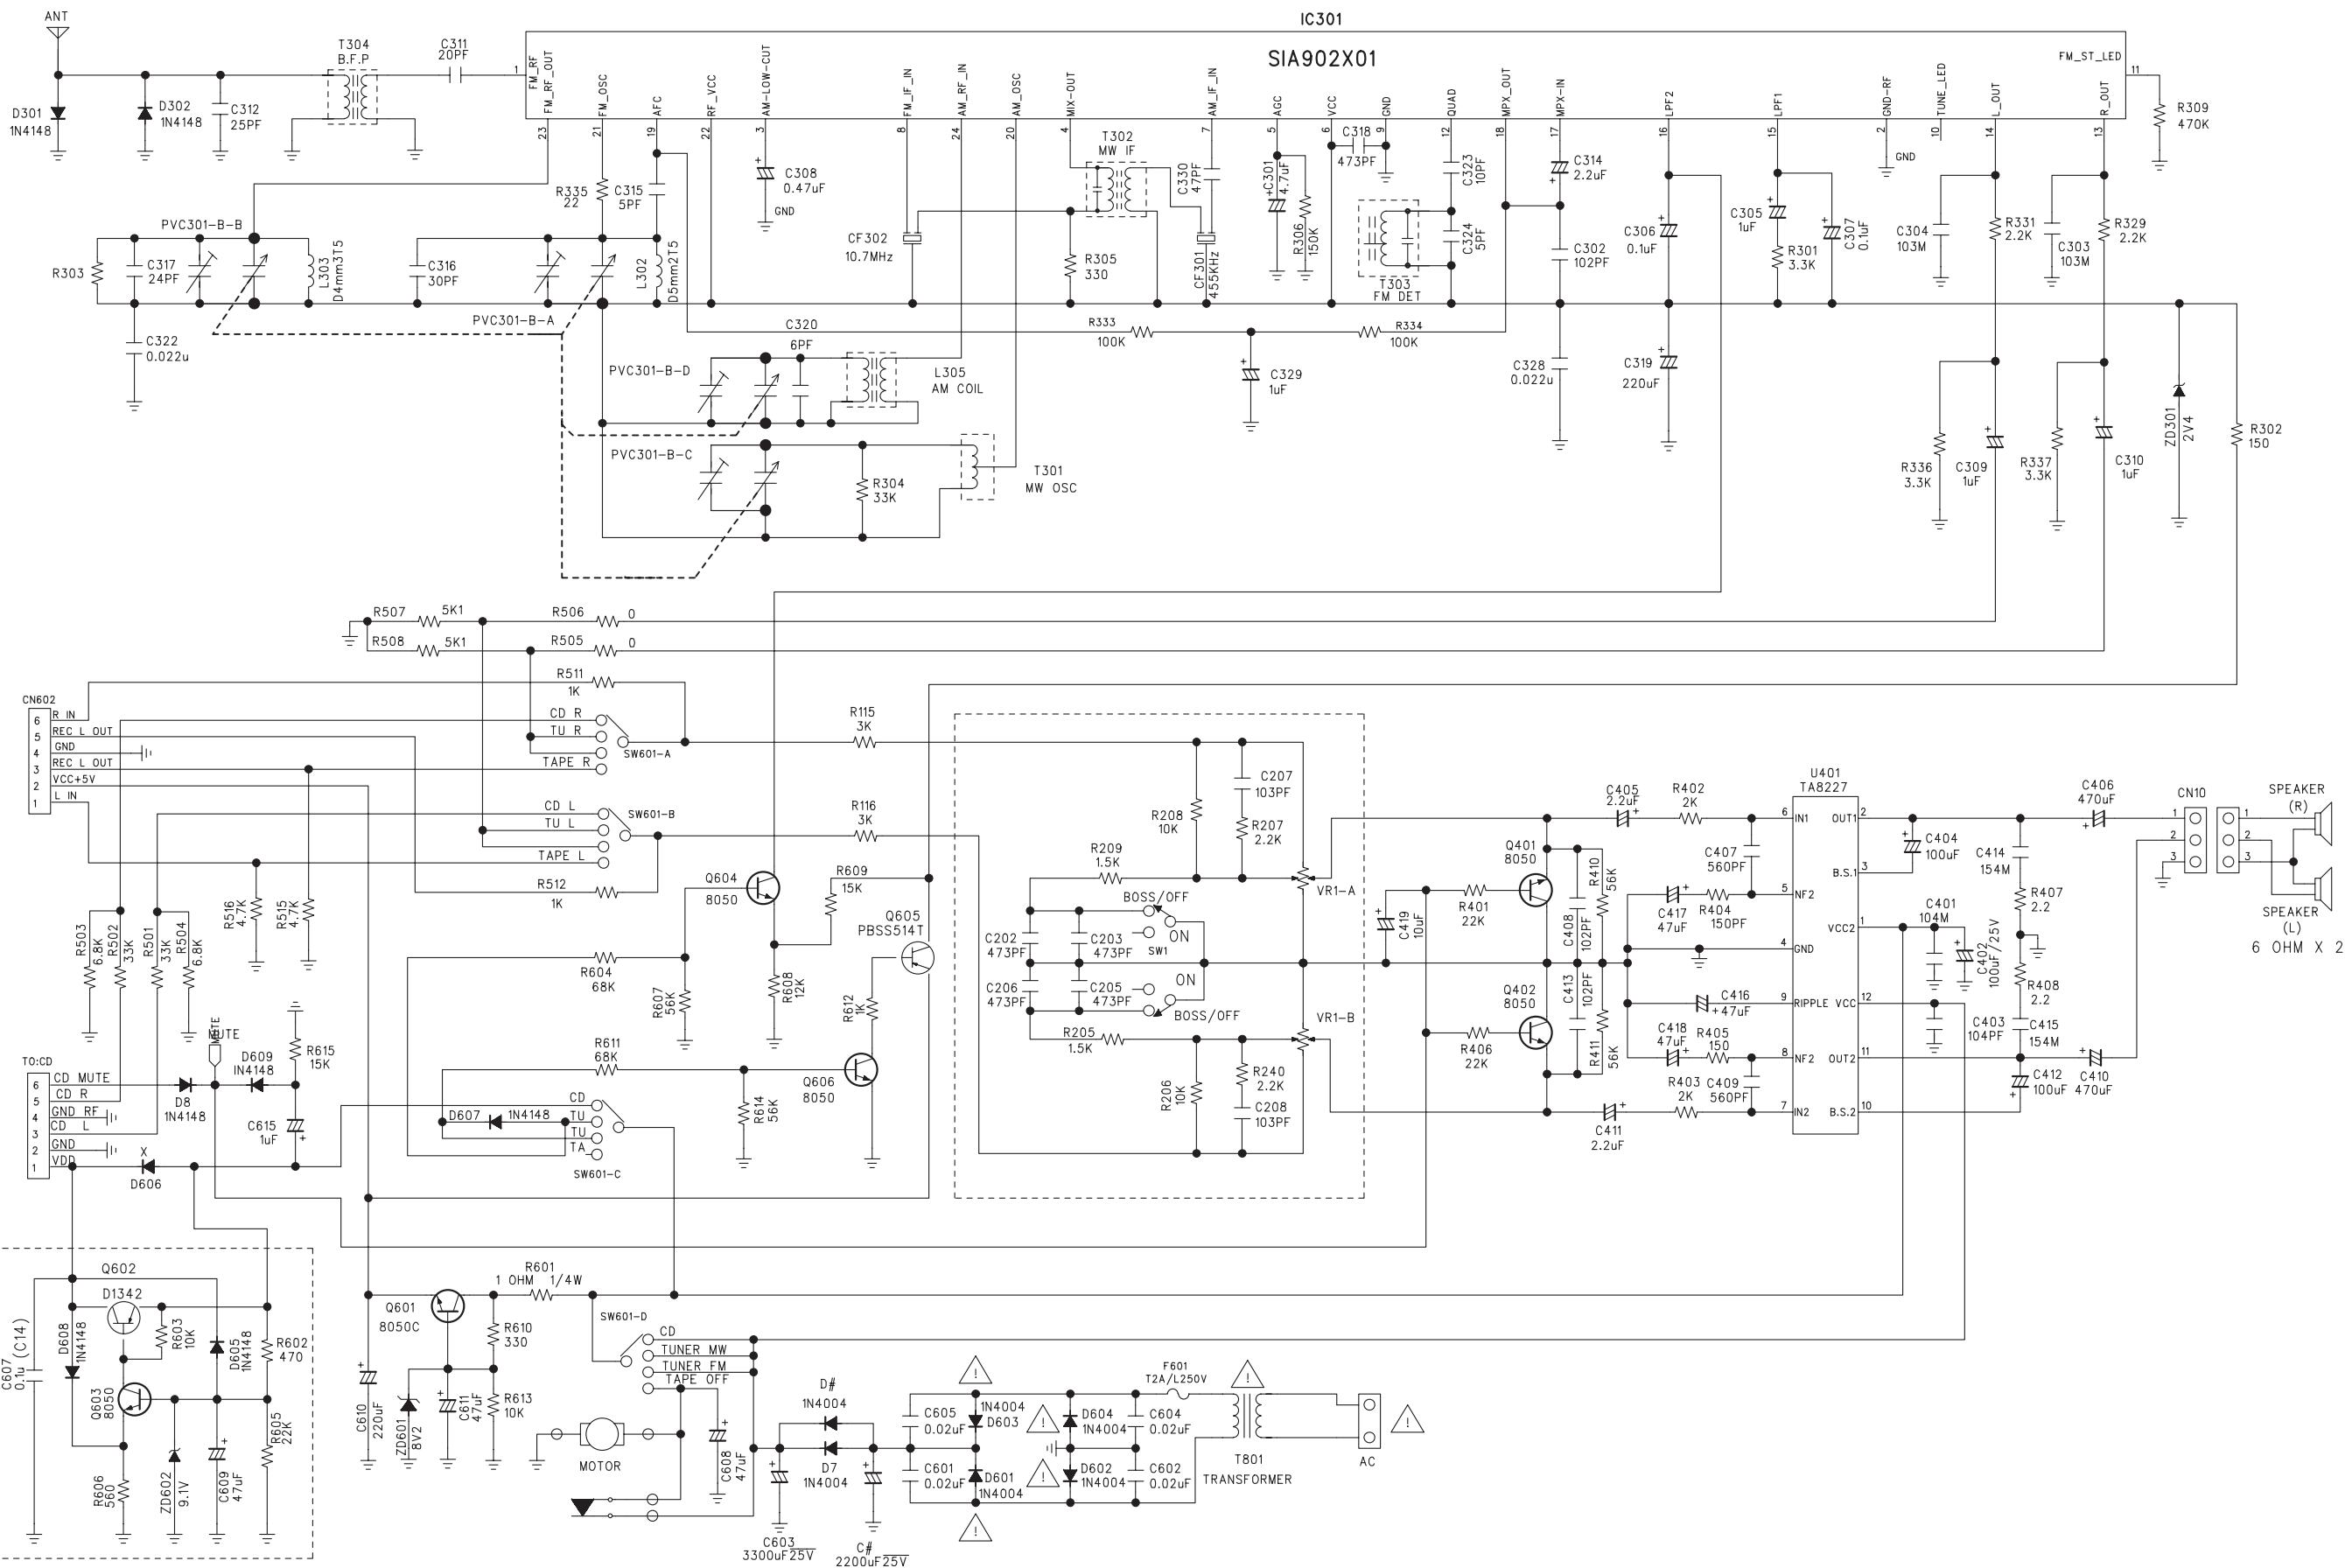

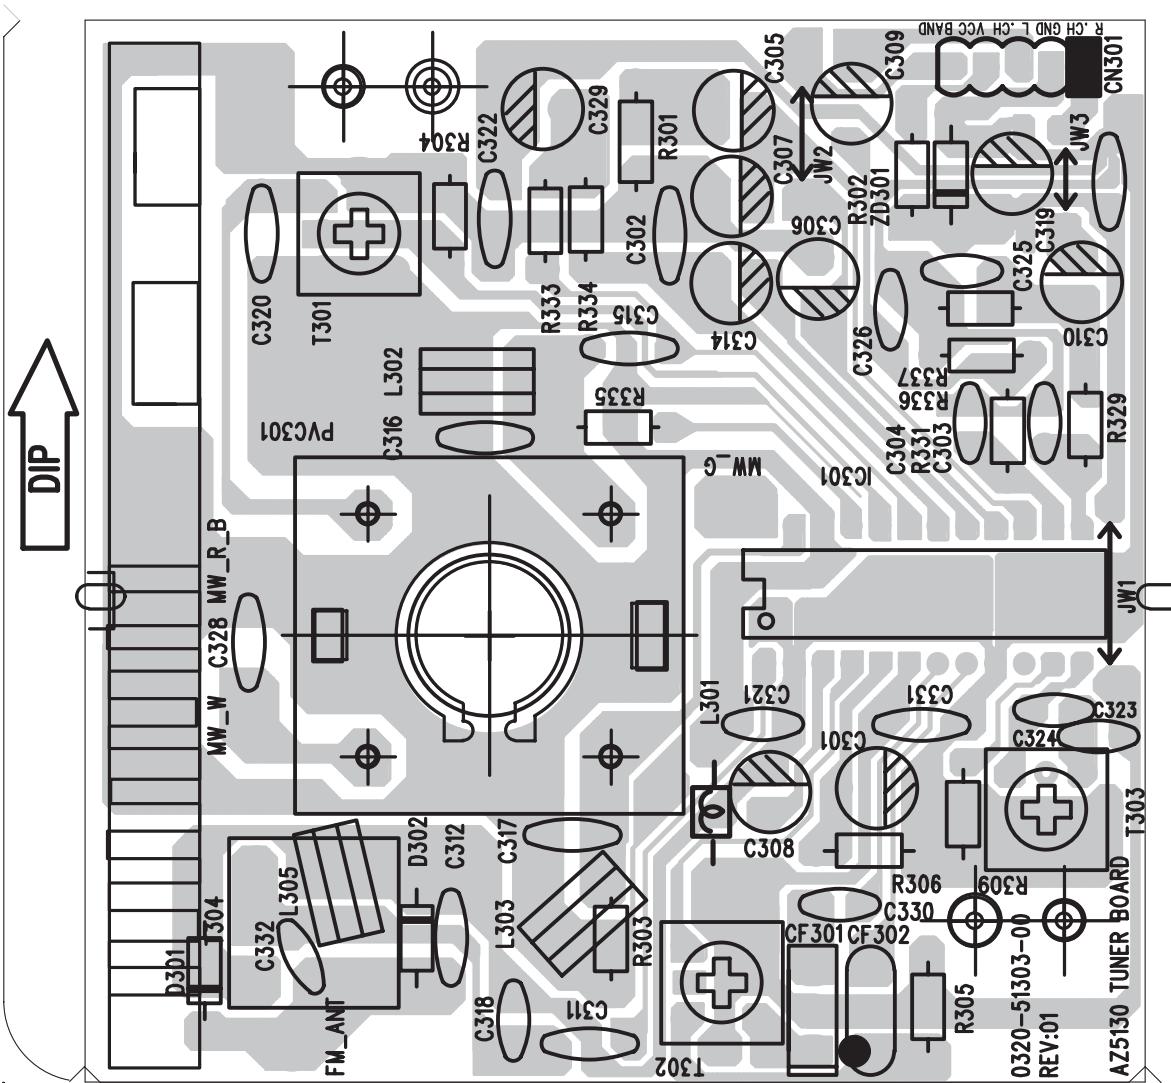**TUNER AND POWER AMPLIFIER BOARD - LAYOUT DIAGRAM****Alignment Procedure****Model No. AZ-5130**

Instruments Required :


1. AM Signal Generator
2. FM Signal Generator
3. AM/FM if Sweep Generator
4. Dual Trace Oscilloscope
5. Solid State Voltage Meter (SSVM)
6. Frequency Counter
7. Nonmetallic Alignment Tools
8. Test Tape : Teac - MTT # 113N (6.3 kHz) or Equiv.
9. Test Tape : Teac - MTT # 111N (3 kHz) or Equiv.


**Important**

1. Check Power Source Voltage
2. Set the Function Switch to Band Being Aligned.
3. Volume Should Be Turned To Minimum.
4. Signal Input Should be Kept as Low as Possible.
5. AM Modulation : 1 kHz 30%
6. FM Modulation : 1 kHz 22.5 kHz DEV.


**Radio Alignment**

Frequency	Input	Varian	Adjust	Output	Scope/Meter
<b>MW IF</b>					
455 kHz	LOOP ANT AM Coil	MIN.	T302	IC301 Pins 18	MAX.
<b>MW IF</b>					
520 kHz 1750 kHz	LOOP ANT AM Coil	MAX. MIN.	T301 VC301C	IC301 Pins 18	MAX.
600 kHz 1400 kHz		600 kHz 1400 kHz	L305 VC301D		MAX.
<b>FM IF</b>					
10.7 MHz	IC301 Pins 4	MIN.	T303	IC301 Pins 18	Symmetrical
<b>FM IF</b>					
87.5 MHz 108.5 MHz	FM ANT. C312 Cer. Cap.	MAX. MIN.	L302 VC301A	IC301 Pins 18	MAX.
90 MHz 106 MHz		90 MHz 106 MHz	L303 VC301B		MAX.

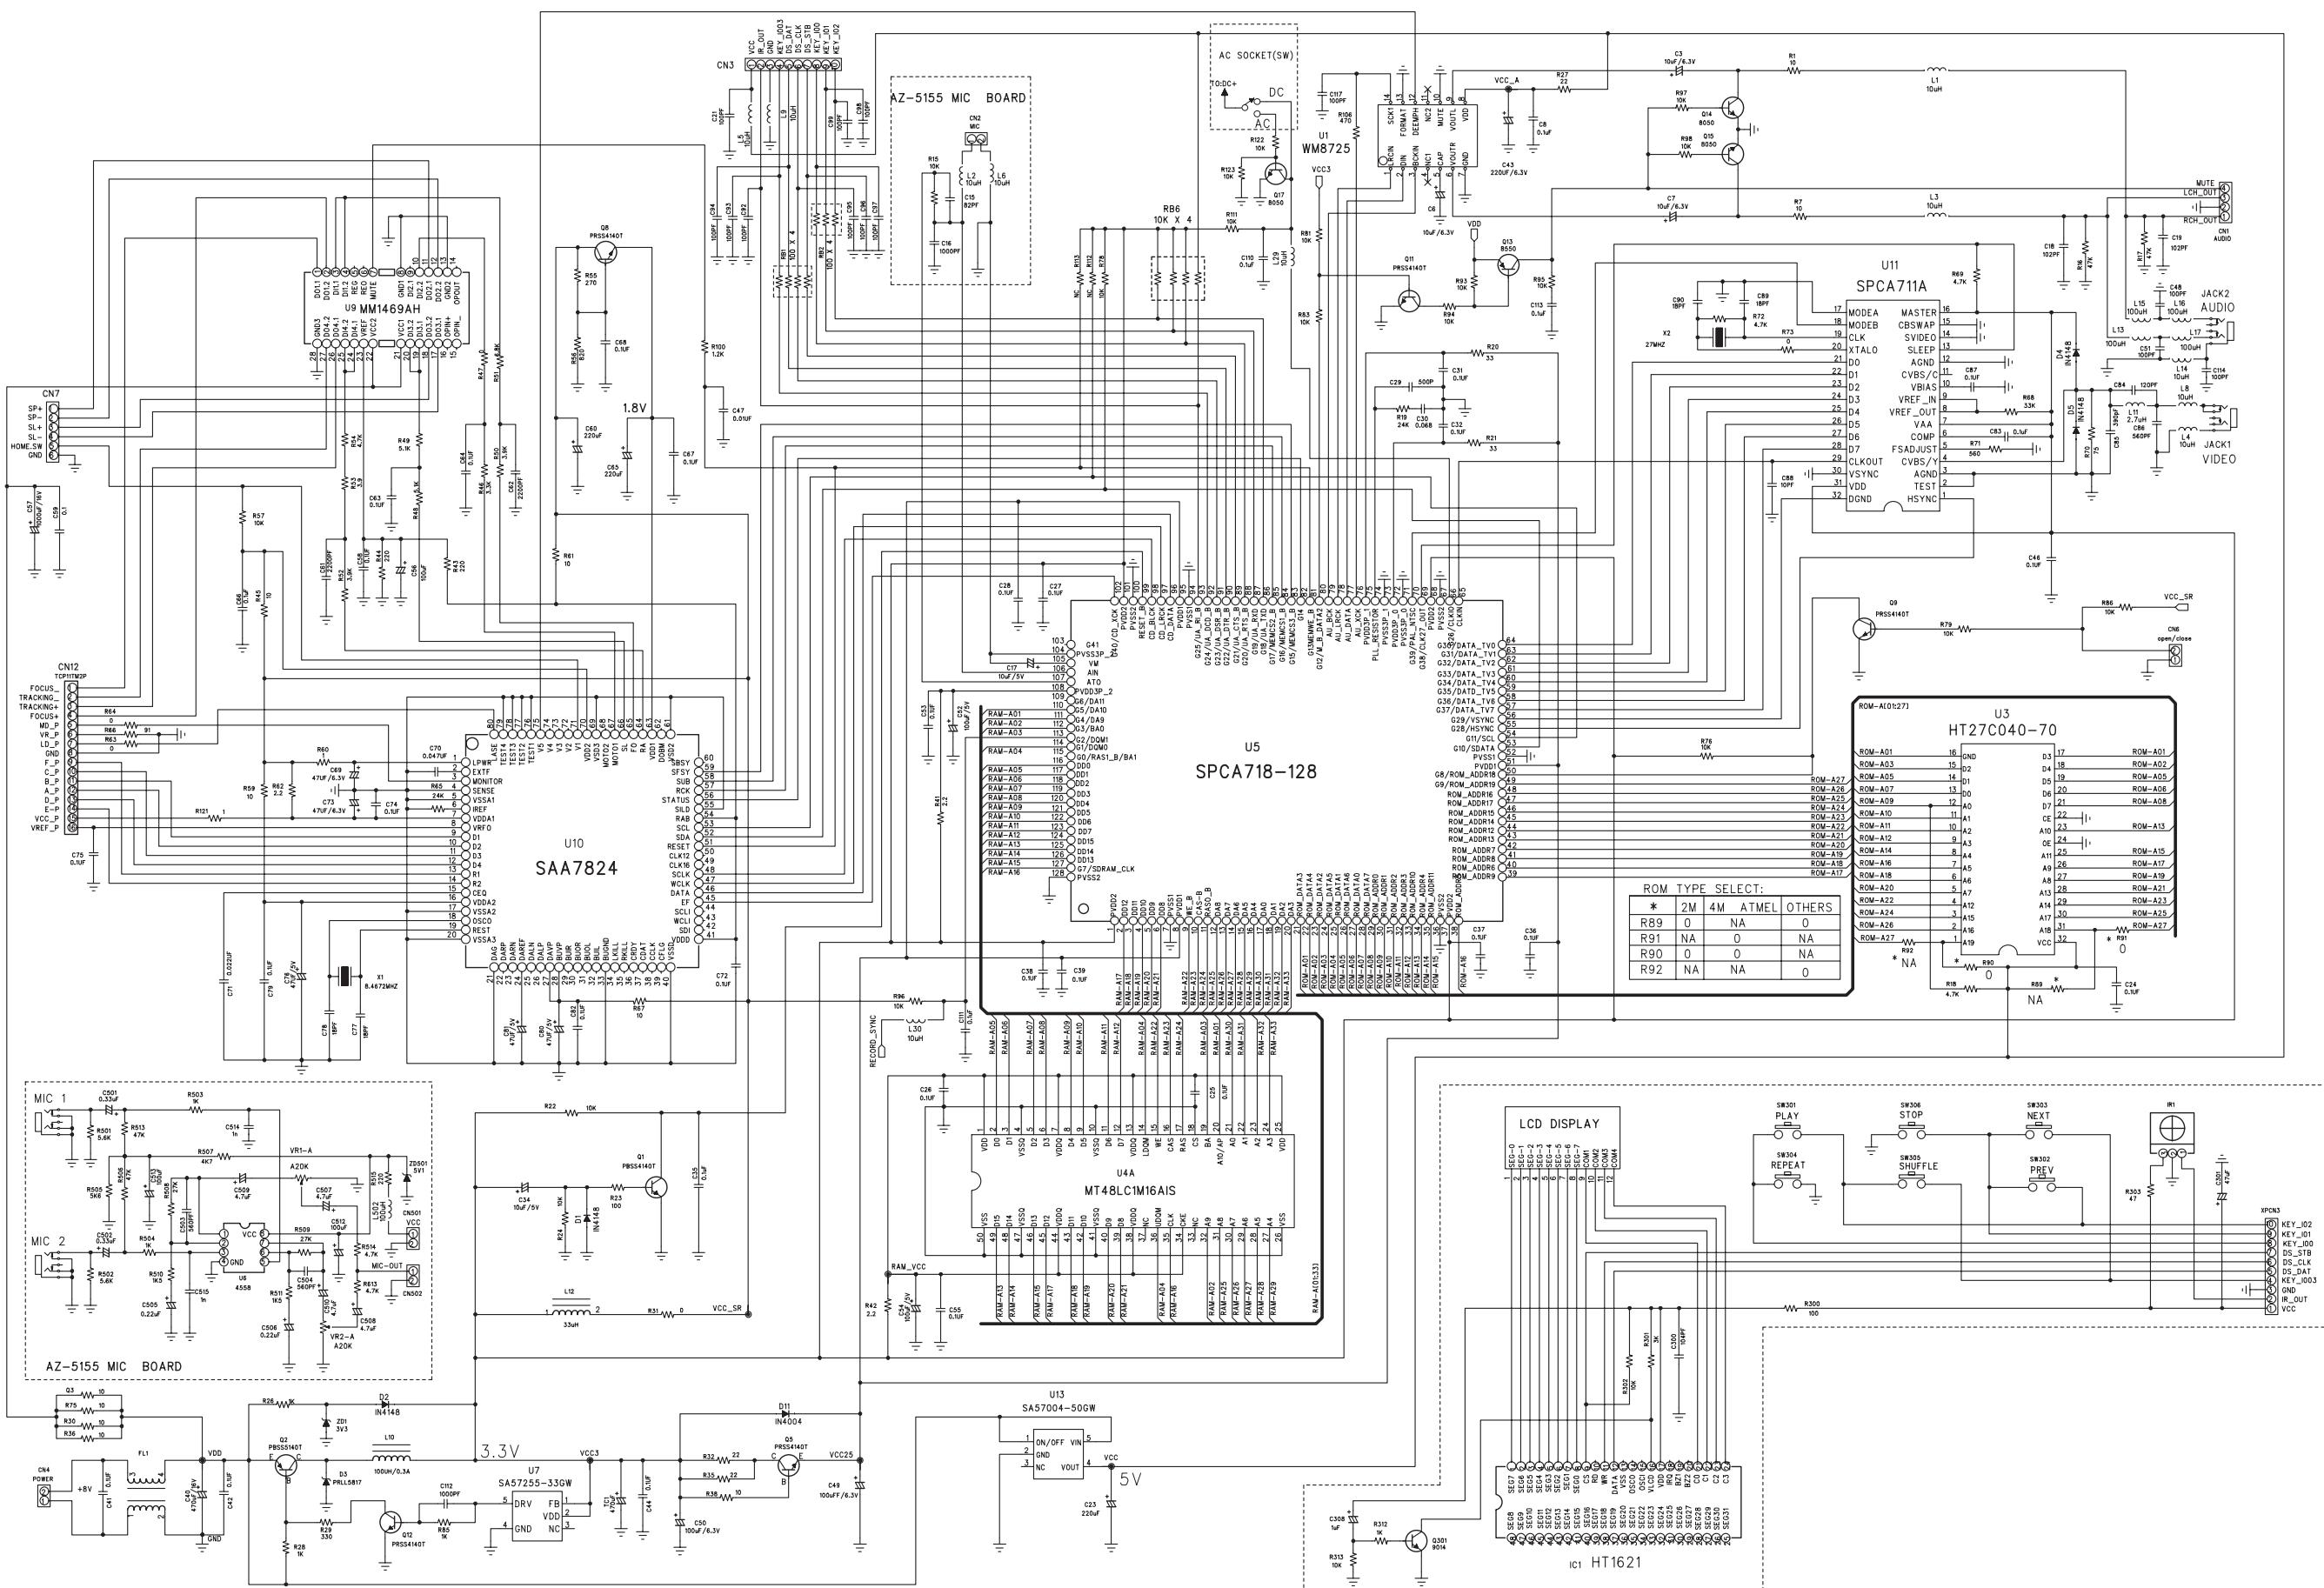
**VCD BOARD AND LCD BOARD - CIRCUIT DIAGRAM**

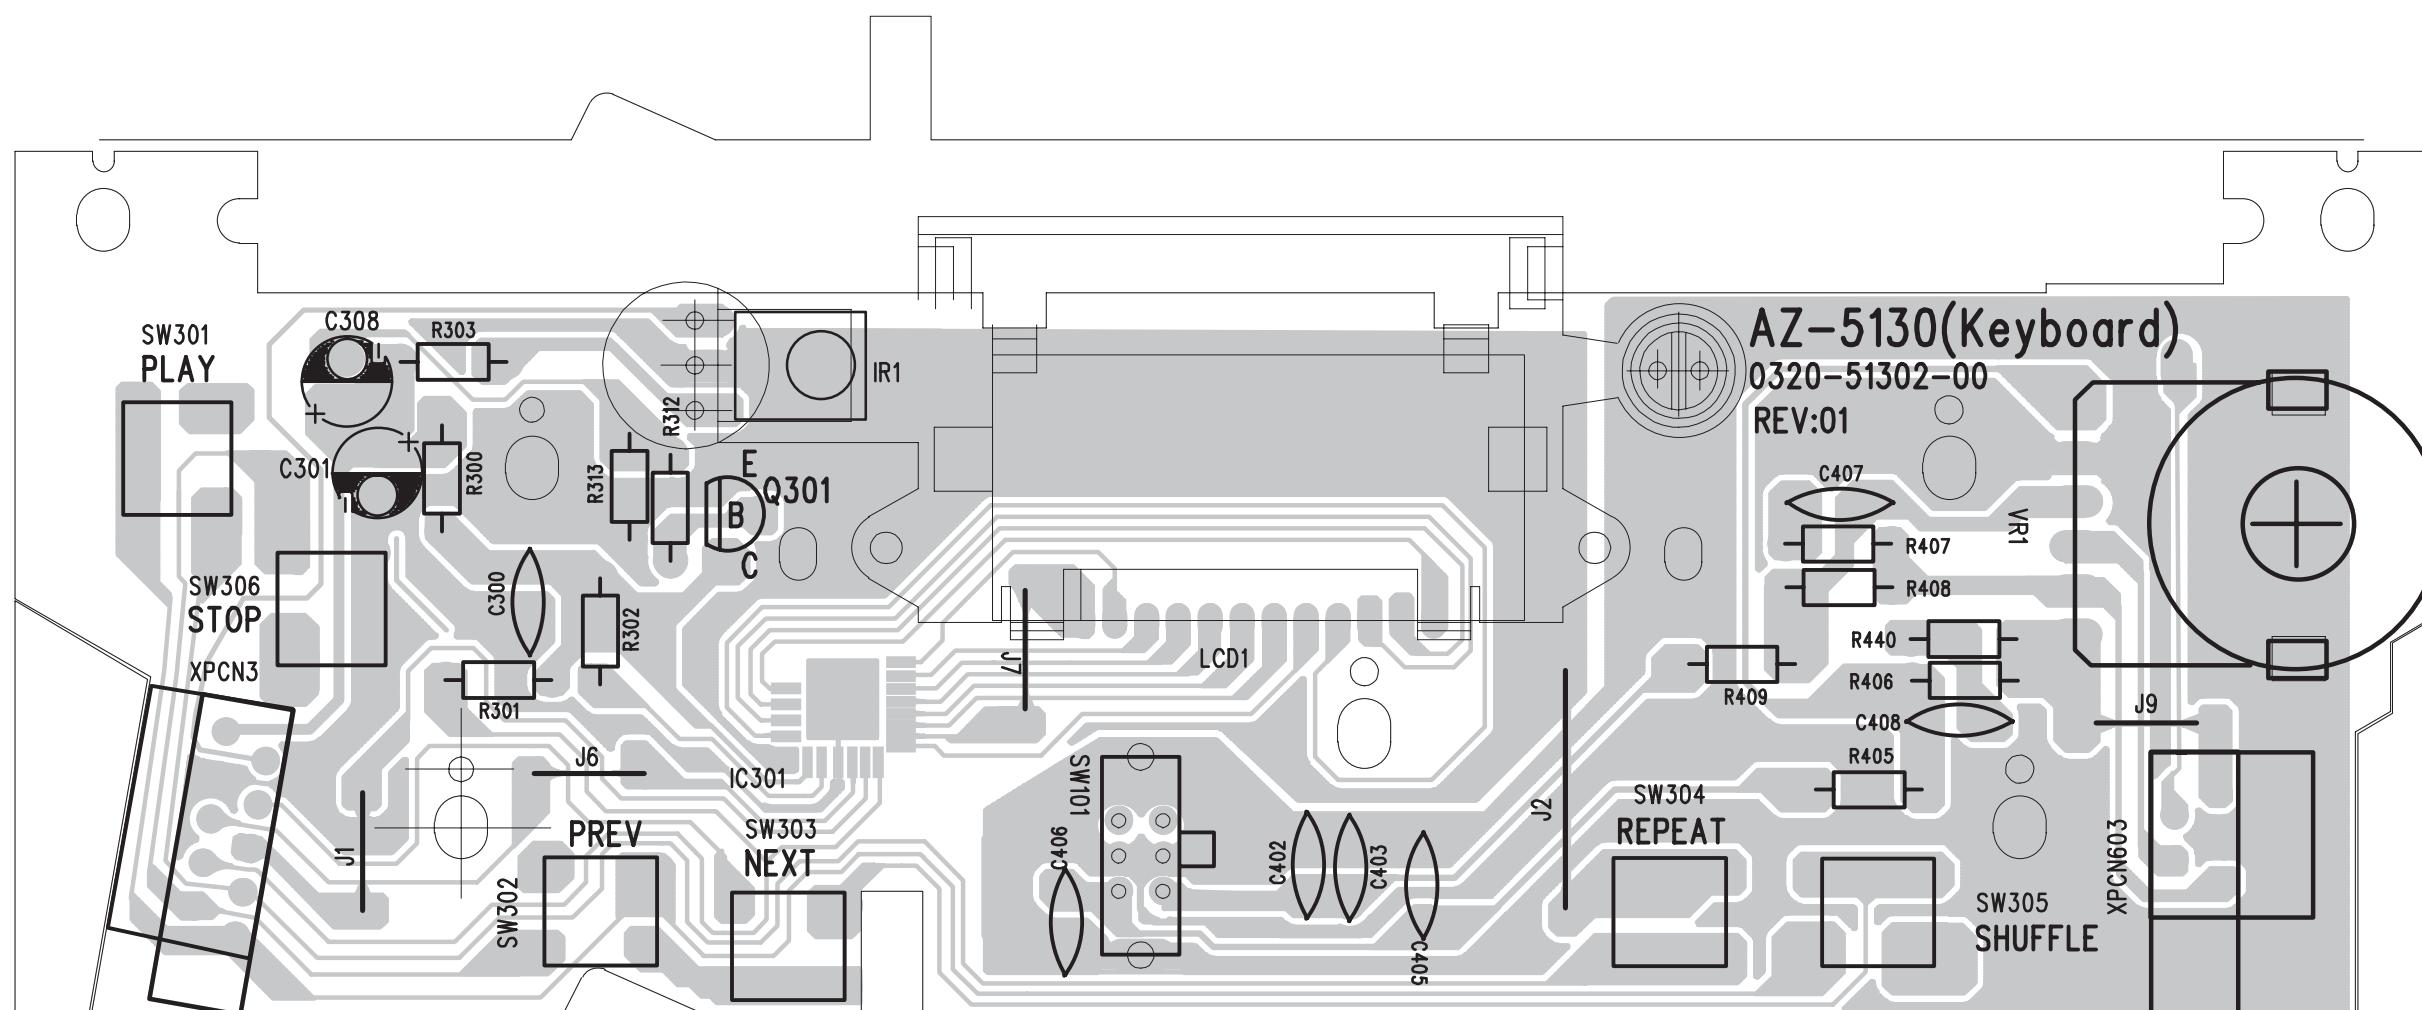
**LCD BOARD - LAYOUT DIAGRAM**

## VCD BOARD - LAYOUT DIAGRAM

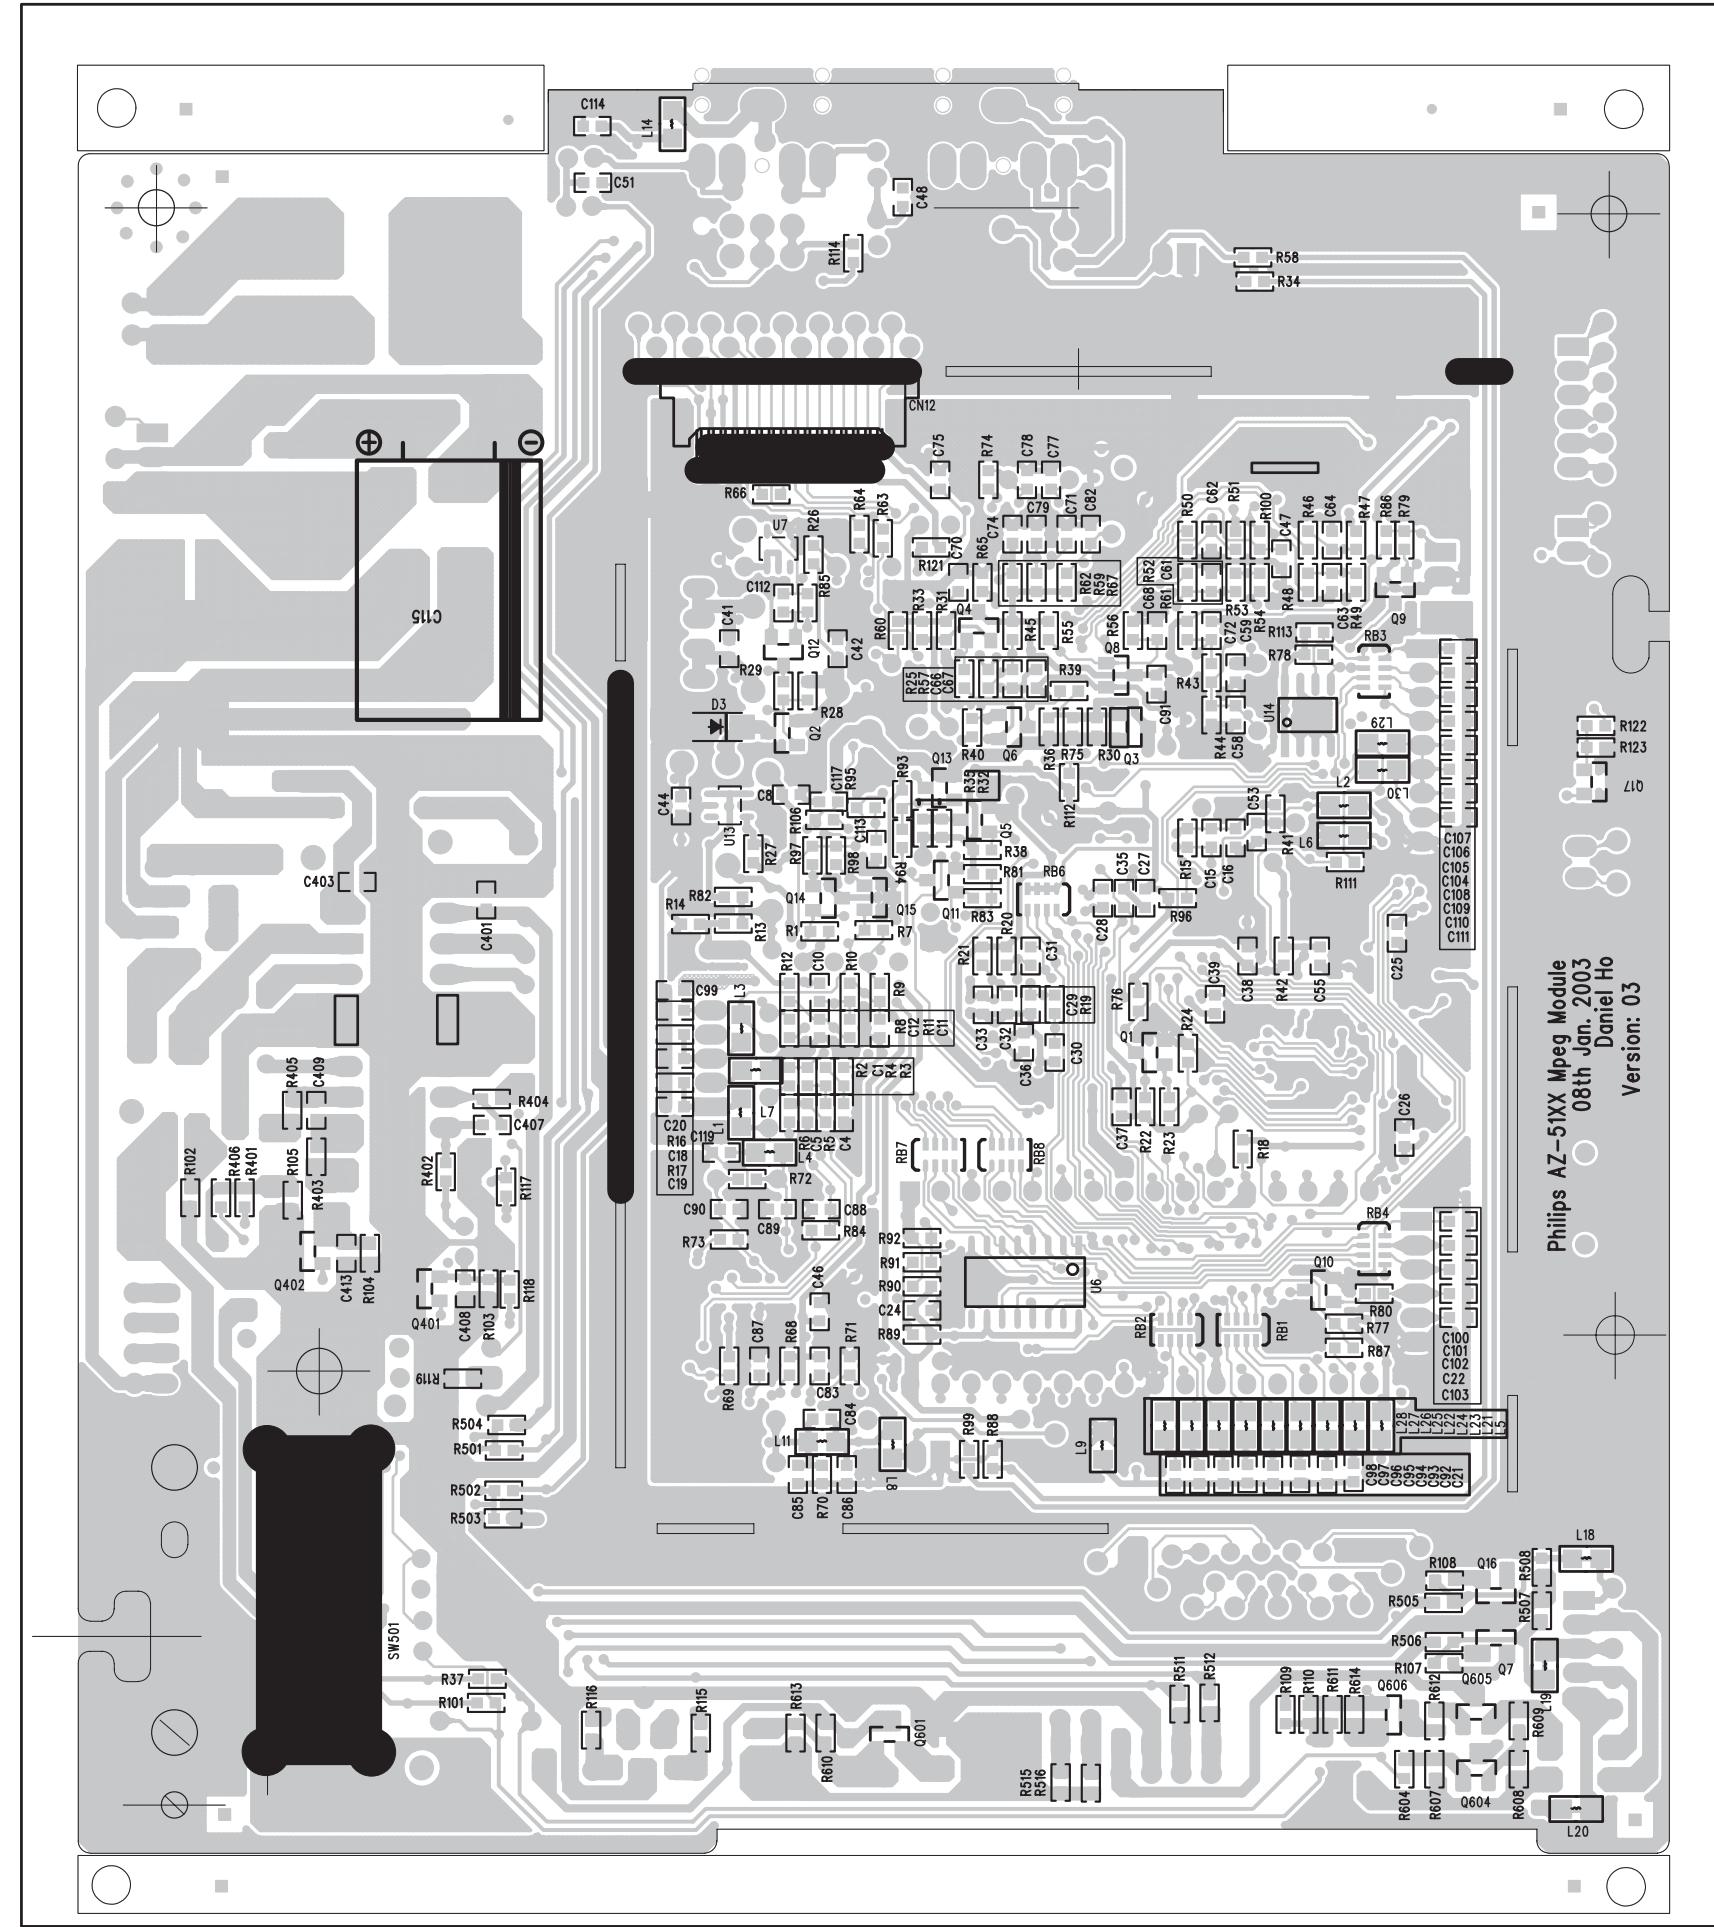


## LCD BOARD - LAYOUT DIAGRAM

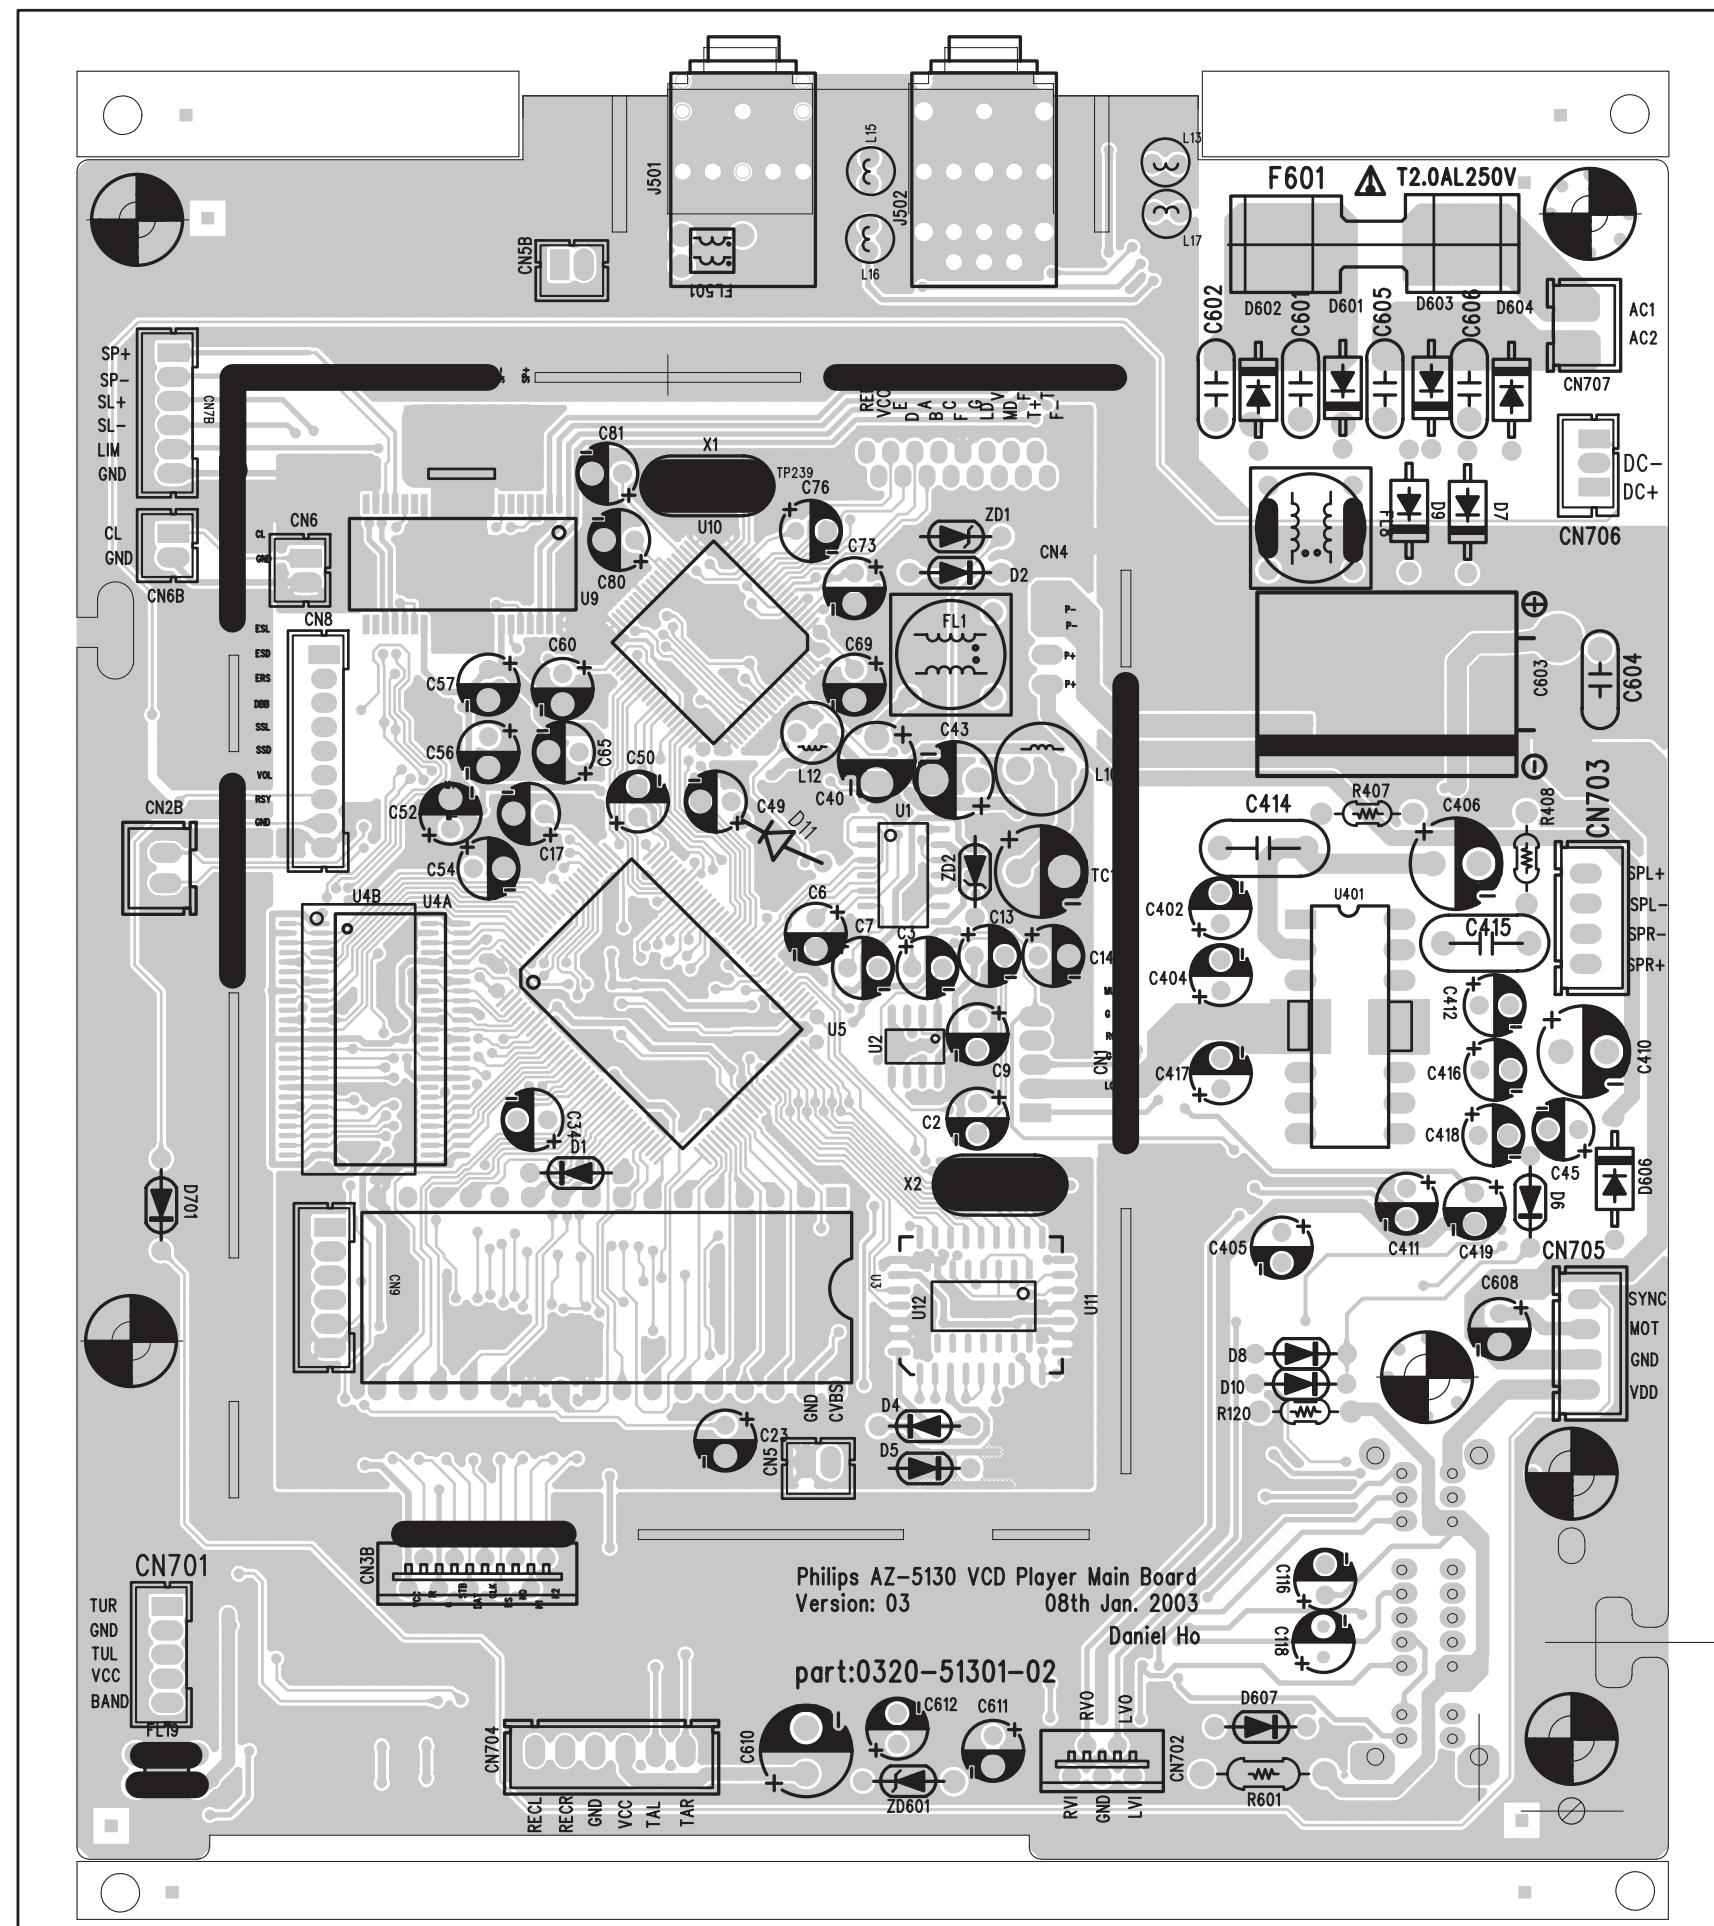


## TAPE BOARD - CIRCUIT DIAGRAM

71 D15 1707 C 3 1709 A14 2706 B 4 2711 F 6 2719 C 8 2727 F 7 2733 H13 2750 D 6 3703 D 3 3712 E 7 3720 F 7 3730 F12 3743 C 9 3761 G 6 3705 G 4 8702 E 1 9753 C13 T705 B14 T710 G11 T718 E 2 T724 E 2  
 73 E15 1707 C 7 1710 E15 2707 B 6 2712 E 7 2721 G 3 2728 C13 2734 G10 2751 H 6 3704 C 3 3713 G 3 3722 A 2 3731 G12 3744 G 9 3762 D 6 3705 C 4 8704 E15 9754 F11 T706 E14 T711 F14 T719 H13 T725 C 7  
 74 G 9 1707 C 7 1725 A15 2708 C 3 2714 C 3 2722 G 7 2729 C13 2735 G10 2760 E14 3706 D 4 3714 F 3 3723 A 2 3732 H13 3747 G12 5701 F11 8702 F 1 8704 E15 9758 D12 T707 B10 T712 F 5 T721 A14  
 1702 G15 1707 E 9 2703 G 7 2709 G 3 2715 C 6 2723 G 5 2730 G11 2738 B 3 2799 B 1 3701 D 8 3716 H 4 3726 B 9 3733 F 6 3748 B 3 6704 F11 8702 F 1 8705 F15 T701 A14 T708 B10 T716 F10 T722 G 7 T723 F 2  
 1707 F 3 1707 E12 2704 C 7 2710 G12 2716 D 5 2726 G 8 2732 G12 2739 B 1 3701 D 8 3719 H 8 3727 E 9 3734 D11 3749 B 2 7702 H13 8702 E 1 8705 F15 T702 A14 T709 D14 T717 F 2 T723 F 2

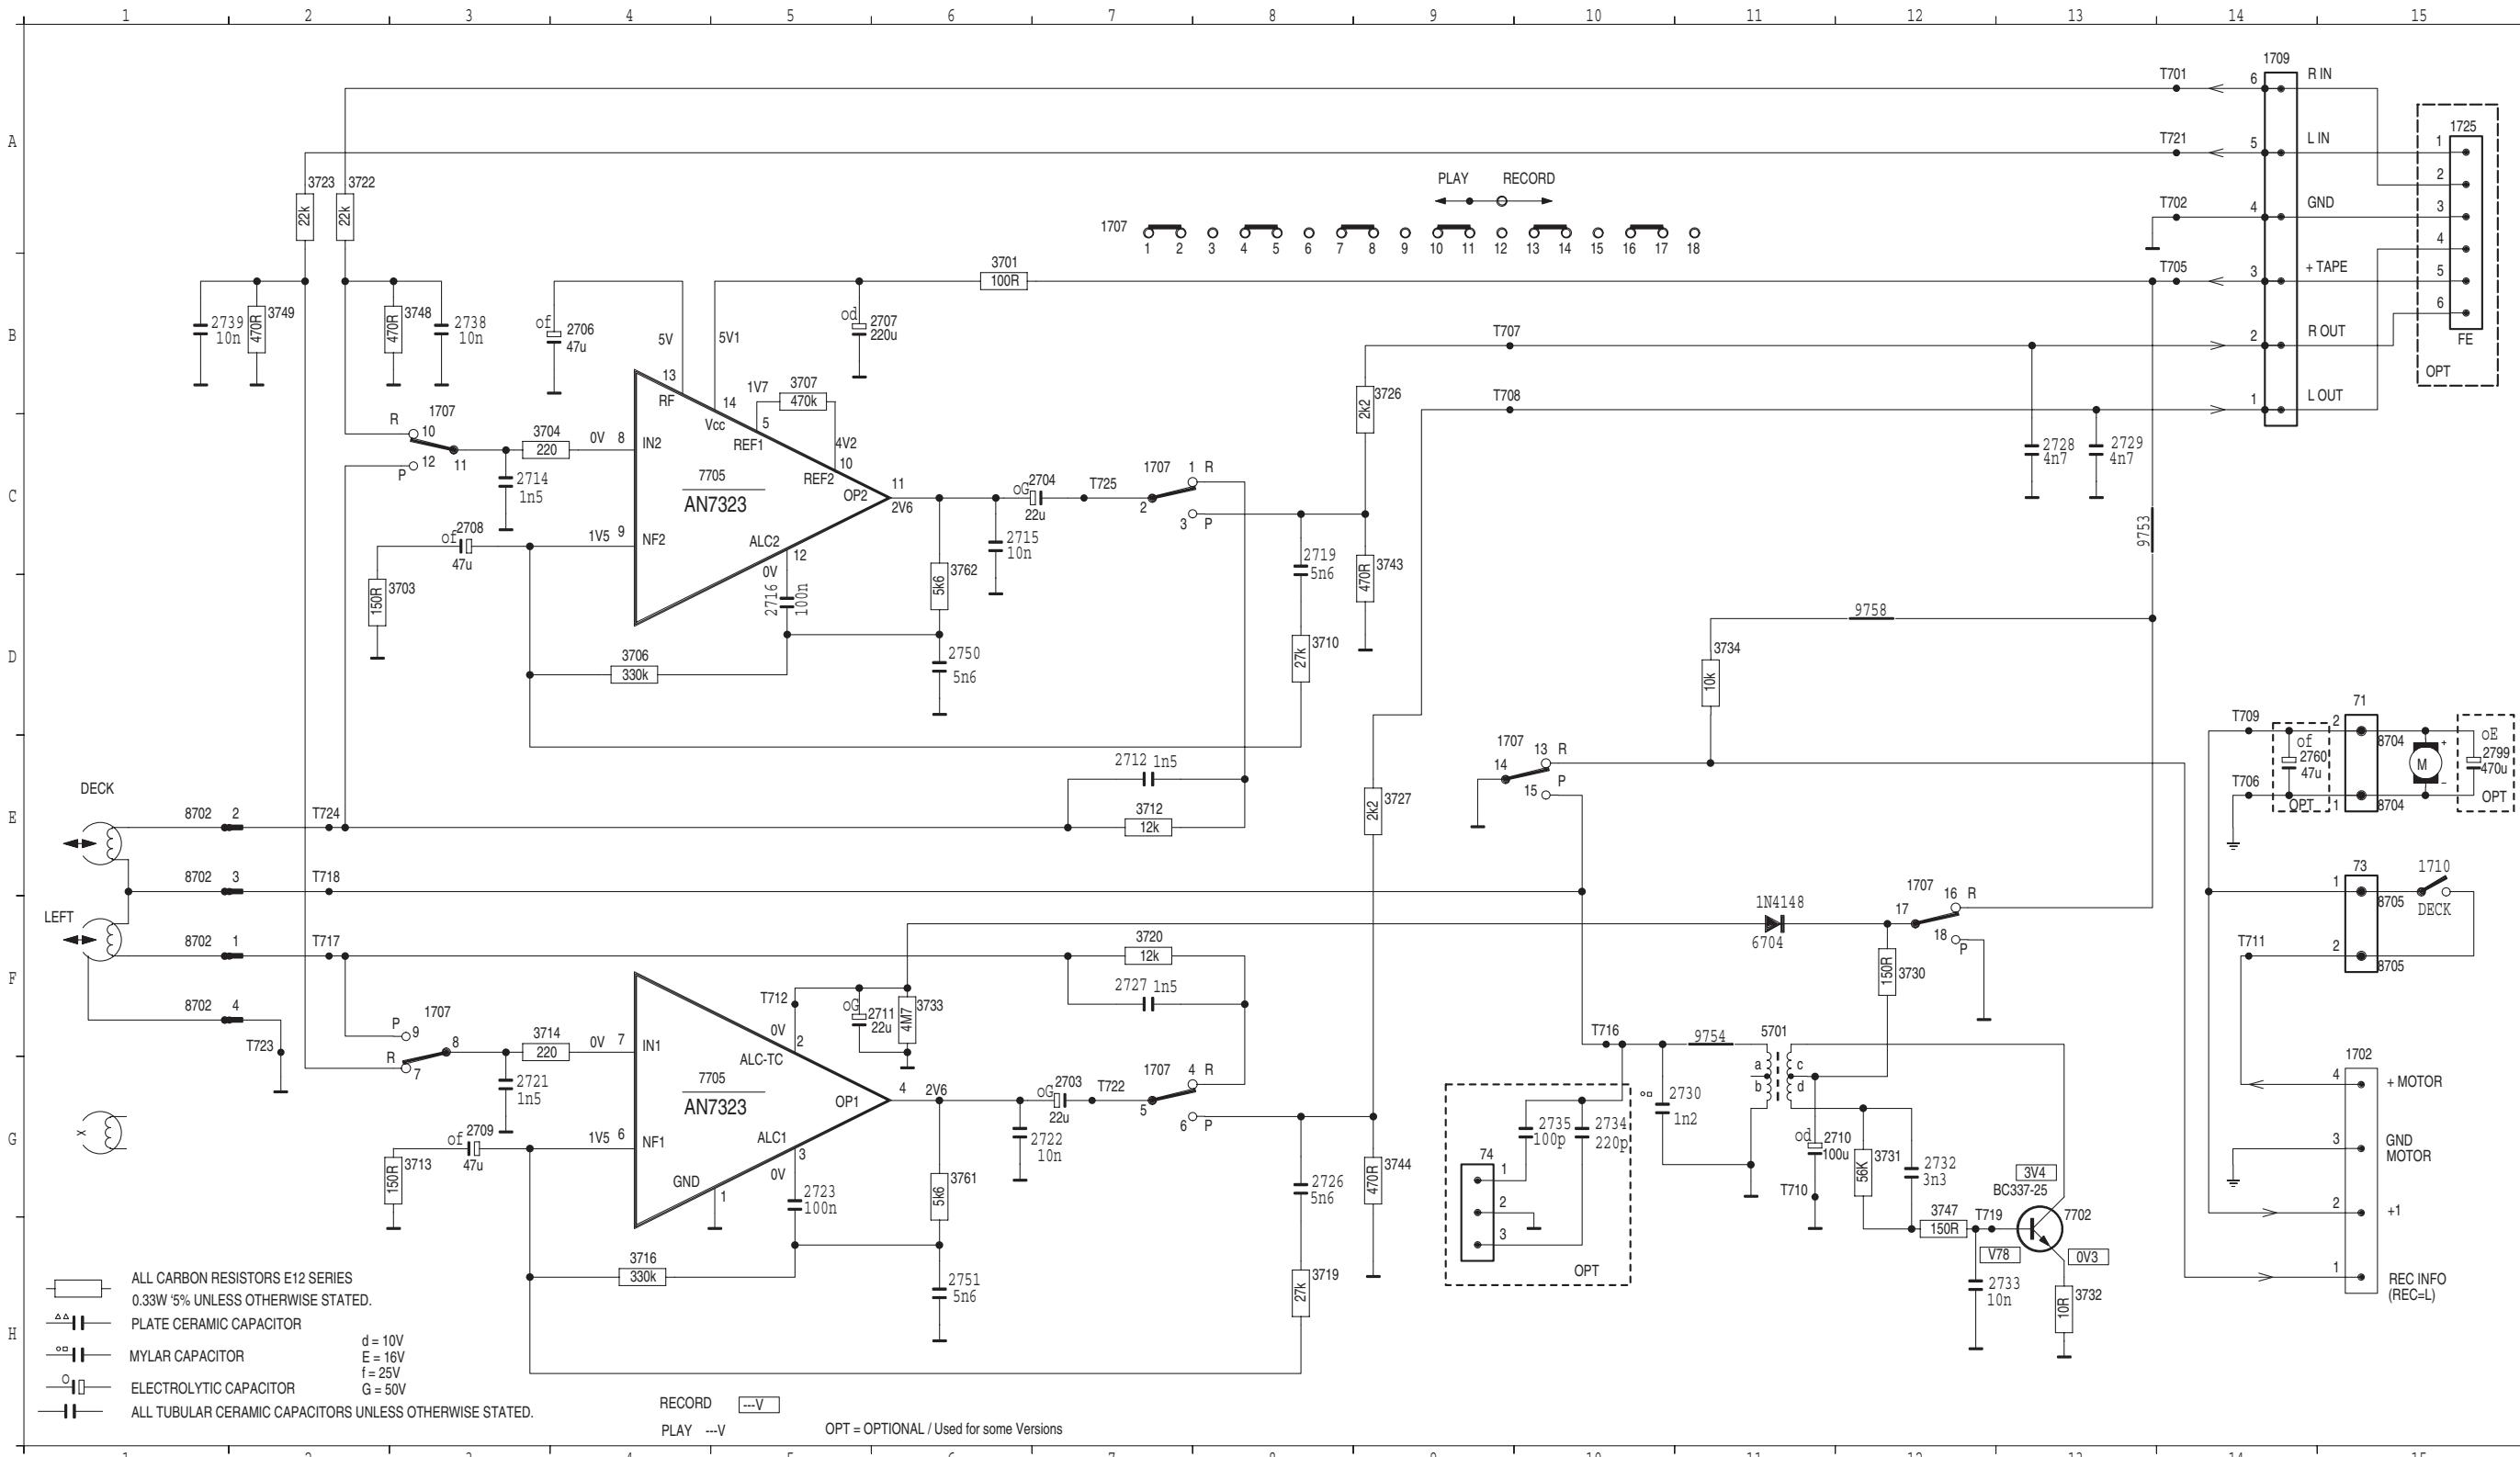



## EXPLODED VIEW DIAGRAM - CABINET

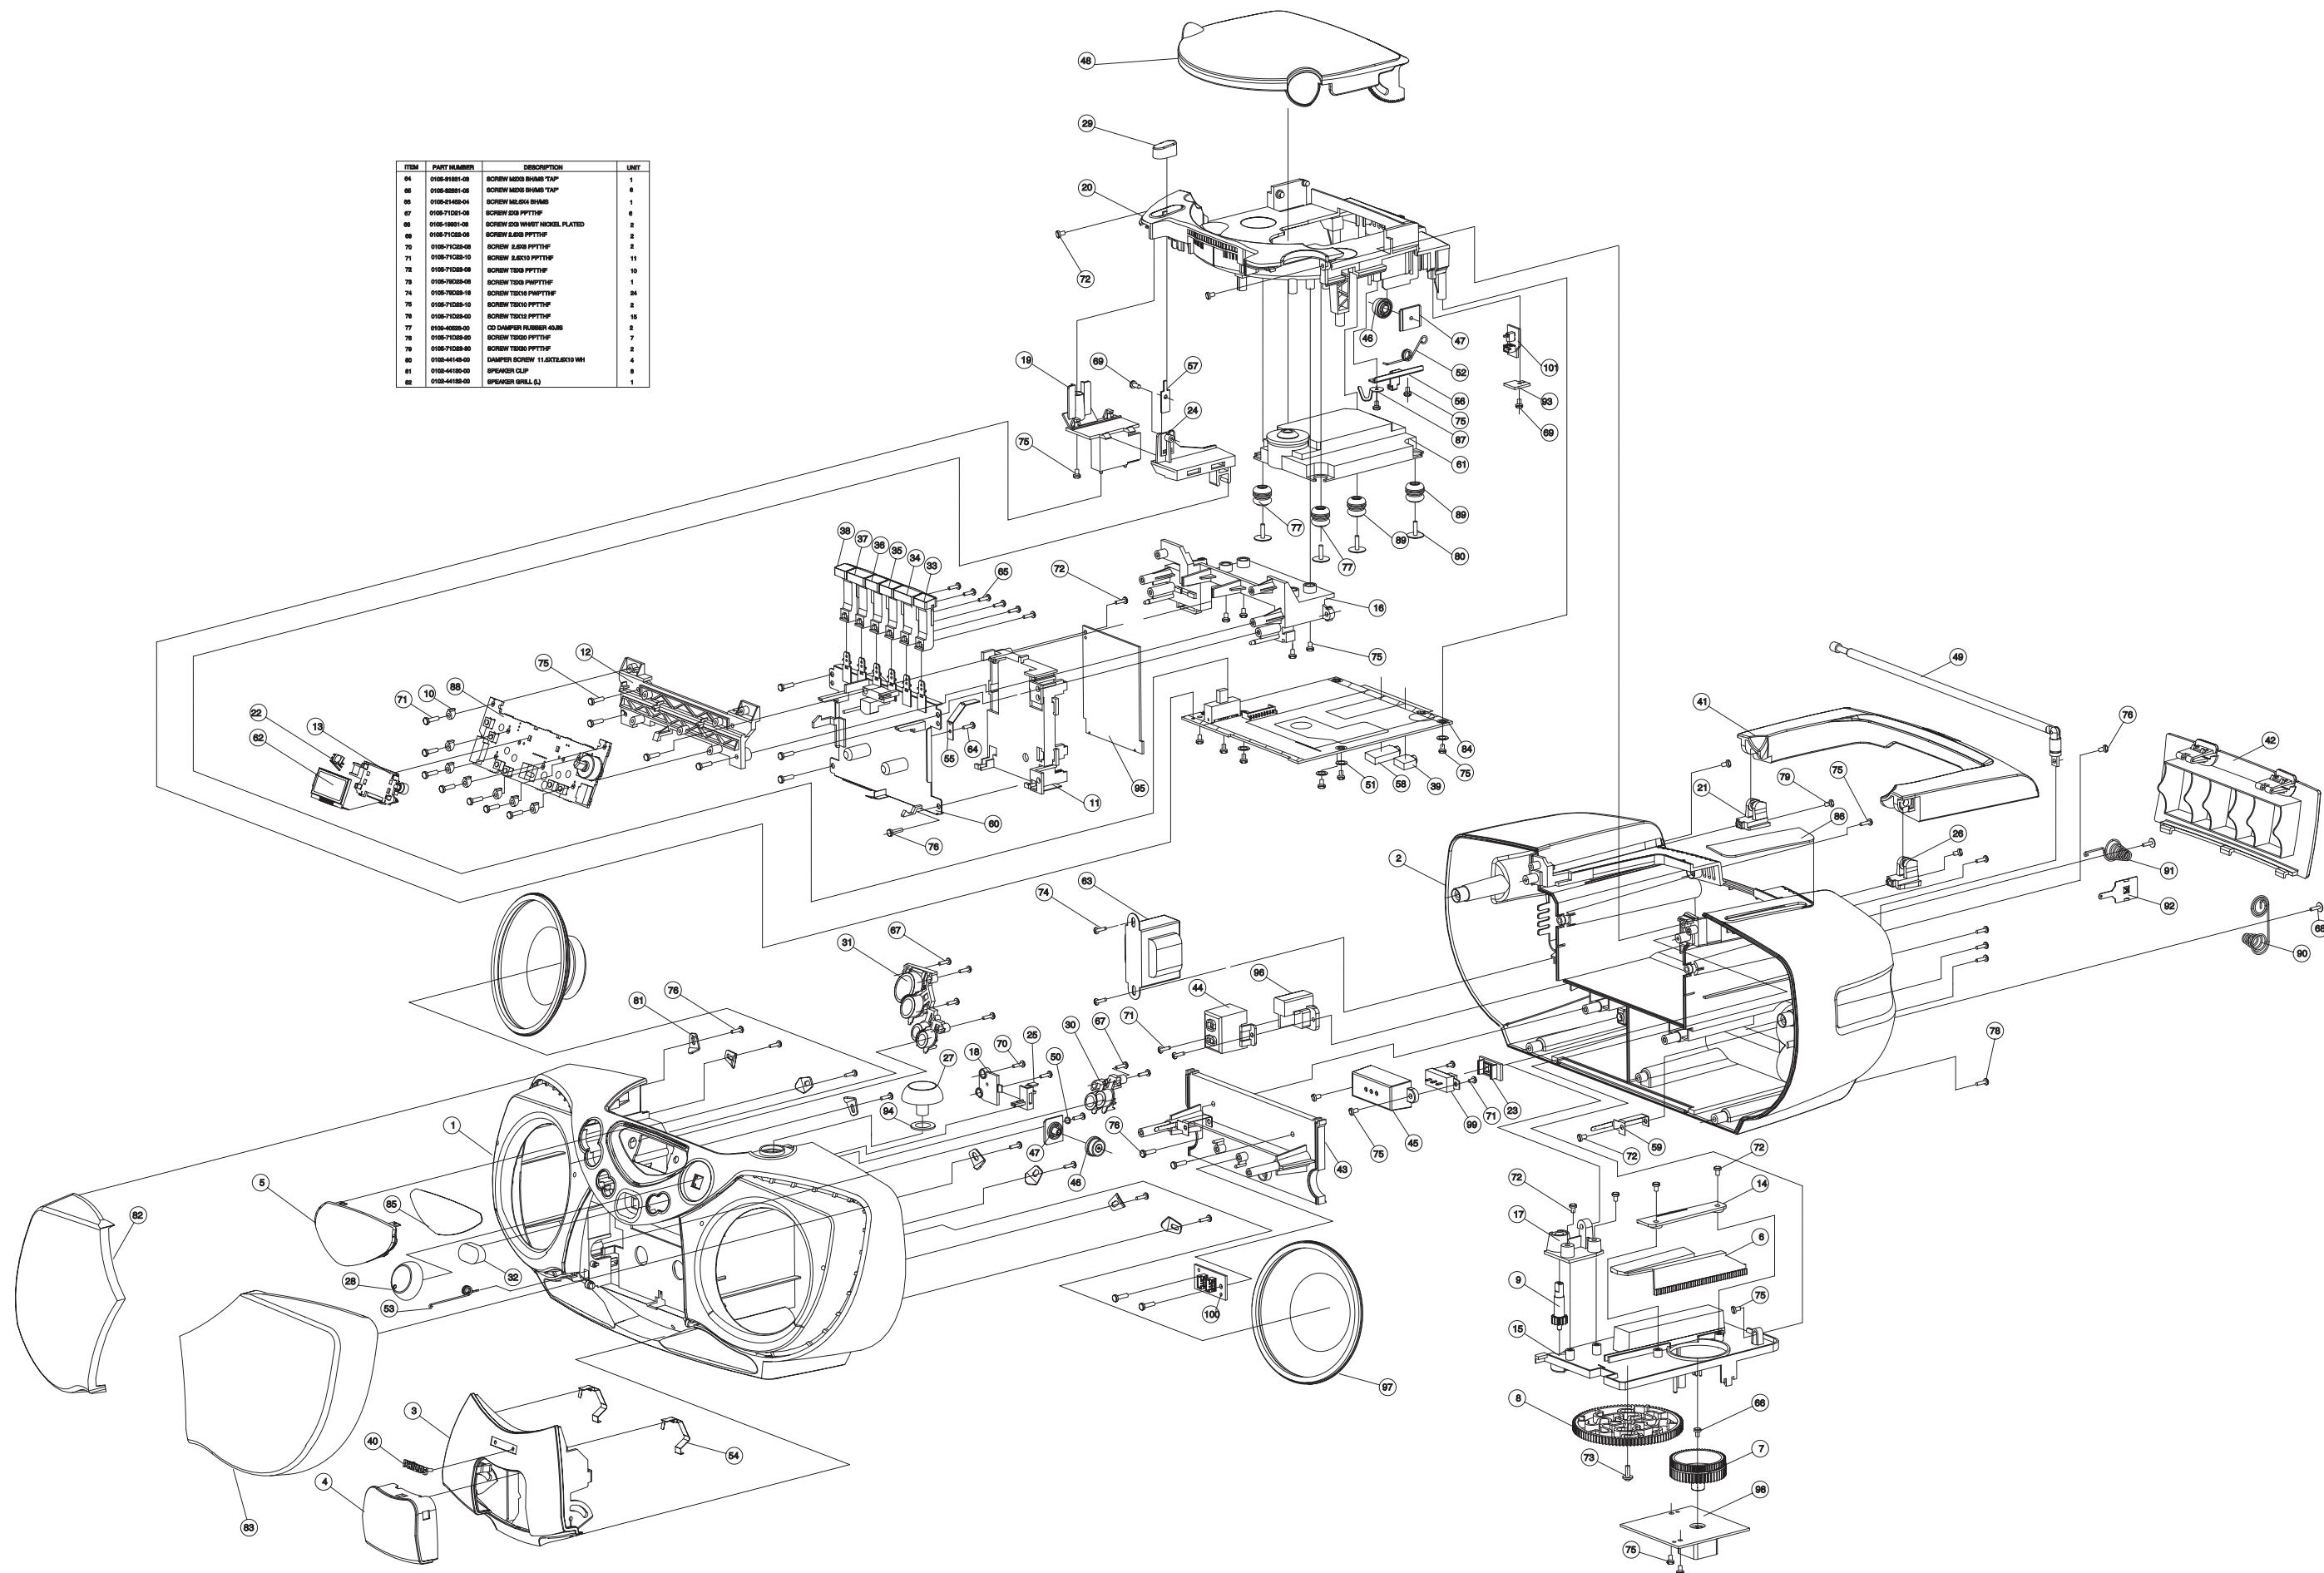

## MECHANICAL PARTSLIST - CABINET


2	9965 000 20508	REAR CABINET	54	9965 000 20532	CASS TAPE SPRING
3	9965 000 20517	CASSETTE DOOR	55	9965 000 08506	REC SPRING
4	9965 000 20518	CASS DOOR LENS	60	9965 000 14240	TAPE DECK TK20FX-V682-001
6	9965 000 20528	POINTER	61	9965 000 20539	LENS COVER (CDM)
7	9965 000 20530	GEAR PVC	61	9965 000 20542	TCP-11-TM2P CD MECH.
8	9965 000 20529	GEAR BIG	77	9965 000 20541	DAMPER RUBBER 40JIS GREY
9	9965 000 20531	GEAR TUNING	89	9965 000 20540	DAMPER RUBBER 30JIS BLK
11	3140 114 20430	BRACKET ECO-MTF-SD	90	9965 000 20538	BATTERY SPRING(+-)
20	9965 000 20507	CD TRAY	91	9965 000 20537	BATTERY SPRING(-)
21	9965 000 20526	HANDLE BKT LEFT	92	9965 000 20536	BATTERY PLATE(+)
26	9965 000 20527	HANDLE BKT RIGHT			
27	9965 000 20512	TUNING KNOB			
28	9965 000 20514	VOLUME KNOB			
29	9965 000 20519	SELECT KNOB			
30	9965 000 20515	REPEAT PROGRAM KEY			
31	9965 000 20516	PLAY/STOP/FF/REW KEY			
32	9965 000 20513	DBB KNOB			
33	9965 000 20520	CASS KEY (PAUSE)			
34	9965 000 20521	CASS KEY (STOP)			
35	9965 000 20522	CASS KEY (F.F.)			
36	9965 000 20523	CASS KEY (REW)			
37	9965 000 20524	CASS KEY (PLAY)			
38	9965 000 20525	CASS KEY (RECORD)			
41	9965 000 20511	HANDLE			
42	9965 000 20510	BATTERY DOOR			
46	4822 529 10322	DAMPER ASSY			
48	9965 000 20509	CD DOOR			
49	9965 000 20535	ROD ANT (3 SECTION)			
52	9965 000 20533	CD DOOR SPRING			
53	9965 000 20534	CASS DOOR SPRING			

## MECHANICAL PARTSLIST - TAPE DECK

32	4822 403 20244	Roller Arm Assy
41	4822 358 31323	F. Belt
55	4822 358 31322	Main Belt
58	4822 403 71219	Eject Belt
62	4822 249 10475	R/P Head
63	4822 249 10531	E. Head
64	4822 361 21599	Motor EG-530AD-2B

Note: Only these parts mentioned in the list are normal service parts.

## EXPLODED VIEW DIAGRAM - TAPE DECK

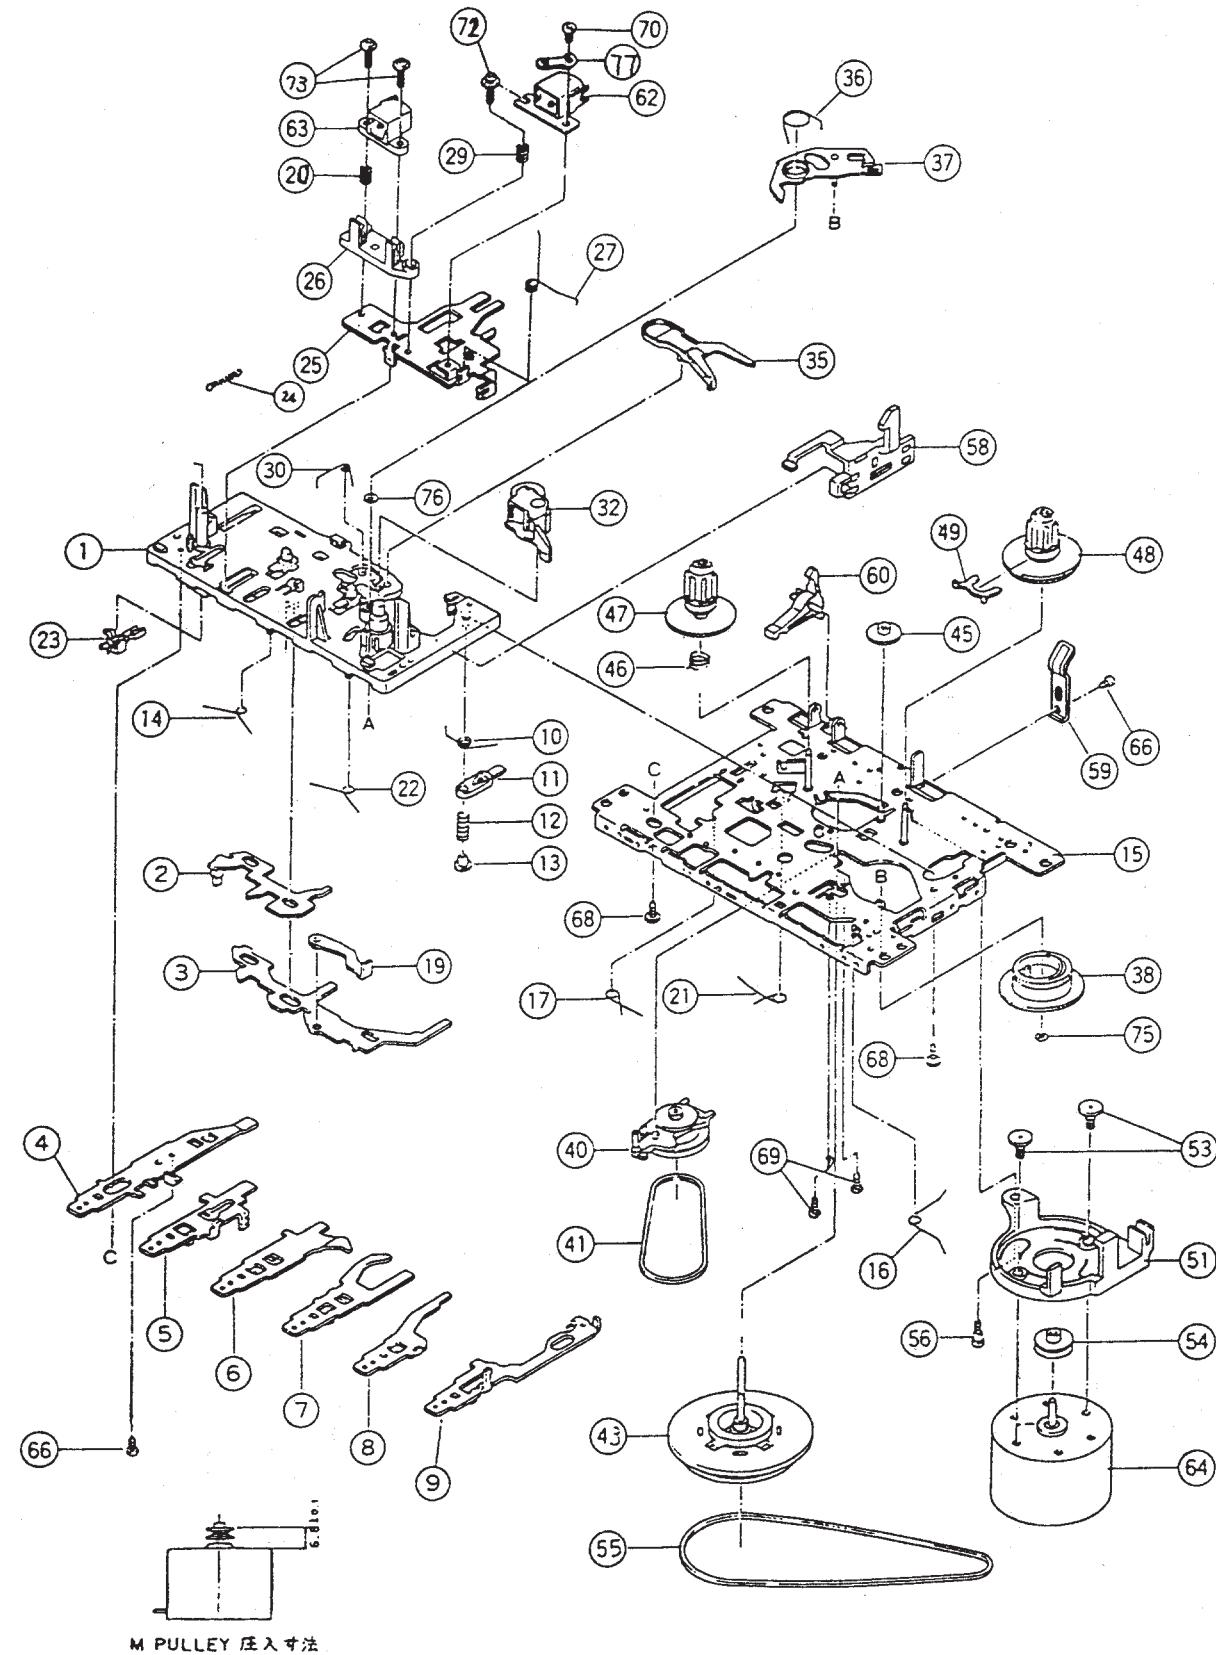



## ELECTRICAL PARTSLIST

---

### - IC & TRANSISTORS -

---

7705	4822 209 17498	AN7323
U401	4822 209 31544	TA8227P
Q401	9965 000 14275	HMBT8050
Q402	9965 000 14275	HMBT8050
Q601	9965 000 14275	HMBT8050
Q604	9965 000 14275	HMBT8050
Q606	9965 000 14275	HMBT8050
Q301	9965 000 20559	SS9014C
7702	4822 130 40981	BC337-25

**Note:** Only these parts mentioned in the list are  
normal service parts.