


Radio cassette player D6636/00/17


Service
Service
Service

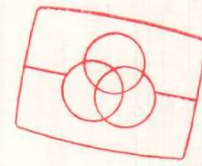


Free service manuals
Gratis schema's
Digitized by

www.freesevicemanuals.info

Service Manual

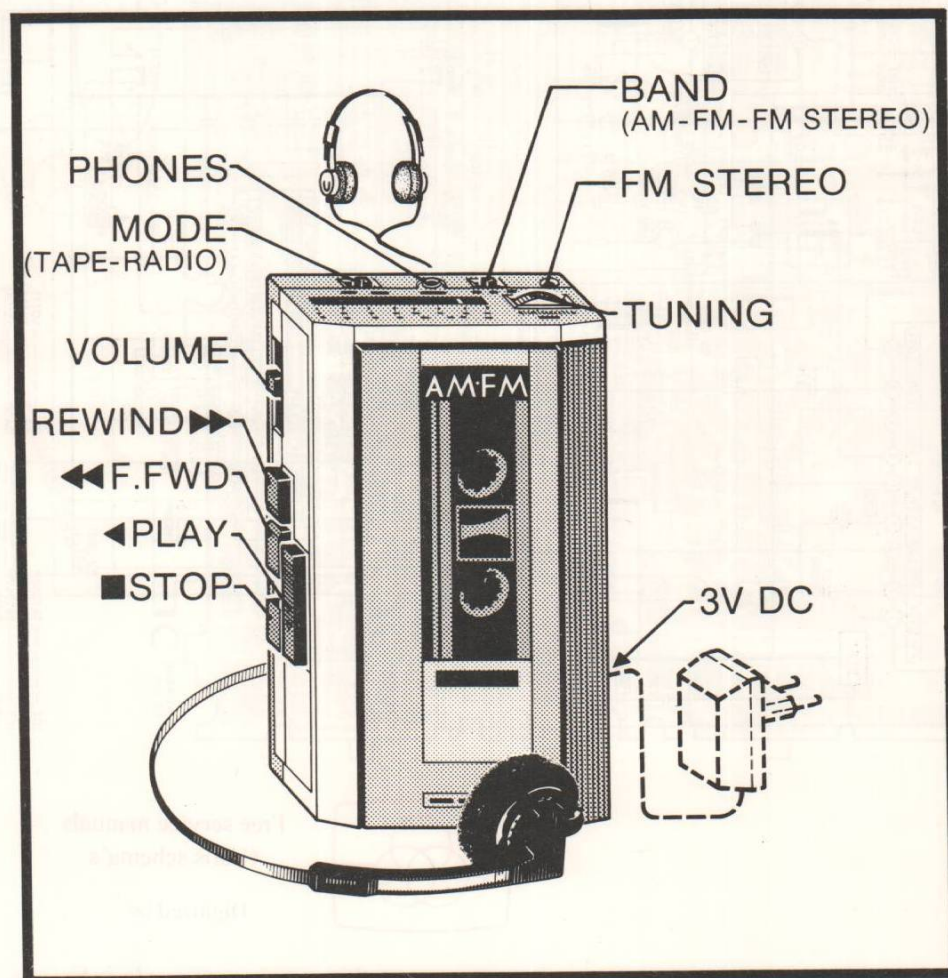

39 161 A12

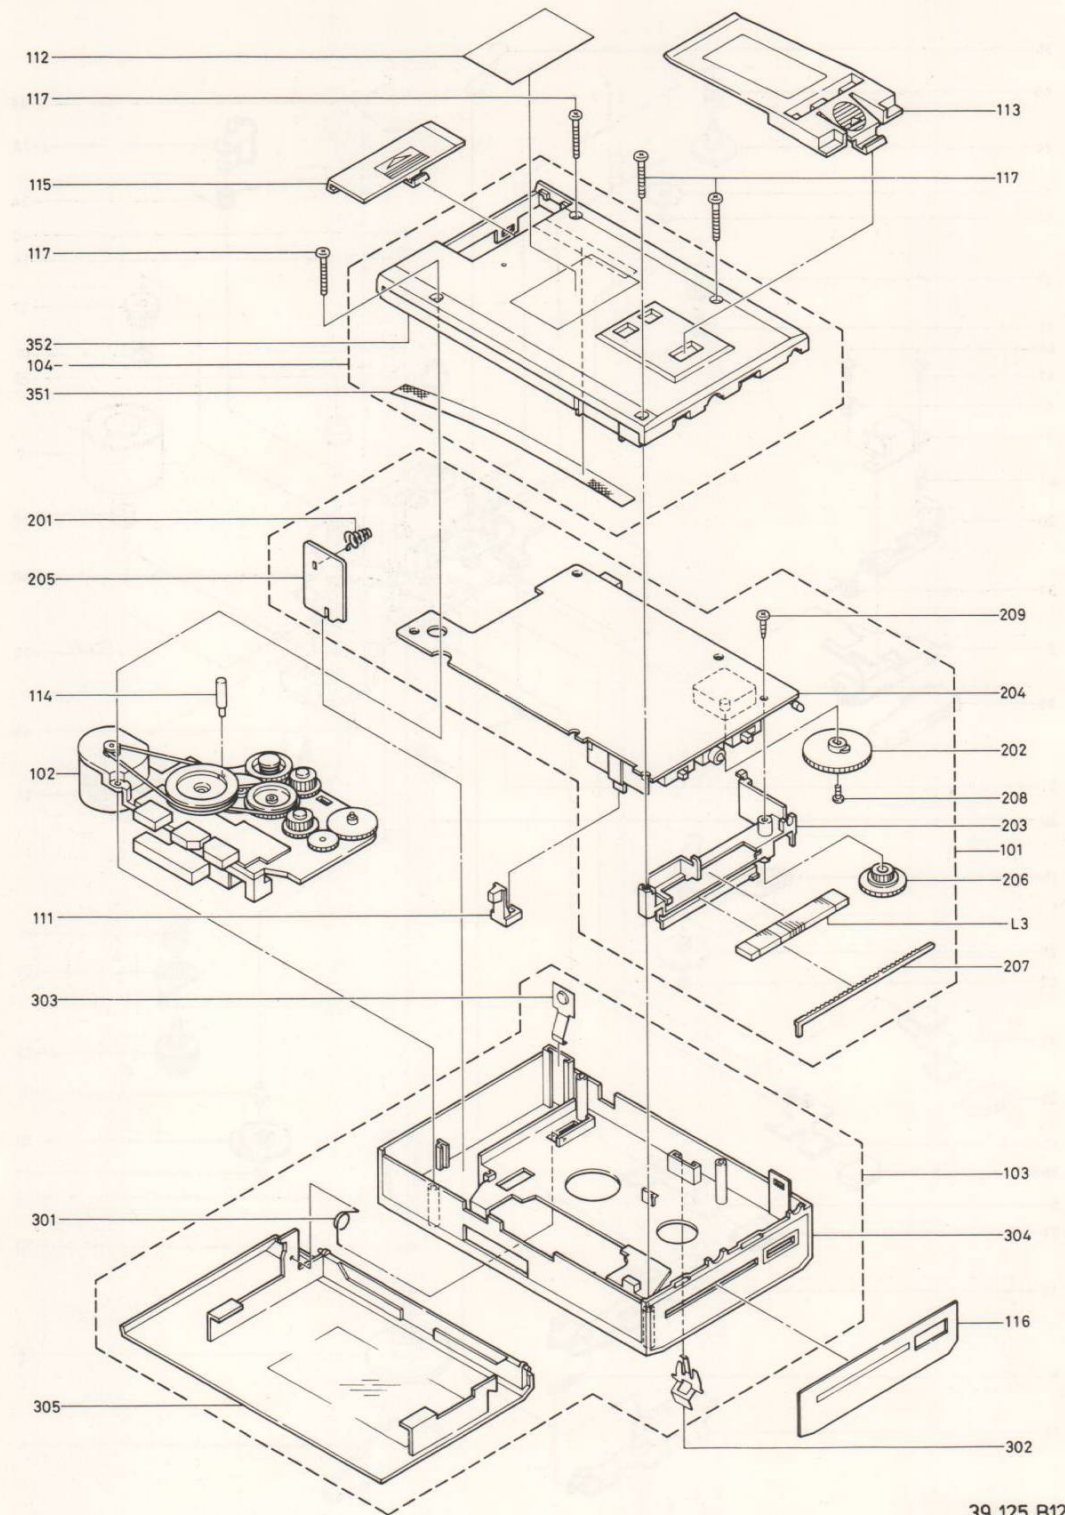


39 125 B12

104 4822 443 50866
111 4822 411 61209
113 4822 498 91015
115 4822 443 61773
206 4822 413 41307

304 4822 443 50867
305 4822 443 61771
305/17 4H 443 61772

For /17 4822= 4H




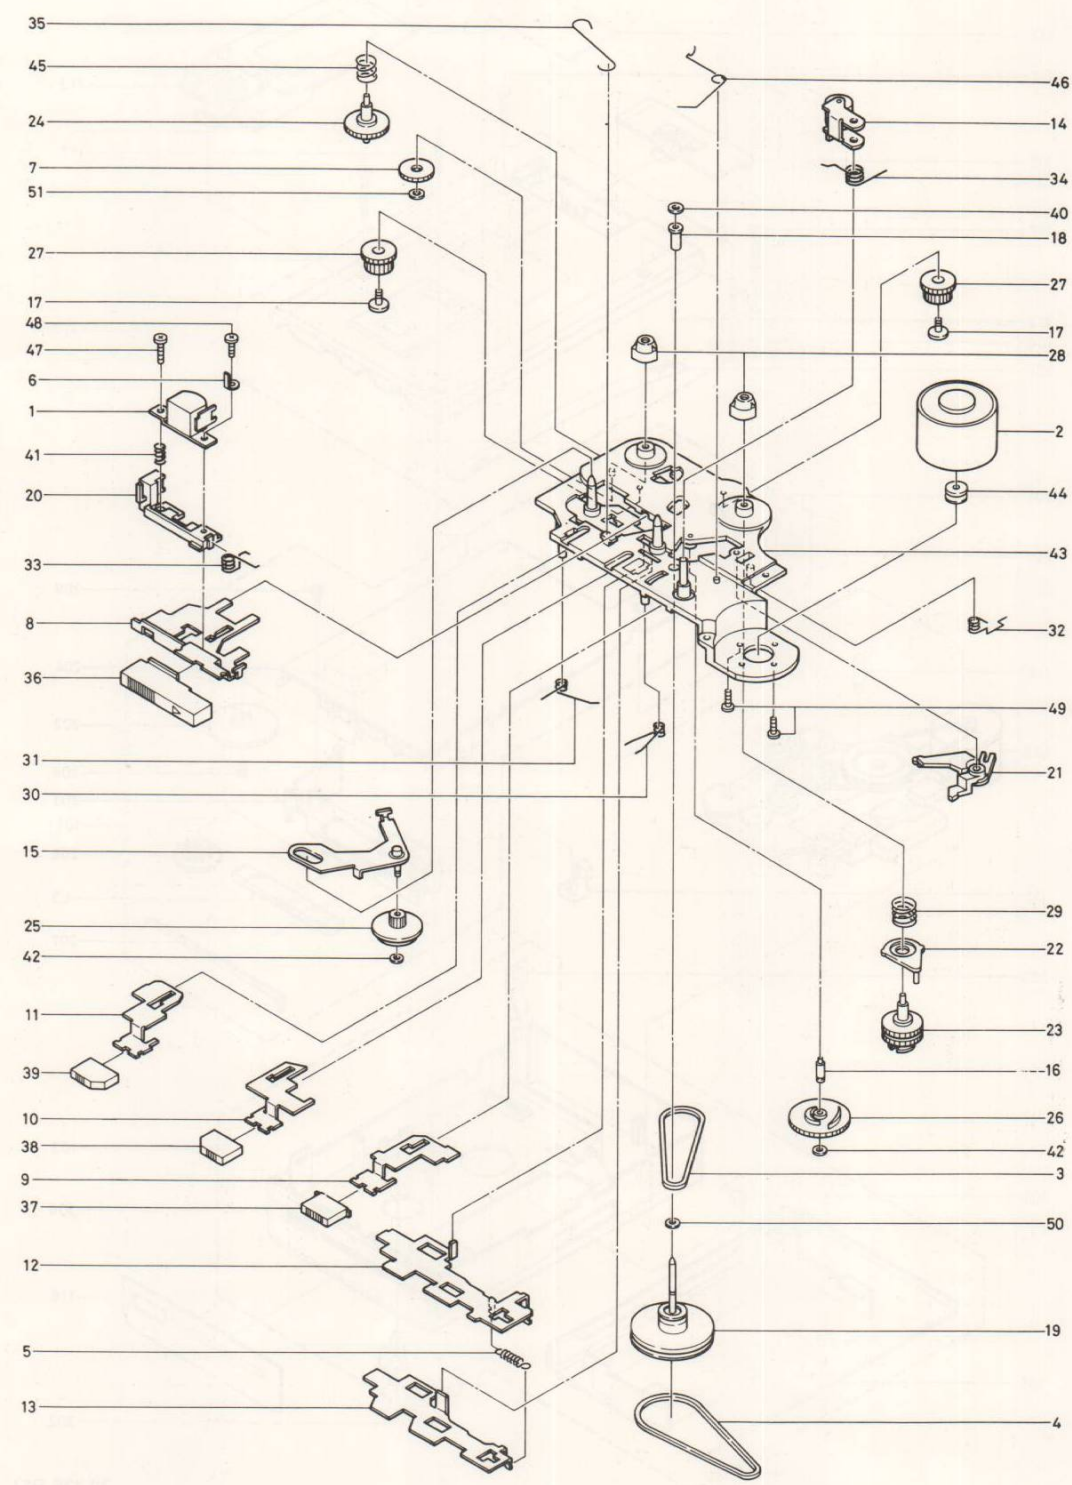


39 124 B12

- | | |
|----|----------------|
| 1 | 4822 249 30102 |
| 2 | 4822 361 20664 |
| 3 | 4822 358 30677 |
| 4 | 4822 358 30494 |
| 14 | 4822 403 40203 |
| 19 | 4822 528 60301 |
| 23 | 4822 528 20458 |
| 36 | 4822 410 25011 |
| 37 | 4822 410 25012 |
| 38 | 4822 410 25013 |
| 39 | 4822 410 25014 |

For /17 4822= 4H

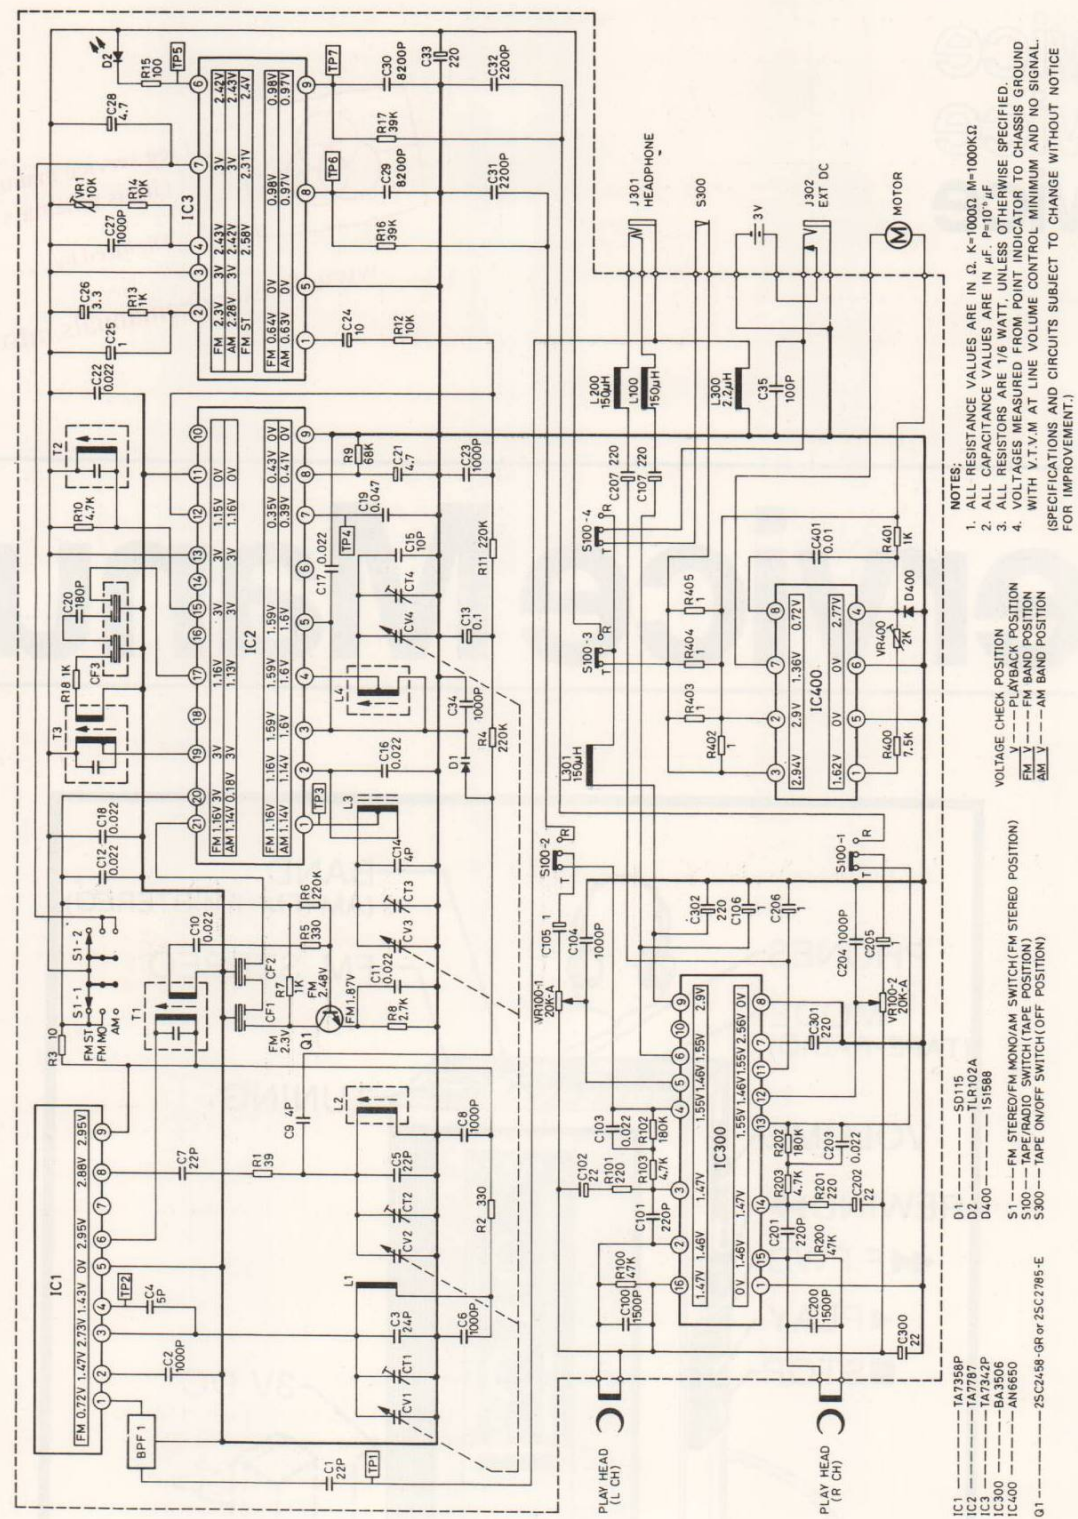


39 123 B12

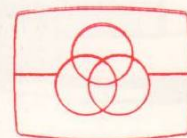

Free service manuals
Gratis schema's

Digitized by

www.freesevice manuals.info

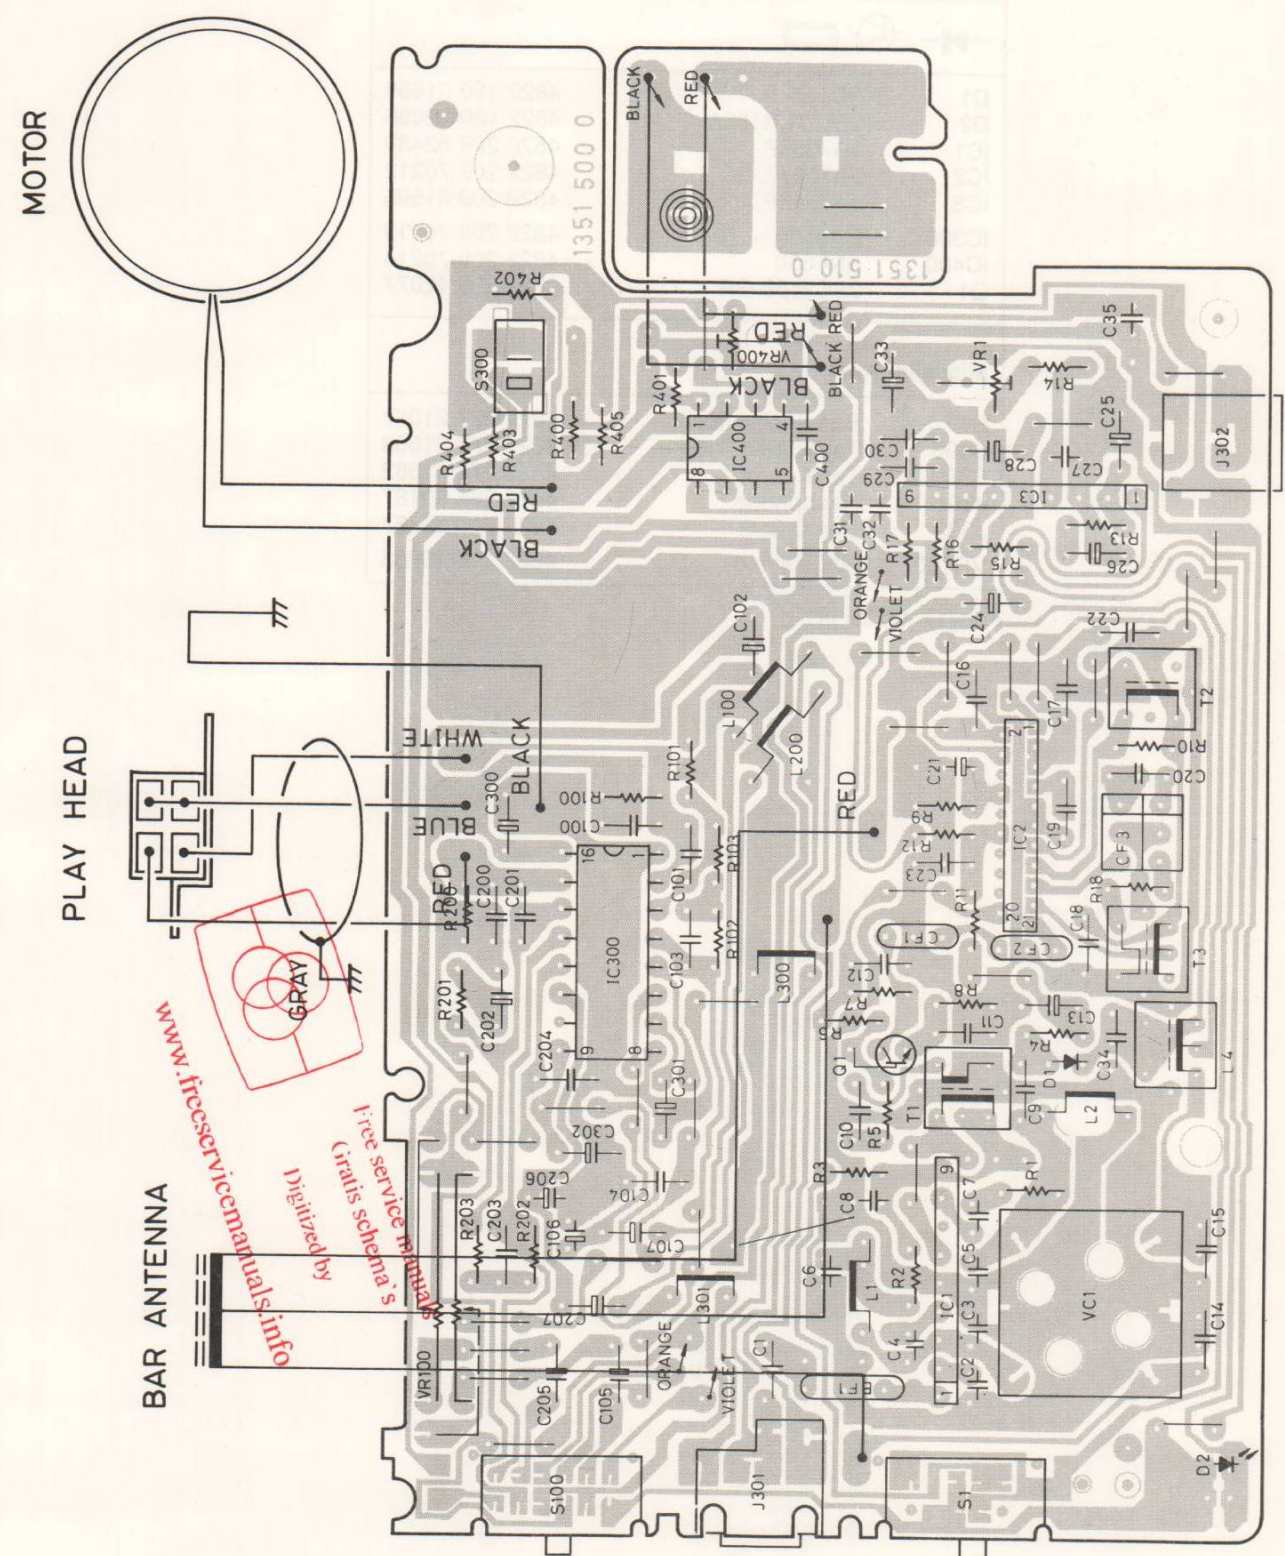

39 126 C12

  		
D1	SD115	4822 130 31666
D2	LED TLR102A	4822 130 32096
IC1	TA7358P	4822 209 82489
IC2	TA7787Z	4822 209 70212
IC3	TA7342P	4822 209 81695
IC300	BA3506	4822 209 70213
IC400	AN6650	4822 209 70214
Q1	2SC2458-GR	4822 130 42077
Miscellaneous		
S1	Band selecvtor	4822 277 21067
S100	Tape/radio	4822 277 21068
S300	Tape on/off	4822 276 11882
J301	Headphone	4822 264 30187
J302	Ext. D.C.	4822 267 30737
VR100	20k volume	4822 105 10833

For /17 4822= 4H