


R		7		10, 11,		8		9	101,	102,		103	116, 117, 104, 105, 107, 106, 109,	113, 115,	2
R		1,	4,		5,		301, 302, 303,		305, 304,	306,		308, 311, 307,	310,	309,	315, 314, 319, 31
C	1,	6, 5a, 3,	2,	5b, 4, 22,	26, 23,		28, 23, 24, 31,	29, 30,		34, 25, 103, 27,	105,	102, 104, 114,	117, 121, 106,	115, 109,	214, 110, 111, 207, 108, 118,
C	73,	9, 10,	8, 7, 72,	61,			11, 12, 18, 19,	15, 14, 36, 17,	215,		301, 302, 303, 312,		305, 304, 306, 313,	308, 310, 319, 307,	311,
L	10, 11, 11',	2, 2', 3, 12, 14, 5, 13, 15,	30, 16, 16', 17,		37, 36, 35, 38, 39, 6, 7, 7',		8, 9,	19, 20, 21, 18,	301, 301',		22, 24, 23, 25, 25',		302, 302',	26, 28, 27, 2, 2', 29, 303, 303', 304, 304', 304',	

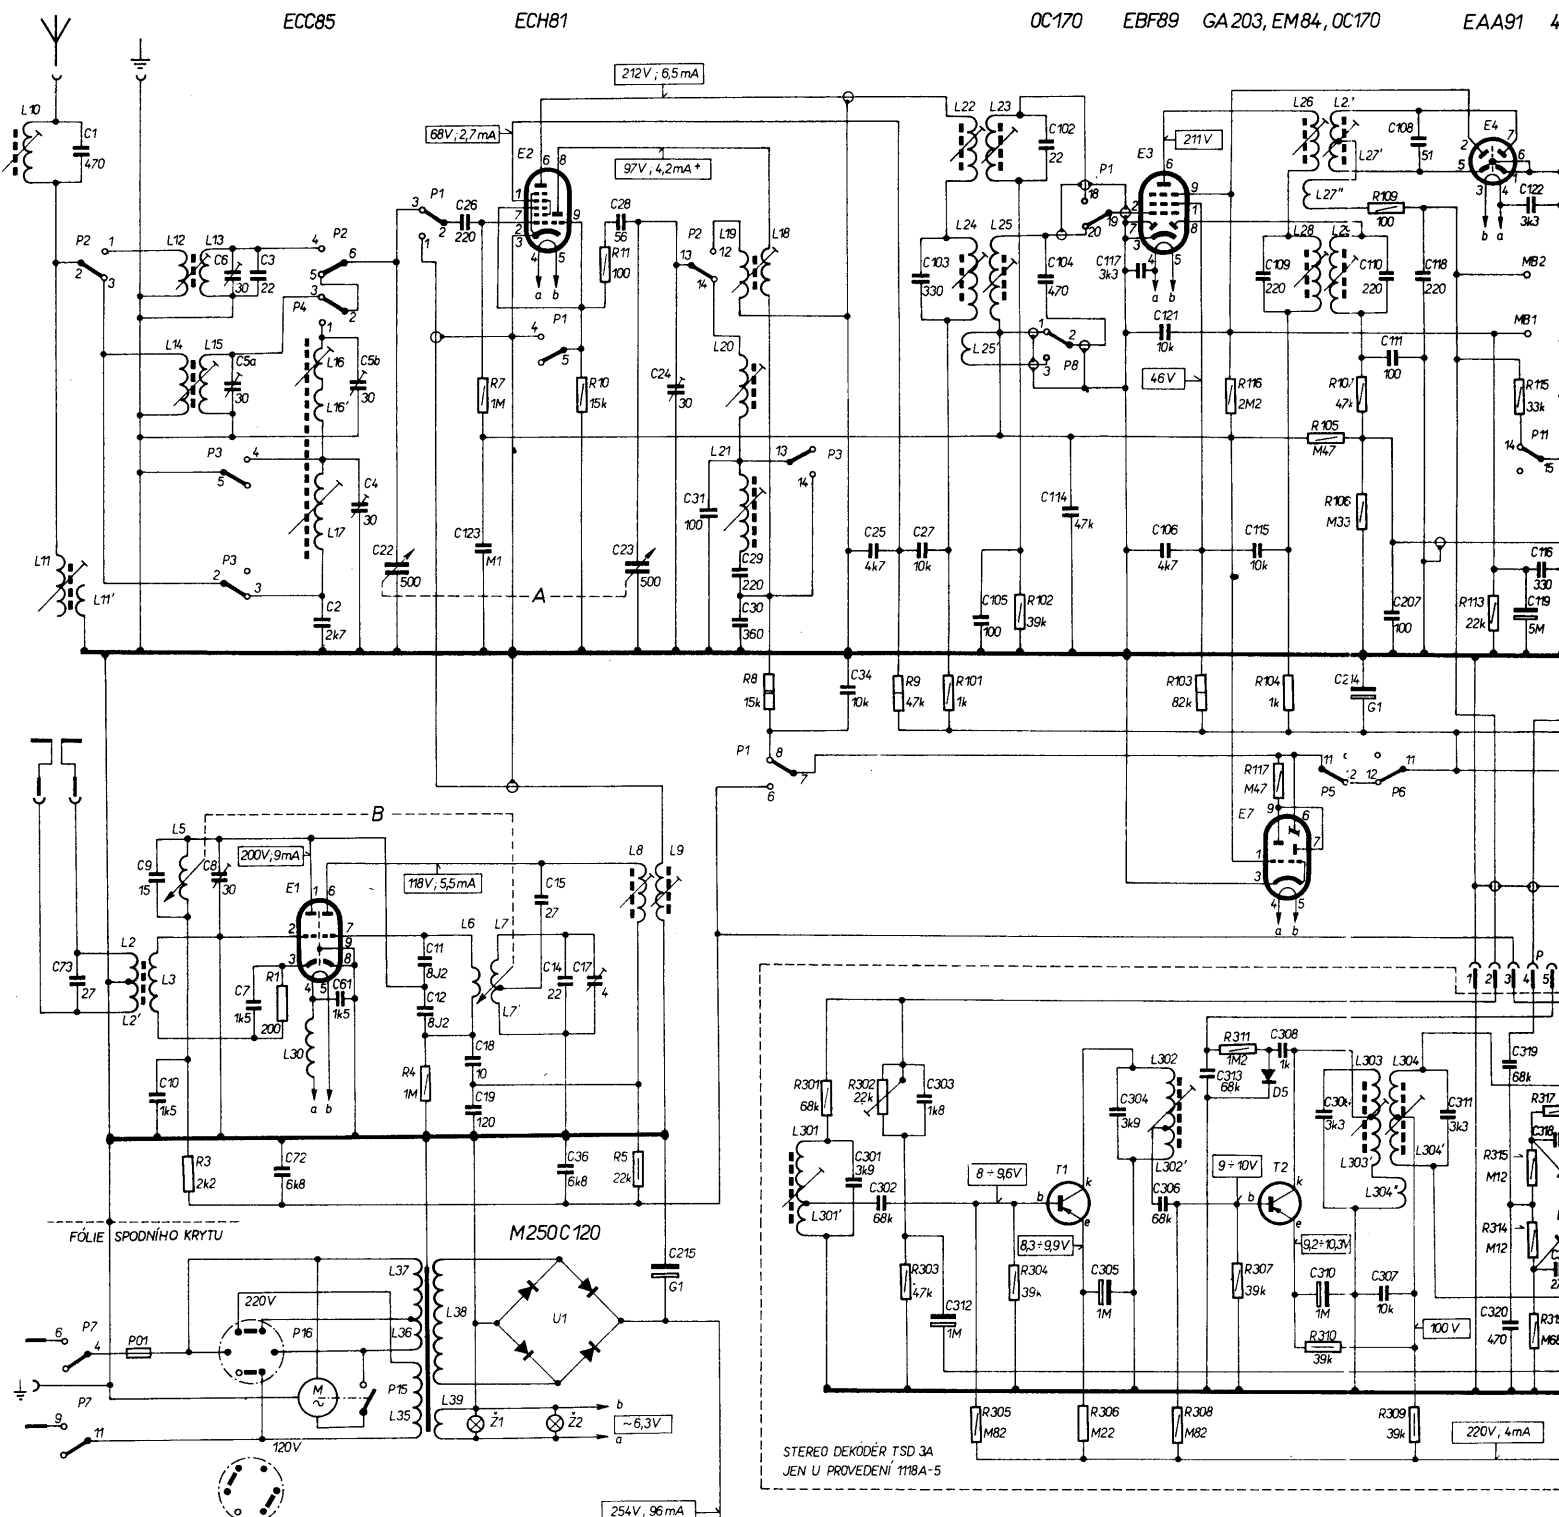

TLAČÍTKOVÝ PŘEPÍNAČ P1 ÷ P7

TLAČÍTKO OZNAČENÉ	STISKNUTÍM TLAČÍTKA MĚNÍ SE SPOJENÍ TAKTO	
	SPOJÍ SE	ROZPOJÍ SE
VKV P1	1-2, 4-5, 6-7, 9-10, 11-12, 15-16, 18-19,	2-3, 7-8, 16-17, 19-20,
KV P2	1-2, 4-6, 12-13,	2-3, 5-6, 13-14,
SV FA P3	4-5, 13-14,	2-3,
DV SV P4	1-2,	2-3,
D P5	1-2, 6-7,	2-3, 7-8, 9-10, 11-12, 13-14,
P6	1-2, 6-7,	2-3, 7-8, 11-12,
VYP P7		4-6, 9-11,

+ MĚŘENO NA STŘEDNÍCH VLNÁCH, OSTATNÍ ÚDAJE NA VELMÍ KRÁTKÝCH VLNÁCH.

TLAČÍTKOVÝ PŘEPÍNAČ P8 ÷ P11

TLAČÍTKO OZNAČENÉ	STISKNUTÍM TLAČÍTKA MĚNÍ SE SPOJENÍ TAKTO	
	SPOJÍ SE	ROZPOJÍ SE
Š PÁSMO P8	2-3,	1-2,
BASY P9	2-3, 15-16,	
REC P10		1-2, 14-15,
STEREO P11		1-2, 4-5, 11-12, 14-15,

ZAPOJENÍ ELEKTRONEK A TRANZISTORŮ

