
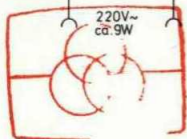


22k
P421
BZX62
D421

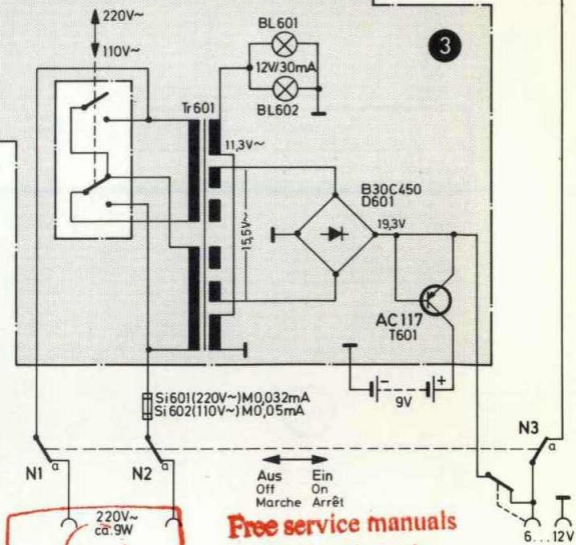

Aus Off
Ein On
Marche Arrêt


Free service manuals
Gratis schema's

Digitized by



SABA
www.freesevicemanuals.info

Transeuropa automatic H

1 FM-Tuner
Bestückungsseite
Component side
Côté éléments

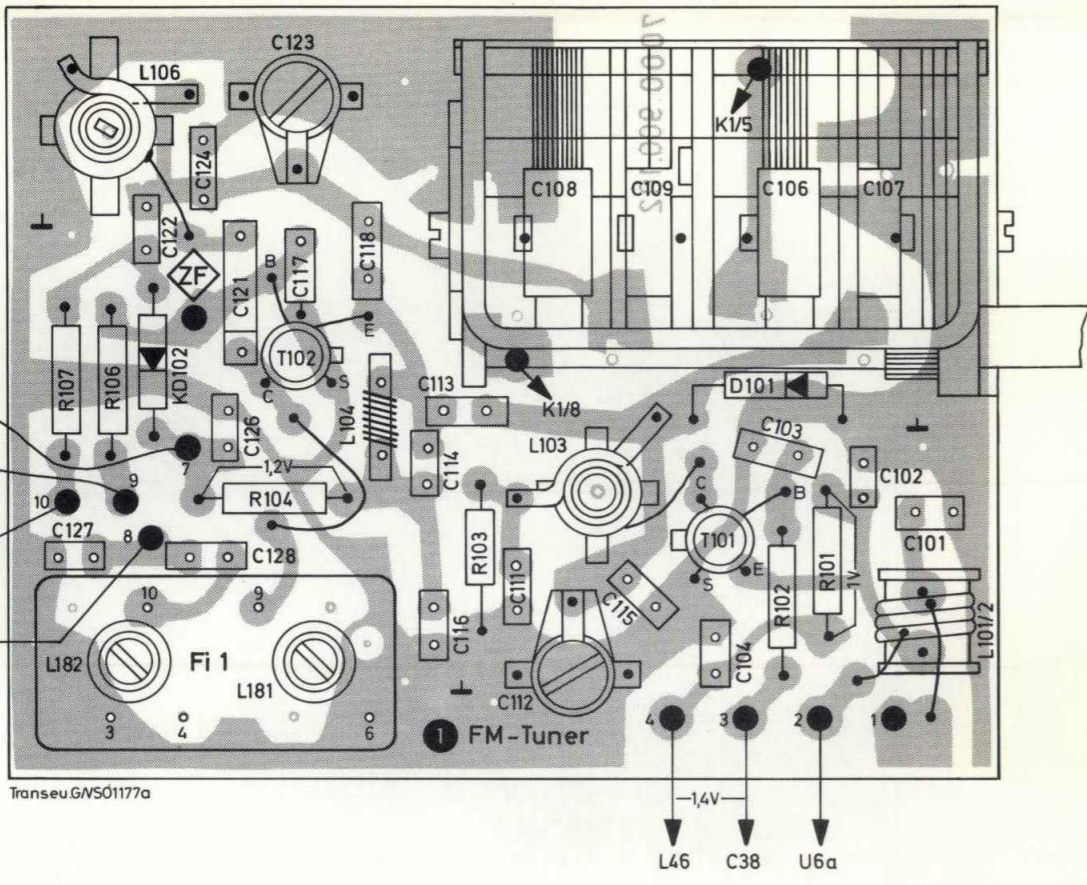


2 ZF-Teil
Bestückungsseite
Component side
Côté éléments

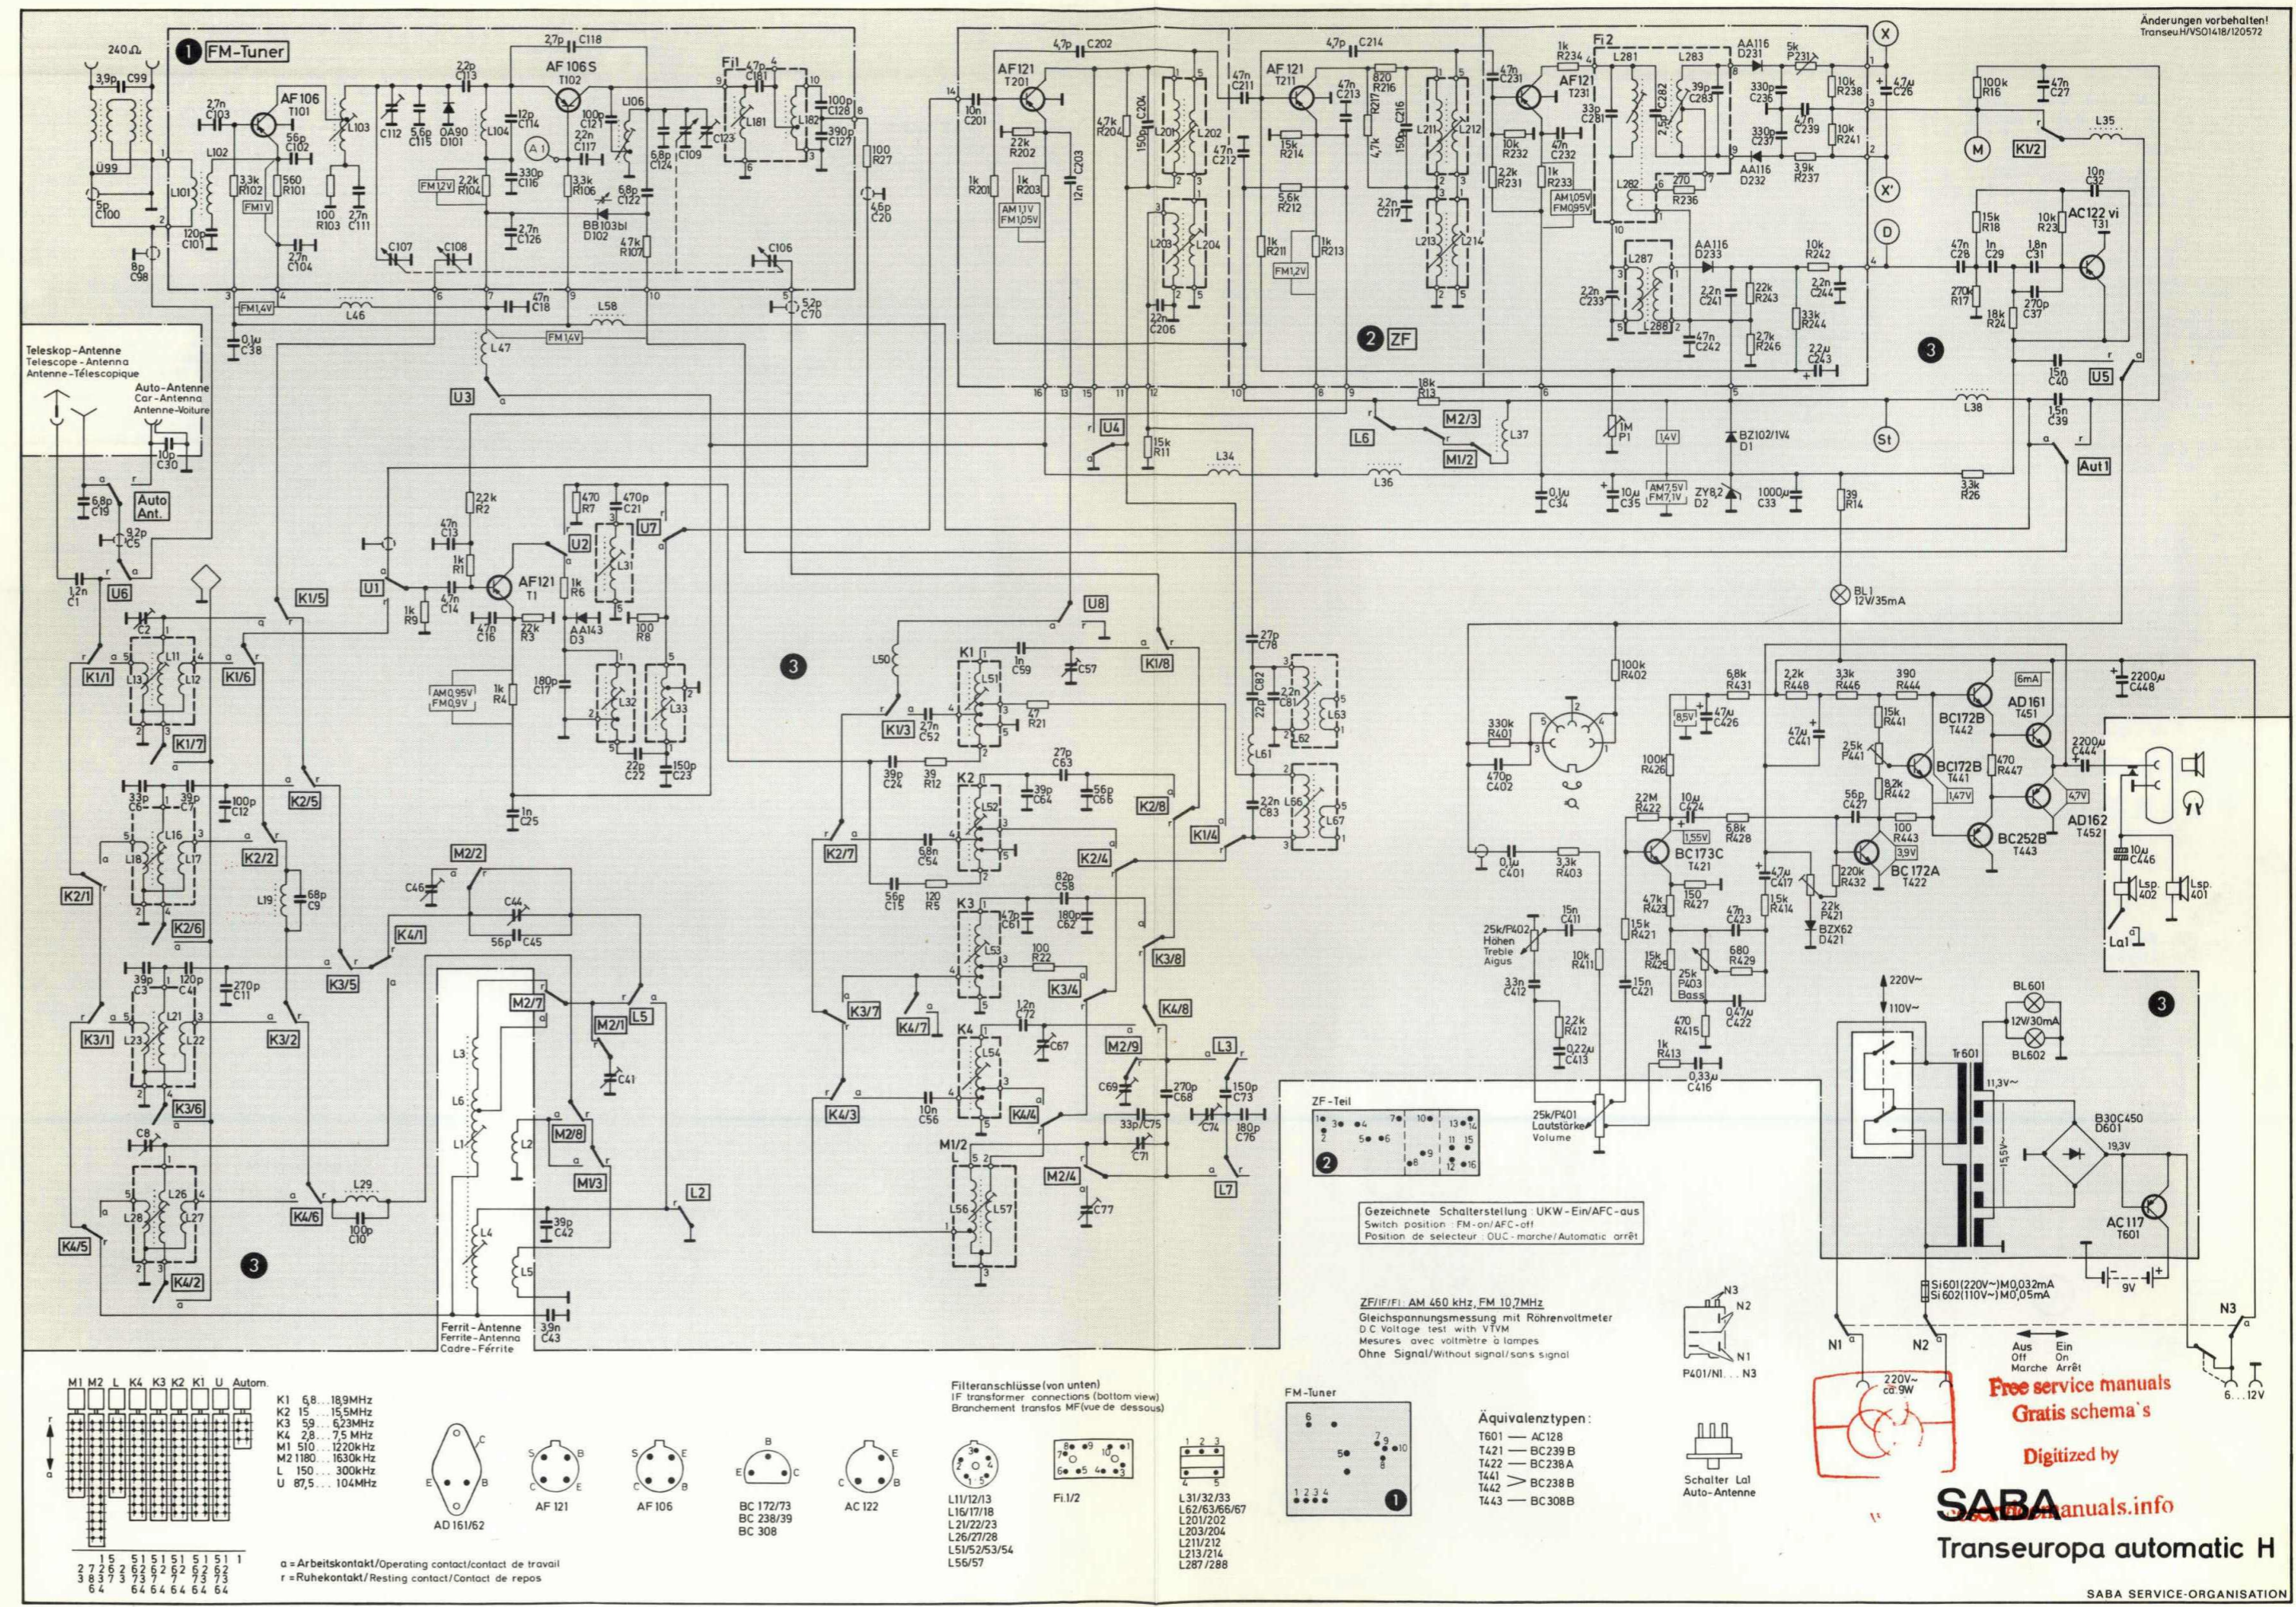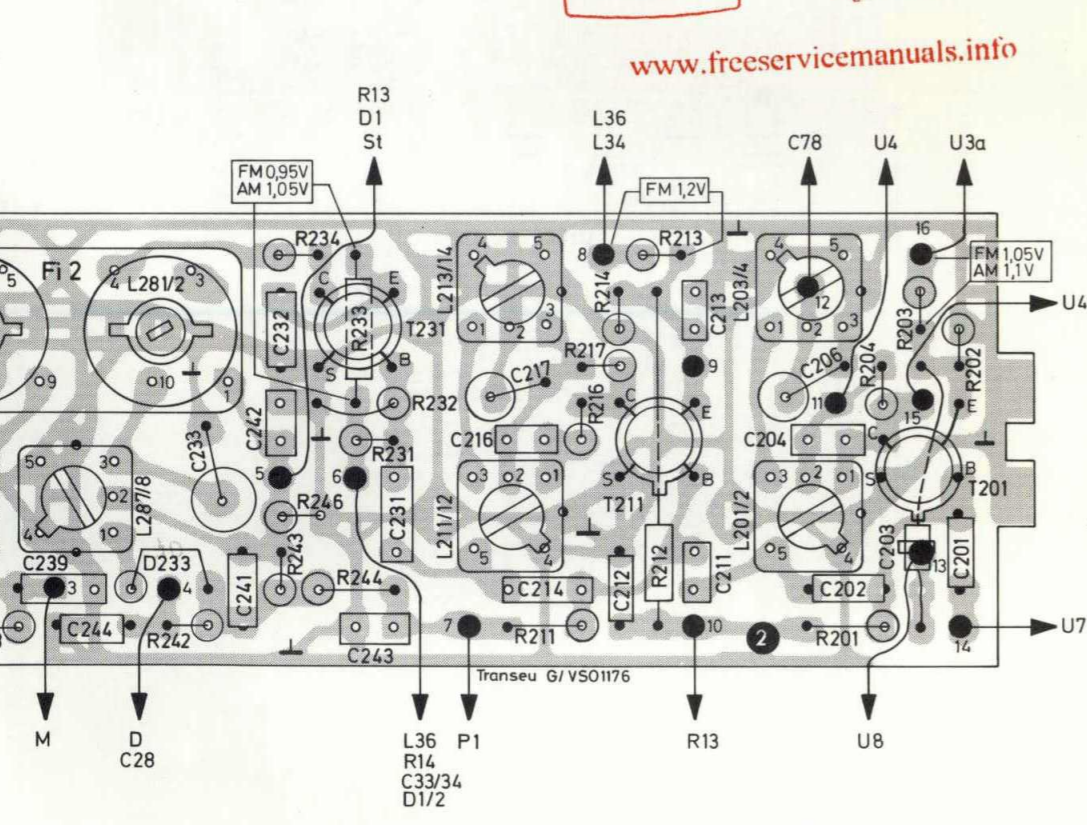


Free service manuals
Gratis schema's
Digitized by
www.freeservicemanuals.info

M1	M2	L	K4	K3	K2	K1	U	Autom.
27	15	51	51	51	51	51	1	
38	39	3	9	9	9	9	2	
64	64	64	64	64	64	64	4	

- K1 5,8...18,9MHz
- K2 15...15,5MHz
- K3 59...62,3MHz
- K4 2,8...7,5 MHz
- M1 510...1220kHz
- M2 1180...1630kHz
- L 150...300kHz
- U 87,5...104MHz

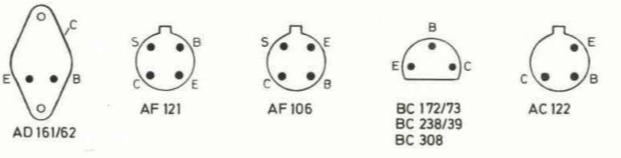

Filteranschlüsse (von unten)
IF transformer connections (bottom view)
Branchement transfo MF (vue de dessous)

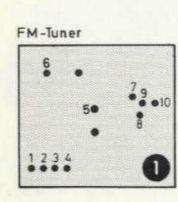

- Äquivalenztypen:
- 1601 - AC128
 - T421 - BC239 B
 - T422 - BC238 A
 - T441 - BC238 B
 - T442 - BC238 B
 - T443 - BC308 B



Schalter Lal
Auto-Antenne

a = Arbeitskontakt/Operating contact/Contact de travail
r = Ruhekontakt/Resting contact/Contact de repos

