

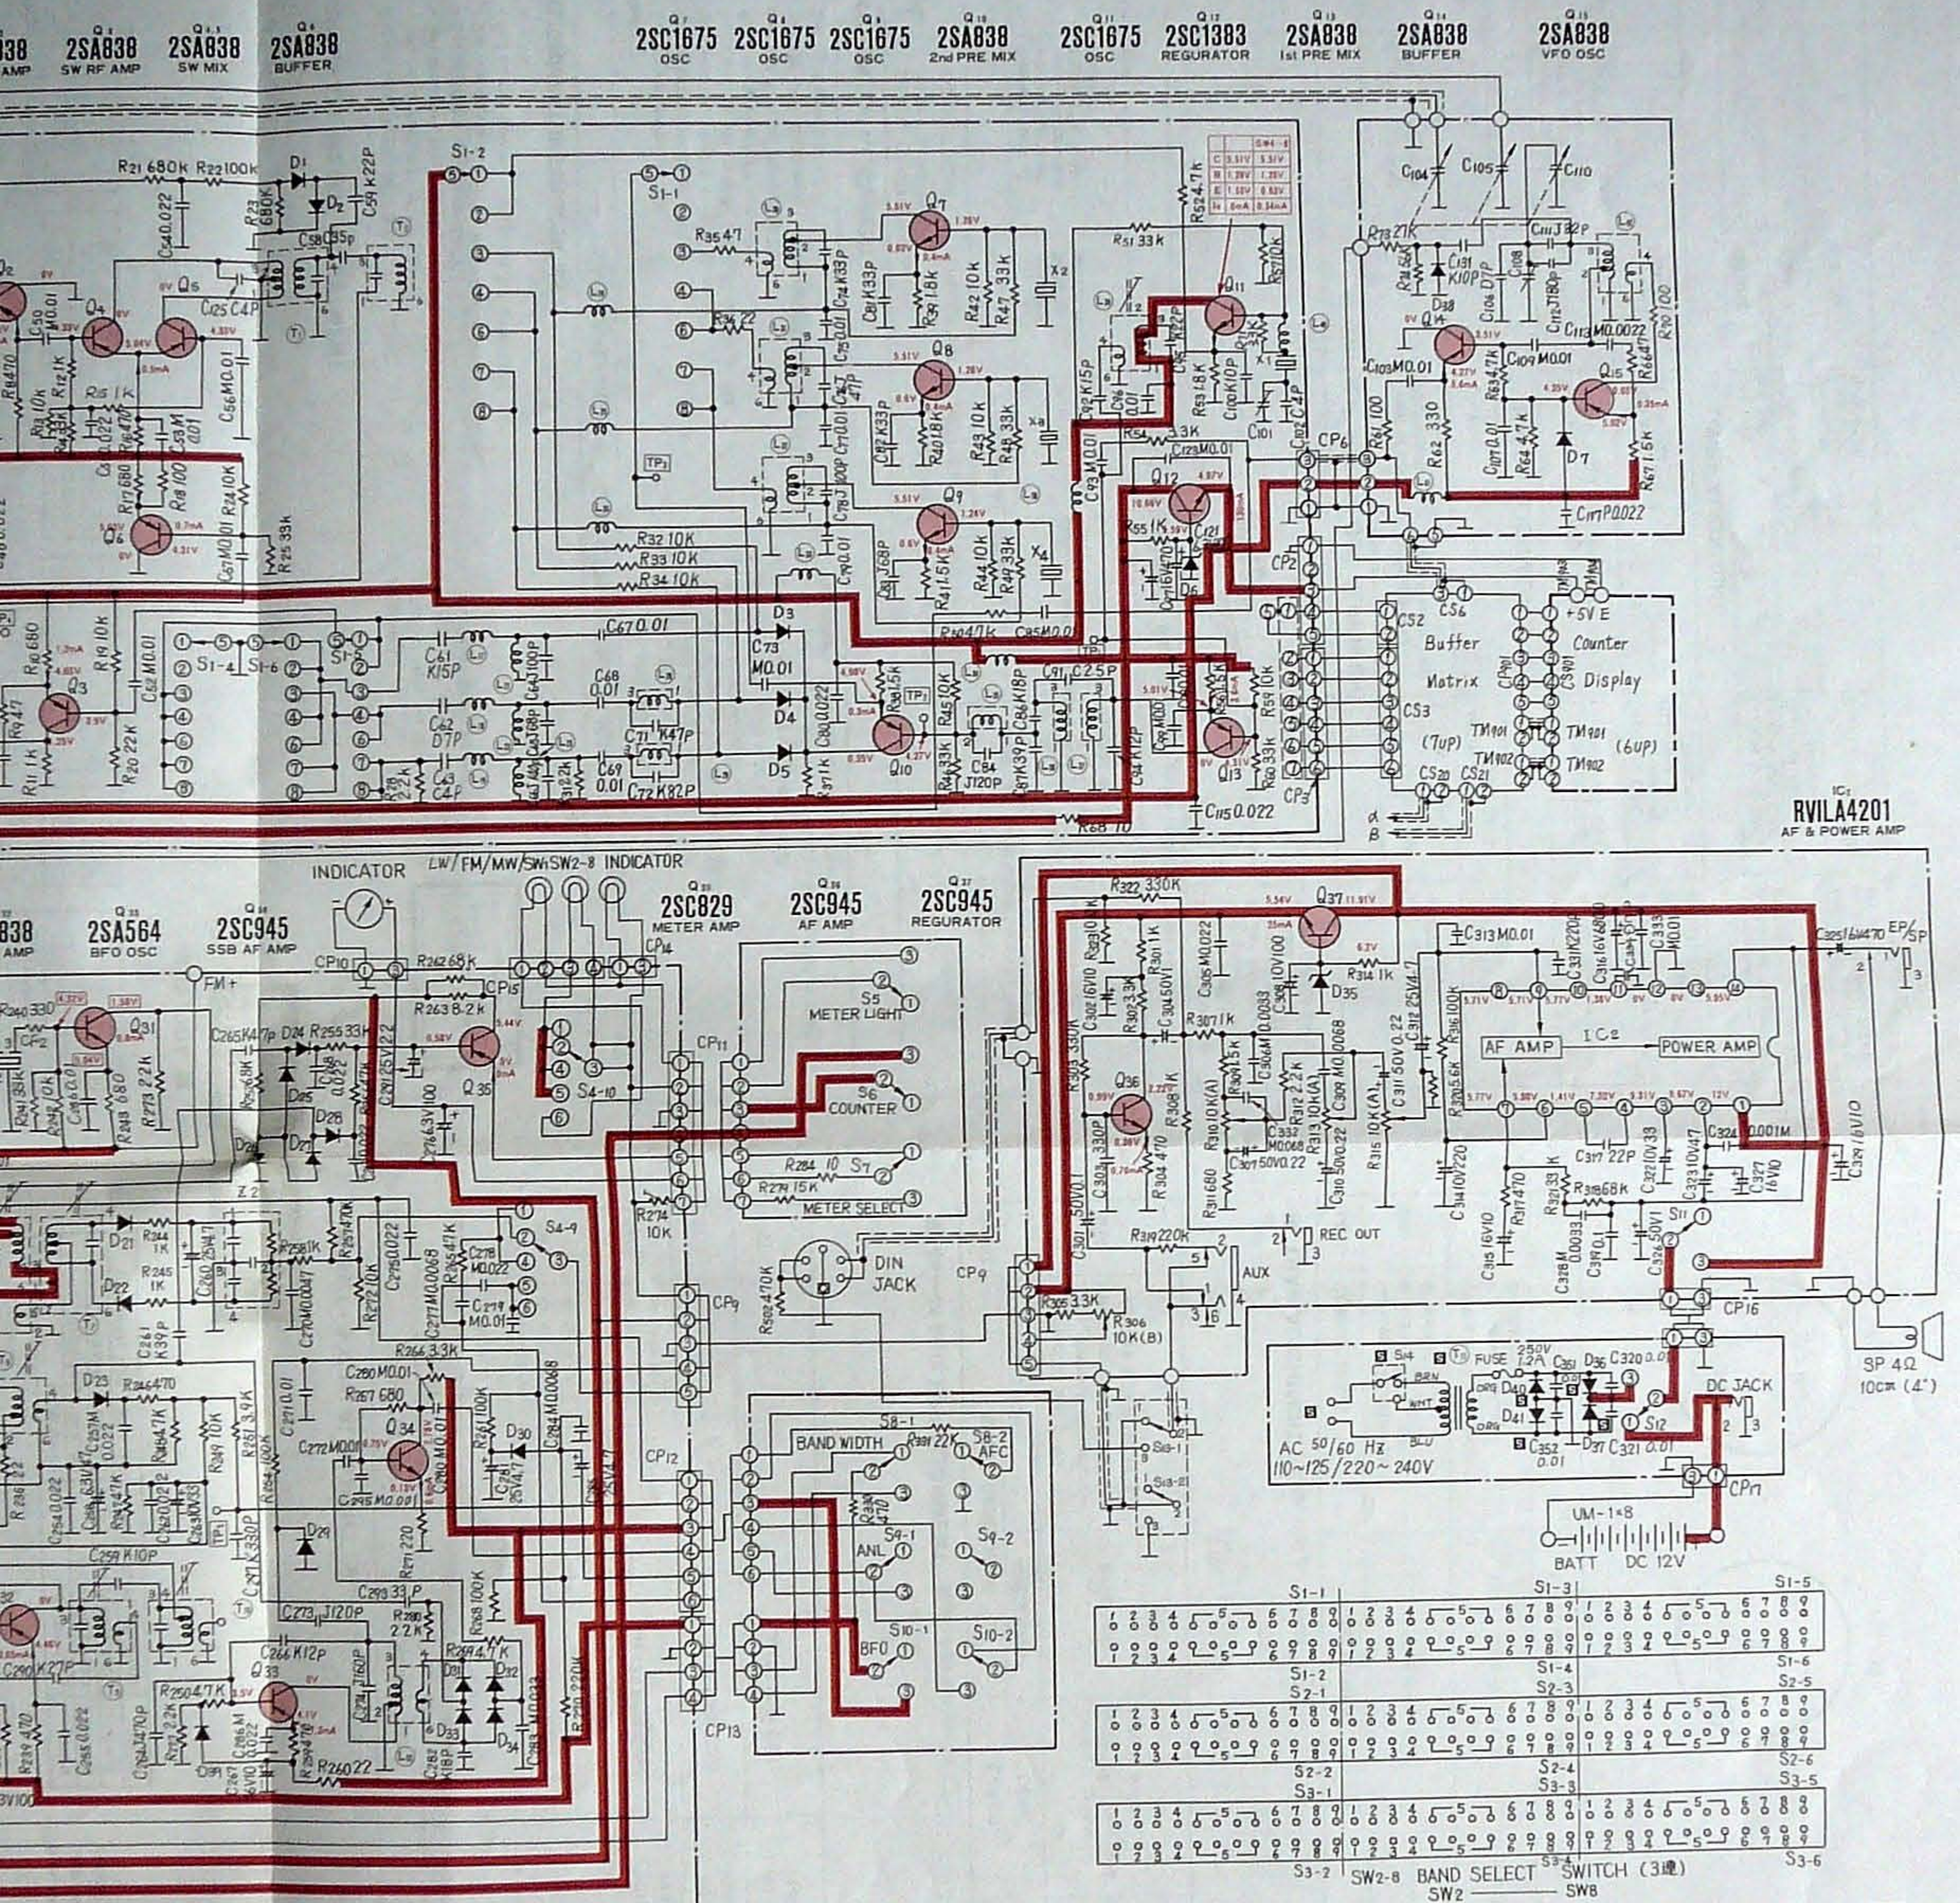
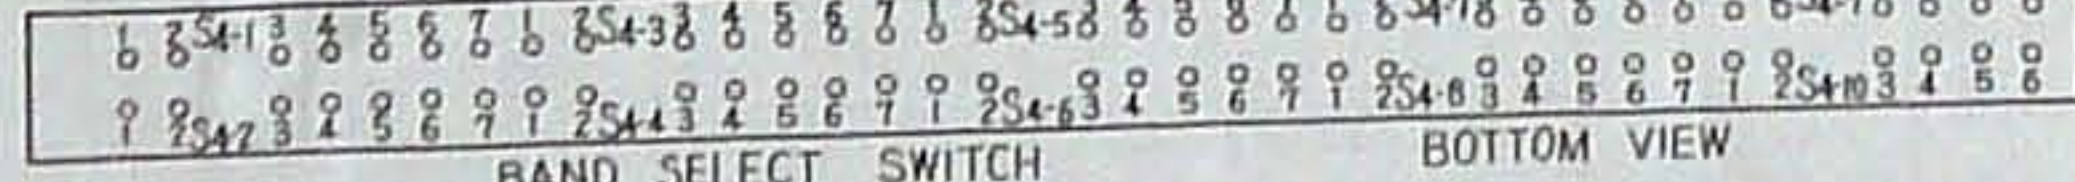
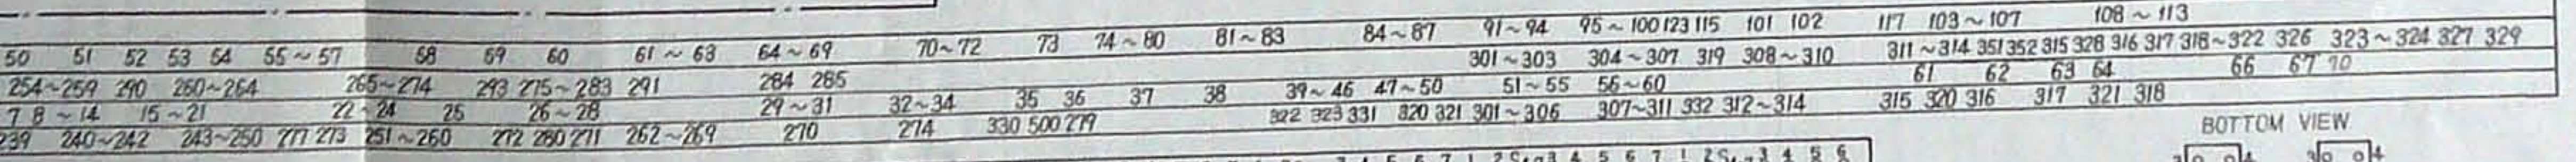
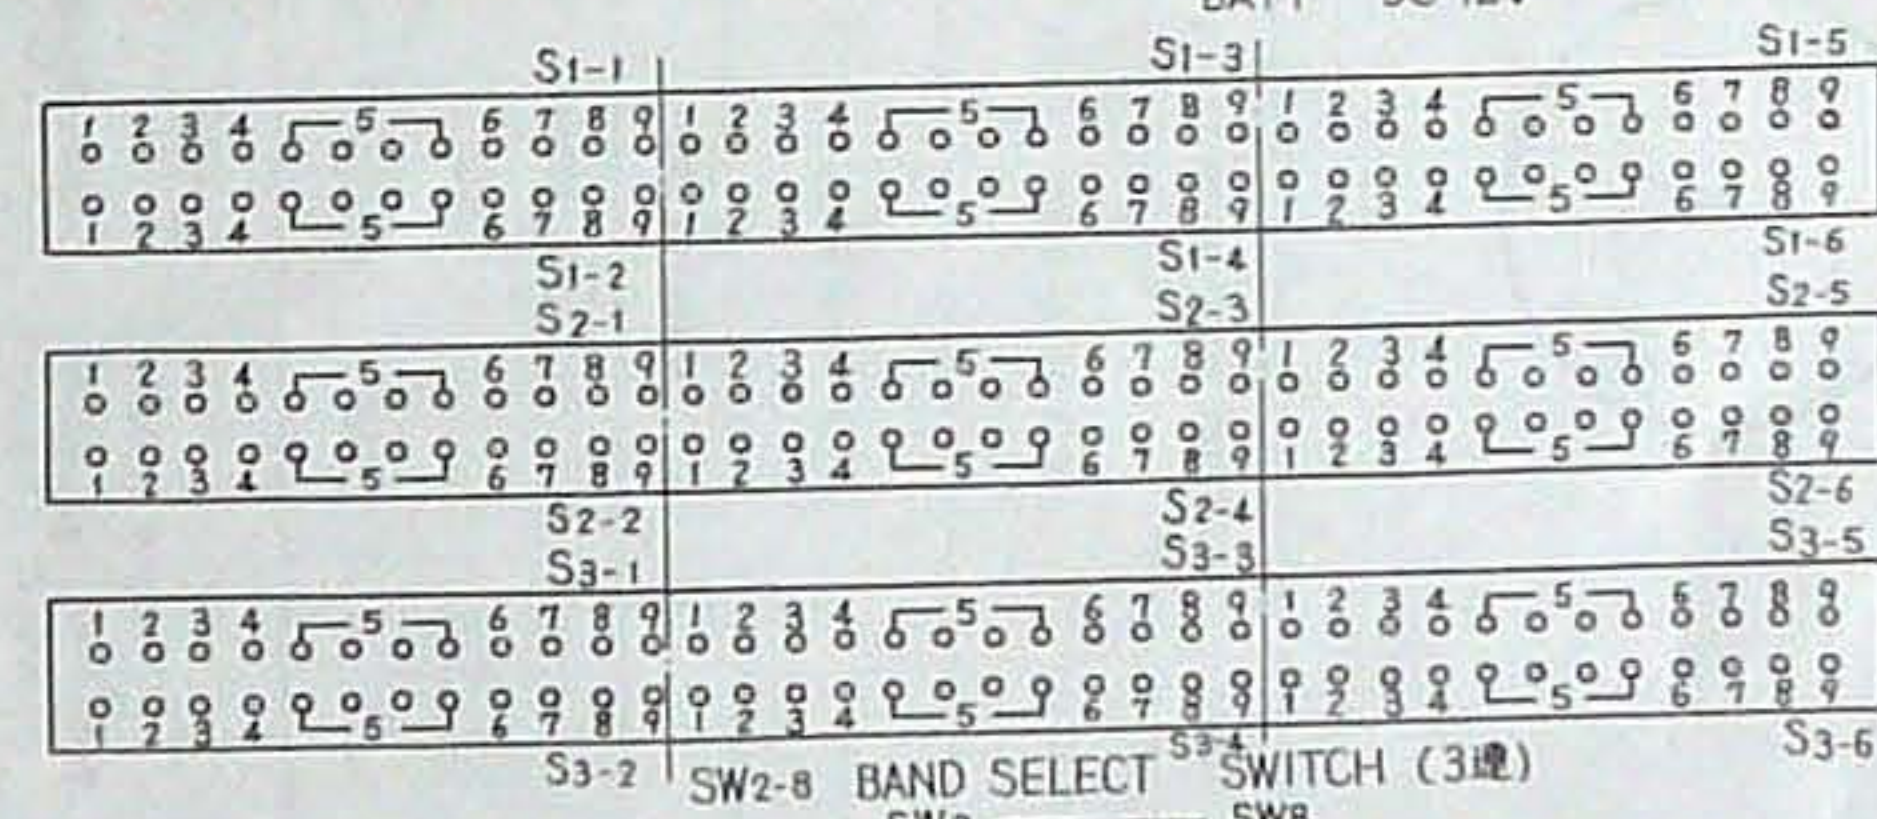


Schematic Diagram - Model RF-4900LBS

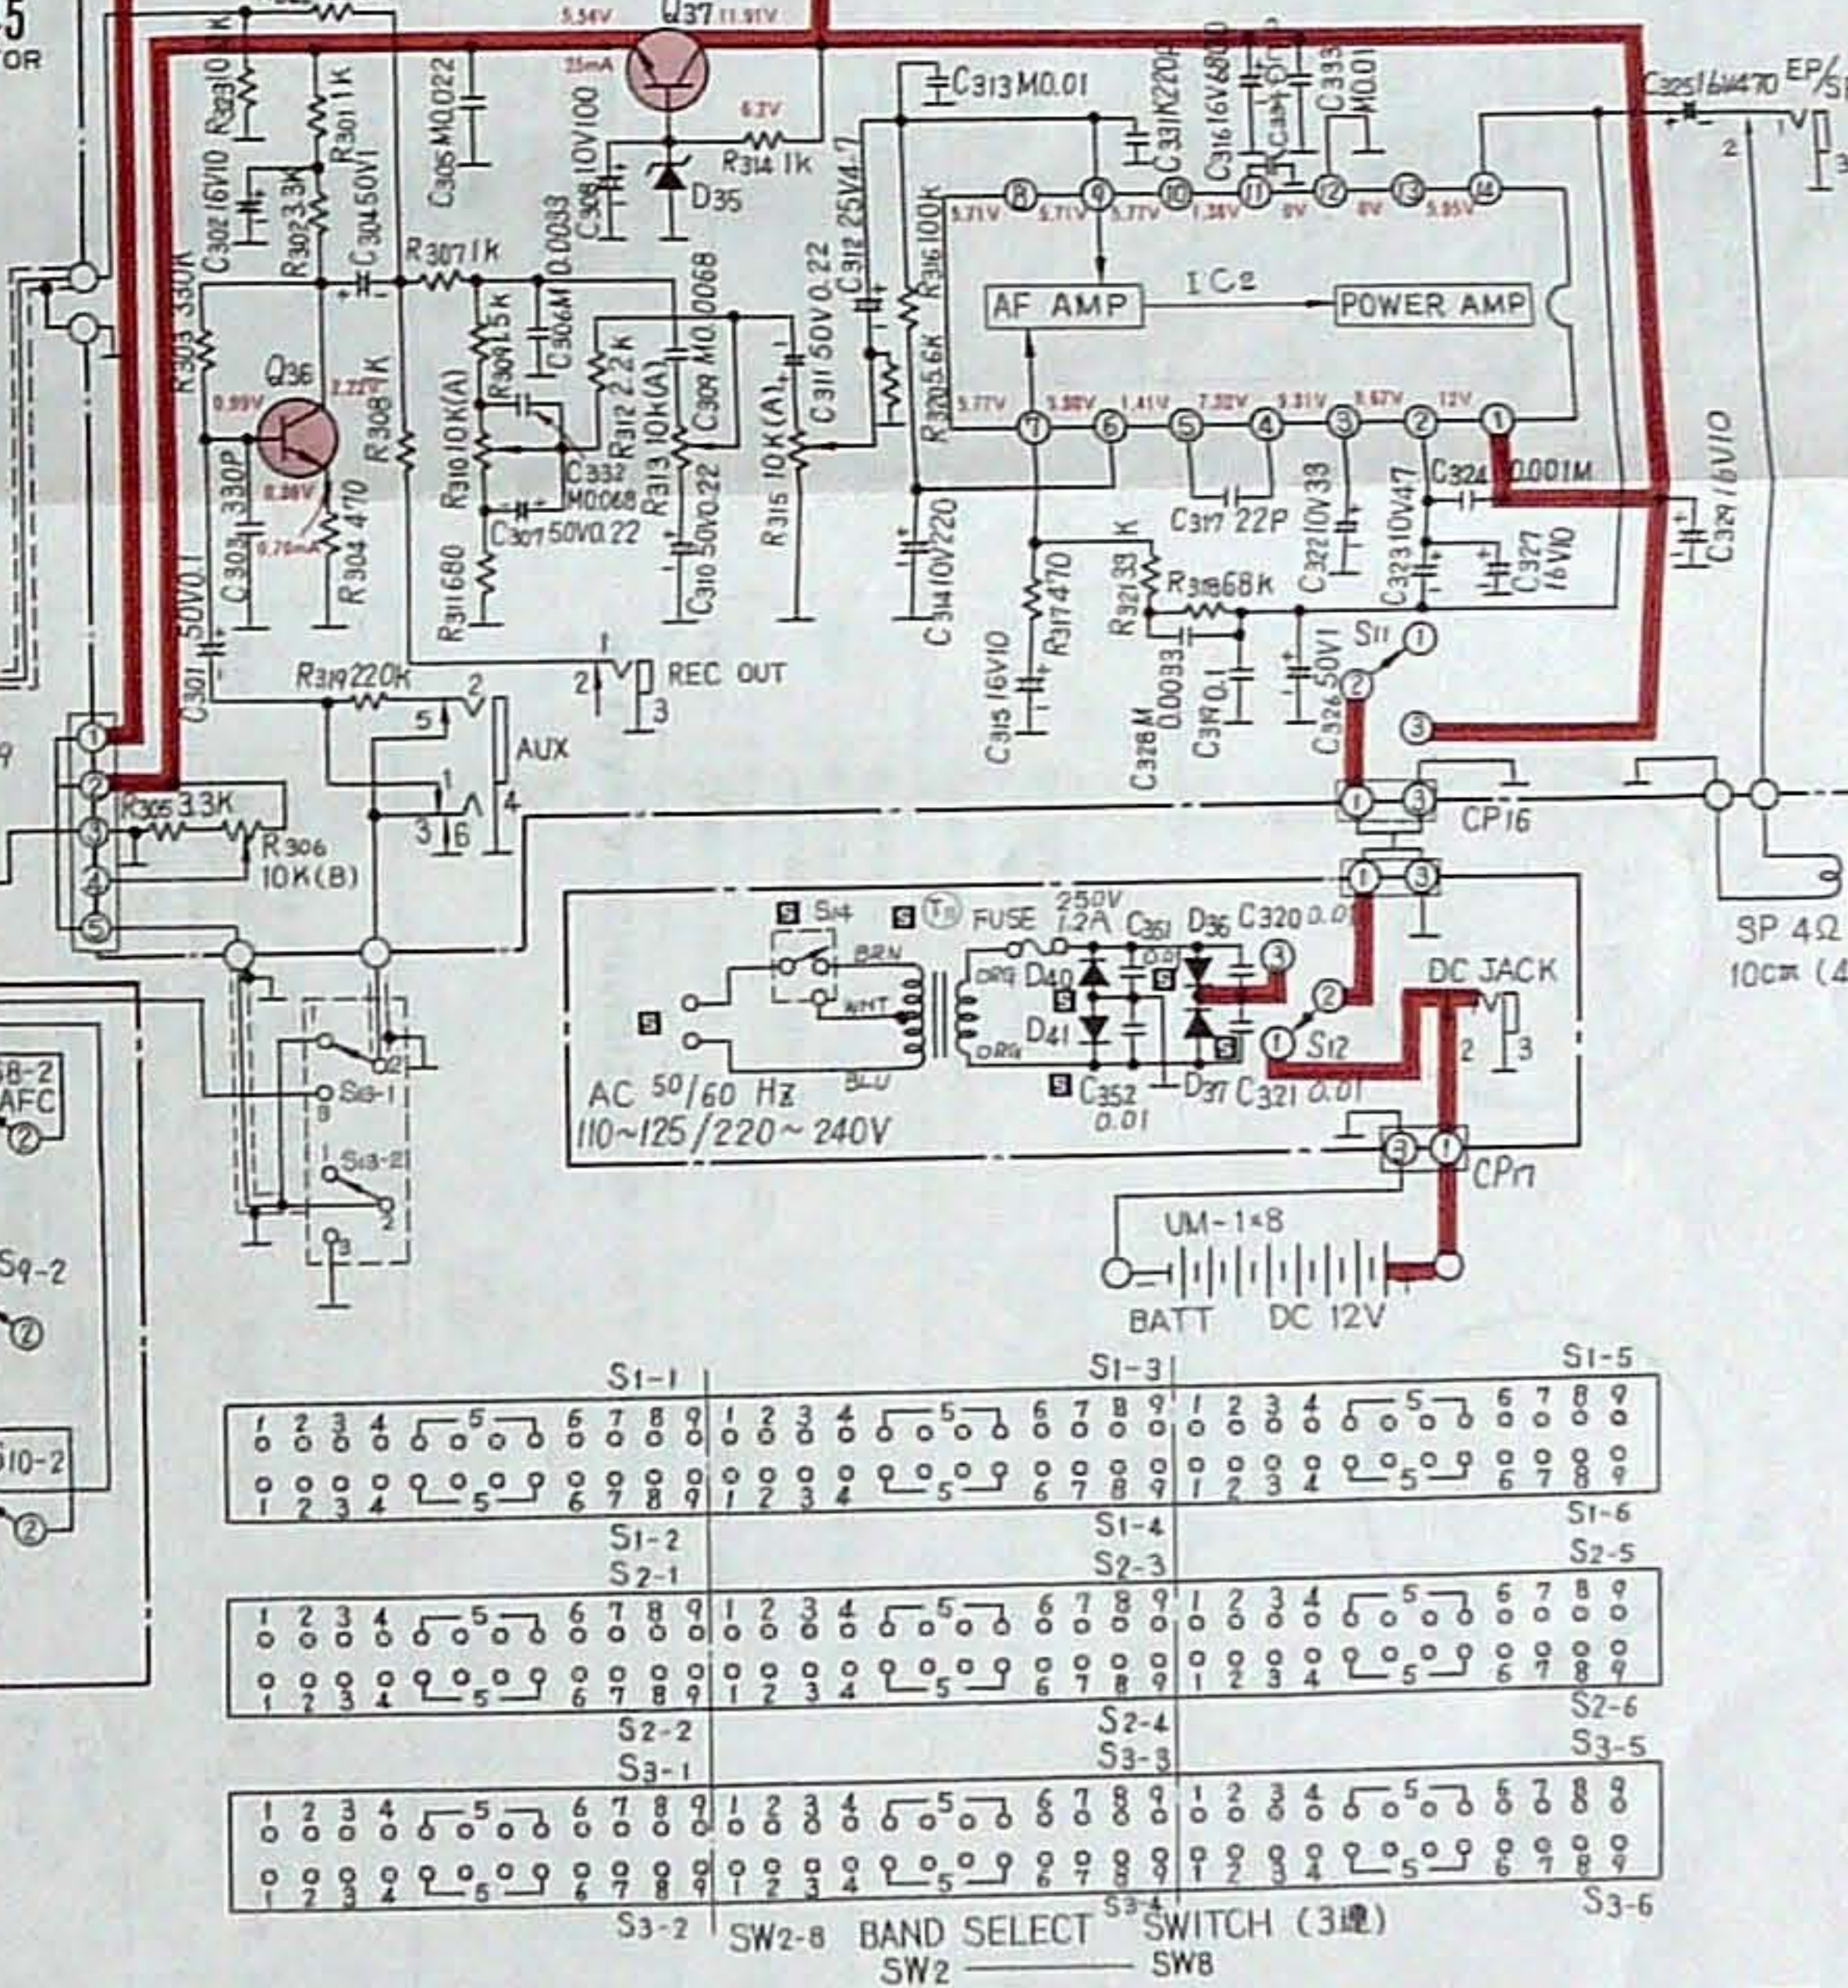


IC₁
RVILA4201
AF & POWER AMP

INDICATOR LW/FM/MW/SW2-8 INDICATOR

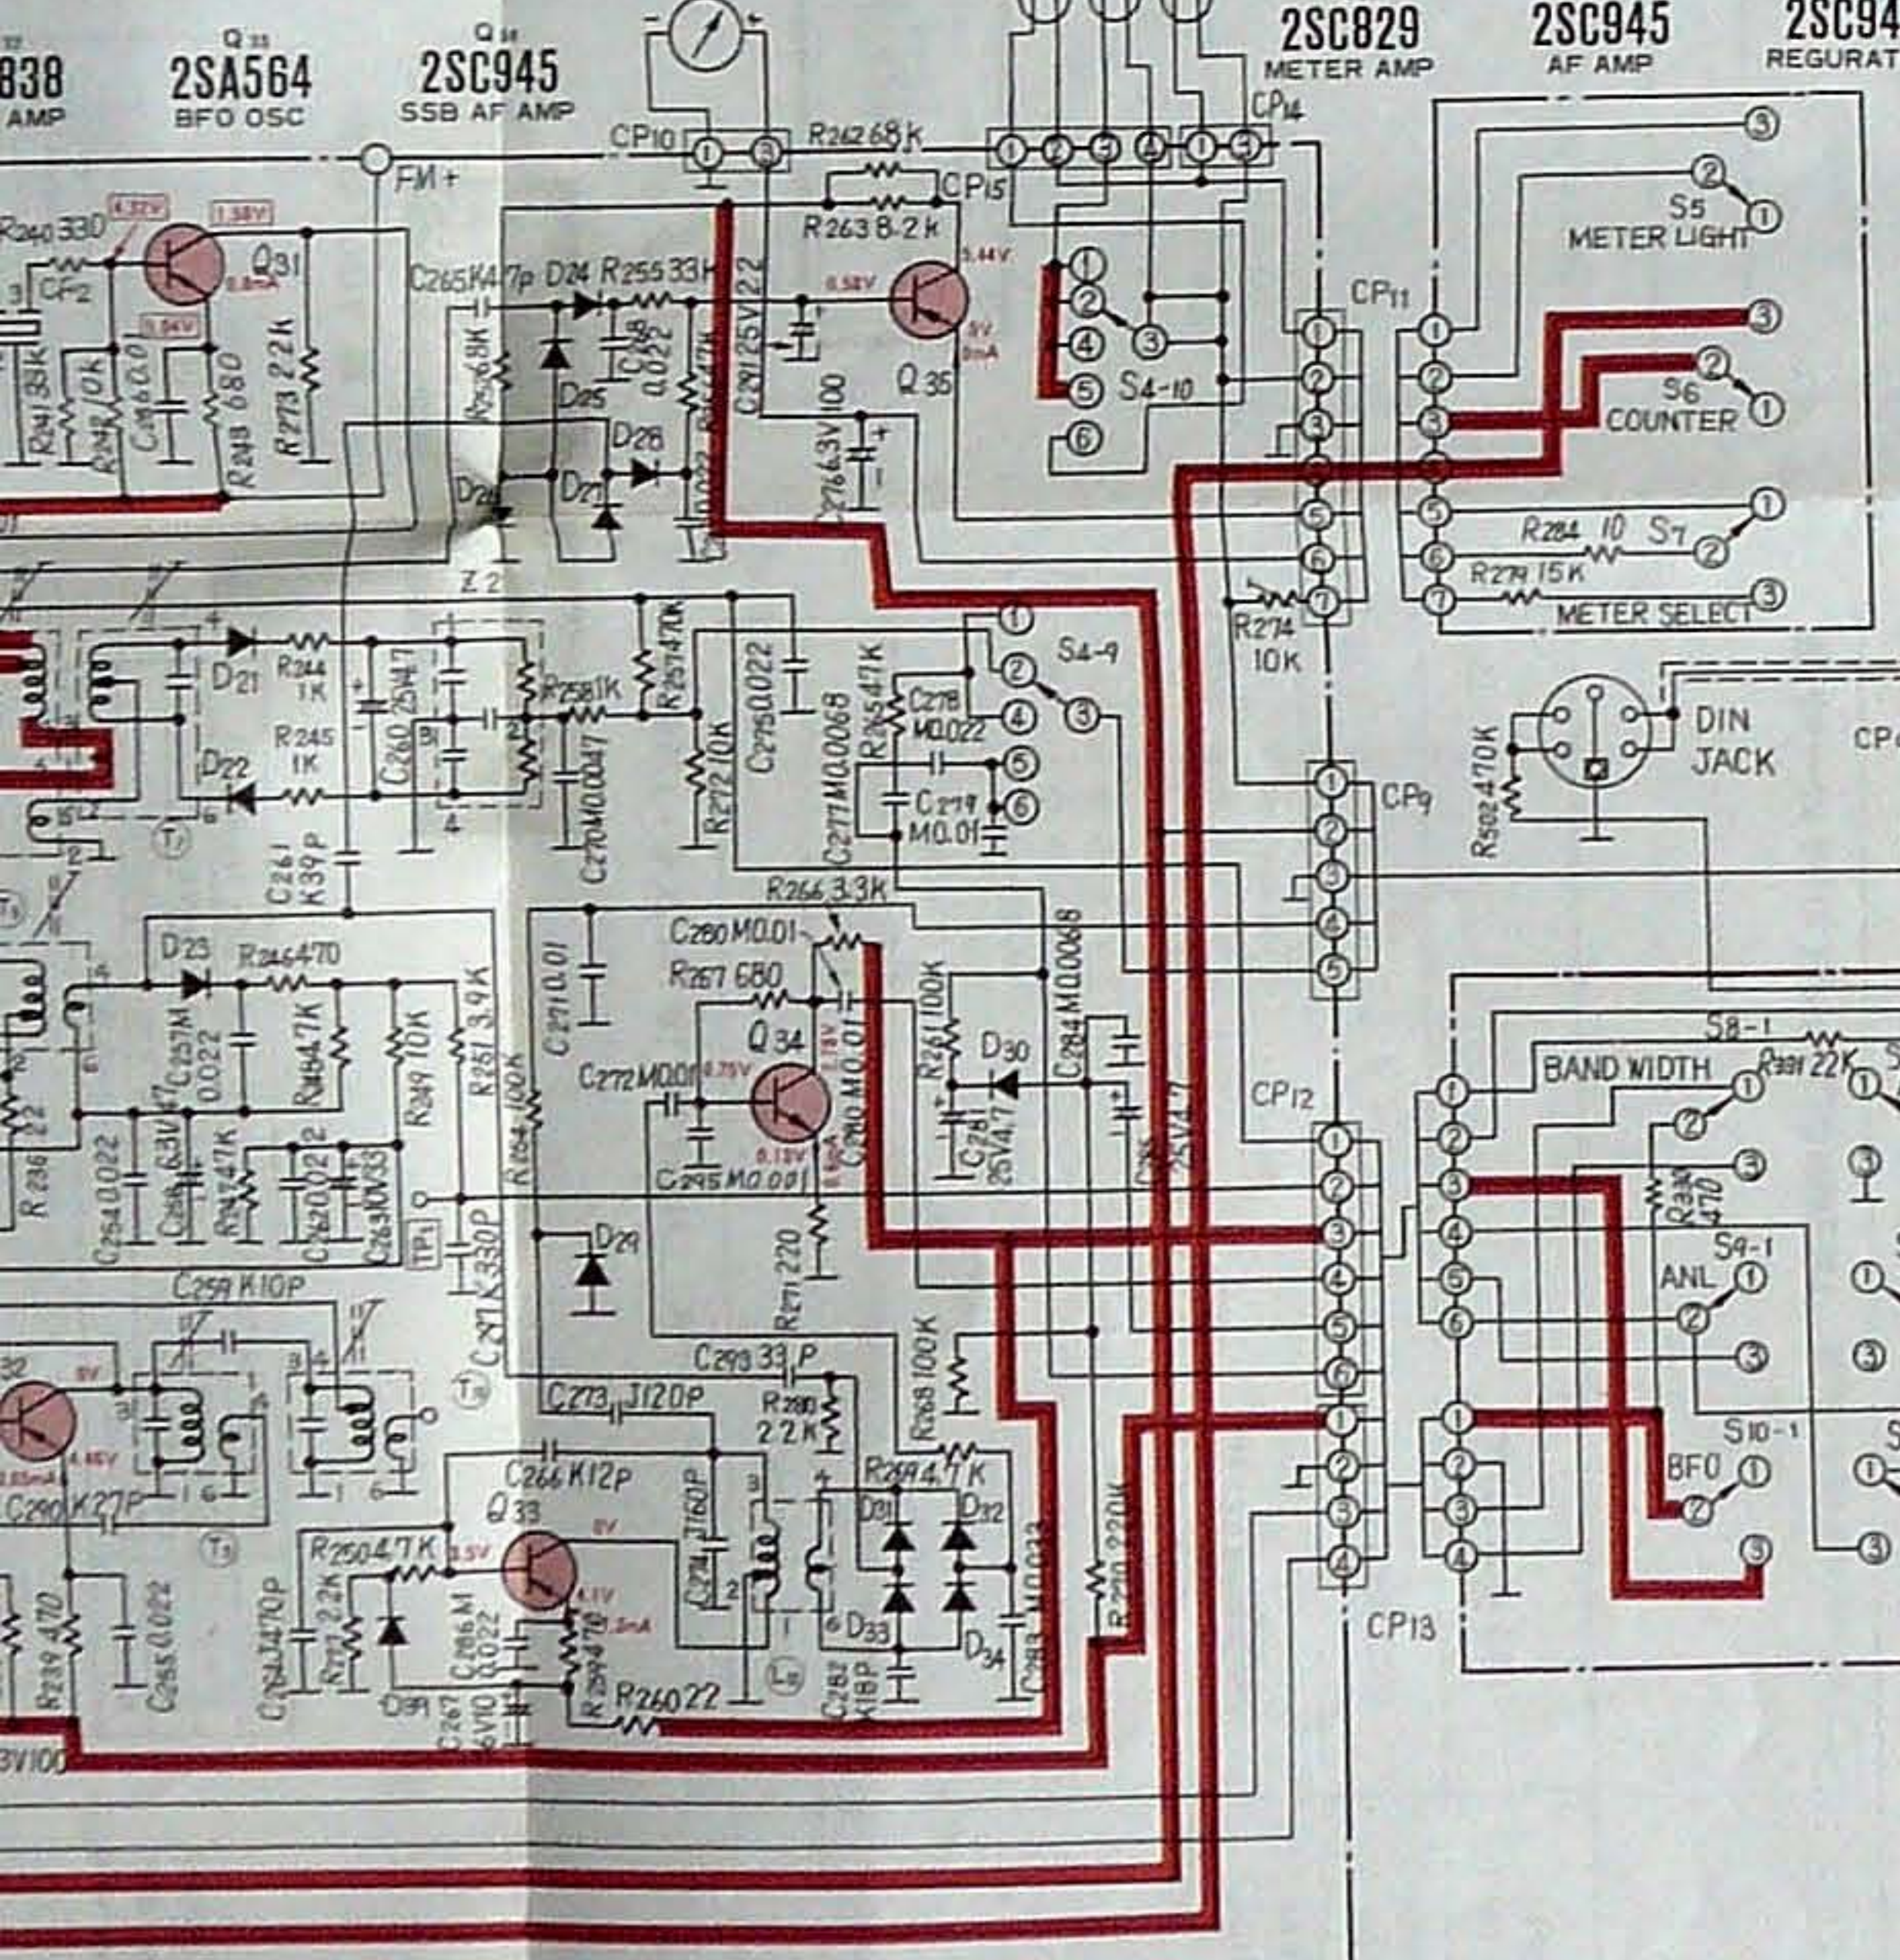

BOTTOM VIEW

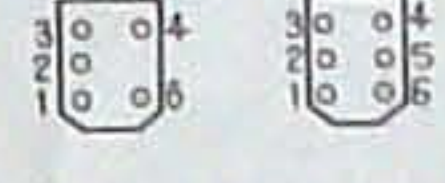

14. Indicates that only parts specified by the manufacturer be used for replacement in critical circuits.

D _{1,2}	OA90	SW AGC
D ₃₋₉	MA150	SWITCHING
D ₉	RVDEQA0106RF	ZENER
D ₇	RVDVD1261L	AOC
D _{8,10}	RVDVD1262L	AOC
D ₁₀	RVDS0113	COUNT ADJUST
D _{11,12}	OA90	AM AGC
	RVDS0113	FM AFC
D _{14,16}	MA150	SWITCHING
D ₁₆	OA90	FM AGC
D ₁₇₋₂₀	MA150	SWITCHING
D _{21,22}	2-OA90	FM DET
D ₂₃₋₂₈	OA90	AM METER RECT
D ₂₉	RVDVD1160L	AOC
D _{27,28}	OA90	FM METER RECT
D ₂₉	RVDS0113	BFO DET
D ₂₀	MA150	SWITCHING
D ₂₁₋₂₄	2-OA90	BFO DET
D ₂₅	RVDMZ206	Zener
D _{26,27}	RVD10E1LF	RECT
D ₂₈	RVDS0113	SWITCHING
D ₂₉	RVDVD1261M	AOC
D _{40,41}	RVD10E1LF	RECT