

Service manual


HI-FI LOUDSPEAKER BOX 5427




3097A

35 litres
332 x 610 x 246mm


TO OPEN L.S. BOX

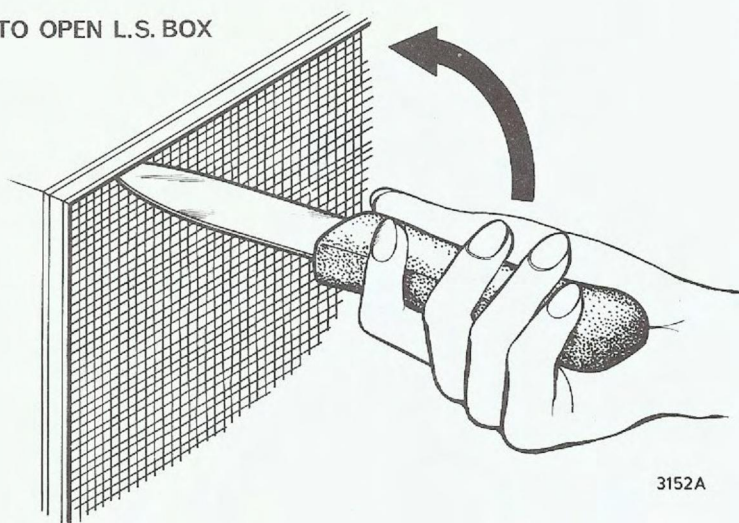

3152A

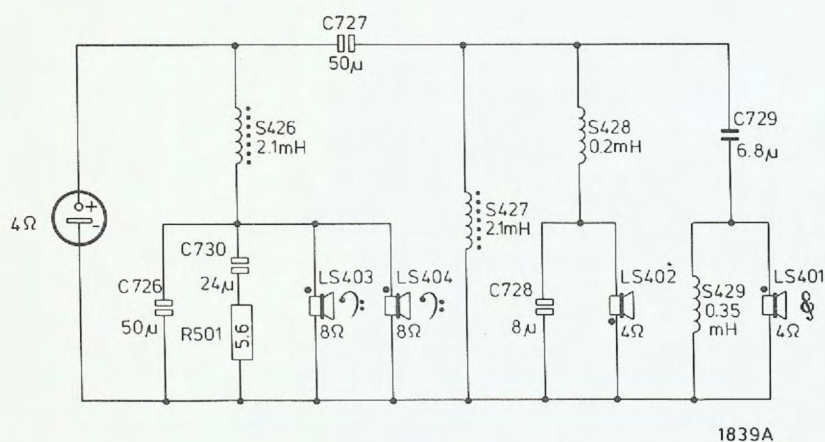

1839A

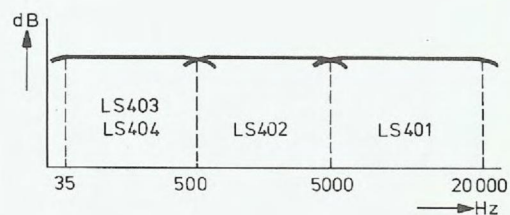

1971A




CS36916

Subject to modification

4822 726 11148

Printed in the Netherlands

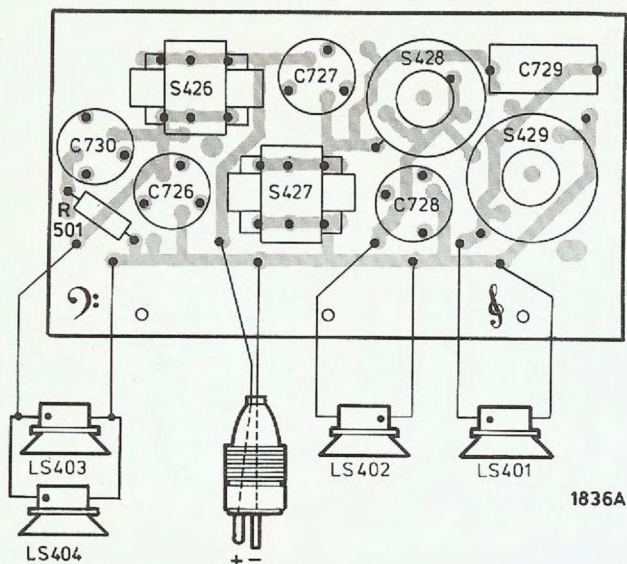


-S-		
S426	2.1 mH	4822 152 20479
S427	2.1 mH	4822 152 20479
S428	0.2 mH	4822 157 30197
S429	0.35 mH	4822 157 50595

-C-		
C726	50 μ F	4822 124 40091
C727	50 μ F	4822 124 40091
C728	8 μ F	4822 124 40102
C730	24 μ F	4822 124 40099

-C-		
C729	6.8 μ F	4822 121 40252

-R-		
R501	5.6 Ω	4822 112 20047

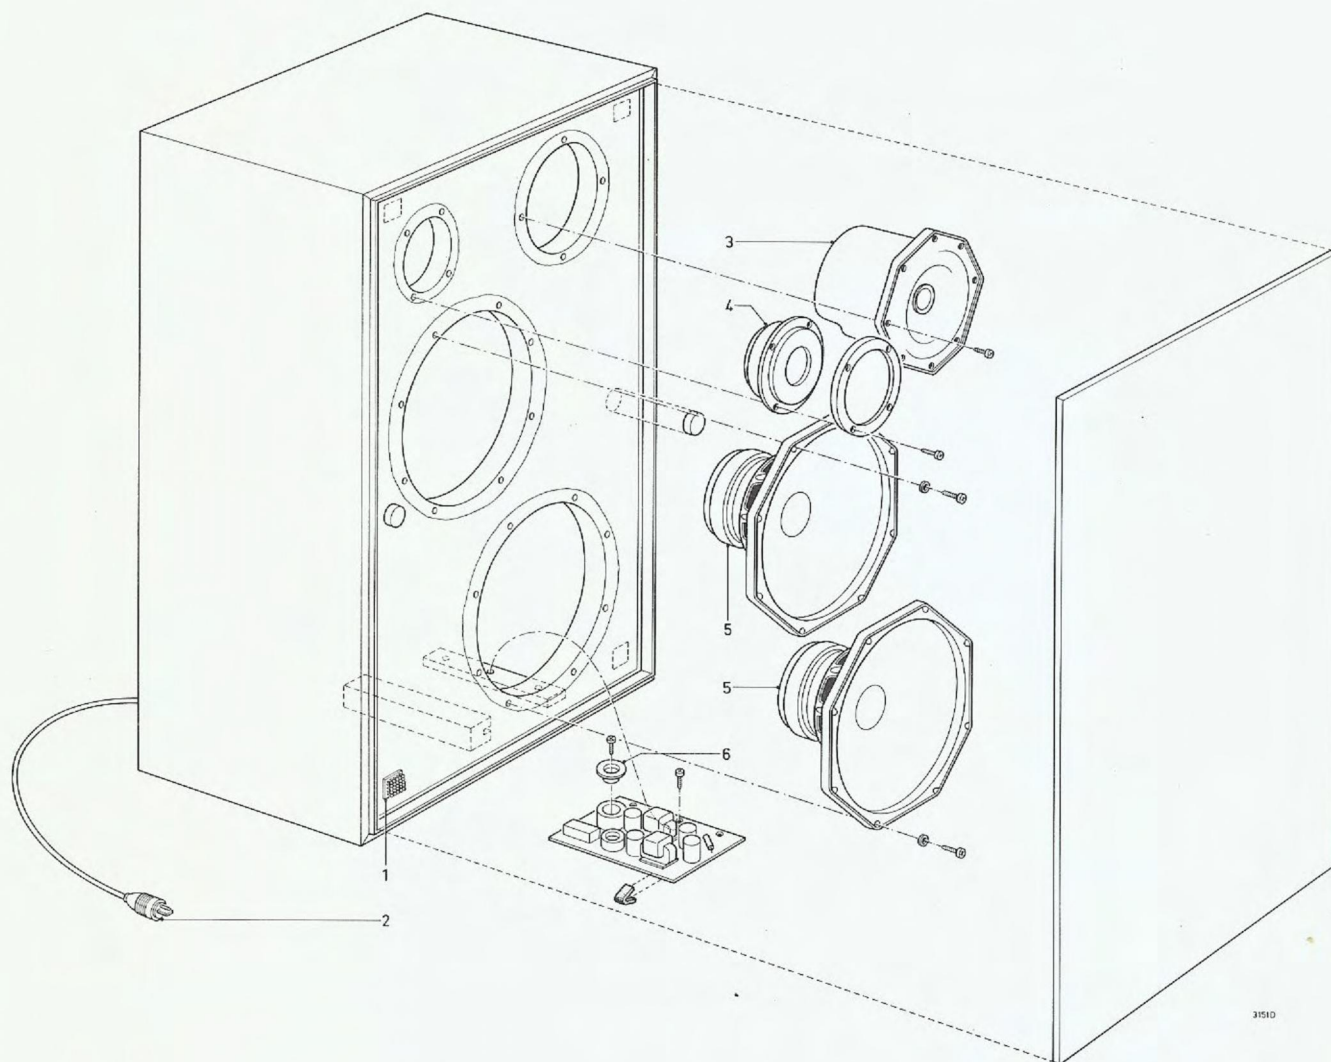

1			4822 426 60055
2			4822 264 30041
3	LS401	4 Ω	4822 240 50089
4	LS402	4 Ω	4822 240 70003
5	{ LS403	8 Ω	4822 240 60023
	{ LS404		
6			4822 462 70531