

Service manual

HI-FI LOUDSPEAKER BOX 5426/01




3097A


25 litres

293 x 538 x 227 mm


TO OPEN L.S. BOX

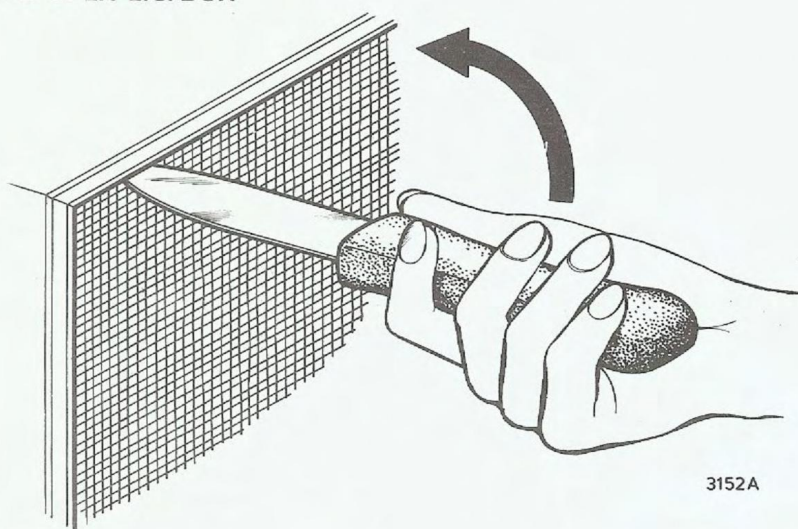

3152A

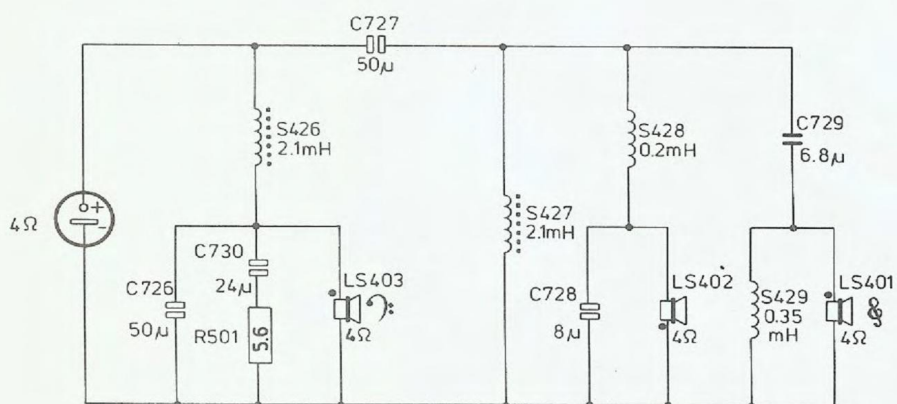

1838A

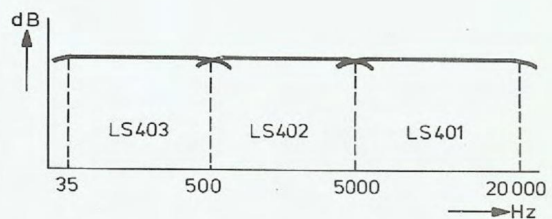

1967A




CS36951

Subject to modification

4822 726 11149

Printed in the Netherlands

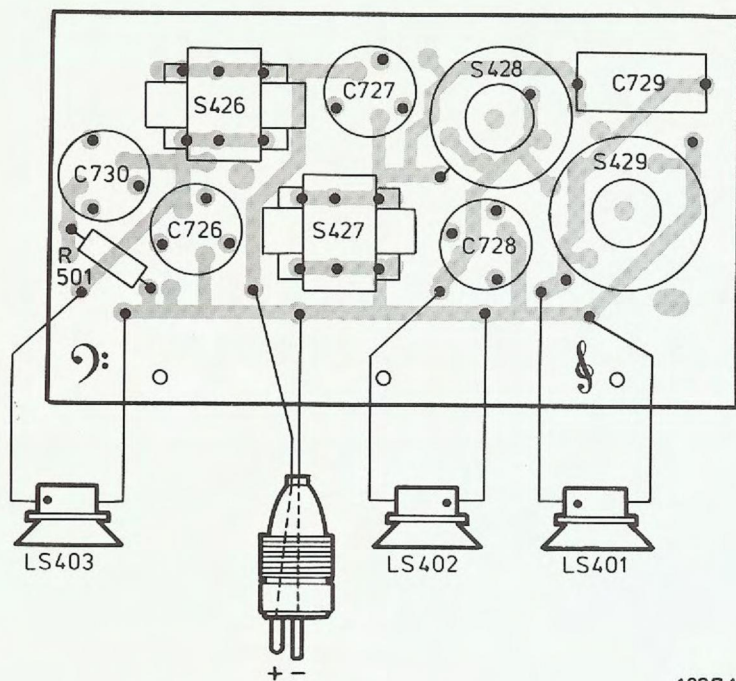

-S-

S426	2,1 mH	4822 152 20479
S427	2,1 mH	4822 152 20479
S428	0,2 mH	4822 157 30197
S429	0,35 mH	4822 157 50595

-C-

C726	50 μ F	4822 124 40091
C727	50 μ F	4822 124 40091
C728	8 μ F	4822 124 40102
C730	24 μ F	4822 124 40099


-C-

C729	6,8 μ F	4822 121 40252
------	-------------	----------------

-R-

R501	5,6 Ω	4822 112 20047
------	--------------	----------------

1837A

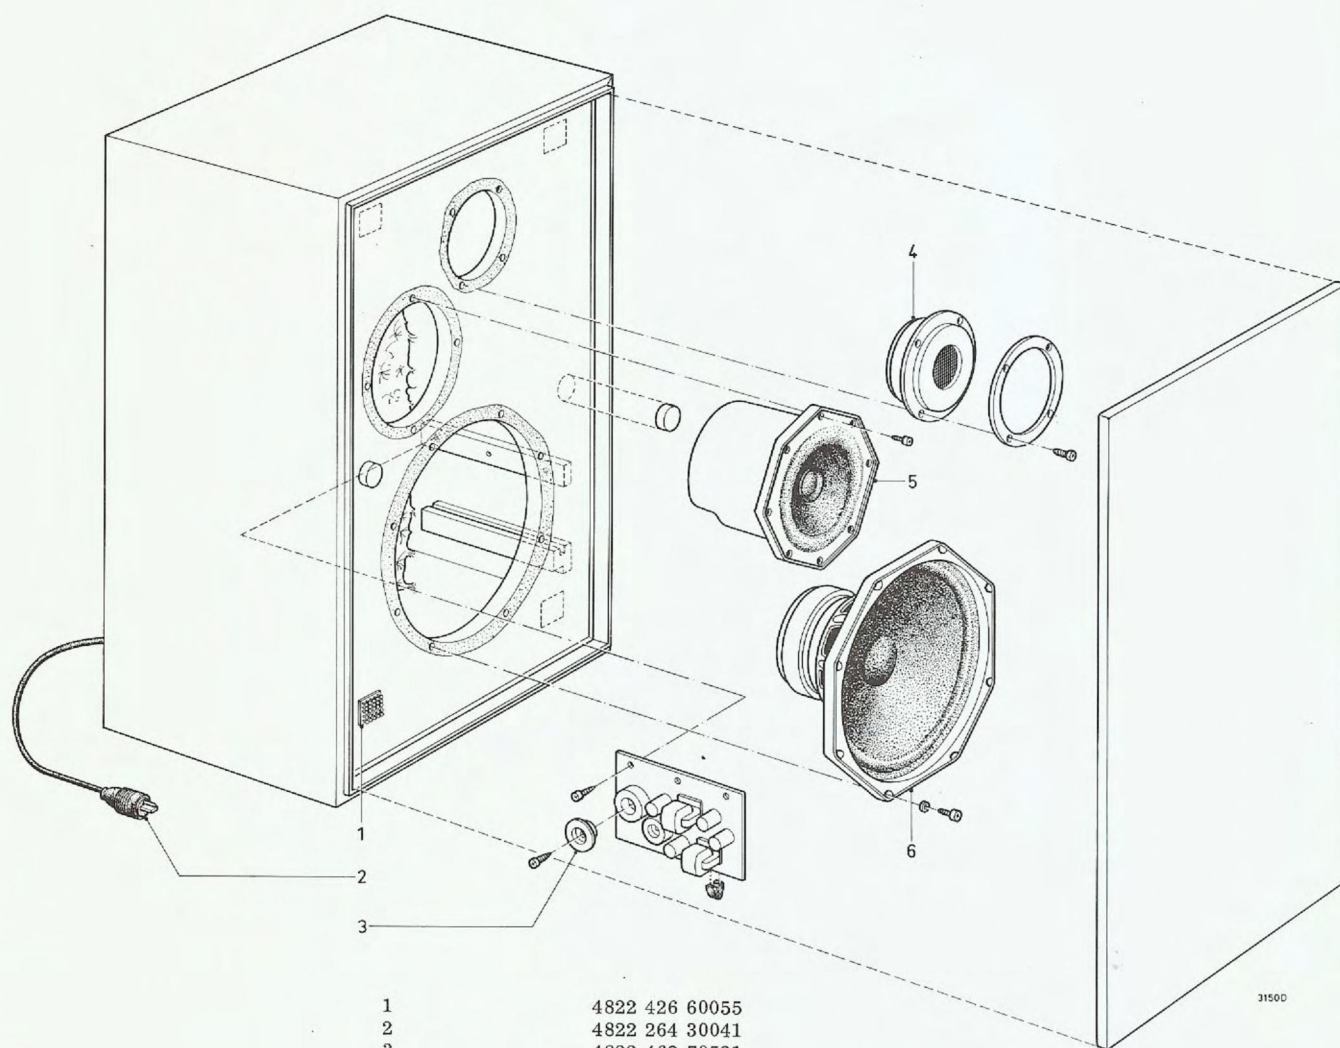

1		4822 426 60055
2		4822 264 30041
3		4822 462 70531
4	LS401 4 Ω	4822 240 70003
5	LS402 4 Ω	4822 240 50089
6	LS403 4 Ω	4822 240 60038

31500