

SPECIFICATIONS

Battery Equipment Current consumption

Current consumption (no signal)

Record player

Pick-up Head

6 x 1.5V cells (950, D50, 1050)

50 - 70 mA

AG 2040

See table below

PICK-UP HEADS

HEAD		STYLUS	
Type No.	Element	Description	Code No.
AG 3306	Crystal	Sapphire, 75 µ macrogroove) Sapphire, 18 µ stereo microgroove)	946/\$\$50
AG 3310	Crystal	Sapphire, 75 μ macrogroove) Diamond, 18 μ stereo microgroove)	946/DS51
AG 3224	Ceramic	Sapphire, 75 μ macrogroove) Sapphire, 18 μ stereo microgroove)	946/\$\$50
AG 3228	Ceramic,	Sapphire, 75 µ macrogroove) Diamond, 18 µ stereo microgroove)	946/DS51

REMOVAL FROM CASE

To remove the unit from the bottom portion of the case, remove the two screws from the underside of the case and the third screw located inside the battery compartment.

REMOVAL OF FRONT GRILLE

The front speaker grille is removed by unscrewing the four screws from the corner locations inside the speaker housing.

SPEAKER REMOVAL


After removal of the front grille, the speaker mounting screws are made accessible. Removal of these four screws allows the speaker to be lifted from its housing.

OUTPUT BIAS ADJUSTMENT


Alongside C6 on the component side of the printed board is a wire link which may be unsoldered at one end to allow of insertion of a meter for measurement of output transistor collector current. Adjust R13, without signal, for a combined output transistor collector current of 10 mA.

STYLUS PRESSURE

Stylus pressure should be between 4 and 6 gms. Adjustment of pressure is by way of adjusting strip 73.

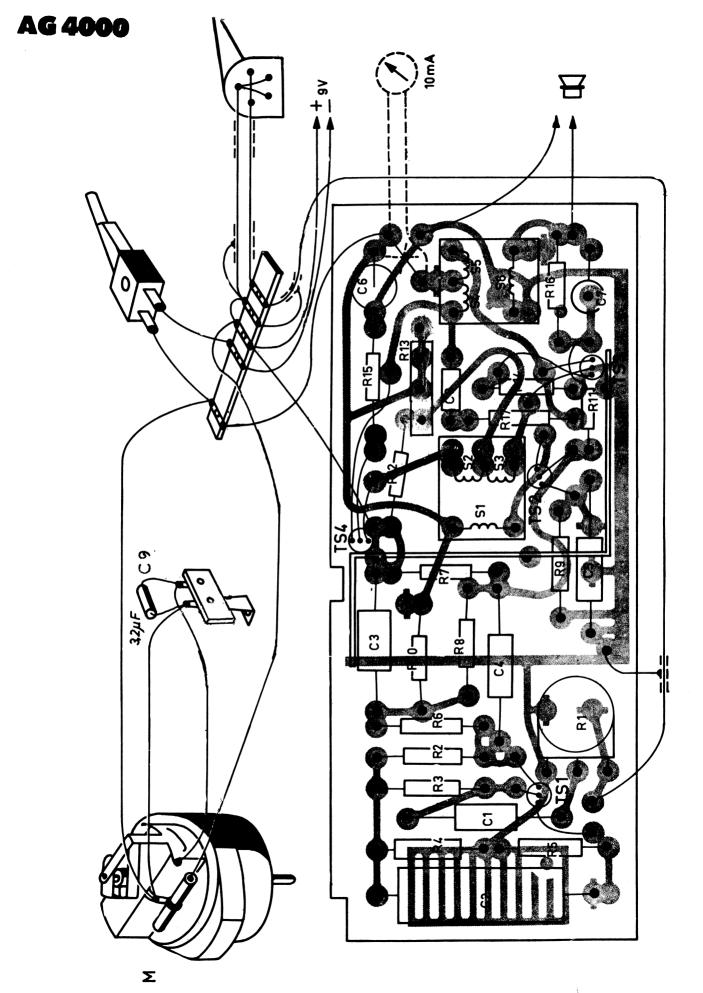

AG 4000

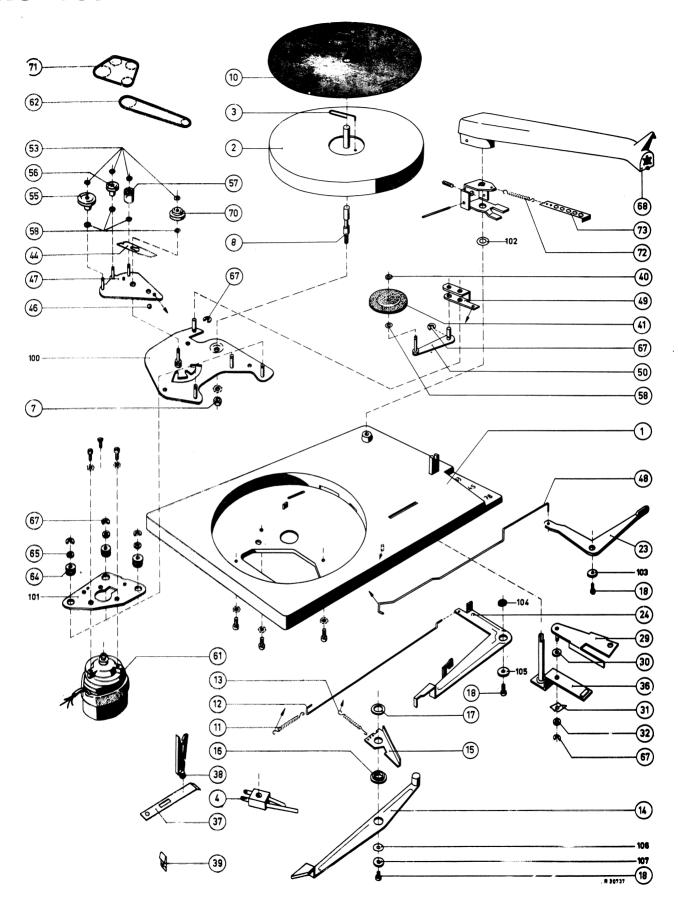

PARTS LIST - RECORD PLAYER AG 2040

Drawing No.	Description	Code No.
1	Mounting plate	TD.801.36
	Turntable	AE.606.92
3	Turntable sec. spring	TD.700.48
2 3 4 7 8	Switch	P5.512.18/159
7	Nut	933/M4
	Turntable spindle	TD.700.50
10	Turntable mat, brown	TD.650.17/KW
10 10	Turntable mat, red	TD.650.17/JF TD.650.17/MY
11	Turntable mat, blue Tension spring	TD.700.60
12	Bar	TD.500.29
13	Tension spring	TD.700.61
14	Record size finger	TD.050.70
15	Bracket	TD.050.71
16	Bush	TD.100.19
17	Washer	TD.000.17
18	Screw	B.054.EE/2×4
23	Lever	TD.300.48
24	Bracket	TD.050.72
29	Bracket assembly	AE.606.95
30	Washer	TD.600.04
31	Leaf spring	TD.700.58
32	Washer	988/3
36	Bracket assembly	TD.801.31
37	Leaf spring	TD.700.59
38	Pick-up arm support	TD.300.55
39	Leaf spring	TD.050.76
40	Ring	TD.300.49
41	Intermediate wheel	TD.801.27
44	Leaf spring	TD.700.51
46	Steel ball 1/8"	89.205.02
47	Bracket assembly	AE.606.96
49 50	U bracket Intermediate wheel bracket	TD.050.78 AE.606.94
53	Washer	TD.300.49
55	33.1/3 r.p.m. wheel	TD.801.38
56	45 r.p.m. wheel	TD.801.39
57	78 r.p.m. wheel	TD.801.37
58	Washer	5N.290.29
61	Motor	JW .525.09
62	Drive belt (long)	TD.650.18 TD.650.16
64	Grommet	
65 67	Washer Washer	988/3 985/3
68		TD.801.32
70	Pick-up arm assembly Idler wheel	TD.801.42
70 71	Drive belt (short)	AE.016.17
72	Tension spring	AE.014.74 AE.014.75
73	Adjusting strip	
	45 r.p.m. record adaptor	TD.300.54