

R-909

9-BAND WORLD RADIO RECEIVER

OPERATING INSTRUCTION

Please read this manual before operation



TECSUN RADIOS AUSTRALIA


OPERATING INSTRUCTION

PRECAUTION

- Must escape from burning and impact.
- Do not use any abrasive powder to clean the cabinet. Wipe it with a soft cloth moistened with a mild soap and water solution.
- Do not leave the unit in a location near heat sources, or in a place subject to direct sunlight, excessive dust or mechanical shock.
- Do not use old and new batteries together.
- Always remove all the batteries from the radio when it is not going to be used for a long time. This will prevent the batteries from leaking inside the battery compartment.

MADE IN CHINA

CONTROL LAYOUT

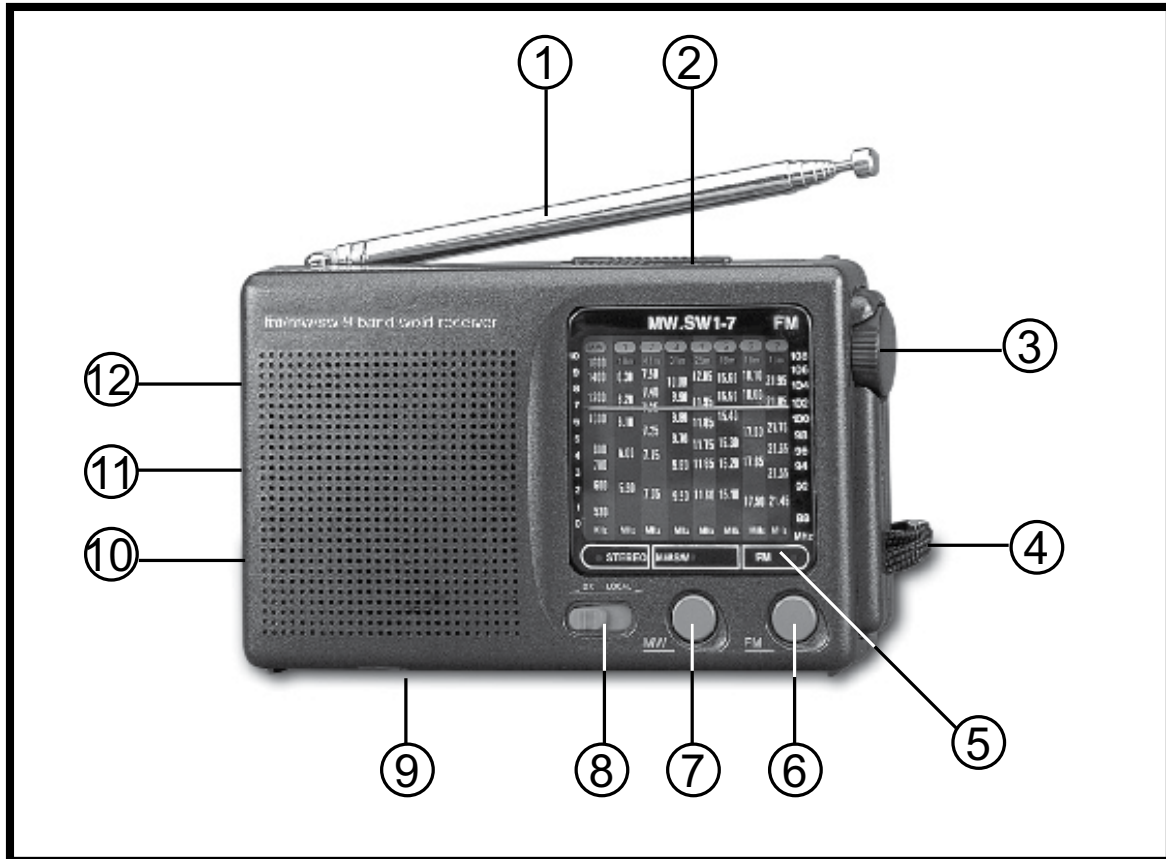

1. Telescopic Antenna(For FM and SW)
2. Band Selector(For MW and SW bands 1 to 7)
3. Tuning Knob
4. Carrying Strap
5. Tuning, FM, MW/SW Indicators
6. FM Button
7. MW/SW Button
8. DX/Local Switch
9. Battery Compartment(on the back)
10. Earphones Socket
11. DC Input Socket
12. Power On/Off and Volume Control

POWER REQUIREMENTS

Battery Power

— This radio is designed to operate on 2 LR6 Energizer type batteries(AA or equivalent).Remove the Battery Compartment cover and fit the batteries in the battery compartment following the diagram on the back of the radio.

— If the sound becomes low or distorted, replace all batteries with new.

External Power

A DC Input Socket has been provided for external power connection. It requires a 3V DC Power Source. Ensure that the polarity is correct.

USING THE RADIO

— Switch on the radio by turning the volume control until it clicks. Adjust the volume to the desired listening level.

— To switch off the radio, turn the volume control knob down until it clicks.

FM Reception

— For FM reception,fully extend the telescopic antenna,and press the FM button. The FM indicator will light. Select the desired radio station by turning the Tuning Knob.When a strong signal is found,the tuning indicator will light.

AM Reception

— For MW/SW reception press the MW/SW button. The MW/SW indicator will light. Select the desired band with the Band selector. Select the desired radio station by turning the Tuning Knob.When a strong signal is found,the tuning indicator will light.

— For the best FM or SW reception extend the Telescopic Antenna. The MW band uses a built in directional aerial. Rotate the radio for the best reception.

DX/Local Selector

—To select a distant radio signal,set the DX/LOCAL switch to the DX position.For local radio station,set it to the LOCAL position.

EARPHONES

— For private listening, this radio is equipped with a 3.5mm stereo earphones socket.

— Please remember that excessively loud sounds played through earphones can damage your hearing.