

PARTS LIST FOR MODEL CTV-8000

-CABINET-

<u>KEY NO.</u>	<u>PART NO.</u>	<u>DESCRIPTION</u>	<u>Q'TY</u>
101	7000-2551	Cabinet, Bottom	1
	7800-6396	Cushion	1
	7700-0503	Positive Plate	1
	7700-0612	Plate Battery	2
	7700-1148	Spring Negative	3
	7700-0640	Spring Positive	2
	7800-6479	Sheet	4
102	7300-1670	Bottom Cabinet Leg	1
103	7300-2608	Bottom Cabinet Leg Holder, Right	1
104	7300-2609	" " " , Left	1
105	7400-0488	Holding Metal Connector	1
106	7100-2914	Panel Back	1
	7240000029	Plate Antenna Jack	1
	7200-7587	Plate Video Jack	1
	7200-7928	Plate Back Control	1
	7221810001	Plate Rating	1
	7800-6478	Sheet	2
107	-	Stopper Cord	1
108	-	Speed Nut	3
109	7000-2656	Cabinet Top	1
	7230000086	Plate Control	1
	7800-6478	Sheet	2
110	7600-2561	Frame Dial	1
111	7600-1055	Tuning Shaft	1
112	7800-6283	Fulley Vis (2)	1
113	7980-0021	Fulley	1
114	7980-0026	"	1
115	8151-1310	Rivet	1
116	1206-0021	Cord Clamp	3
117	7800-6374	Heat Sink	1
118	7800-6366	Angle, P.C. Board	1
119	7700-1156	Plate Shield (A)	1
120	7700-1157	" (B)	1
121	7000-2552	Lid Battery	1
	7800-6395	Cushion	2
122	7000-2553	Handle	1
123	7100-2816	Cover CRT	1
124	7300-2620	Knob, Tuning	1
125	7300-2616	Knob, Volume	1
126	7300-2617	Knob, Band Selector	1
127	7300-2618	Knob, Power Switch	1
128	7600-2562	Pointer	1
129	7300-1729	Knob, Push Switch	1
130	7300-2054	Button Remote Set	1