

# MDS-S41

## SERVICE MANUAL

*US Model  
Canadian Model  
AEP Model  
UK Model  
E Model  
Australian Model*

- The mechanical and electrical specifications of MDS-41 is almost same as MDS-S40 silver type.  
So this manual contains only the points which differ from MDS-S40 silver type.  
For the informations not contained in this manual, please refer to the MDS-S40 service manual (9-928-838-□□) previously issued.

### • PARTS LIST (The difference between MDS-S40 and MDS-S41)

Page	MDS-S40 SILVER TYPE			MDS-S41			
	Ref. No.	Part No.	Description	Ref. No.	Part No.	Description	
66	1	X-4951-002-1	PANEL ASSY, FRONT	1	X-4952-584-1	PANEL ASSY, FRONT	
	5	4-216-754-01	KNOB (INPUT)	5	4-216-754-21	KNOB (INPUT)	
	6	4-216-755-01	KNOB (AMS)	6	4-216-755-21	KNOB (AMS)	
	7	X-4951-417-1	ESCIUTCHEON ASSY	7	X-4952-585-1	ESCIUTCHEON ASSY	
	8	4-216-752-01	BUTTON (MODE)	8	4-216-752-21	BUTTON (MODE)	
	9	4-216-751-01	BUTTON (FF)	9	4-216-751-21	BUTTON (FF)	
	10	4-216-768-01	BUTTON (EDIT)	10	4-216-768-21	BUTTON (EDIT)	
	15	4-990-703-91	COVER	15	4-226-601-11	COVER	
	*	59	4-216-765-12	PANEL, BACK (US)	59	4-228-697-01	PANEL, BACK (US)
	*	59	4-216-765-22	PANEL, BACK (CND)	59	4-228-697-11	PANEL, BACK (CND)
67	*	59	4-216-765-32	PANEL, BACK (AE, UK, AED, AR)	59	4-228-697-21	PANEL, BACK (AEP, UK, AED, AR)
	*	59	4-216-765-42	PANEL, BACK (SP)	59	4-228-697-31	PANEL, BACK (SP)
	*	59	4-216-765-52	PANEL, BACK (HK)	59	4-228-697-41	PANEL, BACK (HK)
	*	59	4-216-765-62	PANEL, BACK (AUS)	59	4-228-697-51	PANEL, BACK (AUS)
	*	59	4-216-765-63	PANEL, BACK (AEP)	*	59	PANEL, BACK (AEP)
	*	59	4-216-765-64	PANEL, BACK (AR)	*	59	PANEL, BACK (AR)
75	ACCESSORIES & PACKING MATERIALS *****			ACCESSORIES & PACKINT MATERIALS *****			
	3-865-729-12	MANUAL, INSTRUCTION (ENGLISH) (EXCEPT AED)		4-228-655-11	MANUAL, INSTRUCTION (ENGLISH) (EXCEPT AED)		
	3-865-729-22	MANUAL, INSTRUCTION (FRENCH, SPANISH, PORTUGUESE) (CND, AEP, AR)		4-228-655-21	MANUAL, INSTRUCTION (FRENCH, SPANISH, PORTUGUESE)(CND, AEP, SP, AR)		
	3-865-729-31	MANUAL, INSTRUCTION (GERMAN, DUTCH, ITALIAN)(AEP)		4-228-655-31	MANUAL, INSTRUCTION (GERMAN, DUTCH, ITALIAN)(AEP)		
	3-865-729-41	MANUAL, INSTRUCTION (SWEDISH, FINNISH)(AED)		4-228-655-41	MANUAL, INSTRUCTION (SWEDISH, DANISH, DANISH, FINNISH)(AED)		
	3-865-729-51	MANUAL, INSTRUCTION (ENGLISH, POLISH, RUSSIAN)(AEP)		4-228-655-51	MANUAL, INSTRUCTION (ENGLISH, POLISH, RUSSIAN)(AEP)		
	3-865-729-61	MANUAL, INSTRUCTION (CHINESE) (SP, HK)		4-228-655-61	MANUAL, INSTRUCTION (CHINESE)(SP, HK)		
	*	ITEMS MARKED WITH * ARE NOT STOCKED SINCE THEY ARE SOMETIMES REQUIRED FOR ROUTINE SERVICE. SOME DELAY SHOULD BE ANTICIPATED WHEN ORDERING THESE ITEMS.		*	ITEMS MARKED WITH * ARE NOT STOCKED SINCE THEY ARE SOMETIMES REQUIRED FOR ROUTINE SERVICE. SOME DELAY SHOULD BE ANTICIPATED WHEN ORDERING THESE ITEMS.		
	*	ITEMS MARKED WITH * ARE NOT STOCKED SINCE THEY ARE SOMETIMES REQUIRED FOR ROUTINE SERVICE. SOME DELAY SHOULD BE ANTICIPATED WHEN ORDERING THESE ITEMS.		*	ITEMS MARKED WITH * ARE NOT STOCKED SINCE THEY ARE SOMETIMES REQUIRED FOR ROUTINE SERVICE. SOME DELAY SHOULD BE ANTICIPATED WHEN ORDERING THESE ITEMS.		
	*	ITEMS MARKED WITH * ARE NOT STOCKED SINCE THEY ARE SOMETIMES REQUIRED FOR ROUTINE SERVICE. SOME DELAY SHOULD BE ANTICIPATED WHEN ORDERING THESE ITEMS.		*	ITEMS MARKED WITH * ARE NOT STOCKED SINCE THEY ARE SOMETIMES REQUIRED FOR ROUTINE SERVICE. SOME DELAY SHOULD BE ANTICIPATED WHEN ORDERING THESE ITEMS.		

#### Abbreviation

AED : North European  
AR : Argentine  
AUS : Australian  
CND : Canadian  
HK : Hong Kong  
SP : Singapore

- Items marked “\*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

**MINIDISC DECK**

**SONY®**

# MDS-S40

## SERVICE MANUAL

**Self Diagnosis**  
Supported model



Photo: Silver model

US Model  
Canadian Model  
AEP Model  
UK Model  
E Model  
Australian Model

U.S. and foreign patents licensed from Dolby Laboratories Licensing Corporation.

Model Name Using Similar Mechanism	MDS-JE520
MD Mechanism Type	MDM-5A
Optical Pick-up Type	KMS-260A/J1N

### SPECIFICATIONS

<b>System</b>	MiniDisc digital audio system	<b>Inputs</b>	
<b>Disc</b>	MiniDisc	LINE (ANALOG) IN	Jack type: phono Impedance: 47 kilohms Rated input: 500 mVrms Minimum input: 125 mVrms
<b>Laser</b>	Semiconductor laser ( $\lambda = 780 \text{ nm}$ ) Emission duration: continuous	DIGITAL IN	Connector type: square optical Impedance: 660 nm (optical wave length)
<b>Laser output</b>	Less than 44.6 $\mu\text{W}^*$		
	* This output is the value measured at a distance of 200 mm from the objective lens surface on the Optical Pick-up Block with 7 mm aperture.		
<b>Laser diode</b>	Material: GaAlAs	<b>Outputs</b>	
<b>Revolutions (CLV)</b>	400 rpm to 900 rpm	LINE (ANALOG) OUT	Jack type: phono Rated output: 2 Vrms (at 50 kilohms) Load impedance: Over 10 kilohms
<b>Error correction</b>	Advanced Cross Interleave Reed Solomon Code (ACIRC)		
<b>Sampling frequency</b>	44.1 kHz		
<b>Coding</b>	Adaptive Transform Acoustic Coding (ATRAC)		
<b>Modulation system</b>	EFM (Eight-to-Fourteen Modulation)		
<b>Number of channels</b>	2 stereo channels		
<b>Frequency response</b>	5 to 20,000 Hz $\pm 0.3$ dB		
<b>Signal-to-noise ratio</b>	Over 94 dB during playback		
<b>Wow and flutter</b>	Below measurable limit		

— Continued on next page —

MINIDISC DECK



MICROFILM

SONY®

## General

### Power requirements

Where purchased	Power requirements
U.S.A. and Canada	120 V AC, 60 Hz
U.K., Continental Europe, and Argentina	220 - 230 V AC, 50/60 Hz
Australia	240 V AC, 50/60 Hz
Certain countries in Asia	220 - 240 V AC, 50/60 Hz
Other countries	110 - 120 or 220 - 240 V AC selectable, 50/60 Hz

Power consumption 15 W

Dimensions (approx.) 280 × 90 × 285 mm (11 1/8 × 3 5/8 × 11 1/4 inches) (w/h/d) incl.  
projecting parts and controls

Mass (approx.) 3.0 kg (6 lb 8 oz)

### Supplied accessories

- Audio connecting cords (2)
- Optical cable (1)
- Remote commander (remote) RM-D29M (1)
- R6 (size-AA) batteries (2)

Design and specifications are subject to change without notice.

## SELF-DIAGNOSIS FUNCTION

The self-diagnosis function consists of error codes for customers which are displayed automatically when errors occur, and error codes which show the error history in the test mode during servicing. For details on how to view error codes for the customer, refer to the following box in the instruction manual. For details on how to check error codes during servicing, refer to the following "Procedure for using the Self-Diagnosis Function (Error History Display Mode)".

## Self-Diagnosis Function

The deck's self-diagnosis function automatically checks the condition of the MD deck when an error occurs, then issues a three-digit code and an error message on the display. If the code and message alternate, find them in the following table and perform the indicated countermeasure. Should the problem persist, consult your nearest Sony dealer.

Three-digit code/Message	Cause/Remedy
C11/Protected	The inserted MD is record-protected. → Take out the MD and close the record-protect slot (page 15).
C13/REC Error	The recording was not made properly. → Set the deck in a stable surface, and repeat the recording procedure.
	The inserted MD is dirty (with smudges, fingerprints, etc.), scratched, or substandard in quality. → Replace the disc and repeat the recording procedure.
C13/Read Error	The deck could not read the TOC on the MD properly. → Take out the MD and insert it again.
C14/TOC Error	The deck could not read the TOC on the MD properly. → Insert another disc. → If possible, erase all the tracks on the MD (page 30).
C71/Din Unlock	The sporadic appearance of this message is caused by the digital signal being recorded. This will not affect the recording.  While recording from a digital component connected through the DIGITAL IN connector, the digital connecting cable was unplugged or the digital component turned off. → Connect the cable or turn the digital component back on.

## PROCEDURE FOR USING THE SELF-DIAGNOSIS FUNCTION (ERROR HISTORY DISPLAY MODE)

Note: Perform the self-diagnosis function in the "error history display mode" in the test mode. The following describes the least required procedure. Be careful not to enter other modes by mistake. If you set other modes accidentally, press the MENU/NO button to exit the mode.

1. While pressing the **[◀▶◀▶]** knob and **[■]** button, connect the power plug to the outlet, and release the **[◀▶◀▶]** knob and **[■]** button.
2. Turn the **[◀▶◀▶]** knob and when "[Service]" is displayed, press the **[YES]** button.
3. Turn the **[◀▶◀▶]** knob to display "ERR DP MODE".
4. Press the **[YES]** button to sets the error history mode and displays "total rec".
5. Select the contents to be displayed or executed using the **[◀▶◀▶]** knob.
6. Press the **[◀▶◀▶]** knob to display or execute the contents selected.
7. Press the **[◀▶◀▶]** knob another time returns to step 4.
8. Press the **[MENU/NO]** button to display "ERROR DP MODE" and exits the error history mode.
9. To exit the test mode, press the **[REPEAT]** button. The unit sets into the STANDBY state, the disc is ejected, and the test mode ends.

## Items of Error History Mode Items and Contents

### Selecting the Test Mode

Display	Details of History
total rec	Displays the recording time. Displayed as “r□□□□□□h”. The displayed time is the total time the laser is set to the high power state. This is about 1/4 of the actual recording time. The time is displayed in decimal digits from 0h to 65535h.
total play	Displays the play time. Displayed as “p□□□□□□h”. The time displayed is the total actual play time. Pauses are not counted. The time is displayed in decimal digits from 0h to 65535h.
retry err	Displays the total number of retries during recording and number of retry errors during play. Displayed as “r□□ p□□”. “r” indicates the retries during recording while “p” indicates the retry errors during play. The number of retries and retry errors are displayed in hexadecimal digits from 00 to FF.
total err	Displays the total number of errors. Displayed as “total □□”. The number of errors is displayed in hexadecimal digits from 00 to FF.
err history	Displays the 10 latest errors. Displayed as “0□ E@@”. □ indicates the history number. The smaller the number, the more recent is the error. (00 is the latest). @@ indicates the error code. Refer to the following table for the details. The error history can be switched by turning the  knob.
er refresh	Mode which erases the “retry err”, “total err”, and “err history” histories. When returning the unit to the customer after completing repairs, perform this to erase the past error history. After pressing the  button and “er refresh?” is displayed, press the  button to erase the history. “Complete!” will be displayed momentarily. Be sure to check the following when this mode has been executed. <ul style="list-style-type: none"><li>• The data has been erased.</li><li>• The mechanism operates normally when recording and play are performed.</li></ul>
tm refresh	Mode which erases the “total rec” and “total play” histories. These histories serve as approximate indications of when to replace the optical pickup. If the optical pickup has been replaced, perform this operation and erase the history. After pressing the  button and “tm refresh?” is displayed, press the  button to erase the history. “Complete!” will be displayed momentarily. Be sure to check the following when this mode has been executed. <ul style="list-style-type: none"><li>• The data has been erased.</li><li>• The mechanism operates normally when recording and play are performed.</li></ul>

**Table of Error Codes**

Error Code	Details of Error	Error Code	Details of Error
E00	No error	E05	FOK has deviated
E01	Disc error. PTOC cannot be read (DISC ejected)	E06	Cannot focus (Servo has deviated)
		E07	Recording retry
E02	Disc error. UTOC error (DISC not ejected)	E08	Recording retry error
		E09	Playback retry error (Access error)
E03	Loading error		
E04	Address cannot be read (Servo has deviated)	E0A	Playback retry error (C2 error)

# SECTION 1

## SERVICING NOTES

### TABLE OF CONTENTS

<b>SELF-DIAGNOSIS FUNCTION .....</b>	2
<b>1. SERVICING NOTES .....</b>	4
<b>2. GENERAL .....</b>	11
<b>3. DISASSEMBLY .....</b>	12
<b>4. TEST MODE .....</b>	16
<b>5. ELECTRICAL ADJUSTMENTS .....</b>	21
<b>6. DIAGRAMS</b>	
6-1. IC Pin Function Description .....	30
6-2. Block Diagram – SERVO Section – .....	37
6-3. Block Diagram – MAIN Section – .....	39
6-4. Note for Printed Wiring Boards and Schematic Diagrams .....	42
6-5. Printed Wiring Board – BD Board – .....	43
6-6. Schematic Diagram – BD Board (1/2) – .....	45
6-7. Schematic Diagram – BD Board (2/2) – .....	47
6-8. Schematic Diagram – SW Board – .....	49
6-9. Printed Wiring Board – SW Board – .....	49
6-10. Printed Wiring Boards – PT/VOL SEL Boards – .....	53
6-11. Printed Wiring Board – MAIN Board – .....	55
6-12. Schematic Diagram – MAIN Board (1/2) – .....	57
6-13. Schematic Diagram – MAIN Board (2/2), PT/VOL SEL Boards – .....	59
6-14. Printed Wiring Board – PANEL Board – .....	61
6-15. Schematic Diagram – PANEL Board – .....	63
<b>7. EXPLODED VIEWS .....</b>	66
<b>8. ELECTRICAL PARTS LIST .....</b>	70

### SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety check before releasing the set to the customer:  
Check the antenna terminals, metal trim, "metallized" knobs, screws, and all other exposed metal parts for AC leakage.  
Check leakage as described below.

### LEAKAGE TEST

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5 mA (500 microampers.). Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers' instructions to use these instruments.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The "limit" indication is 0.75 V, so analog meters must have an accurate low-voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOM that is suitable. Nearly all battery operated digital multimeters that have a 2 V AC range are suitable. (See Fig. A)


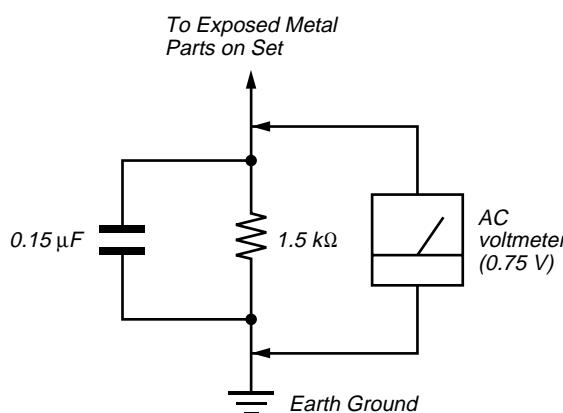


Fig. A. Using an AC voltmeter to check AC leakage.

### MODEL IDENTIFICATION

— BACK PANEL —

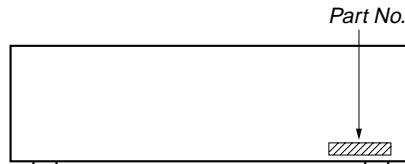

MODEL	Part No.
US model	4-216-765-1□
Canadian model	4-216-765-2□
AEP, UK, Argentine models	4-216-765-3□
Singapore model	4-216-765-4□
Hong Kong model	4-216-765-5□
Australian model	4-216-765-6□

### **CAUTION**

Danger of explosion if battery is incorrectly replaced.  
Replace only with the same or equivalent type recommended by the manufacturer.  
Discard used batteries according to the manufacturer's instructions.

Laser component in this product is capable of emitting radiation exceeding the limit for Class 1.

### **ADVARSEL!**

Lithiumbatteri-Eksplorationsfare ved fejlagtig håndtering.  
Udskiftning må kun ske med batteri  
af samme fabrikat og type.  
Levér det brugte batteri tilbage til leverandøren.

CLASS 1 LASER PRODUCT  
LUOKAN 1 LASERLAITE  
KLASS 1 LASERAPPARAT

This appliance is classified as a CLASS 1 LASER product. The CLASS 1 LASER PRODUCT MARKING is located on the rear exterior.

### **ADVARSEL**

Eksplorationsfare ved feilaktig skifte av batteri.  
Benytt samme batteritype eller en tilsvarende type  
anbefalt av apparatfabrikanten.  
Brukte batterier kasseres i henhold til fabrikantens  
instruksjoner.

### **VARNING**

Explosionsfara vid felaktigt batteribyte.  
Använd samma batterityp eller en likvärdig typ som  
rekommenderas av apparattillverkaren.  
Kassera använt batteri enligt gällande föreskrifter.

**CAUTION** : INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCKS DEFEATED. AVOID EXPOSURE TO BEAM.  
**ADVARSEL** : USYNLIG LASERSTRÅLING VED ÅBNING NÄR SIKKERHEDSAFBRYDERE ER UDE AF FUNKTION. UNDGÅ UDSAETTELSE FOR STRÅLING.  
**VORSICHT** : UNSICHTBARE LASERSTRÄHLUNG, WENN ABDECKUNG GEÖFFNET UND SICHERHEITSVERRIEGELUNG ÜBERBRÜCKT. NICHT DEM STRAHL AUSSETZEN.  
**VARO!** : AVATTAEssa JA SUOJALUKITUS OHITTAESSA OLET ALT-TINA NÄKYMÄTTÖMÄLLÄ LASERSÄTEILYLLÉ. ÄLÄ KATSO SÄTEESEN.  
**VARNING** : OSYNLIG LASERSTRÅLING NÄR DENNA DEL ÄR ÖPPNAD OCH SPAREN AR URKOPPLAD. BETRÄKTA EJ STRÅLEN.  
**ADVERSEl** : USYNLIG LASERSTRÅLING NÄR DEKSEL ÄPNES OG SIKKERHEDSLSÅ BYTES. UNNGÅ EKSPOSERING FOR STRÅLEN.  
**VIGYAZAT!** : A BURKOLAT NYITÁSAKOR LÁTHATATLAN LÉZERSUGÁRSZÉLY! KERÜLJE A BESUGÁRZÁST!

This caution label is located inside the unit.

### **CAUTION**

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

### **Flexible Circuit Board Repairing**

- Keep the temperature of the soldering iron around 270 °C during repairing.
- Do not touch the soldering iron on the same conductor of the circuit board (within 3 times).
- Be careful not to apply force on the conductor when soldering or unsoldering.

### **Notes on chip component replacement**

- Never reuse a disconnected chip component.
- Notice that the minus side of a tantalum capacitor may be damaged by heat.

### **SAFETY-RELATED COMPONENT WARNING!!**

COMPONENTS IDENTIFIED BY MARK ▲ OR DOTTED LINE WITH MARK ▲ ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

### **ATTENTION AU COMPOSANT AYANT RAPPORT À LA SÉCURITÉ!**

LES COMPOSANTS IDENTIFIÉS PAR UNE MARQUE ▲ SUR LES DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COMPOSANTS QUE PAR DES PIÈCES SONY DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPLÉMENTS PUBLIÉS PAR SONY.

## JIG FOR CHECKING BD BOARD WAVEFORM

The special jig (J-2501-149-A) is useful for checking the waveform of the BD board. The names of terminals and the checking items to be performed are shown as follows.

GND : Ground



I+3V : For measuring IOP (Check the deterioration of the optical pick-up laser)

IOP : For measuring IOP (Check the deterioration of the optical pick-up laser)

TEO : TRK error signal (Traverse adjustment)

VC : Reference level for checking the signal

RF : RF signal (Check jitter)

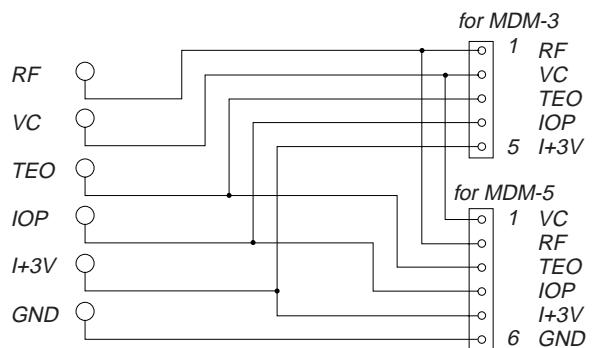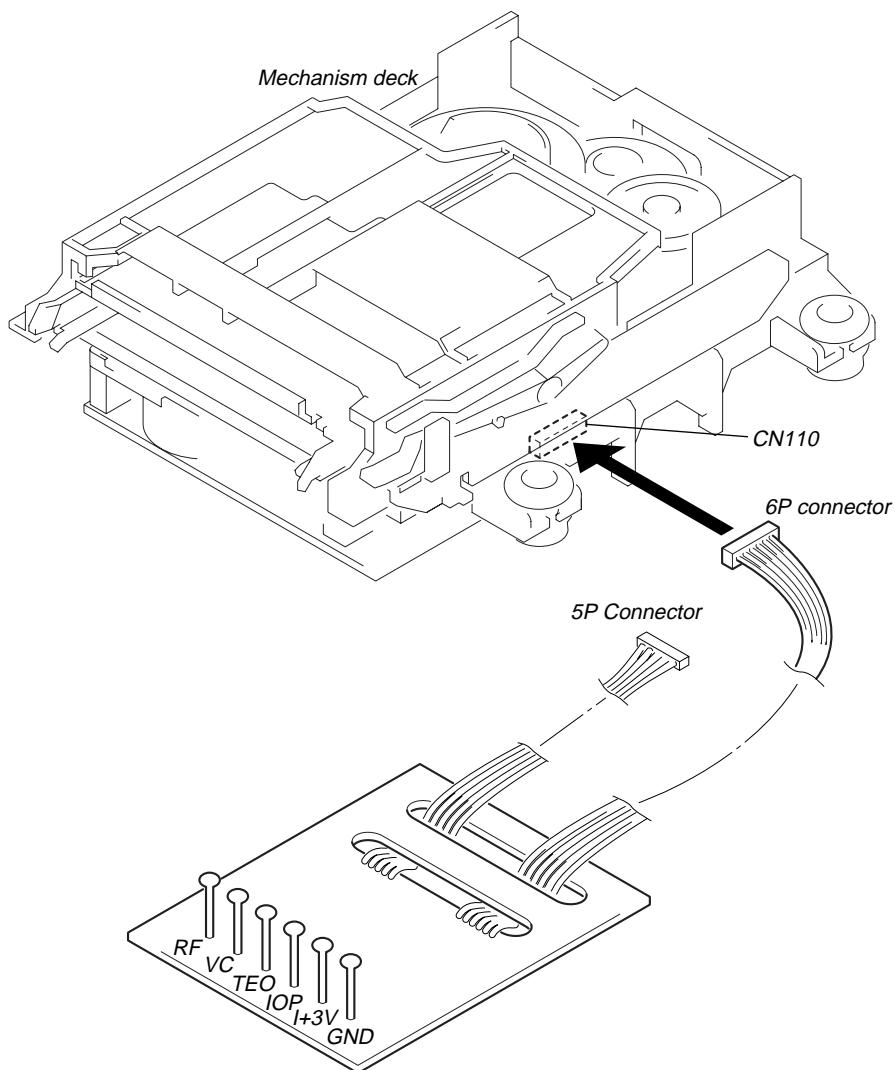

## IOP DATA RECORDING AND DISPLAY WHEN OPTICAL PICK-UP AND NON-VOLATILE MEMORY (IC171 OF BD BOARD) ARE REPLACED

The IOP value labeled on the optical pick-up can be recorded in the non-volatile memory. By recording the value, it will eliminate the need to look at the value on the label of the optical pick-up. When replacing the optical pick-up or non-volatile memory (IC171 of BD board), record the IOP value on the optical pick-up according to the following procedure.

### Record Procedure:

1. While pressing the [◀◀◀▶▶▶] knob and [■] button, connect the power plug to the outlet, and release the [◀◀◀▶▶▶] knob and [■] button.
2. Turn the [◀◀◀▶▶▶] knob to display “[Service]”, and press the [YES] button.
3. Turn the [◀◀◀▶▶▶] knob to display “Iop Write” (C28), and press the [YES] button.
4. The display becomes “Ref=@@.@@” (@ is an arbitrary number) and the numbers which can be changed will blink.
5. Input the IOP value written on the optical pick-up.  
To select the number : Turn the [◀◀◀▶▶▶] knob.  
To select the digit : Press the [◀◀◀▶▶▶] knob.
6. When the [YES] button is pressed, the display becomes “Measu=@@.@@” (@ is an arbitrary number).
7. As the adjustment results are recorded for the 6 value. Leave it as it is and press the [YES] button.
8. “Complete!” will be displayed momentarily. The value will be recorded in the non-volatile memory and the display will become “Iop Write”.
9. Press the [REPEAT] button to complete.

### Display Procedure:

1. While pressing the [◀◀◀▶▶▶] knob and [■] button, connect the power plug to the outlet, and release the [◀◀◀▶▶▶] knob and [■] button.
2. Turn the [◀◀◀▶▶▶] knob to display “[Service]”, and press the [YES] button.
3. Turn the [◀◀◀▶▶▶] knob to display “Iop Read” (C27).
4. “@@.@@/#.#” is displayed and the recorded contents are displayed.  
@@.@@ : indicates the IOP value labeled on the optical pick-up.  
#.## : indicates the IOP value after adjustment
5. To end, press the [◀◀◀▶▶▶] knob or [MENU/NO] button to display “Iop Read”. Then press the [REPEAT] button.

## CHECKS PRIOR TO PARTS REPLACEMENT AND ADJUSTMENTS

Before performing repairs, perform the following checks to determine the faulty locations up to a certain extent.  
Details of the procedures are described in "5 Electrical Adjustments".

	Criteria for Determination (Unsatisfactory if specified value is not satisfied)	Measure if unsatisfactory:
Laser power check (6-2 : See page 23)	<ul style="list-style-type: none"> <li>• 0.9 mW power Specified value : 0.84 to 0.92 mW</li> <li>• 7.0 mW power Specified value : 6.8 to 7.2 mW</li> </ul>	<ul style="list-style-type: none"> <li>• Clean the optical pick-up</li> <li>• Adjust again</li> <li>• Replace the optical pick-up</li> </ul>
	<ul style="list-style-type: none"> <li>• Iop (at 7mW) • Labeled on the optical pickup Iop value <math>\pm</math> 10mA</li> </ul>	<ul style="list-style-type: none"> <li>• Replace the optical pick-up</li> </ul>
Traverse check (6-3 : See page 23)	<ul style="list-style-type: none"> <li>• Traverse waveform Specified value : Below 10% offset</li> </ul>	<ul style="list-style-type: none"> <li>• Replace the optical pick-up</li> </ul>
Focus bias check (6-4 : See page 24)	<ul style="list-style-type: none"> <li>• Error rate check Specified value : For points a, b, and c C1 error : About 200 AD error : Above 00</li> </ul>	<ul style="list-style-type: none"> <li>• Replace the optical pick-up</li> </ul>
C PLAY check (6-5 : See page 24)	<ul style="list-style-type: none"> <li>• Error rate check Specified value:           <ul style="list-style-type: none"> <li>a. When using test disc (MDW-74/AU-1) C1 error : Below 80 AD error : Below 2</li> <li>b. When using check disc (TDYS-1) C1 error : Below 50</li> </ul> </li> </ul>	<ul style="list-style-type: none"> <li>• Replace the optical pick-up</li> </ul>
Self-recording/playback check (6-6 : See page 24)	<ul style="list-style-type: none"> <li>• CPLAY error rate check Specified value: C1 error : Below 80 AD error : Below 2</li> </ul>	If always unsatisfactory: <ul style="list-style-type: none"> <li>• Replace the overwrite head</li> <li>• Check for disconnection of the circuits around the overwrite head</li> </ul>
		If occasionally unsatisfactory: <ul style="list-style-type: none"> <li>• Check if the overwrite head is distorted</li> <li>• Check the mechanism around the sled</li> </ul>
Temperature compensation offset check (6-1 : See page 23)	<ul style="list-style-type: none"> <li>• Unsatisfactory if displayed as T=@@ (#) [NG]" NG (@@, # are both arbitrary numbers)</li> </ul>	<ul style="list-style-type: none"> <li>• Check for disconnection of the circuits around D101 (BD board)</li> <li>• Check the signals around IC101, IC121, CN102, CN103 (BD board)</li> </ul>

### Note:

The criteria for determination above is intended merely to determine if satisfactory or not, and does not serve as the specified value for adjustments.  
When performing adjustments, use the specified values for adjustments.

## RETRY CAUSE DISPLAY MODE

- In this test mode, the causes for retry of the unit during recording can be displayed on the fluorescent indicator tube. During playback, the “track mode” for obtaining track information will be set.  
This is useful for locating the faulty part of the unit.
- The following will be displayed :  
During recording and stop: Retry cause, number of retries, and number of retry errors.  
During playback : Information such as type of disc played, part played, copyright.  
These are displayed in hexadecimal.

### Procedure:

- Load a recordable disc whose contents can be erased into the unit.
- Press the [MENU/NO] button. When “Edit Menu” is displayed on the fluorescent indicator tube, turn the [◀▶◀▶] knob to display “All Erase?”.
- Press the [YES] button. (Or press the [◀▶◀▶] knob)
- When “All Erase??” is displayed on the fluorescent indicator tube, the music calendar number blinks.
- Press the [YES] button to display “Complete!”, and press the [■] button immediately. Wait for about 15 seconds while pressing the button. (The [◀▶◀▶] knob can be pressed instead of the [YES] button for the same results.)
- When the “TOC” displayed on the fluorescent display tube goes off, release the [■] button.
- Press the [● REC] button to start recording. Then press the [II] button and start recording.
- To check the “track mode”, press the [▶] button to start play.
- To exit the test mode, press the [I/O] button, and turn OFF the power. When “TOC” disappears, disconnect the power plug from the outlet.

**Fig. 1 Reading the Test Mode Display  
(During recording and stop)**

RTs@ @c##e\*\*  
Fluorescent display tube display

@@ : Cause of retry  
## : Number of retries  
\*\* : Number of retry errors

**Fig. 2 Reading the Test Mode Display  
(During playback)**

@ @ #####\*\*\$ \$  
Fluorescent display tube display

@@ : Parts No. (name of area named on TOC)  
## : Cluster } Address  
\*\* : Sector } Address  
\$ \$ : Track mode (Track information such as copy-right information of each part)

### Reading the Retry Cause Display

Hexadecimal	Higher Bits				Lower Bits				Hexa-decimal	Cause of Retry	Occurring conditions
	8	4	2	1	8	4	2	1			
Bit	b7	b6	b5	b4	b3	b2	b1	b0			
Binary	0	0	0	0	0	0	0	1	01	shock	When track jump (shock) is detected
	0	0	0	0	0	0	1	0	02	ader5	When ADER was counted more than five times continuously
	0	0	0	0	0	1	0	0	04	Discontinuous address	When ADIP address is not continuous
	0	0	0	0	1	0	0	0	08	DIN unlock	When DIN unlock is detected
	0	0	0	1	0	0	0	0	10	FCS incorrect	When not in focus
	0	0	1	0	0	0	0	0	20	IVR rec error	When ABCD signal level exceeds the specified range
	0	1	0	0	0	0	0	0	40	CLV unlock	When CLV is unlocked
	1	0	0	0	0	0	0	0	80	Access fault	When access operation is not performed normally

### Reading the Display:

Convert the hexadecimal display into binary display. If more than two causes, they will be added.

### Example

When 42 is displayed:

Higher bit: 4 = 0100 → b6

Lower bit : 2 = 0010 → b1

In this case, the retry cause is combined of “CLV unlock” and “ader5”.

When A2 is displayed:

Higher bit: A = 1010 → b7+b5

Lower bit : 2 = 0010 → b1

The retry cause in this case is combined of “access fault”, “IVR rec error”, and “ader5”.

## Reading the Retry Cause Display

Hexadecimal	Higher Bits				Lower Bits				Hexa-decimal	Details	
	8	4	2	1	8	4	2	1		When 0	When 1
Bit	b7	b6	b5	b4	b3	b2	b1	b0			
Binary	0	0	0	0	0	0	0	1	01	Emphasis OFF	Emphasis ON
	0	0	0	0	0	0	1	0	02	Monoaural	Stereo
	0	0	0	0	0	1	0	0	04	This is 2-bit display. Normally 01.	
	0	0	0	0	1	0	0	0	08	01:Normal audio. Others:Invalid	
	0	0	0	1	0	0	0	0	10	Audio (Normal)	Invalid
	0	0	1	0	0	0	0	0	20	Original	Digital copy
	0	1	0	0	0	0	0	0	40	Copyright	No copyright
	1	0	0	0	0	0	0	0	80	Write prohibited	Write allowed

### Reading the Display:

Convert the hexadecimal display into binary display. If more than two causes, they will be added.

Example When 84 is displayed:

Higher bit: 8 = 1000 → b7

Lower bit : 4 = 0100 → b2

In this case, as b2 and b7 are 1 and others are 0, it can be determined that the retry cause is combined of “emphasis OFF”, “monoaural”, “original”, “copyright exists”, and “write allowed”.

Example When 07 is displayed:

Higher bit: 0 = 1000 → All 0

Lower bit : 7 = 0111 → b0+b1+b2

In this case, as b0, b1, and b2 are 1 and others are 0, it can be determined that the retry cause is combined of “emphasis ON”, “stereo”, “original”, “copyright exists”, and “write prohibited”.

**Hexadecimal → Binary Conversion Table**

Hexadecimal	Binary	Hexadecimal	Binary
0	0000	8	1000
1	0001	9	1001
2	0010	A	1010
3	0011	B	1011
4	0100	C	1100
5	0101	D	1101
6	0110	E	1110
7	0111	F	1111

## SECTION 2 GENERAL

This section is extracted from instruction manual.

### Front Panel Parts Description

**①** I/O (power) switch (14, 21)

Press to turn the deck on. When you turn the deck on, the switch indicator turns off. When you press the switch again, the deck turns off and the indicator lights up red.

**②** SCROLL button (12)

Press to scroll the name of a track or MD.

**③** LEVEL/DISPLAY/CHAR button (12, 16, 25, 33)



- Press during recording or recording pause to adjust the recording level.
- Press when the deck is stopped to display disc information or the contents of a program.
- Press during recording to display information on the track being recorded.
- Press during play to display information on the current track.
- Press while editing an MD to select the type of characters to be input.

**④** Display window (11, 12)

Shows various information.

**⑤** MD insertion slot (14, 21)

Insert the MD as illustrated below.

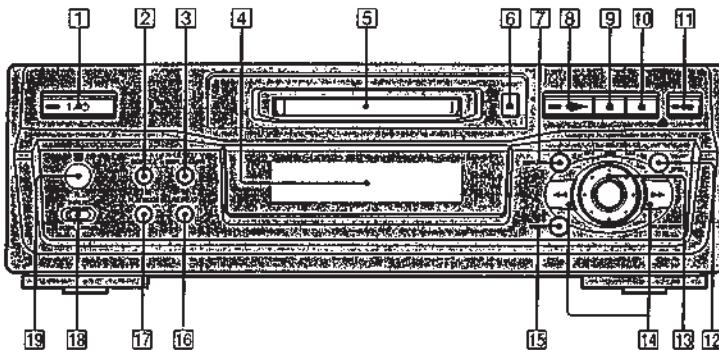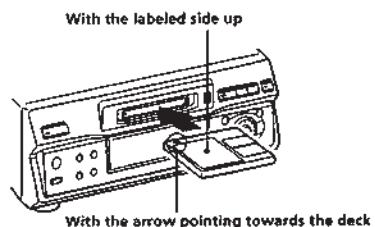

**⑥** EJECT ▲ button (15, 21)

Press to eject the MD.

**⑦** MENU/NO button (14, 29, 38)

Press to display "Edit Menu" or "Setup Menu."

**⑧** ► button (15, 21)

Press to start play.

**⑨** II button (15, 21)

Press to pause play or recording. Press again to resume play or recording.

**⑩** ■ button (15, 21, 29)

Press to stop play, stop recording, or cancel the selected operation.

**⑪** ● button (15-17)

Press to record on the MD, monitor the input signal, or mark track numbers.

**⑫** YES button (14, 25, 29, 38)

Press to carry out the selected operation.

**⑬** AMS control (14-16, 21, 25, 29, 33, 38)

Turn to locate tracks, adjust the recording level, select the input characters, or select a menu item.

**⑭** ◀◀/▶▶ buttons (23, 25, 30, 33)

Press to locate a portion within a track, change the contents of a program, or change the input character.

**⑯** CLEAR button (26, 34)

Press to cancel the selection.

**⑰** REPEAT button (23, 24)

Press to play tracks repeatedly.

**⑱** PLAY MODE button (24)

Press to select Shuffle Play or Program Play.


**⑲** INPUT switch (14)

Use to select the input jack (or connector) of the program source to be recorded.

**⑳** Remote sensor (4)

Point the remote towards this window (■) for remote operations.

### Remote Parts Description

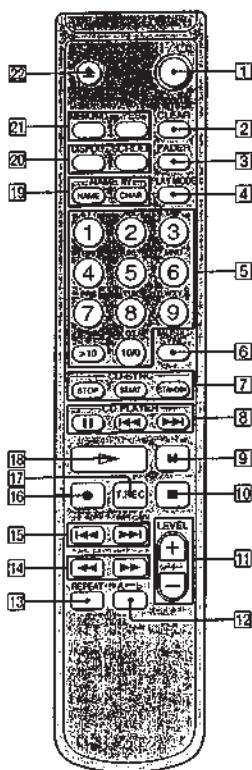

**①** I/O (power) switch (14, 21)

Press to turn the deck on. When you turn the deck on, the I/O switch indicator on the deck turns off. When you press the switch again, the deck turns off and the indicator lights up red.

**②** CLEAR button (26, 34)

Press to cancel the selection.

**③** FADER button (37)

Press to perform Fade-in Play/Recording or Fade-out Play/Recording.

**④** PLAY MODE button (24)

Press to select Shuffle Play or Program Play.

**⑤** Letter/number buttons (22, 34)

Press to enter a track number directly or input letters or numbers.

**⑥** MUSIC SYNC button (19)

Press to start Music Syncro-recording.

**⑦** CD-SYNC STOP button (20)

Press to stop CD Syncro-recording.

CD-SYNC START button (19)

Press to start CD Syncro-recording.

CD-SYNC STANDBY button (19)

Press to enter standby for CD Syncro-recording.

**⑧** CD PLAYER II button (20)

Press to pause the CD play. Press again to resume CD play.

CD PLAYER ▶◀/▶▶ buttons (20)

Press to locate tracks on the CD.

**⑨** II button (15, 21)

Press to pause play or recording. Press again to resume play or recording.

**⑩** ■ button (15, 21, 29)

Press to stop play, stop recording, or cancel the selected operation.

**⑪** LEVEL +/- buttons (16)

Press to adjust the recording level.

**⑫** A↔B button (24)

Press to select Repeat A-B Play.

**⑬** REPEAT button (23, 24)

Press to play tracks repeatedly.

**⑭** ◀◀/▶▶ buttons (23, 25, 30, 34)

Press to locate a portion within a track, change the contents of a program, or shift the cursor to the right.

**⑮** ▶◀/▶▶ buttons (14-16, 21, 25, 29, 34, 38)

Press to locate tracks, adjust the recording level, or select a menu item.

**⑯** ● button (15-17)

Press to record on the MD, monitor the input signal, or mark track numbers.

**⑰** T.REC button (18)

Press during recording pause to start Time Machine Recording.

**⑱** ▷ button (15, 21)

Press to start play.

**⑲** NAME button (34)

Press to add the name or change the name of a track or MD.

CHAR button (34)

Press to select the type of characters to be input when naming a track or MD.

**⑳** DISPLAY button (12, 16, 25)

Press to select the information to be displayed in the window.

SCROLL button (12)

Press to scroll the name of a track or MD.

**㉑** MENU/NO button (14, 29, 38)

Press to display "Edit Menu" or "Setup Menu."

YES button (14, 25, 29, 38)

Press to carry out the selected operation.


**㉒** ▲ button (15, 21)

Press to eject the MD.


## SECTION 3 DISASSEMBLY

**Note:** Follow the disassembly procedure in the numerical order given.


### COVER

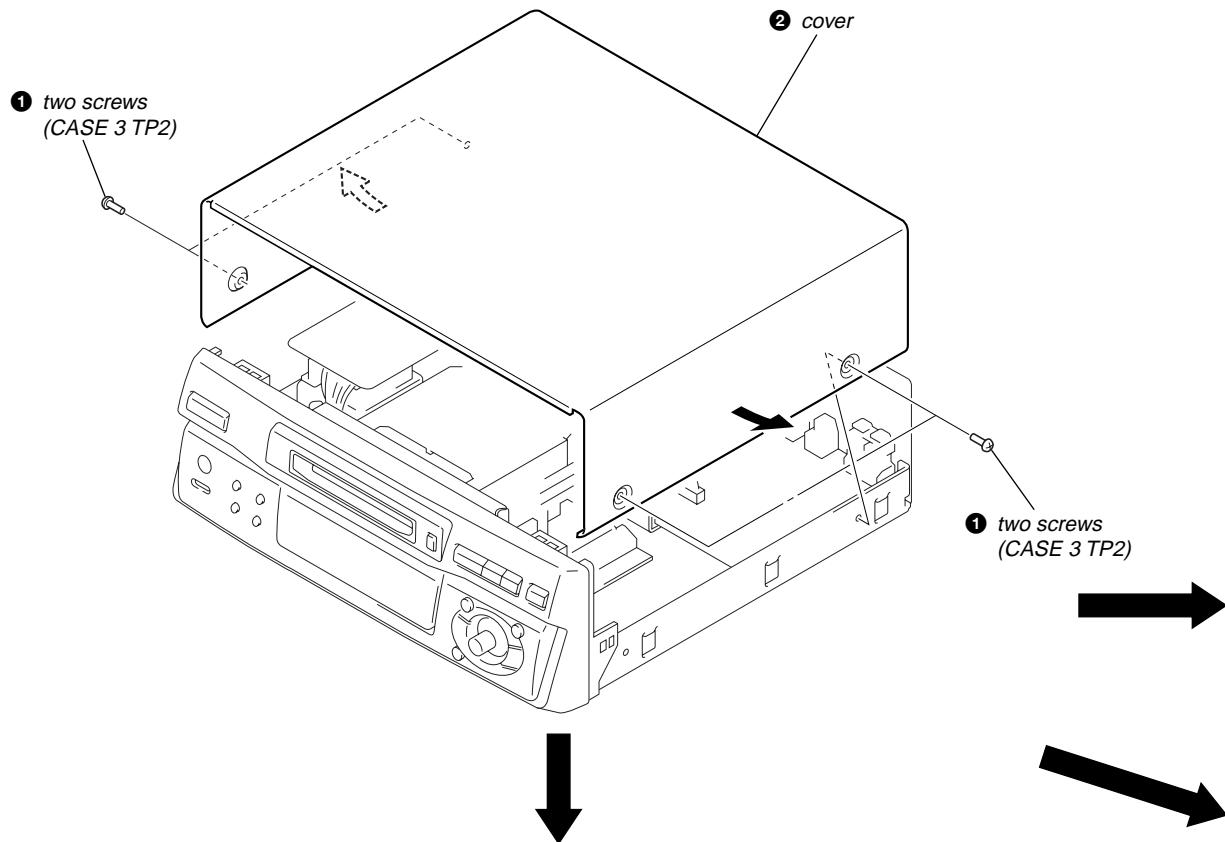


### FRONT PANEL SECTION

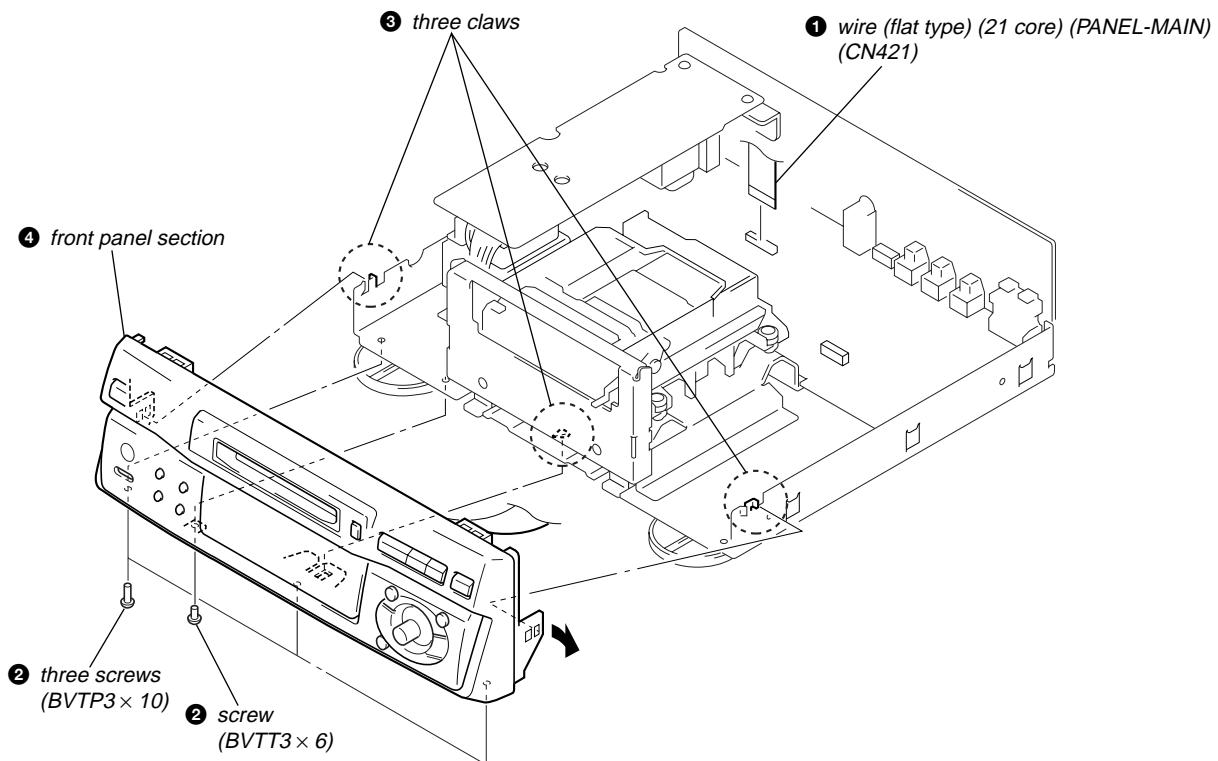


## MAIN/PT BOARD

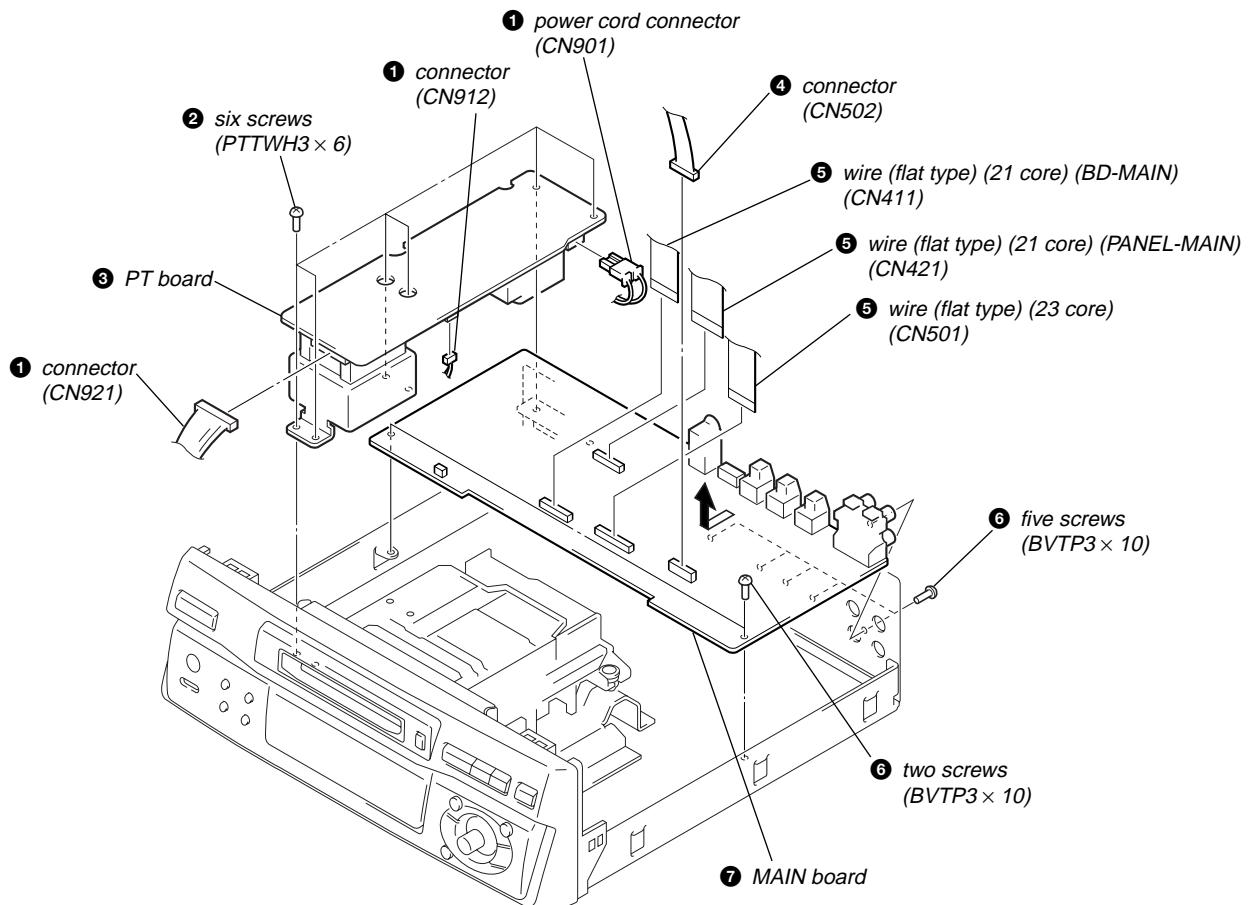


## MECHANISM DECK SECTION (MDM-5A)

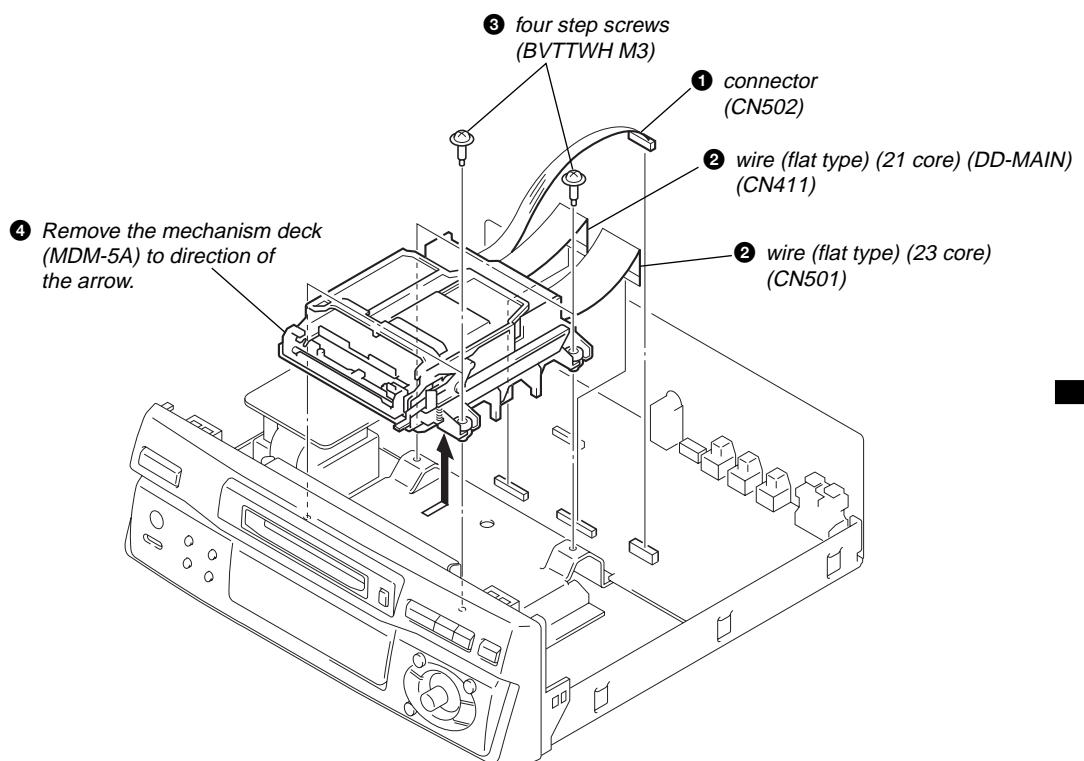


## SLIDER (CAM)

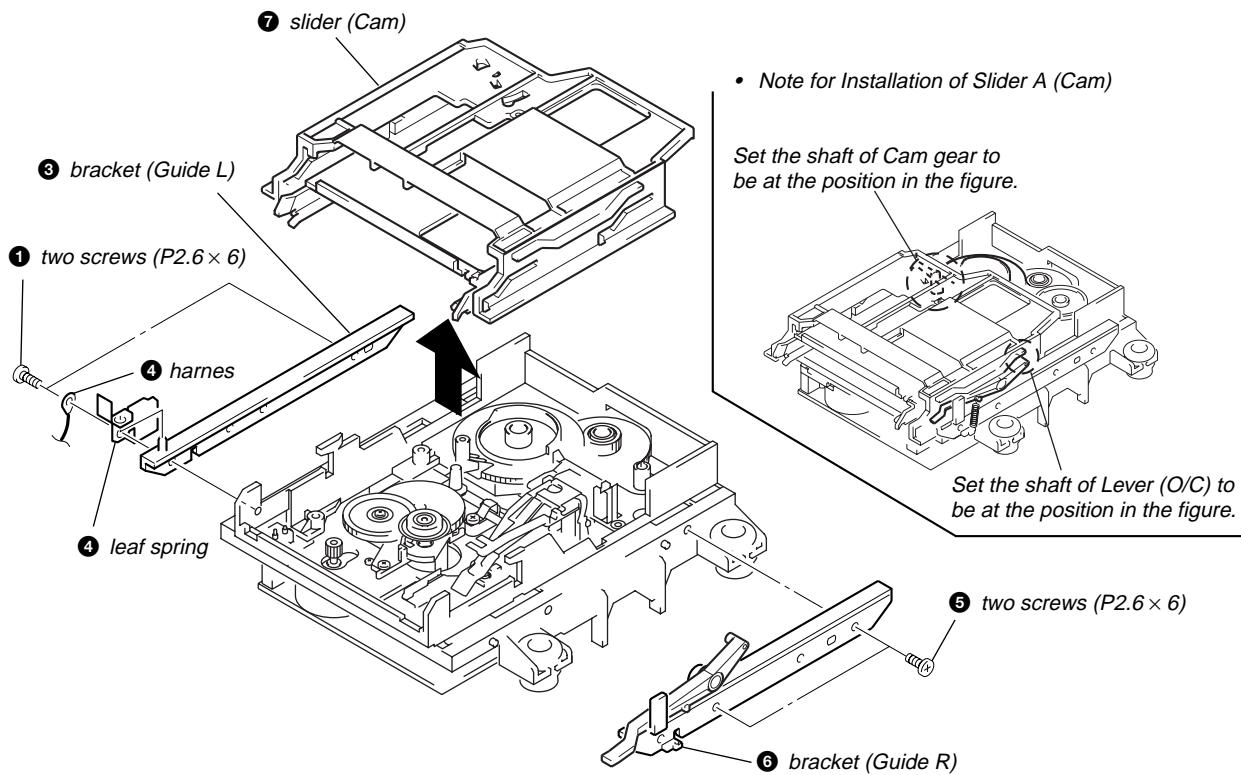

## BASE UNIT (MBU-5A), BD BOARD

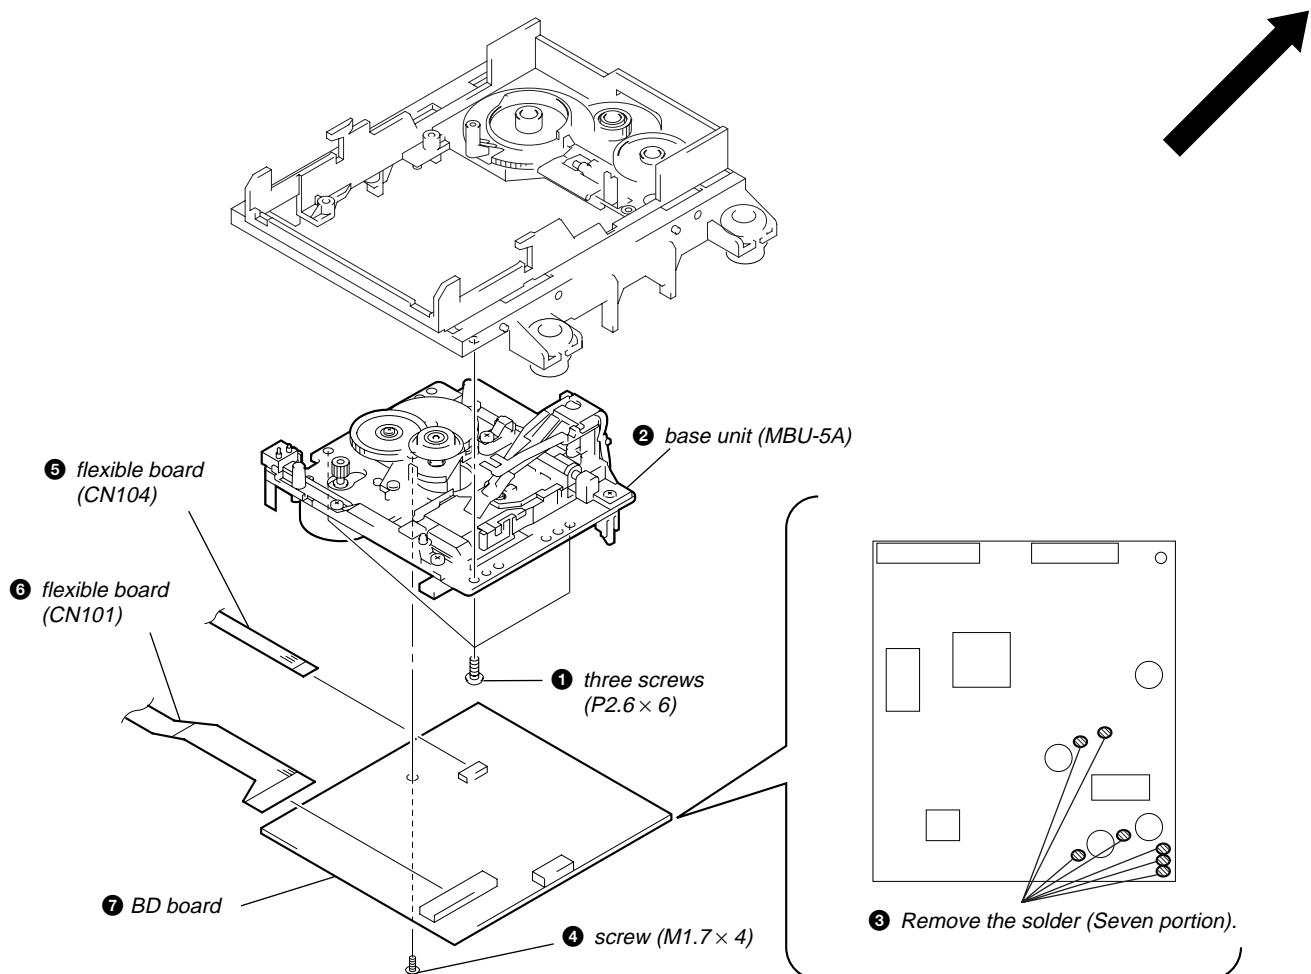

## SW BOARD, LOADING MOTOR (M103)

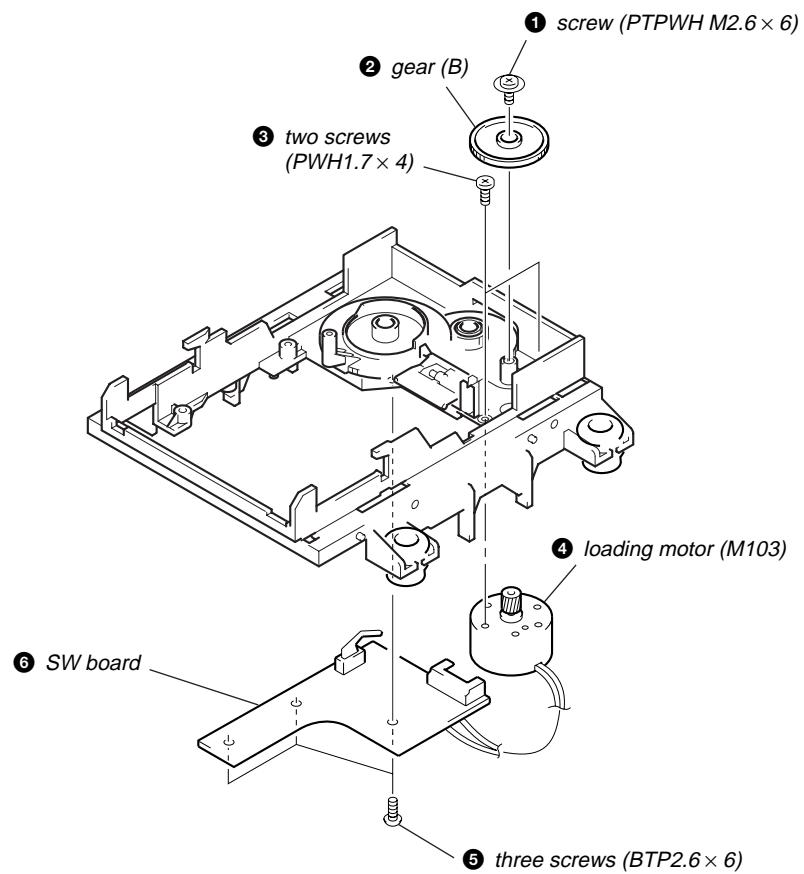

## SECTION 4 TEST MODE

### 1. PRECAUTIONS FOR USE OF TEST MODE

- As loading related operations will be performed regardless of the test mode operations being performed, be sure to check that the disc is stopped before setting and removing it.

Even if the **EJECT** button is pressed while the disc is rotating during continuous playback, continuous recording, etc., the disc will not stop rotating.

Therefore, it will be ejected while rotating.

Be sure to press the **EJECT** button after pressing the **MENU/NO** button and the rotation of disc is stopped.

#### 1-1. Recording laser emission mode and operating buttons

- Continuous recording mode (CREC MODE)
- Laser power check mode (LDPWR CHECK)
- Laser power adjustment mode (LDPWR ADJUST)
- Traverse (MO) check (EF MO CHECK)
- Traverse (MO) adjustment (EF MO ADJUST)
- When pressing the **REC** button.

### 2. SETTING THE TEST MODE

The following are two methods of entering the test mode.

**Procedure 1:** While pressing the **◀▶** knob and **■** button, connect the power plug to an outlet, and release the **◀▶** knob and **■** button.

When the test mode is set, “[Check]” will be displayed. Turn the **◀▶** knob switches between the following four groups; … $\longleftrightarrow$  [Check]  $\longleftrightarrow$  [Adjust]  $\longleftrightarrow$  [Service]  $\longleftrightarrow$  [Develop]  $\longleftrightarrow$  …

**Procedure 2:** While pressing the **◀▶** knob, connect the power plug to the outlet and release the **◀▶** knob.

When the test mode is set, “TEMP CHECK” will be displayed. By setting the test mode using this method, only the “Check” group of method 1 can be executed.

### 3. EXITING THE TEST MODE

Press the **REPEAT** button. The disc is ejected when loaded, and “Standby” display blinks, and the STANDBY state is set.

### 4. BASIC OPERATIONS OF THE TEST MODE

All operations are performed using the **◀▶** knob, **YES** button, and **MENU/NO** button.

The functions of these buttons are as follows.

Function name	Function
<b>◀▶</b> knob	Changes parameters and modes
YES button	Proceeds onto the next step. Finalizes input.
MENU/NO button	Returns to previous step. Stops operations.

## 5. SELECTING THE TEST MODE

There are 31 types of test modes as shown below. The groups can be switched by turn the knob. After selecting the group to be used, press the **[YES]** button. After setting a certain group, turn the knob switches between these modes. Refer to “Group” in the table for details selected.

All items used for servicing can be treated using group S. So be carefully not to enter other groups by mistake.

Display	No.	Contents	Mark	Group (*)
TEMP CHECK	C01	Temperature compensation offset check		C S
LDPWR CHECK	C02	Laser power check		C S
EF MO CHECK	C03	Traverse (MO) check		C S
EF CD CHECK	C04	Traverse (CD) check		C S
FBIAS CHECK	C05	Focus bias check		C S
ScurveCHECK	C06	S letter check	(X)	C
VERIFYMODE	C07	Non-volatile memory check	(X)	C
DETRK CHECK	C08	Detrack check	(X)	C
TEMP ADJUST	C09	Temperature compensation offset adjustment		A S
LDPWR ADJUST	C10	Laser power adjustment		A S
EF MO ADJUST	C11	Traverse (MO) adjustment		A S
EF CD ADJUST	C12	Traverse (CD) adjustment		A S
FBIAS ADJUST	C13	Focus bias adjustment		A S
EEP MODE	C14	Non-volatile memory control	(X) (!)	D
Impossible	C15	Command transmission	(X)	D
Impossible	C16	Status display	(X)	D
ERR DP MODE	C17	Error history display, clear		S
Impossible	C18	Sled check	(X)	D
Impossible	C19	Access check	(X)	D
Impossible	C20	Outermost circumference check	(X)	D
Impossible	C21	Head position check	(X)	D
Impossible	C22	Same functions as CPLAY MODE	(X)	D
Impossible	C23	Same functions as CREC MODE	(X)	D
ADJ CLEAR	C24	Initialization of non-volatile memory of adjustment value		A S
AG Set (MO)	C25	Auto gain output level adjustment (MO)		A S
AG Set (CD)	C26	Auto gain output level adjustment (CD)		A S
Iop Read	C27	IOP data display		C S
Iop Write	C28	IOP data write		A S
S40 *****	C29	Microprocessing version display		C S
CPLAY MODE	C30	Continuous play mode		C A S D
CREC MODE	C31	Continuous recording mode		C A S D

Group (\*)

C: Check

A: Adjust

S: Service

D: Develop

- For details of each adjustment mode, refer to “5. Electrical Adjustments”.  
For details of “ERR DP MODE”, refer to “Self-Diagnosis Function” on page 2.
- If a different mode has been selected by mistake, press the **[MENU/NO]** button to exit that mode.
- Modes with (X) in the Mark column are not used for servicing and therefore are not described in detail. If these modes are set accidentally, press the **[MENU/NO]** button to exit the mode immediately. Be especially careful not to set the modes with (!) as they will overwrite the non-volatile memory and reset it, and as a result, the unit will not operate normally.

## 5-1. Operating the Continuous Playback Mode

### 1. Entering the continuous playback mode

- (1) Set the disc in the unit. (Whichever recordable discs or discs for playback only are available)
- (2) Turn the [◀◀◀▶▶] knob and display “CPLAY MODE” (C30).
- (3) Press the [YES] button to change the display to “CPLAY MID”.
- (4) When access completes, the display changes to “C1 = 0000 AD = 00”.

**Note:** The numbers “0” displayed show you error rates and ADER.

### 2. Changing the parts to be played back

- (1) Press the [YES] button during continuous playback to change the display as below.

“CPLAY MID” → “CPLAY OUT” → “CPLAY IN”  
↑

When pressed another time, the parts to be played back can be moved.

- (2) When access completes, the display changes to “C1 = 0000 AD = 00”.

**Note:** The numbers “0” displayed show you error rates and ADER.

### 3. Ending the continuous playback mode

- (1) Press the [MENU/NO] button. The display will change to “CPLAY MODE”.
- (2) Press the [▲ EJECT] button to remove the disc.

**Note:** The playback start addresses for IN, MID, and OUT are as follows.

IN	40h cluster
MID	300h cluster
OUT	700h cluster

## 5-2. Operating the Continuous Recording Mode (Use only when performing self-recording/palyback check)

### 1. Entering the continuous recording mode

- (1) Set a recordable disc in the unit.
- (2) Turn the [◀◀◀▶▶] knob and display “CREC MODE”.
- (3) Press the [YES] button to change the display to “CREC MID” (C31).
- (4) When access completes, the display changes to “CREC (0000)” and [REC] lights up.

**Note:** The numbers “0” displayed shows you the recording position addresses.

### 2. Changing the parts to be recorded

- (1) When the [YES] button is pressed during continuous recording, the display changes as below.

“CREC MID” → “CREC OUT” → “CREC IN”  
↑

When pressed another time, the parts to be recorded can be changed. [REC] goes off.

- (2) When access completes, the display changes to “CREC (0000)” and [REC] lights up.

**Note:** The numbers “0” displayed shows you the recording position addresses.

### 3. Ending the continuous recording mode

- (1) Press the [MENU/NO] button. The display changes to “CREC MODE” and [REC] goes off.
- (2) Press the [▲ EJECT] button to remove the disc.

**Note 1:** The recording start addresses for IN, MID, and OUT are as follows.

IN	40h cluster
MID	300h cluster
OUT	700h cluster

**Note 2:** The [MENU/NO] button can be used to stop recording anytime.

**Note 3:** Do not perform continuous recording for long periods of time above 5 minutes.

**Note 4:** During continuous recording, be careful not to apply vibration.

## 5-3. Non-Volatile Memory Mode (EEP MODE)

This mode reads and writes the contents of the non-volatile memory.

It is not used in servicing. If set accidentally, press the [MENU/NO] button immediately to exit it.

## 6. FUNCTIONS OF OTHER BUTTONS

Function	Contents
▶	Sets continuous playback when pressed in the STOP state. When pressed during continuous playback, the tracking servo turns ON/OFF.
■	Stops continuous playback and continuous recording.
▶▶	The sled moves to the outer circumference only when this is pressed.
◀◀	The sled moves to the inner circumference only when this is pressed.
SCROLL	Switches between the pit and groove modes when pressed.
PLAY MODE	Switches the spindle servo mode (CLVS ↔ CLV A).
LEVEL/DISPLAY/CHAR	Switches the displayed contents each time the button is pressed
▲ EJECT	Ejects the disc
REPEAT	Exits the test mode

## 7. TEST MODE DISPLAYS

Each time the [DISPLAY/CHAR] button is pressed, the display changes in the following order.

### 1. Mode display

Displays “TEMP ADJUST”, “CPLAYMODE”, etc.

### 2. Error rate display

Displays the error rate in the following way.

C1 = □□□□ AD = □□

C1 = Indicates the C1 error.

AD = Indicates ADER.

### 3. Address display

The address is displayed as follows. (MO: recordable disc, CD: playback only disc)

Pressing the [SCROLL/CLOCK SET] button switches between the group display and bit display.

h = □□□□ s = □□□□ (MO pit and CD)

h = □□□□ a = □□□□ (MO groove)

h = Indicates the header address.

s = Indicates the SUBQ address.

a = Indicates the ADIP address.

**Note:** “–” is displayed when servo is not imposed.

### 4. Auto gain display (Not used in servicing)

The auto gain is displayed as follows.

AG = □□/□□[□□]

### 5. Detrack check display (Not used in servicing)


The detrack is displayed as follows.

ADR = □□□□□□□

### 6. IVR display (Not used in servicing)

The IVR is displayed as follows.

[□□][□□][□□]

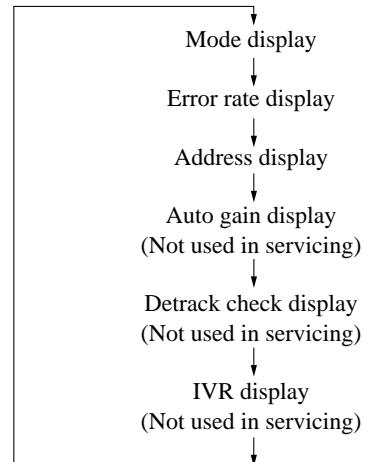

## MEANINGS OF OTHER DISPLAYS


Display	Contents	
	When Lit	When Off
▶	During continuous playback (CLV: ON)	STOP (CLV: OFF)
⏸	Tracking servo OFF	Tracking servo ON
<b>REC</b>	Recording mode ON	Recording mode OFF
SYNC	CLV low speed mode	CLV normal mode
L.SYNC	ABCD adjustment completed	
OVER	Tracking offset cancel ON	Tracking offset cancel OFF
B	Tracking auto gain OK	
A-	Focus auto gain OK	
TRACK	Pit	Groove
DISC	High reflection	Low reflection
SLEEP	CLV-S	CLV-A
MONO	CLV LOCK	CLV UNLOCK

## SECTION 5 ELECTRICAL ADJUSTMENTS

### 1. PARTS REPLACEMENT AND ADJUSTMENT

- Check and adjust the mechanism deck as follows.
- The procedure changes according to the part replaced

- Abbreviation
- |     |                   |
|-----|-------------------|
| OP  | : Optical pick-up |
| OWH | : Overwrite head  |

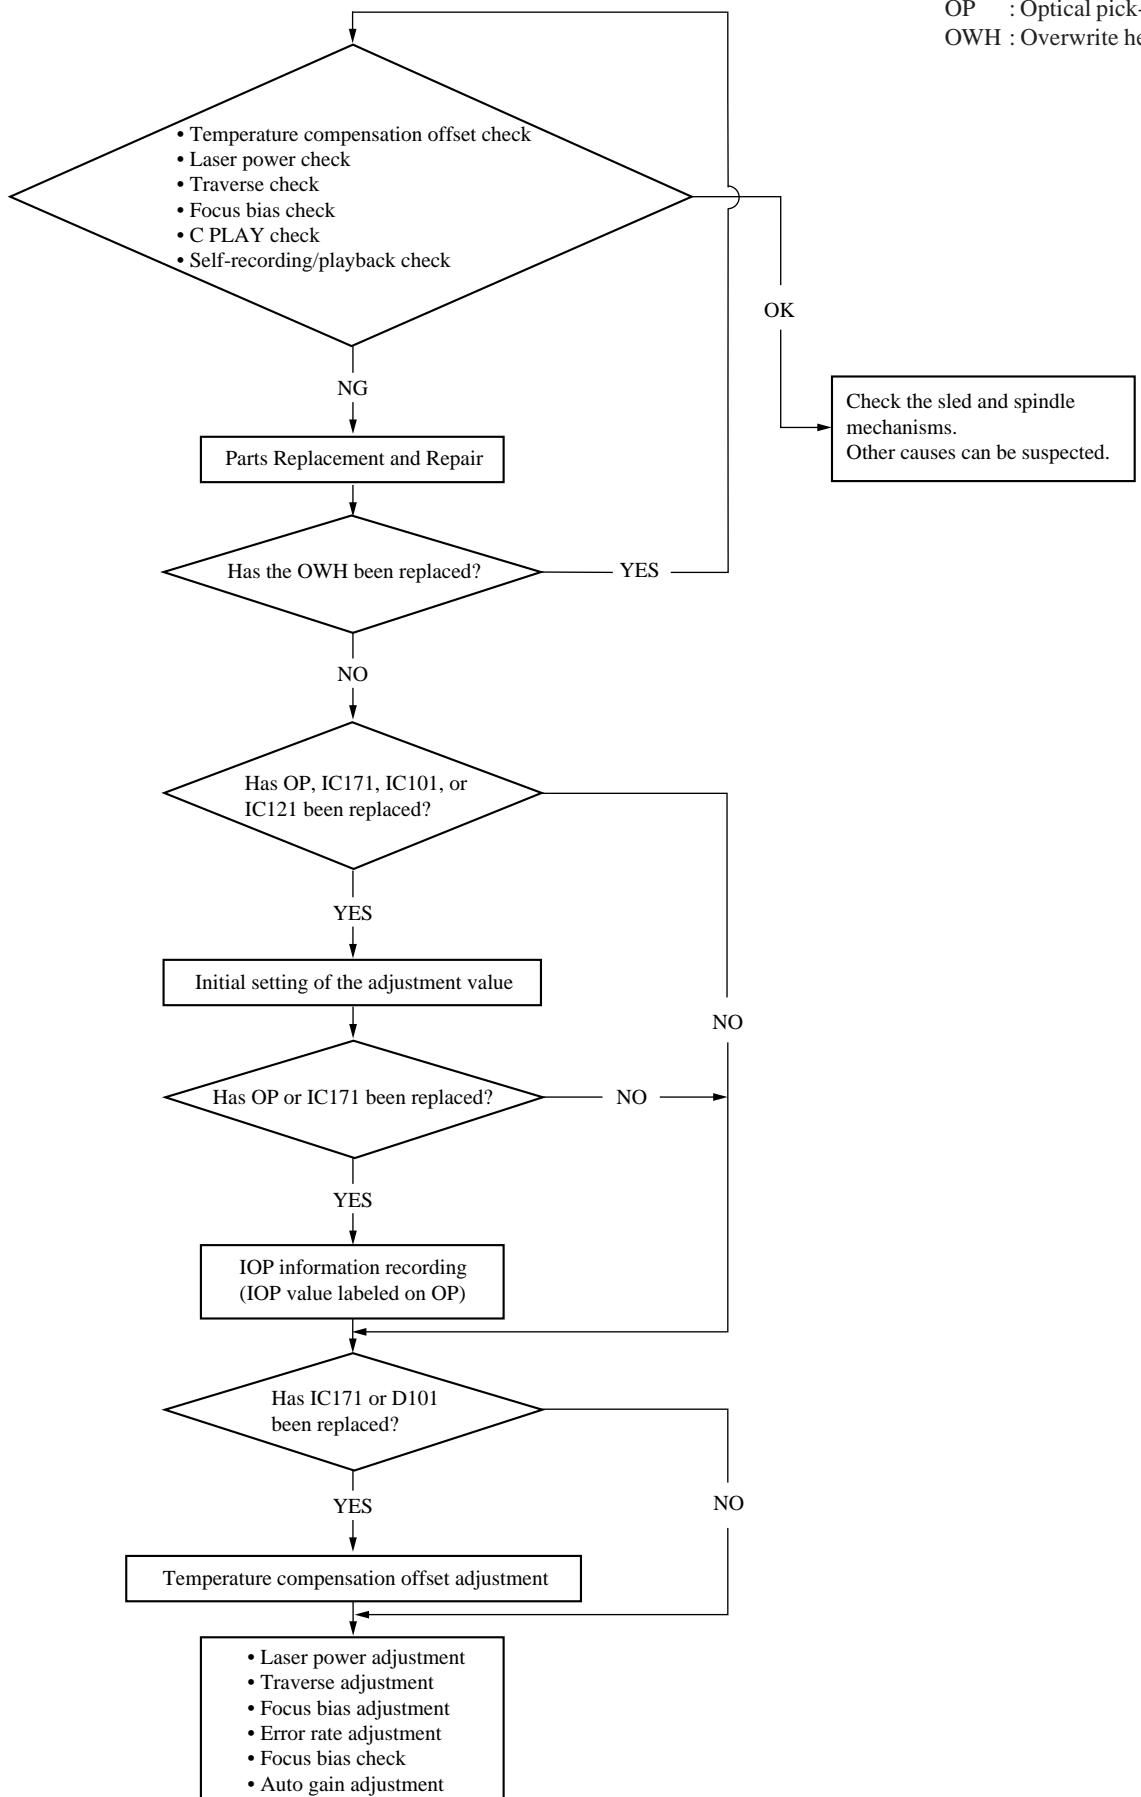


## 2. PRECAUTIONS FOR CHECKING LASER DIODE EMISSION

To check the emission of the laser diode during adjustments, never view directly from the top as this may lose your eye-sight.

## 3. PRECAUTIONS FOR USE OF OPTICAL PICK-UP (KMS-260A)

As the laser diode in the optical pick-up is easily damaged by static electricity, solder the laser tap of the flexible board when using it. Before disconnecting the connector, desolder first. Before connecting the connector, be careful not to remove the solder. Also take adequate measures to prevent damage by static electricity. Handle the flexible board with care as it breaks easily.

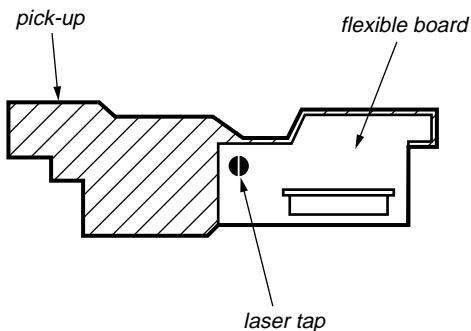

**Optical pick-up flexible board**

## 4. PRECAUTIONS FOR ADJUSTMENTS

1. When replacing the following parts, perform the adjustments and checks with **O** in the order shown in the following table.

Optical Pick-up	BD Board				
	IC171	D101	IC101, IC121	IC192	
1. Initial setting of adjustment value	<b>O</b>	<b>O</b>	<b>X</b>	<b>O</b>	<b>X</b>
2. Recording of IOP information (Value written in the pick-up)	<b>O</b>	<b>O</b>	<b>X</b>	<b>X</b>	<b>X</b>
3. Temperature compensation offset adjustment	<b>X</b>	<b>O</b>	<b>O</b>	<b>X</b>	<b>X</b>
4. Laser power adjustment	<b>O</b>	<b>O</b>	<b>X</b>	<b>O</b>	<b>O</b>
5. Traverse adjustment	<b>O</b>	<b>O</b>	<b>X</b>	<b>O</b>	<b>X</b>
6. Focus bias adjustment	<b>O</b>	<b>O</b>	<b>X</b>	<b>O</b>	<b>X</b>
7. Error rate check	<b>O</b>	<b>O</b>	<b>X</b>	<b>O</b>	<b>X</b>
8. Auto gain output level adjustment	<b>O</b>	<b>O</b>	<b>X</b>	<b>O</b>	<b>X</b>

2. Set the test mode when performing adjustments.

After completing the adjustments, exit the test mode.

Perform the adjustments and checks in "group S" of the test mode.

3. Perform the adjustments to be needed in the order shown.

4. Use the following tools and measuring devices.

- Check Disc (MD) TDYS-1  
(Parts No. 4-963-646-01)
- TEST DISK (MDW-74/AU-1) (Parts No. 8-892-341-41)
- Laser power meter LPM-8001 (Parts No. J-2501-046-A)  
or MD Laser power meter 8010S (Parts No. J-2501-145-A)
- Oscilloscope (Measure after performing CAL of probe)
- Digital voltmeter
- Thermometer
- Jig for checking BD board waveform  
(Parts No. : J-2501-149-A)
- 5. When observing several signals on the oscilloscope, etc., make sure that VC and ground do not connect inside the oscilloscope.  
(VC and ground will become short-circuited)
- 6. Using the above jig enables the waveform to be checked without the need to solder.  
(Refer to Servicing Notes on page 6)
- 7. As the disc used will affect the adjustment results, make sure that no dusts nor fingerprints are attached to it.

### Laser power meter

When performing laser power checks and adjustment (electrical adjustment), use of the new MD laser power meter 8010S (J-2501-145-A) instead of the conventional laser power meter is convenient.

It sharply reduces the time and trouble to set the laser power meter sensor onto the objective lens of the pick-up.

## 5. CREATING CONTINUOUSLY-RECORDED DISC

\* This disc is used in focus bias adjustment and error rate check. The following describes how to create a continuous recording disc.

1. Insert a disc (blank disc) commercially available.
2. Turn the knob and display "CREC MODE". (C31)
3. Press the **[YES]** button again to display "CREC MID". Display "CREC (0300)" and start to recording.
4. Complete recording within 5 minutes.
5. Press the **[MENU/NO]** button and stop recording .
6. Press the **EJECT** button and remove the disc.

The above has been how to create a continuous recorded data for the focus bias adjustment and error rate check.

### Note :

- Be careful not to apply vibration during continuous-recording.

## 6. CHECK PRIOR TO REPAIRS

These checks are performed before replacing parts according to "approximate specifications" to determine the faulty locations. For details, refer to "Checks Prior to Parts Replacement and Adjustments" (See page 8).

### 6-1. Temperature Compensation Offset Check

When performing adjustments, set the internal temperature and room temperature of 22 °C to 28 °C.


#### Checking Procedure:

- Turn the knob to display "TEMP CHECK" (C01).
- Press the .
- "T=@@ (#) [OK]" should be displayed. If "T=@@ (#) [NG]" is displayed, it means that the results are bad. (@@ indicates the current value set, and ## indicates the value written in the non-volatile memory)

### 6-2. Laser Power Check

Before checking, check the IOP value of the optical pick-up. (Refer to 5-8. Recording and Displaying IOP Information)

#### Connection :

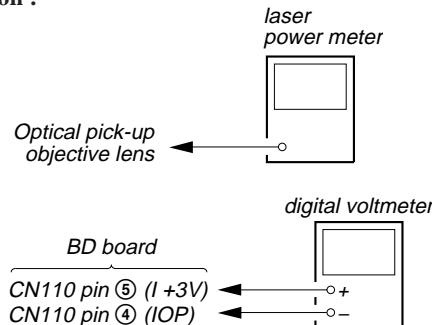

#### Checking Procedure:

 
- Set the laser power meter on the objective lens of the optical pick-up. (When it cannot be set properly, press the button or to move the optical pick-up) Connect the digital voltmeter to CN110 pin ⑤ (I+3V) and CN110 pin ④ (IOP).
- Then, turn the knob and display "LDPWR CHECK" (C02).
- Press the once and display "LD 0.9 mW \$". Check that the reading of the laser power meter become 0.84 to 0.92 mW.
- Press the once more and display "LD 7.0 mW \$". Check that the reading of the laser power meter and digital voltmeter satisfy the specified value.

#### Specification:

Laser power meter reading:  $7.0 \pm 0.2$  mW

Digital voltmeter reading : Optical pick-up displayed value  $\pm 10\%$

(Optical pick-up label)



IOP=82.5 mA in this case

IOP (mA) = Digital voltmeter reading (mV)/1 ( $\Omega$ )


- Press the and display "LDPWR CHECK" and stop the laser emission. (The button is effective at all times to stop the laser emission)

**Note 1:** After step 4, each time the is pressed, the display will be switched between "LD 0.7 mW \$", "LD 6.2 mW \$", and "LD Wp ホセイ \$". Nothing needs to be performed here.


### 6-3. Traverse Check

**Note 1:** Data will be erased during MO reading if a recorded disc is used in this adjustment.

**Note 2:** If the traverse waveform is not clear, connect the oscilloscope as shown in the following figure so that it can be seen more clearly.

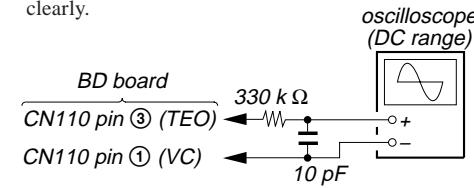


#### Connection :

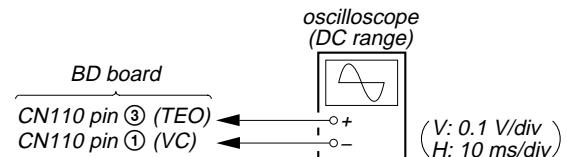

#### Checking Procedure:

- Connect an oscilloscope to CN110 pin ③ (TEO) and CN110 pin ① (VC) of the BD board.
- Load a disc (any available on the market). (Refer to Note 1)
- Press the and move the optical pick-up outside the pit.
- Turn the knob and display "EF MO CHECK" (C03).
- Press the and display "EFB = MO-R". (Laser power READ power/Focus servo ON/tracking servo OFF/spindle (S) servo ON)
- Observe the waveform of the oscilloscope, and check that the specified value is satisfied. Do not turn the knob. (Read power traverse checking)

#### (Traverse Waveform)

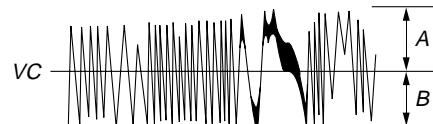


Specified value : Below 10% offset value

$$\text{Offset value (\%)} = \frac{|A - B|}{2(A + B)} \times 100$$

- Press the and display "EFB = MO-W".
- Observe the waveform of the oscilloscope, and check that the specified value is satisfied. Do not turn the knob. (Write power traverse checking)

#### (Traverse Waveform)

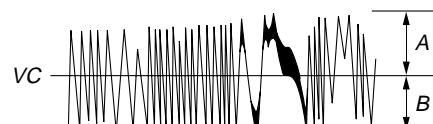


Specified value : Below 10% offset value

$$\text{Offset value (\%)} = \frac{|A - B|}{2(A + B)} \times 100$$

9. Press the [YES] button display “EFB = 00 MO-P”. Then, the optical pick-up moves to the pit area automatically and servo is imposed.
10. Observe the waveform of the oscilloscope, and check that the specified value is satisfied. Do not turn the [◀◀◀▶▶] knob.

(Traverse Waveform)

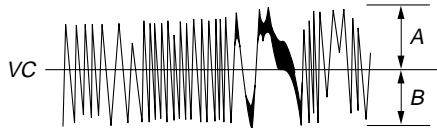


Specified value : Below 10% offset value

$$\text{Offset value (\%)} = \frac{|A - B|}{2(A + B)} \times 100$$

11. Press the [YES] button display “EF MO CHECK” The disc stops rotating automatically.
12. Press the [▲ EJECT] button and remove the disc.
13. Load the check disc (MD) TDYS-1.
14. Turn the [◀◀◀▶▶] knob and display “EF CD CHECK” (C04).
15. Press the [YES] button and display “EFB = 00 CD”. Servo is imposed automatically.
16. Observe the waveform of the oscilloscope, and check that the specified value is satisfied. Do not turn the [◀◀◀▶▶] knob.

(Traverse Waveform)

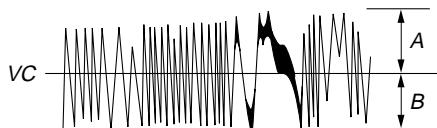

Specified value : Below 10% offset value

$$\text{Offset value (\%)} = \frac{|A - B|}{2(A + B)} \times 100$$

17. Press the [YES] button and display “EF CD CHECK”.
18. Press the [▲ EJECT] button and take out the check disc.

#### 6-4. Focus Bias Check

Change the focus bias and check the focus tolerance amount.

Checking Procedure :

1. Load the test disk (MDW-74/AU-1).
  2. Turn the [◀◀◀▶▶] knob and display “CPLAY MODE” (C30).
  3. Press the [YES] button twice and display “CPLAY MID”.
  4. Press the [MENU/NO] button when “C = 0000 AD = 00” is displayed.
  5. Turn the [◀◀◀▶▶] knob and display “FBIAS CHECK” (C05).
  6. Press the [YES] button and display “0000/00 c = 00”. The first four digits indicate the C1 error rate, the two digits after [/] indicate ADER, and the 2 digits after [c =] indicate the focus bias value.
- Check that the C1 error is below 50 and ADER is below 2.
7. Press the [YES] button and display “0000/00 b = 00”. Check that the C1 error is about 200 and ADER is below 2.
  8. Press the [YES] button and display “0000/00 a = 00”. Check that the C1 error is about 200 and ADER is below 2.
  9. Press the [MENU/NO] button, next press the [▲ EJECT] button and take out the test disc.

#### 6-5. C PLAY Checking

##### MO Error Rate Check

Checking Procedure :

1. Load the test disk (MDW-74/AU-1).
2. Turn the [◀◀◀▶▶] knob and display “CPLAY MODE” (C30).
3. Press the [YES] button and display “CPLAY MID”.
4. The display changes to “C = 0000 AD = 00”.
5. If the C1 error rate is below 80, check that ADER is below 2.
6. Press the [MENU/NO] button, stop playback, press the [▲ EJECT] button and take out the test disc.

##### CD Error Rate Check

Checking Procedure :

1. Load the check disc (MD) TDYS-1.
2. Turn the [◀◀◀▶▶] knob and display “CPLAY MODE” (C30).
3. Press the [YES] button twice and display “CPLAY MID”.
4. The display changes to “C = 0000 AD = 00”.
5. Check that the C1 error rate is below 50.
6. Press the [MENU/NO] button, stop playback, press the [▲ EJECT] button and take out the check disc.

#### 6-6. Self-Recording/playback Check

Prepare a continuous recording disc using the unit to be repaired and check the error rate.

Checking Procedure :

1. Insert a recordable disc (blank disc) into the unit.
2. Turn the [◀◀◀▶▶] knob to display “CREC MODE” (C31).
3. Press the [YES] button to display the “CREC MID”.
4. When recording starts, “REC” is displayed, this becomes “CREC @@@@”(@@@@ is the address), and recording starts.
5. About 1 minute later, press the [MENU/NO] button to stop continuous recording.
6. Turn the [◀◀◀▶▶] knob to display “CPLAY MODE” (C30).
7. Press the [YES] button to display “CPLAY MID”.
8. “C = 0000 AD = 00” will be displayed.
9. Check that the C1 error becomes below 80 and the AD error below 2.
10. Press the [MENU/NO] button to stop playback, and press the [▲ EJECT] button and take out the disc.

## 7. INITIAL SETTING OF ADJUSTMENT VALUE

### Note:

Mode which sets the adjustment results recorded in the non-volatile memory to the initial setting value. However the results of the temperature compensation offset adjustment will not change to the initial setting value.

If initial setting is performed, perform all adjustments again excluding the temperature compensation offset adjustment.

For details of the initial setting, refer to "4. Precautions on Adjustments" and execute the initial setting before the adjustment as required.

### Setting Procedure :

1. Turn the [◀◀◀▶▶] knob to display "ADJ CLEAR (C24)".
2. Press the [YES] button. "Complete!" will be displayed momentarily and initial setting will be executed, after which "ADJ CLEAR" will be displayed.

## 8. RECORDING AND DISPLAYING THE IOP INFORMATION

The IOP data can be recorded in the non-volatile memory. The IOP value on the label of the optical pickup and the IOP value after the adjustment will be recorded. Recording these data eliminates the need to read the label on the optical pick-up.

### Recording Procedure :

1. Turn the [◀◀◀▶▶] knob to display "Iop Write" (C28), and press the [YES] button.
2. The display becomes Ref=@@.@ (@ is an arbitrary number) and the numbers which can be changed will blink.
3. Input the IOP value written on the optical pick-up.  
To select the number : Turn the [◀◀◀▶▶] knob.  
To select the digit : Press the [◀◀◀▶▶] knob
4. When the [YES] button is pressed, the display becomes "Measu=@@.@" (@ is an arbitrary number).
5. As the adjustment results are recorded for the 6 value. Leave it as it is and press the [YES] button.
6. "Complete!" will be displayed momentarily. The value will be recorded in the non-volatile memory and the display will become "Iop Write".

### Display Procedure :

1. Turn the [◀◀◀▶▶] knob to display "Iop Read"(C27).
2. "@@.#@##." is displayed and the recorded contents are displayed.  
@@.@ indicates the IOP value labeled on the pick-up.  
##.# indicates the IOP value after adjustment
3. To end, press the [◀◀◀▶▶] button or [MENU/NO] button to display "Iop Read".

## 9. TEMPERATURE COMPENSATION OFFSET ADJUSTMENT

Save the temperature data at that time in the non-volatile memory as 25 °C reference data.

### Note :

1. Usually, do not perform this adjustment.
2. Perform this adjustment in an ambient temperature of 22 °C to 28 °C. Perform it immediately after the power is turned on when the internal temperature of the unit is the same as the ambient temperature of 22 °C to 28 °C.
3. When D101 has been replaced, perform this adjustment after the temperature of this part has become the ambient temperature.

### Adjusting Procedure :

1. Turn the [◀◀◀▶▶] knob and display "TEMP ADJUST" (C09).
2. Press the [YES] button and select the "TEMP ADJUST" mode.
3. "TEMP = 00 [OK]" and the current temperature data will be displayed.
4. To save the data, press the [YES] button.  
When not saving the data, press the [MENU/NO] button.
5. When the [YES] button is pressed, "TEMP = 00 SAVE" will be displayed and turned back to "TEMP ADJUST" display then. When the [MENU/NO] button is pressed, "TEMP ADJUST" will be displayed immediately.


### Specified Value :

The "TEMP = 00" should be within "E0 - EF", "F0 - FF", "00 - 0F", "10 - 1F" and "20 - 2F".

## 10. LASER POWER ADJUSTMENT

Check the IOP value of the optical pick-up before adjustments.  
(Refer to 8. Recording and Displaying IOP Information)

### Connection :

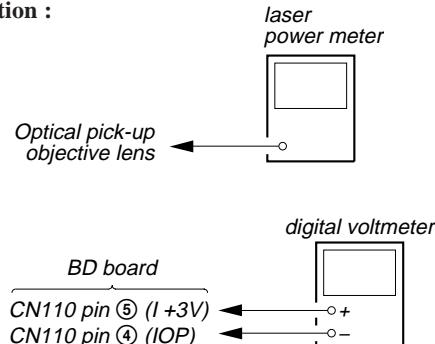

### Adjusting Procedure :

1. Set the laser power meter on the objective lens of the optical pick-up. (When it cannot be set properly, press the [◀◀] button or [▶▶] button to move the optical pick-up.)  
Connect the digital volt meter to CN110 pin ⑤ (I+3V) and CN110 pin ④ (IOP).
2. Turn the [◀◀◀▶▶] knob and display "LDPWR ADJUST" (C10).  
(Laser power : For adjustment)
3. Press the [YES] button once and display "LD 0.9 mW \$ 00".
4. Turn the [◀◀◀▶▶] knob so that the reading of the laser power meter becomes 0.85 to 0.91 mW. Press the [YES] button after setting the range knob of the laser power meter, and save the adjustment results. ("LD SAVE \$ 00" will be displayed for a moment.)
5. Then "LD 7.0 mW \$ 00" will be displayed.
6. Turn the [◀◀◀▶▶] knob so that the reading of the laser power meter becomes 6.9 to 7.1 mW, press the [YES] button and save it.

**Note:** Do not perform the emission with 7.0 mW more than 15 seconds continuously.


7. Then, turn the  knob and display "LDPWR CHECK" (C02).
8. Press the **[YES]** button once and display "LD 0.9 mW \$ 00". Check that the reading of the laser power meter become 0.85 to 0.91 mW.
9. Press the **[YES]** button once more and display "LD 7.0 mW \$ 00". Check that the reading the laser power meter and digital volt meter satisfy the specified value.  
Note down the digital voltmeter reading value.

#### Specification:

Laser power meter reading:  $7.0 \pm 0.2$  mW

Digital voltmeter reading : Optical pick-up displayed value  $\pm 10\%$

(Optical pick-up label)

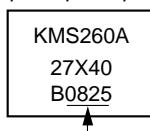

*IOP=82.5 mA in this case*

*IOP (mA) = Digital voltmeter reading (mV)/1 ( $\Omega$ )*


10. Press the **[MENU/NO]** button and display "LDPWR CHECK" and stop the laser emission.  
(The **[MENU/NO]** button is effective at all times to stop the laser emission.)
11. Turn the  knob to display "Iop Write"(C28).
12. Press the **[YES]** button. When the display becomes Ref=@@.@ (@ is an arbitrary number), press the **[YES]** button to display "Measu=@@.@" (@ is an arbitrary number).
13. The numbers which can be changed will blink. Input the Iop value noted down at step 9.  
To select the number : Turn the  knob.  
To select the digit : Press the  knob.
14. When the **[YES]** button is pressed, "Complete!" will be displayed momentarily. The value will be recorded in the non-volatile memory and the display will become "Iop Write".

**Note 1:** After step 4, each time the **[YES]** button is pressed, the display will be switched between "LD 0.7 mW \$ 00", "LD 6.2 mW \$ 00", and "LD Wp ホセイ \$ 00". Nothing needs to be performed here.


## 11. TRAVERSE ADJUSTMENT

**Note 1:** Data will be erased during MO reading if a recorded disc is used in this adjustment.

**Note 2:** If the traverse waveform is not clear, connect the oscilloscope as shown in the following figure so that it can be seen more clearly.

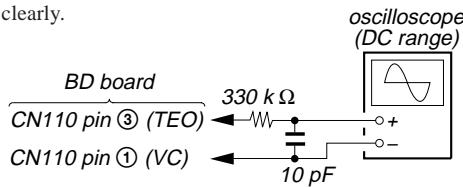

#### Connection :

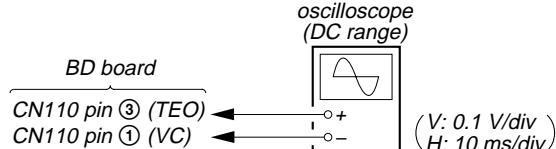


#### Adjusting Procedure :

1. Connect an oscilloscope to CN110 pin ③ (TEO) and CN110 pin ① (VC) of the BD board.
2. Load a disc (any available on the market). (Refer to Note 1)
3. Press the  button and move the optical pick-up outside the pit.
4. Turn the  knob and display "EF MO ADJUST" (C10).
5. Press the **[YES]** button and display "EFB = 00 MO-R". (Laser power READ power/Focus servo ON/tracking servo OFF/spindle (S) servo ON)
6. Turn the  knob so that the waveform of the oscilloscope becomes the specified value.  
(When the  knob is turned, the 00 of "EFB= 00" changes and the waveform changes.) In this adjustment, waveform varies at intervals of approx. 2%. Adjust the waveform so that the specified value is satisfied as much as possible.

(Read power traverse adjustment)

(Traverse Waveform)

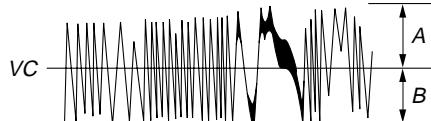


Specification A = B

7. Press the **[YES]** button and save the result of adjustment to the non-volatile memory ("EFB = 00 SAV" will be displayed for a moment. Then "EFB = 00 MO-W" will be displayed).


- Turn the **[◀▶]** knob so that the waveform of the oscilloscope becomes the specified value.  
(When the **[◀▶]** knob is turned, the **EFB** of "EFB-**EF**" changes and the waveform changes.) In this adjustment, waveform varies at intervals of approx. 2%. Adjust the waveform so that the specified value is satisfied as much as possible.  
(Write power traverse adjustment)

*(Traverse Waveform)*

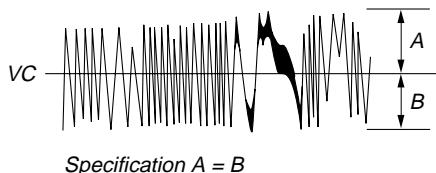


- Press the **[YES]** button, and save the adjustment results in the non-volatile memory. ("EFB = **EF** SAV" will be displayed for a moment.)
- "EFB = **EF** MO-P". will be displayed.  
The optical pick-up moves to the pit area automatically and servo is imposed.
- Turn the **[◀▶]** knob until the waveform of the oscilloscope moves closer to the specified value.  
In this adjustment, waveform varies at intervals of approx. 2%. Adjust the waveform so that the specified value is satisfied as much as possible.

*(Traverse Waveform)*

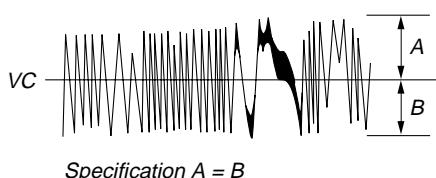

- Press the **[YES]** button, and save the adjustment results in the non-volatile memory. ("EFB = **EF** SAV" will be displayed for a moment.)  
Next "EF MO ADJUST" is displayed. The disc stops rotating automatically.
- Press the **[EJECT]** button and take out the disc.
- Load the check disc (MD) TDYS-1.
- Turn the **[◀▶]** knob and display "EF CD ADJUST" (C12).
- Press the **[YES]** button and display "EFB = **EF** CD". Servo is imposed automatically.
- Turn the **[◀▶]** knob so that the waveform of the oscilloscope moves closer to the specified value.  
In this adjustment, waveform varies at intervals of approx. 2%. Adjust the waveform so that the specified value is satisfied as much as possible.

*(Traverse Waveform)*

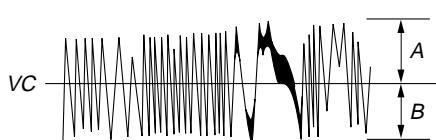

- Press the **[YES]** button, display "EFB = **EF** SAV" for a moment and save the adjustment results in the non-volatile memory.  
Next "EF CD ADJUST" will be displayed.
- Press the **[EJECT]** button and take out the disc.


## 12. FOCUS BIAS ADJUSTMENT

### Adjusting Procedure :

- Load the continuously-recorded disc. (Refer to "5. CREATING CONTINUOUSLY-RECORDED DISC")
- Turn the **[◀▶]** knob and display "CPLAY MODE" (C29).
- Press the **[YES]** button and display "CPLAY MID".
- Press the **[MENU/NO]** button when "C1 = **0000** AD = **00**" is displayed.
- Turn the **[◀▶]** knob and display "FBIAS ADJUST" (C13).
- Press the **[YES]** button and display "**0000/00 a = 00**".  
The first four digits indicate the C1 error rate, the two digits after [/] indicate ADER, and the 2 digits after [a =] indicate the focus bias value.
- Turn the **[◀▶]** knob in the clockwise direction and find the focus bias value at which the C1 error rate becomes about 200 (Refer to Note 2).
- Press the **[YES]** button and display "**0000/00 b = 00**".
- Turn the **[◀▶]** knob in the counterclockwise direction and find the focus bias value at which the C1 error rate becomes about 200.
- Press the **[YES]** button and display "**0000/00 c = 00**".
- Check that the C1 error rate is below 50 and ADER is 00. Then press the **[YES]** button.
- If the "(**00**)" in "**00 - 00 - 00 (00)**" is above 20, press the **[YES]** button.  
If below 20, press the **[MENU/NO]** button and repeat the adjustment from step 2.
- Press the **[EJECT]** button and take out the disc.

**Note 1:** The relation between the C1 error and focus bias is as shown in the following figure. Find points A and B in the following figure using the above adjustment. The focal point position C is automatically calculated from points A and B.

**Note 2:** As the C1 error rate changes, perform the adjustment using the average vale.

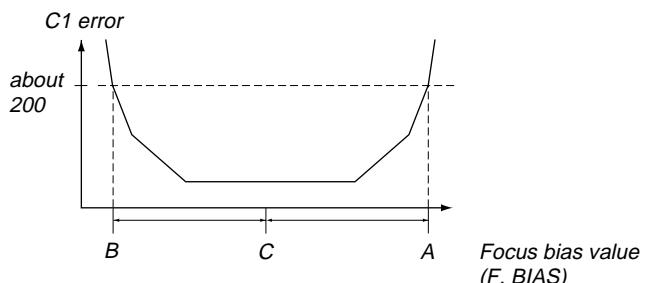

## 13. ERROR RATE CHECK

 
### 13-1. CD Error Rate Check

#### Checking Procedure :

1. Load the check disc (MD) TDYS-1.
2. Turn the  knob and display "CPLAY MODE" (C30).
3. Press the **[YES]** button twice and display "CPLAY MID".
4. The display changes to "C1 = 0000 AD = 00".
5. Check that the C1 error rate is below 20.
6. Press the **[MENU/NO]** button, stop playback, press the  button and take out the check disc.

### 13-2. MO Error Rate Check


#### Checking Procedure :

1. Load the test disc (MDW-74/AU-1).
2. Turn the  knob and display "CPLAY MODE" (C30).
3. Press the **[YES]** button and display "CPLAY MID".
4. The display changes to "C1 = 0000 AD = 00".
5. If the C1 error rate is below 50, check that ADER is 00.
6. Press the **[MENU/NO]** button, stop playback, press the  button and take out the test disc.

## 14. FOCUS BIAS CHECK

 Change the focus bias and check the focus tolerance amount.

#### Checking Procedure :

1. Load the continuously-recorded disc. (Refer to "5. CREATING CONTINUOUSLY-RECORDED DISC")
2. Turn the  knob and display "CPLAY MODE" (C30).
3. Press the **[YES]** button twice and display "CPLAY MID".
4. Press the **[MENU/NO]** button when "C1 = 0000 AD = 00" is displayed.
5. Turn the  knob and display "FBIAS CHECK" (C05).
6. Press the **[YES]** button and display "0000/00 c = 00".

The first four digits indicate the C1 error rate, the two digits after [/] indicate ADER, and the 2 digits after [c =] indicate the focus bias value.

Check that the C1 error is below 50 and ADER is below 2.

7. Press the **[YES]** button and display "0000/00 b = 00".
- Check that the C1 error is about 200 and ADER is below 2.
8. Press the **[YES]** button and display "0000/00 a = 00".
- Check that the C1 error is about 200 and ADER is below 2
9. Press the **[MENU/NO]** button, next press the  button and take out the disc.

**Note 1:** If the C1 error and ADER are above other than the specified value at points a (step 8. in the above) or b (step 7. in the above), the focus bias adjustment may not have been carried out properly. Adjust perform the beginning again.

## 15. AUTO GAIN CONTROL OUTPUT LEVEL ADJUSTMENT

Be sure to perform this adjustment when the pickup is replaced. If the adjustment results becomes "Adjust NG!", the pickup may be faulty or the servo system circuits may be abnormal.

### 15-1. CD Auto Gain Control Output Level Adjustment

#### Adjusting Procedure :

 
1. Insert the check disc (MD) TDYS-1.
2. Turn the  knob to display "AG Set (CD)" (C26).
3. When the **[YES]** button is pressed, the adjustment will be performed automatically.

"Complete!!" will then be displayed momentarily when the value is recorded in the non-volatile memory, after which the display changes to "AG Set (CD)".

4. Press the  button and take out the check disc.

### 15-2. MO Auto Gain Control Output Level Adjustment

#### Adjusting Procedure :


1. Insert the test disc (MDW-74/AU-1) for recording.
2. Turn the  knob to display "AG Set (MO)" (C25).
3. When the **[YES]** button is pressed, the adjustment will be performed automatically.

"Complete!!" will then be displayed momentarily when the value is recorded in the non-volatile memory, after which the display changes to "AG Set (MO)".


4. Press the  button and take out the test disc.

**Adjustment Location:**

– BD BOARD (Side A) –

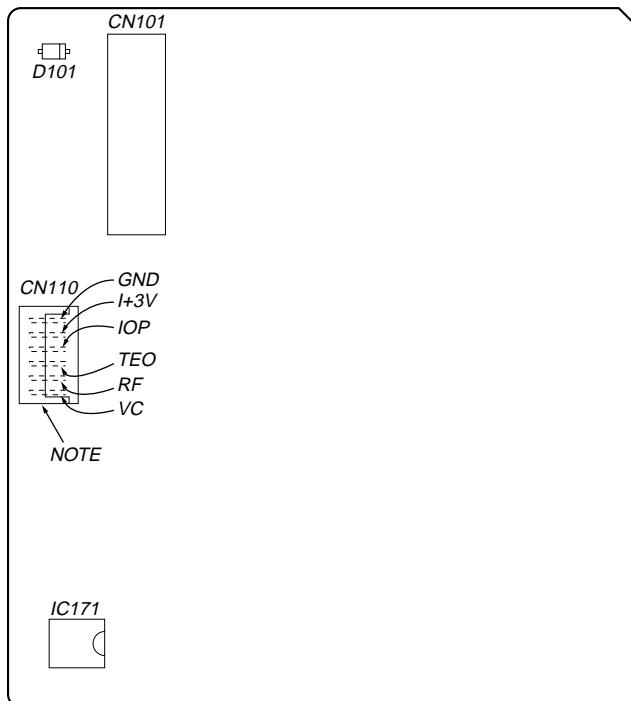

– BD BOARD (Side B) –

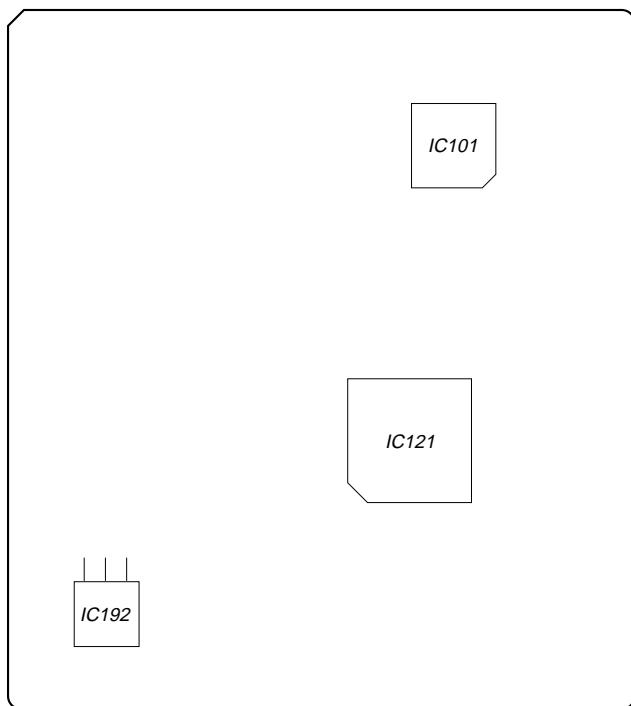

**Note:** It is useful to use the jig. for checking the waveform. (Refer to Servicing Notes on page 6)

## SECTION 6 DIAGRAMS

### 6-1. IC PIN FUNCTION DESCRIPTION

#### • BD BOARD IC101 CXA2523AR (RF AMP, FOCUS/TRACKING ERROR AMP)

Pin No.	Pin Name	I/O	Description
1	I	I	I-V converted RF signal I input from the optical pick-up block detector
2	J	I	I-V converted RF signal J input from the optical pick-up block detector
3	VC	O	Middle point voltage (+1.65V) generation output terminal
4 to 9	A to F	I	Signal input from the optical pick-up detector
10	PD	I	Light amount monitor input from the optical pick-up block laser diode
11	APC	O	Laser amplifier output terminal to the automatic power control circuit
12	APCREF	I	Reference voltage input terminal for setting laser power
13	GND	—	Ground terminal
14	TEMPI	I	Connected to the temperature sensor
15	TEMPR	O	Output terminal for a temperature sensor reference voltage
16	SWDT	I	Writing serial data input from the CXD2654R (IC121)
17	SCLK	I	Serial data transfer clock signal input from the CXD2654R (IC121)
18	XLAT	I	Serial data latch pulse signal input from the CXD2654R (IC121)
19	XSTBY	I	Standby signal input terminal “L”: standby (fixed at “H” in this set)
20	FOCNT	I	Center frequency control voltage input terminal of internal circuit (BPF22, BPF3T, EQ) input from the CXD2654R (IC121)
21	VREF	O	Reference voltage output terminal Not used (open)
22	EQADJ	I	Center frequency setting terminal for the internal circuit (EQ)
23	3TADJ	I	Center frequency setting terminal for the internal circuit (BPF3T)
24	VCC	—	Power supply terminal (+3.3V)
25	WBLADJ	I	Center frequency setting terminal for the internal circuit (BPF22)
26	TE	O	Tracking error signal output to the CXD2654R (IC121)
27	CSLED	I	Connected to the external capacitor for low-pass filter of the sled error signal
28	SE	O	Sled error signal output to the CXD2654R (IC121)
29	ADFM	O	FM signal output of the ADIP
30	ADIN	I	Receives a ADIP FM signal in AC coupling
31	ADAGC	I	Connected to the external capacitor for ADIP AGC
32	ADFG	O	ADIP duplex signal ( $22.05\text{ kHz} \pm 1\text{ kHz}$ ) output to the CXD2654R (IC121)
33	AUX	O	Auxiliary signal ( $I_3$ signal/temperature signal) output to the CXD2654R (IC121)
34	FE	O	Focus error signal output to the CXD2654R (IC121)
35	ABCD	O	Light amount signal (ABCD) output to the CXD2654R (IC121)
36	BOTM	O	Light amount signal (RF/ABCD) bottom hold output to the CXD2654R (IC121)
37	PEAK	O	Light amount signal (RF/ABCD) peak hold output to the CXD2654R (IC121)
38	RF	O	Playback EFM RF signal output to the CXD2654R (IC121)
39	RFAGC	I	Connected to the external capacitor for RF auto gain control circuit
40	AGCI	I	Receives a RF signal in AC coupling
41	COMPO	O	User comparator output terminal Not used (open)
42	COMPP	I	User comparator input terminal Not used (fixed at “L”)
43	ADDCC	I	Connected to the external capacitor for cutting the low band of the ADIP amplifier
44	OPO	O	User operational amplifier output terminal Not used (open)
45	OPN	I	User operational amplifier inversion input terminal Not used (fixed at “L”)
46	RFO	O	RF signal output terminal
47	MORFI	I	Receives a MO RF signal in AC coupling
48	MORFO	O	MO RF signal output terminal

• BD BOARD IC121 CXD2654R

(DIGITAL SIGNAL PROCESSOR, DIGITAL SERVO PROCESSOR, EFM/ACIRC ENCODER/DECODER,  
SHOCK PROOF MEMORY CONTROLLER, ATRAC ENCODER/DECODER)

Pin No.	Pin Name	I/O	Description
1	MNT0 (FOK)	O	Focus OK signal output to the system controller (IC501) “H” is output when focus is on (“L”: NG)
2	MNT1 (SHOCK)	O	Track jump detection signal output to the system controller (IC501)
3	MNT2 (XBUSY)	O	Busy monitor signal output to the system controller (IC501)
4	MNT3 (SLOCK)	O	Spindle servo lock status monitor signal output to the system controller (IC501)
5	SWDT	I	Writing serial data signal input from the system controller (IC501)
6	SCLK	I (S)	Serial data transfer clock signal input from the system controller (IC501)
7	XLAT	I (S)	Serial data latch pulse signal input from the system controller (IC501)
8	SRDT	O (3)	Reading serial data signal output to the system controller (IC501)
9	SENS	O (3)	Internal status (SENSE) output to the system controller (IC501)
10	<u>XRST</u>	I (S)	Reset signal input from the system controller (IC501) “L”: reset
11	SQSY	O	Subcode Q sync (SCOR) output to the system controller (IC501) “L” is output every 13.3 msec Almost all, “H” is output
12	DQSY	O	Digital In U-bit CD format subcode Q sync (SCOR) output to the system controller (IC501) “L” is output every 13.3 msec Almost all, “H” is output
13	RECP	I	Laser power selection signal input from the system controller (IC501) “L”: playback mode, “H”: recording mode
14	XINT	O	Interrupt status output to the system controller (IC501)
15	TX	I	Recording data output enable signal input from the system controller (IC501) Writing data transmission timing input (Also serves as the magnetic head on/off output)
16	OSCI	I	System clock signal (512Fs=22.5792 MHz) input terminal
17	OSCO	O	System clock signal (512Fs=22.5792 MHz) output terminal Not used (open)
18	XTSL	I	Input terminal for the system clock frequency setting “L”: 45.1584 MHz, “H”: 22.5792 MHz (fixed at “H” in this set)
19	DIN0	I	Digital audio signal input terminal when recording mode (for digital optical input) Not used
20	DIN1	I	Digital audio signal input terminal when recording mode (for digital optical input)
21	DOUT	O	Digital audio signal output terminal when playback mode (for digital optical output) Not used
22	DATAI	I	Serial data input terminal Not used (fixed at “L”)
23	LRCKI	I	L/R sampling clock signal (44.1 kHz) input terminal Not used (fixed at “L”)
24	XBCKI	I	Bit clock signal (2.8224 MHz) input terminal Not used (fixed at “L”)
25	ADDT	I	Recording data input from the A/D, D/A converter (IC301)
26	DADT	O	Playback data output to the A/D, D/A converter (IC301)
27	LRCK	O	L/R sampling clock signal (44.1 kHz) output to the A/D, D/A converter (IC301)
28	XBCK	O	Bit clock signal (2.8224 MHz) output to the A/D, D/A converter (IC301)
29	FS256	O	Clock signal (11.2896 MHz) output terminal Not used (open)
30	DVDD	—	Power supply terminal (+3.3V) (digital system)
31 to 34	A03 to A00	O	Address signal output to the D-RAM (IC124)
35	A10	O	Address signal output to the external D-RAM Not used (open)
36 to 40	A04 to A08	O	Address signal output to the D-RAM (IC124)
41	A11	O	Address signal output to the external D-RAM Not used (open)
42	DVSS	—	Ground terminal (digital system)
43	<u>XOE</u>	O	Output enable signal output to the D-RAM (IC124) “L” active
44	<u>XCAS</u>	O	Column address strobe signal output to the D-RAM (IC124) “L” active

\* I (S) stands for schmitt input, I (A) for analog input, O (3) for 3-state output, and O (A) for analog output in the column I/O.

Pin No.	Pin Name	I/O	Description
45	A09	O	Address signal output to the D-RAM (IC124)
46	<u>XRAS</u>	O	Row address strobe signal output to the D-RAM (IC124) “L” active
47	<u>XWE</u>	O	Write enable signal output to the D-RAM (IC124) “L” active
48	D1	I/O	Two-way data bus with the D-RAM (IC124)
49	D0	I/O	
50	D2	I/O	
51	D3	I/O	
52	MVCI	I (S)	Digital in PLL oscillation input from the external VCO Not used (fixed at “L”)
53	ASYO	O	Playback EFM full-swing output terminal
54	ASYI	I (A)	Playback EFM asymmetry comparator voltage input terminal
55	AVDD	—	Power supply terminal (+3.3V) (analog system)
56	BIAS	I (A)	Playback EFM asymmetry circuit constant current input terminal
57	RFI	I (A)	Playback EFM RF signal input from the CXA2523AR (IC101)
58	AVSS	—	Ground terminal (analog system)
59	PCO	O (3)	Phase comparison output for master clock of the recording/playback EFM master PLL
60	FILI	I (A)	Filter input for master clock of the recording/playback master PLL
61	FILO	O (A)	Filter output for master clock of the recording/playback master PLL
62	CLTV	I (A)	Internal VCO control voltage input of the recording/playback master PLL
63	PEAK	I (A)	Light amount signal (RF/ABCD) peak hold input from the CXA2523AR (IC101)
64	BOTM	I (A)	Light amount signal (RF/ABCD) bottom hold input from the CXA2523AR (IC101)
65	ABCD	I (A)	Light amount signal (ABCD) input from the CXA2523AR (IC101)
66	FE	I (A)	Focus error signal input from the CXA2523AR (IC101)
67	AUX1	I (A)	Auxiliary signal ( $I_3$ signal/temperature signal) input from the CXA2523AR (IC101)
68	VC	I (A)	Middle point voltage (+1.65V) input from the CXA2523AR (IC101)
69	ADIO	O (A)	Monitor output of the A/D converter input signal Not used (open)
70	AVDD	—	Power supply terminal (+3.3V) (analog system)
71	ADRT	I (A)	A/D converter operational range upper limit voltage input terminal (fixed at “H” in this set)
72	ADRB	I (A)	A/D converter operational range lower limit voltage input terminal (fixed at “L” in this set)
73	AVSS	—	Ground terminal (analog system)
74	SE	I (A)	Sled error signal input from the CXA2523AR (IC101)
75	TE	I (A)	Tracking error signal input from the CXA2523AR (IC101)
76	DCHG	I (A)	Connected to the +3.3V power supply
77	APC	I (A)	Error signal input for the laser automatic power control Not used (fixed at “H”)
78	ADFG	I (S)	ADIP duplex FM signal ( $22.05\text{ kHz} \pm 1\text{ kHz}$ ) input from the CXA2523AR (IC101)
79	F0CNT	O	Filter f0 control signal output to the CXA2523AR (IC101)
80	XLRF	O	Serial data latch pulse signal output to the CXA2523AR (IC101)
81	CKRF	O	Serial data transfer clock signal output to the CXA2523AR (IC101)
82	DTRF	O	Writing serial data output to the CXA2523AR (IC101)
83	APCREF	O	Control signal output to the reference voltage generator circuit for the laser automatic power control
84	LDDR	O	PWM signal output for the laser automatic power control Not used (open)
85	TRDR	O	Tracking servo drive PWM signal (−) output to the BH6511FS (IC152)
86	TFDR	O	Tracking servo drive PWM signal (+) output to the BH6511FS (IC152)
87	DVDD	—	Power supply terminal (+3.3V) (digital system)
88	FFDR	O	Focus servo drive PWM signal (+) output to the BH6511FS (IC152)
89	FRDR	O	Focus servo drive PWM signal (−) output to the BH6511FS (IC152)


\* I (S) stands for schmitt input, I (A) for analog input, O (3) for 3-state output, and O (A) for analog output in the column I/O.

Pin No.	Pin Name	I/O	Description
90	FS4	O	Clock signal (176.4 kHz) output terminal (X'tal system) Not used (open)
91	SRDR	O	Sled servo drive PWM signal (-) output to the BH6511FS (IC152)
92	SFDR	O	Sled servo drive PWM signal (+) output to the BH6511FS (IC152)
93	SPRD	O	Spindle servo drive PWM signal (-) output to the BH6511FS (IC152)
94	SPFD	O	Spindle servo drive PWM signal (+) output to the BH6511FS (IC152)
95	FGIN	I (S)	Input terminal for the test (fixed at "L")
96	TEST1	I	
97	TEST2	I	
98	TEST3	I	
99	DVSS	—	Ground terminal (digital system)
100	EFMO	O	EFM signal output terminal when recording mode

\* I (S) stands for schmitt input, I (A) for analog input, O (3) for 3-state output, and O (A) for analog output in the column I/O.

• MAIN BOARD IC501 M30620MC-400FP (SYSTEM CONTROLLER)

Pin No.	Pin Name	I/O	Description
1, 2	NC	O	Not used (open)
3	C1	O	Monitor output terminal for the test C1 error rate is output when test mode
4	ADER	O	Monitor output terminal for the test ADER is output when test mode
5	SQSY	I	Subcode Q sync (SCOR) input from the CXD2654R (IC121) “L” is input every 13.3 msec Almost all, “H” is input
6	RMC	I	Remote control signal input from the remote control receiver (IC781)
7	A1 IN	I	Sircs remote control signal input of the CONTROL A1 Not used
8	BYTE	I	External data bus line byte selection signal input “L”: 16 bit, “H”: 8 bit (fixed at “L”)
9	CNVSS	—	Ground terminal
10	XT-IN	I	Sub system clock input terminal (32.768 kHz) Not used (fixed at “L”)
11	XT-OUT	O	Sub system clock output terminal (32.768 kHz) Not used (open)
12	<u>S.RST</u>	I	System reset signal input from the reset signal generator (IC406) “L”: reset For several hundreds msec. after the power supply rises, “L” is input, then it changes to “H”
13	XOUT	O	Main system clock output terminal (10 MHz)
14	GND	—	Ground terminal
15	XIN	I	Main system clock input terminal (10 MHz)
16	+3.3V	—	Power supply terminal (+3.3V)
17	NMI	I	Non-maskable interrupt input terminal (fixed at “H” in this set)
18	DQSY	I	Digital In U-bit CD format subcode Q sync (SCOR) input from the CXD2654R (IC121) “L” is input every 13.3 msec Almost all, “H” is input
19	P.DOWN	I	Power down detection signal input terminal “L”: power down, normally: “H”
20	KEYBOARD CLK	I	Not used (open)
21	KEYBOARD DATA	I	Not used (open)
22	BEEP OUT	O	Beep sound drive signal output terminal
23	XINT	I	Interrupt status input from the CXD2654R (IC121)
24 to 27	NC	O	Not used (open)
28	L3-CLOCK	O	Serial data transfer clock signal output to the A/D, D/A converter (IC301)
29	NC	O	Not used (open)
30	L3-DATA	O	Serial data output to the A/D, D/A converter (IC301)
31	SWDT	O	Writing data output to the CXD2654R (IC121)
32	SRDT	I	Reading data input from the CXD2654R (IC121)
33	SCLK	O	Serial clock signal output to the CXD2654R (IC121)
34	FLCS	O	Chip select signal output to the FL/LED driver (IC761)
35	FLDATA	O	Serial data output to the FL/LED driver (IC761)
36	NC	O	Not used (open)
37	FLCLK	O	Serial data transfer clock signal output to the FL/LED driver (IC761)
38 to 41	NC	O	Not used (open)
42	JOG1	I	JOG dial pulse input from the rotary encoder (S713  (B phase input))
43	JOG0	I	JOG dial pulse input from the rotary encoder (S713  (A phase input))
44	NC	O	Not used (open)
45	A1 OUT	O	Sircs remote control signal output of the CONTROL A1 Not used
46	NC	O	Not used (open)
47	L3-MODE	O	L3 mode control signal output to the A/D, D/A converter (IC301)
48	<u>DA RST</u>	O	Reset signal output for the A/D, D/A converter “L”: reset Not used (open)
49	MUTE	O	Audio line muting on/off control signal output terminal “L”: line muting on
50	STB	O	Relay drive signal output for the power on/off “L”: standby mode, “H”: relay on

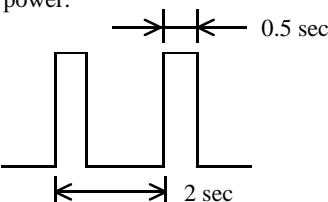
Pin No.	Pin Name	I/O	Description
51	CHACK IN	I	Detection input from the disc chucking-in detect switch “L”: chucking Not used (fixed at “H”)
52	NC	O	Not used (open)
53	PACK-OUT	I	Detection input from the loading-out detect switch (S602) “L” at a load-out position, others: “H”
54	LDIN	O	Motor control signal output to the loading motor driver (IC441) “L” active *1
55	LDOUT	O	Motor control signal output to the loading motor driver (IC441) “L” active *1
56	LD-LOW	O	Loading motor drive voltage control signal output for the loading motor driver (IC441) “H” active
57, 58	NC	O	Not used (open)
59	REC-P	I	Detection input from the recording position detect switch (S601) “L” active
60	PB-P	I	Detection input from the playback position detect switch (S604) “L” active
61	REC/PB	O	Not used (open)
62	+3.3V	—	Power supply terminal (+3.3V)
63	NC	O	Not used (open)
64	GND	—	Ground terminal
65	SDA	I/O	Two-way data bus with the EEPROM (IC171)
66	MNT3 (SLOCK)	I	Spindle servo lock status monitor signal input from the CXD2654R (IC121)
67	WR-PWR	O	Laser power select signal output to the CXD2654R (IC121) and HF module switch circuit “L”: playback mode, “H”: recording mode
68	PROTECT	I	Rec-proof claw detect input from the protect detect switch (S102) “H”: write protect
69	REFLECT	I	Detection input from the disc reflection rate detect switch (S102) “L”: high reflection rate disc, “H”: low reflection rate disc
70	LDON	O	Laser diode on/off control signal output to the automatic power control circuit “H”: laser on
71	SENS	I	Internal status (SENSE) input from the CXD2654R (IC121)
72	MNT1 (SHOCK)	I	Track jump detection signal input from the CXD2654R (IC121)
73	<u>DIG-RST</u>	O	Reset signal output to the CXD2654R (IC121) and BH6511FS (IC152) “L”: reset
74	MNT2 (XBUSY)	I	Busy signal input from the CXD2654R (IC121)
75	XLATCH	O	Serial data latch pulse signal output to the CXD2654R (IC121)
76	MOD	O	Laser modulation select signal output to the HF module switch circuit Playback power: “H”, Stop: “L”, Recording power:  0.5 sec 2 sec
77	LIMIT-IN	I	Detection input from the sled limit-in detect switch (S101) The optical pick-up is inner position when “L”
78	MNT0 (FOK)	I	Focus OK signal input from the CXD2654R (IC121) “H” is input when focus is on (“L”: NG)
79	SCL	O	Clock signal output to the EEPROM (IC171)

\*1 Loading motor (M103) control


Mode Terminal	LOADING	EJECT	BRAKE	RUN IDLE
LDIN (pin 54)	“L”	“H”	“L”	“H”
LDOUT (pin 55)	“H”	“L”	“L”	“H”

Pin No.	Pin Name	I/O	Description
80	SCTX	O	Recording data output enable signal output to the CXD2654R (IC121) and overwrite head driver (IC181) Writing data transmission timing output (Also serves as the magnetic head on/off output)
81	CLOCK SET0	I	Destination setting terminal (US and Canadian models: fixed at “L”, AEP, UK and E models: fixed at “H”)
82	CLOCK SET1	I	Destination setting terminal (US and Canadian models: fixed at “H”, AEP, UK and E models: fixed at “L”)
83	LED0	O	LED drive signal output of the ● indicator (D741) “L”: LED on
84	LED1	O	LED drive signal output of the ▶ indicator (D742) “L”: LED on
85	OPT SEL0	O	Not used (open)
86	OPT SEL1	O	Not used (open)
87	MODEL SEL0	I	Setting terminal for the model (fixed at “L” in this set)
88	MODEL SEL1	I	Setting terminal for the model (Not used (open))
89	<u>REC</u>	O	Not used (open)
90	BEEP SW	I	BEEP switch (S851) input terminal “L”: beep off, “H”: beep on
91	NC	O	Not used (open)
92	SOURCE	I	INPUT switch (S731) input terminal (A/D input) “L”: digital input, “H”: analog input
93	KEY3	I	Key input terminal (A/D input) Not used (fixed at “H”)
94	KEY2	I	Key input terminal (A/D input) S721 to S726 (EJECT ▲, PLAY MODE, REPEAT, SCROLL, LEVEL/DISPLAY/CHAR, I/∅ keys input)
95	KEY1	I	Key input terminal (A/D input) S711 to S714 (MENU/NO, YES, PUSH ENTER, CLEAR keys input)
96	AVSS	—	Ground terminal
97	KEY0	I	Key input terminal (A/D input) S701 to S706 (●, ■, ▶▶, ◀◀, □, ▶ keys input)
98	VREF	I	Reference voltage (+3.3V) input terminal (for A/D converter)
99	+3.3V	—	Power supply terminal (+3.3V) (for analog system )
100	MONO/ST	I	Recording mode switch input terminal “L”: mono, “H”: stereo Not used (open)


## 6-2. BLOCK DIAGRAM – SERVO Section –

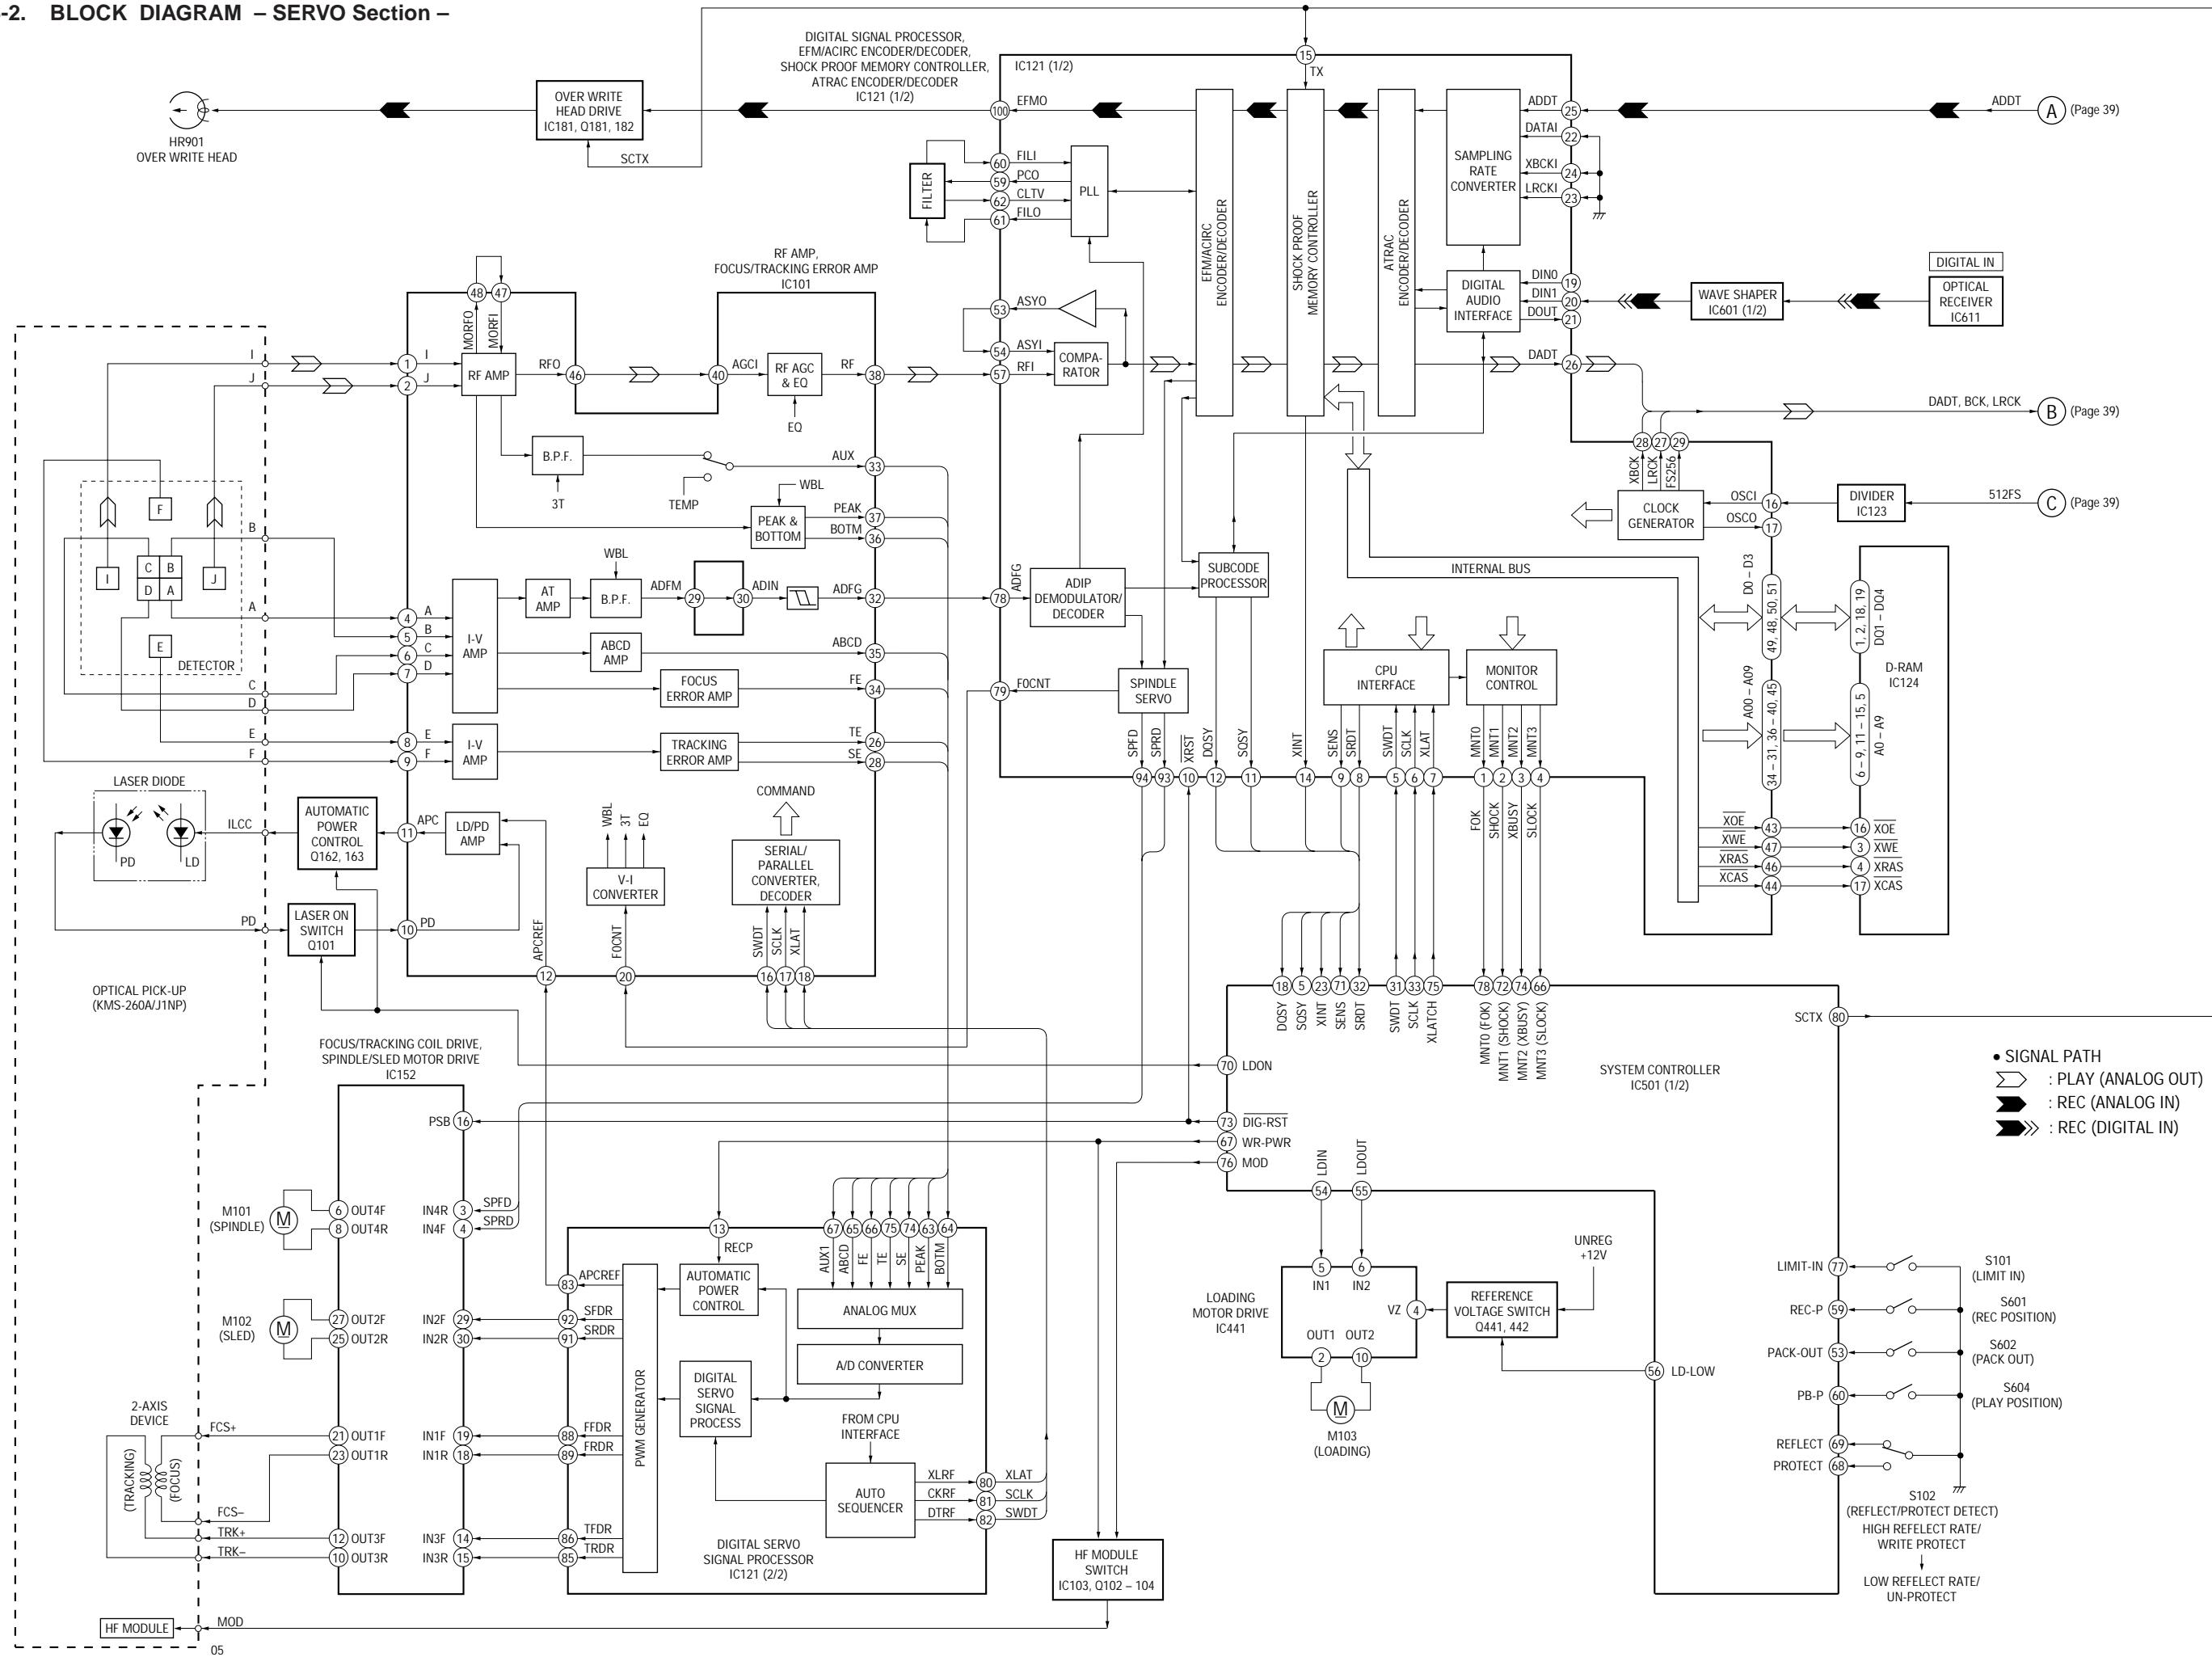

## 6-3. BLOCK DIAGRAM – MAIN Section –

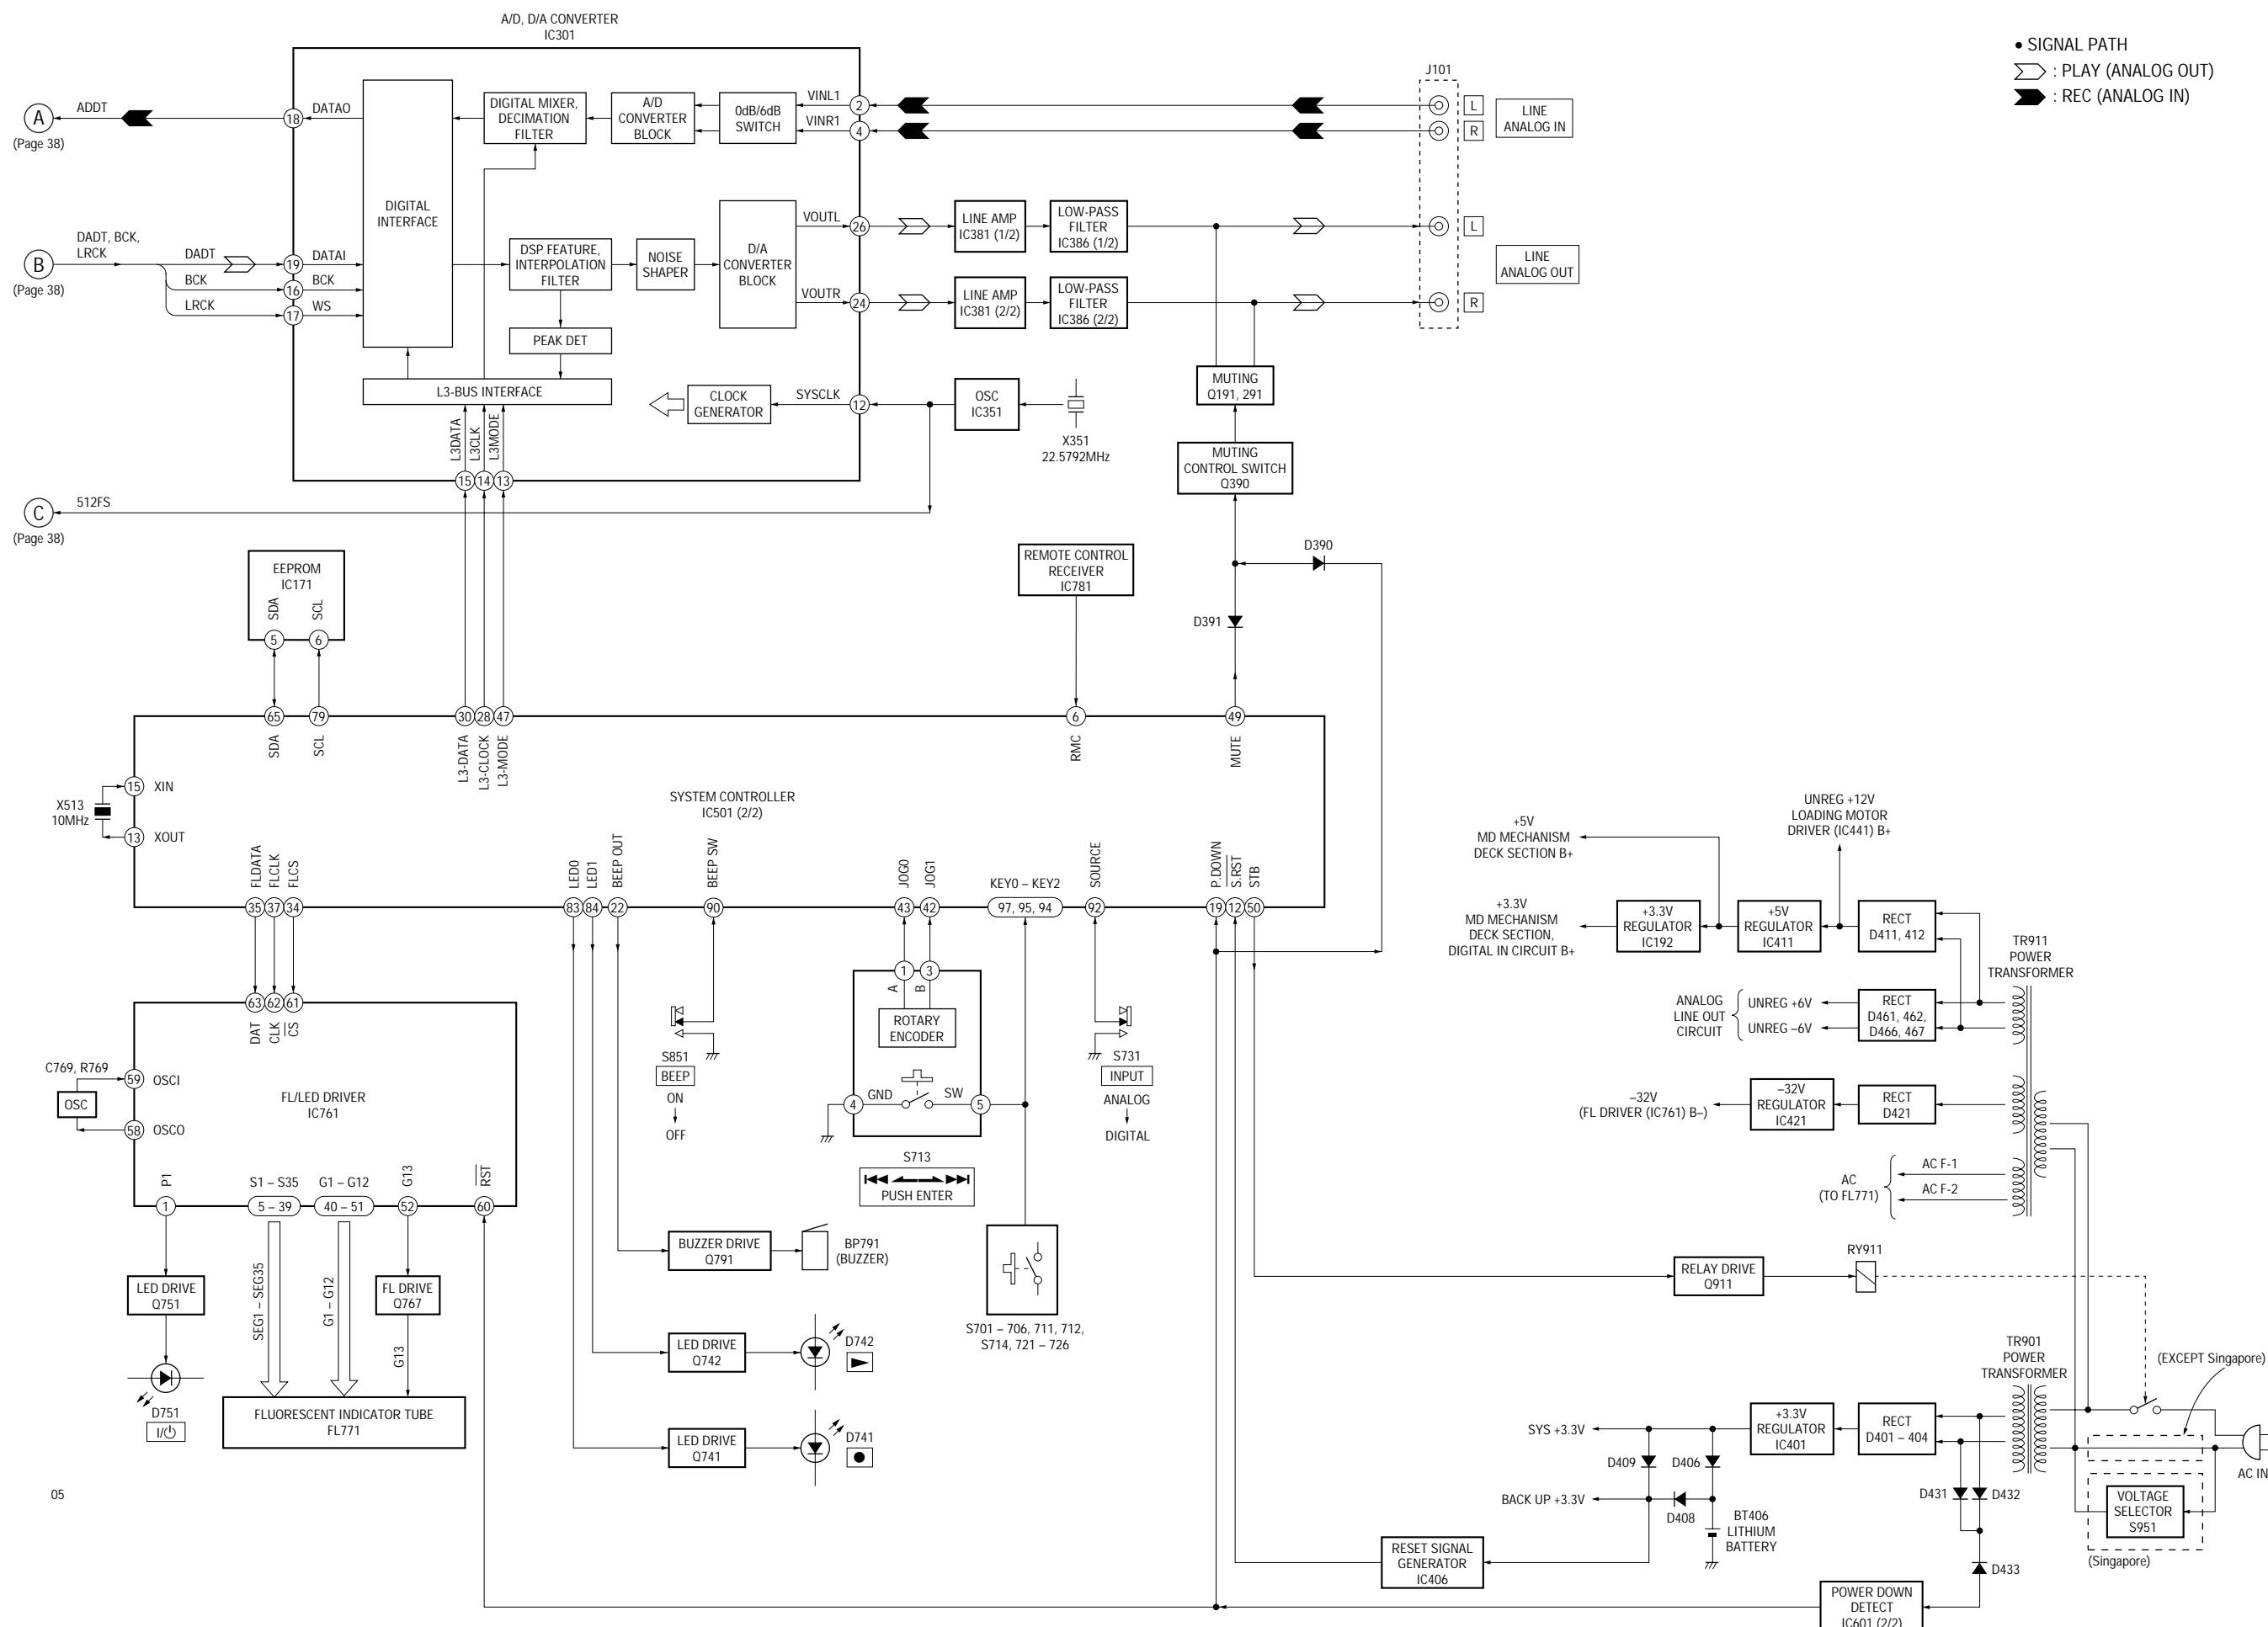

• Circuit Boards Location

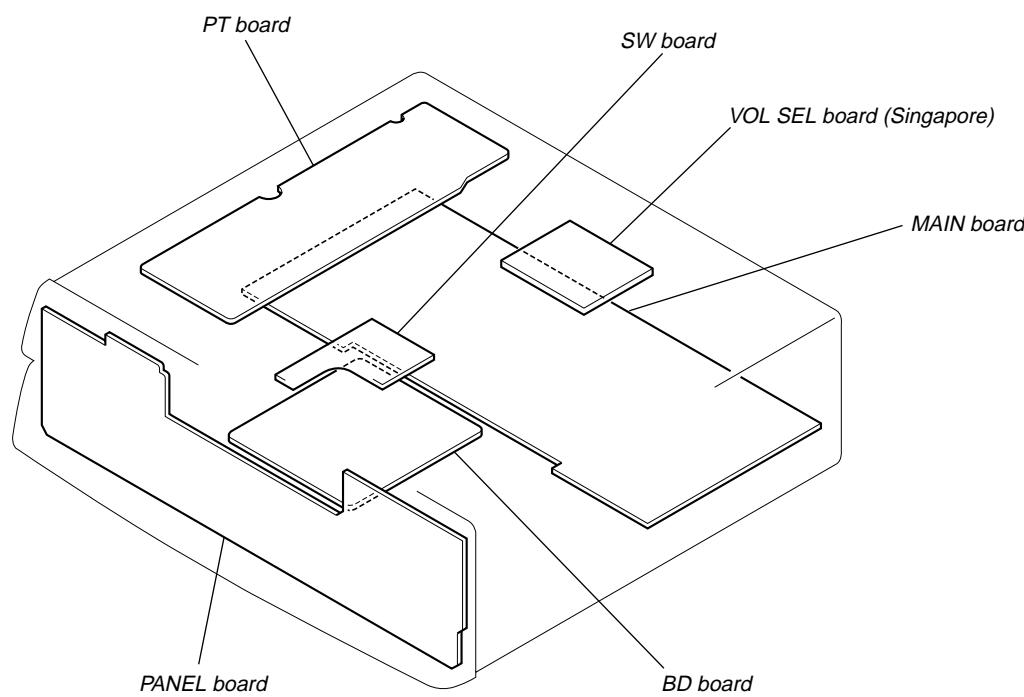

**6-4. NOTE FOR PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS**

 
**Note on Printed Wiring Board:**

- : parts extracted from the component side.
- : parts extracted from the conductor side.
- : parts mounted on the conductor side.
- : Through hole.
- : Pattern from the side which enables seeing.

**Caution:**

Pattern face side: Parts on the pattern face side seen from (Side B)  
Parts face side: Parts on the parts face side seen from (Side A)

- Indication of transistor.



These are omitted.

- Abbreviation

AR	: Argentine model
AUS	: Australian model
CND	: Canadian model
HK	: Hong Kong model
SP	: Singapore model

**Note on Schematic Diagram:**

- All capacitors are in  $\mu\text{F}$  unless otherwise noted.  $\text{pF}$ :  $\mu\mu\text{F}$  50 WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in  $\Omega$  and  $1/4\text{W}$  or less unless otherwise specified.
- : indicates tolerance.
- : internal component.
- : panel designation.

**Note:**

The components identified by mark or dotted line with mark are critical for safety.  
Replace only with part number specified.


**Note:**

Les composants identifiés par une marque sont critiques pour la sécurité.  
Ne les remplacer que par une pièce portant le numéro spécifié.

- : B+ Line.
- : B- Line.
- Voltages and waveforms are dc with respect to ground in playback mode.
- Voltages are taken with a VOM (Input impedance  $10\text{ M}\Omega$ ). Voltage variations may be noted due to normal production tolerances.
- Waveforms are taken with a oscilloscope. Voltage variations may be noted due to normal production tolerances.
- Circled numbers refer to waveforms.
- Signal path.
  - : PLAY (ANALOG OUT)
  - : REC (ANALOG IN)
  - : REC (DIGITAL IN)
- Abbreviation
 

AR	: Argentine model
AUS	: Australian model
CND	: Canadian model
HK	: Hong Kong model
SP	: Singapore model

**6-5. PRINTED WIRING BOARD – BD Board – • See page 41 for Circuit Boards Location.**

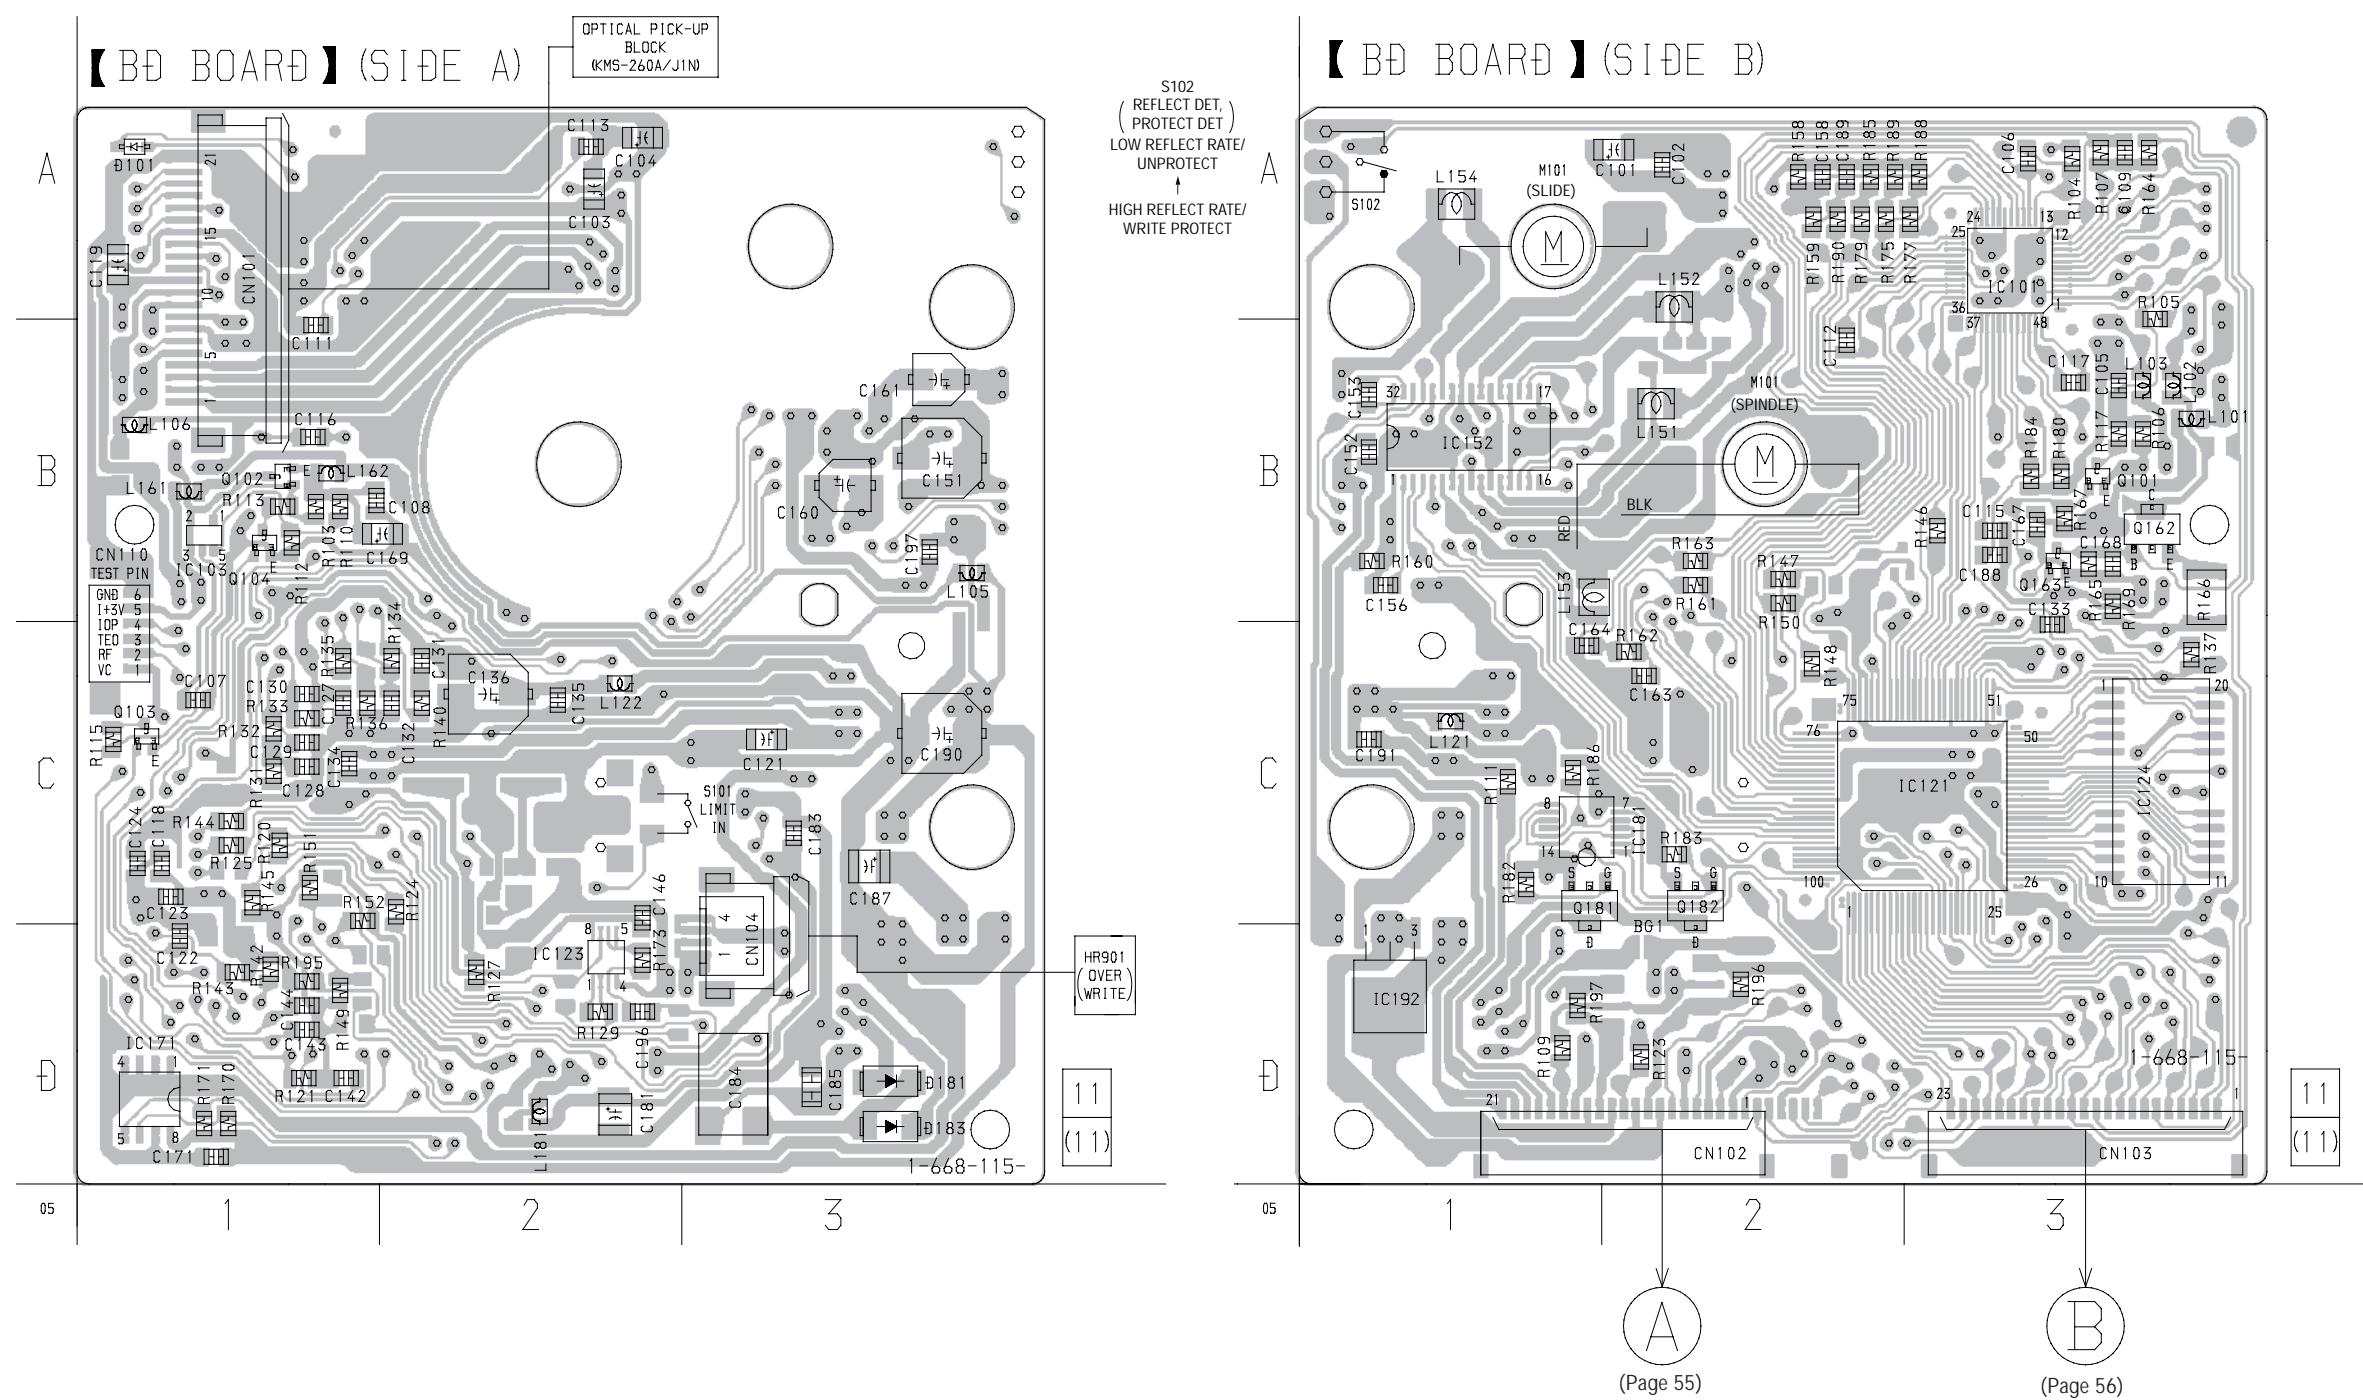


• Semiconductor Location

Ref. No.	Location
D101	A-1
D181	D-3
D183	D-3
IC103	B-1
IC123	D-2
IC171	D-1
Q102	B-1
Q103	C-1
Q104	B-1


• Semiconductor Location

Ref. No.	Location
IC101	A-3
IC121	C-3
IC124	C-3
IC152	B-1
IC181	C-1
IC192	D-1
Q101	B-3
Q162	B-3
Q163	B-3
Q181	C-1
Q182	C-2

6-6. SCHEMATIC DIAGRAM – BD Board (1/2) – • See page 65 for Waveforms. • See page 50 for IC Block Diagrams.

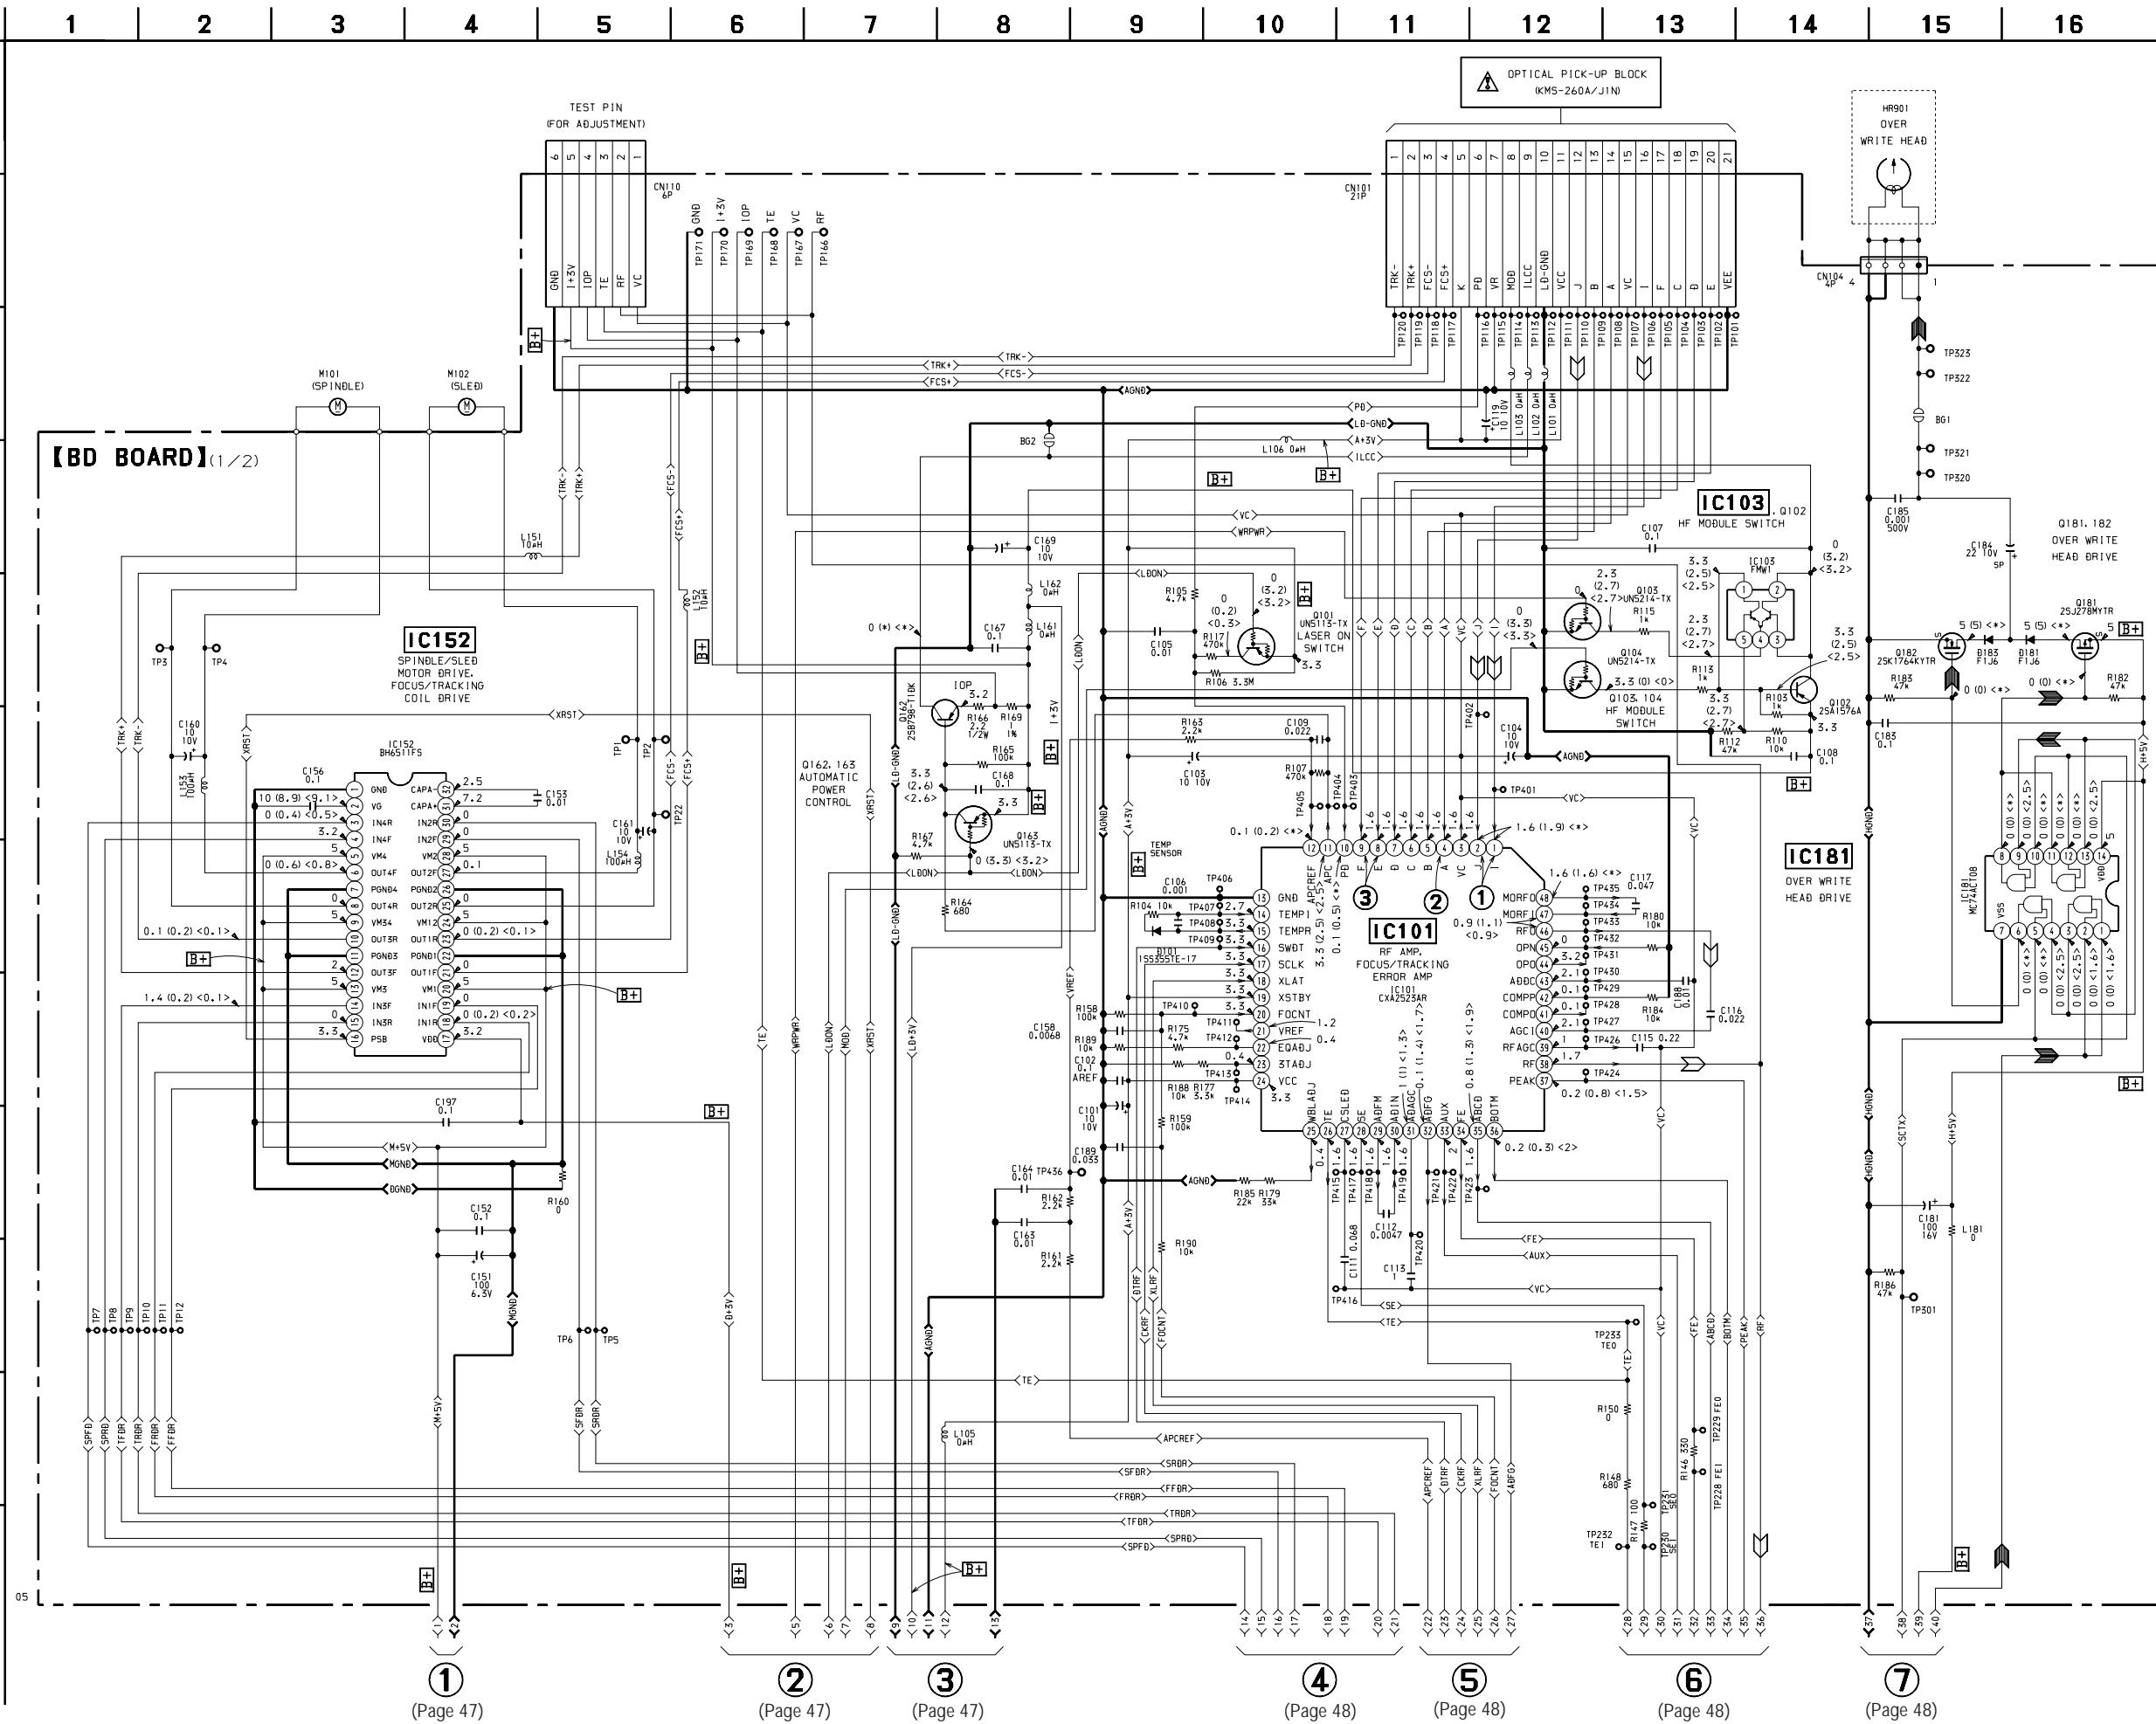

## 6-7. SCHEMATIC DIAGRAM – BD Board (2/2) – • See page 65 for Waveforms. • See page 51 for IC Block Diagram.

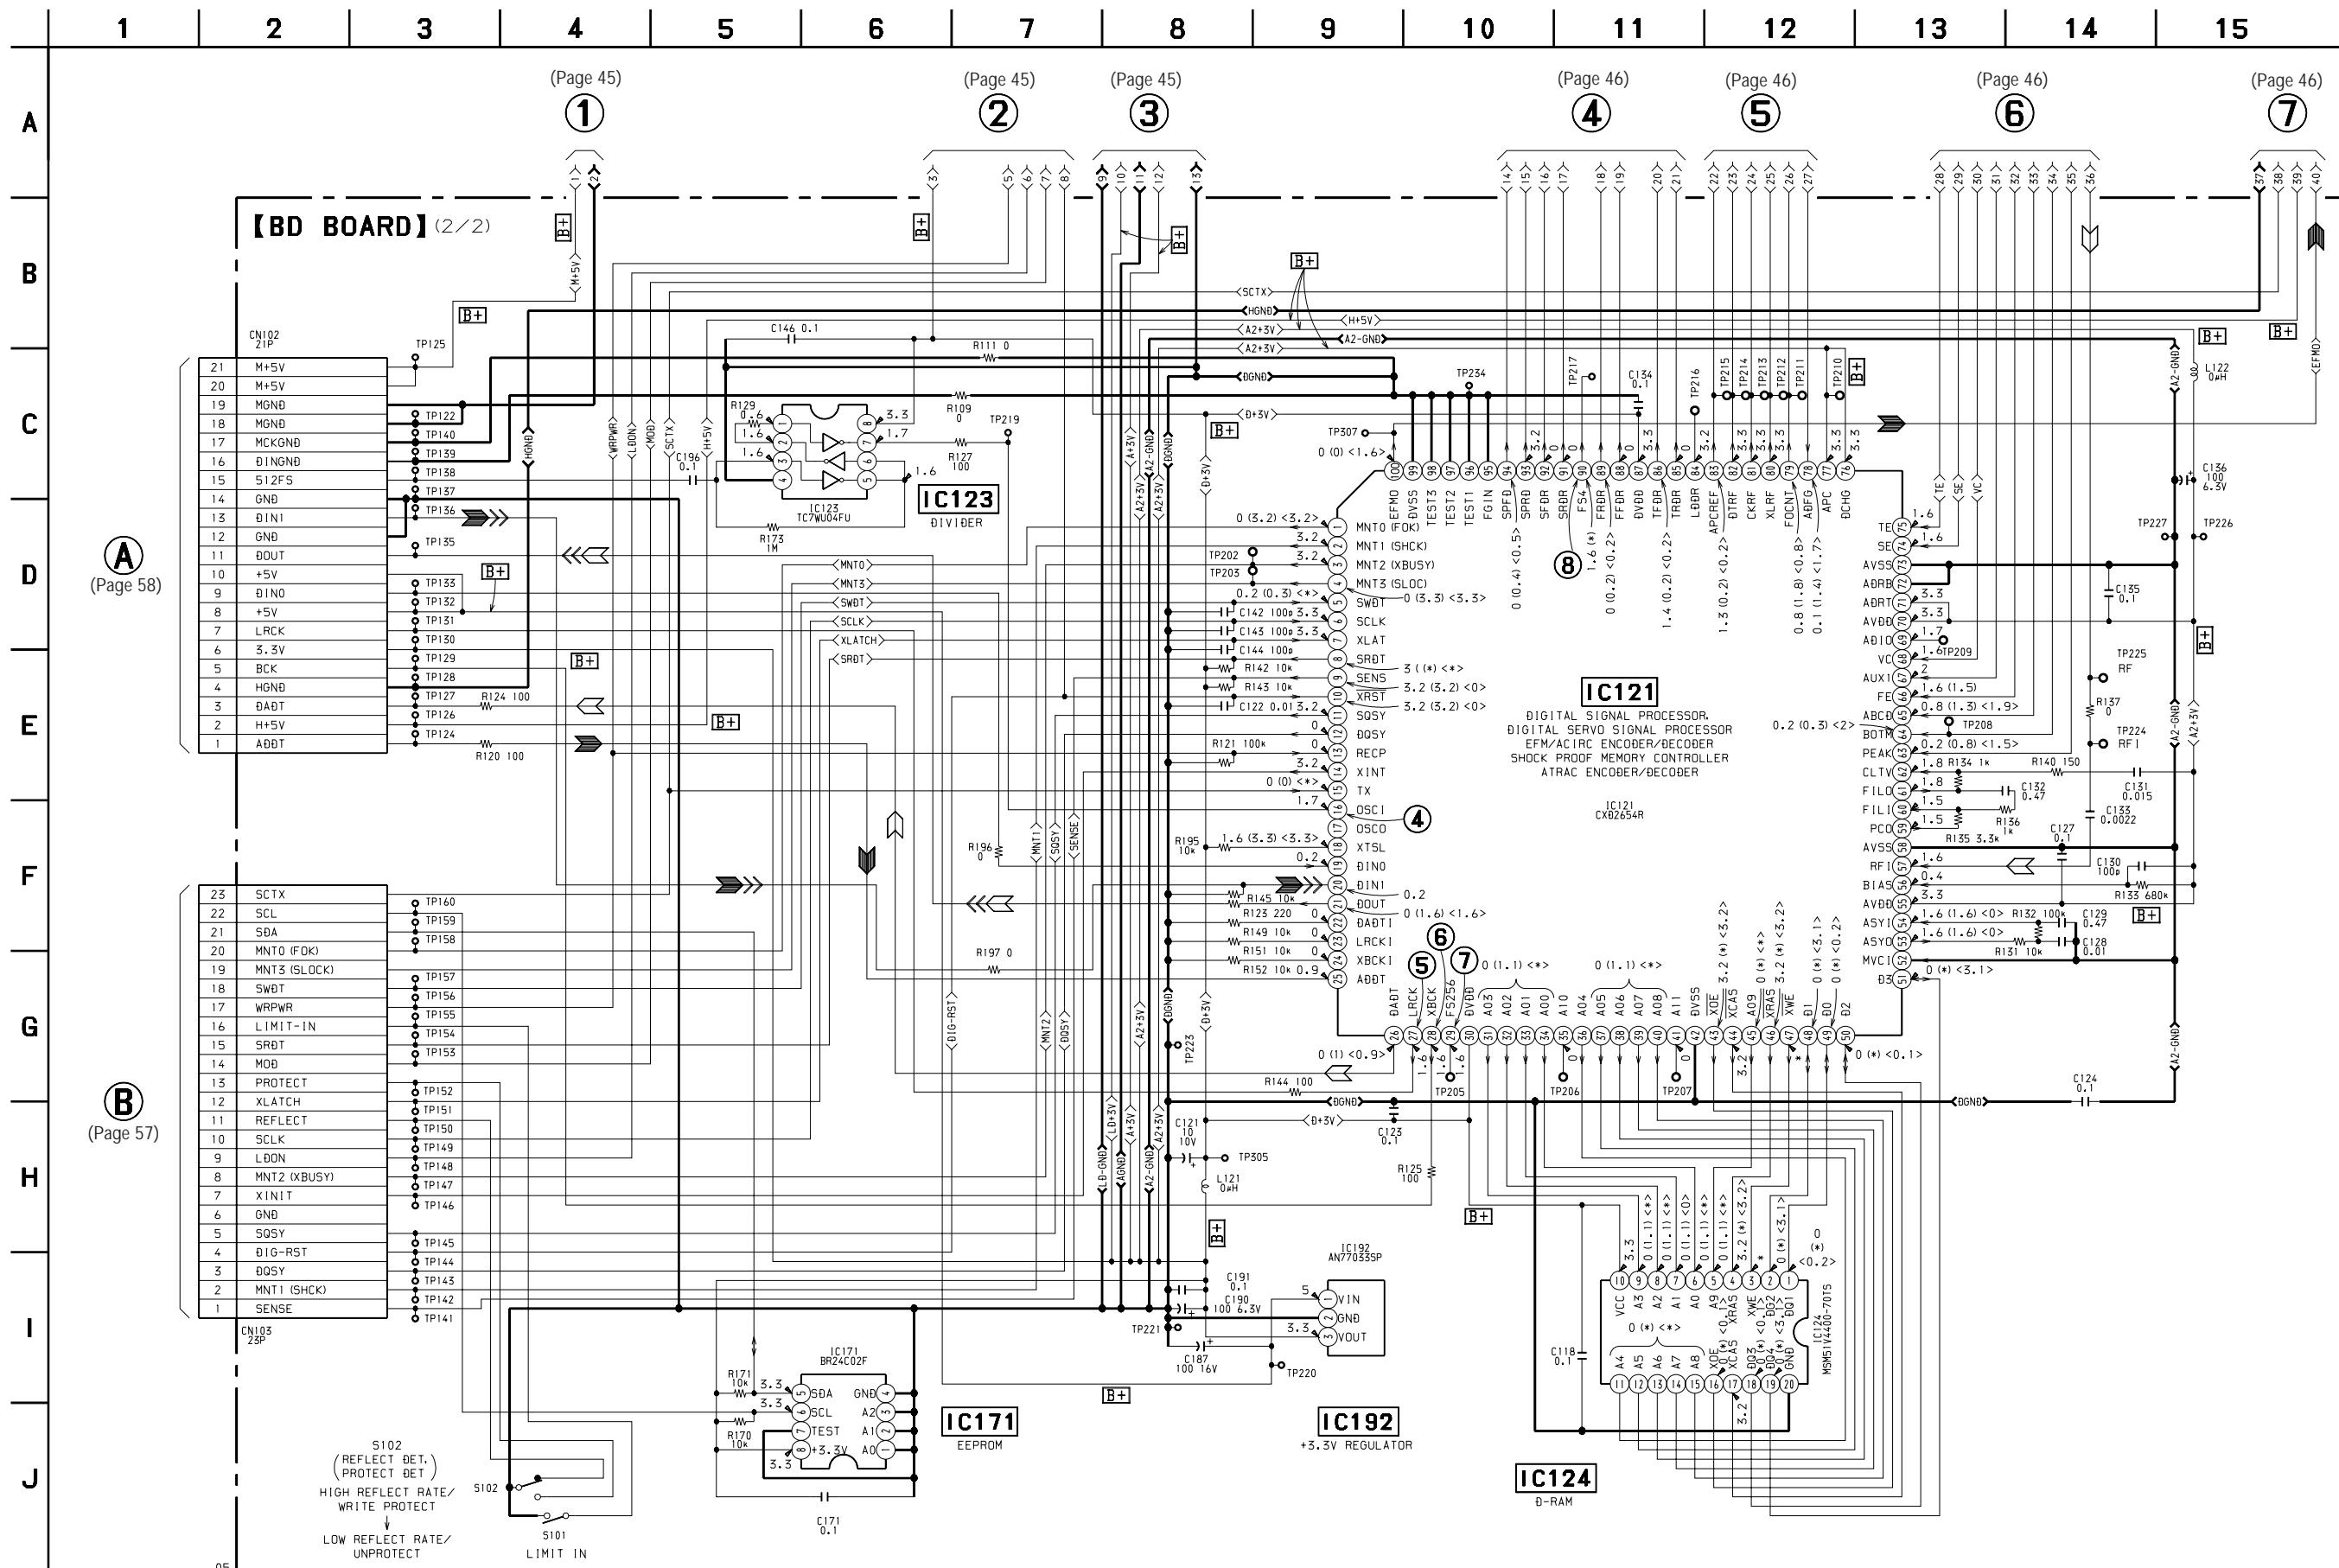

The components identified by mark  $\triangle$  or dotted line with mark  $\triangle$  are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque  $\triangle$  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

• Voltages and waveforms are dc with respect to ground under no-signal conditions.


no mark : STOP

( ) : PLAY

< > : REC


\* : Impossible to measure

## 6-8. SCHEMATIC DIAGRAM – SW Board –

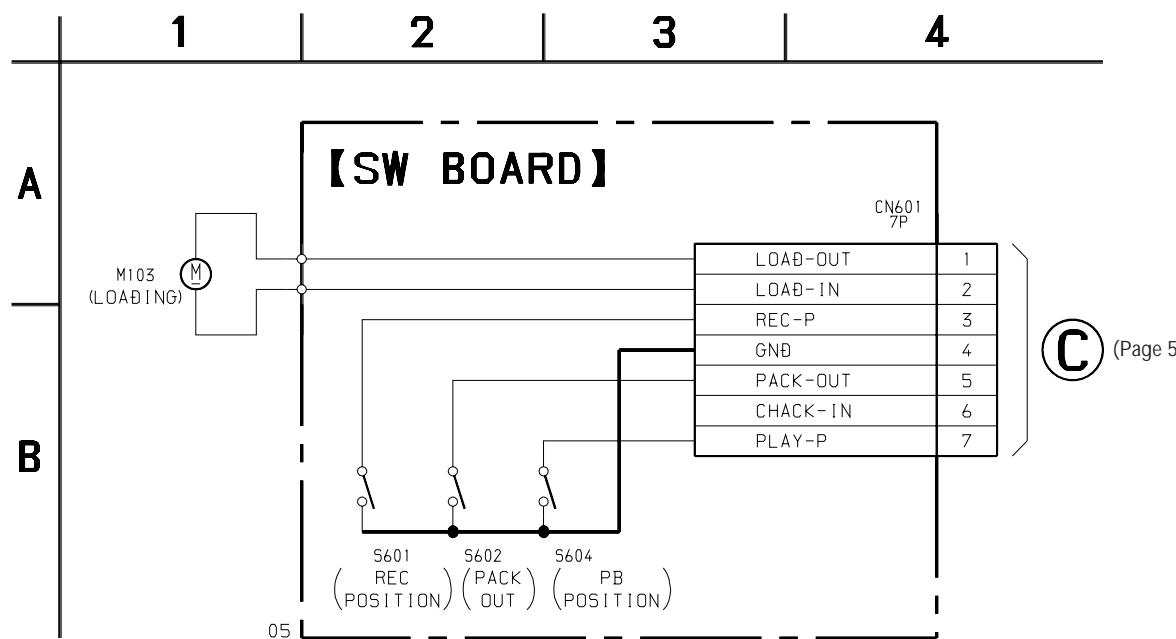


- IC Block Diagrams
- BD Board -







IC101 CXA2523AR

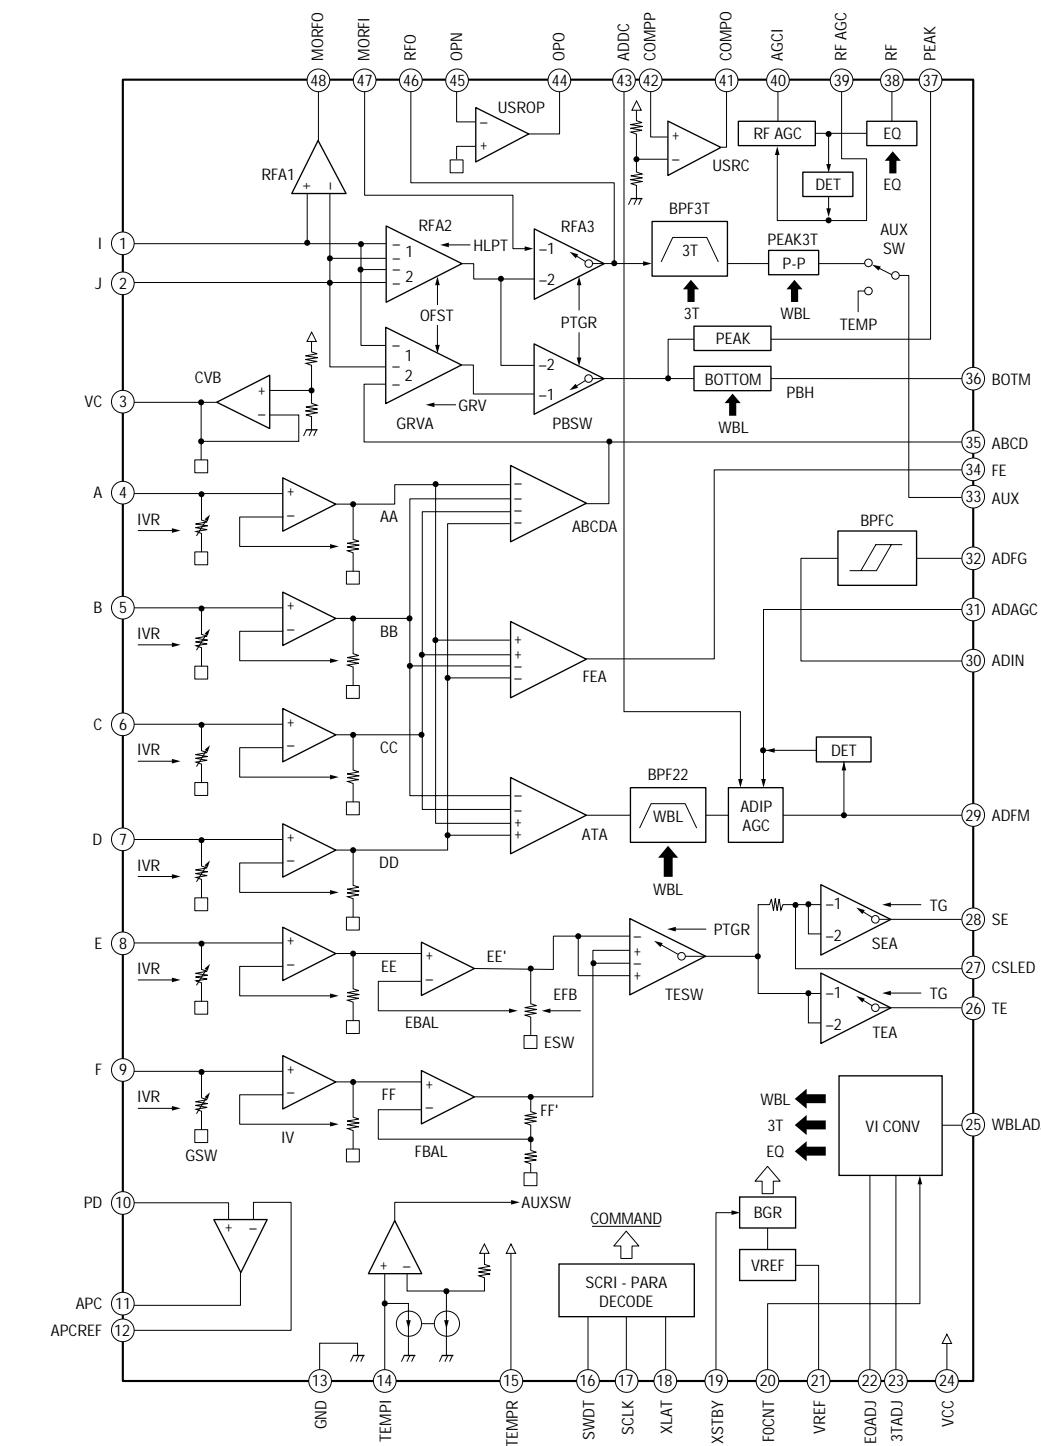



## 6-9. PRINTED WIRING BOARD – SW Board –

• See page 41 for Circuit Boards Location.

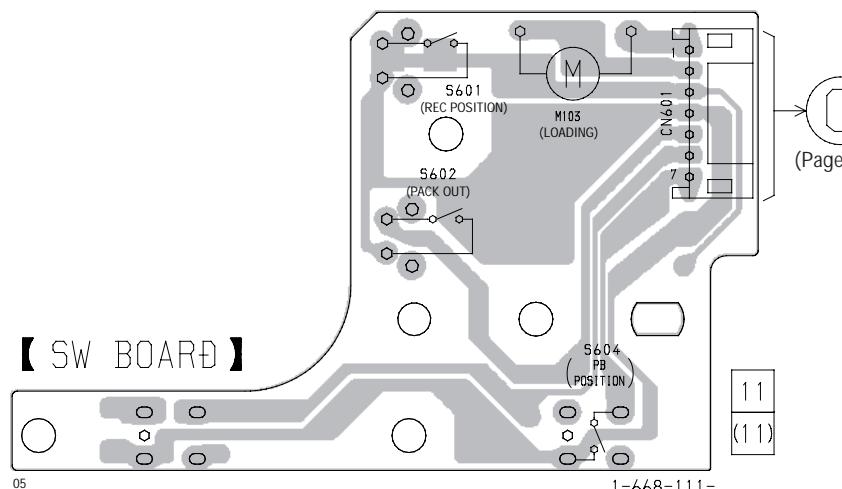


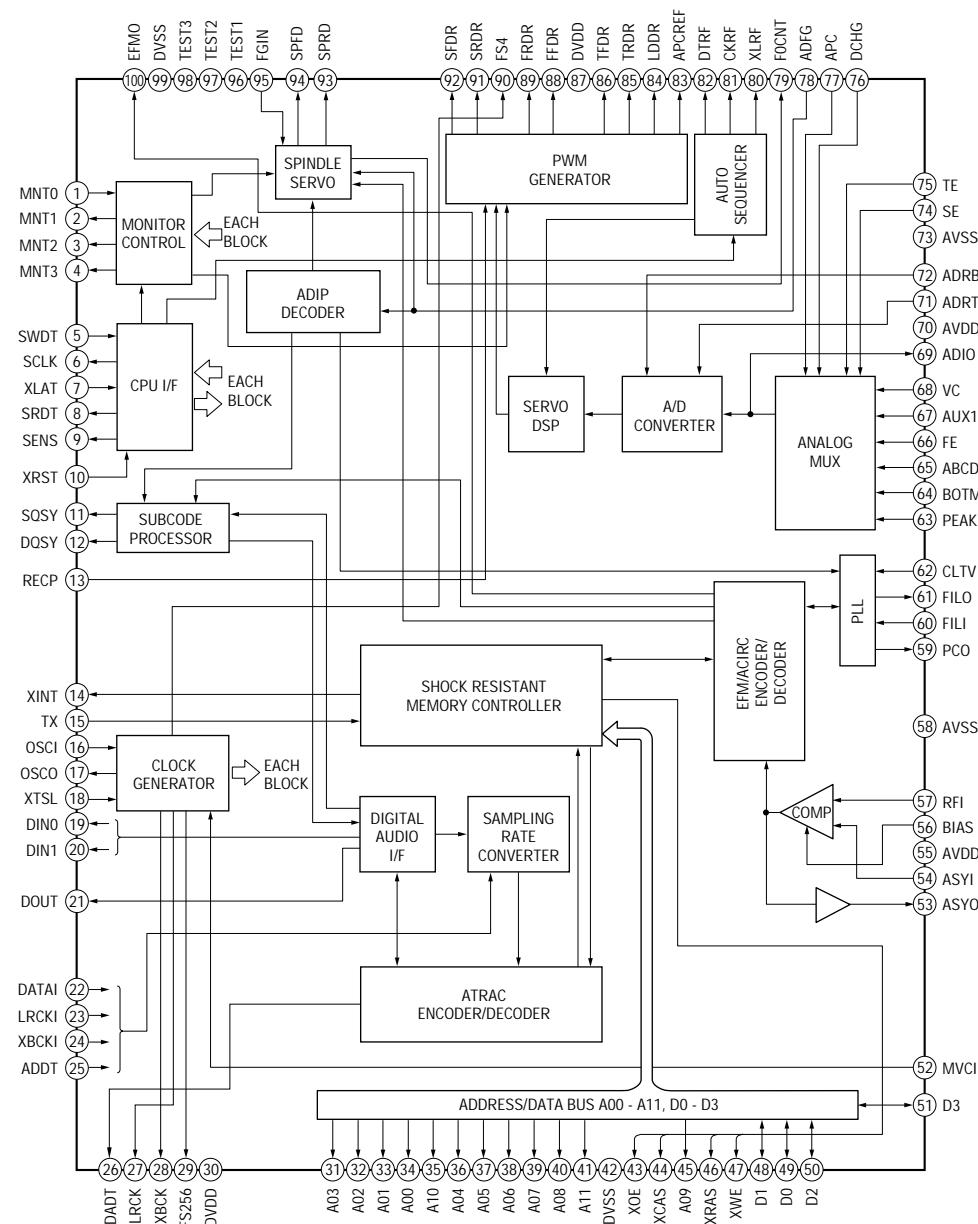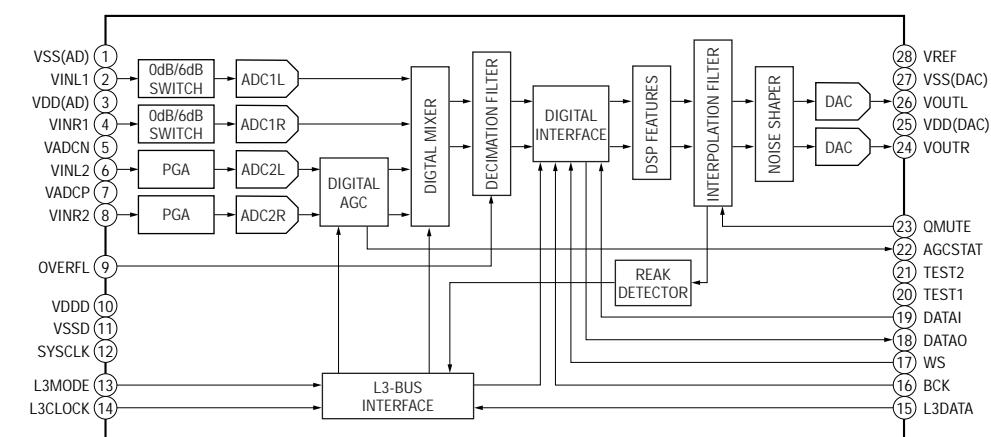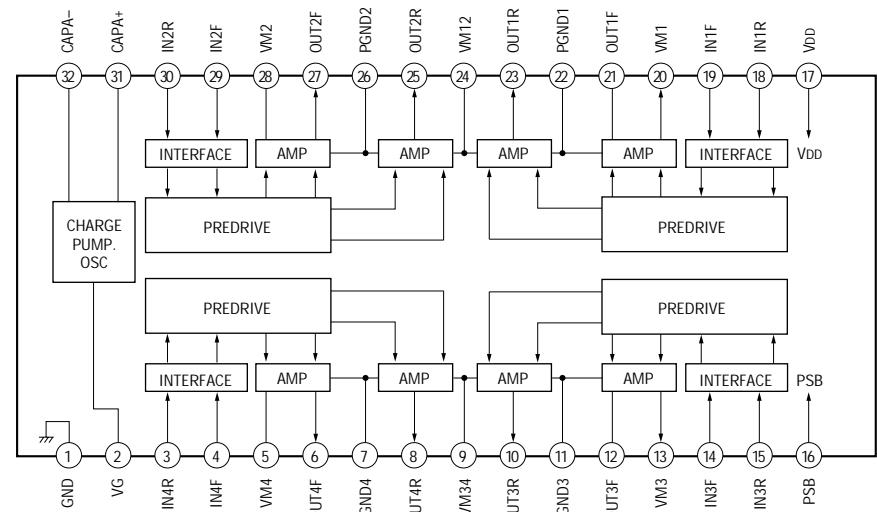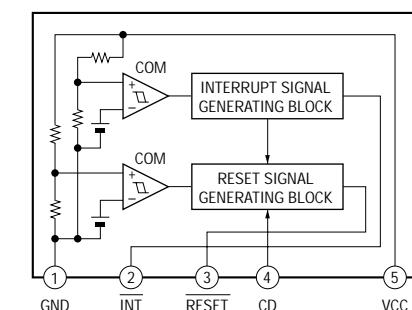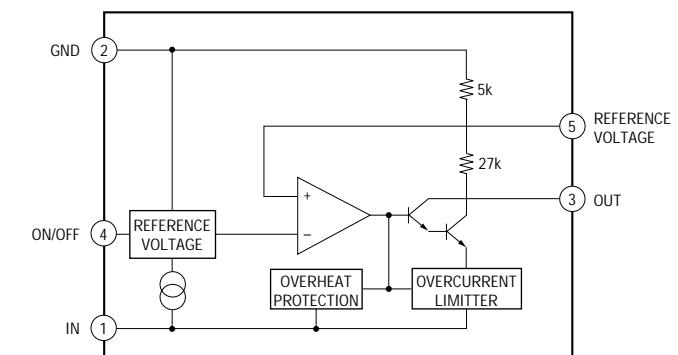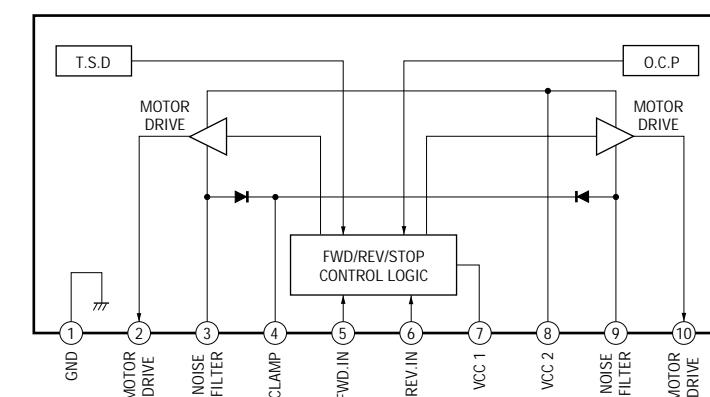**IC121 CXD2654R****- MAIN Board -****IC301 μDA1341TS****IC152 BH6511FS-E2****IC406 M62016L****IC421 M5293L****IC441 LB1641**

## 6-10. PRINTED WIRING BOARDS – PT/VOL SEL Boards – • See page 41 for Circuit Boards Location.

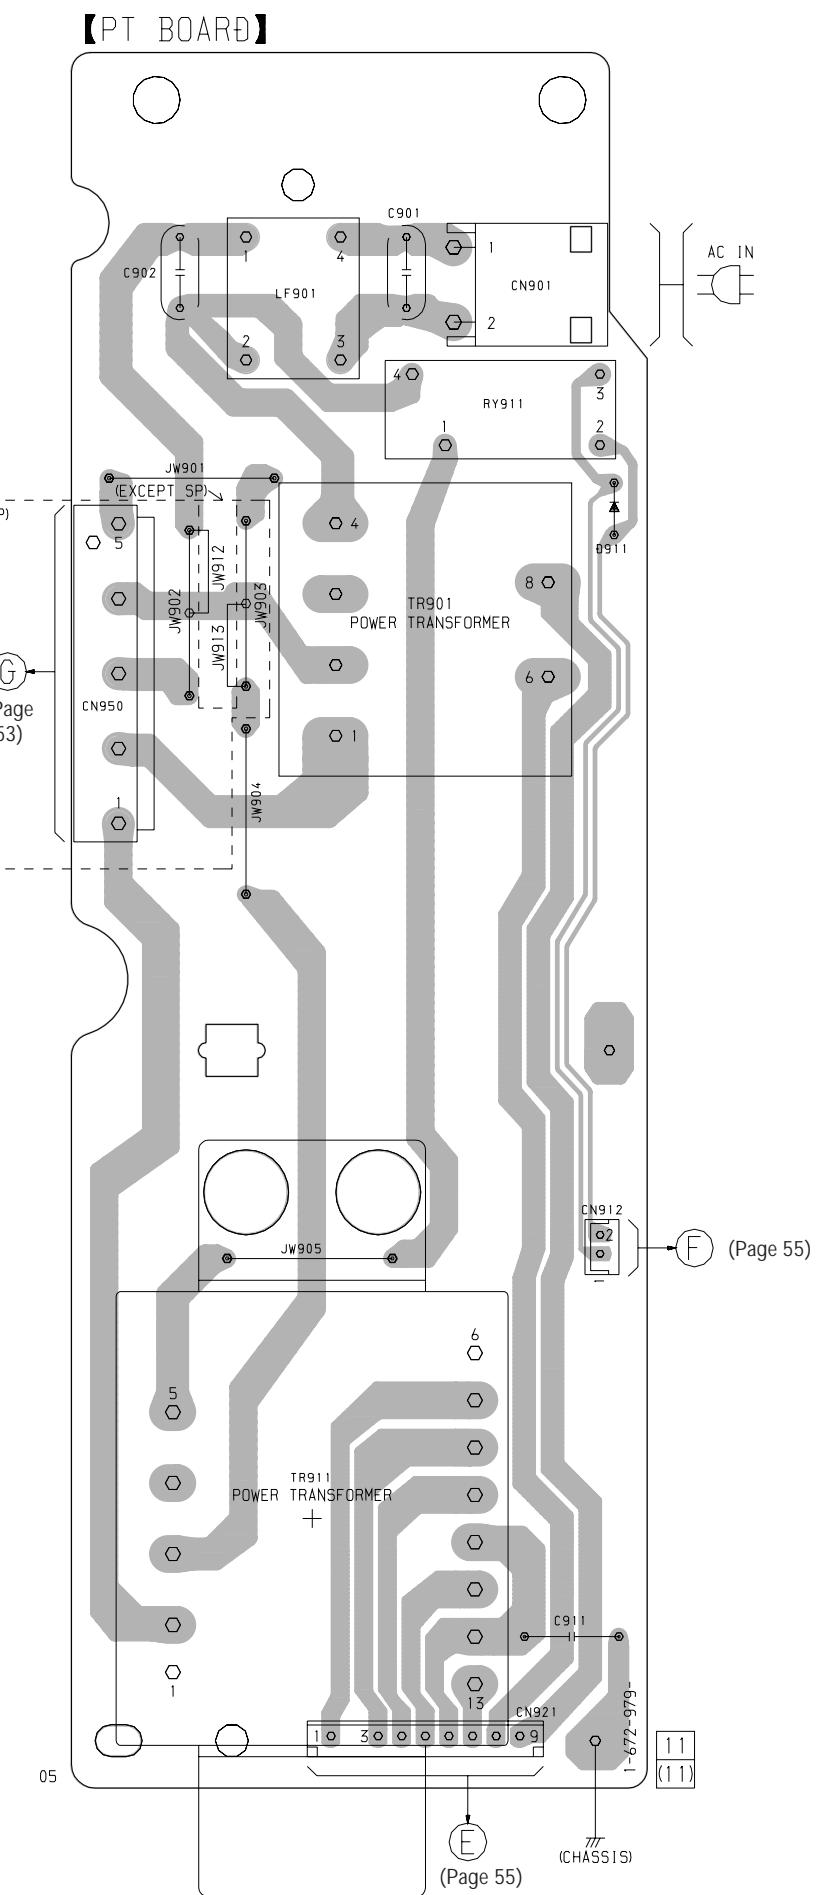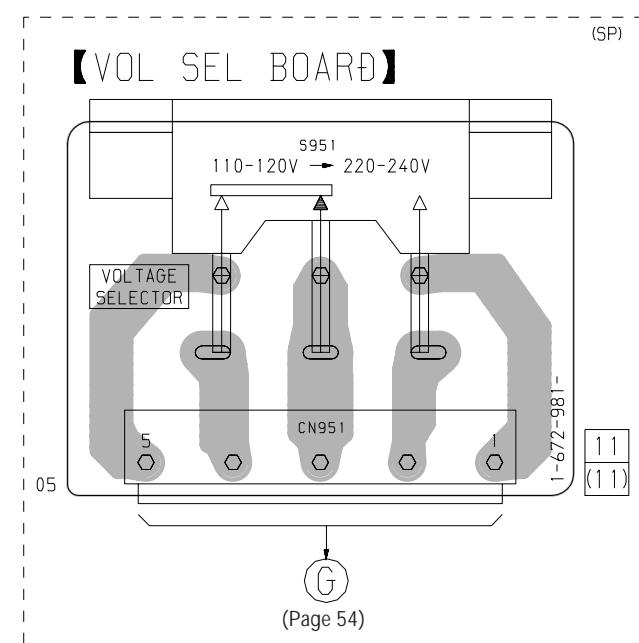


**6-11. PRINTED WIRING BOARD – MAIN Board – • See page 41 for Circuit Boards Location.**

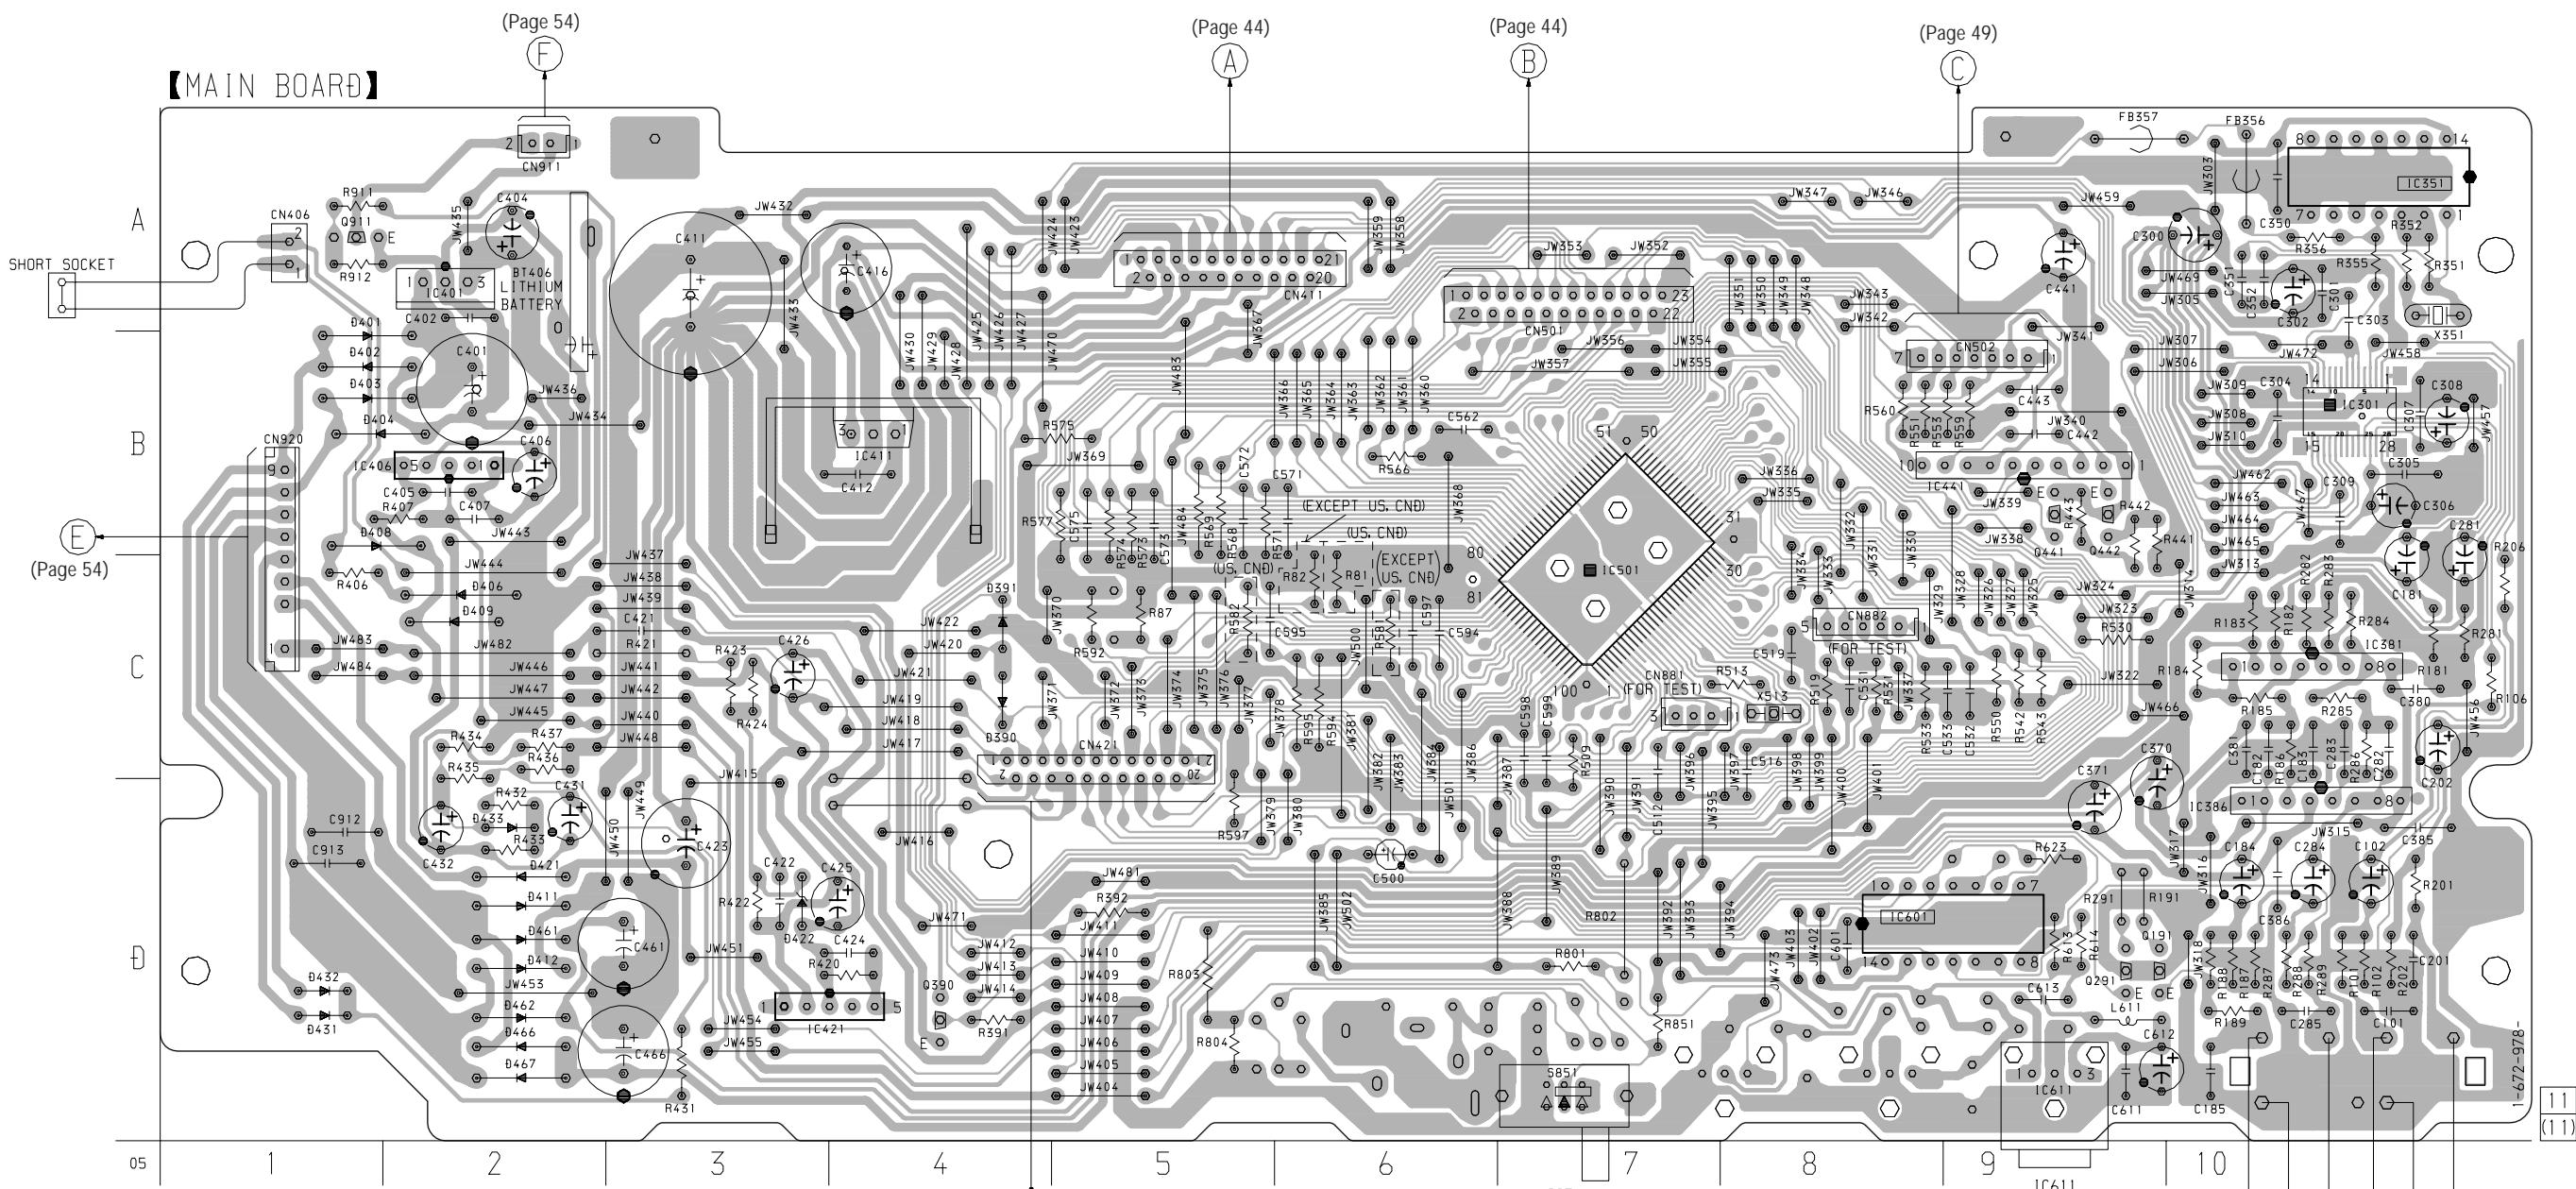

• Semiconductor Location


Ref. No.	Location	Ref. No.	Location
D390	C-4	IC301	B-10
D391	C-4	IC351	A-10
D401	B-1	IC381	C-10
D402	B-1	IC386	D-10
D403	B-1	IC401	A-2
D404	B-1	IC406	B-2
D406	C-2	IC411	B-4
D408	B-1	IC421	D-4
D409	C-2	IC441	B-9
D411	D-2	IC501	C-7
D412	D-2	IC601	D-9
D421	D-2	IC611	D-9
D422	D-3		
D431	D-1	Q191	D-9
D432	D-1	Q291	D-9
D433	D-2	Q390	D-4
D461	D-2	Q441	B-9
D462	D-2	Q442	B-9
D466	D-2	Q911	A-1
D467	D-2		

## 6-12. SCHEMATIC DIAGRAM – MAIN Board (1/2) – • See page 65 for Waveform.

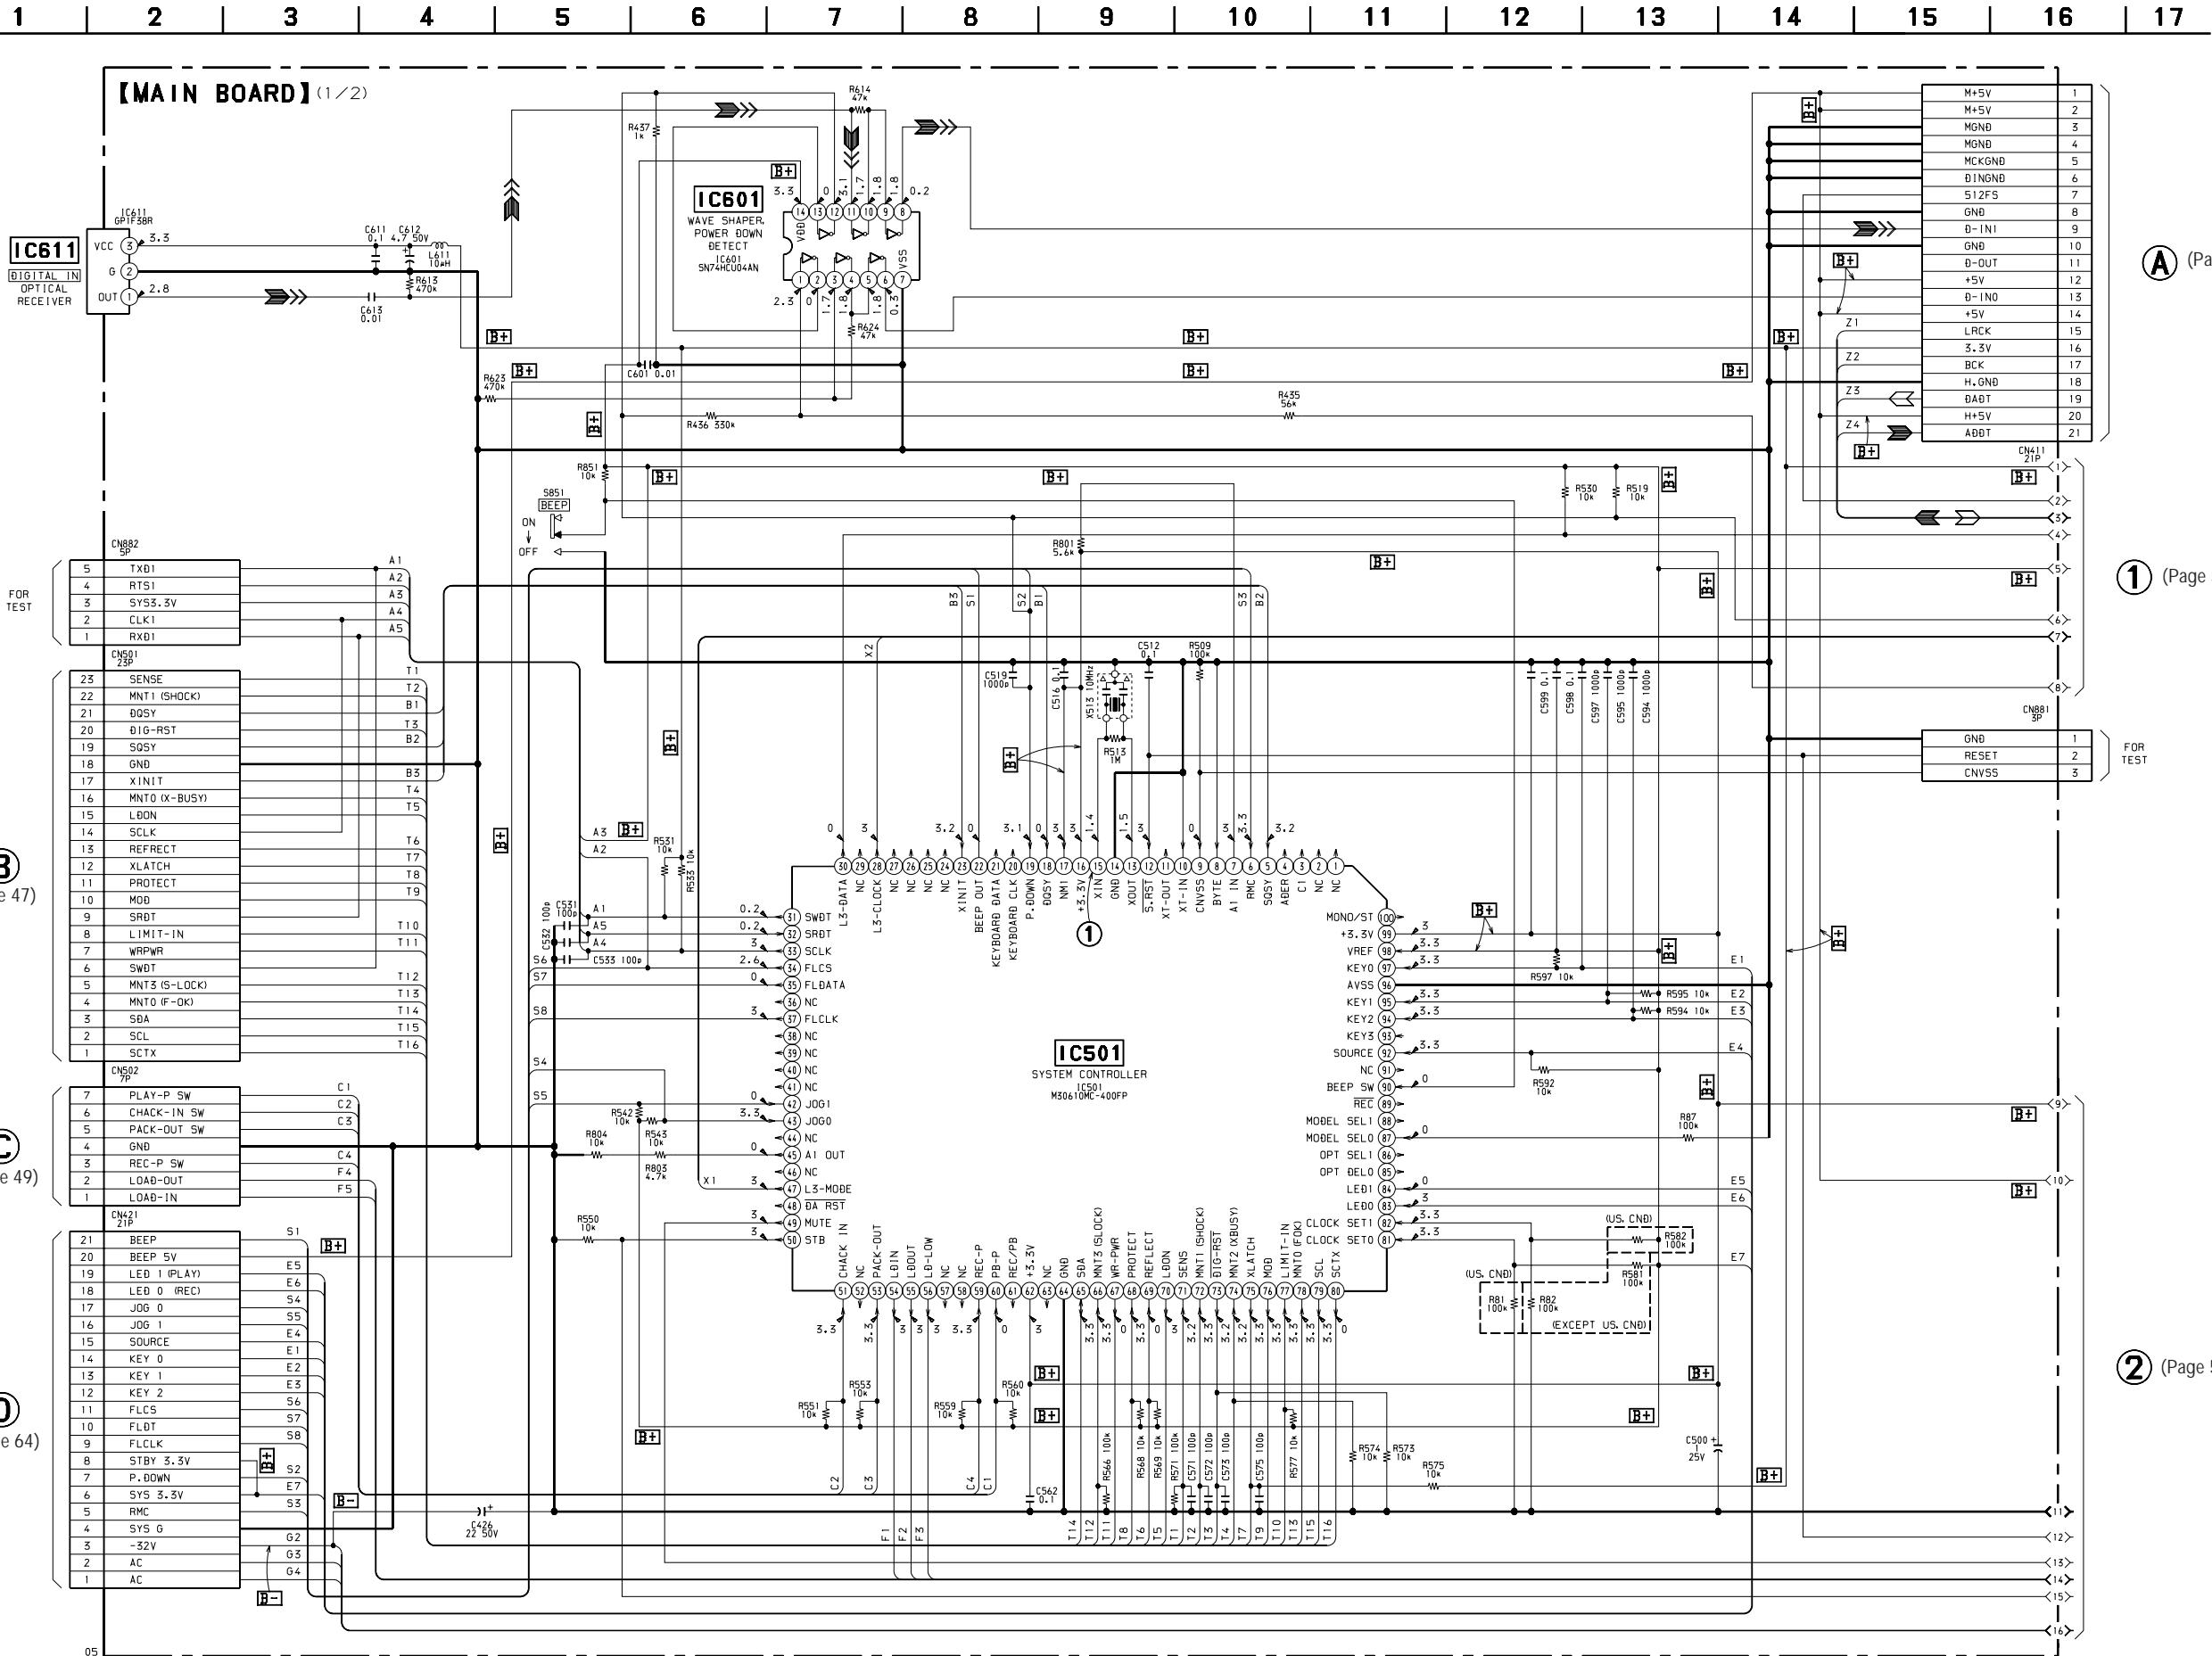

• Voltages and waveforms are dc with respect to ground under no-signal conditions.  
no mark : PLAY

## 6-13. SCHEMATIC DIAGRAM – MAIN Board (2/2), PT/VOL SEL Boards – • See page 65 for Waveforms. • See page 52 for IC Block Diagrams.

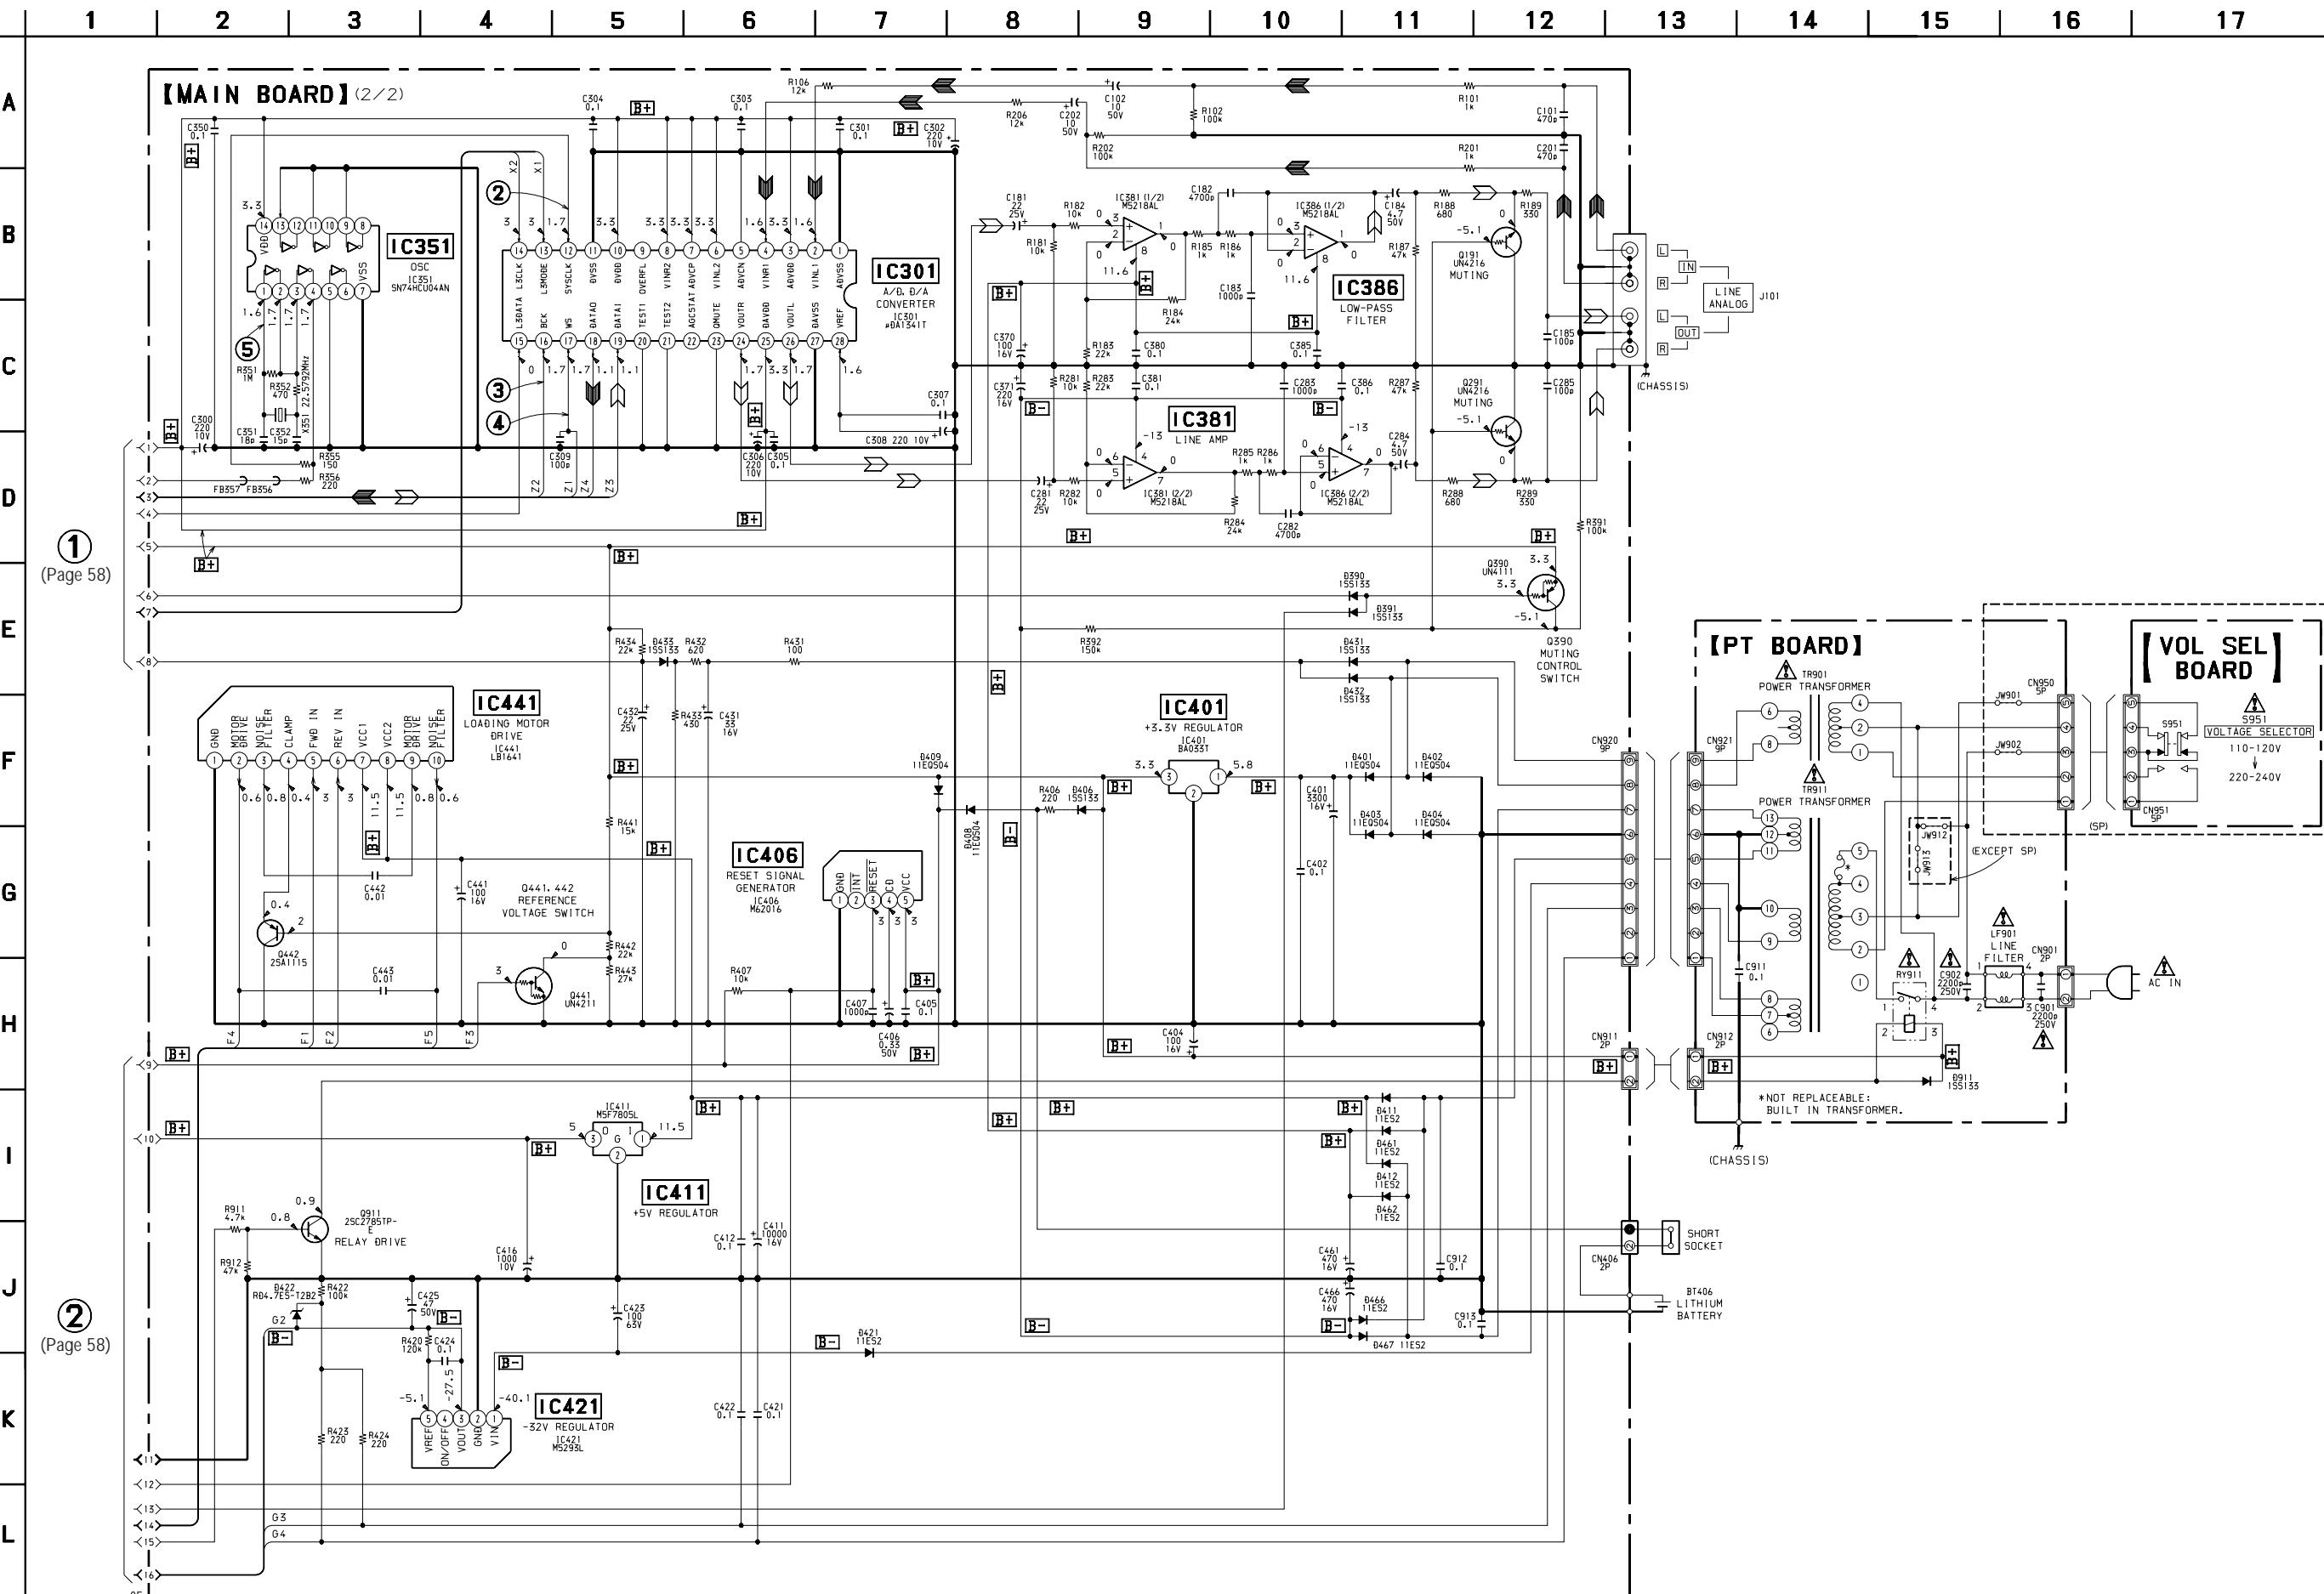


The components identified by mark  $\triangle$  or dotted line with mark  $\triangle$  are critical for safety.  
Replace only with part number specified.

Les composants identifiés par une marque  $\triangle$  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

• Voltages and waveforms are dc with respect to ground under no-signal conditions.  
no mark : PLAY


#### **6-14. PRINTED WIRING BOARD – PANEL Board –** • See page 41 for Circuit Boards Locations

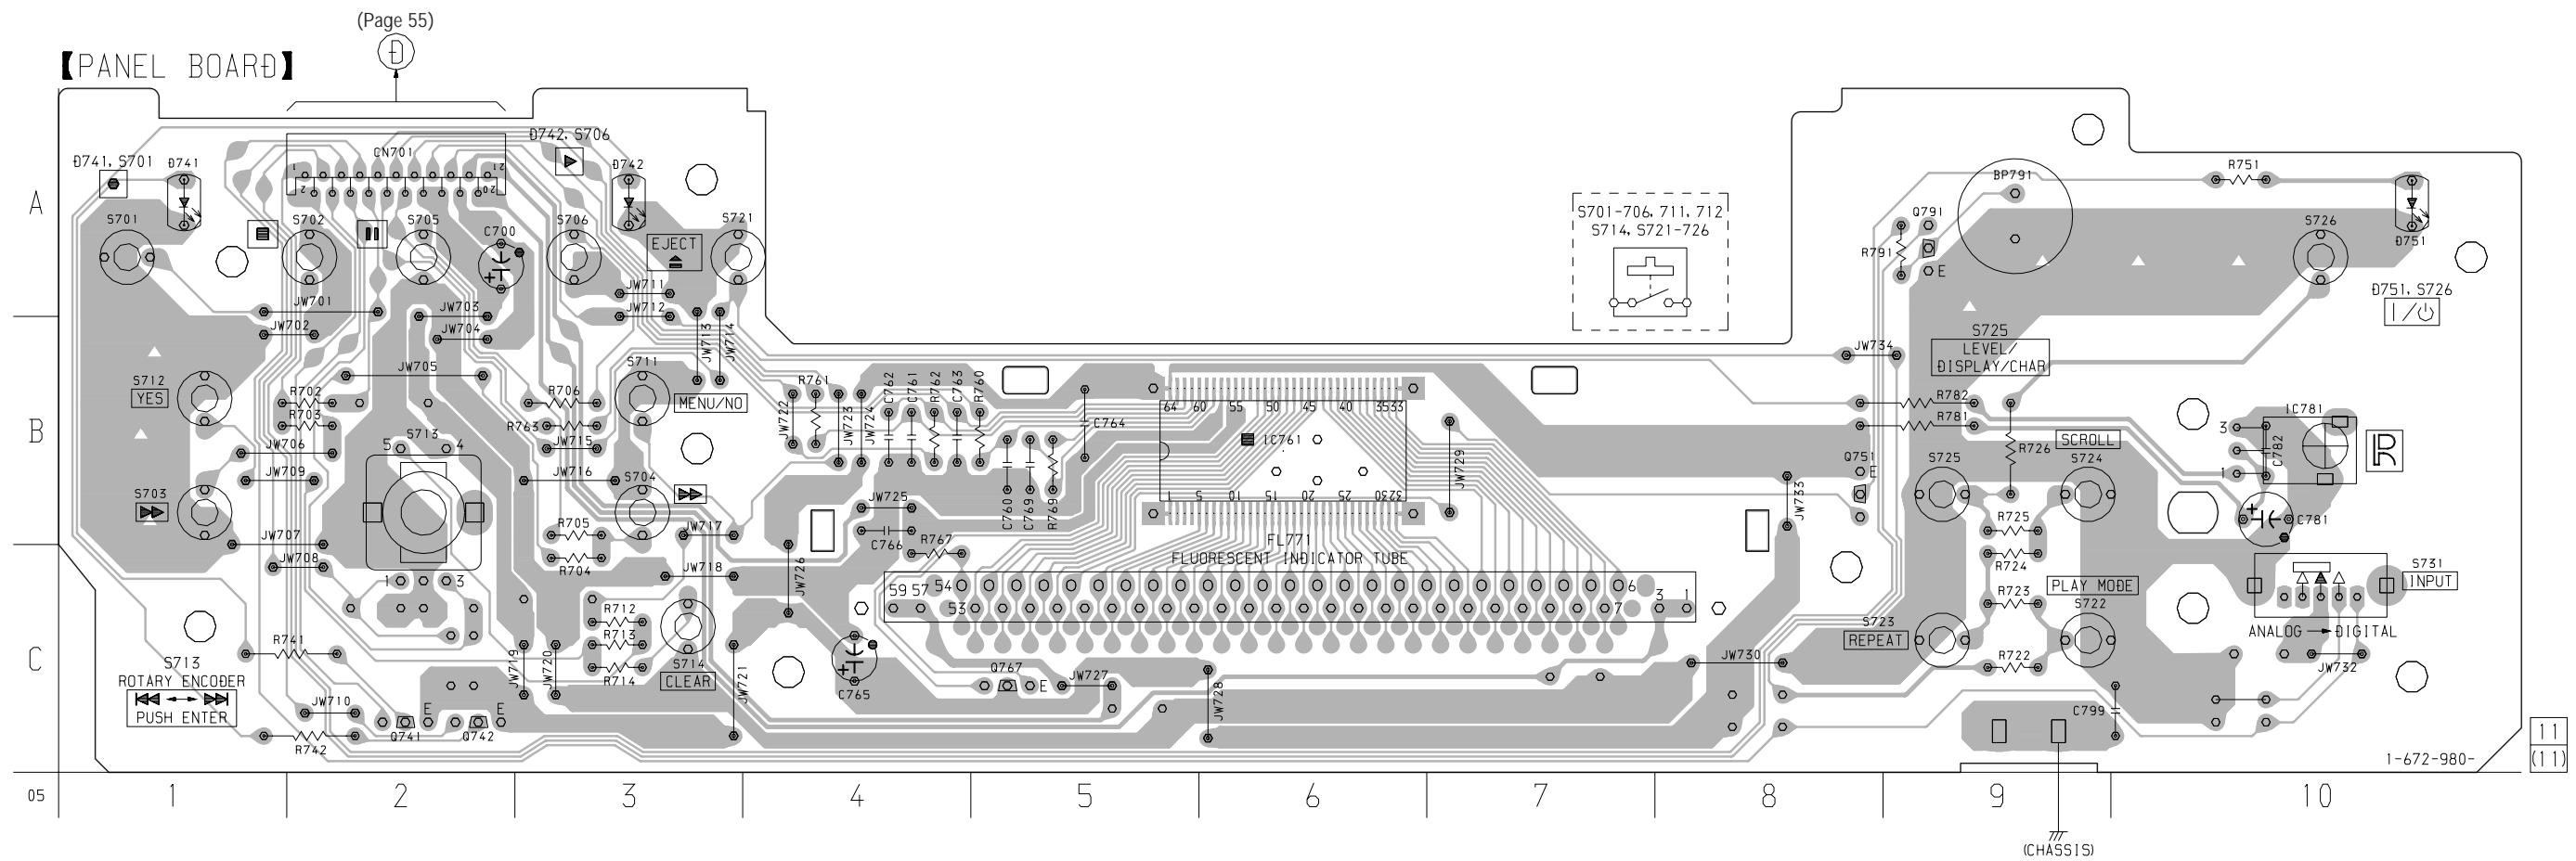

- Semiconductor Location

Ref. No.	Location
D741	A-1
D742	A-3
D751	A-10
IC761	B-6
IC781	B-10
Q741	C-2
Q742	C-2
Q751	B-8
Q767	C-5
Q791	A-9

## 6-15. SCHEMATIC DIAGRAM – PANEL Board – • See page 65 for Waveform.

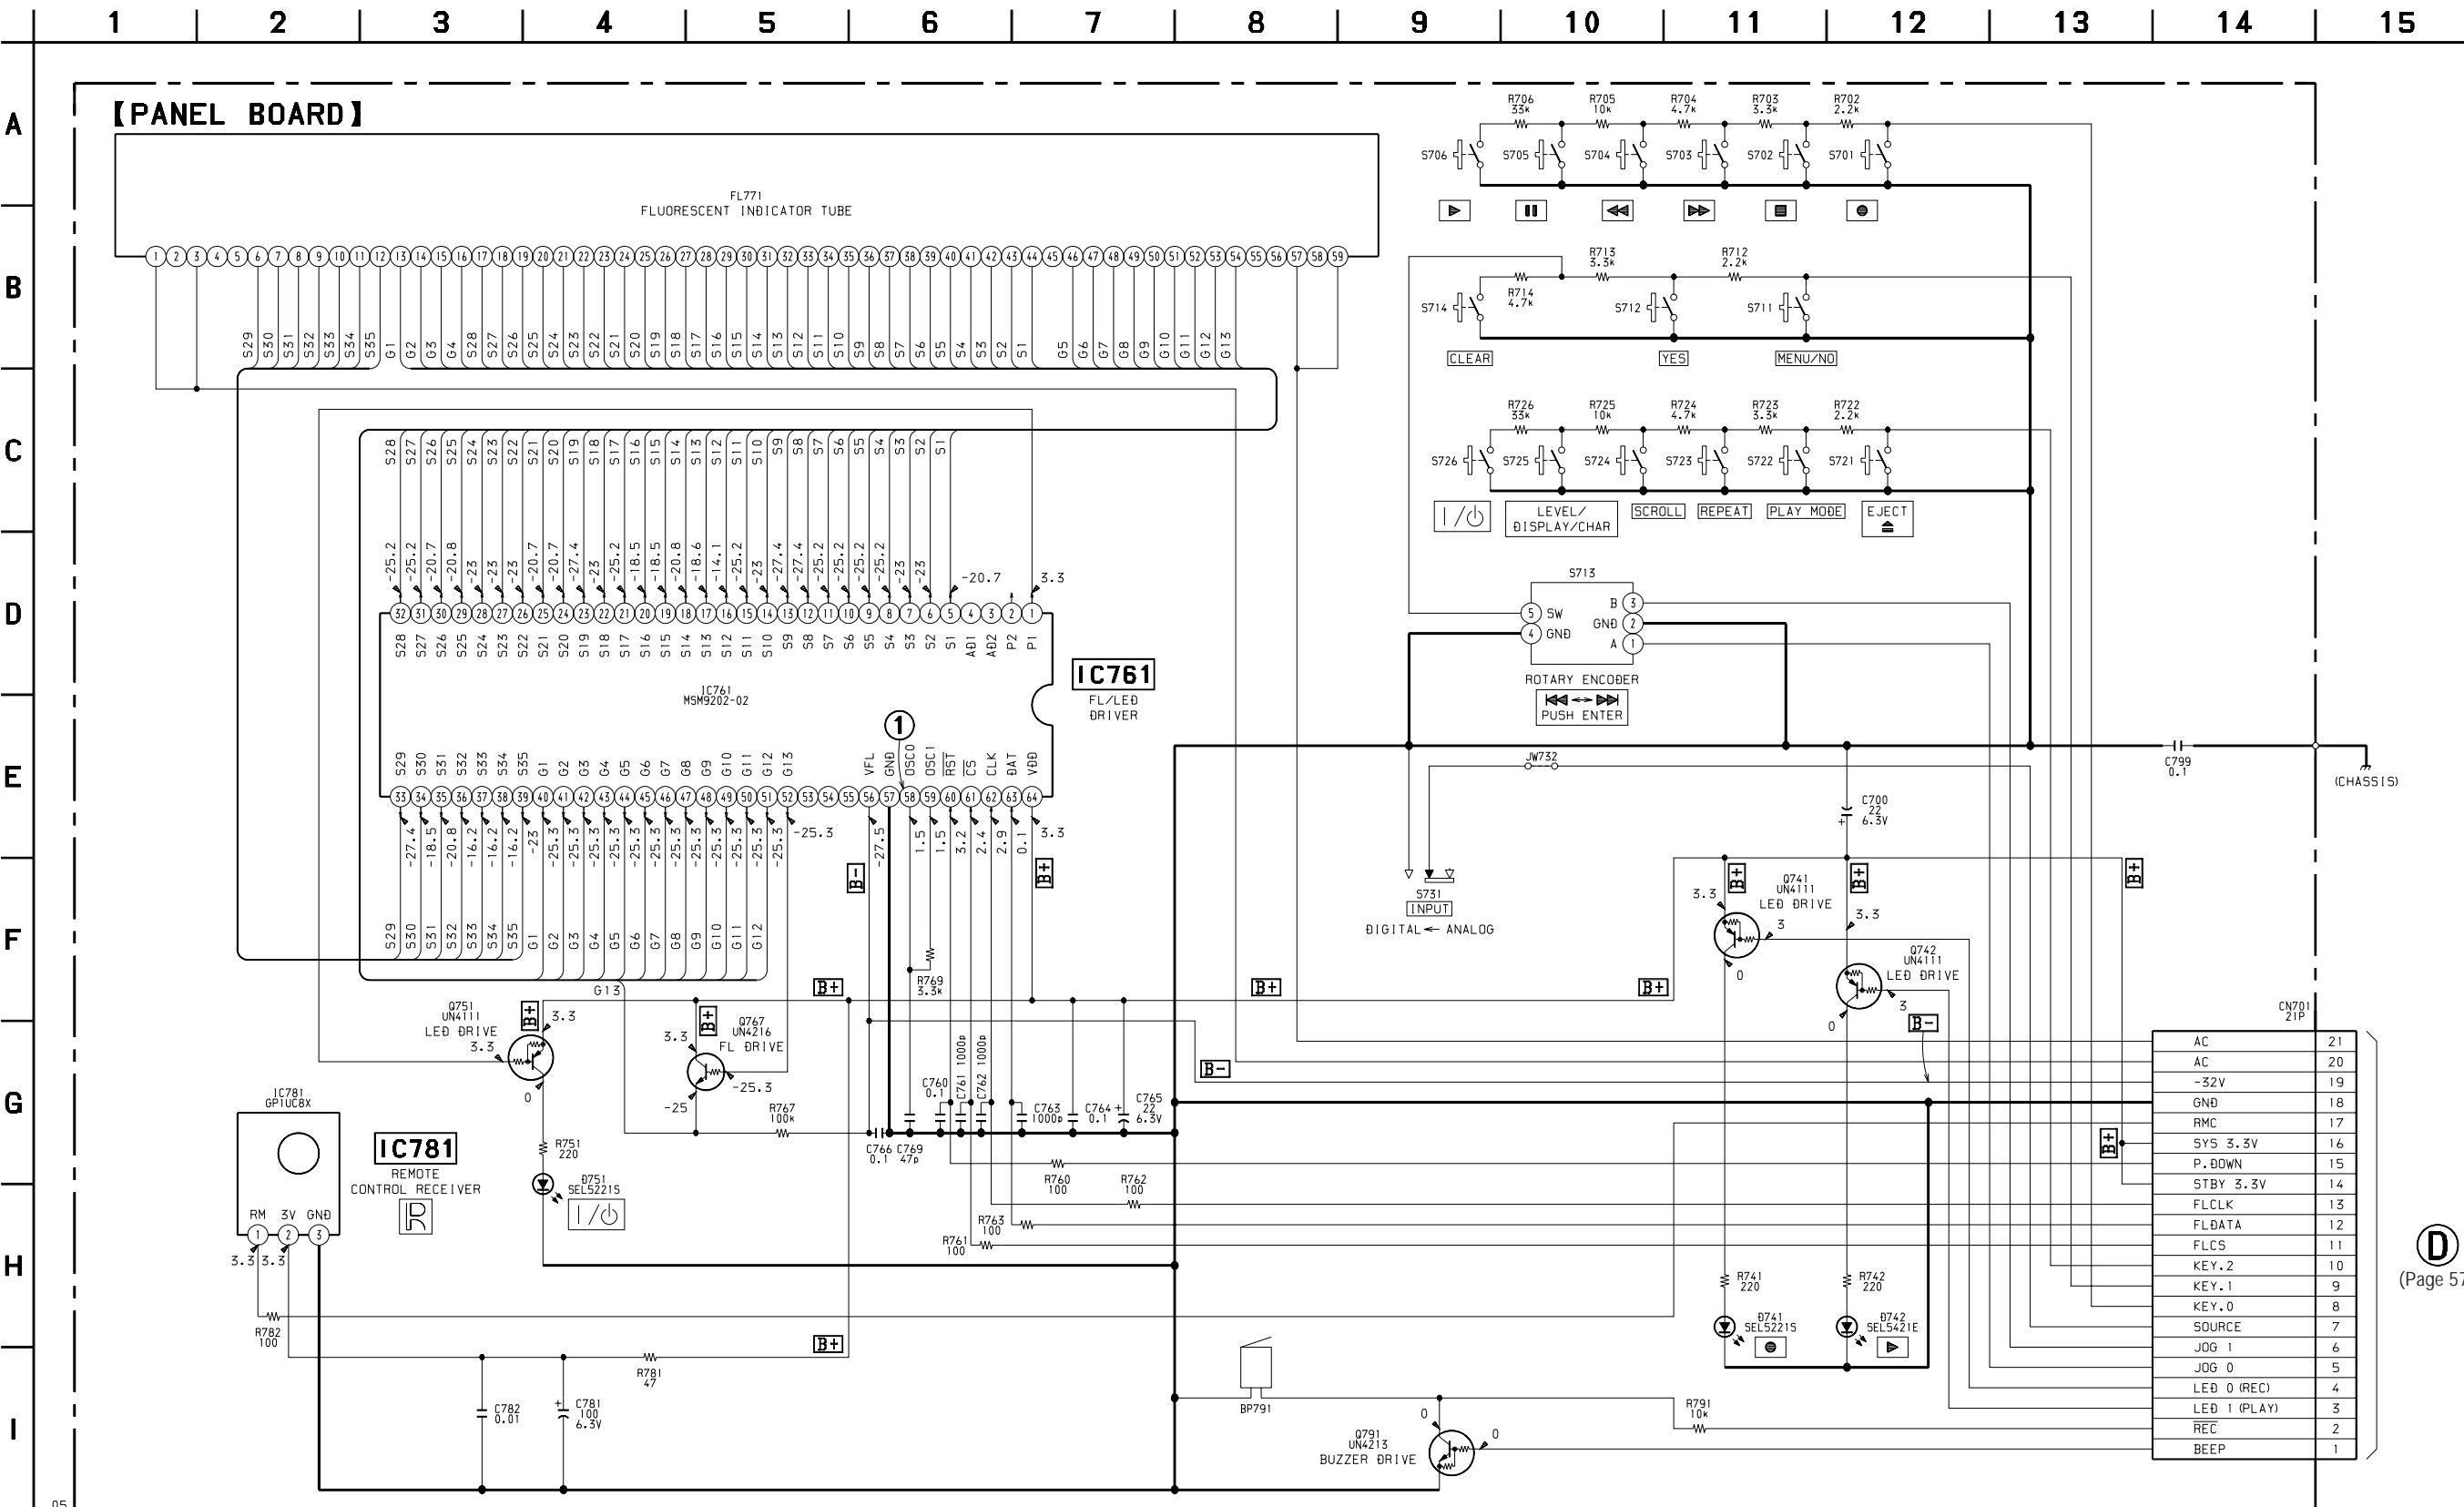


• Voltages and waveforms are dc with respect to ground under no-signal conditions.  
no mark : STOP


## SECTION 7 EXPLODED VIEWS

### • Waveforms – BD Board –


① IC101 ①, ② (I, J) (Play mode)

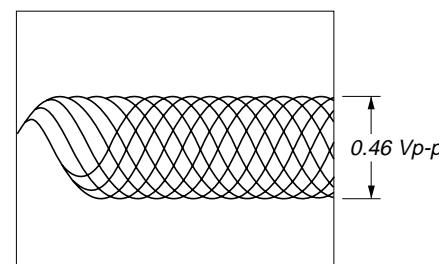


⑥ IC121 ⑧ (XBCK)

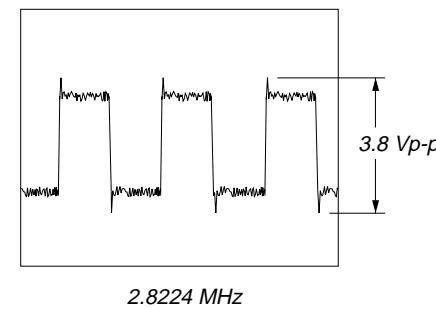


③ IC301 ⑯ (BCK)

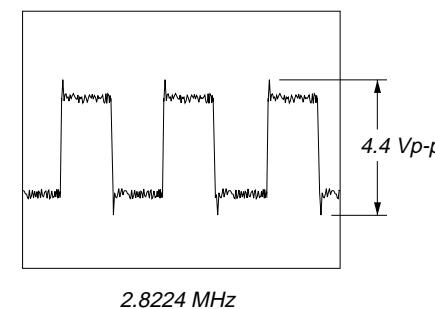


② IC101 ④ (A) (Play mode)

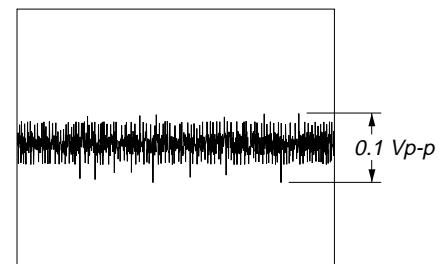


⑦ IC121 ⑨ (FS256)

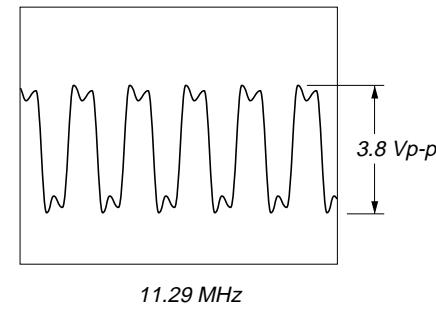


④ IC301 ⑰ (WS)

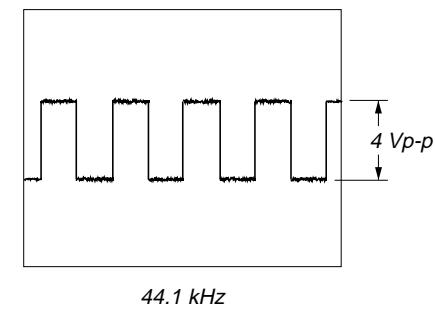


③ IC101 ⑧, ⑨ (E, F) (Play mode)

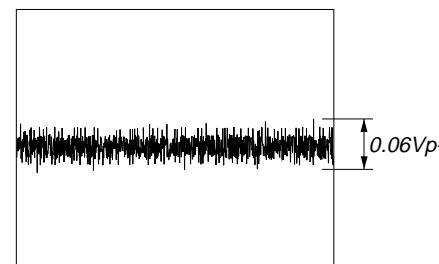


⑧ IC121 ⑩ (FS4)

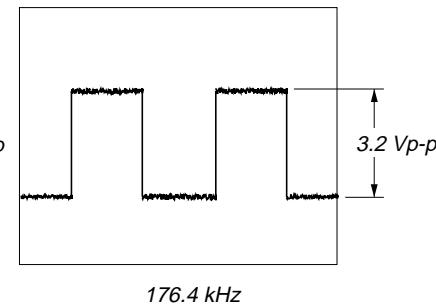

⑤ IC351 ①

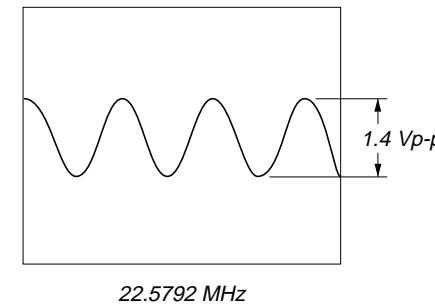


④ IC121 ⑯ (OSCI)

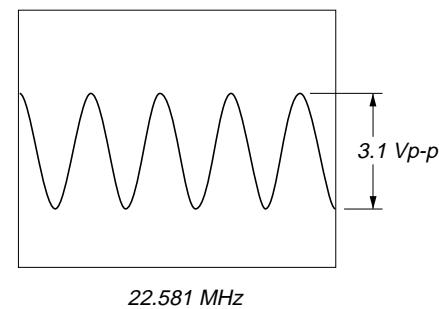


– MAIN Board –

① IC501 ⑮ (XIN)

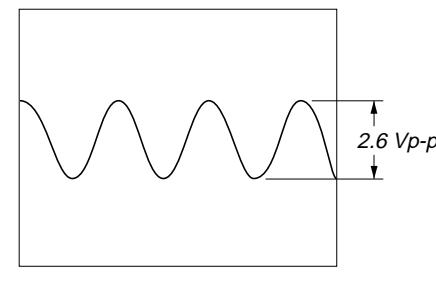


– PANEL Board –


① IC761 ⑯ (OSC0)

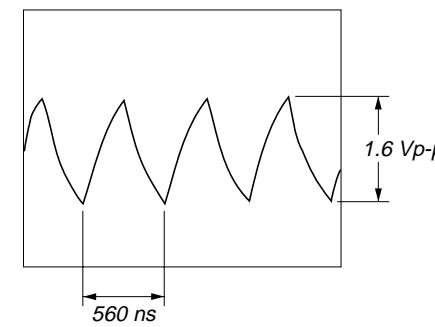

⑤ IC121 ⑪ (LRCK)

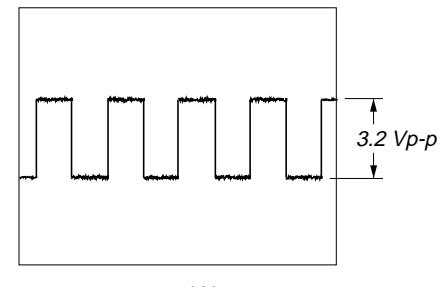

② IC301 ⑫ (SYSCLK)

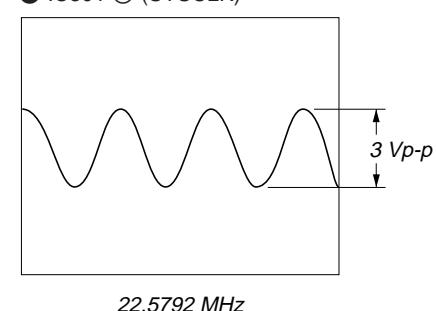

### NOTE:

- -XX and -X mean standardized parts, so they may have some difference from the original one.

### • Color Indication of Appearance Parts

Example:  
KNOB, BALANCE (WHITE) . . . (RED)

↑                      ↑  
Parts Color Cabinet's Color

### • Abbreviation

AED : North European model  
AR : Argentine model  
AUS : Australian model  
CND : Canadian model  
HK : Hong Kong model  
SP : Singapore model

- Items marked “\*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.


- The mechanical parts with no reference number in the exploded views are not supplied.

- Hardware (# mark) list and accessories and packing materials are given in the last of the electrical parts list.

The components identified by mark  $\triangle$  or dotted line with mark  $\triangle$  are critical for safety.  
Replace only with part number specified.


Les composants identifiés par une marque  $\triangle$  sont critiques pour la sécurité.  
Ne les remplacer que par une pièce portant le numéro spécifié.

(1) COVER SECTION

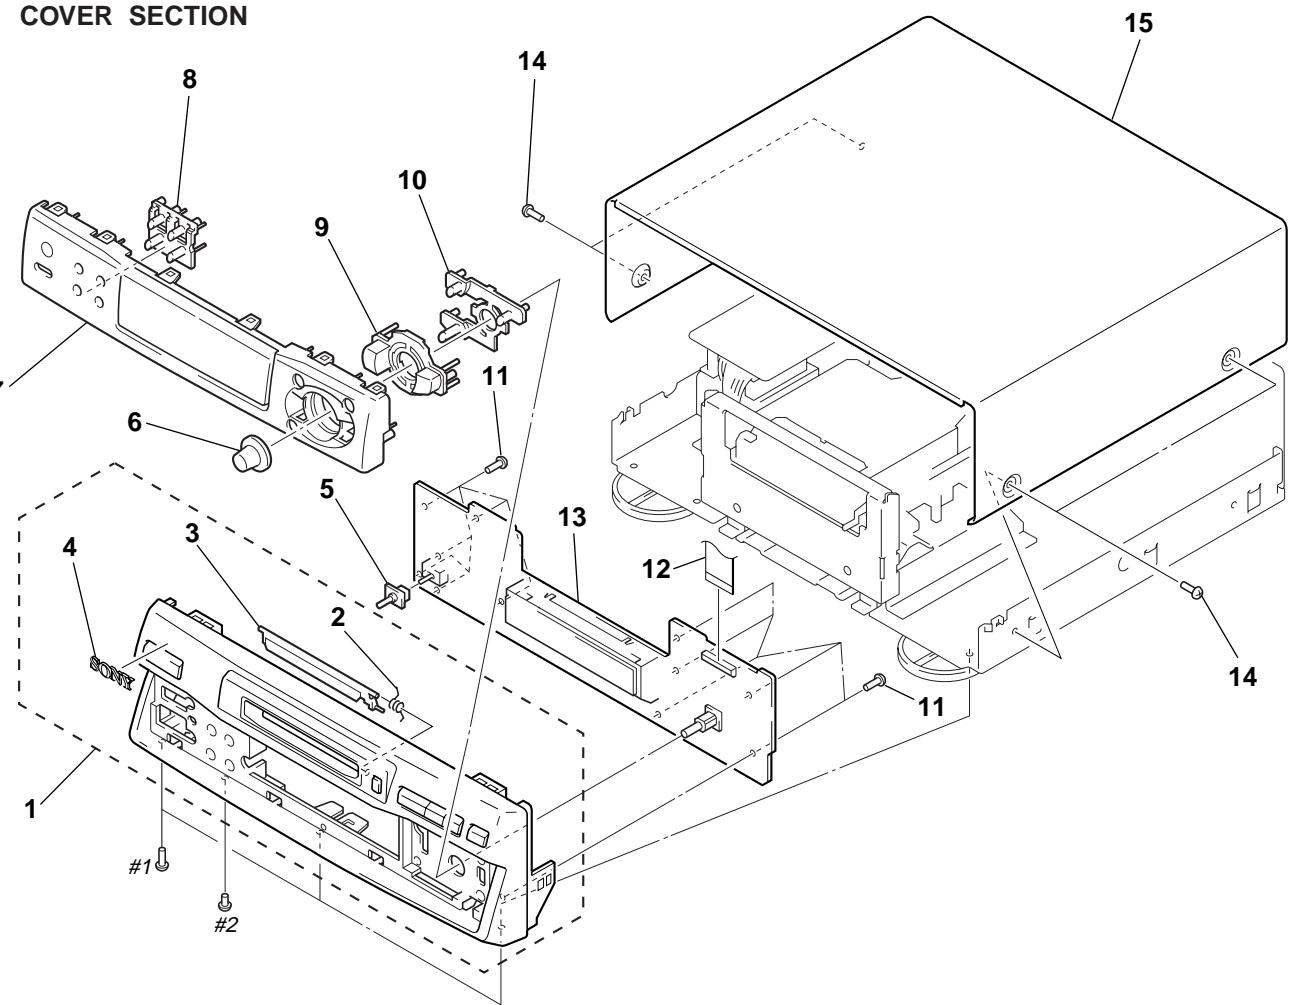

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
1	X-4951-002-1	PANEL ASSY, FRONT (SILVER)		9	4-216-751-11	BUTTON (FF) (for BLACK)	
1	X-4951-418-1	PANEL ASSY, FRONT (BLACK)		9	4-216-751-01	BUTTON (FF) (for SILVER)	
2	4-976-593-11	SPRING (LID), TORSION		10	4-216-768-01	BUTTON (EDIT) (for SILVER)	
3	4-216-729-11	LID (CARTRIDGE) (for SILVER)		10	4-216-768-11	BUTTON (EDIT) (for BLACK)	
3	4-996-690-21	LID (CARTRIDGE) (for BLACK)		11	4-951-620-01	SCREW (2.6X8), +BVTP	
4	4-962-708-71	EMBLEM (4-A), SONY		12	1-790-511-11	WIRE (FLAT TYPE) (21 CORE) (PANEL-MAIN)	
5	4-216-754-01	KNOB (INPUT) (for SILVER)		* 13	A-4724-597-A	PANEL BOARD, COMPLETE (US, CND)	
5	4-216-754-11	KNOB (INPUT) (for BLACK)		* 13	A-4724-600-A	PANEL BOARD, COMPLETE (AEP, UK, HK, AR, AUS)	
6	4-216-755-01	KNOB (AMS) (for SILVER)		* 13	A-4724-604-A	PANEL BOARD, COMPLETE (SP)	
6	4-216-755-11	KNOB (AMS) (for BLACK)		14	3-363-099-01	SCREW (CASE 3 TP2) (for BLACK)	
7	X-4951-417-1	ESCUCHEON ASSY (for SILVER)		14	3-363-099-11	SCREW (CASE 3 TP2) (for SILVER)	
7	X-4951-419-1	ESCUCHEON ASSY (for BLACK)		* 15	4-990-703-22	COVER (BLACK)	
8	4-216-752-11	BUTTON (MODE) (for BLACK)		* 15	4-990-703-91	COVER (SILVER)	
8	4-216-752-01	BUTTON (MODE) (for SILVER)					

(2) CHASSIS SECTION

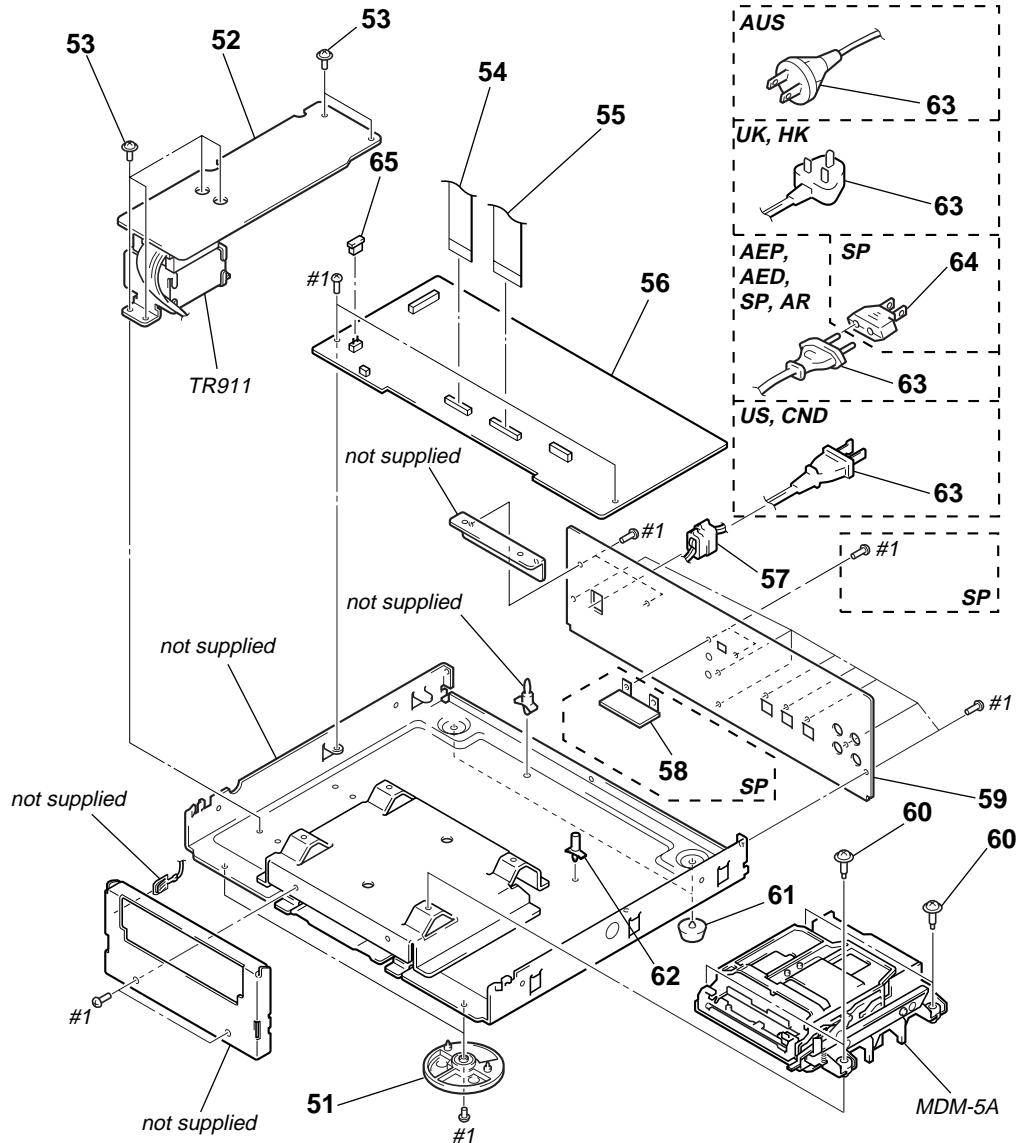


The components identified by mark  $\triangle$  or dotted line with mark  $\triangle$  are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque  $\triangle$  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
51	4-977-699-11	LEG (F)		* 59	4-216-765-62	PANEL, BACK (AUS)	
* 52	1-672-979-11	PT BOARD		60	4-999-839-11	SCREW (+BVTTWH M3), STEP	
53	3-703-249-01	SCREW, S TIGHT, +PTTWH 3X6		61	4-965-822-01	FOOT	
54	1-783-139-11	WIRE (FLAT TYPE) (21 CORE) (BD-MAIN)		62	4-812-134-11	RIVET (DIA. 3.5), NYLON	
55	1-783-140-11	WIRE (FLAT TYPE) (23 CORE)		$\triangle$ 63	1-696-586-21	CORD, POWER (UK, HK)	
* 56	A-4724-596-A	MAIN BOARD, COMPLETE (US, CND)		$\triangle$ 63	1-696-846-21	CORD, POWER (AUS)	
* 56	A-4724-599-A	MAIN BOARD, COMPLETE (AEP, UK, HK, AR, AUS)		$\triangle$ 63	1-777-071-31	CORD, POWER (AEP, AED, SP)	
* 56	A-4724-602-A	MAIN BOARD, COMPLETE (SP)		$\triangle$ 63	1-783-531-31	CORD, POWER (US, CND)	
* 57	3-703-244-00	BUSHING (2104), CORD		$\triangle$ 63	1-783-940-31	CORD, POWER (AR)	
* 58	1-672-981-11	VOL SEL BOARD (SP)		$\triangle$ 64	1-569-008-21	ADAPTOR, CONVERSION 2P (SP)	
* 59	4-216-765-12	PANEL, BACK (US)		65	1-569-972-21	SOCKET, SHORT 2P	
* 59	4-216-765-22	PANEL, BACK (CND)		$\triangle$ TR911	1-433-697-11	TRANSFORMER, POWER (US, CND)	
* 59	4-216-765-32	PANEL, BACK (AEP, UK, AED, AR)		$\triangle$ TR911	1-433-698-11	TRANSFORMER, POWER (AEP, UK, HK, AUS)	
* 59	4-216-765-42	PANEL, BACK (SP)		$\triangle$ TR911	1-433-698-21	TRANSFORMER, POWER (AR)	
* 59	4-216-765-52	PANEL, BACK (HK)		$\triangle$ TR911	1-433-699-11	TRANSFORMER, POWER (SP)	

**(3) MECHANISM SECTION  
(MDM-5A)**

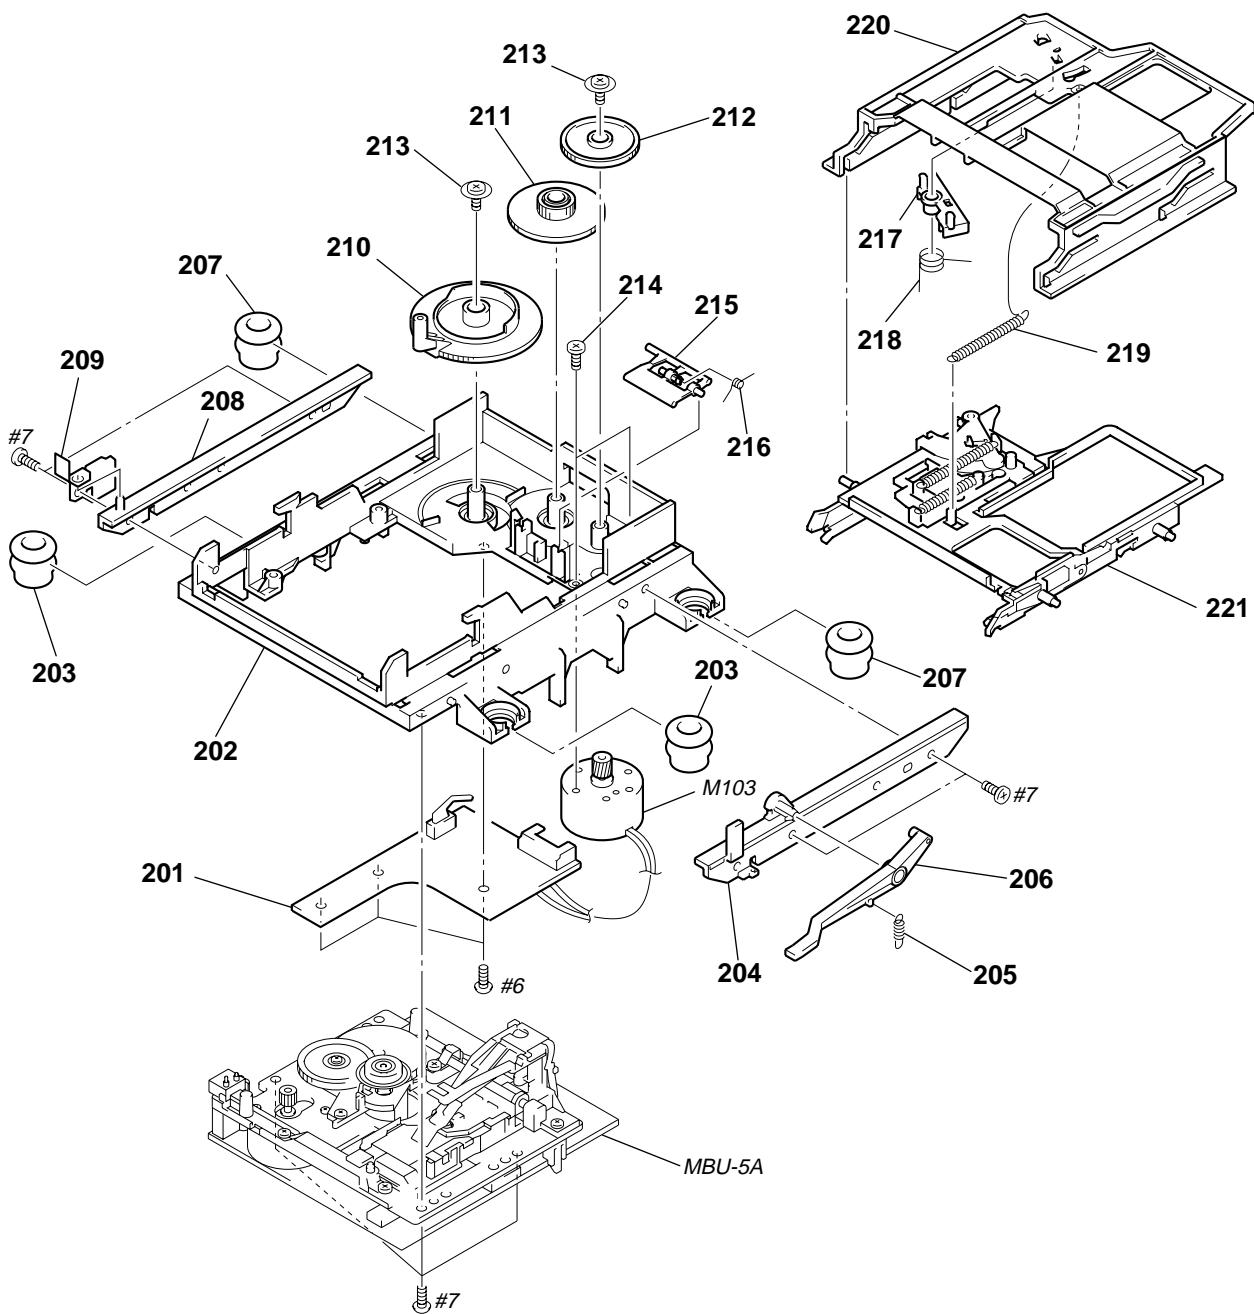

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
* 201	1-668-111-11	SW BOARD		212	4-996-221-01	GEAR (B)	
* 202	4-996-217-01	CHASSIS		213	4-933-134-01	SCREW (+PTPWH M2.6X6)	
203	4-996-223-11	INSULATOR (F) (BLACK)		214	4-996-224-01	SCREW (1.7X3), +PWH	
* 204	4-996-218-01	BRACKET (GUIDE R)		215	4-996-227-01	LEVER (HEAD)	
205	4-996-277-01	SPRING (O/C), TENSION		216	4-996-229-01	SPRING (HEAD LEVER), TORSION	
206	4-996-226-01	LEVER (O/C)		217	4-996-212-01	LEVER (LIMITTER)	
207	4-999-347-01	INSULATOR (R) (GREEN)		218	4-996-213-01	SPRING (LIMITTER), TORSION	
* 208	4-996-225-01	BRACKET (GUIDE L)		219	4-996-216-01	SPRING (HOLDER), TENSION	
209	4-988-466-11	SPRING (ELECTROSTATIC), LEAF		* 220	4-996-211-01	SLIDER (CAM)	
210	4-996-219-01	GEAR (CAM GEAR)		221	A-4680-409-A	HOLDER COMPLETE ASSY	
211	4-996-220-01	GEAR (A)		M103	X-4949-670-1	MOTOR ASSY, LOADING	

**(4) BASE UNIT SECTION  
(MBU-5A)**

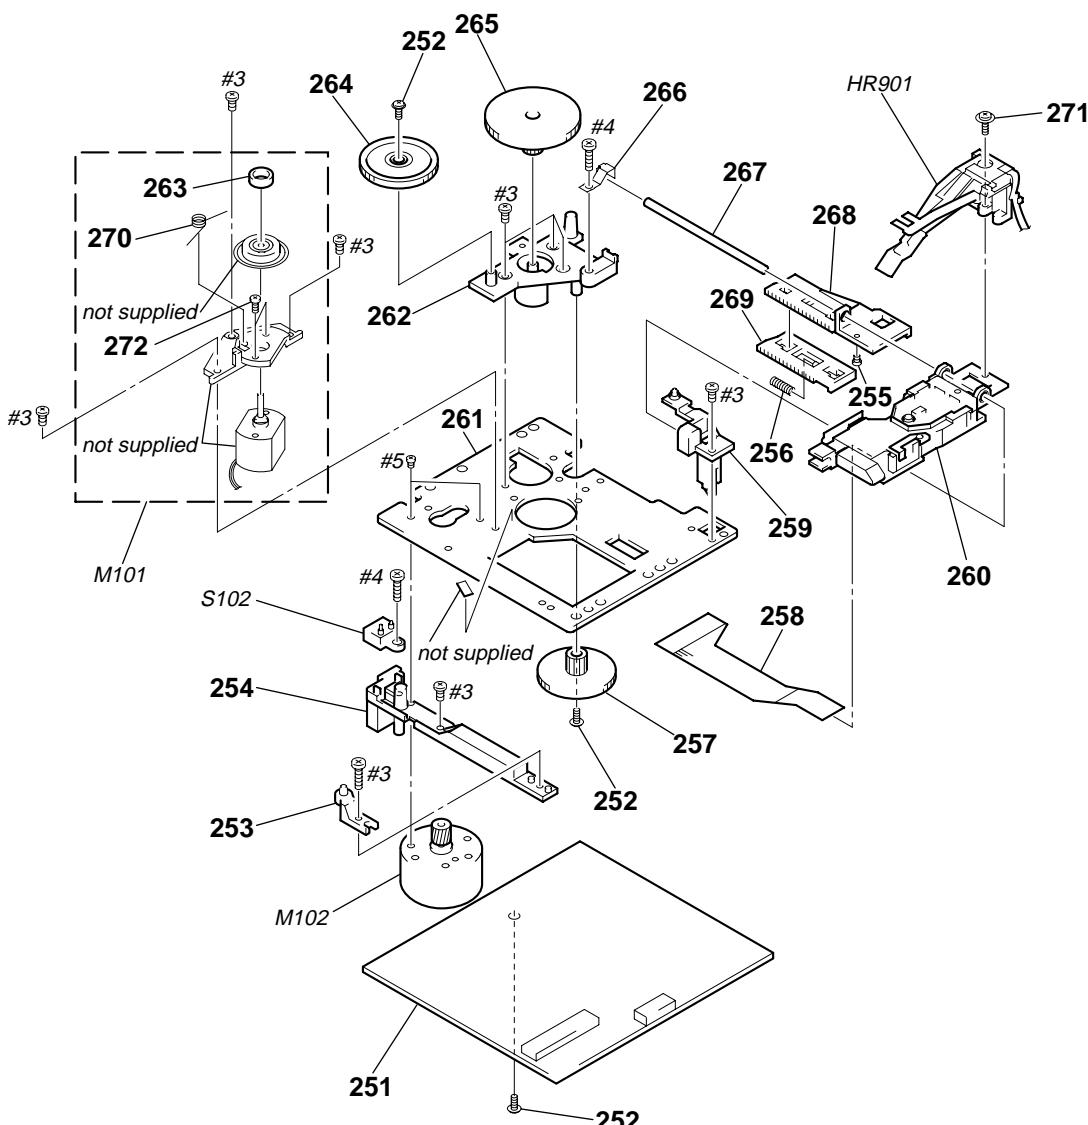

The components identified by mark  $\triangle$  or dotted line with mark  $\triangle$  are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque  $\triangle$  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
251	A-4724-063-A	BD BOARD, COMPLETE		264	4-996-260-01	GEAR (SL-A)	
252	3-372-761-01	SCREW (M1.7), TAPPING		265	4-996-261-01	GEAR (SL-B)	
* 253	4-996-267-01	BASE (BU-D)		266	4-996-264-01	SPRING (SHAFT), LEAF	
* 254	4-996-255-01	BASE (BU-C)		267	4-996-265-01	SHAFT, MAIN	
255	4-900-590-01	SCREW, PRECISION SMALL		268	4-996-256-11	SL (BASE)	
256	4-996-258-01	SPRING, COMPRESSION		269	4-996-257-01	RACK (SL)	
257	4-996-262-01	GEAR (SL-C)		270	4-996-263-01	SPRING (CLV), TORSION	
* 258	1-667-954-11	FLEXIBLE BOARD		271	4-988-560-01	SCREW (+P 1.7X6)	
* 259	4-210-664-11	BASE (BU-A)		272	4-211-036-01	SCREW (1.7X2.5), +PWH	
△ 260	8-583-028-02	OPTICAL PICK-UP KMS-260A/J1N		HR901	1-500-502-11	HEAD, OVER WRITE	
* 261	4-996-252-01	CHASSIS, BU		M101	A-4672-516-A	MOTOR ASSY, SPINDLE	
* 262	4-996-254-01	BASE (BU-B)		M102	A-4672-515-A	MOTOR ASSY, SLED	
263	4-967-688-11	MAGNET, ABSORPTION		S102	1-762-148-21	SWITCH, PUSH (2 KEY) (REFLECT DET, PROTECT DET)	

## SECTION 8

### ELECTRICAL PARTS LIST

## NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX and -X mean standardized parts, so they may have some difference from the original one.
- RESISTORS  
All resistors are in ohms.  
METAL: Metal-film resistor.  
METAL OXIDE: Metal oxide-film resistor.  
F: nonflammable
- Abbreviation  
AED : North European model    CND : Canadian model  
AR : Argentine model                    HK : Hong Kong model  
AUS : Australian model                SP : Singapore model

- Items marked "\*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- SEMICONDUCTORS  
In each case, u:  $\mu$ , for example:  
uA... :  $\mu$ A...    uPA... :  $\mu$ PA...  
uPB... :  $\mu$ PB...    uPC... :  $\mu$ PC...  
uPD... :  $\mu$ PD...  
• CAPACITORS  
uF:  $\mu$ F  
• COILS  
uH:  $\mu$ H

The components identified by mark  $\triangle$  or dotted line with mark  $\triangle$  are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque  $\triangle$  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

When indicating parts by reference number, please include the board.

Ref. No.	Part No.	Description			Remark	Ref. No.	Part No.	Description			Remark	
	A-4724-063-A	BD BOARD, COMPLETE				C153	1-163-021-11	CERAMIC CHIP	0.01uF	10%	50V	
		*****				C156	1-163-038-00	CERAMIC CHIP	0.1uF		25V	
		< CAPACITOR >				C158	1-163-019-00	CERAMIC CHIP	0.0068uF	10%	50V	
C101	1-125-822-11	TANTALUM	10uF	20%	10V	C160	1-104-601-11	ELECT CHIP	10uF	20%	10V	
C102	1-163-038-00	CERAMIC CHIP	0.1uF		25V	C161	1-104-601-11	ELECT CHIP	10uF	20%	10V	
C103	1-125-822-11	TANTALUM	10uF	20%	10V	C163	1-163-021-11	CERAMIC CHIP	0.01uF	10%	50V	
C104	1-125-822-11	TANTALUM	10uF	20%	10V	C164	1-163-021-11	CERAMIC CHIP	0.01uF	10%	50V	
C105	1-163-021-11	CERAMIC CHIP	0.01uF	10%	50V	C167	1-163-038-00	CERAMIC CHIP	0.1uF		25V	
C106	1-163-275-11	CERAMIC CHIP	0.001uF	5%	50V	C168	1-163-038-00	CERAMIC CHIP	0.1uF		25V	
C107	1-163-038-00	CERAMIC CHIP	0.1uF		25V	C169	1-125-822-11	TANTALUM	10uF	20%	10V	
C108	1-163-038-00	CERAMIC CHIP	0.1uF		25V	C171	1-163-038-00	CERAMIC CHIP	0.1uF		25V	
C109	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V	C181	1-104-913-11	TANTALUM CHIP	10uF	20%	16V	
C111	1-164-344-11	CERAMIC CHIP	0.068uF	10%	25V	C183	1-163-038-00	CERAMIC CHIP	0.1uF		25V	
C112	1-163-017-00	CERAMIC CHIP	0.0047uF	5%	50V	C184	1-117-970-11	ELECT CHIP	22uF	20%	10V	
C113	1-109-982-11	CERAMIC CHIP	1uF	10%	10V	C185	1-164-611-11	CERAMIC CHIP	0.001uF	10%	500V	
C115	1-164-489-11	CERAMIC CHIP	0.22uF	10%	16V	C187	1-104-913-11	TANTALUM CHIP	10uF	20%	16V	
C116	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V	C188	1-163-021-11	CERAMIC CHIP	0.01uF	10%	50V	
C117	1-163-809-11	CERAMIC CHIP	0.047uF	10%	25V	C189	1-163-989-11	CERAMIC CHIP	0.033uF	10%	25V	
C118	1-163-038-00	CERAMIC CHIP	0.1uF		25V	C190	1-126-206-11	ELECT CHIP	100uF	20%	6.3V	
C119	1-125-822-11	TANTALUM	10uF	20%	10V	C191	1-163-038-00	CERAMIC CHIP	0.1uF		25V	
C121	1-125-822-11	TANTALUM	10uF	20%	10V	C196	1-163-038-00	CERAMIC CHIP	0.1uF		25V	
C122	1-163-021-11	CERAMIC CHIP	0.01uF	10%	50V	C197	1-163-038-00	CERAMIC CHIP	0.1uF		25V	
C123	1-163-038-00	CERAMIC CHIP	0.1uF		25V	< CONNECTOR >						
C124	1-163-038-00	CERAMIC CHIP	0.1uF		25V	CN101	1-569-479-51	CONNECTOR, FPC 21P				
C127	1-163-038-00	CERAMIC CHIP	0.1uF		25V	CN102	1-784-833-21	CONNECTOR, FFC(LIF(NON-ZIF))21P				
C128	1-163-021-11	CERAMIC CHIP	0.01uF	10%	50V	CN103	1-784-834-21	CONNECTOR, FFC(LIF(NON-ZIF))23P				
C129	1-107-823-11	CERAMIC CHIP	0.47uF	10%	16V	CN104	1-770-687-11	CONNECTOR, FFC/FPC 4P				
C130	1-163-251-11	CERAMIC CHIP	100PF	5%	50V	CN110	1-695-440-21	PIN, CONNECTOR (PC BOARD) 6P				
C131	1-163-023-00	CERAMIC CHIP	0.015uF	5%	50V	< DIODE >						
C132	1-107-823-11	CERAMIC CHIP	0.47uF	10%	16V	D101	8-719-988-61	DIODE 1SS355TE-17				
C133	1-163-017-00	CERAMIC CHIP	0.0047uF	5%	50V	D181	8-719-046-86	DIODE F1J6TP				
C134	1-163-038-00	CERAMIC CHIP	0.1uF		25V	D183	8-719-046-86	DIODE F1J6TP				
C135	1-163-038-00	CERAMIC CHIP	0.1uF		25V	< IC/TRANSISTOR >						
C136	1-126-206-11	ELECT CHIP	100uF	20%	6.3V	IC101	8-752-080-95	IC CXA2523AR				
C142	1-163-251-11	CERAMIC CHIP	100PF	5%	50V	IC103	8-729-903-10	TRANSISTOR FMW1				
C143	1-163-251-11	CERAMIC CHIP	100PF	5%	50V	IC121	8-752-389-44	IC CXD2654R				
C144	1-163-251-11	CERAMIC CHIP	100PF	5%	50V	IC123	8-759-096-87	IC TC7WU04FU (TE12R)				
C146	1-163-038-00	CERAMIC CHIP	0.1uF		25V	IC124	8-759-334-38	IC MSM51V4400-70TS-K				
C151	1-126-206-11	ELECT CHIP	100uF	20%	6.3V							
C152	1-163-038-00	CERAMIC CHIP	0.1uF		25V							

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
IC152	8-759-430-25	IC BH6511FS-E2		R140	1-216-029-00	METAL CHIP	150 5% 1/10W
IC171	8-759-487-04	IC BR24C02F-E2		R142	1-216-073-00	METAL CHIP	10K 5% 1/10W
IC181	8-759-481-17	IC MC74ACT08DTR2		R143	1-216-073-00	METAL CHIP	10K 5% 1/10W
IC192	8-759-460-72	IC BA033FP-E2		R144	1-216-025-00	RES, CHIP	100 5% 1/10W
< COIL/SHORT >				R145	1-216-073-00	METAL CHIP	10K 5% 1/10W
L101	1-414-813-11	FERRITE	0uH	R146	1-216-037-00	METAL CHIP	330 5% 1/10W
L102	1-414-813-11	FERRITE	0uH	R147	1-216-025-00	RES, CHIP	100 5% 1/10W
L103	1-414-813-11	FERRITE	0uH	R148	1-216-045-00	METAL CHIP	680 5% 1/10W
L105	1-414-813-11	FERRITE	0uH	R149	1-216-073-00	METAL CHIP	10K 5% 1/10W
L106	1-414-813-11	FERRITE	0uH	R150	1-216-295-00	SHORT	0
L121	1-414-813-11	FERRITE	0uH	R151	1-216-073-00	METAL CHIP	10K 5% 1/10W
L122	1-414-813-11	FERRITE	0uH	R152	1-216-073-00	METAL CHIP	10K 5% 1/10W
L151	1-412-029-11	INDUCTOR CHIP	10uH	R158	1-216-097-00	RES, CHIP	100K 5% 1/10W
L152	1-412-029-11	INDUCTOR CHIP	10uH	R159	1-216-097-00	RES, CHIP	100K 5% 1/10W
L153	1-412-032-11	INDUCTOR CHIP	100uH	R160	1-216-295-00	SHORT	0
L154	1-412-032-11	INDUCTOR CHIP	100uH	R161	1-216-057-00	METAL CHIP	2.2K 5% 1/10W
L161	1-414-813-11	FERRITE	0uH	R162	1-216-057-00	METAL CHIP	2.2K 5% 1/10W
L162	1-414-813-11	FERRITE	0uH	R163	1-216-057-00	METAL CHIP	2.2K 5% 1/10W
L181	1-216-295-00	SHORT	0	R164	1-216-045-00	METAL CHIP	680 5% 1/10W
< TRANSISTOR >				R165	1-216-097-00	RES, CHIP	100K 5% 1/10W
Q101	8-729-028-91	TRANSISTOR	DTA144EUA-T106	R166	1-220-149-11	REGISTER	2.2 10% 1/2W
Q102	8-729-026-53	TRANSISTOR	2SA1576A-T106-QR	R167	1-216-065-00	RES, CHIP	4.7K 5% 1/10W
Q103	8-729-028-99	TRANSISTOR	RN1307-TE85L	R169	1-219-724-11	METAL CHIP	1 1% 1/4W
Q104	8-729-028-99	TRANSISTOR	RN1307-TE85L	R170	1-216-073-00	METAL CHIP	10K 5% 1/10W
Q162	8-729-101-07	TRANSISTOR	2SB798-DL	R171	1-216-073-00	METAL CHIP	10K 5% 1/10W
Q163	8-729-028-91	TRANSISTOR	DTA144EUA-T106	R173	1-216-121-00	RES, CHIP	1M 5% 1/10W
Q181	8-729-018-75	FET	2SJ278MY	R175	1-216-065-00	RES, CHIP	4.7K 5% 1/10W
Q182	8-729-017-65	FET	2SK1764KY	R177	1-216-061-00	METAL CHIP	3.3K 5% 1/10W
< RESISTOR >				R179	1-216-085-00	METAL CHIP	33K 5% 1/10W
R103	1-216-049-11	RES, CHIP	1K 5% 1/10W	R180	1-216-073-00	METAL CHIP	10K 5% 1/10W
R104	1-216-073-00	METAL CHIP	10K 5% 1/10W	R182	1-216-089-00	RES, CHIP	47K 5% 1/10W
R105	1-216-065-00	RES, CHIP	4.7K 5% 1/10W	R183	1-216-089-00	RES, CHIP	47K 5% 1/10W
R106	1-216-133-00	METAL CHIP	3.3M 5% 1/10W	R184	1-216-073-00	METAL CHIP	10K 5% 1/10W
R107	1-216-113-00	METAL CHIP	470K 5% 1/10W	R185	1-216-081-00	METAL CHIP	22K 5% 1/10W
R109	1-216-295-00	SHORT	0	R186	1-216-089-00	RES, CHIP	47K 5% 1/10W
R110	1-216-073-00	METAL CHIP	10K 5% 1/10W	R188	1-216-073-00	METAL CHIP	10K 5% 1/10W
R111	1-216-295-00	SHORT	0	R189	1-216-073-00	METAL CHIP	10K 5% 1/10W
R112	1-216-089-00	RES, CHIP	47K 5% 1/10W	R190	1-216-073-00	METAL CHIP	10K 5% 1/10W
R113	1-216-049-11	RES, CHIP	1K 5% 1/10W	R195	1-216-073-00	METAL CHIP	10K 5% 1/10W
R115	1-216-049-11	RES, CHIP	1K 5% 1/10W	< SWITCH >			
R117	1-216-113-00	METAL CHIP	470K 5% 1/10W	S101	1-762-596-21	SWITCH, PUSH (1 KEY) (LIMIT IN)	
R120	1-216-025-00	RES, CHIP	100 5% 1/10W	S102	1-762-148-21	SWITCH, PUSH (2 KEY) (REFLECT DET, PROTECT DET)	
R121	1-216-097-00	RES, CHIP	100K 5% 1/10W	*****			
R123	1-216-295-00	SHORT	0	R124	1-216-025-00	RES, CHIP	100 5% 1/10W
R125	1-216-025-00	RES, CHIP	100 5% 1/10W	*	A-4724-596-A	MAIN BOARD, COMPLETE (US, CND)	
R127	1-216-025-00	RES, CHIP	100 5% 1/10W	*	A-4724-599-A	MAIN BOARD, COMPLETE (AEP, UK, HK, AR, AUS)	
R129	1-216-295-00	SHORT	0	*	A-4724-602-A	MAIN BOARD, COMPLETE (SP)	
R131	1-216-073-00	METAL CHIP	10K 5% 1/10W	*****			
R132	1-216-097-00	RES, CHIP	100K 5% 1/10W	7-685-872-09	SCREW +BVTT 3X8 (S)		
R133	1-216-117-00	METAL CHIP	680K 5% 1/10W	< BATTERY >			
R134	1-216-049-11	RES, CHIP	1K 5% 1/10W	R135	1-216-061-00	METAL CHIP	3.3K 5% 1/10W
R135	1-216-061-00	METAL CHIP	3.3K 5% 1/10W	R136	1-216-049-11	RES, CHIP	1K 5% 1/10W
R136	1-216-049-11	RES, CHIP	1K 5% 1/10W	BT406	1-528-887-11	BATTERY, LITHIUM SECONDARY	
R137	1-216-295-00	SHORT	0				

# MAIN

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark											
< CAPACITOR >																				
C101	1-162-290-31	CERAMIC	470PF	10%	50V	C512	1-164-159-11	CERAMIC	0.1uF	50V										
C102	1-126-964-11	ELECT	10uF	20%	50V	C516	1-164-159-11	CERAMIC	0.1uF	50V										
C181	1-128-551-11	ELECT	22uF	20%	25V	C519	1-162-294-31	CERAMIC	0.001uF	10%	50V									
C182	1-162-600-11	CERAMIC	0.0047uF	30%	16V	C531	1-162-282-31	CERAMIC	100PF	10%	50V									
C183	1-162-294-31	CERAMIC	0.001uF	10%	50V	C532	1-162-282-31	CERAMIC	100PF	10%	50V									
C184	1-126-963-11	ELECT	4.7uF	20%	50V	C533	1-162-282-31	CERAMIC	100PF	10%	50V									
C185	1-162-282-31	CERAMIC	100PF	10%	50V	C562	1-164-159-11	CERAMIC	0.1uF	50V										
C201	1-162-290-31	CERAMIC	470PF	10%	50V	C571	1-162-282-31	CERAMIC	100PF	10%	50V									
C202	1-126-964-11	ELECT	10uF	20%	50V	C572	1-162-282-31	CERAMIC	100PF	10%	50V									
C281	1-128-551-11	ELECT	22uF	20%	25V	C573	1-162-282-31	CERAMIC	100PF	10%	50V									
C282	1-162-600-11	CERAMIC	0.0047uF	30%	16V	C575	1-162-282-31	CERAMIC	100PF	10%	50V									
C283	1-162-294-31	CERAMIC	0.001uF	10%	50V	C594	1-162-294-31	CERAMIC	0.001uF	10%	50V									
C284	1-126-963-11	ELECT	4.7uF	20%	50V	C595	1-162-294-31	CERAMIC	0.001uF	10%	50V									
C285	1-162-282-31	CERAMIC	100PF	10%	50V	C597	1-162-294-31	CERAMIC	0.001uF	10%	50V									
C300	1-126-934-11	ELECT	220uF	20%	10V	C598	1-164-159-11	CERAMIC	0.1uF	50V										
C301	1-164-159-11	CERAMIC	0.1uF		50V	C599	1-164-159-11	CERAMIC	0.1uF		50V									
C302	1-126-934-11	ELECT	220uF	20%	10V	C601	1-162-306-11	CERAMIC	0.01uF	20%	16V									
C303	1-164-159-11	CERAMIC	0.1uF		50V	C611	1-164-159-11	CERAMIC	0.1uF		50V									
C304	1-164-159-11	CERAMIC	0.1uF		50V	C612	1-126-963-11	ELECT	4.7uF	20%	50V									
C305	1-164-159-11	CERAMIC	0.1uF		50V	C613	1-162-306-11	CERAMIC	0.01uF	20%	16V									
C306	1-126-934-11	ELECT	220uF	20%	10V	C912	1-164-159-11	CERAMIC	0.1uF		50V									
C307	1-164-159-11	CERAMIC	0.1uF		50V	C913	1-164-159-11	CERAMIC	0.1uF		50V									
C308	1-126-934-11	ELECT	220uF	20%	10V	< CONNECTOR >														
C309	1-162-282-31	CERAMIC	100PF	10%	50V	CN406	1-568-683-11	PIN, CONNECTOR (PC BAORD) 2P												
C350	1-164-159-11	CERAMIC	0.1uF		50V	CN411	1-784-418-11	CONNECTOR, FFC(LIF(NON-ZIF))21P												
C351	1-162-205-31	CERAMIC	18PF	5%	50V	CN421	1-779-289-11	CONNECTOR, FFC(LIF(NON-ZIF))21P												
C352	1-162-203-31	CERAMIC	15PF	5%	50V	CN501	1-784-417-11	CONNECTOR, FFC(LIF(NON-ZIF))23P												
C370	1-126-933-11	ELECT	100uF	20%	16V	* CN502	1-568-934-11	PIN, CONNECTOR 7P												
C371	1-126-934-11	ELECT	220uF	20%	16V	CN881	1-506-468-11	PIN, CONNECTOR 3P												
C380	1-164-159-11	CERAMIC	0.1uF		50V	* CN882	1-568-954-11	PIN, CONNECTOR 5P												
C381	1-164-159-11	CERAMIC	0.1uF		50V	CN920	1-691-770-11	PLUG (MICRO CONNECTOR) 8P												
C385	1-164-159-11	CERAMIC	0.1uF		50V	< DIODE >														
C386	1-164-159-11	CERAMIC	0.1uF		50V	D390	8-719-911-19	DIODE 1SS119												
C401	1-126-936-11	ELECT	3300uF	20%	16V	D391	8-719-911-19	DIODE 1SS119												
C402	1-164-159-11	CERAMIC	0.1uF		50V	D401	8-719-210-21	DIODE 11EQS04												
C404	1-126-933-11	ELECT	100uF	20%	16V	D402	8-719-210-21	DIODE 11EQS04												
C405	1-164-159-11	CERAMIC	0.1uF		50V	D403	8-719-210-21	DIODE 11EQS04												
C406	1-124-252-00	ELECT	0.33uF	20%	50V	D404	8-719-210-21	DIODE 11EQS04												
C407	1-162-294-31	CERAMIC	0.001uF	10%	50V	D406	8-719-911-19	DIODE 1SS119												
C411	1-126-939-11	ELECT	10000uF	20%	16V	D408	8-719-210-21	DIODE 11EQS04												
C412	1-164-159-11	CERAMIC	0.1uF		50V	D409	8-719-210-21	DIODE 11EQS04												
C416	1-126-926-11	ELECT	1000uF	20%	10V	D411	8-719-024-99	DIODE 11ES2-NTA2B												
C421	1-164-159-11	CERAMIC	0.1uF		50V	D412	8-719-024-99	DIODE 11ES2-NTA2B												
C422	1-164-159-11	CERAMIC	0.1uF		50V	D421	8-719-024-99	DIODE 11ES2-NTA2B												
C423	1-128-576-11	ELECT	100uF	20%	63V	D422	8-719-109-81	DIODE RD4.7ESB2												
C424	1-164-159-11	CERAMIC	0.1uF		50V	D431	8-719-911-19	DIODE 1SS119												
C425	1-126-967-11	ELECT	47uF	20%	50V	D432	8-719-911-19	DIODE 1SS119												
C426	1-126-965-11	ELECT	22uF	20%	50V	D433	8-719-911-19	DIODE 1SS119												
C431	1-126-966-11	ELECT	33uF	20%	16V	D461	8-719-024-99	DIODE 11ES2-NTA2B												
C432	1-128-551-11	ELECT	22uF	20%	25V	D462	8-719-024-99	DIODE 11ES2-NTA2B												
C441	1-126-933-11	ELECT	100uF	20%	16V	D466	8-719-024-99	DIODE 11ES2-NTA2B												
C442	1-162-306-11	CERAMIC	0.01uF	20%	16V	D467	8-719-024-99	DIODE 11ES2-NTA2B												
C443	1-162-306-11	CERAMIC	0.01uF	20%	16V	D801	8-719-911-19	DIODE 1SS119												
C461	1-126-935-11	ELECT	470uF	20%	16V															
C466	1-126-935-11	ELECT	470uF	20%	16V															
C500	1-131-347-00	TANTALUM	1uF	10%	35V															

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
		< INDUCTOR >		R284	1-247-864-11	CARBON	24K 5% 1/4W
FB356	1-412-473-21	INDUCTOR (SMALL TYPE)		R285	1-249-417-11	CARBON	1K 5% 1/4W
FB357	1-412-473-21	INDUCTOR (SMALL TYPE)		R286	1-249-417-11	CARBON	1K 5% 1/4W
		< IC >		R287	1-249-437-11	CARBON	47K 5% 1/4W
IC301	8-759-553-65	IC uDA1341TS		R288	1-249-415-11	CARBON	680 5% 1/4W
IC351	8-759-917-18	IC SN74HCU04AN		R289	1-249-411-11	CARBON	330 5% 1/4W
IC381	8-759-634-50	IC M5218AL		R351	1-247-903-00	CARBON	1M 5% 1/4W
IC386	8-759-634-50	IC M5218AL		R352	1-249-413-11	CARBON	470 5% 1/4W
IC401	8-759-445-59	IC BA033T		R355	1-249-407-11	CARBON	150 5% 1/4W
IC406	8-759-481-02	IC M62016L		R356	1-249-409-11	CARBON	220 5% 1/4W
IC411	8-759-231-53	IC TA7805S		R391	1-249-441-11	CARBON	100K 5% 1/4W
IC421	8-759-633-42	IC M5293L		R392	1-247-883-00	CARBON	150K 5% 1/4W
IC441	8-759-822-09	IC LB1641		R406	1-249-409-11	CARBON	220 5% 1/4W
IC501	8-759-577-40	IC M30620MC-400FP		R407	1-249-429-11	CARBON	10K 5% 1/4W
IC601	8-759-917-18	IC SN74HCU04AN		R420	1-247-881-00	CARBON	120K 5% 1/4W
IC611	8-749-012-70	IC GP1F38R (DIGITAL IN)		R422	1-249-441-11	CARBON	100K 5% 1/4W
		< JACK >		R423	1-249-409-11	CARBON	220 5% 1/4W
J101	1-784-429-11	JACK, PIN 4P (LINE, ANALOG IN/OUT)		R424	1-249-409-11	CARBON	220 5% 1/4W
		< COIL >		R431	1-247-807-31	CARBON	100 5% 1/4W
L611	1-410-509-11	INDUCTOR	10uH	R432	1-247-826-00	CARBON	620 5% 1/4W
		< TRANSISTOR >		R433	1-247-822-11	CARBON	430 5% 1/4W
Q191	8-729-900-74	TRANSISTOR	DTC143TS	R434	1-249-433-11	CARBON	22K 5% 1/4W
Q291	8-729-900-74	TRANSISTOR	DTC143TS	R435	1-249-438-11	CARBON	56K 5% 1/4W
Q390	8-729-422-57	TRANSISTOR	UN4111	R436	1-247-891-00	CARBON	330K 5% 1/4W
Q441	8-729-900-80	TRANSISTOR	DTC114ES	R437	1-249-417-11	CARBON	1K 5% 1/4W
Q442	8-729-119-76	TRANSISTOR	2SA1175-HFE	R441	1-249-431-11	CARBON	15K 5% 1/4W
Q911	8-729-119-78	TRANSISTOR	2SC403SP-51	R442	1-249-433-11	CARBON	22K 5% 1/4W
		< RESISTOR >		R443	1-249-434-11	CARBON	27K 5% 1/4W
R81	1-249-441-11	CARBON	100K 5% 1/4W (US, CND)	R509	1-249-441-11	CARBON	100K 5% 1/4W
R82	1-249-441-11	CARBON	100K 5% 1/4W (EXCEPT US, CND)	R513	1-247-903-00	CARBON	1M 5% 1/4W
R87	1-249-441-11	CARBON	100K 5% 1/4W	R519	1-249-429-11	CARBON	10K 5% 1/4W
R101	1-249-417-11	CARBON	1K 5% 1/4W	R530	1-249-429-11	CARBON	10K 5% 1/4W
R102	1-249-441-11	CARBON	100K 5% 1/4W	R531	1-249-429-11	CARBON	10K 5% 1/4W
R106	1-249-430-11	CARBON	12K 5% 1/4W	R533	1-249-429-11	CARBON	10K 5% 1/4W
R181	1-249-429-11	CARBON	10K 5% 1/4W	R542	1-249-429-11	CARBON	10K 5% 1/4W
R182	1-249-429-11	CARBON	10K 5% 1/4W	R543	1-249-429-11	CARBON	10K 5% 1/4W
R183	1-249-433-11	CARBON	22K 5% 1/4W	R550	1-249-429-11	CARBON	10K 5% 1/4W
R184	1-247-864-11	CARBON	24K 5% 1/4W	R551	1-249-429-11	CARBON	10K 5% 1/4W
R185	1-249-417-11	CARBON	1K 5% 1/4W	R553	1-249-429-11	CARBON	10K 5% 1/4W
R186	1-249-417-11	CARBON	1K 5% 1/4W	R559	1-249-429-11	CARBON	10K 5% 1/4W
R187	1-249-437-11	CARBON	47K 5% 1/4W	R560	1-249-429-11	CARBON	10K 5% 1/4W
R188	1-249-415-11	CARBON	680 5% 1/4W	R566	1-249-441-11	CARBON	100K 5% 1/4W
R189	1-249-411-11	CARBON	330 5% 1/4W	R568	1-249-429-11	CARBON	10K 5% 1/4W
R201	1-249-417-11	CARBON	1K 5% 1/4W	R569	1-249-429-11	CARBON	10K 5% 1/4W
R202	1-249-441-11	CARBON	100K 5% 1/4W	R571	1-249-441-11	CARBON	100K 5% 1/4W
R206	1-249-430-11	CARBON	12K 5% 1/4W	R573	1-249-429-11	CARBON	10K 5% 1/4W
R281	1-249-429-11	CARBON	10K 5% 1/4W	R574	1-249-429-11	CARBON	10K 5% 1/4W
R282	1-249-429-11	CARBON	10K 5% 1/4W	R575	1-249-429-11	CARBON	10K 5% 1/4W
R283	1-249-433-11	CARBON	22K 5% 1/4W	R577	1-249-429-11	CARBON	10K 5% 1/4W
				R581	1-249-441-11	CARBON	100K 5% 1/4W (EXCEPT US, CND)
				R582	1-249-441-11	CARBON	100K 5% 1/4W (US, CND)
				R592	1-249-429-11	CARBON	10K 5% 1/4W
				R594	1-249-429-11	CARBON	10K 5% 1/4W
				R595	1-249-429-11	CARBON	10K 5% 1/4W
				R597	1-249-429-11	CARBON	10K 5% 1/4W
				R613	1-247-895-00	CARBON	470K 5% 1/4W

**MAIN**      **PANEL**

Ref. No.	Part No.	Description	Remark		Ref. No.	Part No.	Description	Remark	
R614	1-249-437-11	CARBON	47K	5%	1/4W		< TRANSISTOR >		
R623	1-247-895-00	CARBON	470K	5%	1/4W				
R624	1-249-437-11	CARBON	47K	5%	1/4W	Q741	8-729-422-57	TRANSISTOR	UN4111
R801	1-249-426-11	CARBON	5.6K	5%	1/4W	Q742	8-729-422-57	TRANSISTOR	UN4111
R803	1-249-425-11	CARBON	4.7K	5%	1/4W	Q751	8-729-422-57	TRANSISTOR	UN4111
R804	1-249-429-11	CARBON	10K	5%	1/4W	Q767	8-729-900-74	TRANSISTOR	DTC143TS
R851	1-249-429-11	CARBON	10K	5%	1/4W	Q791	8-729-030-02	TRANSISTOR	DTC144ESA
R911	1-249-425-11	CARBON	4.7K	5%	1/4W	< RESISTOR >			
R912	1-249-437-11	CARBON	47K	5%	1/4W	R702	1-249-421-11	CARBON	2.2K
	< SWITCH >					R703	1-247-843-11	CARBON	3.3K
S851	1-762-175-11	SWITCH, SLIDE (BEEP)				R704	1-249-425-11	CARBON	4.7K
	< VIBRATOR >					R705	1-249-429-11	CARBON	10K
X351	1-579-314-11	VIBRATOR, CRYSTAL (22.5792MHz)				R706	1-249-435-11	CARBON	33K
X513	1-781-174-21	VIBRATOR, CERAMIC (10MHz)				R712	1-249-421-11	CARBON	2.2K
*****	*****	*****				R713	1-247-843-11	CARBON	3.3K
*	A-4724-597-A	PANEL BOARD, COMPLETE (US, CND)				R714	1-249-425-11	CARBON	4.7K
*	A-4724-600-A	PANEL BOARD, COMPLETE				R722	1-249-421-11	CARBON	2.2K
	(AEP, UK, HK, AR, AUS)					R723	1-247-843-11	CARBON	3.3K
*	A-4724-604-A	PANEL BOARD, COMPLETE (SP)				R724	1-249-425-11	CARBON	4.7K
	*****					R725	1-249-429-11	CARBON	10K
*	4-216-341-01	HOLDER (FL)				R726	1-249-435-11	CARBON	33K
	< BUZZER >					R741	1-249-409-11	CARBON	220
BP791	1-504-920-21	BUZZER				R742	1-249-409-11	CARBON	220
	< CAPACITOR >					R751	1-249-409-11	CARBON	220
C700	1-126-153-11	ELECT	22uF	20%	6.3V	R760	1-247-807-31	CARBON	100
C760	1-164-159-11	CERAMIC	0.1uF		50V	R761	1-247-807-31	CARBON	100
C761	1-162-294-31	CERAMIC	0.001uF	10%	50V	R762	1-247-807-31	CARBON	100
C762	1-162-294-31	CERAMIC	0.001uF	10%	50V	R763	1-247-807-31	CARBON	100
C763	1-162-294-31	CERAMIC	0.001uF	10%	50V	R767	1-249-441-11	CARBON	100K
	< SWITCH >					R769	1-247-843-11	CARBON	3.3K
C764	1-164-159-11	CERAMIC	0.1uF		50V	R781	1-249-401-11	CARBON	47
C765	1-126-153-11	ELECT	22uF	20%	6.3V	R782	1-247-807-31	CARBON	100
C766	1-164-159-11	CERAMIC	0.1uF		50V	R791	1-249-429-11	CARBON	10K
C769	1-162-215-31	CERAMIC	47PF	5%	50V		< SWITCH >		
C781	1-124-584-00	ELECT	100uF	20%	10V	S701	1-762-875-21	SWITCH, KEYBOARD (●)	
C782	1-162-306-11	CERAMIC	0.01uF	20%	16V	S702	1-762-875-21	SWITCH, KEYBOARD (■)	
C799	1-164-159-11	CERAMIC	0.1uF		50V	S703	1-762-875-21	SWITCH, KEYBOARD (►►)	
	< CONNECTOR >				S704	1-762-875-21	SWITCH, KEYBOARD (◀◀)		
CN701	1-779-558-11	CONNECTOR, FFC(LIF(NON-ZIF))21P			S705	1-762-875-21	SWITCH, KEYBOARD (II)		
	< LED >				S706	1-762-875-21	SWITCH, KEYBOARD (►)		
D741	8-719-046-44	LED SEL5221S (●)			S711	1-762-875-21	SWITCH, KEYBOARD (MENU/NO)		
D742	8-719-046-43	LED SEL5421E-TP15 (►)			S712	1-762-875-21	SWITCH, KEYBOARD (YES)		
D751	8-719-046-44	LED SEL5221S (I/○)			S713	1-475-543-11	ENCODER, ROTARY	(◀◀↔↔►►, PUSH ENTER)	
	< FLUORESCENT INDICATOR TUBE >				S714	1-762-875-21	SWITCH, KEYBOARD (CLEAR)		
FL771	1-517-865-21	INDICATOR TUBE, FLUORESCENT			S721	1-762-875-21	SWITCH, KEYBOARD (EJECT ▲)		
	< IC >				S722	1-762-875-21	SWITCH, KEYBOARD (PLAY MODE)		
IC761	8-759-426-98	IC MSM9202-02GS-K			S723	1-762-875-21	SWITCH, KEYBOARD (REPEAT)		
IC781	8-749-013-91	IC GP1UC8X (■)			S724	1-762-875-21	SWITCH, KEYBOARD (SCROLL)		
	< IC >				S725	1-762-875-21	SWITCH, KEYBOARD (LEVEL/DISPLAY/CHAR)		
	< IC >				S726	1-762-875-21	SWITCH, KEYBOARD (I/○)		
	< IC >				S731	1-762-404-11	SWITCH, SLIDE (INPUT)		
	*****								

PT

SW

VOL SEL

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark	
*	1-672-979-11	PT BOARD ***** < CAPACITOR >		△63	1-783-531-31	CORD, POWER (US, CND)		
△C901	1-113-920-11	CERAMIC	0.0022uF 20%	250V	△63	1-783-940-31	CORD, POWER (AR)	
△C902	1-113-920-11	CERAMIC	0.0022uF 20%	250V	△64	1-569-008-21	ADAPTOR, CONVERSION 2P (SP)	
C911	1-164-159-11	CERAMIC	0.1uF	50V	65	1-569-972-21	SOCKET, SHORT 2P (EXCEPT AR)	
△C901	1-113-920-11	CERAMIC	0.0022uF 20%	250V	* 258	1-667-954-11	FLEXIBLE BOARD	
△C902	1-113-920-11	CERAMIC	0.0022uF 20%	250V	△260	8-583-028-02	OPTICAL PICK-UP KMS-260A/J1NP	
C911	1-164-159-11	CERAMIC	0.1uF	50V	HR901	1-500-502-11	HEAD, OVER WRITE	
				M101	A-4672-516-A	MOTOR ASSY, SPINDLE		
				M102	A-4672-515-A	MOTOR ASSY, SLED		
* CN901	1-580-230-31	PIN, CONNECTOR (PC BOARD) 2P < DIODE >		M103	X-4949-670-1	MOTOR ASSY, LOADING		
D911	8-719-911-19	DIODE 1SS119 < LINE FILTER >		S102	1-762-148-21	SWITCH, PUSH (2 KEY) (REFLECT DET, PROTECT DET)		
△LF901	1-411-547-11	FILTER, LINE < RELAY >		△TR911	1-433-697-11	TRANSFORMER, POWER (US, CND)		
△RY911	1-755-324-11	RELAY < POWER TRANSFORMER >		△TR911	1-433-698-11	TRANSFORMER, POWER (AEP, UK, HK, AUS)		
△TR901	1-433-702-11	TRANSFORMER, POWER (US, CND)		△TR911	1-433-698-21	TRANSFORMER, POWER (AR)		
△TR901	1-433-703-11	TRANSFORMER, POWER (AEP, UK, HK, AR, AUS)		△TR911	1-433-699-11	TRANSFORMER, POWER (SP)		
△TR901	1-433-704-11	TRANSFORMER, POWER (SP)		***** HARDWARE LIST *****				
△TR911	1-433-697-11	TRANSFORMER, POWER (US, CND)		#1	7-685-647-79	SCREW +BVTP 3X10 TYPE2 N-S		
△TR911	1-433-698-11	TRANSFORMER, POWER (AEP, UK, HK, AUS)		#2	7-685-871-01	SCREW +BVTT 3X6 (S)		
*****				#3	7-621-772-20	SCREW +B 2X5		
*****				#4	7-621-772-40	SCREW +B 2X8		
*****				#5	7-627-852-08	SCREW, PRECISION +P 1.7X2.5		
*****				#6	7-685-533-19	SCREW +BTP 2.6X6 TYPE2 N-S		
*****				#7	7-685-133-19	SCREW +P 2.6X6 TYPE 2 NON-SLIT		
*****				*****				
*****				ACCESSORIES & PACKING MATERIALS				
*****				*****				
*	1-668-111-11	SW BOARD ***** < CONNECTOR >		1-418-270-11	REMOTE COMMANDER (RM-D30P)			
CN601	1-506-486-11	PIN, CONNECTOR 7P < SWITCH >		1-574-264-11	CORD, LIGHT PLUG			
S601	1-572-126-21	SWITCH, PUSH (1 KEY) (REC POSITION)		1-776-263-51	CORD, CONNECTION			
S602	1-572-126-21	SWITCH, PUSH (1 KEY) (PACK OUT)		3-865-729-11	MANUAL, INSTRUCTION (ENGLISH) (EXCEPT AED)			
S604	1-771-264-11	SWITCH, PUSH (DETECTION)(1 KEY) (PB POSITION)		3-865-729-21	MANUAL, INSTRUCTION (FRENCH, SPANISH, PORTUGUESE) (CND, AEP, AR)			
*****				3-865-729-31	MANUAL, INSTRUCTION (DANISH, DUTCH, ITALIAN) (AEP)			
*	1-672-981-11	VOL SEL BOARD (SP) *****		3-865-729-41	MANUAL, INSTRUCTION (SWEDISH, DANISH, FINISH) (AED)			
△S951	1-771-474-11	SWITCH, POWER (VOLTAGE SELECTOR)		3-865-729-51	MANUAL, INSTRUCTION (ENGLISH, POLISH, RUSSIAN) (AEP)			
*****				3-865-729-61	MANUAL, INSTRUCTION (CHINESE) (SP, HK)			
*****				4-981-643-11	COVER, BATTERY (for RM-D30P)			
12	1-790-511-11	WIRE (FLAT TYPE) (21 CORE) (PANEL-MAIN)						
54	1-783-139-11	WIRE (FLAT TYPE) (21 CORE) (BD-MAIN)						
55	1-783-140-11	WIRE (FLAT TYPE) (23 CORE)						
△63	1-696-586-21	CORD, POWER (UK, HK)						
△63	1-696-846-21	CORD, POWER (AUS)						
△63	1-777-071-31	CORD, POWER (AEP, AED, SP)						

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

