


STR-GX311

SERVICE MANUAL

AEP Model

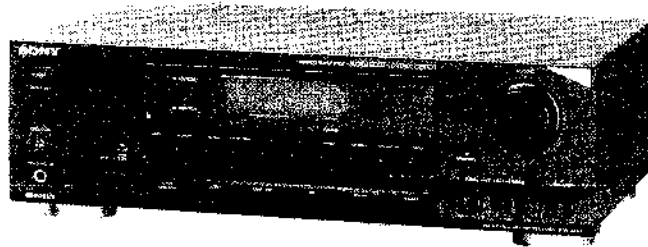

 R-D-SEON

SPECIFICATIONS

Amplifier section

	Model for Scandinavian countries, Switzerland, Spain and Portugal	Model for other countries
DIN, 1 kHz	60 W + 60 W (8 ohms)	70 W + 70 W (4 ohms) 60 W + 60 W (8 ohms)
20 Hz - 20 kHz THD 0.3 %	40 W + 40 W (8 ohms)	50 W + 50 W (4 ohms) 40 W + 40 W (8 ohms)

Harmonic distortion

Less than 0.8% at rated output

Frequency response

PHONO: RIAA equalization curve ± 0.5 dB

CD

VIDEO

TAPE

10 Hz - 50 kHz ± 0 dB
 ± 3 dB

Inputs

	Sensitivity	Impedance	S/N (weighting network, input level)
PHONO	2.5 mV	50 kilohms	74 dB
CD, VIDEO TAPE 1, 2	200 mV	50 kilohms	95 dB

Outputs

REC OUT, VIDEO (AUDIO) OUT	Voltage 200 mV Impedance 10 kilohms
SPEAKER A, B	Accepts speakers of 8-16 ohms
HEADPHONES	Accepts low and high impedance headphones

Tone controls

BASS: ± 10 dB at 100 Hz

TREBLE: ± 10 dB at 10 kHz

Loudness

+6 dB (100 Hz)

— Continued on next page —

FM STEREO/FM-AM RECEIVER

SONY[®]

Tuner section

	FM tuner section	AM tuner section
Tuning range	87.5 – 108 MHz	531 – 1602 kHz
Antenna	75 ohms, unbalanced	External antenna terminal
Sensitivity at 50 dB quieting	18.3 dBf, 2.2 μ V (mono) 40 dBf, 24.5 μ V (stereo)	—
Usable sensitivity	11.2 dBf, 1 μ V (IHF)	Loop antenna: 300 μ V (at 999 kHz)
Signal-to-noise ratio	70 dB (mono) 65 dB (stereo)	54 dB (at 50 mV/m)
Harmonic distortion	0.3% (mono), 0.5% (stereo) at 1 kHz	0.5% (at 50 mV/m, 400 Hz)
Selectivity	60 dB at 400 kHz	30 dB at 10 kHz
Separation	45 dB at 1 kHz	—
Frequency response	30 Hz — 15 kHz ± 0.5 dB	—

General

System

Tuner section: PLL quartz-locked digital synthesizer system
 Preamplifier section: low-noise NF type equalizer amp
 Power amplifier section: pure complementary SEPP

Power requirements

220 – 230 V AC, 50/60 Hz

Power consumption

Model for Scandinavian countries, Switzerland, Spain and Portugal: 110 W
 Model for other countries: 160 W

AC outlet

One switched (100 W Max.)

Dimensions

Approx. 430 x 135 x 305 mm (w/h/d)
 (17 x 5 $\frac{3}{8}$ x 11 $\frac{7}{8}$ inches)
 including projecting parts and controls

Weight:

Approx. 6.2 kg (13 lb 1 oz)

Accessories supplied

FM wire antenna (1)
 AM loop antenna (1)
 Remote Commander RM-S103 (1)
 Sony batteries SUM-3(NS) (2)

Design and specifications are subject to change without notice.

Note

This appliance conforms with EEC Directive 87/308/EEC regarding interference suppression.

SAFETY-RELATED COMPONENT WARNING!!




COMPONENTS IDENTIFIED BY MARK  OR DOTTED LINE WITH MARK  ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

TABLE OF CONTENTS

Section	Title	Page
SECTION 1. GENERAL		
	Identifying the Parts and Controls	3
SECTION 2. ELECTRICAL ADJUSTMENTS		
SECTION 3. IC PIN FUNCTIONS		
SECTION 4. DIAGRAMS		
4-1.	Circuit Boards Location	7
4-2.	Semiconductor Lead Layouts	8
4-3.	Block Diagram	9
4-4.	Printed Wiring Board — Main Section —	11
4-5.	Schematic Diagram — Main Section —	15
4-6.	Printed Wiring Board — Display Section —	20
4-7.	Schematic Diagram — Display Section —	23
4-8.	IC Block Diagrams	25
SECTION 5. EXPLODED VIEWS		
5-1.	Front Panel Section	27
5-2.	Chassis Section	28
SECTION 6. ELECTRICAL PARTS LIST		
		29

MODEL IDENTIFICATION

— BACK PANEL —

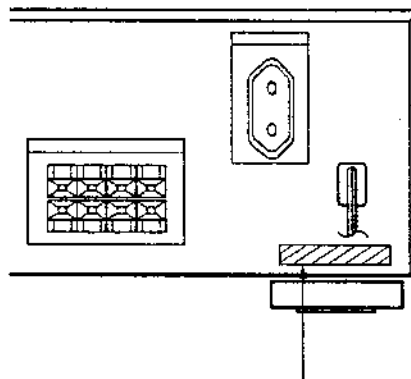


4-957-709-1□ AE2 (AEP2) : Scandinavian countries, Switzerland,
 Spain and Portugal
 4-957-709-0□ AE1 (AEP1) : Other European countries
 4-957-709-2□ G : German model

SECTION 1 GENERAL

This section is extracted from instruction manual.

Identifying Parts and Controls


STR-GX311

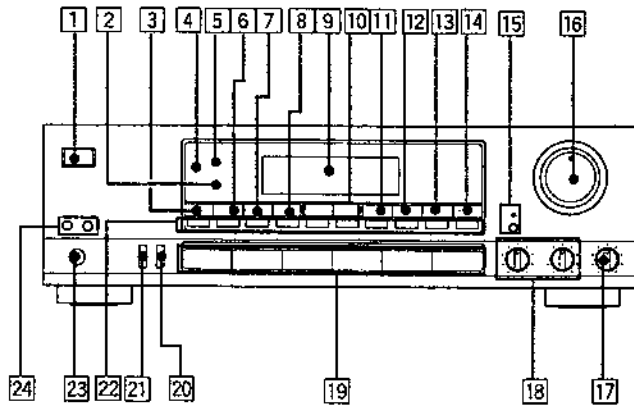

Front Panel

- 1 POWER switch
- 2 MONITOR indicator (page 58.)
- 3 SHIFT button (pages 40 and 42.)
- 4 Remote sensor
- 5 STANDBY indicator
The STANDBY indicator lights up when the power cord is connected.
- 6 MEMORY button (pages 30 and 40.)
- 7 BAND button (pages 34 and 38.)
- 8 TUNING/PRESET button (pages 38 and 44.)
- 9 Display window
- 10 +/- buttons (pages 38 and 44.)
- 11 TUNING DIRECT button (page 34.)
- 12 FM MODE button (page 36.)
- 13 CHARACTER button (page 30.)
- 14 DISPLAY button (pages 34 and 52.)
- 15 LOUDNESS button and indicator (page 26.)
- 16 VOLUME control (page 26.)
- 17 BALANCE control (page 26.)
- 18 BASS/TREBLE controls (page 26.)
- 19 Function selectors
When the TAPE 2 MONITOR is pressed, the indicator of the last selected function also remains lit. But the TAPE 2 MONITOR button has priority and the taped or digital audio taped program can be heard.
- 20 EON (TA-NEWS-INFO) button (page 54.)
- 21 PTY button (page 56.)
- 22 Numeric buttons (pages 34, 40 and 42.)
- 23 HEADPHONES jack (page 26.)
- 24 SPEAKERS A/B buttons (page 26.)

Remote Commander RM-S103

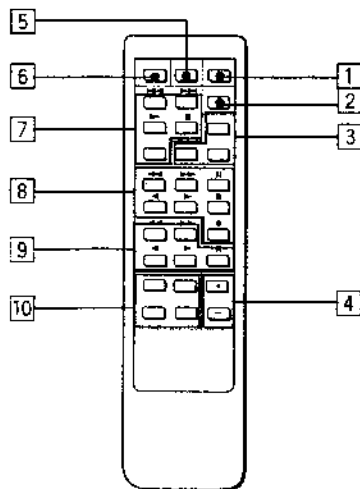

- 1 POWER button
- 2 DBFB button*
- 3 TUNER PRESET +/- and SHIFT buttons
- 4 VOLUME +/- buttons
- 5 SURROUND button*
- 6 MUTING button*
- 7 CD player operation buttons
D. (disc) SKIP: When your CD player is equipped with a multi-disc changer, use this button to select loaded disc.
CD ▶: Selects the CD function and starts CD playback.
- 8 DECK B operation buttons (also for single tape deck)
DECK B ◀▶: Select tape function and start tape playback on deck B.
◀◀▶▶: Fast winding
⏸: Pause
■: Stop
●: Recording
- 9 DECK A operation buttons
DECK A ◀▶: Select tape function and start tape playback on deck A.
◀◀▶▶: Fast winding
⏸: Pause
- 10 Function select buttons
When one of these buttons is pressed in the STANDBY mode, the power is turned on automatically.


* These buttons does not function for the unit.

Note on the remote commander
For the functions other than the receiver's own ones, the remote commander is effective only with Sony components having a remote sensor with a mark.

SECTION 2 ELECTRICAL ADJUSTMENTS

• FM Signal Level Display Adjustment


Setting:

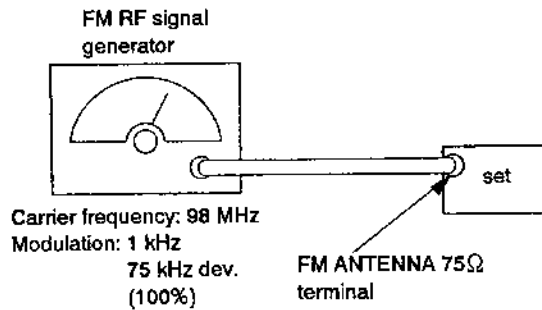

Procedure:

1. Tune the set to 98 MHz.
2. Apply 80 dB μ , 98 MHz signal to the FM antenna terminal.
3. Press the DISPLAY button of the unit to indicate the signal level.
4. Adjust RV1 so that signal level indication is changed from **SIG 71 dB** to **SIG 75 dB**.
5. Apply 81 dB μ , 98 MHz signal to the FM antenna terminal.
6. Make sure that the signal level indication is **SIG75dB**. If not, repeat step 2 to 6.

[MAIN BOARD] (COMPONENT SIDE)

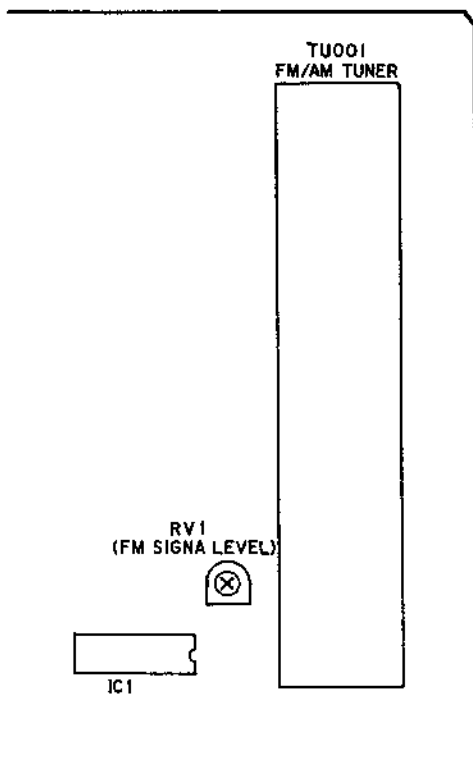

SECTION 3 IC PIN FUNCTIONS


IC300 SYSTEM CONTROL IC (μ PD78043GF-044-3B9)

PIN No.	I/O	PIN NAME	FUNCTION
1	O	7G	Drives indicator tube.
2	O	6G	Drives indicator tube.
3	O	5G	Drives indicator tube.
4	O	4G	Drives indicator tube.
5	O	3G	Drives indicator tube.
6	O	2G	Drives indicator tube.
7	O	1G	Drives indicator tube.
8	—	VDD	5V
9	I	RDS-CLOCK	RDS CLOCK input.
10		NC	
11	I	RDS-DATA	RDS DATA input.
12	O	RDS-RESET	RESET output for LC7073M.
13	O	LATCH	} FUNCTION output for tuner.
14	O	CLOCK	
15	O	DATA	
16		IF-D	IF COUNT DATA input.
17	I	RESET	System RESET input.
18	I	A-STOP	TUNED input.
19	I	STEREO	"L" when STEREO is received.
20	—	GND	
21	I	POWER IN	POWER ON/OFF input.
22	I	FUNC SEL	Fixed "H".
23	I	FUN 2	Input for detecting motor FUNCTION position.
24	I	FUN 1	Input for detecting motor FUNCTION position.
25	I	FUN 0	Input for detecting motor FUNCTION position.
26	I	SIGNAL	SIGNAL input.
27	I	KEY 1	KEY input port.
28	I	KEY 0	KEY input port.
29	—	A/D VDD	A/D converter power supply.
30	I	A/D REF	A/D converter power supply reference voltage.
31	—	GND	
32		NC	
33	—	GND	
34	I	X1	Oscillation signal input (4.19MHz).
35	O	X2	Oscillation signal output (4.19MHz).
36	O	FUN CCW	Operates the motor for motor FUNCTION.
37	O	FUN CW	Operates the motor for motor FUNCTION.
38	O	VOL-	Motor for VOL. "H" when DOWN.
39	O	VOL+	Motor for VOL. "H" when UP.
40	—	GND	


PIN No.	I/O	PIN NAME	FUNCTION
41	O	T-MUT	TUNER MUTE output.
42	O	P-MUT	PROTECT MUTE output.
43	O	F-MUT	FUNCTION MUTE output.
44	I	PROTECT IN	PROTECT detection input.
45	I	RDS-START	RDS DATA START pin.
46	I	R-IN	Remote commander input.
47	I	STOP	Power ON/OFF Monitor.
48		NC	Fixed "L".
49		SP-RY	Activates SPEAKER RELAY.
50	O	POWER RY	Activates POWER RELAY.
51	I	RDS-ID	RDS-ID detection input.
52	-	V _{DD}	5V
53	O	STANBY	Activates standby LED.
54	O	VOL-LED	Activates VOL-LED.
55	O	TAPE2-RELAY	Activates TAPE 2 relay.
56	O	S-DIRECT-RELAY	Activates source direct relay.
57	-	GND	
58	-	GND	
59	-	GND	
60	-	GND	
61		LOUDNESS	LOUDNESS CONTROL output.
62	O	P15	Drives indicator tube.
63	O	P14	Drives indicator tube.
64	O	P13	Drives indicator tube.
65	O	P12	Drives indicator tube.
66	O	P11	Drives indicator tube.
67	O	P10	Drives indicator tube.
68	O	P9	Drives indicator tube.
69	O	P8	Drives indicator tube.
70	O	P7	Drives indicator tube.
71	-	- 24V	- 24V
72	O	P6	Drives indicator tube.
73	O	P5	Drives indicator tube.
74	O	P4	Drives indicator tube.
75	O	P3	Drives indicator tube.
76	O	P2	Drives indicator tube.
77	O	P1	Drives indicator tube.
78	O	10G	Drives indicator tube.
79	O	9G	Drives indicator tube.
80	O	8G	Drives indicator tube.

SECTION 4 DIAGRAMS

4-1. CIRCUIT BOARDS LOCATION

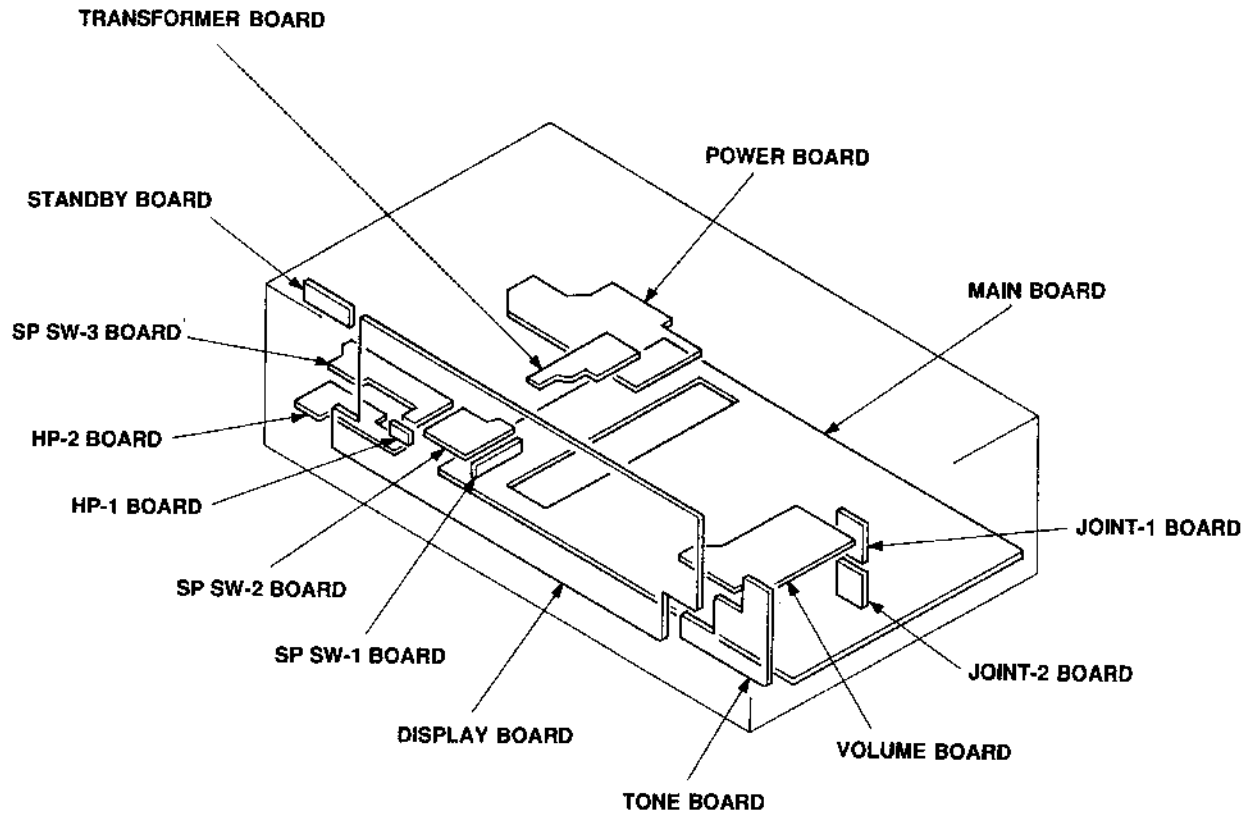

4-3. BLOCK DIAGRAM

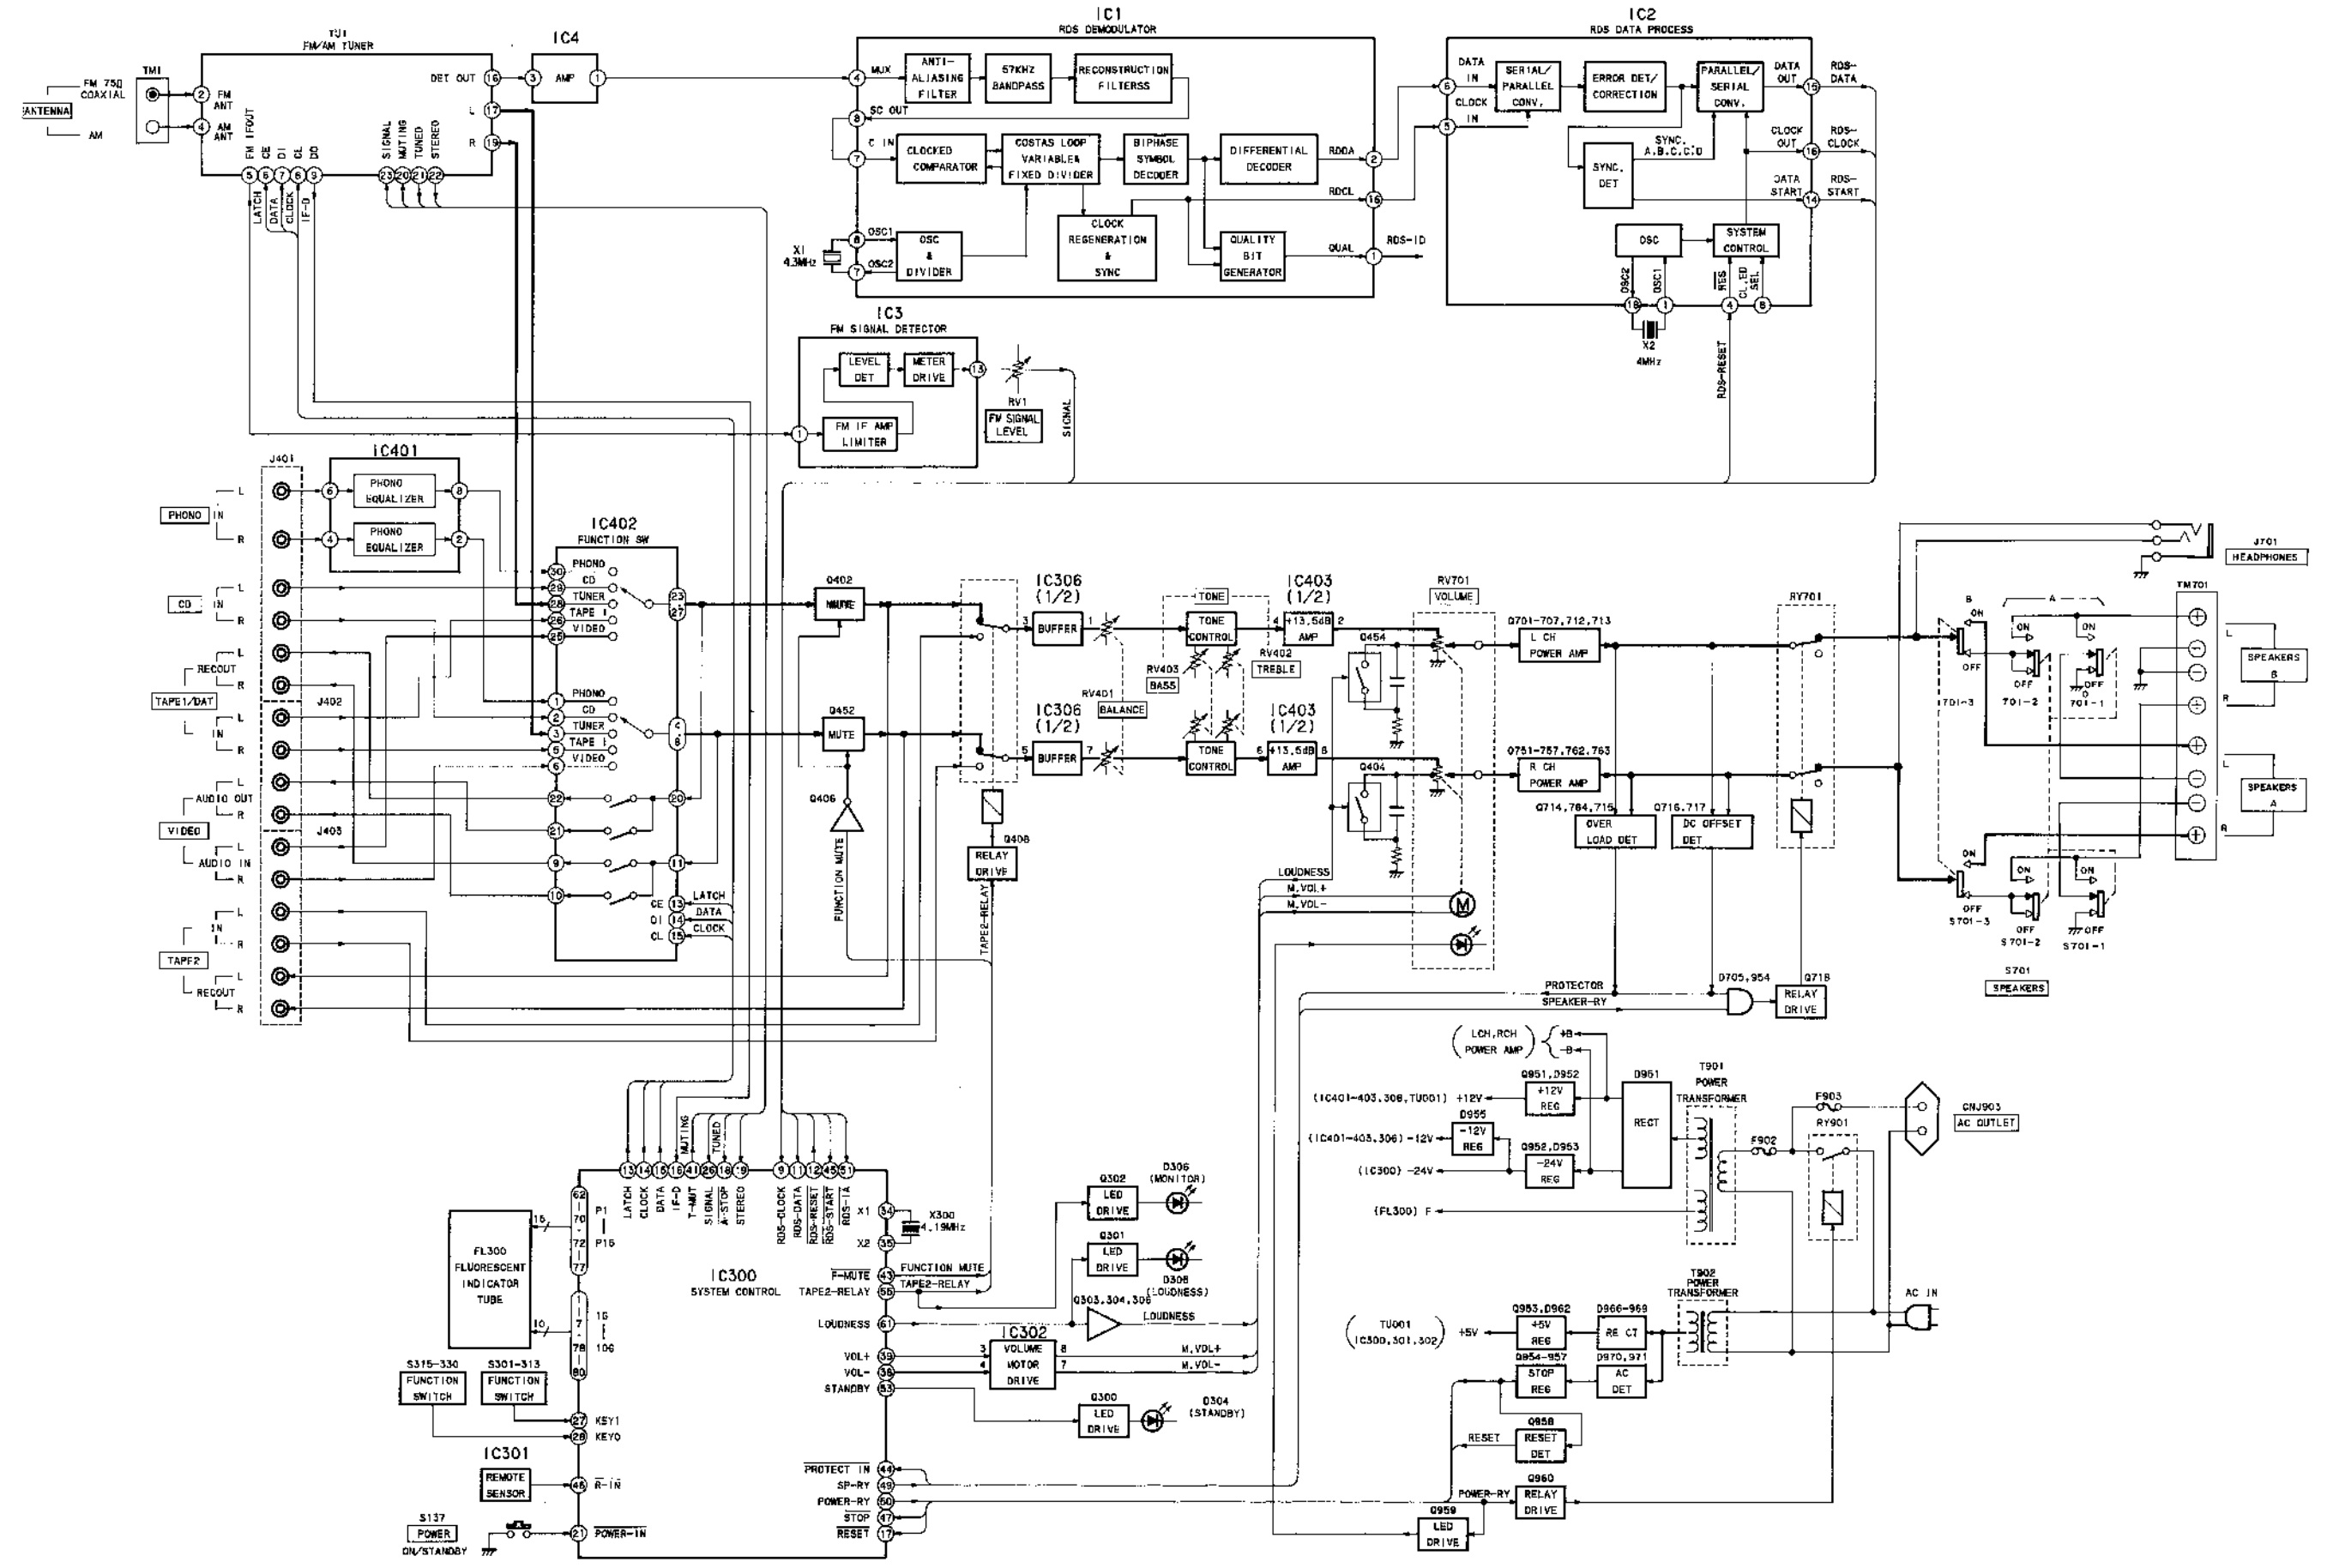


4-4. PRINTED WIRING BOARD — MAIN SECTION —
 - See page 7 for Circuit Boards Location and see page 8 for Semiconductor Lead Layouts.


• Semiconductor Location

Ref. No.	Location	Ref. No.	Location
D401	J-10	Q713	G-15
D403	C-14	Q714	H-13
D404	H-2	Q715	H-12
D701	F-11	Q716	G-11
D702	G-11	Q717	G-11
D703	H-13	Q718	H-11
D704	J-14	Q751	E-11
D705	G-12	Q752	C-12
D751	E-11	Q753	E-12
D752	E-11	Q754	E-11
D753	D-13	Q755	D-12
D901	G-24	Q756	E-14
D951	E-13	Q757	D-12
D952	I-9	Q762	F-15
D953	G-10	Q763	D-15
D954	G-12	Q764	E-13
D955	G-10	Q951	H-8
D956	H-11	Q952	H-10
D962	I-13	Q953	I-12
D963	J-13	Q954	I-13
D964	I-13	Q955	I-12
D965	H-12	Q956	I-12
D966	I-12	Q957	H-12
D967	I-12	Q958	H-12
D968	I-12	Q959	G-10
D969	I-12	Q960	I-11
D970	J-12		
D971	J-12		
IC1	F-8		
IC2	F-8		
IC3	E-8		
IC4	E-7		
IC306	E-10		
IC401	C-9		
IC402	C-10		
IC403	G-3		
Q402	C-12		
Q404	G-2		
Q406	I-8		
Q408	C-14		
Q452	C-12		
Q454	G-4		
Q701	F-11		
Q702	F-11		
Q703	F-12		
Q704	F-11		
Q705	H-12		
Q706	G-14		
Q707	G-12		
Q712	H-15		

Note:
 • — : parts extracted from the components side.
 • — : parts extracted from the components side.
 • — : Pattern from the side which enable seen.

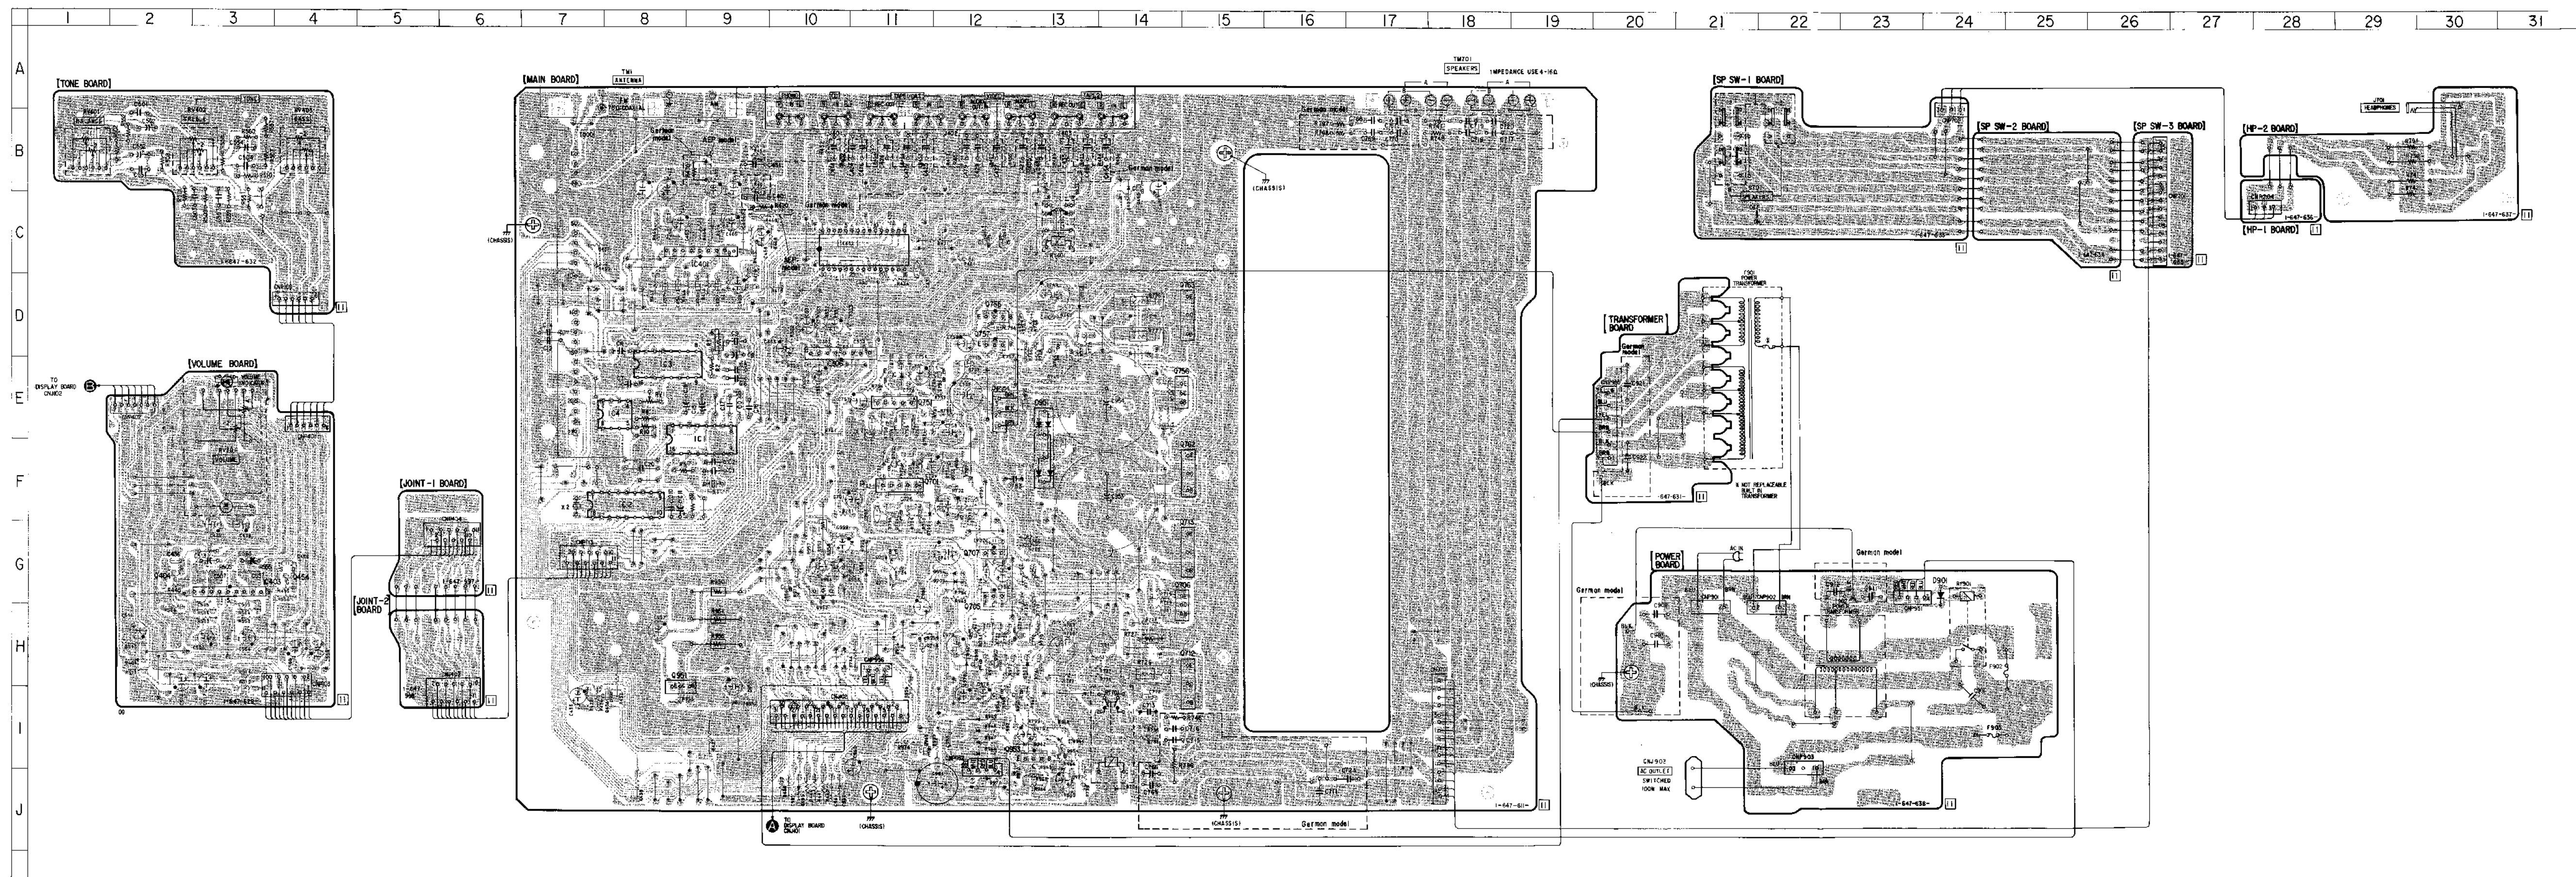

4-5. SCHEMATIC DIAGRAM — MAIN SECTION —
• See page 25, 26 for IC Block Diagrams.

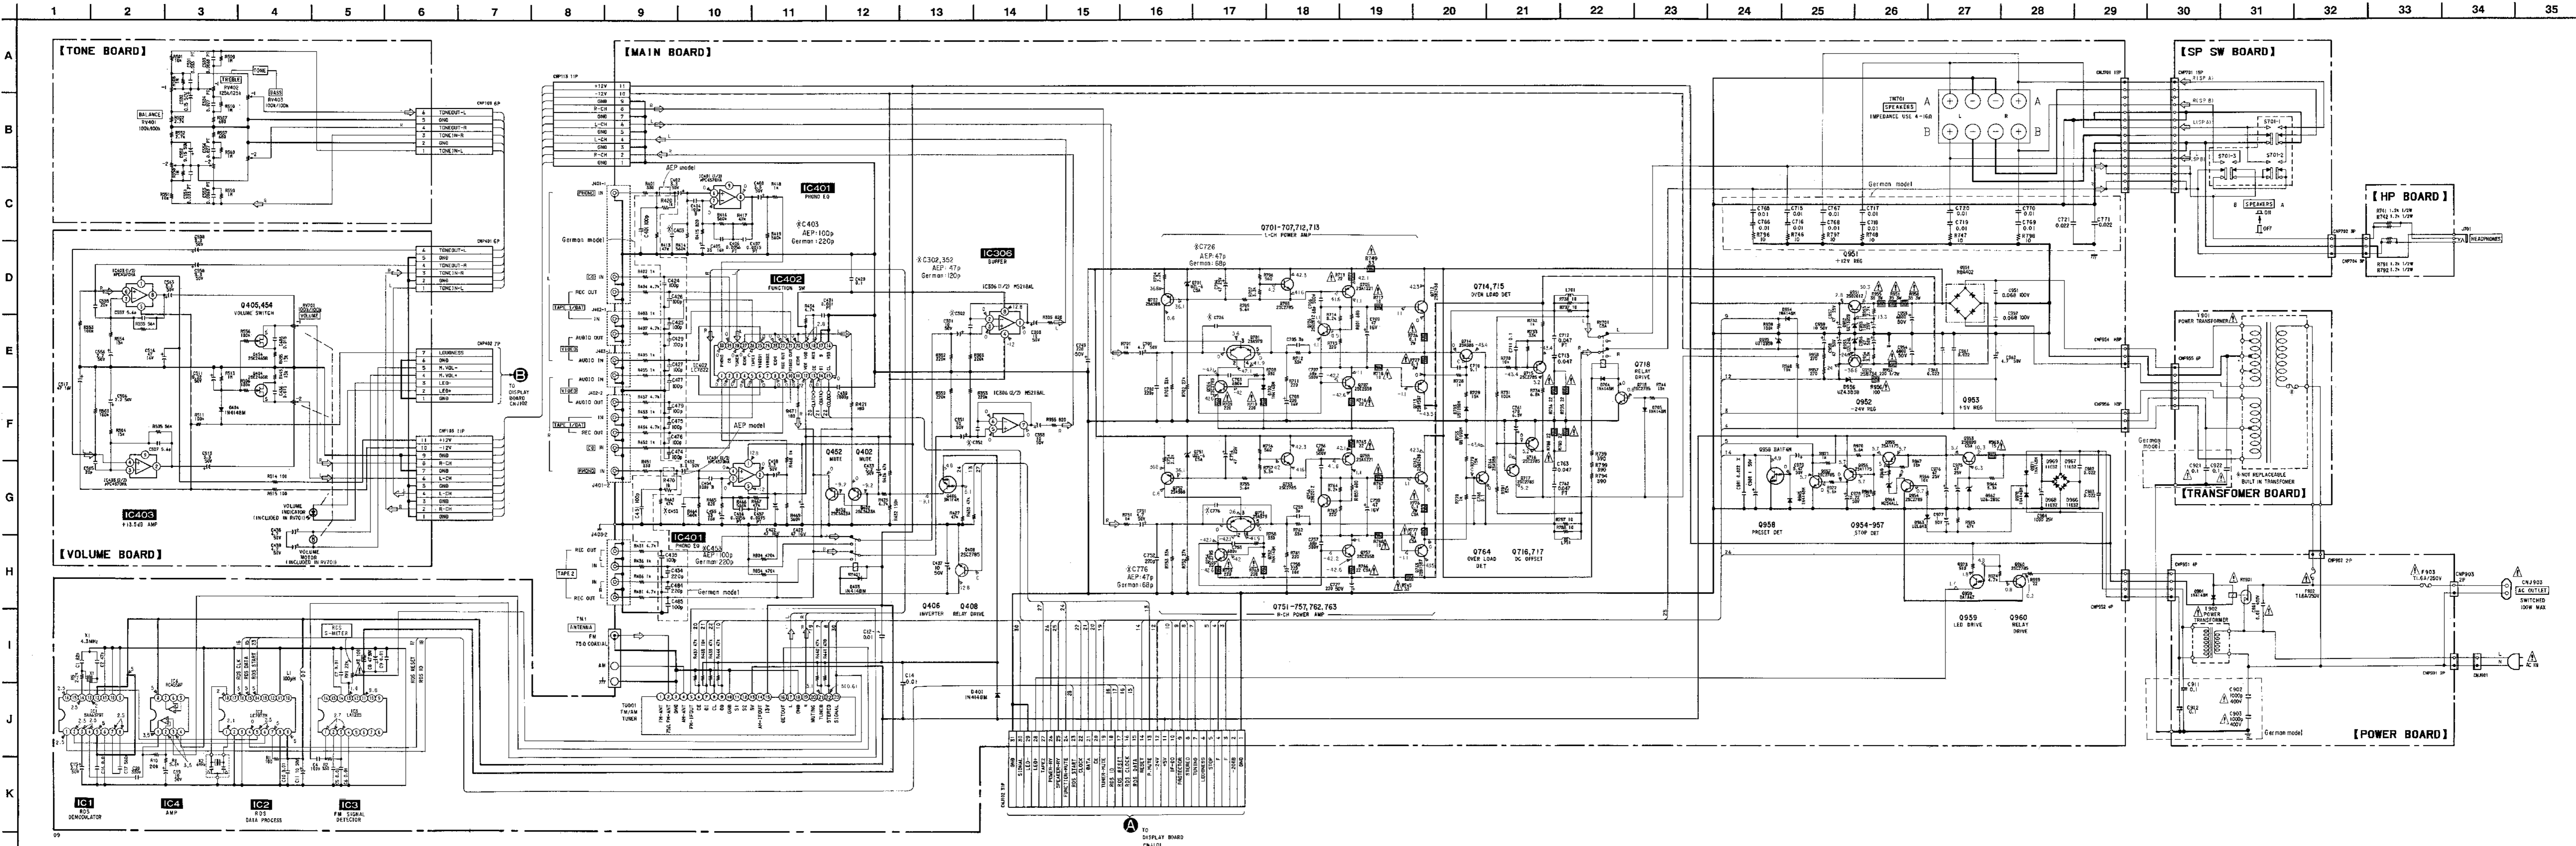

Note:


- All capacitors are in μF unless otherwise noted. pF μF 50WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and 1/4W or less unless otherwise specified.
- % : Indicates tolerance.
- : Panel designation.
- : nonflammable resistor.

Note: The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.


Note:

- : B+ Line
- : B- Line
- Voltage and waveforms are dc with respect to ground under no-signal conditions.
- () : AM
- Voltages are taken with a VOM (Input impedance 10M Ω).
- Voltage variations may be noted due to normal production tolerances.
- Signal path.
- : FM

4-6. PRINTED WIRING BOARD — DISPLAY SECTION —
 • See page 7 for Circuit Boards Location and see page 8 for Semiconductor Lead Layouts.

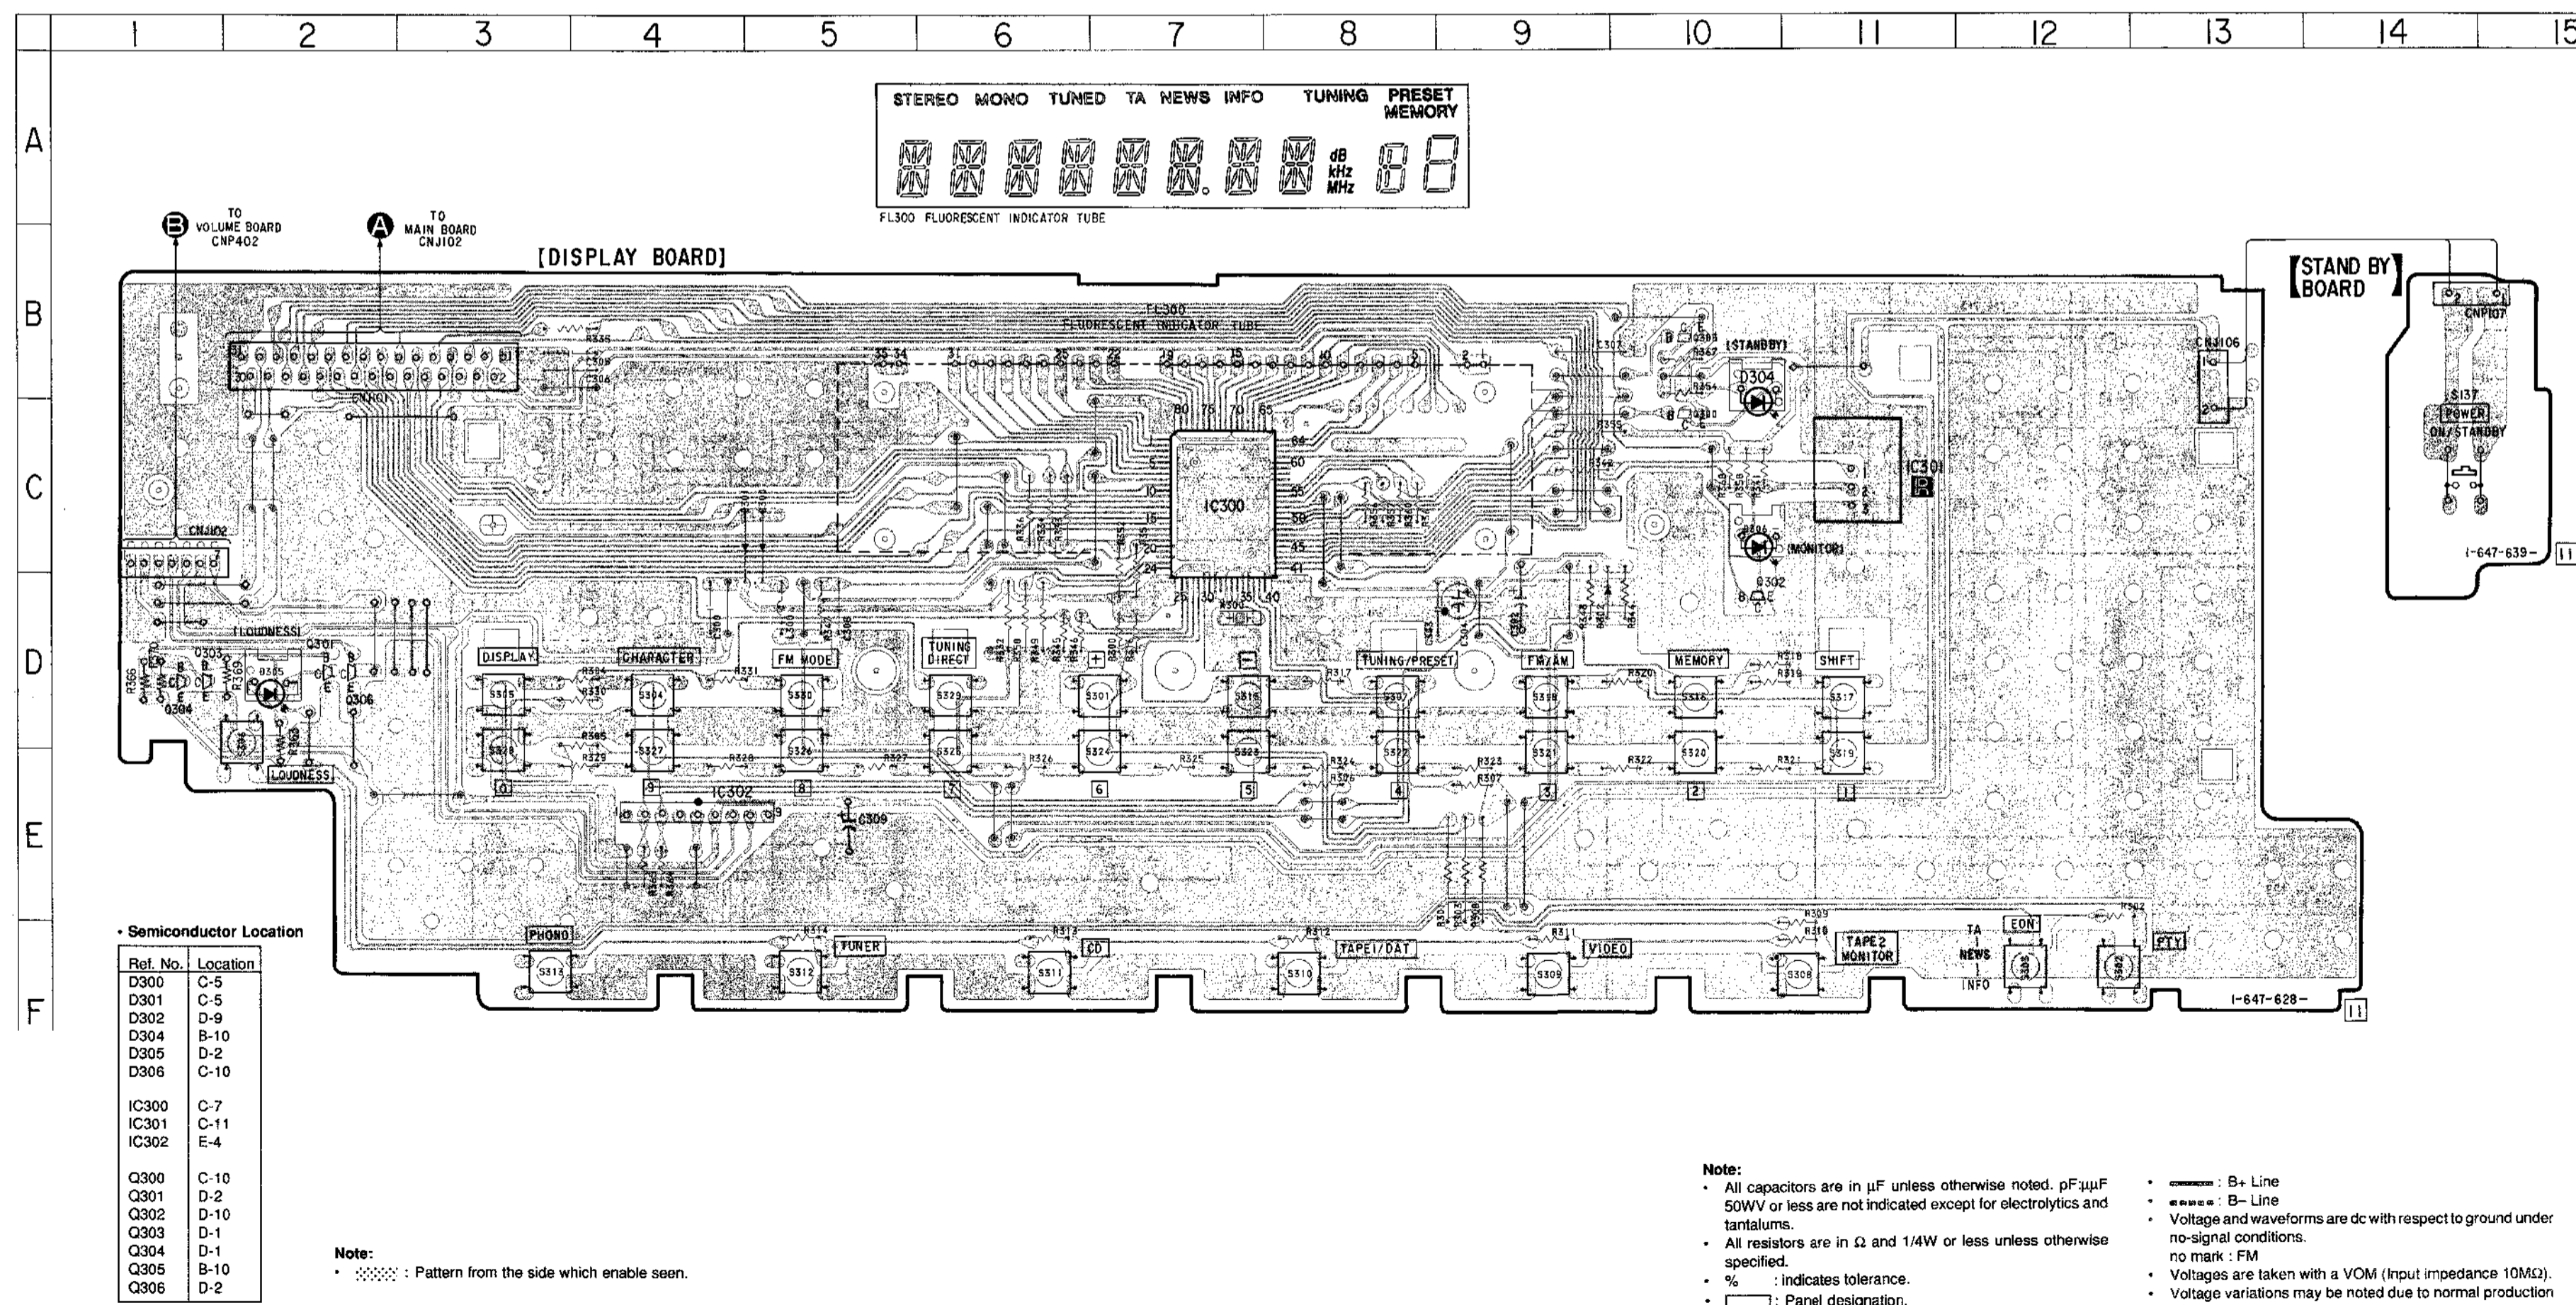


4-7. SCHEMATIC DIAGRAM — DISPLAY SECTION —
 • See page 25, 26 for IC Block Diagrams.

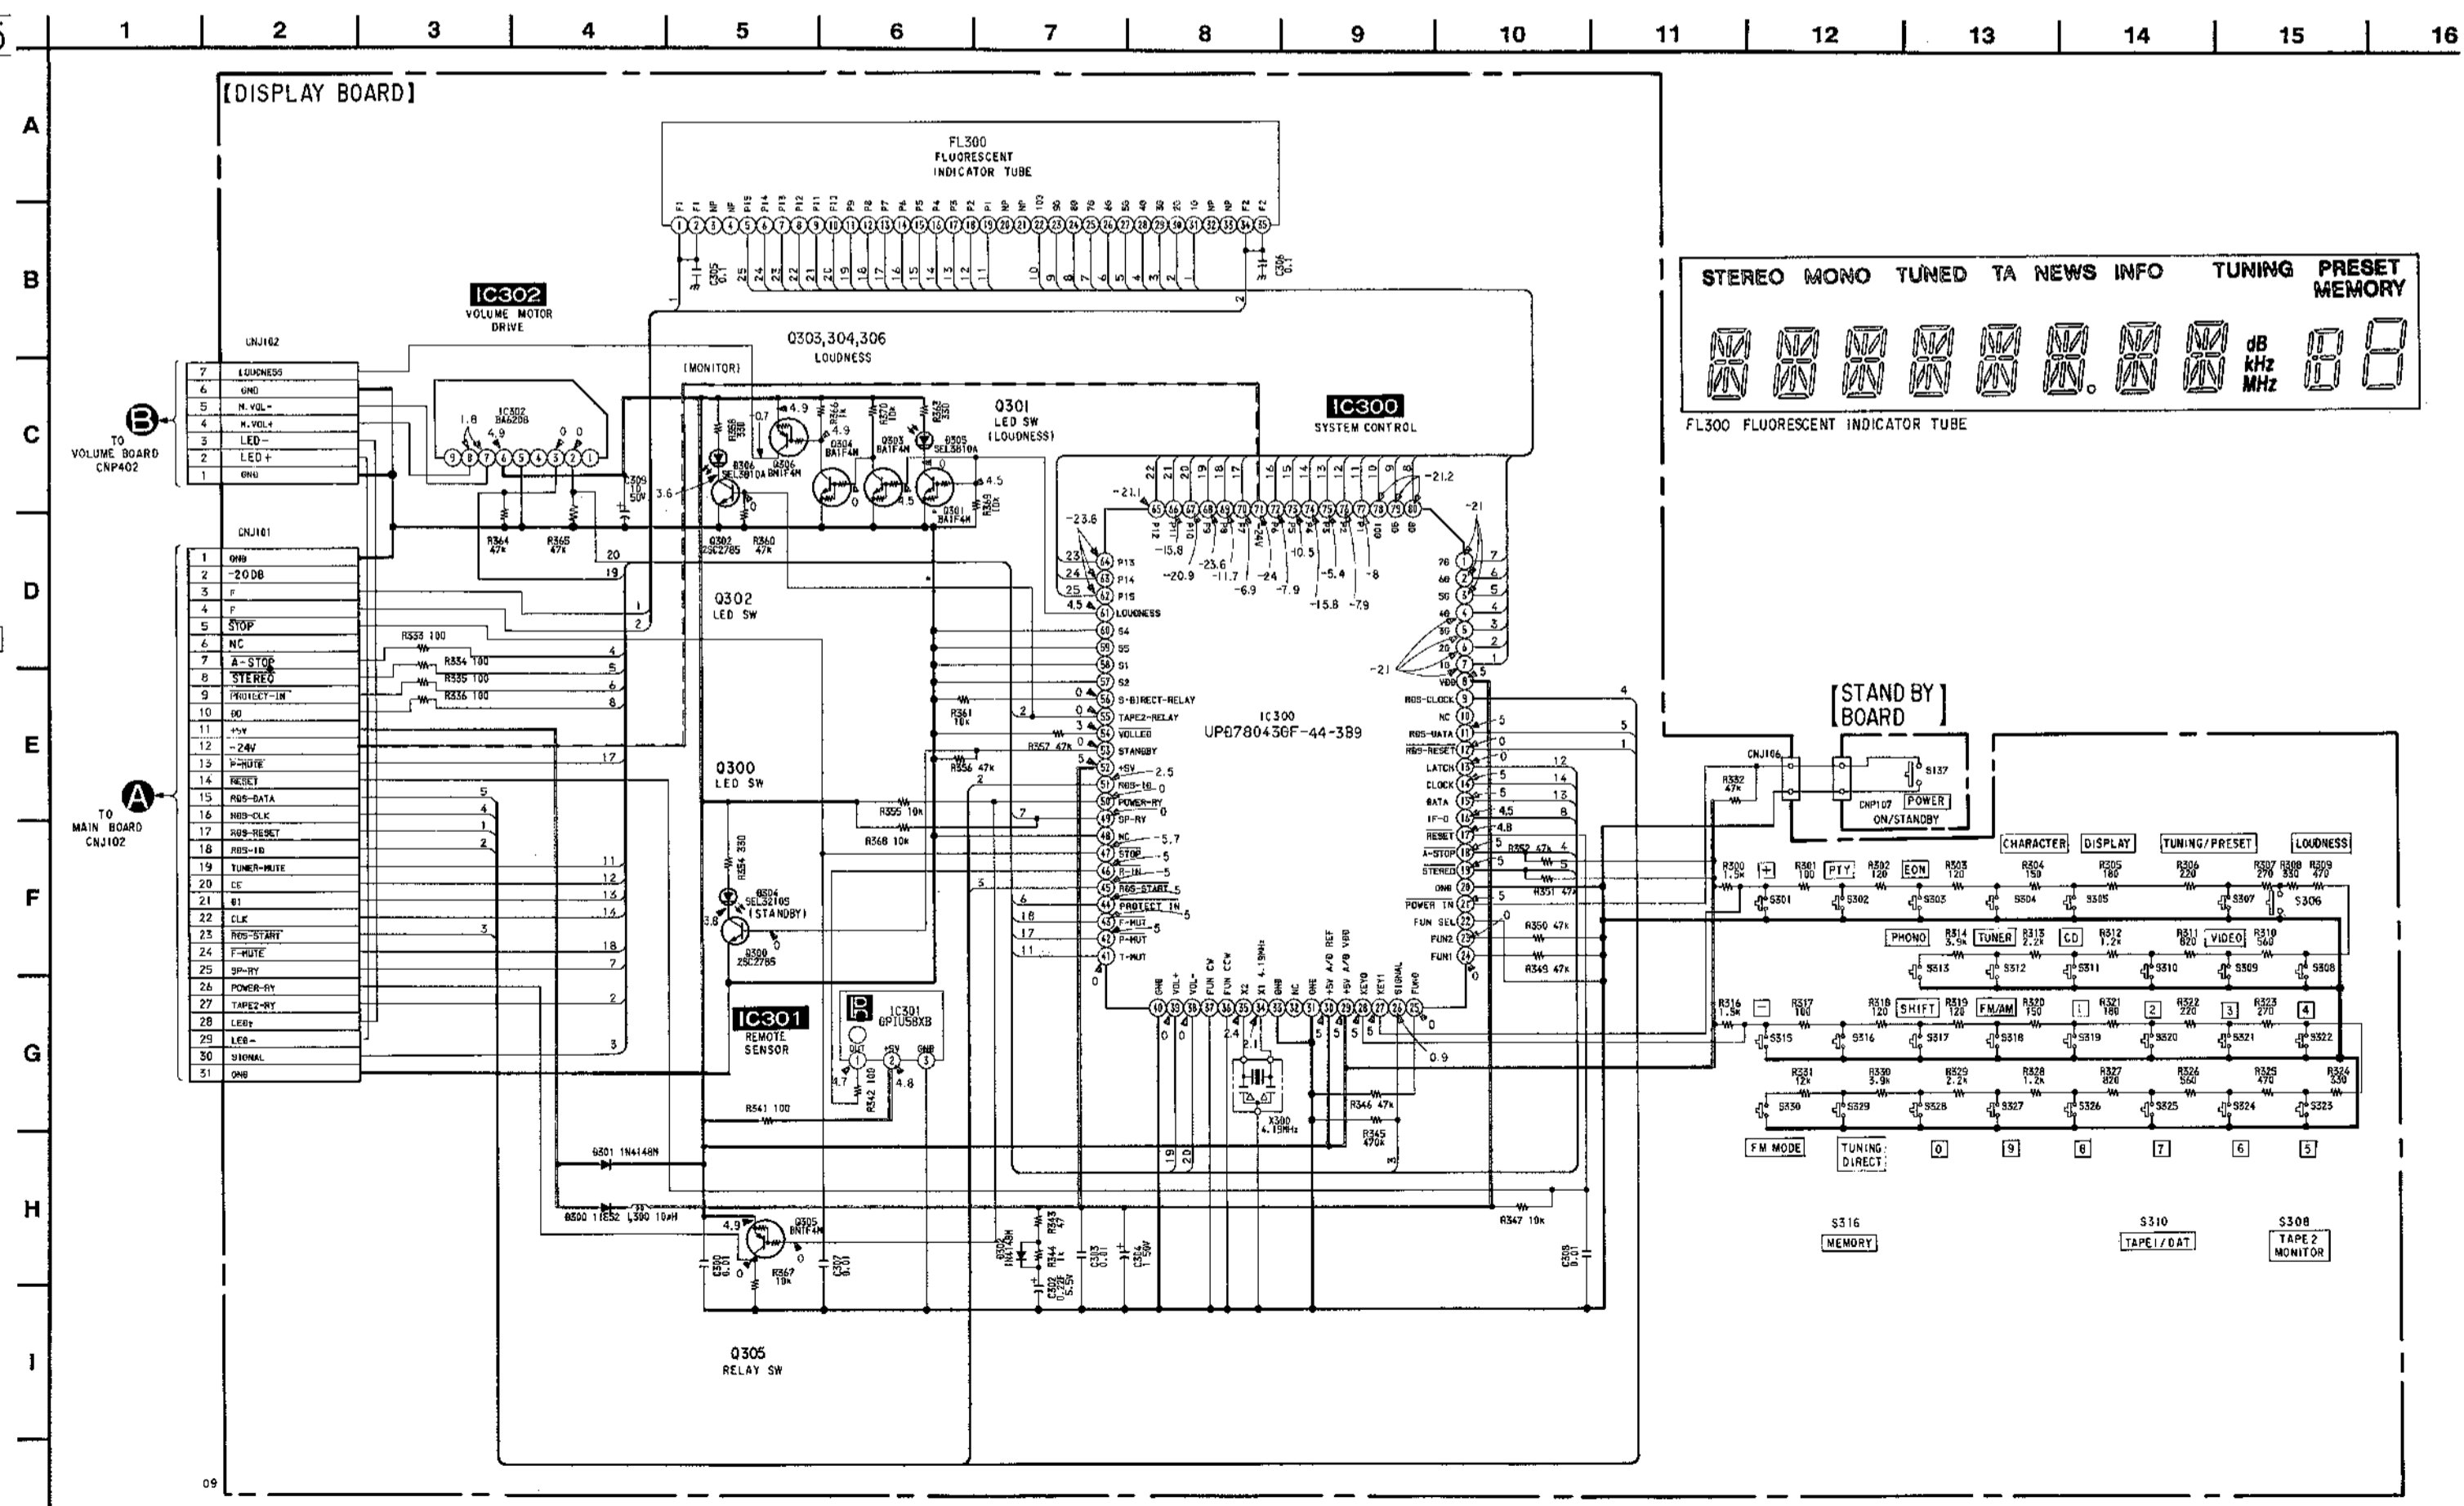


4-8. IC BLOCK DIAGRAMS


IC001 SAA6579

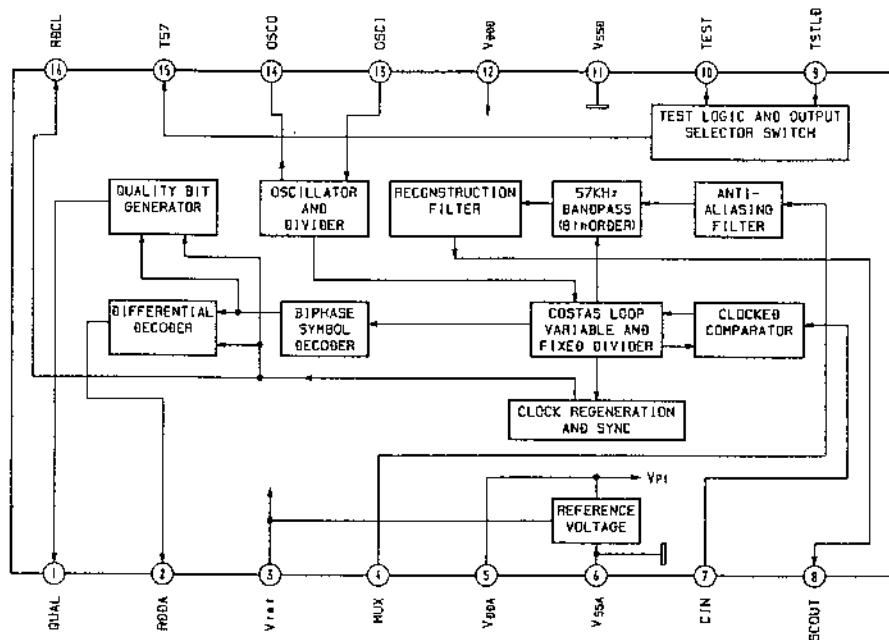


IC002 LC7073

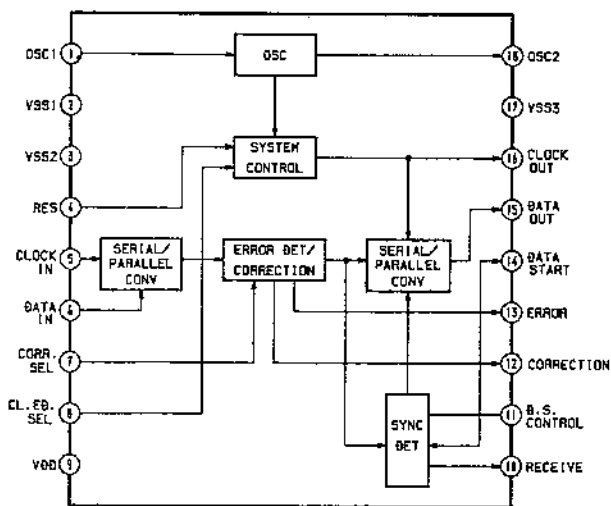


IC003 LA1235

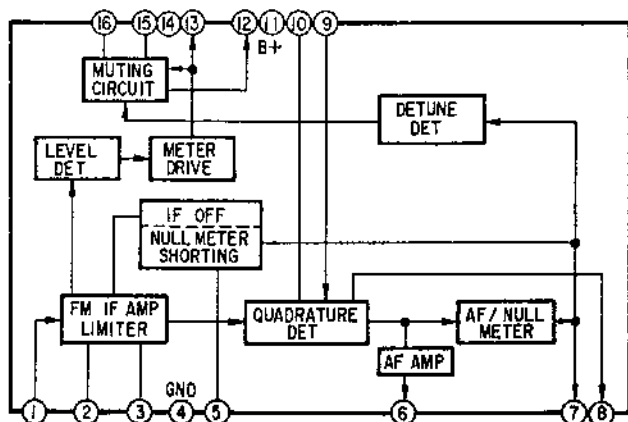

IC302 BA6208

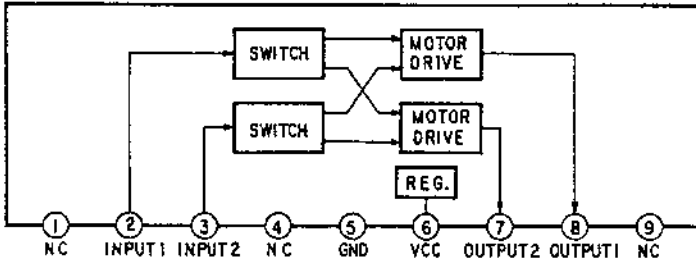

IC402 LC7822

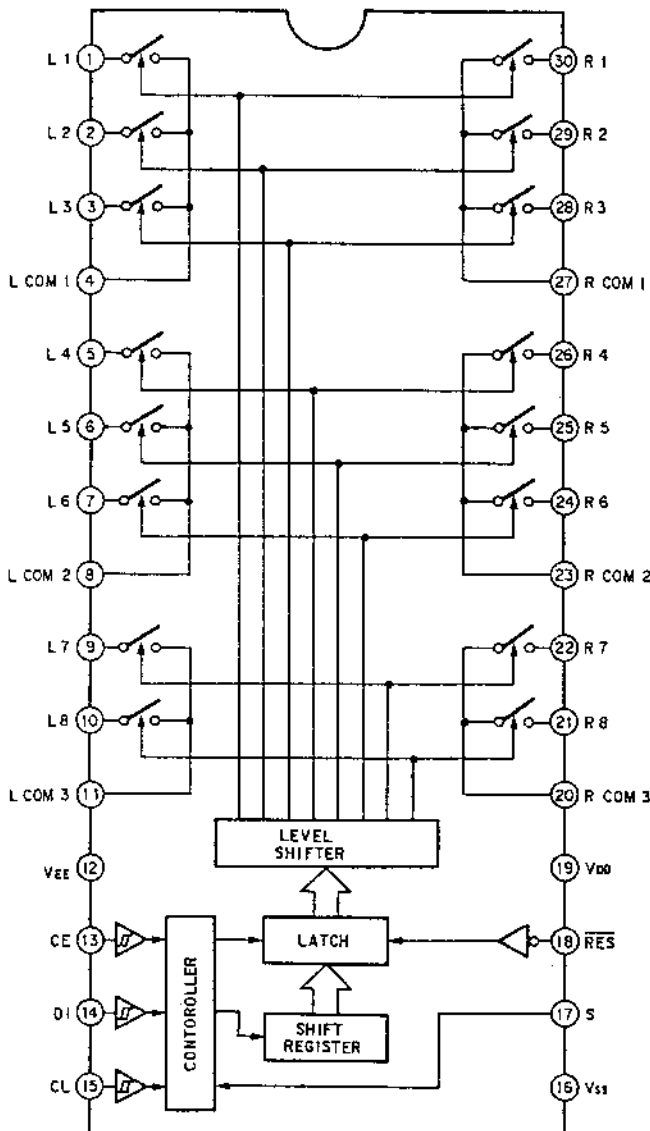

SECTION 5 EXPLODED VIEWS

NOTE:

- -XX, -X mean standardized parts, so they may have some difference from the original one.
- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.


- The mechanical parts with no reference number in the exploded views are not supplied.
- Hardware (# mark) list is given in the last of this parts list.
- G : German model.

The components identified by mark or dotted line with mark are critical for safety. Replace only with part number specified.

Note:

There are two type of AEP models which are depend on countries.
 AE2 (AEP2) model: Model for Scandinavian countries.
 Switzerland, Spain and Portugal
 AE1 (AEP1) model: Model for other European countries


5-1. FRONT PANEL SECTION

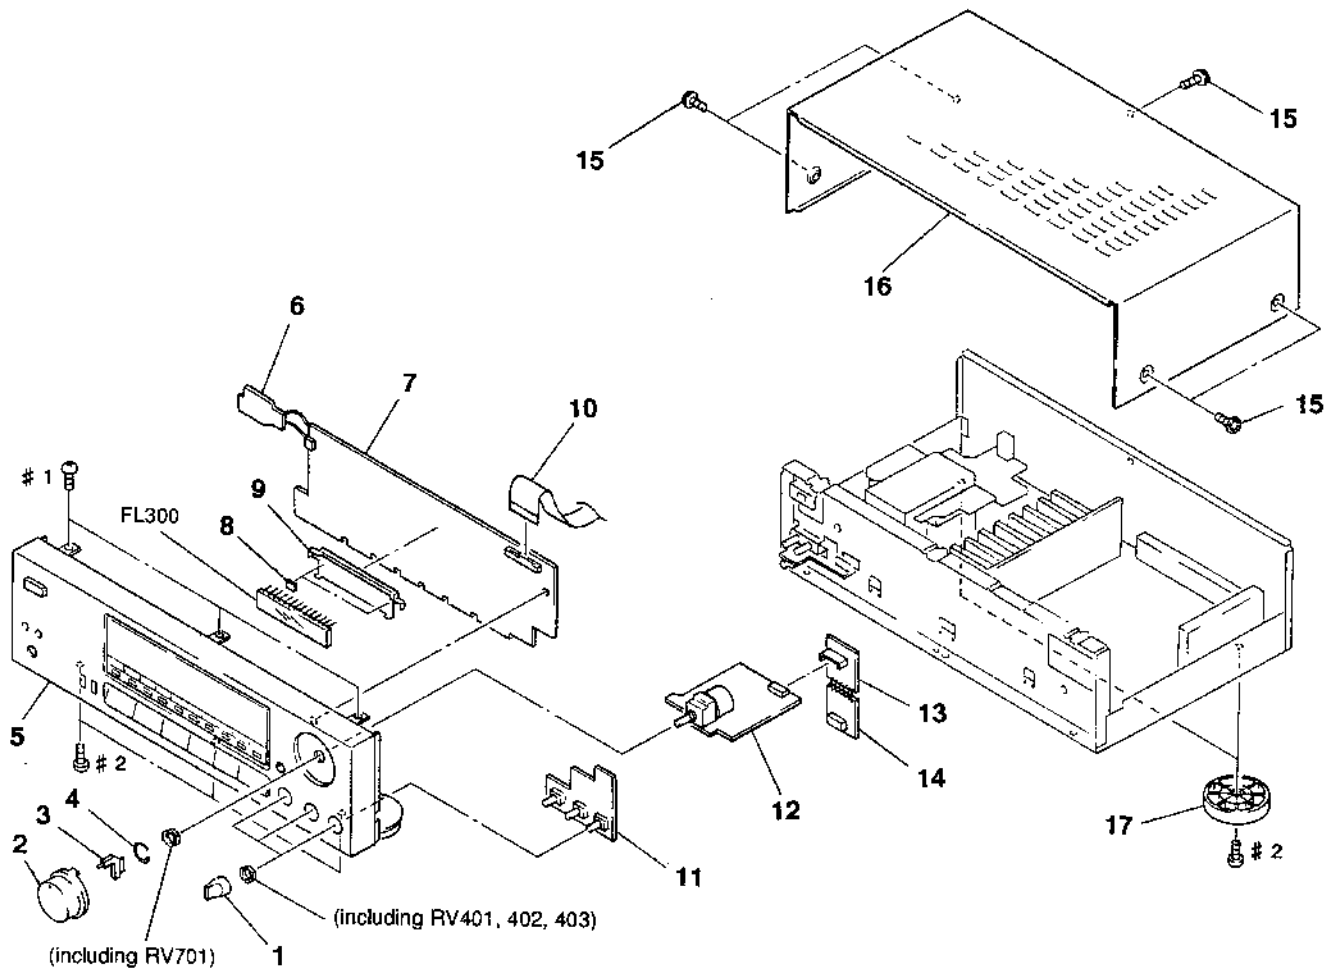

Ref. No.	Part No.	Description
1	4-957-383-01	KNOB (F14)
2	4-949-659-01	KNOB (VOL-NEW)
3	4-958-991-01	PLATE (VOL), LIGHT GUIDE
4	3-350-426-01	SPRING, RING
5	X-4943-601-1	PANEL ASSY, FRONT
* 6	1-647-632-11	STAND BY BOARD
* 7	A-4360-427-A	DISPLAY BOARD, COMPLETE
* 8	4-921-941-01	CUSHION (FL)
* 9	4-943-107-11	HOLDER (FL TUBE)
* 10	1-696-456-11	WIRE (FLAT TYPE) (31 CORE)

Ref. No.	Part No.	Description	Remark
* 11	1-647-632-11	TONE BOARD	
* 12	A-4360-428-A	VOLUME BOARD, COMPLETE	
* 13	1-648-997-11	JOINT-1 BOARD	
* 14	1-648-998-11	JOINT-2 BOARD	
15	3-704-366-01	SCREW (CASE) (M3X8)	
* 16	4-951-795-01	CASE	
17	X-4941-292-1	FOOT ASSY (F58175S)	
FL300	1-517-141-11	INDICATOR TUBE, FLUORESCENT	

5-2. CHASSIS SECTION

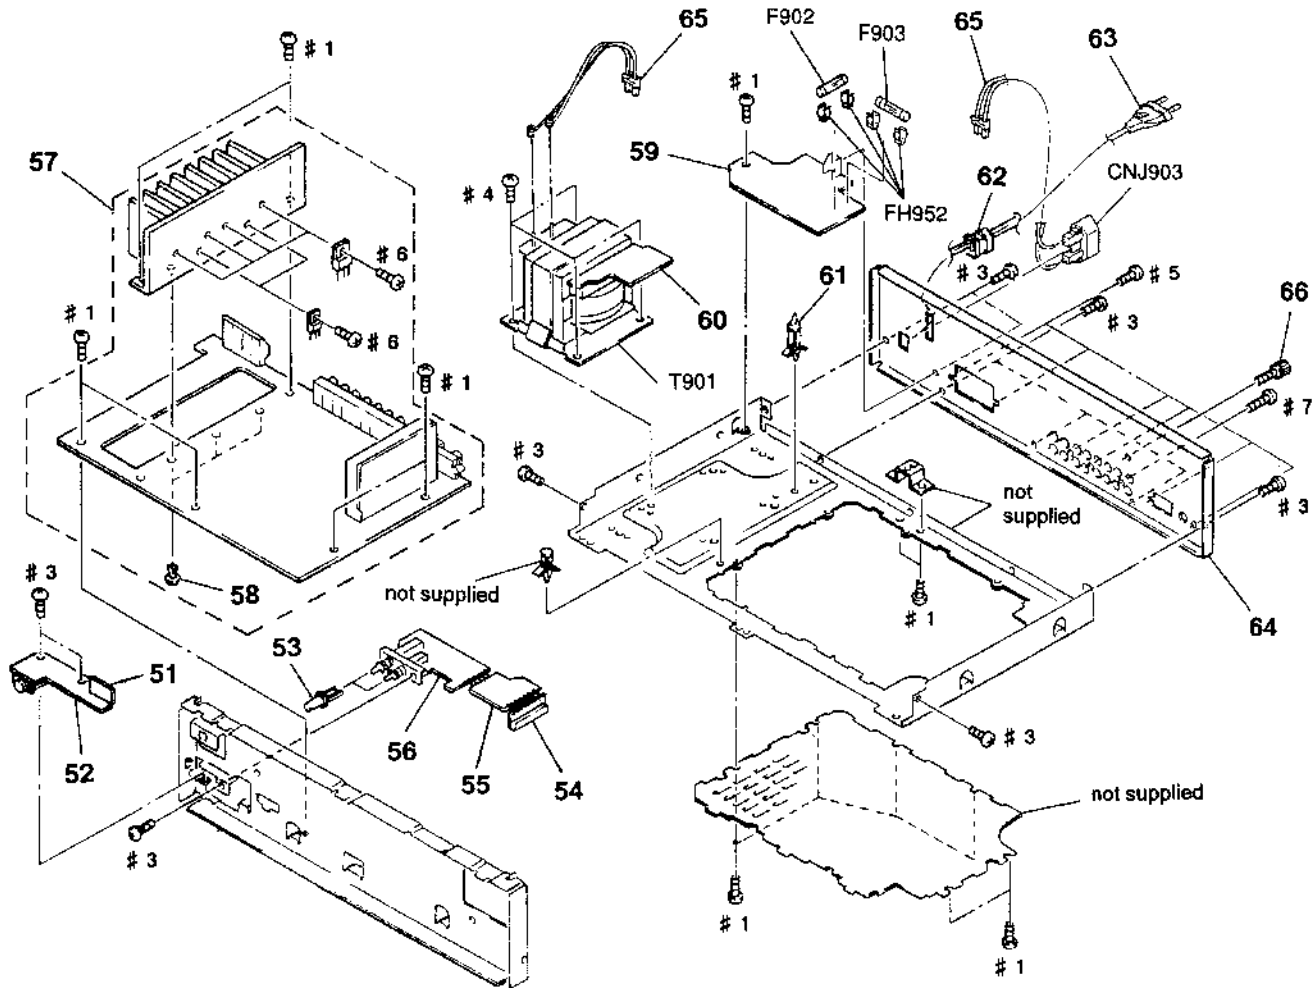

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

Ref. No.	Part No.	Description
* 51	1-647-636-11	HP-1 BOARD
* 52	1-647-637-11	HP-2 BOARD
53	4-951-801-02	BUTTON (S)
* 54	1-647-633-11	SP SW-1 BOARD
* 55	1-647-634-11	SP SW-2 BOARD
* 56	1-647-635-11	SP SW-3 BOARD
* 57	A-4360-426-A	MAIN BOARD, COMPLETE (AEP)
* 57	A-4360-437-A	MAIN BOARD, COMPLETE (G)
58	4-812-134-00	RIVET NYLON, 3.5
* 59	1-647-638-11	POWER BOARD
* 60	1-647-627-11	TRANSFORMER BOARD
* 61	4-924-098-31	HOLDER, FC BOARD

Remark	Ref. No.	Part No.	Description	Remark
	* 62	3-703-244-00	BUSHING (2104), CORD	
	Δ 63	1-575-651-11	CORD, POWER	
	* 64	4-957-709-01	PANEL, BACK (AEP1)	
	* 64	4-957-709-11	PANEL, BACK (AEP2)	
	* 64	4-957-709-21	PANEL, BACK (G)	
	65	1-750-854-11	CORD (WITH CONNECTOR)	
	66	4-947-010-01	SCREW, FEEDER FIXED	
	Δ CNJ903	1-526-794-11	OUTLET, AC (AC OUTLET)	
	Δ F902	1-532-259-00	FUSE (1L 6A 250V)	
	Δ F903	1-532-259-00	FUSE (1L 6A 250V)	
	* FH952	1-533-293-11	HOLDER, FUSE	
	Δ T901	1-450-363-11	TRANSFORMER, POWER	

SECTION 6 ELECTRICAL PARTS LIST

DISPLAY

NOTE:

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

When indicating parts by reference number, please include the board name.

Note:
There are two type of AEP models which are depend on countries.
AE2 (AEP2) model: Model for Scandinavian countries, Switzerland, Spain and Portugal
AE1 (AEP1) model: Model for other European countries

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX, -X mean standardized parts, so they may have some difference from the original one.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

- RESISTORS
All resistors are in ohms
METAL: Metal-film resistor
METAL OXIDE: Metal Oxide-film resistor
F: nonflammable
- SEMICONDUCTORS
In each case, u: μ , for example:
uA...: μ A..., uPA...: μ PA..., uPB...: μ PB...,
uPC...: μ PC..., uPD...: μ PD...
- CAPACITORS
uF: μ F
- COILS
uH: μ H
- Hardware (# mark) list is given in the last of this parts list.
- G: German model.

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
*	A-4360-427-A	DISPLAY BOARD, COMPLETE *****		< TRANSISTOR >			
*	4-921-941-01	CUSHION (FL)		Q300	8-729-119-78	TRANSISTOR 2SC2785-HFE	
*	4-943-107-11	HOLDER (FL TUBE)		Q301	8-729-900-36	TRANSISTOR DTC124ES	
		< CAPACITOR >		Q302	8-729-119-78	TRANSISTOR 2SC2785-HFE	
C300	1-161-379-00	CERAMIC 0.01uF 20% 25V		Q303	8-729-900-36	TRANSISTOR DTC124ES	
C302	1-125-486-11	DOUBLE LAYERS 0.22F 5.5V		Q304	8-729-900-36	TRANSISTOR DTC124ES	
C303	1-161-379-00	CERAMIC 0.01uF 20% 25V		Q305	8-729-900-63	TRANSISTOR DTA124ES	
C304	1-124-903-11	ELECT 1uF 20% 50V		Q306	8-729-900-63	TRANSISTOR DTA124ES	
C305	1-164-159-11	CERAMIC 0.1uF 50V		< RESISTOR >			
C306	1-164-159-11	CERAMIC 0.1uF 50V		R300	1-249-419-11	CARBON 1.5K 5% 1/4W F	
C307	1-161-379-00	CERAMIC 0.01uF 20% 25V		R301	1-249-405-11	CARBON 100 5% 1/4W F	
C308	1-161-379-00	CERAMIC 0.01uF 20% 25V		R302	1-249-406-11	CARBON 120 5% 1/4W F	
C309	1-124-907-11	ELECT 10uF 20% 50V		R303	1-249-406-11	CARBON 120 5% 1/4W F	
		< CONNECTOR >		R304	1-249-407-11	CARBON 150 5% 1/4W F	
* CNJ101	1-568-873-11	SOCKET, CONNECTOR 31P		R305	1-249-408-11	CARBON 180 5% 1/4W F	
* CNJ102	1-566-969-11	HOUSING, CONNECTOR(PC BOARD)7P		R306	1-249-409-11	CARBON 220 5% 1/4W F	
* CNJ106	1-565-480-11	CONNECTOR, BOARD TO BOARD 4P		R307	1-249-410-11	CARBON 270 5% 1/4W F	
		< DIODE >		R308	1-249-411-11	CARBON 330 5% 1/4W	
D300	8-719-200-82	DIODE 11ES2		R309	1-249-413-11	CARBON 470 5% 1/4W F	
D301	8-719-987-63	DIODE 1N4148M		R310	1-249-414-11	CARBON 560 5% 1/4W F	
D302	8-719-987-63	DIODE 1N4148M		R311	1-249-416-11	CARBON 820 5% 1/4W F	
D304	8-719-313-69	DIODE SEL3210S-CD		R312	1-249-418-11	CARBON 1.2K 5% 1/4W F	
D305	8-719-313-72	LED SBL3810A-CD		R313	1-249-421-11	CARBON 2.2K 5% 1/4W F	
D306	8-719-313-72	LED SEL3810A-CD		R314	1-249-424-11	CARBON 3.9K 5% 1/4W F	
		< FLUORESCENT INDICATOR >		R316	1-249-419-11	CARBON 1.5K 5% 1/4W F	
FL300	1-517-141-11	INDICATOR TUBE, FLUORESCENT		R317	1-249-405-11	CARBON 100 5% 1/4W F	
		< IC >		R318	1-249-406-11	CARBON 120 5% 1/4W F	
IC300	8-759-189-68	IC uPD78043GF-044-3B9		R319	1-249-406-11	CARBON 120 5% 1/4W F	
IC301	8-749-923-11	IC GPIU58XB		R320	1-249-407-11	CARBON 150 5% 1/4W F	
IC302	8-759-962-08	IC BA6208		R321	1-249-408-11	CARBON 180 5% 1/4W F	
		< COIL >		R322	1-249-409-11	CARBON 220 5% 1/4W F	
L300	1-410-509-11	INDUCTOR 10uH		R323	1-249-410-11	CARBON 270 5% 1/4W F	
				R324	1-249-411-11	CARBON 330 5% 1/4W	
				R325	1-249-413-11	CARBON 470 5% 1/4W F	
				R326	1-249-414-11	CARBON 560 5% 1/4W F	
				R327	1-249-416-11	CARBON 820 5% 1/4W F	
				R328	1-249-418-11	CARBON 1.2K 5% 1/4W F	
				R329	1-249-421-11	CARBON 2.2K 5% 1/4W F	
				R330	1-249-424-11	CARBON 3.9K 5% 1/4W F	

DISPLAY **HP-1** **HP-2** **JOINT-1**

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
R331	1-249-430-11	CARBON	12K 5% 1/4W	S318	1-554-303-21	SWITCH, TACTILE (FM/AM)	
R332	1-249-437-11	CARBON	47K 5% 1/4W	S319	1-554-303-21	SWITCH, TACTILE (1)	
R333	1-249-405-11	CARBON	100 5% 1/4W F	S320	1-554-303-21	SWITCH, TACTILE (2)	
R334	1-249-405-11	CARBON	100 5% 1/4W F	S321	1-554-303-21	SWITCH, TACTILE (3)	
R335	1-249-405-11	CARBON	100 5% 1/4W F	S322	1-554-303-21	SWITCH, TACTILE (4)	
R336	1-249-405-11	CARBON	100 5% 1/4W F	S323	1-554-303-21	SWITCH, TACTILE (5)	
R341	1-249-405-11	CARBON	100 5% 1/4W F	S324	1-554-303-21	SWITCH, TACTILE (6)	
R342	1-249-405-11	CARBON	100 5% 1/4W F	S325	1-554-303-21	SWITCH, TACTILE (7)	
R343	1-249-401-11	CARBON	47 5% 1/4W F	S326	1-554-303-21	SWITCH, TACTILE (8)	
R344	1-249-417-11	CARBON	1K 5% 1/4W F	S327	1-554-303-21	SWITCH, TACTILE (9)	
R345	1-247-895-00	CARBON	470K 5% 1/4W	S328	1-554-303-21	SWITCH, TACTILE (0)	
R346	1-249-437-11	CARBON	47K 5% 1/4W	S329	1-554-303-21	SWITCH, TACTILE (TUNING DIRECT)	
R347	1-249-429-11	CARBON	10K 5% 1/4W	S330	1-554-303-21	SWITCH, TACTILE (FM MODE)	
R349	1-249-437-11	CARBON	47K 5% 1/4W			< VIBRATOR >	
R350	1-249-437-11	CARBON	47K 5% 1/4W	X300	1-577-101-11	VIBRATOR, CERAMIC (4.19MHz)	
R351	1-249-437-11	CARBON	47K 5% 1/4W			*****	
R352	1-249-437-11	CARBON	47K 5% 1/4W	*	1-647-636-11	HP-1 BOARD	
R354	1-249-411-11	CARBON	330 5% 1/4W			*****	
R355	1-249-429-11	CARBON	10K 5% 1/4W			< CONNECTOR >	
R356	1-249-437-11	CARBON	47K 5% 1/4W	CNP704	1-691-160-11	PIN, CONNECTOR 3P	
R357	1-249-437-11	CARBON	47K 5% 1/4W			*****	
R358	1-249-411-11	CARBON	330 5% 1/4W	*	1-647-637-11	HP-2 BOARD	
R360	1-249-437-11	CARBON	47K 5% 1/4W			*****	
R361	1-249-429-11	CARBON	10K 5% 1/4W			< JACK >	
R363	1-249-411-11	CARBON	330 5% 1/4W	J701	1-568-151-11	JACK (LARGE TYPE) (HEADPHONE)	
R364	1-249-437-11	CARBON	47K 5% 1/4W			< RESISTOR >	
R365	1-249-437-11	CARBON	47K 5% 1/4W	R741	1-247-753-11	CARBON 1.2K 5% 1/2W	
R366	1-249-417-11	CARBON	1K 5% 1/4W F	R742	1-247-753-11	CARBON 1.2K 5% 1/2W	
R367	1-249-429-11	CARBON	10K 5% 1/4W	R791	1-247-753-11	CARBON 1.2K 5% 1/2W	
R368	1-249-429-11	CARBON	10K 5% 1/4W	R792	1-247-753-11	CARBON 1.2K 5% 1/2W	
R369	1-249-429-11	CARBON	10K 5% 1/4W			*****	
R370	1-249-429-11	CARBON	10K 5% 1/4W	*	1-648-997-11	JOINT-1 BOARD	
		< SWITCH >				*****	
S301	1-554-303-21	SWITCH, TACTILE (+)				< CONNECTOR >	
S302	1-554-303-21	SWITCH, TACTILE (PTY)		* CNP404	1-750-384-11	CONNECTOR, BOARD TO BOARD 11P	
S303	1-554-303-21	SWITCH, TACTILE (BON)				*****	
S304	1-554-303-21	SWITCH, TACTILE (CHARACTER)					
S305	1-554-303-21	SWITCH, TACTILE (DISPLAY)					
S306	1-554-303-21	SWITCH, TACTILE (LOUDNESS)					
S307	1-554-303-21	SWITCH, TACTILE (TUNING/PRESET)					
S308	1-554-303-21	SWITCH, TACTILE (TAPE2/MONITOR)					
S309	1-554-303-21	SWITCH, TACTILE (VIDEO)					
S310	1-554-303-21	SWITCH, TACTILE (TAPE1/DAT)					
S311	1-554-303-21	SWITCH, TACTILE (CD)					
S312	1-554-303-21	SWITCH, TACTILE (TUNER)					
S313	1-554-303-21	SWITCH, TACTILE (PHONO)					
S315	1-554-303-21	SWITCH, TACTILE (-)					
S316	1-554-303-21	SWITCH, TACTILE (MEMORY)					
S317	1-554-303-21	SWITCH, TACTILE (SHIFT)					

Ref.No.	Part No.	Description	Remark	Ref.No.	Part No.	Description	Remark
*	1-648-998-11	JOINT-2 BOARD ***** < CONNECTOR >		C406	1-137-437-11	FILM 0.0056uF 5%	50V
				C407	1-137-365-11	FILM 0.0015uF 5%	50V
				C408	1-123-382-00	ELECT 3.3uF 20%	100V
				C420	1-164-159-11	CERAMIC 0.1uF	50V
* CNJ402	1-750-383-11	CONNECTOR, BOARD TO BOARD 11P		C422	1-124-477-11	ELECT 47uF 20%	25V
				C423	1-124-477-11	ELECT 47uF 20%	25V
		*****		C424	1-162-282-31	CERAMIC 100PF 10%	50V (G)
*	A-4360-426-A	MAIN BOARD, COMPLETE (AEP) *****		C425	1-162-282-31	CERAMIC 100PF 10%	50V (G)
				C426	1-162-282-31	CERAMIC 100PF 10%	50V (G)
*	A-4360-437-A	MAIN BOARD, COMPLETE (G) *****		C427	1-162-282-31	CERAMIC 100PF 10%	50V (G)
				C429	1-162-282-31	CERAMIC 100PF 10%	50V (G)
				C430	1-162-294-31	CERAMIC 0.001uF 10%	50V
				C431	1-137-364-91	FILM 0.001uF 5%	50V
				C433	1-124-925-11	ELECT 2.2uF 20%	100V
				C434	1-162-286-31	CERAMIC 220PF 10%	50V (G)
				C435	1-162-282-31	CERAMIC 100PF 10%	50V (G)
				C437	1-124-907-11	ELECT 10uF 20%	50V
				C451	1-162-282-31	CERAMIC 100PF 10%	50V (G)
				C452	1-123-382-00	ELECT 3.3uF 20%	100V
				C453	1-162-282-31	CERAMIC 100PF 10%	50V (AEP)
				C454	1-162-286-31	CERAMIC 220PF 10%	50V (G)
				C454	1-162-282-31	CERAMIC 100PF 10%	50V
				C455	1-124-034-51	ELECT 33uF 20%	16V
				C456	1-137-437-11	FILM 0.0056uF 5%	50V
				C457	1-137-365-11	FILM 0.0015uF 5%	50V
				C458	1-123-382-00	ELECT 3.3uF 20%	100V
				C474	1-162-282-31	CERAMIC 100PF 10%	50V (G)
				C475	1-162-282-31	CERAMIC 100PF 10%	50V (G)
				C476	1-162-282-31	CERAMIC 100PF 10%	50V (G)
				C477	1-162-282-31	CERAMIC 100PF 10%	50V (G)
				C479	1-162-282-31	CERAMIC 100PF 10%	50V (G)
				C484	1-162-286-31	CERAMIC 220PF 10%	50V (G)
				C485	1-162-282-31	CERAMIC 100PF 10%	50V (G)
				C701	1-124-927-11	ELECT 4.7uF 20%	100V
				C702	1-162-286-31	CERAMIC 220PF 10%	50V
				C703	1-102-116-00	CERAMIC 680PF 10%	50V
				C704	1-124-477-11	ELECT 47uF 20%	25V
				C705	1-164-039-11	CERAMIC 3PF 0.25PF	50V
				C706	1-102-989-00	CERAMIC 68PF 5%	500V
				C707	1-102-989-00	CERAMIC 68PF 5%	500V
				C708	1-124-120-11	ELECT 220uF 20%	25V
				C709	1-124-477-11	ELECT 47uF 20%	25V
				C710	1-164-159-11	CERAMIC 0.1uF	50V
				C711	1-164-159-11	CERAMIC 0.1uF	50V
				C712	1-136-161-00	FILM 0.047uF 5%	50V
				C713	1-136-161-00	FILM 0.047uF 5%	50V
				C715	1-164-096-11	CERAMIC 0.01uF	50V (G)
				C716	1-164-096-11	CERAMIC 0.01uF	50V (G)
				C717	1-164-096-11	CERAMIC 0.01uF	50V (G)
				C718	1-164-096-11	CERAMIC 0.01uF	50V (G)
C1	1-162-280-31	CERAMIC 82PF 10%	50V				
C2	1-162-215-31	CERAMIC 47PF 5%	50V				
C4	1-162-282-31	CERAMIC 100PF 10%	50V				
C5	1-161-379-00	CERAMIC 0.01uF 20%	25V				
C6	1-161-379-00	CERAMIC 0.01uF 20%	25V				
C7	1-161-379-00	CERAMIC 0.01uF 20%	25V				
C8	1-124-910-11	ELECT 47uF 20%	50V				
C9	1-161-379-00	CERAMIC 0.01uF 20%	25V				
C10	1-161-379-00	CERAMIC 0.01uF 20%	25V				
C11	1-124-907-11	ELECT 10uF 20%	50V				
C12	1-161-379-00	CERAMIC 0.01uF 20%	25V				
C14	1-161-379-00	CERAMIC 0.01uF 20%	25V				
C15	1-124-925-11	ELECT 2.2uF 20%	100V				
C16	1-161-379-00	CERAMIC 0.01uF 20%	25V				
C17	1-162-291-31	CERAMIC 560PF 10%	50V				
C19	1-124-907-11	ELECT 10uF 20%	50V				
C20	1-162-288-31	CERAMIC 330PF 10%	50V				
C301	1-124-907-11	ELECT 10uF 20%	50V				
C302	1-162-215-31	CERAMIC 47PF 5%	50V (AEP)				
C302	1-162-283-31	CERAMIC 120PF 10%	50V (G)				
C303	1-124-907-11	ELECT 10uF 20%	50V				
C351	1-124-907-11	ELECT 10uF 20%	50V				
C352	1-162-215-31	CERAMIC 47PF 5%	50V (AEP)				
C352	1-162-283-31	CERAMIC 120PF 10%	50V (G)				
C353	1-124-907-11	ELECT 10uF 20%	50V				
C401	1-162-282-31	CERAMIC 100PF 10%	50V (G)				
C402	1-123-382-00	ELECT 3.3uF 20%	100V				
C403	1-162-282-31	CERAMIC 100PF 10%	50V (AEP)				
C403	1-162-286-31	CERAMIC 220PF 10%	50V (G)				
C404	1-162-282-31	CERAMIC 100PF 10%	50V				
C405	1-124-034-51	ELECT 33uF 20%	16V				

MAIN

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
C719	1-164-096-11	CERAMIC	0.01uF	50V (G)	C982	1-161-494-00	CERAMIC 0.022uF 25V
C720	1-164-096-11	CERAMIC	0.01uF	50V (G)	C983	1-161-494-00	CERAMIC 0.022uF 25V
C721	1-161-494-00	CERAMIC	0.022uF	25V (G)	C984	1-124-557-11	ELECT 1000uF 20% 25V
C726	1-162-215-31	CERAMIC	47PF	5% 50V (AEP)			
						< CONNECTOR >	
C726	1-162-219-31	CERAMIC	68PF	5% 50V (G)	* CNJ102	1-568-845-11	SOCKET, CONNECTOR 31P
C727	1-124-911-11	ELECT	220uF	20% 50V	CNJ701	1-573-095-11	SOCKET, CONNECTOR 15P
C749	1-124-911-11	ELECT	220uF	20% 50V	* CNP113	1-750-384-11	CONNECTOR, BOARD TO BOARD 11P
C751	1-124-927-11	ELECT	4.7uF	20% 100V	* CNP952	1-564-507-11	PLUG, CONNECTOR 4P
C752	1-162-286-31	CERAMIC	220PF	10% 50V	* CNP954	1-564-104-00	PIN, CONNECTOR (B3P-VH) 3P
					* CNP956	1-564-506-11	PLUG, CONNECTOR 3P
C753	1-102-116-00	CERAMIC	680PF	10% 50V			< DIODE >
C754	1-124-477-11	ELECT	47uF	20% 25V	D401	8-719-987-63	DIODE 1N4148M
C755	1-164-039-11	CERAMIC	3PF	0.25PF 50V	D403	8-719-987-63	DIODE 1N4148M
C756	1-102-989-00	CERAMIC	68PF	5% 500V	D701	8-719-933-41	DIODE HZS6C3L
C757	1-102-989-00	CERAMIC	68PF	5% 500V	D702	8-719-987-63	DIODE 1N4148M
					D703	8-719-815-85	DIODE 1S1585
C758	1-124-120-11	ELECT	220uF	20% 25V	D704	8-719-987-63	DIODE 1N4148M
C759	1-124-477-11	ELECT	47uF	20% 25V	D705	8-719-987-63	DIODE 1N4148M
C760	1-164-159-11	CERAMIC	0.1uF	50V	D751	8-719-933-41	DIODE HZS6C3L
C761	1-124-472-11	ELECT	470uF	20% 10V	D752	8-719-987-63	DIODE 1N4148M
C762	1-136-161-00	FILM	0.047uF	5% 50V	D753	8-719-815-85	DIODE 1S1585
					D951	8-719-312-09	DIODE RBA-402
C763	1-136-161-00	FILM	0.047uF	5% 50V	D952	8-719-010-78	DIODE UZ-13BSB
C765	1-164-096-11	CERAMIC	0.01uF	50V (G)	D953	8-719-002-33	DIODE UZL-24L
C766	1-164-096-11	CERAMIC	0.01uF	50V (G)	D954	8-719-987-63	DIODE 1N4148M
C767	1-164-096-11	CERAMIC	0.01uF	50V (G)	D955	8-719-010-74	DIODE UZ-12BSB
C768	1-164-096-11	CERAMIC	0.01uF	50V (G)	D956	8-719-010-29	DIODE UZ-4.3BSB
					D962	8-719-010-47	DIODE UZ-6.2BSC
C769	1-164-096-11	CERAMIC	0.01uF	50V (G)	D963	8-719-933-41	DIODE HZS6C3L
C770	1-164-096-11	CERAMIC	0.01uF	50V (G)	D964	8-719-985-53	DIODE HZS4ALL
C771	1-161-494-00	CERAMIC	0.022uF	25V (G)	D965	8-719-987-63	DIODE 1N4148M
C776	1-162-215-31	CERAMIC	47PF	5% 50V (AEP)	D966	8-719-200-82	DIODE 11ES2
C776	1-162-219-31	CERAMIC	68PF	5% 50V (G)	D967	8-719-200-82	DIODE 11ES2
					D968	8-719-200-82	DIODE 11ES2
C951	1-108-702-11	MYLAR	0.068uF	10% 100V	D969	8-719-200-82	DIODE 11ES2
C952	1-108-702-11	MYLAR	0.068uF	10% 100V	D970	8-719-987-63	DIODE 1N4148M
C953	1-125-614-11	ELECT	6800uF	20% 50V	D971	8-719-987-63	DIODE 1N4148M
C953	1-128-506-11	ELECT	6800uF	20% 50V			< IC >
C954	1-125-614-11	ELECT	6800uF	20% 50V	IC1	8-759-169-99	IC SAA6579
					IC2	8-759-062-26	IC LC7073
C954	1-128-506-11	ELECT	6800uF	20% 50V	IC3	8-759-812-35	IC LA1235
C955	1-124-478-11	ELECT	100uF	20% 25V	IC4	8-759-145-58	IC uPC4558C
C956	1-124-910-11	ELECT	47uF	20% 50V	IC306	8-759-634-50	IC M5218AL
C957	1-124-477-11	ELECT	47uF	20% 25V	IC401	8-759-112-93	IC uPC4570HA-1
C958	1-124-910-11	ELECT	47uF	20% 50V	IC402	8-759-805-14	IC LC7822
C959	1-124-907-11	ELECT	10uF	20% 50V			
C960	1-161-494-00	CERAMIC	0.022uF	25V			
C961	1-161-494-00	CERAMIC	0.022uF	25V			
C962	1-124-927-11	ELECT	4.7uF	20% 100V			
C975	1-124-477-11	ELECT	47uF	20% 25V			
C976	1-124-477-11	ELECT	47uF	20% 25V			
C977	1-124-903-11	ELECT	1uF	20% 50V			
C978	1-124-464-11	ELECT	0.22uF	20% 50V			
C979	1-124-902-00	ELECT	0.47uF	20% 50V			
C980	1-124-903-11	ELECT	1uF	20% 50V			
C981	1-161-494-00	CERAMIC	0.022uF	25V			

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
< JACK >				< RESISTOR >			
J401	1-580-825-11	JACK, PIN 6P (PHONO/CD/TAPE1/DAT)		R1	1-249-405-11	CARBON 100 5% 1/4W	F
J402	1-573-028-21	JACK, PIN 4P (VIDEO/TAPE1/DAT)		R2	1-249-411-11	CARBON 330 5% 1/4W	
J403	1-691-887-11	JACK, PIN 6P (VIDEO/TAPE2)		△R3	1-249-405-11	CARBON 100 5% 1/4W	F
< COIL >				R5	1-249-421-11	CARBON 2.2K 5% 1/4W	F
L1	1-410-521-11	INDUCTOR 100uH		R8	1-249-426-11	CARBON 5.6K 5% 1/4W	
L701	1-420-872-00	COIL, AIR CORE		R10	1-247-862-11	CARBON 20K 5% 1/4W	
L751	1-420-872-00	COIL, AIR CORE		R302	1-247-887-00	CARBON 220K 5% 1/4W	
< TRANSISTOR >				R303	1-247-887-00	CARBON 220K 5% 1/4W	
Q402	8-729-141-30	TRANSISTOR 2SC3623A-LK		R305	1-249-416-11	CARBON 820 5% 1/4W	F
Q406	8-729-900-63	TRANSISTOR DTA124ES		R352	1-247-887-00	CARBON 220K 5% 1/4W	
Q408	8-729-119-78	TRANSISTOR 2SC2785-HFE		R353	1-247-887-00	CARBON 220K 5% 1/4W	
Q452	8-729-141-30	TRANSISTOR 2SC3623A-LK		R355	1-249-416-11	CARBON 820 5% 1/4W	F
Q701	8-729-620-18	TRANSISTOR 2SA979-FG		R401	1-249-411-11	CARBON 330 5% 1/4W	
Q702	8-729-140-82	TRANSISTOR 2SA988-PAFAEA		R402	1-249-417-11	CARBON 1K 5% 1/4W	F
Q703	8-729-119-78	TRANSISTOR 2SC2785-HFE		R403	1-249-417-11	CARBON 1K 5% 1/4W	F
Q704	8-729-119-78	TRANSISTOR 2SC2785-HFE		R404	1-249-425-11	CARBON 4.7K 5% 1/4W	F
Q705	8-729-122-13	TRANSISTOR 2SA1221-K		R405	1-249-417-11	CARBON 1K 5% 1/4W	F
Q706	8-729-209-15	TRANSISTOR 2SD2012		R407	1-249-425-11	CARBON 4.7K 5% 1/4W	F
Q707	8-729-195-82	TRANSISTOR 2SC2958		R413	1-249-437-11	CARBON 47K 5% 1/4W	
Q712	8-729-020-72	TRANSISTOR 2SD2438-OPY		R414	1-247-897-11	CARBON 560K 5% 1/4W	
Q713	8-729-020-41	TRANSISTOR 2SB1587-OPY		R415	1-249-416-11	CARBON 820 5% 1/4W	F
Q714	8-729-140-82	TRANSISTOR 2SA988-PAFAEA		R416	1-247-897-11	CARBON 560K 5% 1/4W	
Q715	8-729-119-78	TRANSISTOR 2SC2785-HFE		R417	1-249-437-11	CARBON 47K 5% 1/4W	
Q716	8-729-119-78	TRANSISTOR 2SC2785-HFE		R418	1-249-417-11	CARBON 1K 5% 1/4W	F
Q717	8-729-119-78	TRANSISTOR 2SC2785-HFE		R419	1-247-897-11	CARBON 560K 5% 1/4W	
Q718	8-729-119-78	TRANSISTOR 2SC2785-HFE		R420	1-249-417-11	CARBON 1K 5% 1/4W	F (G)
Q751	8-729-620-18	TRANSISTOR 2SA979-FG		R421	1-249-408-11	CARBON 180 5% 1/4W	F
Q752	8-729-140-82	TRANSISTOR 2SA988-PAFAEA		R425	1-249-425-11	CARBON 4.7K 5% 1/4W	F
Q753	8-729-119-78	TRANSISTOR 2SC2785-HFE		R426	1-249-437-11	CARBON 47K 5% 1/4W	
Q754	8-729-119-78	TRANSISTOR 2SC2785-HFE		R427	1-249-437-11	CARBON 47K 5% 1/4W	
Q755	8-729-122-13	TRANSISTOR 2SA1221-K		R430	1-249-437-11	CARBON 47K 5% 1/4W	
Q756	8-729-209-15	TRANSISTOR 2SD2012		R431	1-249-425-11	CARBON 4.7K 5% 1/4W	F
Q757	8-729-195-82	TRANSISTOR 2SC2958		R432	1-247-883-00	CARBON 150K 5% 1/4W	
Q762	8-729-020-72	TRANSISTOR 2SD2438-OPY		R434	1-249-425-11	CARBON 4.7K 5% 1/4W	F
Q763	8-729-020-41	TRANSISTOR 2SB1587-OPY		R436	1-249-417-11	CARBON 1K 5% 1/4W	F
Q764	8-729-140-82	TRANSISTOR 2SA988-PAFAEA		R437	1-249-437-11	CARBON 47K 5% 1/4W	
Q951	8-729-209-15	TRANSISTOR 2SD2012		R438	1-249-429-11	CARBON 10K 5% 1/4W	
Q952	8-729-140-97	TRANSISTOR KSA708		R439	1-249-437-11	CARBON 47K 5% 1/4W	
Q953	8-729-180-92	TRANSISTOR 2SD809-K		R440	1-249-437-11	CARBON 47K 5% 1/4W	
Q954	8-729-119-78	TRANSISTOR 2SC2785-HFE		R441	1-249-413-11	CARBON 470 5% 1/4W	F
Q955	8-729-119-76	TRANSISTOR 2SA1175-HFE		R444	1-249-437-11	CARBON 47K 5% 1/4W	
Q956	8-729-119-76	TRANSISTOR 2SA1175-HFE		R451	1-249-411-11	CARBON 330 5% 1/4W	
Q957	8-729-119-78	TRANSISTOR 2SC2785-HFE		R452	1-249-417-11	CARBON 1K 5% 1/4W	F
Q958	8-729-900-36	TRANSISTOR DTC124ES		R453	1-249-417-11	CARBON 1K 5% 1/4W	F
Q959	8-729-904-39	TRANSISTOR DTC114TS		R454	1-249-425-11	CARBON 4.7K 5% 1/4W	F
Q960	8-729-119-78	TRANSISTOR 2SC2785-HFE		R455	1-249-417-11	CARBON 1K 5% 1/4W	F
				R457	1-249-425-11	CARBON 4.7K 5% 1/4W	F
				R463	1-249-437-11	CARBON 47K 5% 1/4W	
				R464	1-247-897-11	CARBON 560K 5% 1/4W	

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

MAIN

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
R465	1-249-416-11	CARBON	820 5% 1/4W F	R754	1-249-421-11	CARBON	2.2K 5% 1/4W F
R466	1-247-897-11	CARBON	560K 5% 1/4W	R755	1-249-426-11	CARBON	5.6K 5% 1/4W
R467	1-249-437-11	CARBON	47K 5% 1/4W	R756	1-249-414-11	CARBON	560 5% 1/4W F
R468	1-249-417-11	CARBON	1K 5% 1/4W F	R757	1-249-423-11	CARBON	3.3K 5% 1/4W F
R469	1-247-897-11	CARBON	560K 5% 1/4W	R758	1-249-411-11	CARBON	330 5% 1/4W
R470	1-249-417-11	CARBON	1K 5% 1/4W F (G)	△R759	1-249-409-11	CARBON	220 5% 1/4W F
R471	1-249-408-11	CARBON	180 5% 1/4W F	△R760	1-249-409-11	CARBON	220 5% 1/4W F
R481	1-249-425-11	CARBON	4.7K 5% 1/4W F	R761	1-249-409-11	CARBON	220 5% 1/4W F
R486	1-249-417-11	CARBON	1K 5% 1/4W F	R762	1-249-435-11	CARBON	33K 5% 1/4W
R701	1-249-417-11	CARBON	1K 5% 1/4W F	△R763	1-249-397-11	CARBON	22 5% 1/4W F
R702	1-249-434-11	CARBON	27K 5% 1/4W	R764	1-249-428-11	CARBON	8.2K 5% 1/4W F
R703	1-249-435-11	CARBON	33K 5% 1/4W	R765	1-249-409-11	CARBON	220 5% 1/4W F
R704	1-249-421-11	CARBON	2.2K 5% 1/4W F	△R766	1-249-397-11	CARBON	22 5% 1/4W F
R705	1-249-426-11	CARBON	5.6K 5% 1/4W	△R767	1-249-393-11	CARBON	10 5% 1/4W F
R706	1-249-414-11	CARBON	560 5% 1/4W F	△R768	1-249-393-11	CARBON	10 5% 1/4W F
R707	1-249-423-11	CARBON	3.3K 5% 1/4W F	△R776	1-208-601-21	WIREWOUND	0.1 10% 2W F
R708	1-249-411-11	CARBON	330 5% 1/4W	△R777	1-208-601-21	WIREWOUND	0.1 10% 2W F
△R709	1-249-409-11	CARBON	220 5% 1/4W F	R778	1-249-417-11	CARBON	1K 5% 1/4W F
△R710	1-249-409-11	CARBON	220 5% 1/4W F	R779	1-249-431-11	CARBON	15K 5% 1/4W
R711	1-249-409-11	CARBON	220 5% 1/4W F	R781	1-249-440-11	CARBON	82K 5% 1/4W
R712	1-249-435-11	CARBON	33K 5% 1/4W	△R785	1-249-397-11	CARBON	22 5% 1/4W F
△R713	1-249-397-11	CARBON	22 5% 1/4W F	△R786	1-249-397-11	CARBON	22 5% 1/4W F
R714	1-249-428-11	CARBON	8.2K 5% 1/4W F	R787	1-249-393-11	CARBON	10 5% 1/4W F
R715	1-249-409-11	CARBON	220 5% 1/4W F	R788	1-249-393-11	CARBON	10 5% 1/4W F
△R716	1-249-397-11	CARBON	22 5% 1/4W F	R794	1-249-412-11	CARBON	390 5% 1/4W F
△R717	1-249-393-11	CARBON	10 5% 1/4W F	R796	1-249-393-11	CARBON	10 5% 1/4W F (G)
△R718	1-249-393-11	CARBON	10 5% 1/4W F	R797	1-249-393-11	CARBON	10 5% 1/4W F (G)
△R726	1-208-601-21	WIREWOUND	0.1 10% 2W F	R798	1-249-393-11	CARBON	10 5% 1/4W F (G)
△R727	1-208-601-21	WIREWOUND	0.1 10% 2W F	R799	1-249-412-11	CARBON	390 5% 1/4W F
R728	1-249-417-11	CARBON	1K 5% 1/4W F	R801	1-249-415-11	CARBON	680 5% 1/4W F
R729	1-249-431-11	CARBON	15K 5% 1/4W	R804	1-247-895-00	CARBON	470K 5% 1/4W
R730	1-249-429-11	CARBON	10K 5% 1/4W	R851	1-249-415-11	CARBON	680 5% 1/4W F
R731	1-249-441-11	CARBON	100K 5% 1/4W	R854	1-247-895-00	CARBON	470K 5% 1/4W
R732	1-249-417-11	CARBON	1K 5% 1/4W F	△R950	1-215-908-00	METAL OXIDE	33 5% 3W F
R733	1-249-435-11	CARBON	33K 5% 1/4W	△R951	1-215-908-00	METAL OXIDE	33 5% 3W F
R734	1-249-427-11	CARBON	6.8K 5% 1/4W F	△R952	1-247-743-11	CARBON	220 5% 1/2W F
△R735	1-249-397-11	CARBON	22 5% 1/4W F	R953	1-249-422-11	CARBON	2.7K 5% 1/4W F
△R736	1-249-397-11	CARBON	22 5% 1/4W F	R954	1-249-423-11	CARBON	3.3K 5% 1/4W F
R737	1-249-393-11	CARBON	10 5% 1/4W F	△R955	1-215-908-00	METAL OXIDE	33 5% 3W F
R738	1-249-393-11	CARBON	10 5% 1/4W F	△R956	1-249-405-11	CARBON	100 5% 1/4W F
R739	1-249-412-11	CARBON	390 5% 1/4W F	R957	1-249-410-11	CARBON	270 5% 1/4W F
R744	1-249-429-11	CARBON	10K 5% 1/4W	R958	1-249-410-11	CARBON	270 5% 1/4W F
△R745	1-249-399-11	CARBON	33 5% 1/4W F	R959	1-249-441-11	CARBON	100K 5% 1/4W
R746	1-249-393-11	CARBON	10 5% 1/4W F (G)	R960	1-249-429-11	CARBON	10K 5% 1/4W
R747	1-249-393-11	CARBON	10 5% 1/4W F (G)	△R963	1-249-395-11	CARBON	15 5% 1/4W F
R748	1-249-393-11	CARBON	10 5% 1/4W F (G)	R964	1-249-423-11	CARBON	3.3K 5% 1/4W F
△R749	1-249-399-11	CARBON	33 5% 1/4W F	R965	1-249-437-11	CARBON	47K 5% 1/4W
R751	1-249-417-11	CARBON	1K 5% 1/4W F	R966	1-249-429-11	CARBON	10K 5% 1/4W
R752	1-249-434-11	CARBON	27K 5% 1/4W	R967	1-249-429-11	CARBON	10K 5% 1/4W
R753	1-249-435-11	CARBON	33K 5% 1/4W	R968	1-249-417-11	CARBON	1K 5% 1/4W F

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

MAIN**POWER****STAND BY****SP SW-1****SP SW-2****SP SW-3**

Ref.No.	Part No.	Description	Remark	Ref.No.	Part No.	Description	Remark
R969	1-249-429-11	CARBON 10K 5% 1/4W				< FUSE >	
R970	1-249-426-11	CARBON 5.6K 5% 1/4W		△F902	1-532-259-00	FUSE (T1.6A 250V)	
R971	1-249-417-11	CARBON 1K 5% 1/4W F		△F903	1-532-259-00	FUSE (T1.6A 250V)	
R972	1-249-426-11	CARBON 5.6K 5% 1/4W				< FUSE HOLDER >	
R973	1-247-830-11	CARBON 910 5% 1/4W		FH952	1-533-293-31	HOLDER, FUSE	
R974	1-249-425-11	CARBON 4.7K 5% 1/4W F				< RELAY >	
R999	1-249-397-11	CARBON 22 5% 1/4W F		RY901	1-515-720-11	RELAY	
		< VARIABLE RESISTOR >				< TRANSFORMER >	
RV1	1-223-240-11	RES, ADJ, CARBON 22K		△T902	1-450-358-11	TRANSFORMER, POWER	
		< RELAY >		*****			
RY401	1-515-614-11	RELAY		*	1-647-639-11	STAND BY BOARD	
RY701	1-515-533-11	RELAY				*****	
		< TERMINAL >				< CONNECTOR >	
TM1	1-537-488-11	TERMINAL BOARD (ANT) (ANTENNA)		* CNP107	1-565-295-11	PLUG, CONNECTOR 4P	
TM701	1-537-376-11	TERMINAL BOARD (SP) (SPEAKERS)				< SWITCH >	
		< TUNER >		S137	1-554-303-21	SWITCH, TACTILE (POWER)	
TU1	1-239-562-11	ENCAPSULATED COMPONENT (G)		*****			
TU1	1-239-611-11	ENCAPSULATED COMPONENT (AEP)		*	1-647-633-11	SP SW-1 BOARD	
		< VIBRATOR >				*****	
X1	1-579-900-21	VIBRATOR, CRYSTAL (4.3MHz)				< CONNECTOR >	
X2	1-577-358-21	VIBRATOR, CERAMIC (4MHz)		CNP702	1-691-173-11	CONNECTOR (BOARD TO BOARD) 3P	
*****						< SWITCH >	
*	1-647-638-11	POWER BOARD		S701	1-571-485-11	SWITCH, PUSH (2 KEY) (SPEAKERS)	
		*****		*****			
		< CAPACITOR >		*	1-647-634-11	SP SW-2 BOARD	
△C901	1-161-744-00	CERAMIC 0.01uF 400V				*****	
C902	1-161-741-00	CERAMIC 0.001uF 10% 400V (G)				< CONNECTOR >	
C903	1-161-741-00	CERAMIC 0.001uF 10% 400V (G)		CNP901	1-564-321-00	PIN, CONNECTOR 2P	
C911	1-164-159-11	CERAMIC 0.1uF 50V (G)		* CNP902	1-580-230-11	PIN, CONNECTOR (PC BOARD) 3P	
C912	1-164-159-11	CERAMIC 0.1uF 50V (G)		* CNP903	1-580-230-11	PIN, CONNECTOR (PC BOARD) 3P	
		< CONNECTOR >		* CNP951	1-564-507-11	PLUG, CONNECTOR 4P	
		< DIODE >				< SWITCH >	
D901	8-719-987-63	DIODE 1N4148M				< CONNECTOR >	
				CNP701	1-573-109-11	PIN, CONNECTOR 15P	
*****				*****			

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

STONE

TRANSFORMER

VOLUME

Ref. No.	Part No.	Description	Remark
*	1-647-632-11	TONE BOARD *****	
		< CAPACITOR >	
C501	1-130-489-00	MYLAR 0.033uF 5% 50V	
C502	1-124-250-00	ELECT 0.15uF 20% 50V	
C503	1-130-481-00	MYLAR 0.0068uF 5% 50V	
C504	1-137-441-91	FILM 0.027uF 5% 50V	
C551	1-130-489-00	MYLAR 0.033uF 5% 50V	
C552	1-124-250-00	ELECT 0.15uF 20% 50V	
C553	1-130-481-00	MYLAR 0.0068uF 5% 50V	
C554	1-137-441-91	FILM 0.027uF 5% 50V	
		< CONNECTOR >	
* CNP109	1-566-968-11	HOUSING, CONNECTOR(PC BOARD)6P	
		< RESISTOR >	
R501	1-249-429-11	CARBON 10K 5% 1/4W	
R502	1-249-422-11	CARBON 2.7K 5% 1/4W F	
R507	1-249-415-11	CARBON 680 5% 1/4W F	
R508	1-247-903-00	CARBON 1M 5% 1/4W	
R509	1-247-903-00	CARBON 1M 5% 1/4W	
R510	1-247-903-00	CARBON 1M 5% 1/4W	
R551	1-249-429-11	CARBON 10K 5% 1/4W	
R552	1-249-422-11	CARBON 2.7K 5% 1/4W F	
R557	1-249-415-11	CARBON 680 5% 1/4W F	
R558	1-247-903-00	CARBON 1M 5% 1/4W	
R559	1-247-903-00	CARBON 1M 5% 1/4W	
R560	1-247-903-00	CARBON 1M 5% 1/4W	
		< VARIABLE RESISTOR >	
RV401	1-223-362-11	RES, VAR, CARBON 100K/100K (BALANCE)	
RV402	1-223-363-11	RES, VAR, CARBON 125K/125K (TREBLE)	
RV403	1-238-965-21	RES, VAR, CARBON 100K/100K (BASS)	

*	1-647-631-11	TRANSFORMER BOARD *****	
		< CAPACITOR >	
△C921	1-164-159-11	CERAMIC 0.1uF 50V (G)	
△C922	1-164-159-11	CERAMIC 0.1uF 50V (G)	
		< CONNECTOR >	
* CNP955	1-564-243-00	PIN, CONNECTOR 6P	

Ref. No.	Part No.	Description	Remark
*	A-4360-428-A	VOLUME BOARD, COMPLETE *****	
		< CAPACITOR >	
C436	1-137-371-11	FILM 0.015uF 5% 50V	
C438	1-124-927-11	ELECT 4.7uF 20% 100V	
C439	1-124-927-11	ELECT 4.7uF 20% 100V	
C486	1-137-371-11	FILM 0.015uF 5% 50V	
C505	1-162-206-31	CERAMIC 20PF 5% 50V	
C506	1-124-925-11	ELECT 2.2uF 20% 100V	
C507	1-162-196-31	CERAMIC 5.6PF 10% 50V	
C508	1-123-382-00	ELECT 3.3uF 20% 100V	
C511	1-124-464-11	ELECT 0.22uF 20% 50V	
C513	1-123-382-00	ELECT 3.3uF 20% 100V	
C516	1-124-477-11	ELECT 47uF 20% 25V	
C517	1-124-477-11	ELECT 47uF 20% 25V	
C555	1-162-206-31	CERAMIC 20PF 5% 50V	
C556	1-124-925-11	ELECT 2.2uF 20% 100V	
C557	1-162-196-31	CERAMIC 5.6PF 10% 50V	
C558	1-123-382-00	ELECT 3.3uF 20% 100V	
C563	1-123-382-00	ELECT 3.3uF 20% 100V	
		< CONNECTOR >	
* CNP103	1-750-383-11	CONNECTOR, BOARD TO BOARD 11P	
* CNP401	1-566-971-11	PIN, CONNECTOR (PC BOARD) 6P	
* CNP402	1-566-972-11	PIN, CONNECTOR (PC BOARD) 7P	
		< DIODE >	
D404	8-719-987-63	DIODE 1N4148M	
		< IC >	
IC403	8-759-112-93	IC uPC4570HA-1	
		< TRANSISTOR >	
Q404	8-729-202-67	TRANSISTOR 2SK246-GR3	
Q454	8-729-202-67	TRANSISTOR 2SK246-GR3	
		< RESISTOR >	
R445	1-247-858-11	CARBON 13K 5% 1/4W	
R495	1-247-858-11	CARBON 13K 5% 1/4W	
R503	1-249-441-11	CARBON 100K 5% 1/4W	
R504	1-249-431-11	CARBON 15K 5% 1/4W	
R505	1-249-438-11	CARBON 56K 5% 1/4W	
R506	1-249-441-11	CARBON 100K 5% 1/4W	
R511	1-249-441-11	CARBON 100K 5% 1/4W	
R513	1-247-903-00	CARBON 1M 5% 1/4W	
R514	1-249-405-11	CARBON 100 5% 1/4W F	
R515	1-249-405-11	CARBON 100 5% 1/4W F	
R553	1-249-441-11	CARBON 100K 5% 1/4W	

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Ref. No.	Part No.	Description	Remark
R554	1-249-431-11	CARBON 15K 5% 1/4W	
R555	1-249-438-11	CARBON 56K 5% 1/4W	
R556	1-249-441-11	CARBON 100K 5% 1/4W	

< VARIABLE RESISTOR >

RV701 1-241-850-11 RES, VAR, CARBON 100K/100K (VOLUME)

MISCELLANEOUS

- 10 1-696-456-11 WIRE (FLAT TYPE) (31 CORE)
- △63 1-575-651-11 CORD, POWER
- 65 1-750-854-11 CORD (WITH CONNECTOR)
- △CNJ903 1-526-794-11 OUTLET, AC (AC OUTLET)
- △P902 1-532-259-00 FUSE (T1. 6A 250V)

- △P903 1-532-259-00 FUSE (T1. 6A 250V)
- * FH952 1-533-293-11 HOLDER, FUSE
- FL300 1-517-141-11 INDICATOR TUBE, FLUORESCENT
- △T901 1-450-363-11 TRANSFORMER, POWER

ACCESSORIES & PACKING MATERIALS

- 1-465-423-11 REMOTE COMMANDER (RM-S103)
- 1-501-374-11 ANTENNA, LOOP
- 1-501-594-11 ANTENNA (FM) (AEP)
- 2-181-754-01 COVER (MLY), BATTERY
- 3-756-537-11 MANUAL, INSTRUCTION
(ENGLISH, FRENCH, GERMAN, DUTCH) (AEP)
- 3-756-537-41 MANUAL, INSTRUCTION (GERMAN) (G)
- 3-756-537-51 MANUAL, INSTRUCTION
(SPANISH, SWEDISH, DANISH, FINNISH) (AEP2)

- * 4-952-676-01 CUSHION
- * 4-957-780-01 INDIVIDUAL CARTON

HARDWARE LIST

- #1 7-682-548-04 SCREW +BVIT 3X8 (S)
- #2 7-682-548-09 SCREW +BVIT 3X8 (S)
- #3 7-682-547-09 SCREW +BVIT 3X6 (S)
- #4 7-682-560-04 SCREW +BVIT 4X6 (S)
- #5 7-685-646-79 SCREW +BVIP 3X8 TYPE2 N-S

- #6 7-685-647-79 SCREW +BVIP 3X10 TYPE2 IT-3
- #7 7-621-849-00 SCREW, TAPPING

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

