

DENON

MODEL DN-1000F

CD PLAYER

SCHEMATIC DIAGRAM

11


10

9

8

7

6

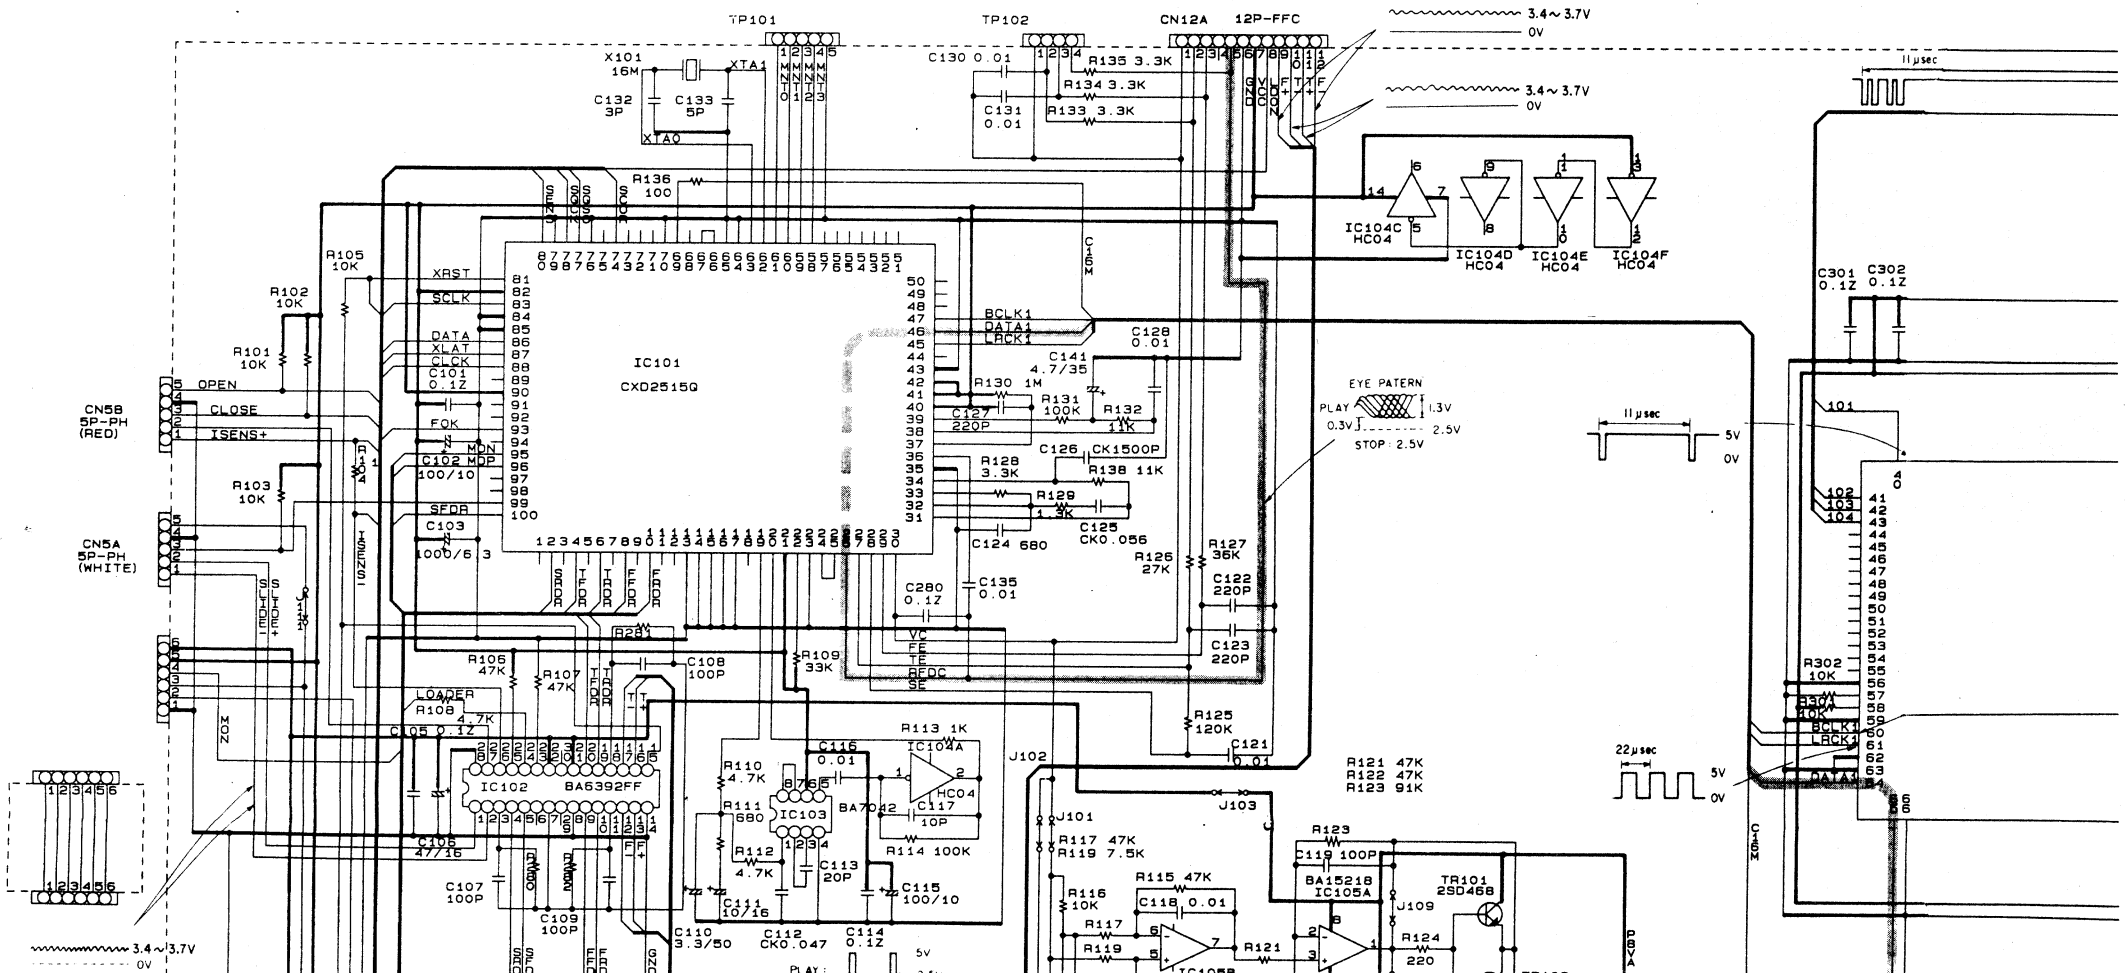




5

4

3

2

1

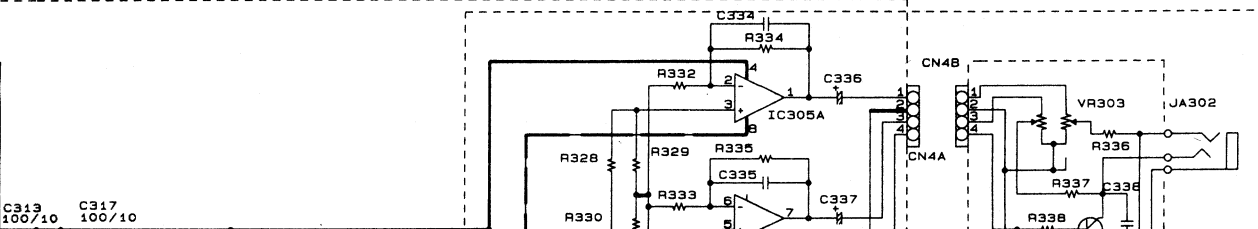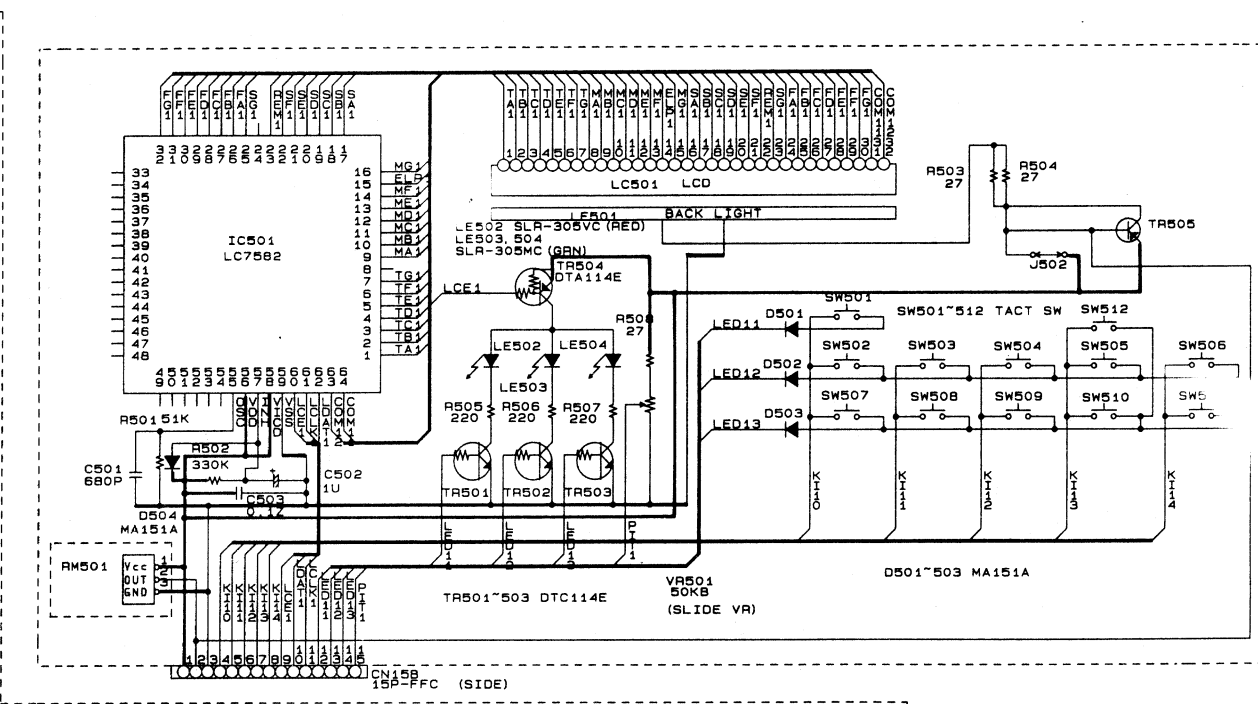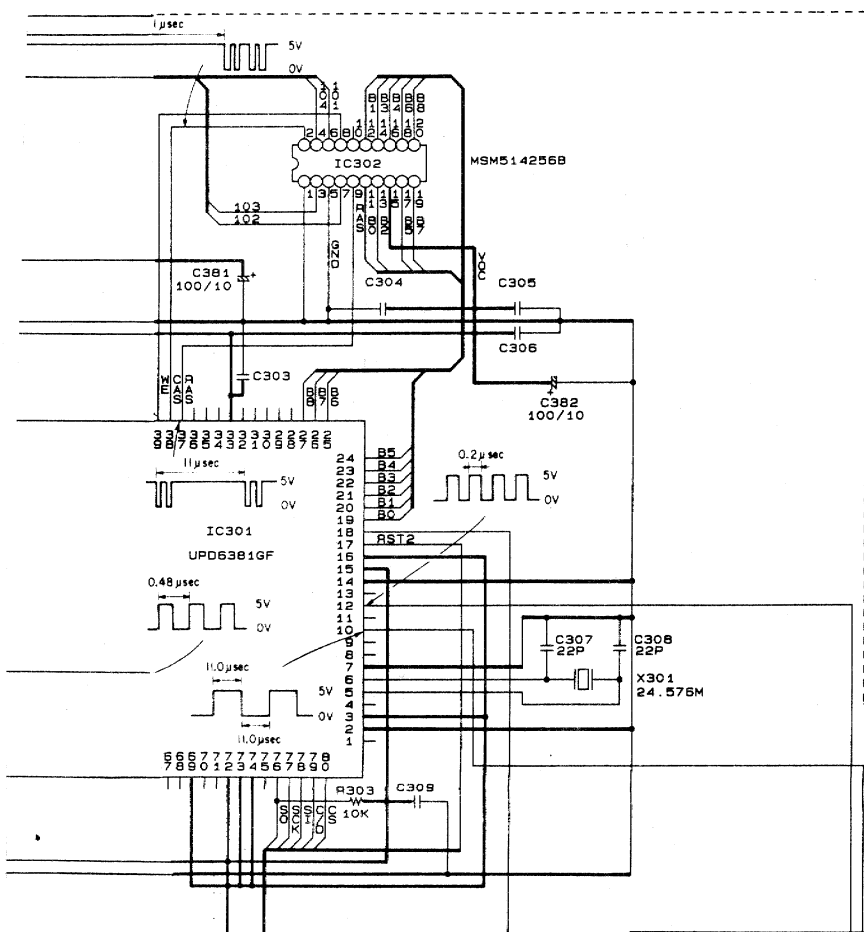

C313 100/10 C317 100/10

