


2-83

TC-K5

REVISED

Discard TC-K5 service manual previously issued.

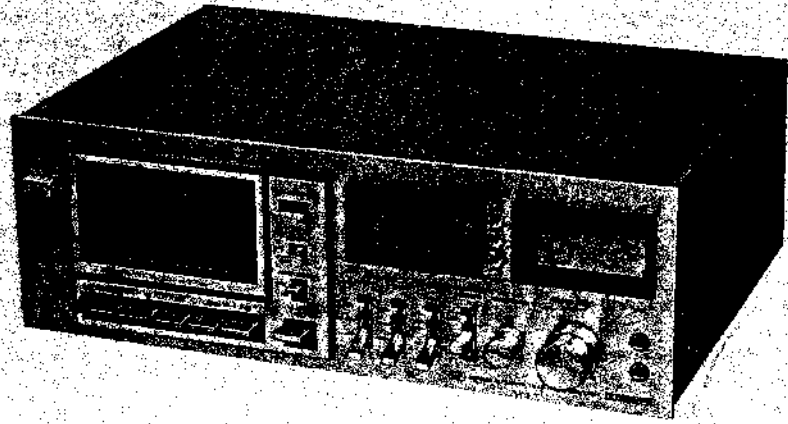

*AEP Model
E Model
US Model
Canadian Model
UK Model*

STEREO CASSETTE DECK

SPECIFICATIONS

Power Requirements: 120V ac, 60Hz (US, Canadian model)
110, 120, 220 or 240V ac, adjustable, 50/60Hz (AEP, E, UK model)

Power Consumption: 11W (US, Canadian model)
13W (AEP, E, UK model)

Dimensions: Approx. 435 (w) x 145 (h) x 290 (d) mm
17 1/8 (w) x 5 3/4 (h) x 11 1/2 (d) inches (US, Canadian model)

Approx. 410 (w) x 145 (h) x 290 (d) mm
16 1/8 (w) x 5 3/4 (h) x 11 1/2 (d) inches (AEP, E, UK model)

Weight: Approx. 6.9kg (15 lb 4 oz) (US, Canadian model)
Approx. 6kg (13 lb 4 oz) (AEP, E, UK model)

Track: 4-track 2-channel stereo

'Dolby' and the double-D symbol are the trade marks of Dolby Laboratory Inc. Noise reduction system manufactured under license from Dolby Laboratory Inc.
0 dB = 0.775V

Fast Forward and Rewind Time: Approx. 90 seconds with Sony cassette C-60

Frequency Response: DOLBY NR OFF

- With Ferri-Chrome cassette
 - 20-18,000Hz (NAB)
 - 30-16,000Hz ± 3dB (NAB)
 - 30-16,000Hz (DIN)
- With chromium dioxide cassette
 - 20-17,000Hz (NAB)
 - 30-15,000Hz ± 3dB (NAB)
 - 30-15,000Hz (DIN)
- With regular cassette
 - 20-15,000Hz (NAB)
 - 30-13,000Hz (DIN)

- Continued on page 2 -

SONY

SERVICE MANUAL

Wow and Flutter: 0.05% wrms (NAB)
 $\pm 0.14\%$ (DIN)
S/N Ratio: DOLBY NR OFF
 With Ferri-Chrome cassette
 59dB at peak level (NAB)
 57dB (DIN, 1975 rev.)
 49dB (DIN, old)
 With chromium dioxide cassette
 55dB at peak level (NAB)
 DOLBY NR ON
 Improved by 5dB at 1kHz,
 10dB above 5kHz
Total Harmonic Distortion: 1.3%
Record Bias Frequency: 105kHz
Inputs: Microphone inputs (two phono jacks)
 sensitivity: 0.25mV (-70dB)
 for a low-impedance microphone
 Line inputs (two phono jacks)
 sensitivity: 77.5mV (-20dB)
 input impedance: 100k Ω


Outputs: Variable line outputs (two phono jacks)
 output level: 0.775V (0dB)
 at load impedance 100k Ω
 with LINE OUT level control at "10"
 suitable load impedance: more than 10k Ω
 Fixed line outputs (two phono jacks)
 output level: 0.435V (-5dB)
 at load impedance 100k Ω
 suitable load impedance: more than 10k Ω
 Headphone output (binaural jack)
 output level: -20 to -50dB
 at load impedance 8 Ω
Record/playback Jack: Input impedance: less than 10k Ω
 Output impedance: less than 10k Ω

0dB = 0.775V


MODEL IDENTIFICATION

Specification label

E, AEP, UK model

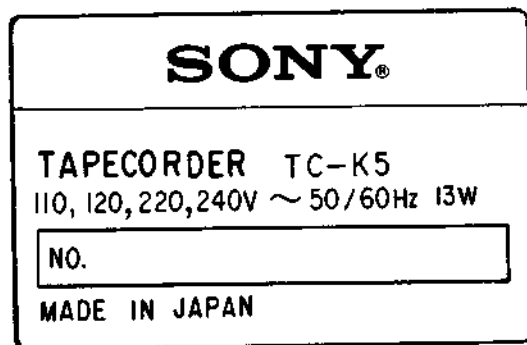


US, Canadian model

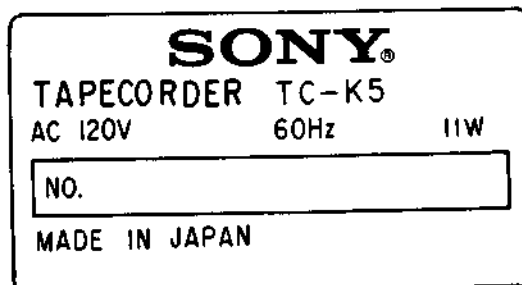

— Power Cord —

 E model: euro-plug (Part No. 1-551-216-11)

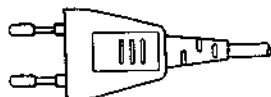


E model: parallel blade plug (Part No. 1-534-754-14)



SECTION 1
OUTLINE

1-1. BLOCK DIAGRAM

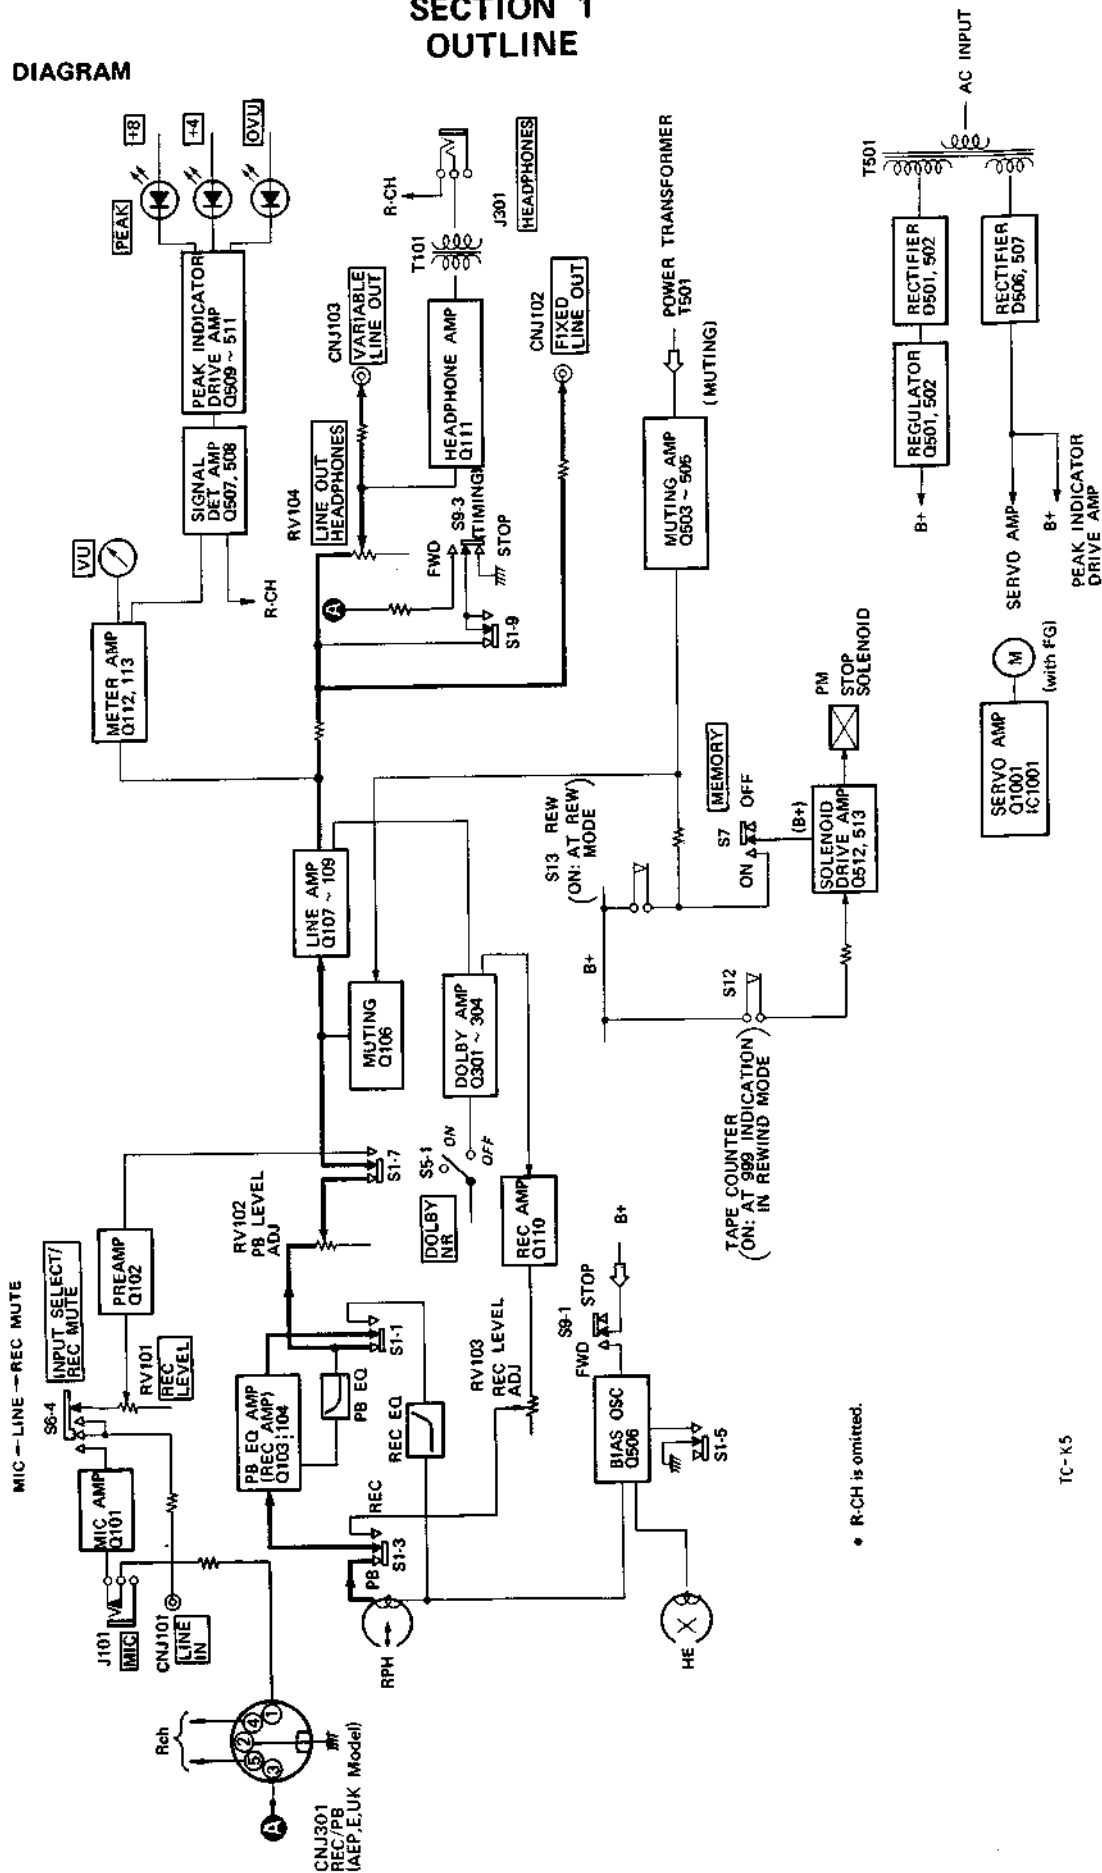

1-2. MECHANICAL OPERATION

Full-Auto Shut-Off Mechanism

When the end of the tape has been reached and the take-up reel stops rotating, shut-off lever (B) pushes against button-lock plate (A), thereby releasing the function buttons and bringing the motor to a stop.

Operation in Forward and Fast Forward Modes

(See Fig. 1-1.)

1. The mechanical parts rotate in the directions shown by the numbered arrows ① - ④.
2. Detecting lever (B) is pushed aside in the direction of arrow ⑤ due to the rotational action of the take-up reel.
3. The tip of detecting lever (B) is pushed into a central position (shown by dotted line) by the guide ⑥ of worm wheel. However, once the guide ⑥ has passed, the rotating take-up reel spindle pulls the detecting lever (B) back across to the right ⑤, thereby maintaining the forward (or fast forward) mode.

in forward or fast forward mode

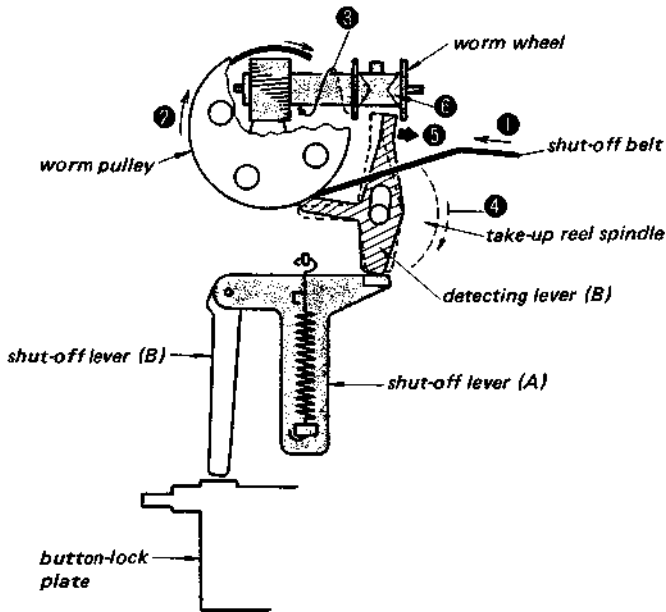


Fig. 1-1.

At the End of the Tape (in fast forward and forward modes)

When the take-up reel stops rotating, the worm wheel activates the automatic shut-off mechanism. This operation is made by shut-off lever (B) pushing against button-lock plate (A) as shown in Fig. 1-2.

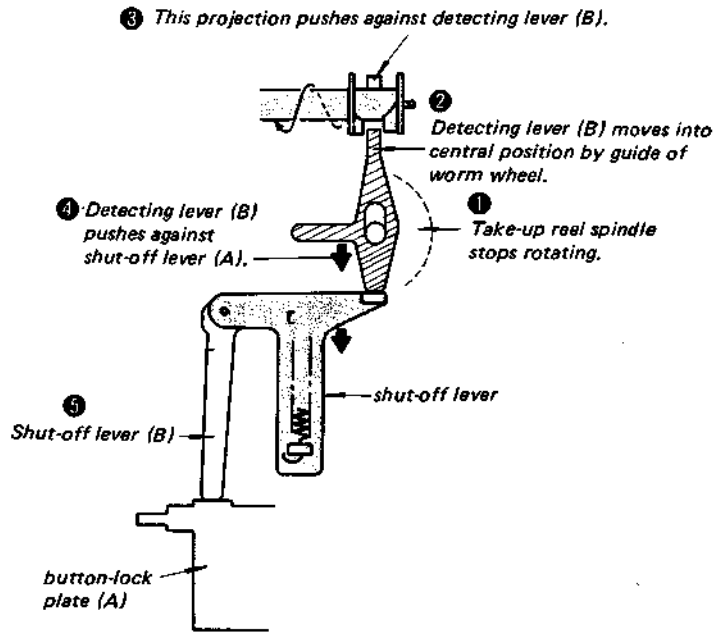


Fig. 1-2.

In Rewind Mode

The tip of detecting lever (B) is pushed to the left side of the worm wheel by the take-up reel rotating in the reverse direction. When the take-up reel stops rotating, button-lock plate (A) is pushed again back as in forward and fast forward modes, resulting in the release of the transport mode and stopping of the motor rotation.

Pause in Forward Mode

(See Fig. 1-3.)

As pause spring pushes detecting lever (B), the automatic shut-off mechanism does not operate.

in pause mode

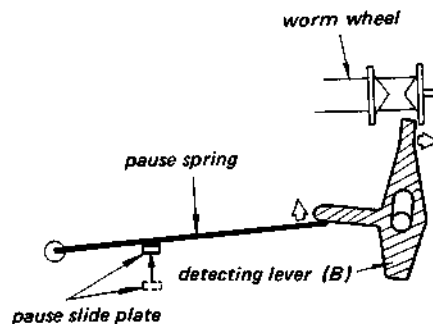


Fig. 1-3.

Auto-Play Mechanism

(See Fig. 1-4)

When the forward and rewind buttons are pressed at the same time, the tape deck is in rewind mode. When the tape has been wound onto supply reel and the reel stops rotating, only the rewind button is released, resulting in forward mode commencing automatically.

Note: When these two buttons are pressed at the same time, both forward and rewind modes are initiated. However, the auto-play lever prevents the pinch roller from pressing against the capstan. As a result, rewind mode will take priority. (The auto-play lever is not shown in Fig. 1-4.)

In Rewind Mode of Auto-Play Phase

(See Fig. 1-4.)

1. The FR lever pushes gear (A) to engage the flywheel gear, thereby driving the supply reel spindle, and resulting in rewinding of the tape.
2. The rod of the FR lever (C) displaces the button-lock plate spring (A) from its normal position, thereby separating button-lock plate (B) (E) from button-lock plate (A) (D).
3. The take-up reel spindle rotates in the direction shown by the arrow, thereby preventing the shut-off mechanism from being activated.

4. The auto-play lever prevents the pinch roller from pressing against the capstan, but the tape is near the head ready to commence forward mode.

At the End of Tape in Rewind Mode

1. When the take-up reel stops rotating, the shut-off mechanism is activated. The button-lock plate (A) is pushed back, and the rewind button consequently released.
2. Gear (A) disengages the flywheel gear, thereby releasing rewind mode.
3. Since the button-lock plate spring has been displaced by the FR lever rod, button-lock plate (B) employed to release the forward button will remain where it is at this time. Therefore, at the end of the rewind mode, only the rewind button is released. Forward mode is then commenced automatically.

At the End of Tape in Forward Mode

1. The FR lever rod is withdrawn as soon as forward mode is commenced. Consequently, the both button-lock plates (A) and (B) are engaged again by the button-lock plate spring.
2. When the shut-off mechanism is activated again at the end of tape in forward mode, both button-lock plates (A) and (B) are pushed back by FR lever rod, thereby bringing all transport mechanism to a complete stop mode.

in rewind mode

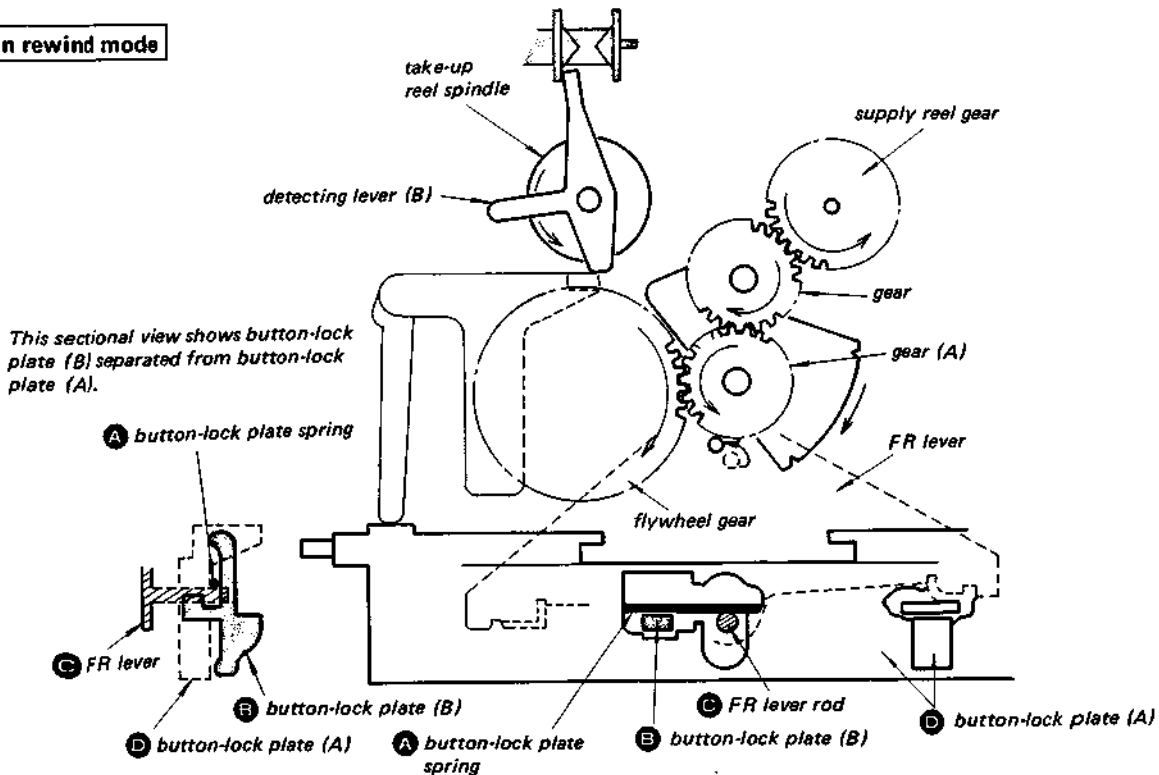


Fig. 1-4.

Timer Standby Mechanism

The timer standby switch permits playback or record mode to be commenced at desired time. With the power cord of the tape deck disconnected from the ac wall outlet, turn the power switch on, and press the forward button, or the forward and record buttons. Then, turn the timer standby switch on, and connect the tape deck to the ac wall outlet through a timer for the desired time.

At Standby

(See Fig. 1-5.)

1. The timer standby switch presses up against the timer standby levers (A) and (B).
2. The pause slide plate and release lever are thereby moved in the direction shown by the arrows marked ▲, resulting in the pinch roller being separated from the capstan.
3. The timer standby lever (B) presses up against the release lever (A), thereby separating the take-up arm pulley from the tire of the take-up reel spindle.
4. The timer standby lever (A) pushes timer standby lever (C) in the direction of arrow ●, thereby pushing shut-off lever (B) (employed to release function buttons) away from the button-lock plate (A).

at standby mode

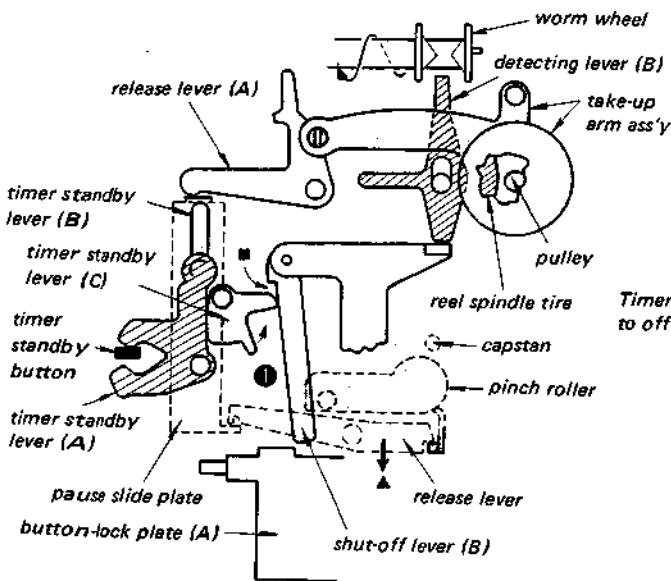


Fig. 1-5.

When Power is Switched On

(See Fig. 1-6.)

1. The motor starts to drive the worm wheel.
2. The worm wheel pushes against detecting lever (B).
3. The ■ marked section of shut-off lever (B) pushes against standby lever (C) as shown in Fig. 1-5.
4. The timer standby lever (C) pushes against standby lever (A), thereby returning the timer standby button to the off position.
5. The timer standby lever (B) and release lever (A) return to their original positions, thereby bringing the take-up arm to engage against the tire of the take-up reel spindle which is rotated by motor.
6. Since the pause slide plate and release lever also return to their original positions, the pinch roller presses against the capstan to start forward mode.

when power switched on

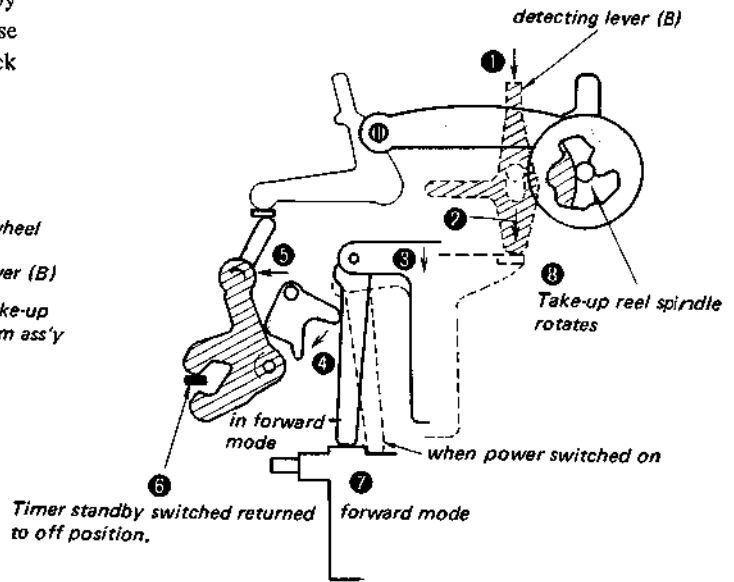


Fig. 1-6.

1-3. CIRCUIT DESCRIPTION

Peak Level Indicator

The signal levels in both left and right channels are monitored simultaneously. The instantaneous peak levels that the level meters cannot follow are displayed by mean of the three LED peak level indicators. The three peak levels displayed are: 0 VU, +4 and +8

Peak Level Indication Circuit

(See Fig. 1-8.)

1. Q507 and Q508 are employed in signal level detection and peak level holding.
2. If an input signal in the left channel instantaneously reaches a level of 1.2V, Q507 will charge up C517 immediately to 0.6V.
3. Even after the signal pulse has passed, the charged C517 will indicate the peak value.
4. The C517 discharges relatively slowly through resistors R connected in parallel. Therefore, the transient peak level can be monitored by the peak indicating LEDs.

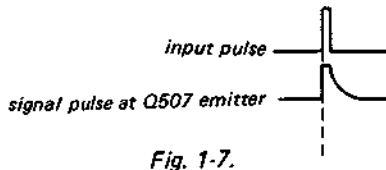


Fig. 1-7.

5. When the emitter voltage of Q507 is more than 0.6V, a signal is passed through R1 to turn Q509 on, and illuminates the 0 VU indicating LED.
6. Hence, an input signal of 1.2V results in the 0 VU indicating LED illuminating. For transient input signals of which levels are +4 and +8dB higher than 1.2V, the respective +4 and +8dB indicating LEDs will illuminate.

In Case that Left and Right Input Signal Levels are different

The transistor with the higher base potential of left and right channels is turned on.

The transistor of the low level channel will be turned off because its emitter voltage is raised by emitter voltage of transistor with a higher level.

In case of Same-Level, In-Phase Input Signals in Both Left and Right Channels

Both Q507 and Q508 are activated simultaneously by identical input signals. The peak detection circuitry has been designed to maintain C517 at levels 0.6V below the input levels.

Base Resistors R185 and R285

R185 and R285 are connected to the bases of Q507 and Q508 to protect these transistors, and Q113 and Q213 in the drive stage, from destruction.

With the emitters connected to a capacitor C517, and the collectors connected to the B+ bus as shown in Fig. 1-7, the current flow in transistor could easily exceed maximum I_c when transient input peaks are applied without any resistance to restrict the current flow, resulting in destruction of the transistors. Therefore, R185 and R285 are used to limit I_c .

Recording Amplifier

During recording, the TC-K5 employs the playback equalizer amplifier as the final stage of the recording amplifier in record mode.

Dolby Circuit

The Dolby circuit employed in the TC-K5 is of the standard type feedback operation in playback mode, and pass-through operation in record mode.

Peak Level Indication Circuit

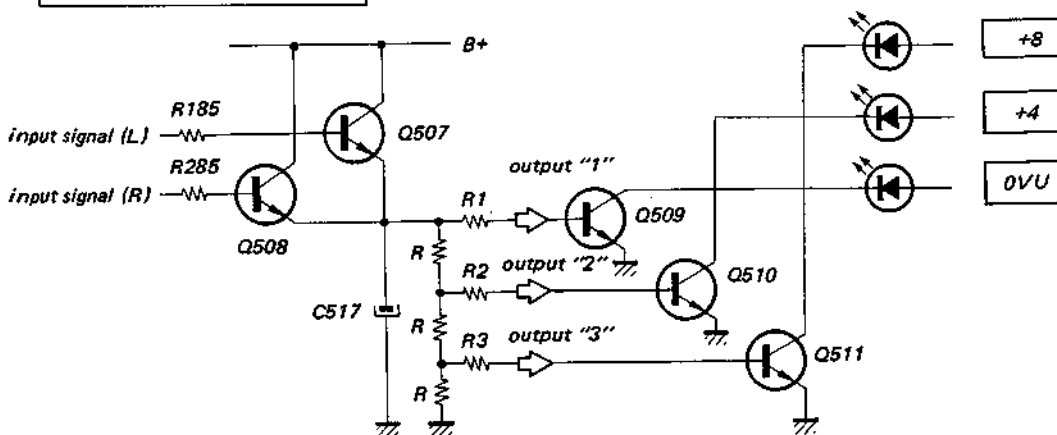


Fig. 1-8.

1-4. CHASSIS

The chassis of the TC-K5 features a new structural design, employing molded bosses and plates, etc. on both sides of the main metal frames. All molded units are interconnected with each other by thin strips. These inter-connecting pieces help to stabilize the molded units, and therefore should not be forced aside or pulled out like other movable parts.

The chassis consists of two main metal frames. The reel spindle and their drive gears, and part of the shut-off mechanism are mounted on the smaller, detachable frame. The Fig. 1-9 and Fig. 1-10 show the relative positions of parts when tape transport mechanism is in stop mode.

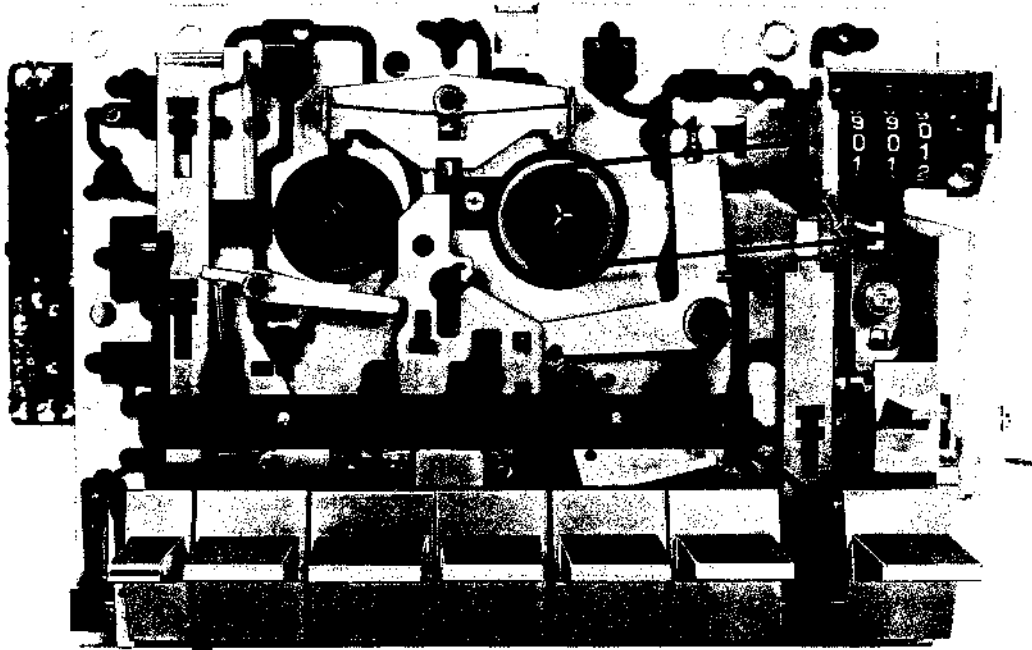


Fig. 1-9.









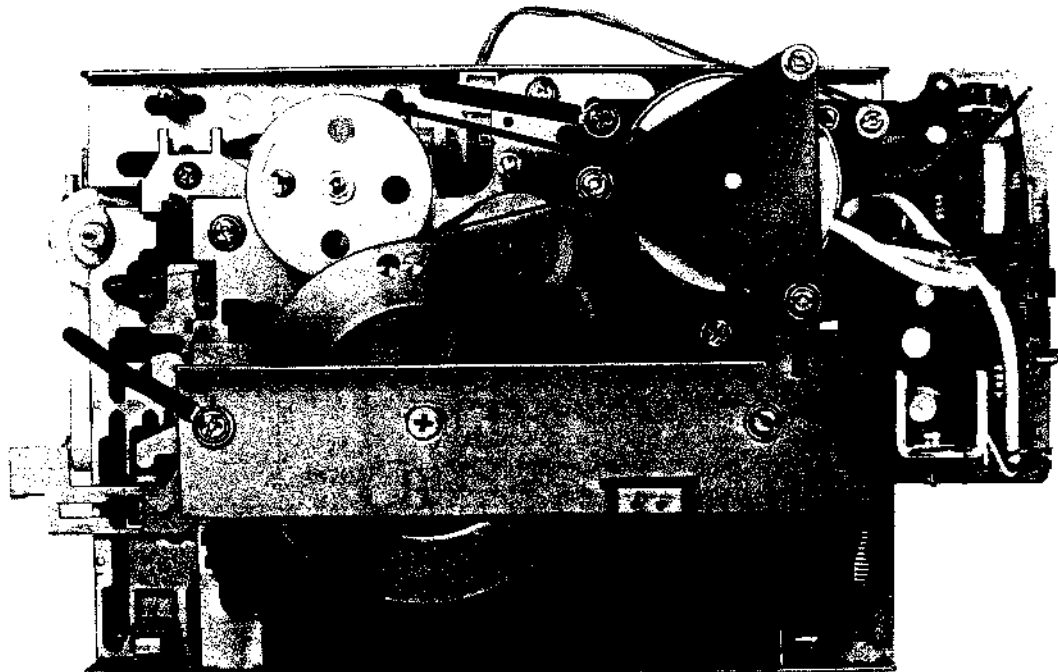



Fig. 1-10.

SECTION 2
DISASSEMBLY


Follow the disassembly procedure in the numerical order given.

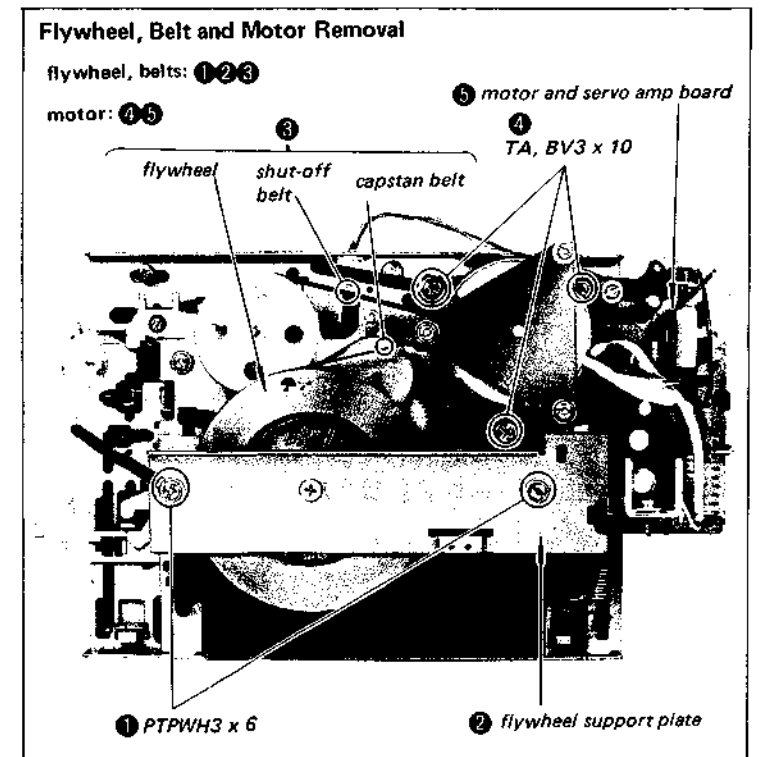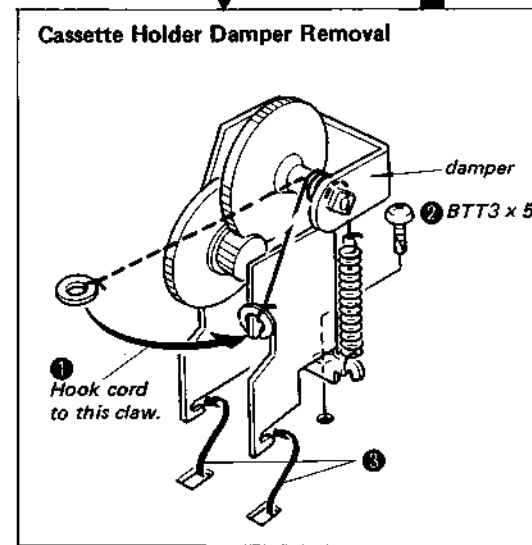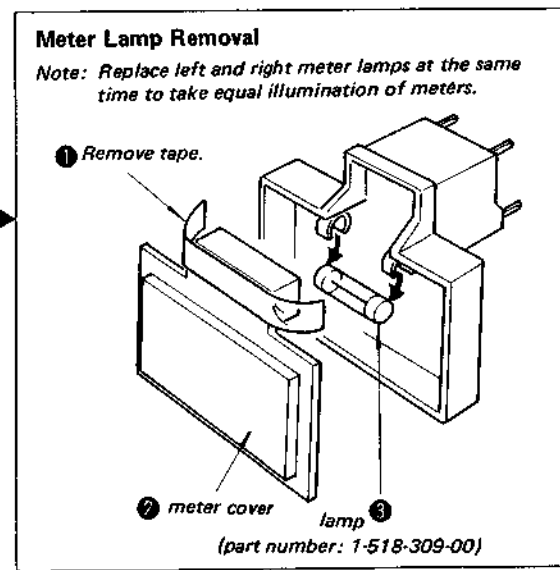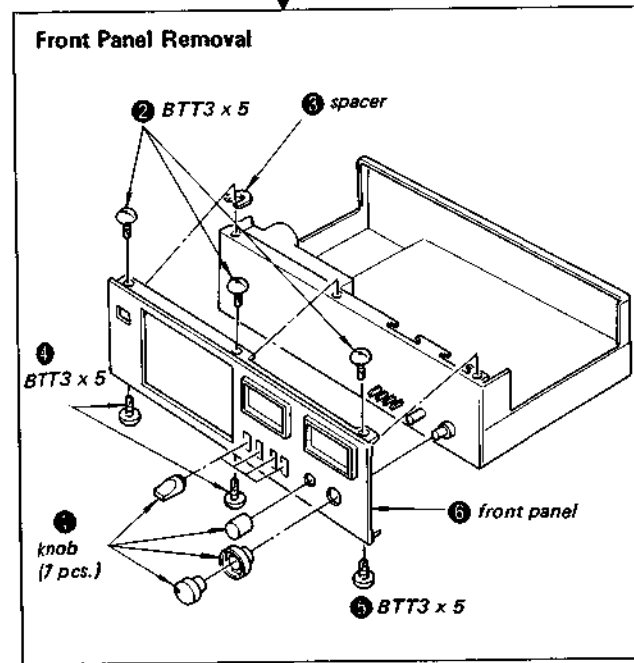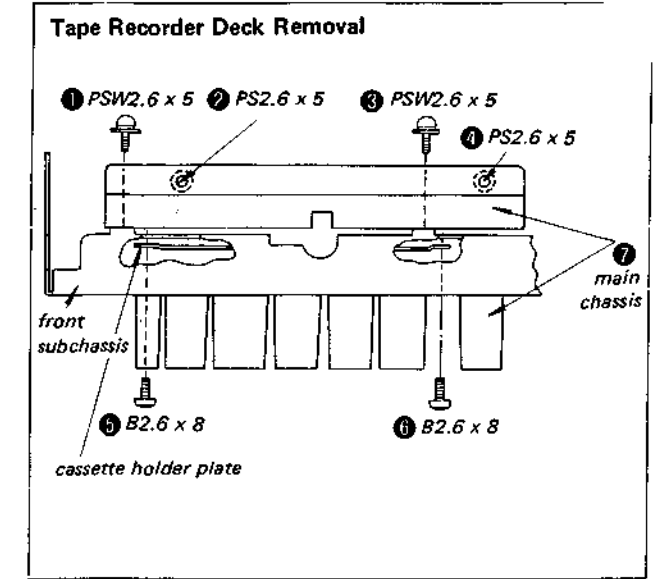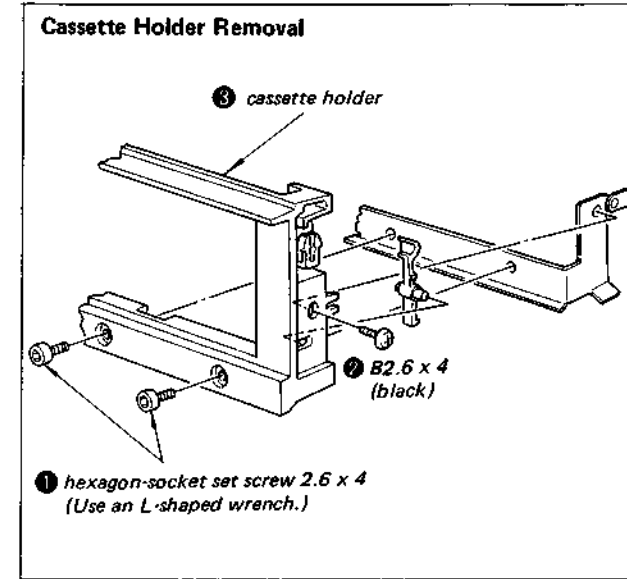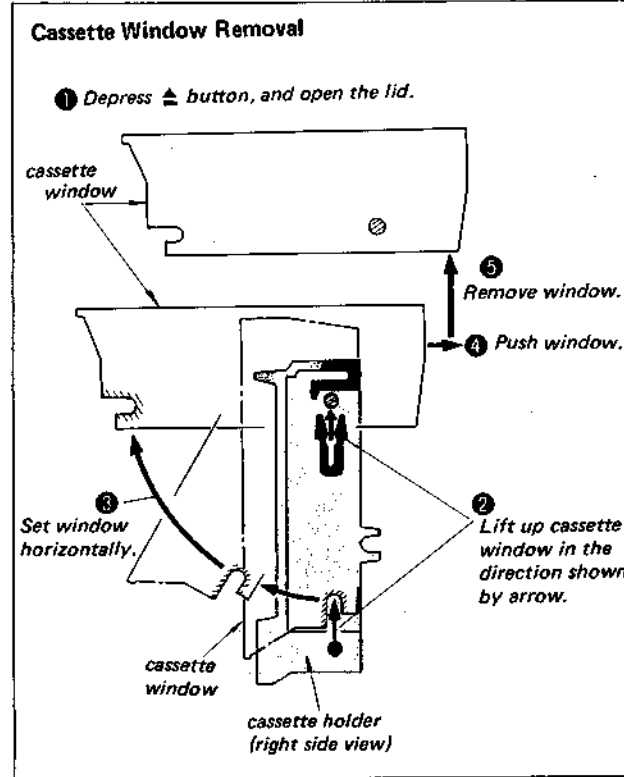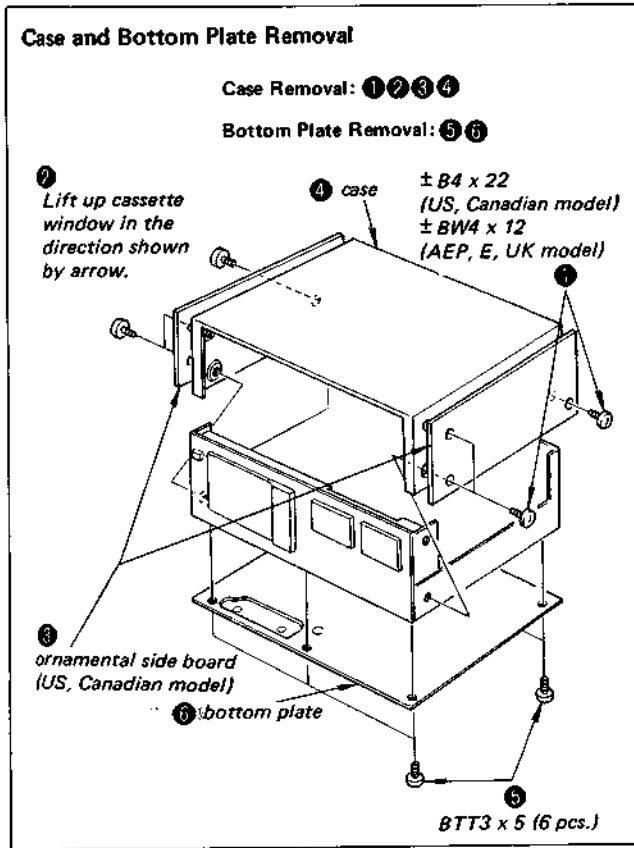


Spindle Chassis Ass'y Removal

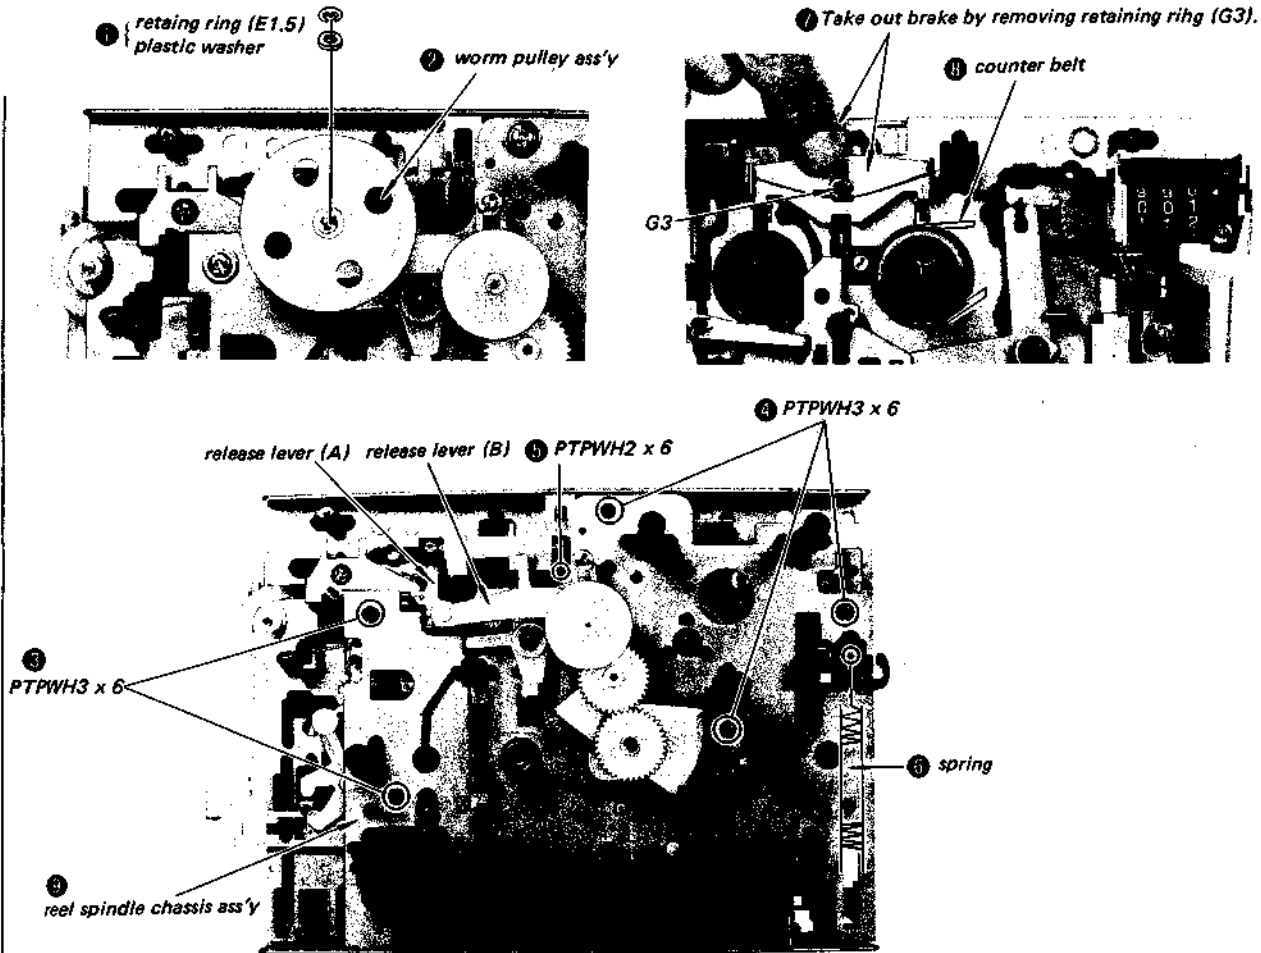

Reel Table Removal

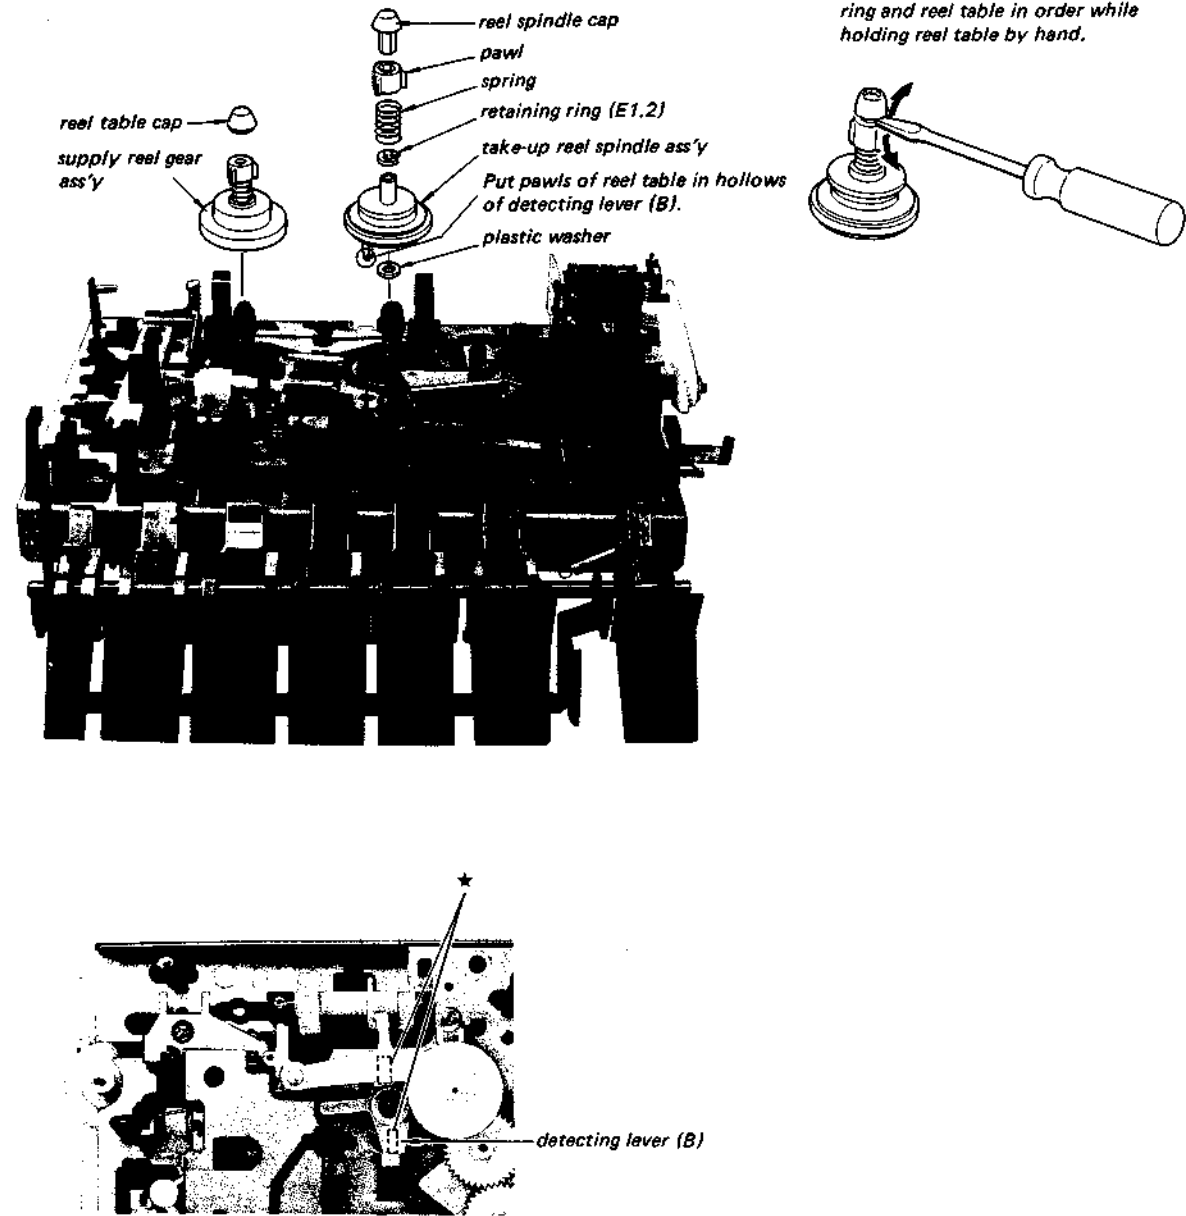

Caution on Reel Spindle Chassis Installation

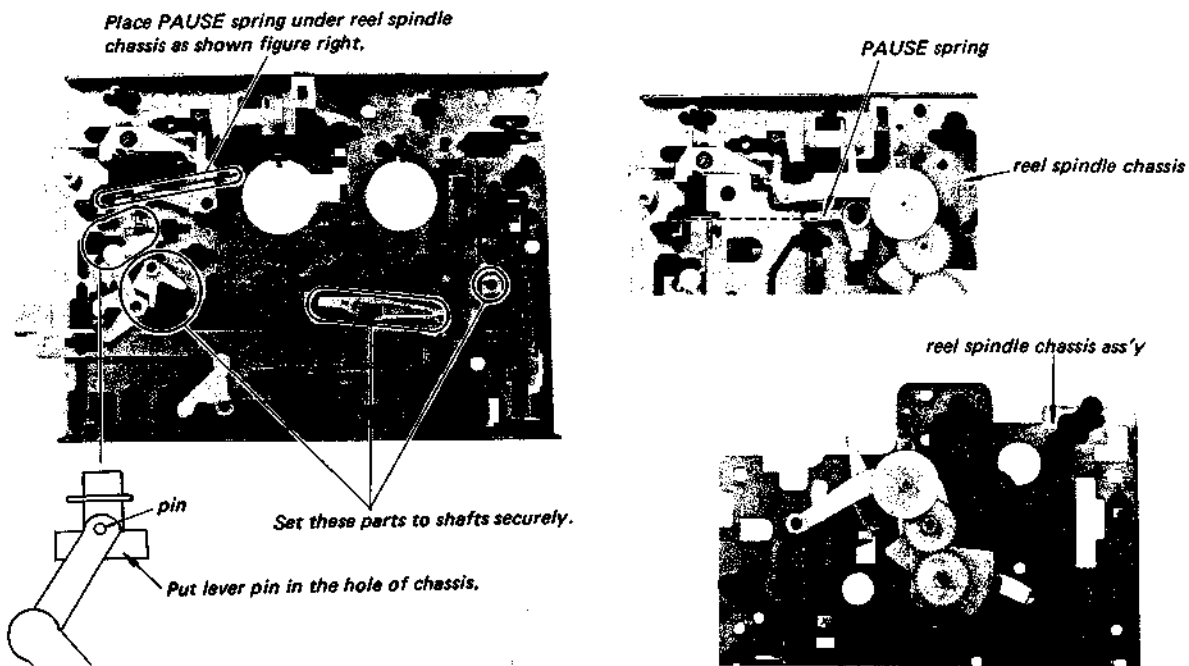

SECTION 3 ADJUSTMENTS

3-1. MECHANICAL ADJUSTMENTS

PRECAUTION

1. Clean the following parts with a denatured-alcohol-moistened swab:


record/playback head	pinch roller
erase head	rubber belts
capstan	idlers
2. Demagnetize the record/playback head with a head demagnetizer.
3. Do not use a magnetized screwdriver for the adjustments.
4. After the adjustments, apply suitable locking compound to the parts adjusted.
5. The adjustments should be performed with the rated power supply voltage unless otherwise noted.

Forward Tension Torque Adjustment

— playback mode —


Use type CQ-102A cassette torque meter.

Specification: 2.0 – 4.5g·cm
(0.02 – 0.06 oz·inch)



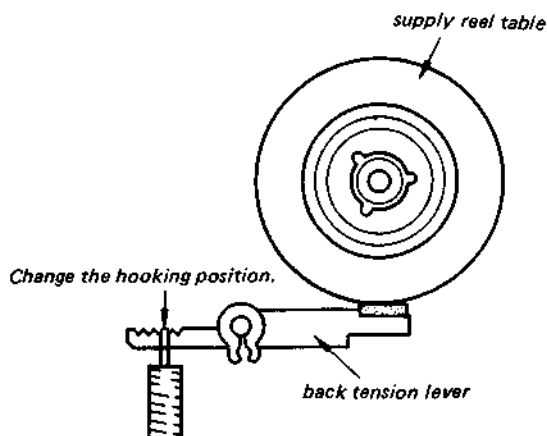


Tape Path Adjustment

1. Make an adjustment cassette as shown below.

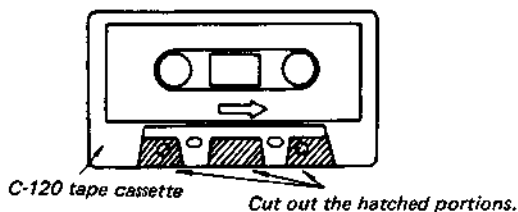

2. While viewing from the top, adjust the head heights to eliminate tape curl and tape twist at arrowed portions.

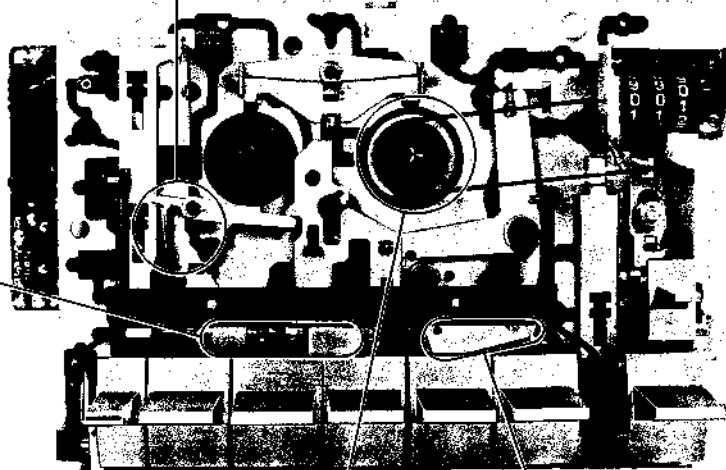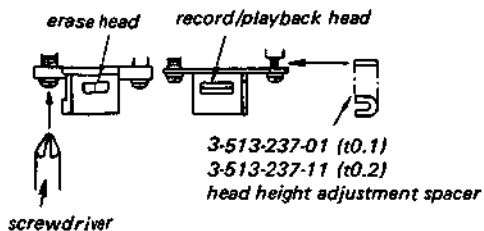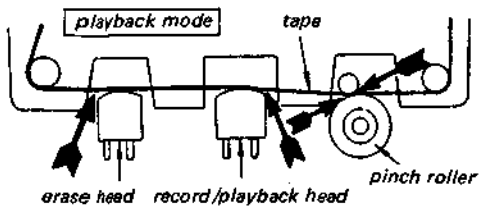

Forward Torque Adjustment

— playback mode —

Torque meter	Meter reading
CQ-102A	30 – 50g·cm (0.41 – 0.69 oz·inch)


If necessary, change the spring position.

take-up reel spindle




Pinch Roller Pressure Measurement



— playback mode —

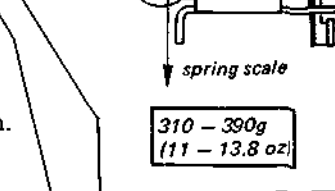


Hold Switch (S14) Position Adjustment
 — stop mode —

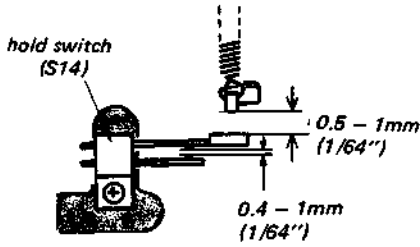

Motor (S10) and REW (S13) Switch Position Adjustments
 — stop mode —

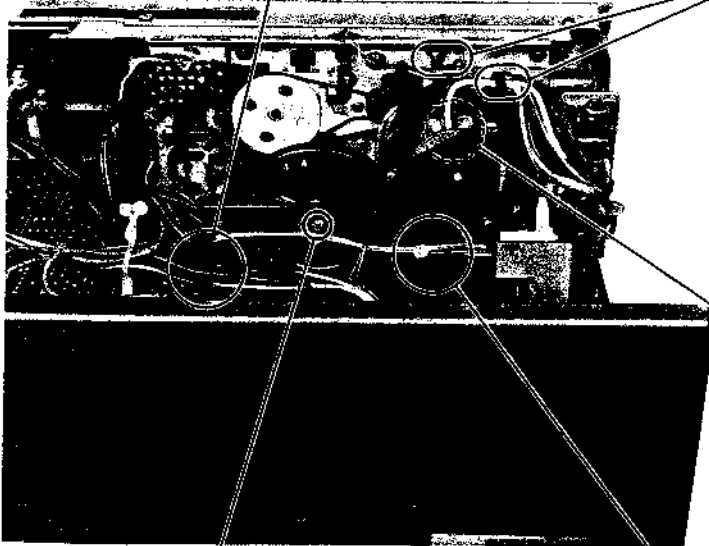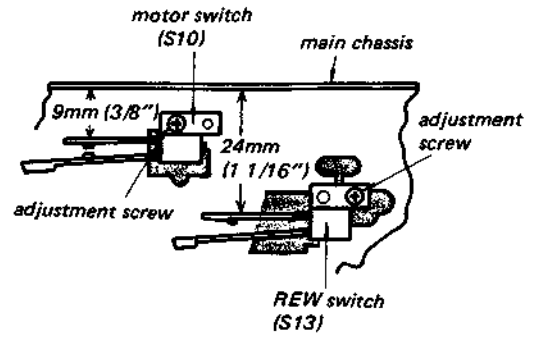


Pulley Height Adjustment
 — stop mode —

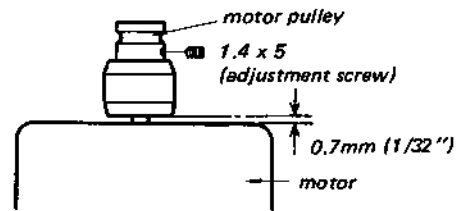


Thrust Adjustment
 — playback mode —

1. Connect a dc voltmeter across the motor.
2. Turn the screw clockwise for the position where the meter reading suddenly increases.
3. Loosen the screw 1/4 turn from the position obtained in step 2.

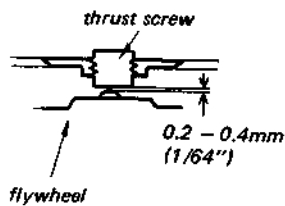

Muting Switch (S11) Position Adjustment
 — stop mode —

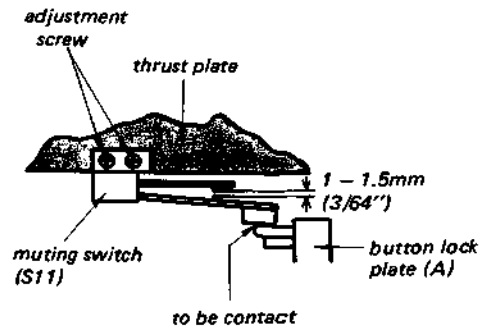

3-2. ELECTRICAL ADJUSTMENTS

Note: The adjustment should be performed in the order given in this service manual. The adjustments should be performed for both L-CH and R-CH.

Test Equipment/Tools Required:

- audio oscillator (af osc)
- VTVM
- digital frequency counter
- speed checker SONY LFM-30
- oscilloscope
- attenuator (600Ω)
- non-magnetic screwdriver
- resistors ... 600Ω (¼W), 10kΩ (¼W), 100kΩ (¼W)
- blank tapes (completely erased with bulk eraser)
SONY CS-10 (HF), CS-20 (CrO₂), CS-30 (Fe-Cr)

BIAS and EQ switch settings in accordance with tape used are as follows.

Tape	BIAS switch	EQ switch
CS-10	NORMAL	NORMAL
CS-20	HIGH	CrO ₂
CS-30	NORMAL	Fe-Cr

SONY test tapes



- P-4-A81S (6.3kHz, -10dB)
- P-4-A81 (6.3kHz, -10dB)
- P-4-L81 (333Hz, 0dB)
- WS-48 (3kHz, 0dB)

Switches and controls should be set as follows unless otherwise specified.

- DOLBY NR switch: OFF
- EQ switch: NORMAL
- BIAS switch: NORMAL
- LINE OUT/HEADPHONES LEVEL: MAX
- TIMER STANDBY switch: OFF
- MEMORY switch: OFF
- REC MUTE switch: OFF

Test Equipment Connections:

Input side:

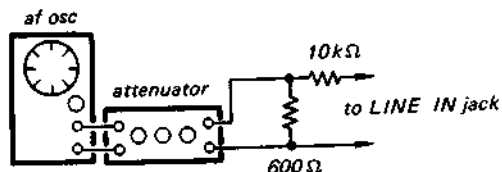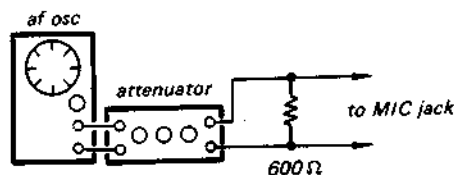

Standard Record:

Deliver the standard input signal level to the input jack and set the REC LEVEL control to obtain the standard output signal level.

Standard Input Level

	MIC	LINE IN
source impedance	300Ω	10kΩ
input level	0.77mV (-60dB)	0.25V (-10dB)

Standard Output Level


	LINE OUT (FIXED)	HEADPHONES
load impedance	100kΩ	8Ω
output level	0.44V (-5dB)	39mV (-26dB)

Record/playback Head Azimuth Adjustment


Procedure:

1. Mode: Playback

test tape
P-4-A81S
(6.3kHz, -10dB)


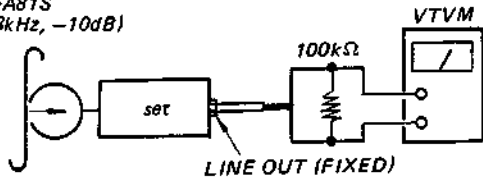


2. Turn the adjustment screw for maximum level and set it to the mechanical mid position between L-CH and R-CH peak positions.

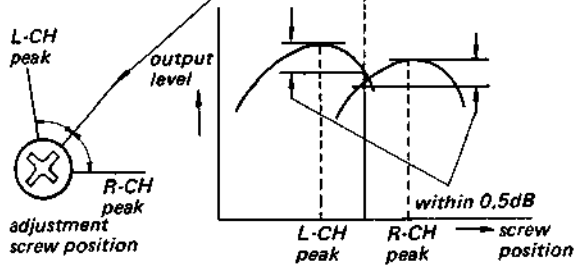


3. Mode: Playback

test tape
P-4-A81S
(6.3kHz, -10dB)

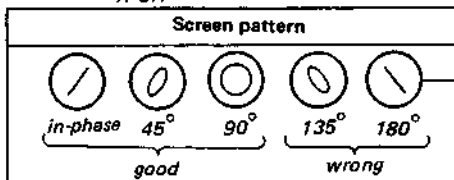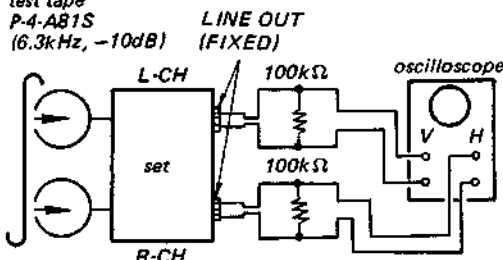

Adjustment Location:

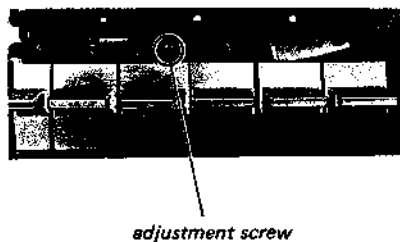


Tape Speed Adjustment

Procedure:

- Mode: Playback

speed checker
LFM-30
or
digital frequency
counter

WS-48
(3kHz, 0dB)

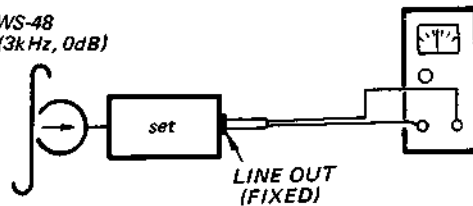

Adjust RV1001 to obtain the specified values below.


Specification:

Speed checker	Digital frequency counter
-0.7 ~ +0.7%	2,980 ~ 3,020Hz

Frequency difference between beginning and end of tape should be within 0.7% (20Hz).

Adjustment Location:


- servo amp board -

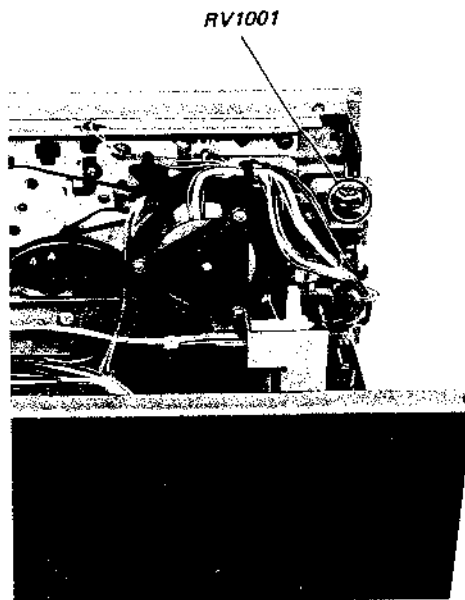

Playback Level Adjustment

Procedure:

1. Mode: Playback

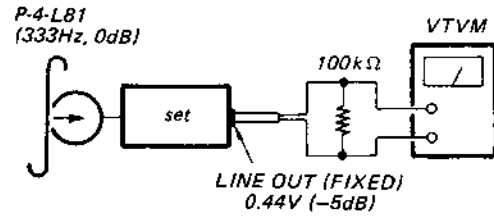

Adjust RV102 (L-CH) and RV202 (R-CH) to obtain 0.44V (-5dB) VTVM reading.


2. Assure that the LINE OUT level does not change when the mode is changed from playback to stop several times.

Specification:

LINE OUT level: 0.42-0.47V (-4.5 to -5.5dB)

Adjustment Location:


- record/playback amp board -

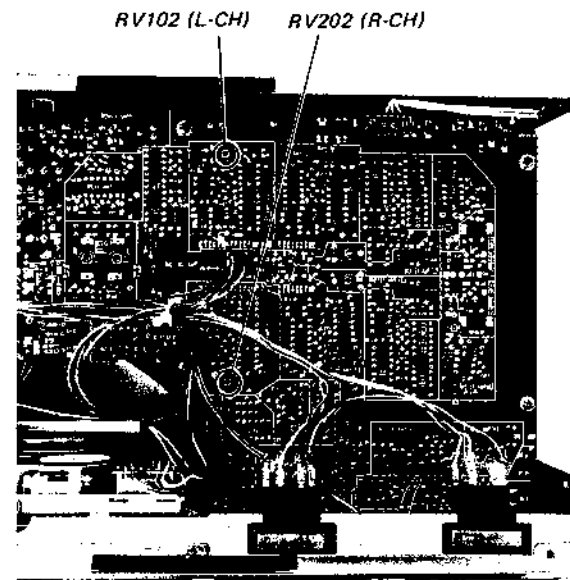

Playback Equalizer Adjustment

Procedure:

- Mode: Playback


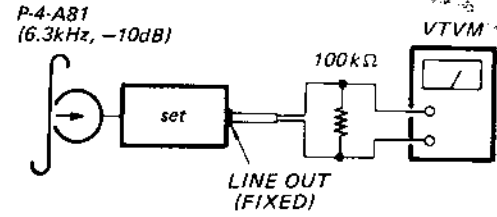


Adjust pattern connections for 0.12-0.16V (-13.5 to -16.5dB) VTVM reading.

Adjustment Location:

- record/playback amp board -

Pattern connection	High frequency level
(open)	↑ up
Ⓐ	↓ down
Ⓐ and Ⓑ	

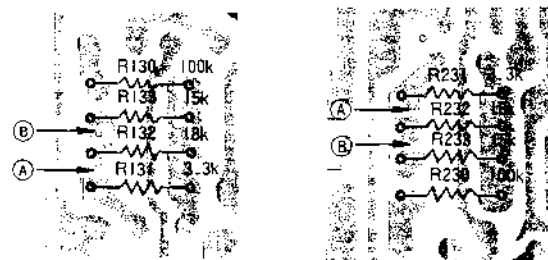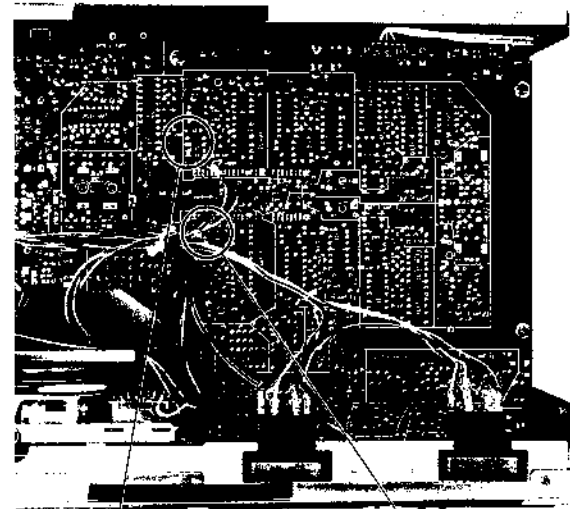


Note: After this adjustment, confirm the playback level.


Record Bias Adjustment

Procedure:

1. Mode: Standard record (See page 15.)

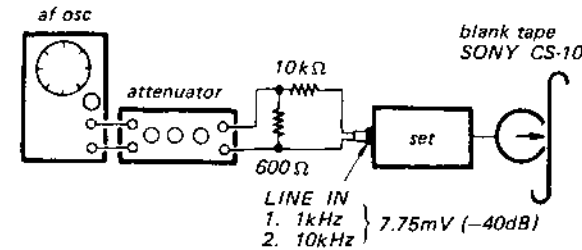

2. Mode: Playback

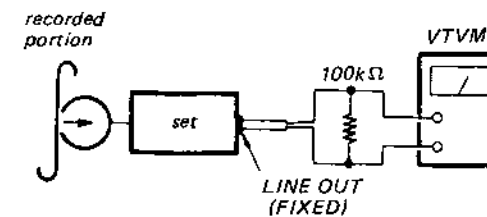


Adjust C128 (L-CH) and C228 (R-CH) to make 10kHz and 1kHz signal output levels equal.

Adjustment Location:

Note: Normally, patterns at Ⓐ are bridged. If adjustment is not made with trimmers fully tightened, remove solder bridge at Ⓐ and connect patterns at Ⓑ, and repeat the adjustment.


- record/playback amp board -

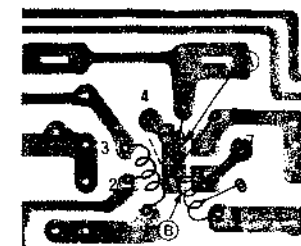


Record Level Adjustment

Procedure:

1. Mode: Standard record (See page 15.)

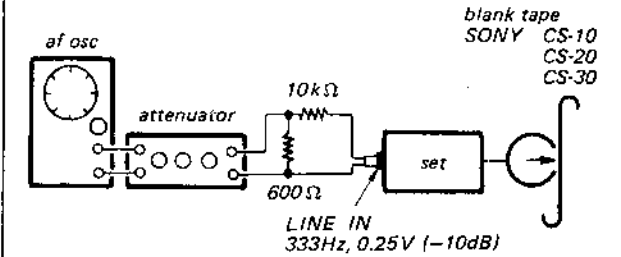

2. Mode: Playback

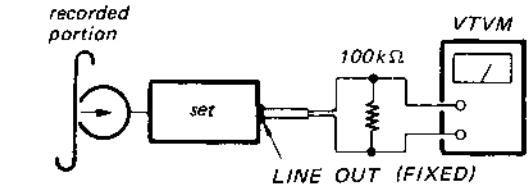


Adjust RV103 (L-CH) and RV203 (R-CH) to obtain the specified VTVM reading.

Specification:

Tape	LINE OUT level
CS-10	0.41 - 0.46V (-5.5 to -4.5dB)
CS-20	0.37 - 0.52V
CS-30	(-6.5 to -3.5dB)

Adjustment Location:


- record/playback amp board -

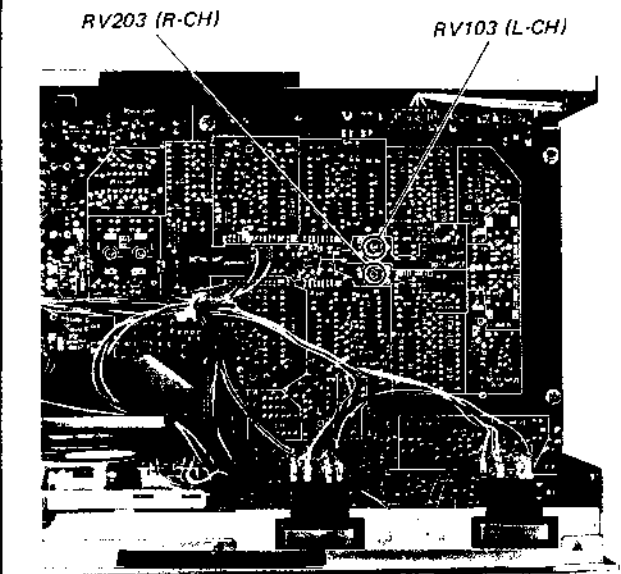


Record Bias Adjustment

Procedure:

1. Mode: Standard record (See page 15.)

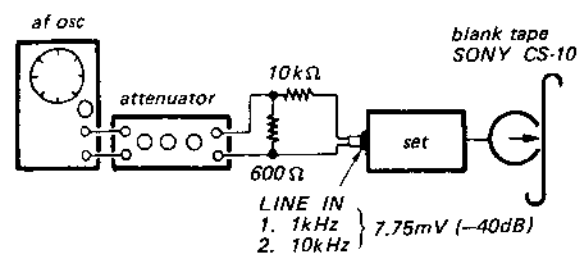

2. Mode: Playback


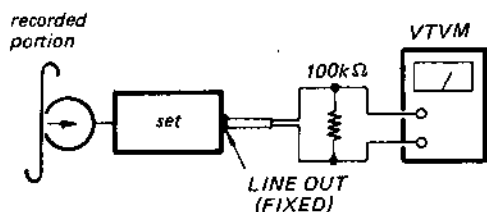


Adjust C128 (L-CH) and C228 (R-CH) to make 10kHz and 1kHz signal output levels equal.

Adjustment Location:

Note: Normally, patterns at (A) are bridged. If adjustment is not made with trimmers fully tightened, remove solder bridge at (A) and connect patterns at (B), and repeat the adjustment.


— record/playback amp board —

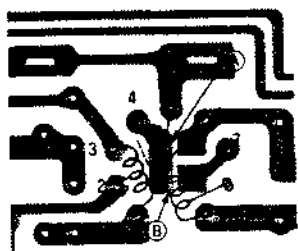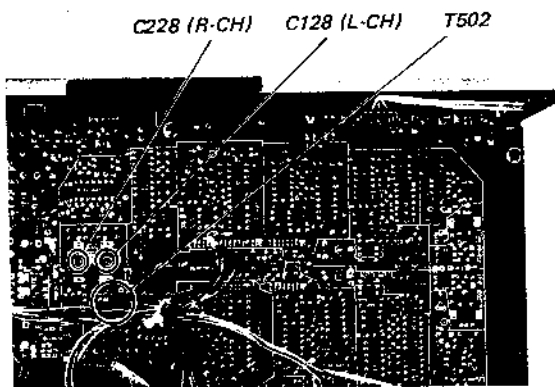


Record Level Adjustment

Procedure:

1. Mode: Standard record (See page 15.)

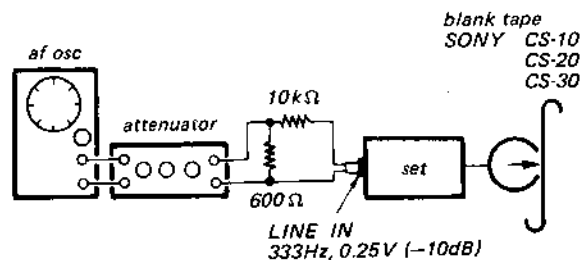

2. Mode: Playback

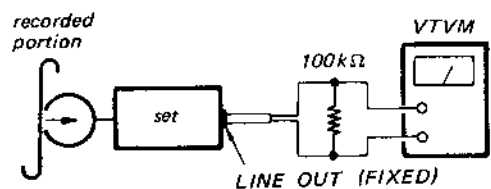


Adjust RV103 (L-CH) and RV203 (R-CH) to obtain the specified VTVM reading.

Specification:

Tape	LINE OUT level
CS-10	0.41 - 0.46V (-5.5 to -4.5dB)
CS-20	0.37 - 0.52V
CS-30	(-6.5 to -3.5dB)

Adjustment Location:


— record/playback amp board —

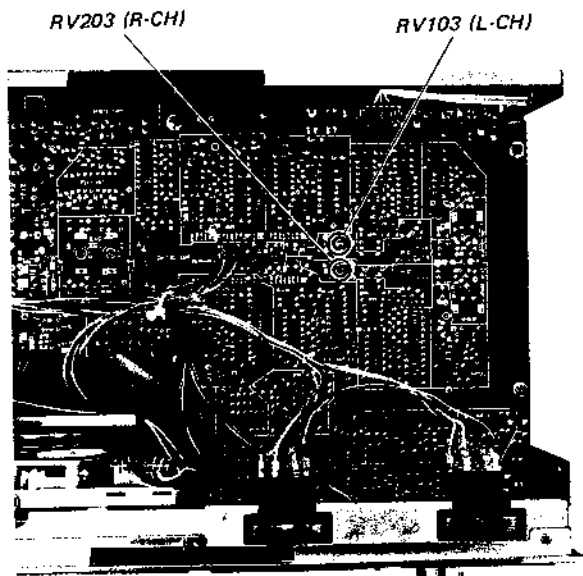

Level Meter Calibration

Procedure:

1. Mode: Standard record (See page 15.)

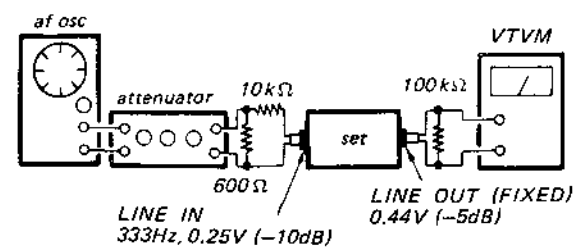


2.

Adjust	Level meter reading: 0 VU
RV105 (L-CH)	
RV205 (R-CH)	
RV105 (L-CH)	

Adjustment Location:


— record/playback amp board —

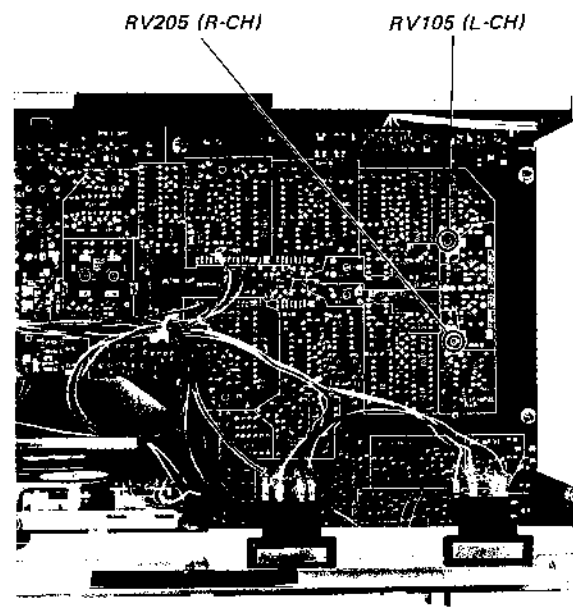

MPX Filter Adjustment

Procedure:


- Mode: Standard record (See page 15.)
DOLBY NR switch: ON (FILTER ON)

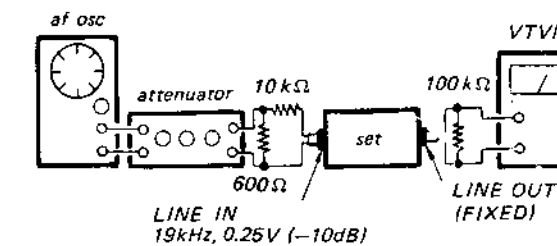

Adjust L102 (L-CH) and L202 (R-CH) for minimum VTVM reading.

Adjustment Location:

— record/playback amp board —

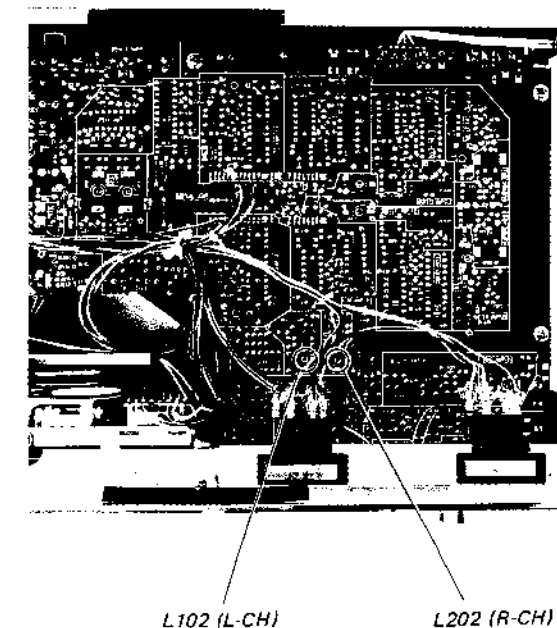

SECTION 4
DIAGRAMS



4-1. MOUNTING DIAGRAMS

— Conductor Side —


Replacement semiconductors

For replacement, use semiconductors except in ().


Q101-104, 107, 110
Q201-204, 207, 210

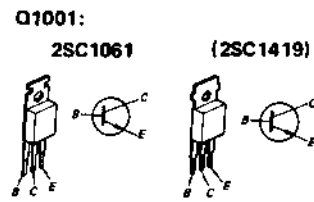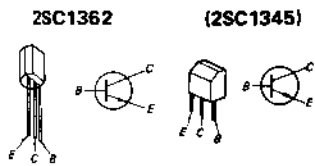

Q108, 109, 208, 209:

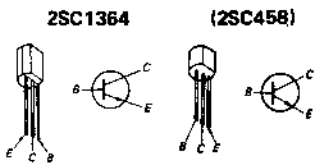

IC1001: CX065A (CX065)


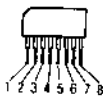 


D301, 303, 304
D401, 403, 404 : 1S1555 (1S2076)
D513


D302, 402 : 1T22AM (1T22)

D501, 502, 506, 507 : 10E2
D511, 512

 
Q106, 111-113
Q206, 211-213
Q301-304,
Q401-404
Q502-505, 507-512

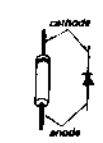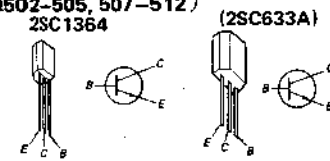

Q501, 513:

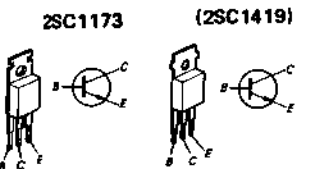


D503: EQB01-07 (EQB01-07R)

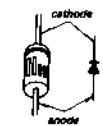 


(AEP, E, UK MODEL)



 
Q506: 2SC1475 (2SC1318)

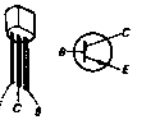


D514: 1S2076A (1S2076)

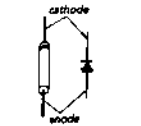


D508-510: SLP-24B

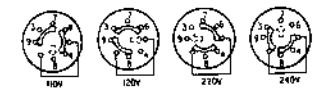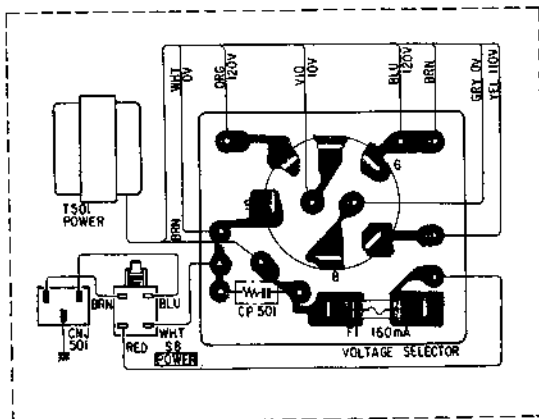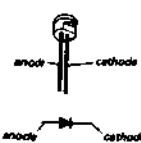 


D	Q, IC
503	501
304	502
302	503
303	507, 508
301	504
	109
	112
501	104
502	108
514	103
	505, 107
	304
	509, 510, 511
	113
	303
	302
	301
	110
	106
	111
512	206
507	206
506	506
	211
	210
	401
508	512
	203
	207
511	208
	403
	513
	209
	404
	213
510	212
401	
403	
404	
402	
	202
	201
1001	101
	102
	IC1001
D	Q, IC

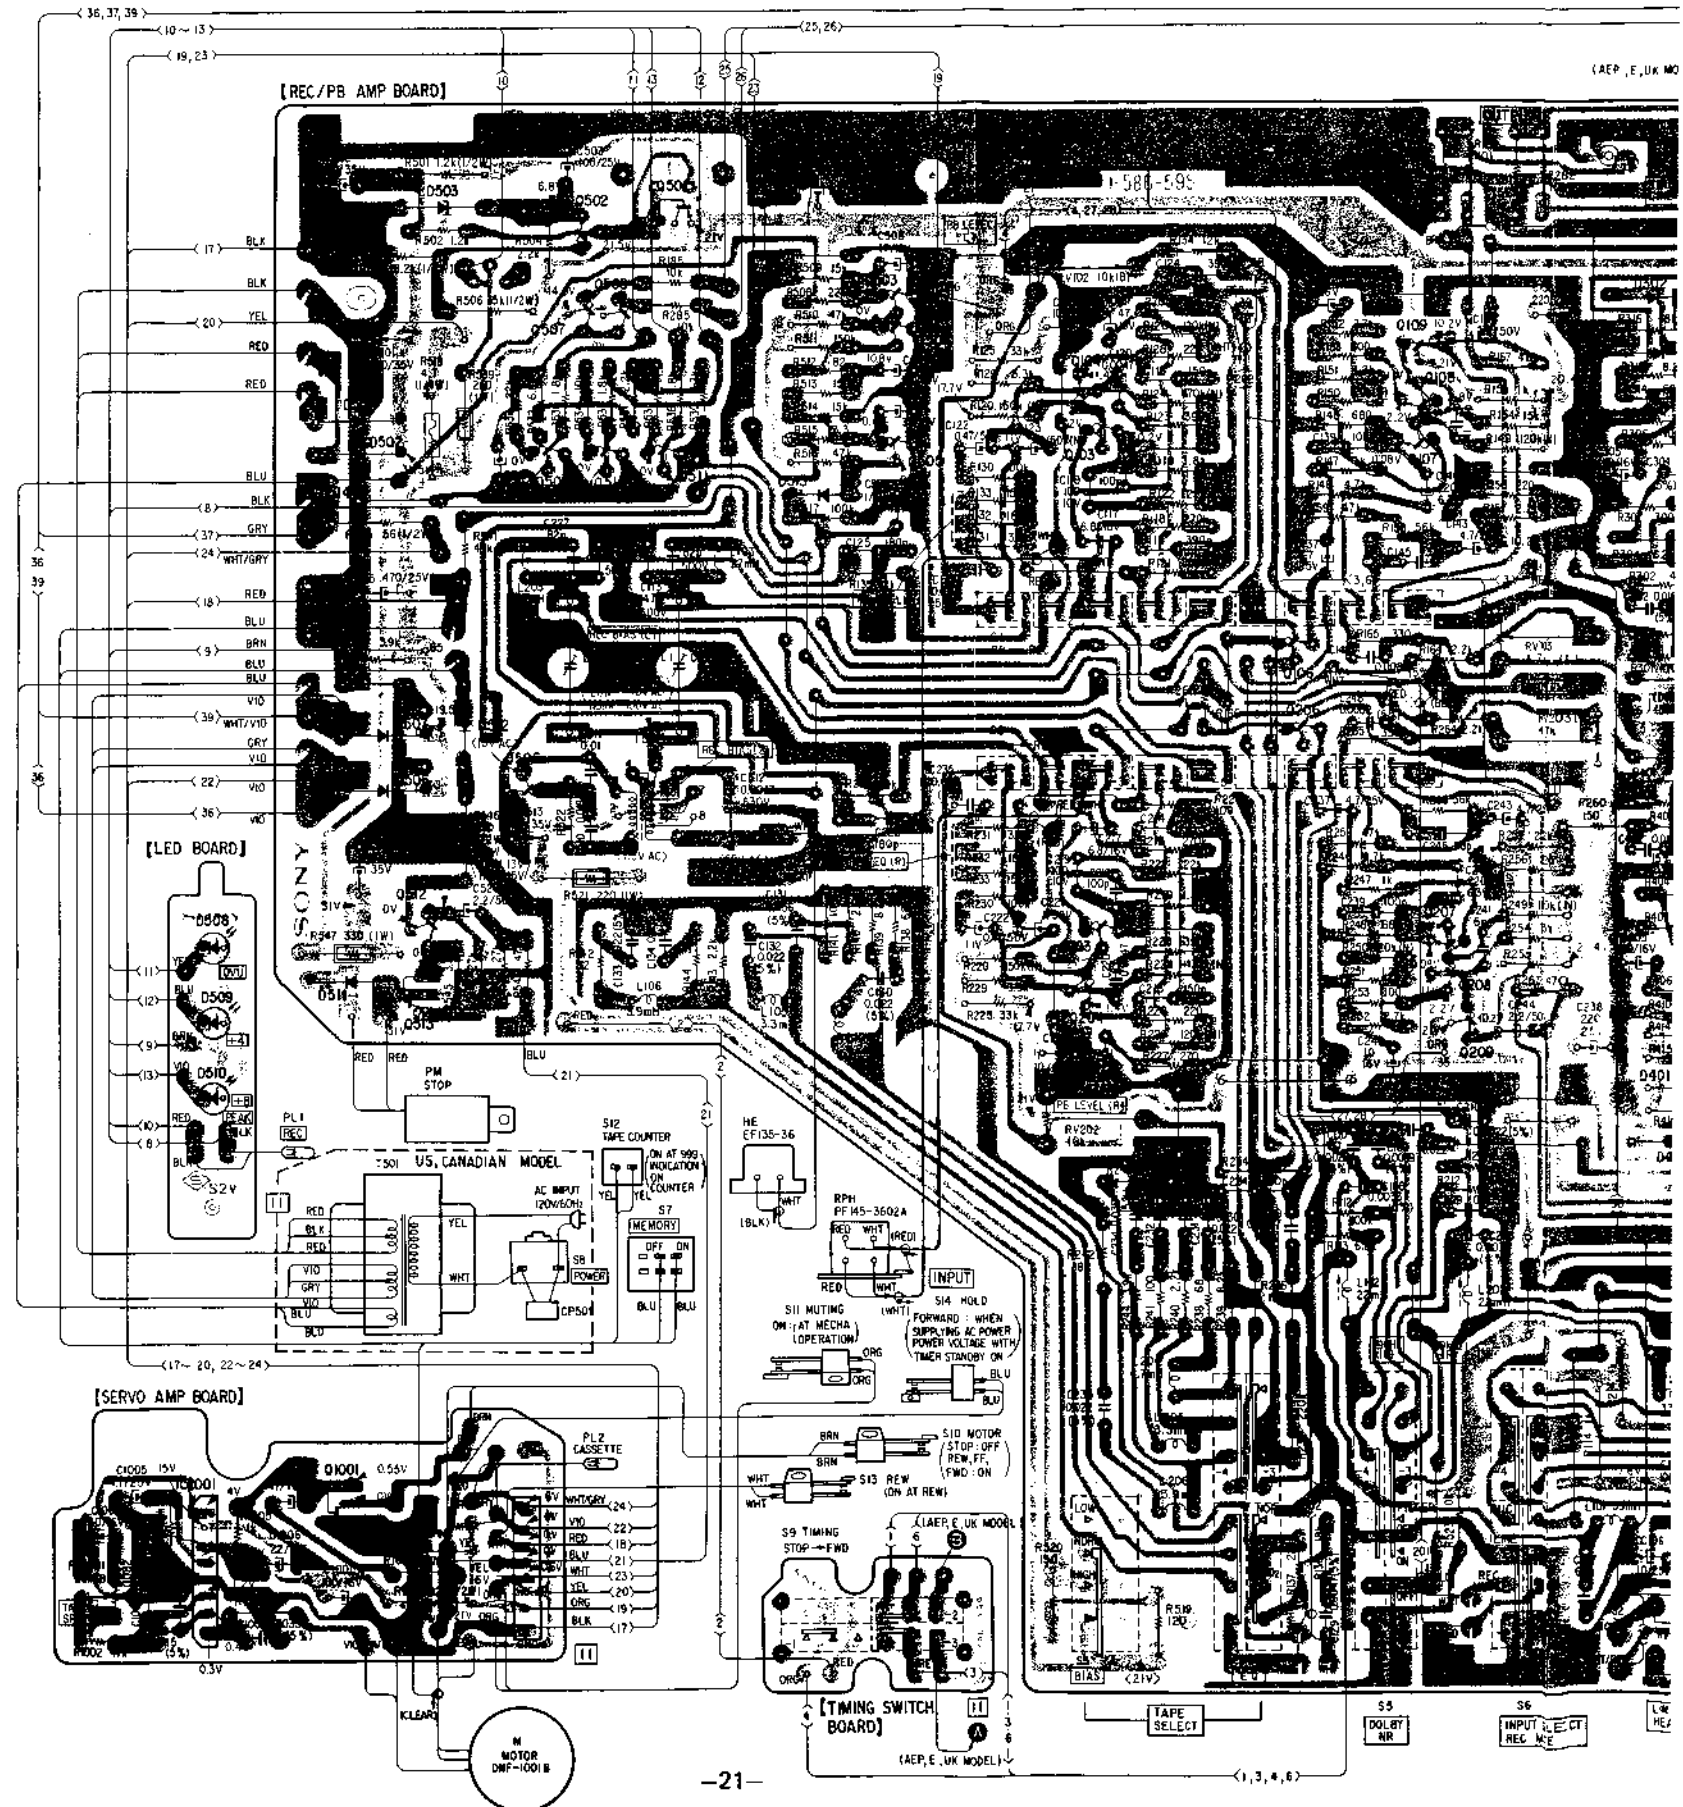

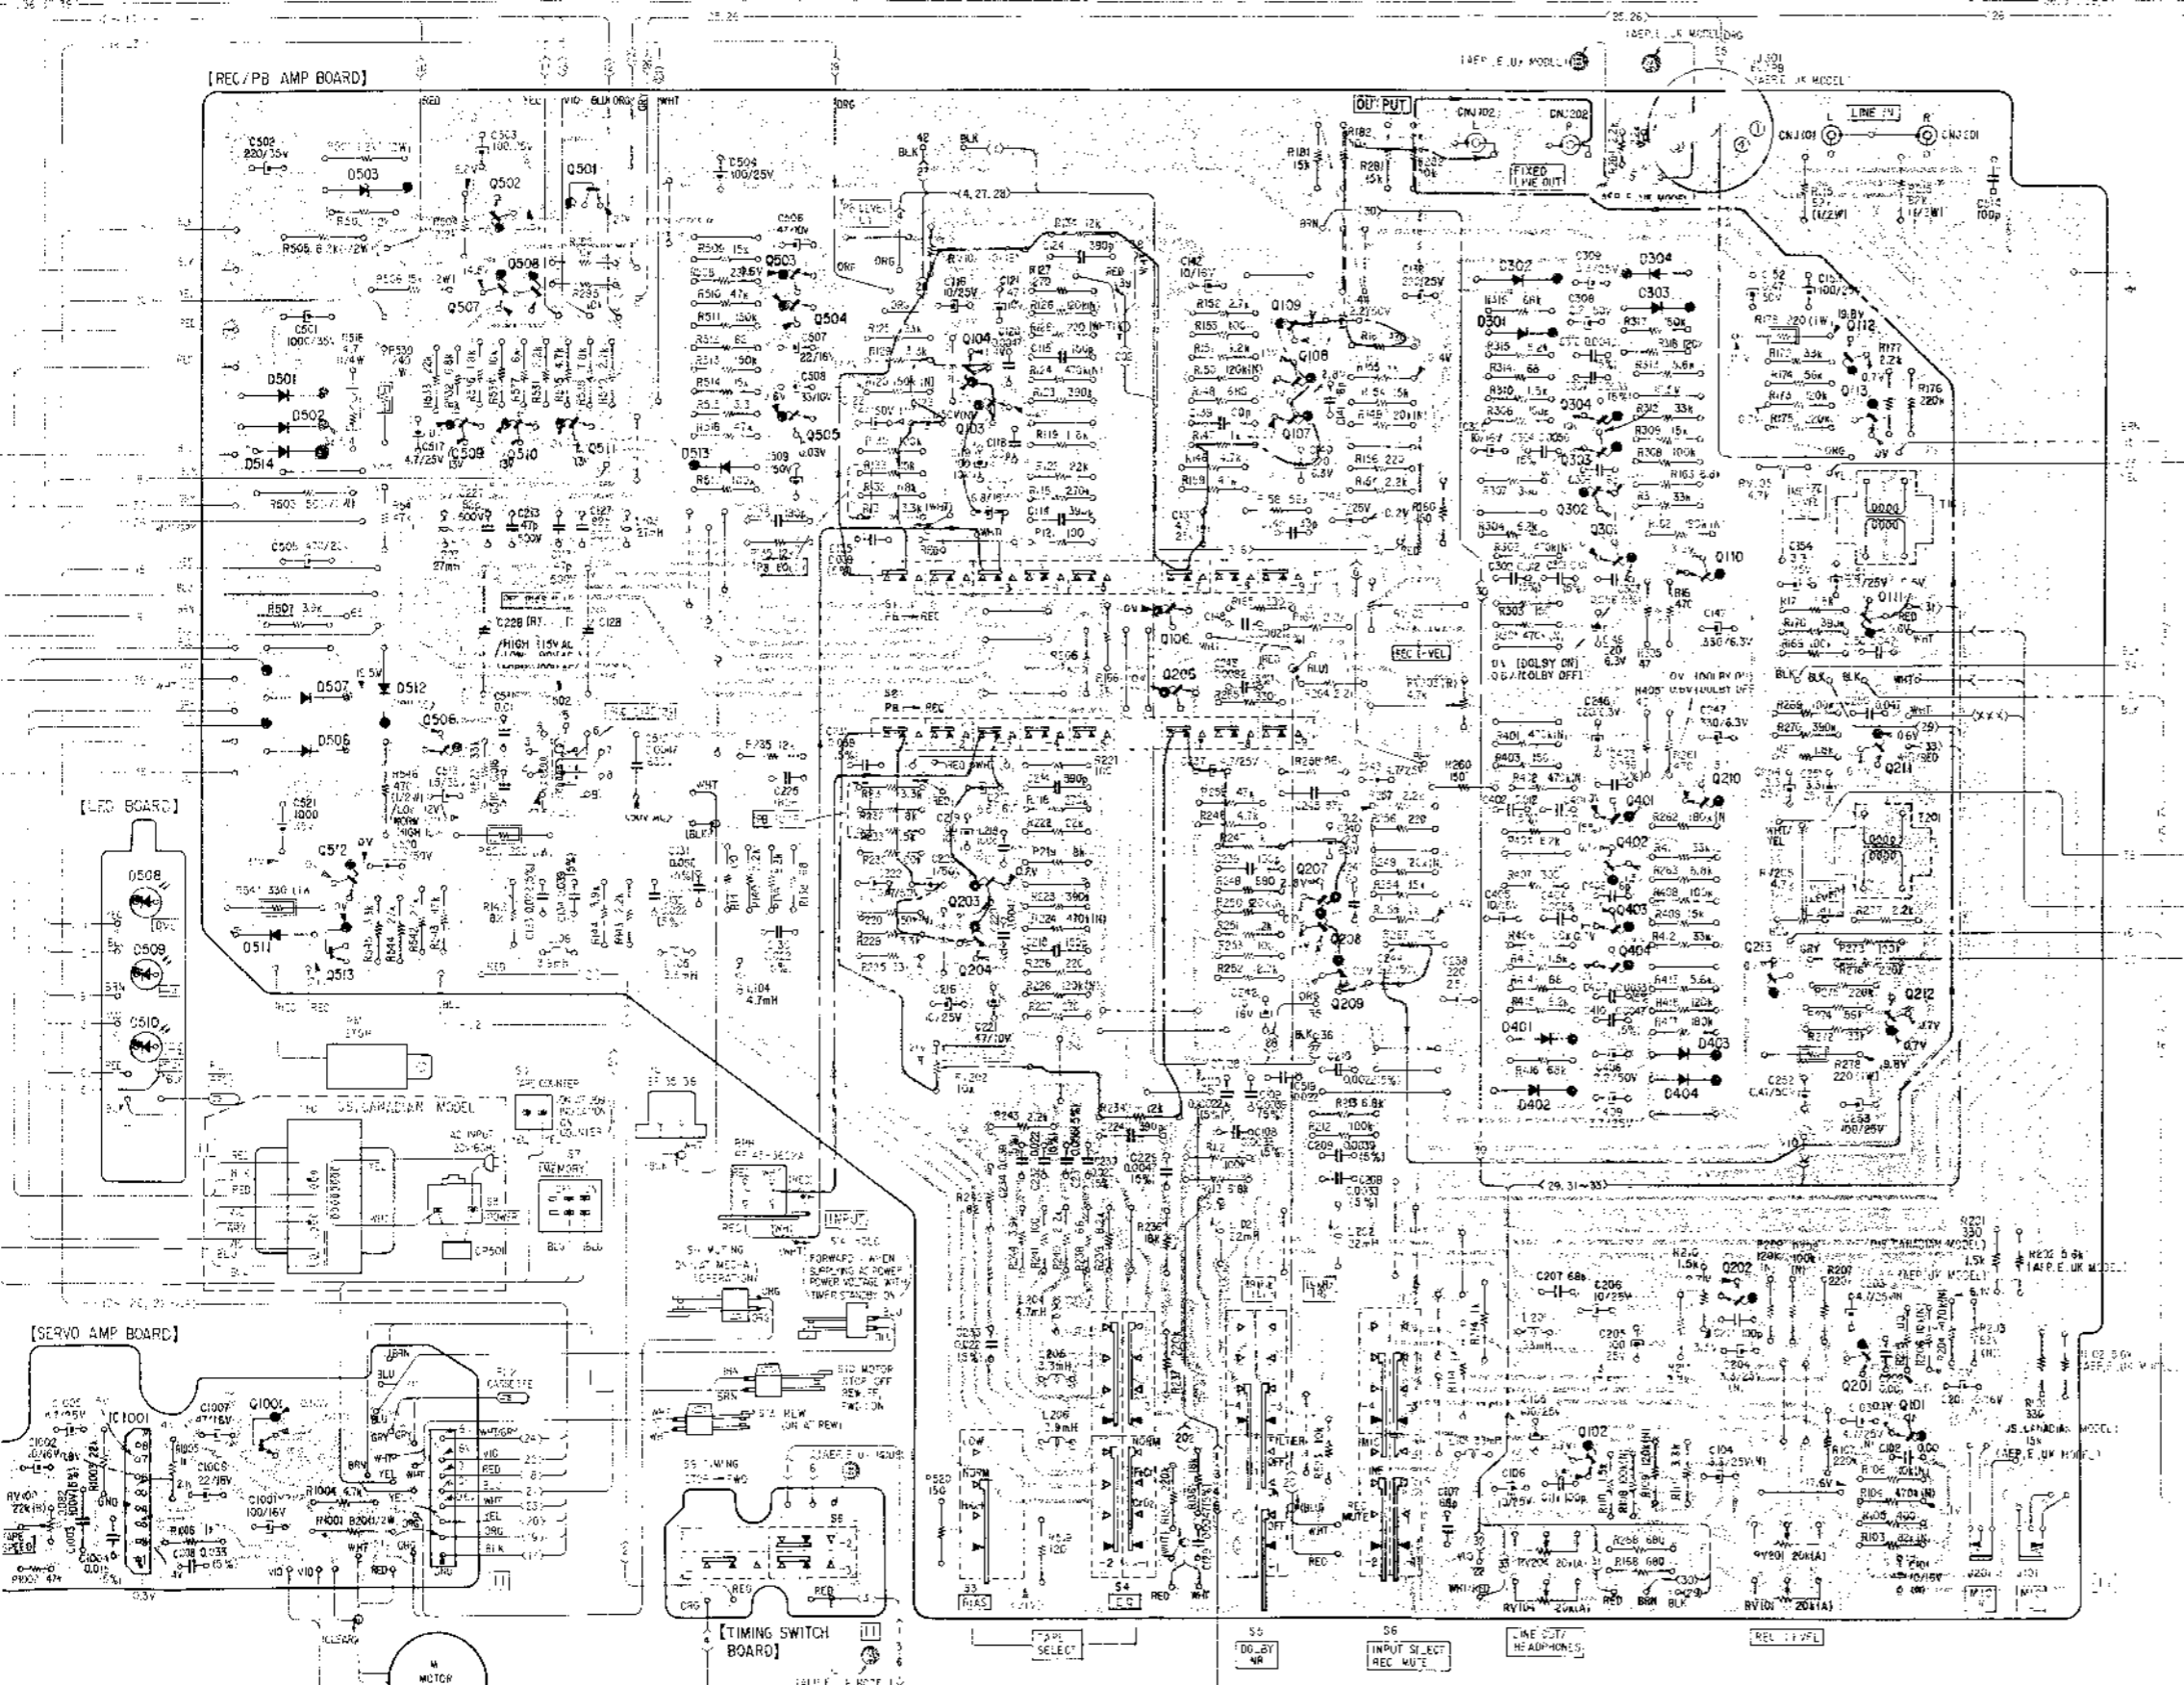


- Color code of sleeving over the end of the jacket.

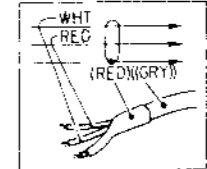


- B+ pattern.
- Signal path
- L-CH
- R-CH


4-2. SCHEMATIC DIAGRAM

TC-K5 TC-K5

Note: The components identified by shading and mark  are critical for safety. Replace only with part number specified.

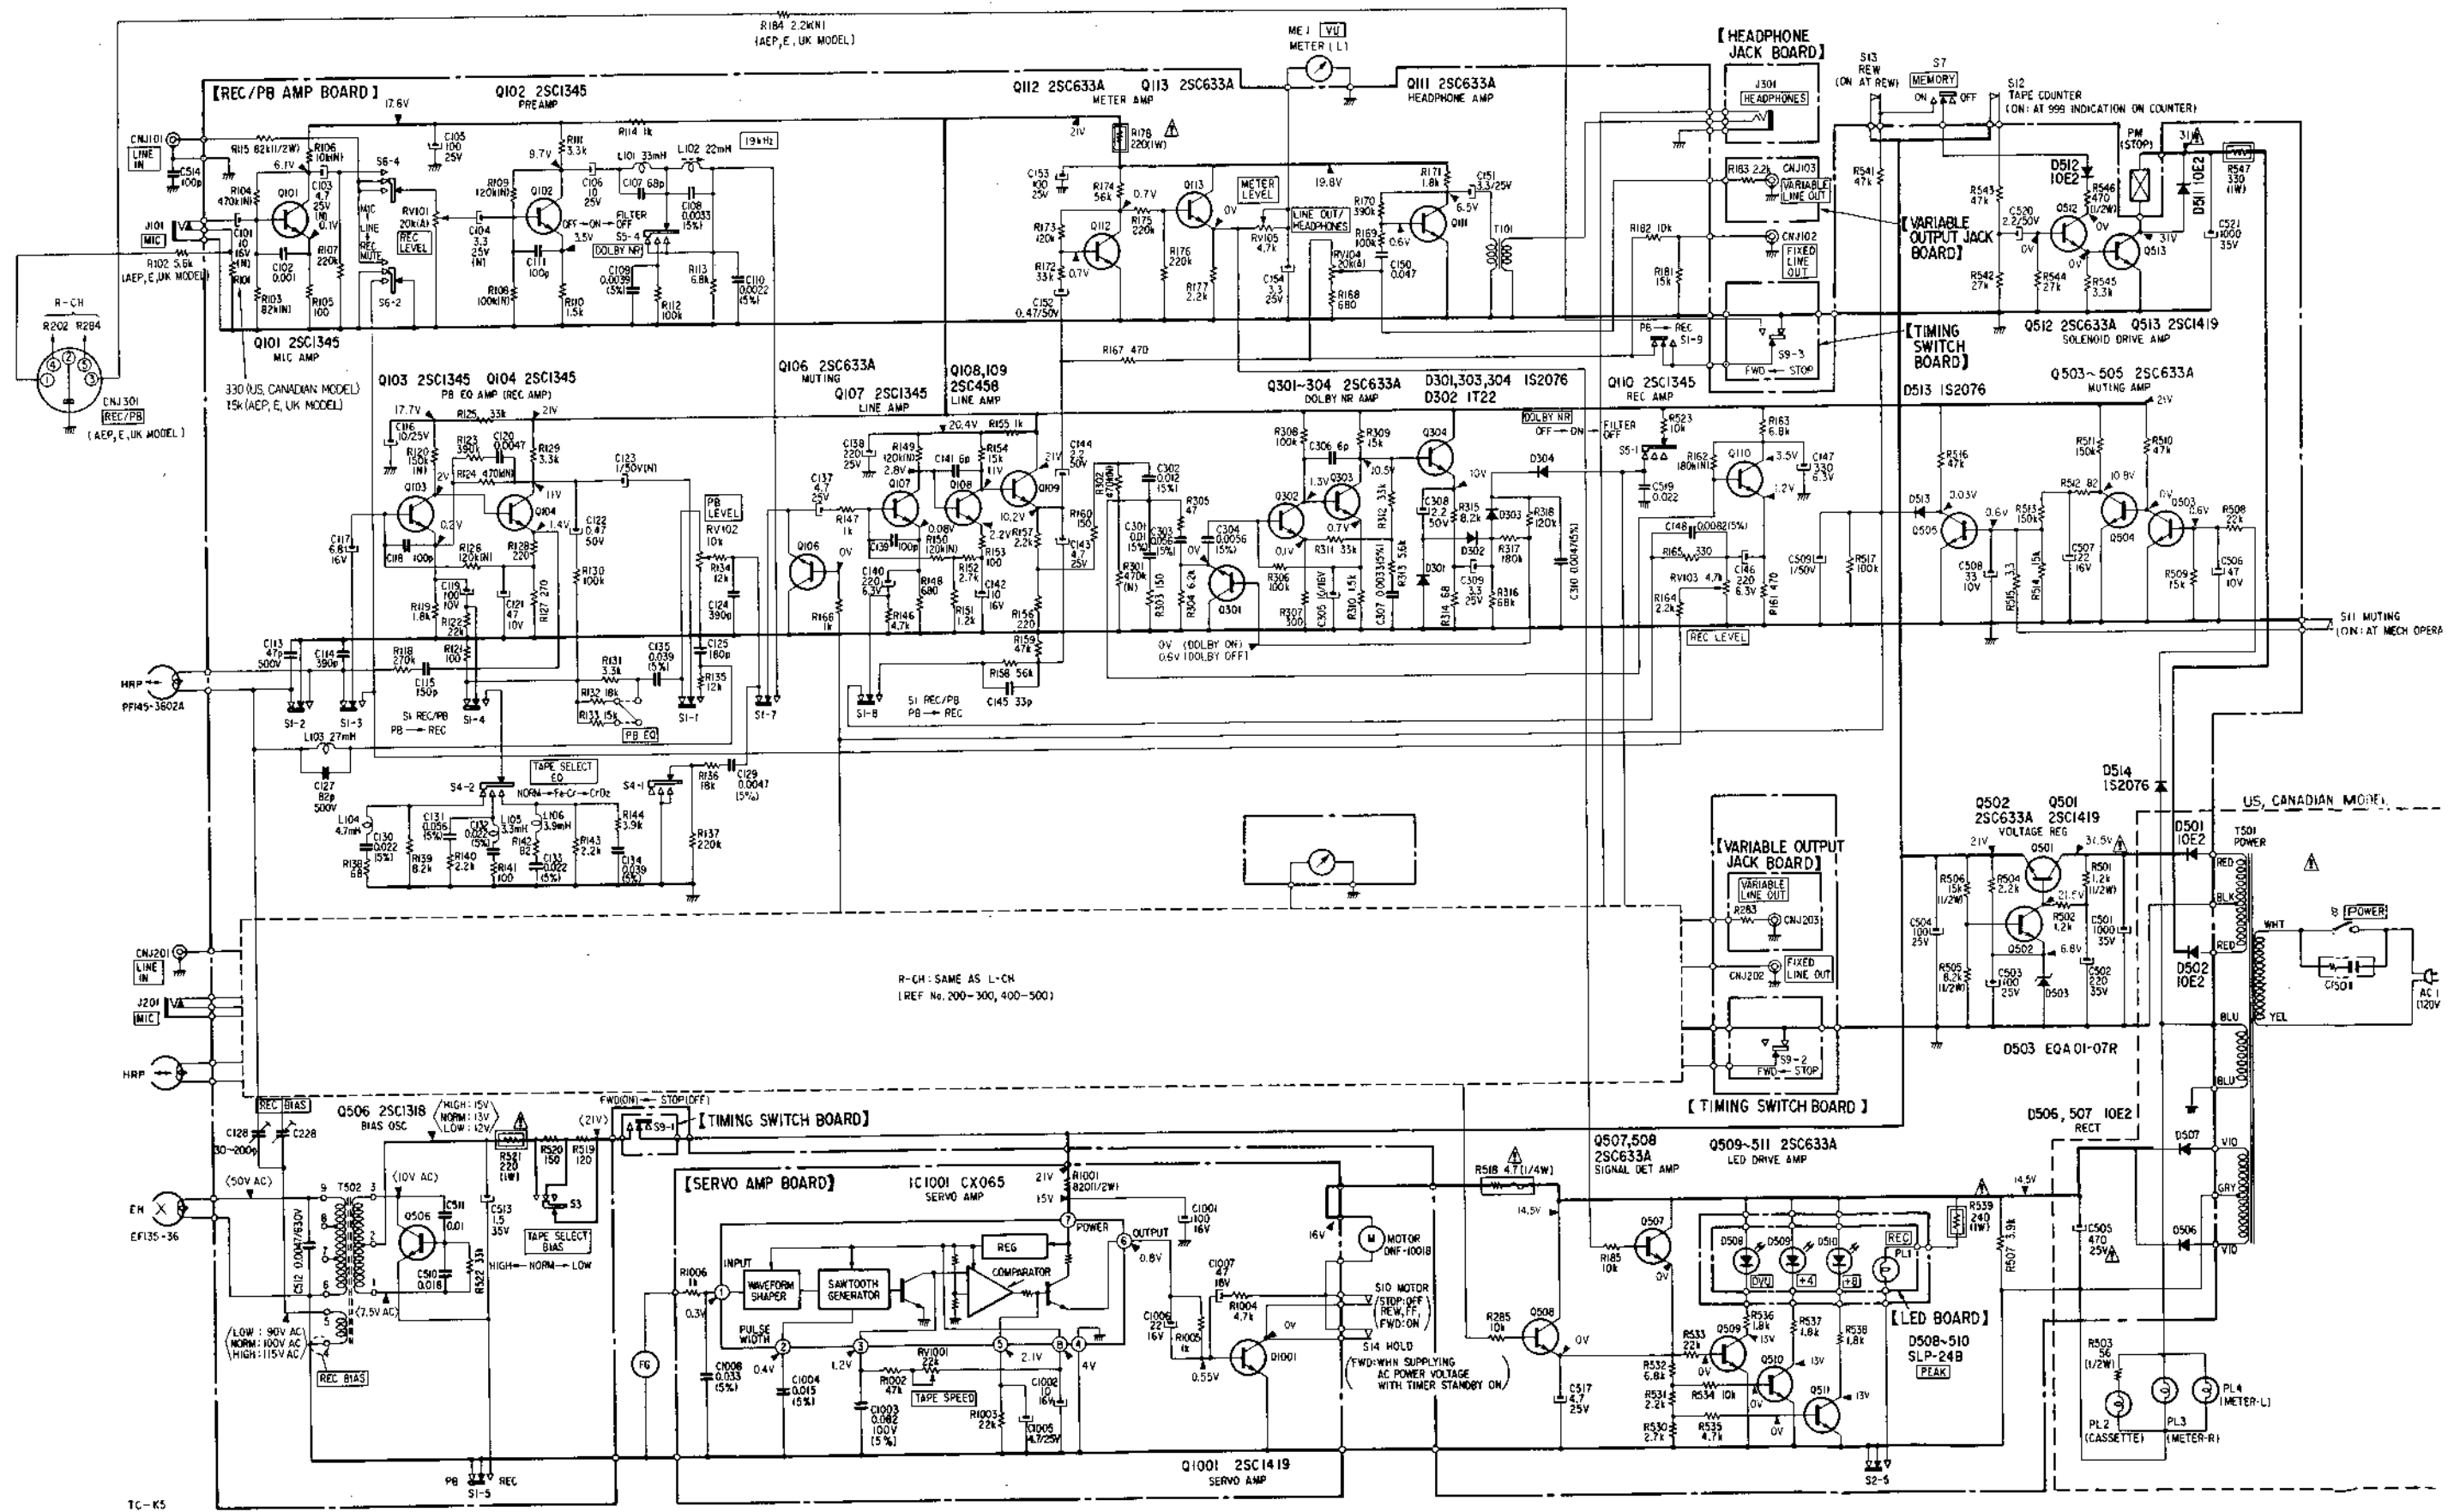


TC-K5

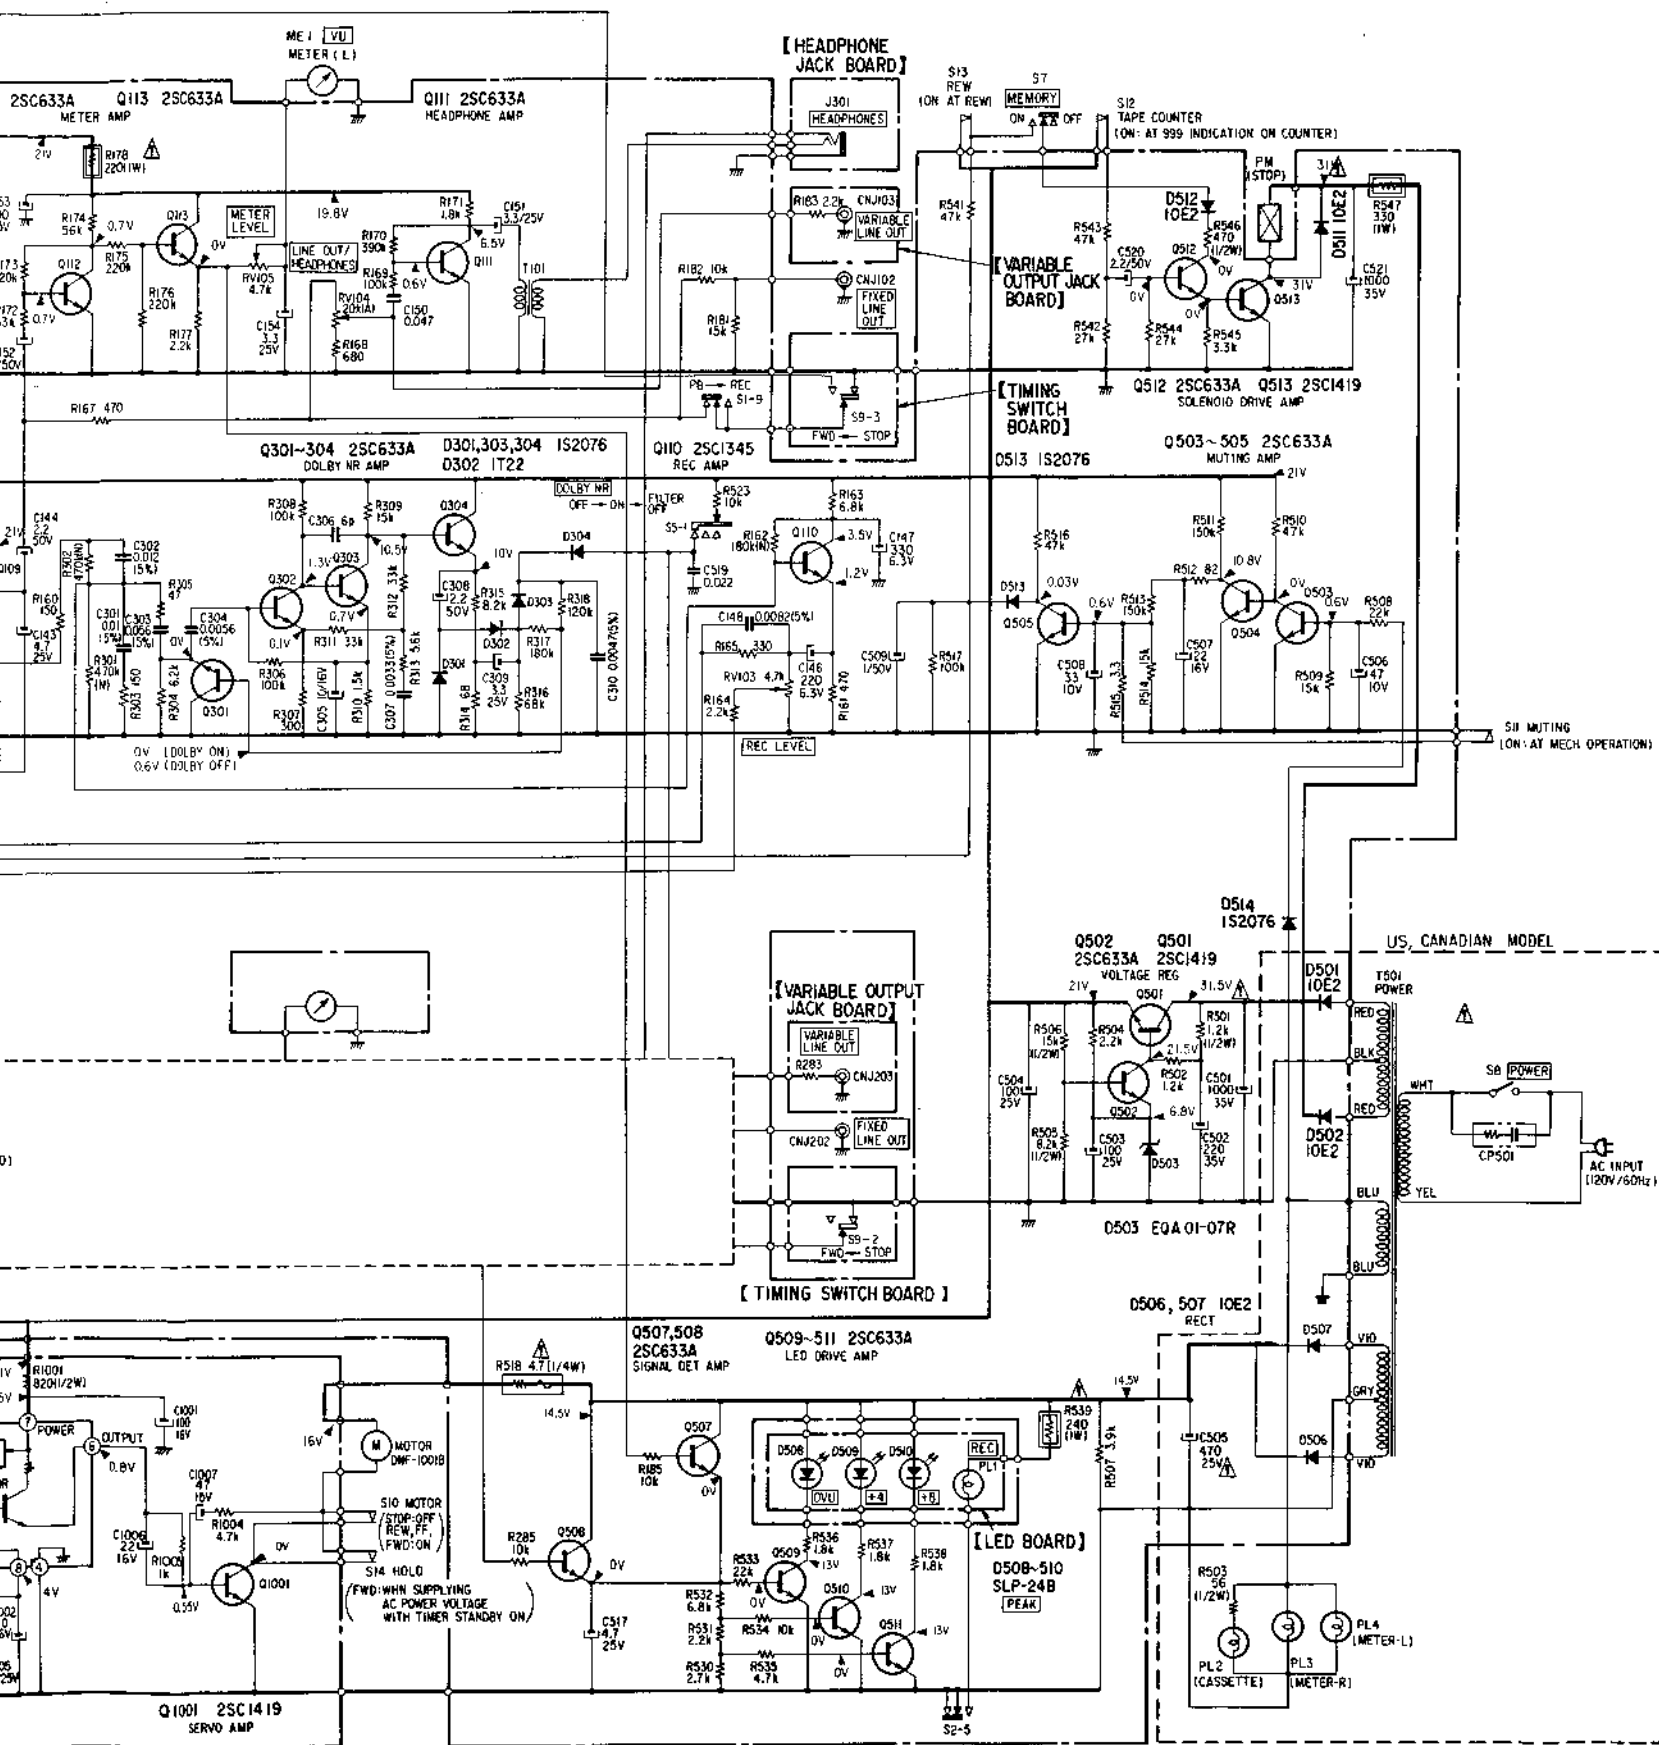

Note: Les composants identifiés par un trame et une marque sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.


- Note:**
- Components for right channel have the same values as for left channel. Reference numbers are coded from 201 or 401.
 - All capacitors are in μF unless otherwise noted. $\text{pF} = \mu\mu\text{F}$. 50WV or less are not indicated except for electrolytics.
 - All resistors are in ohms, $\frac{1}{2}\text{W}$ unless otherwise noted. $\text{k}\Omega = 1000\Omega$, $\text{M}\Omega = 1000\text{k}\Omega$.
 - : nonflammable resistor.
 - : fusible resistor.
 - (N): low-noise capacitor and resistor.
 - 5% indicates component tolerance.
 - : B+ bus.
 - : panel designation.
 - : adjustment for repair.
 - Voltages are dc with respect to ground unless otherwise noted.
 - Readings are taken under no-signal conditions with a VOM (20k Ω /V).
 - < > : record mode
 - AC voltage readings in the bias oscillator circuit are taken with a VTVM.
 - Voltage variations may be noted due to normal production tolerances.
 - Switch

Ref. No.	Switch	Position
S1	REC/PB (L-CH)	PB
S2	REC/PB (R-CH)	PB
S3	BIAS	NORMAL
S4	EQ	NORMAL
S5	DOLBY NR	OFF
S6	INPUT SELECT	LINE
S7	MEMORY	OFF
S8	POWER	OFF
S9	TIMING	STOP
S10	MOTOR	OFF
S11	MUTING	OFF
S12	TAPE COUNTER	OFF
S13	REW	OFF
S14	HOLD	OFF

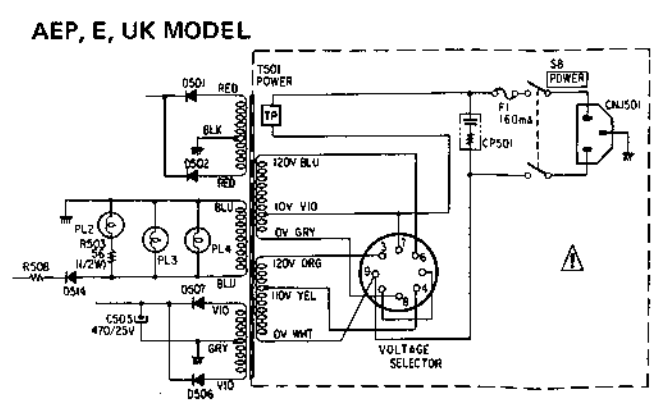


SECTION 5
EXPLODED VIEWS

5-1.

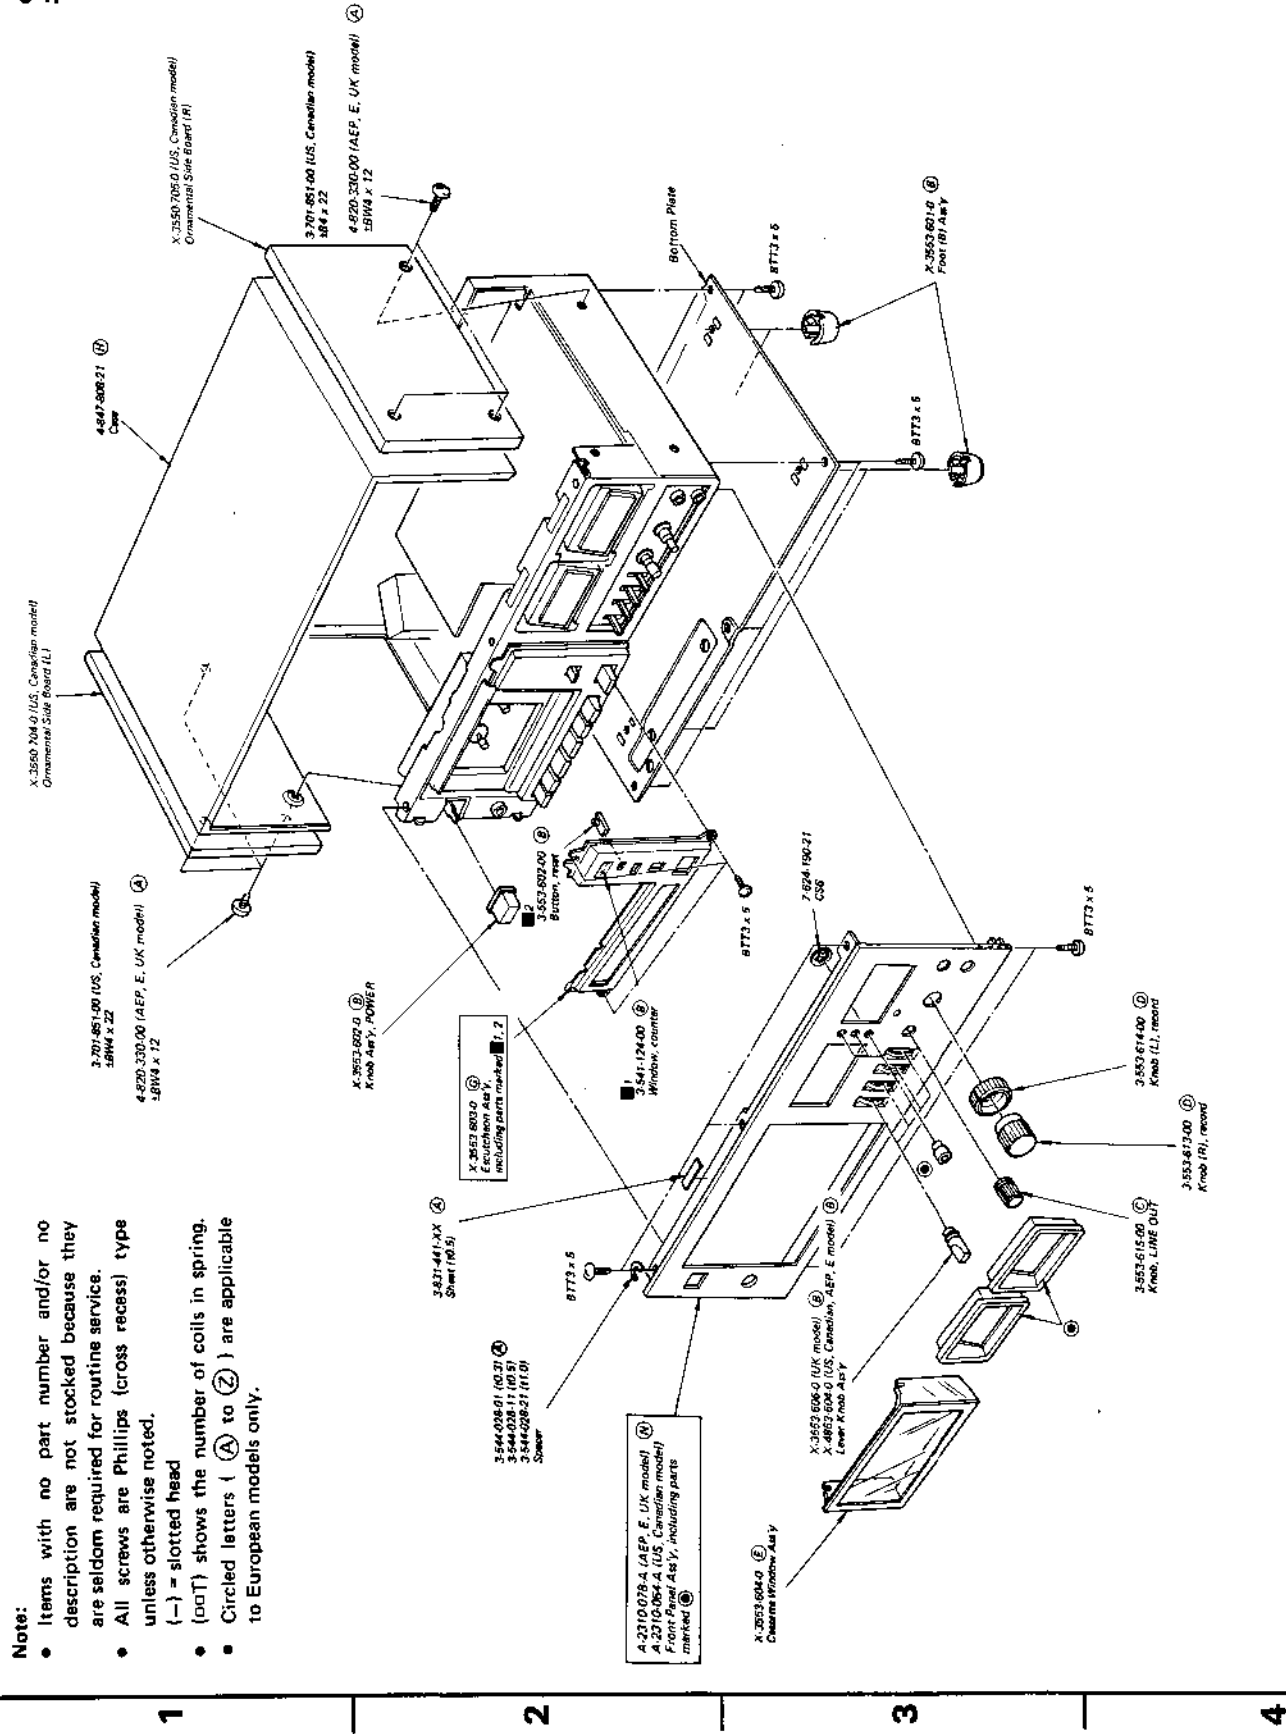


5-2.

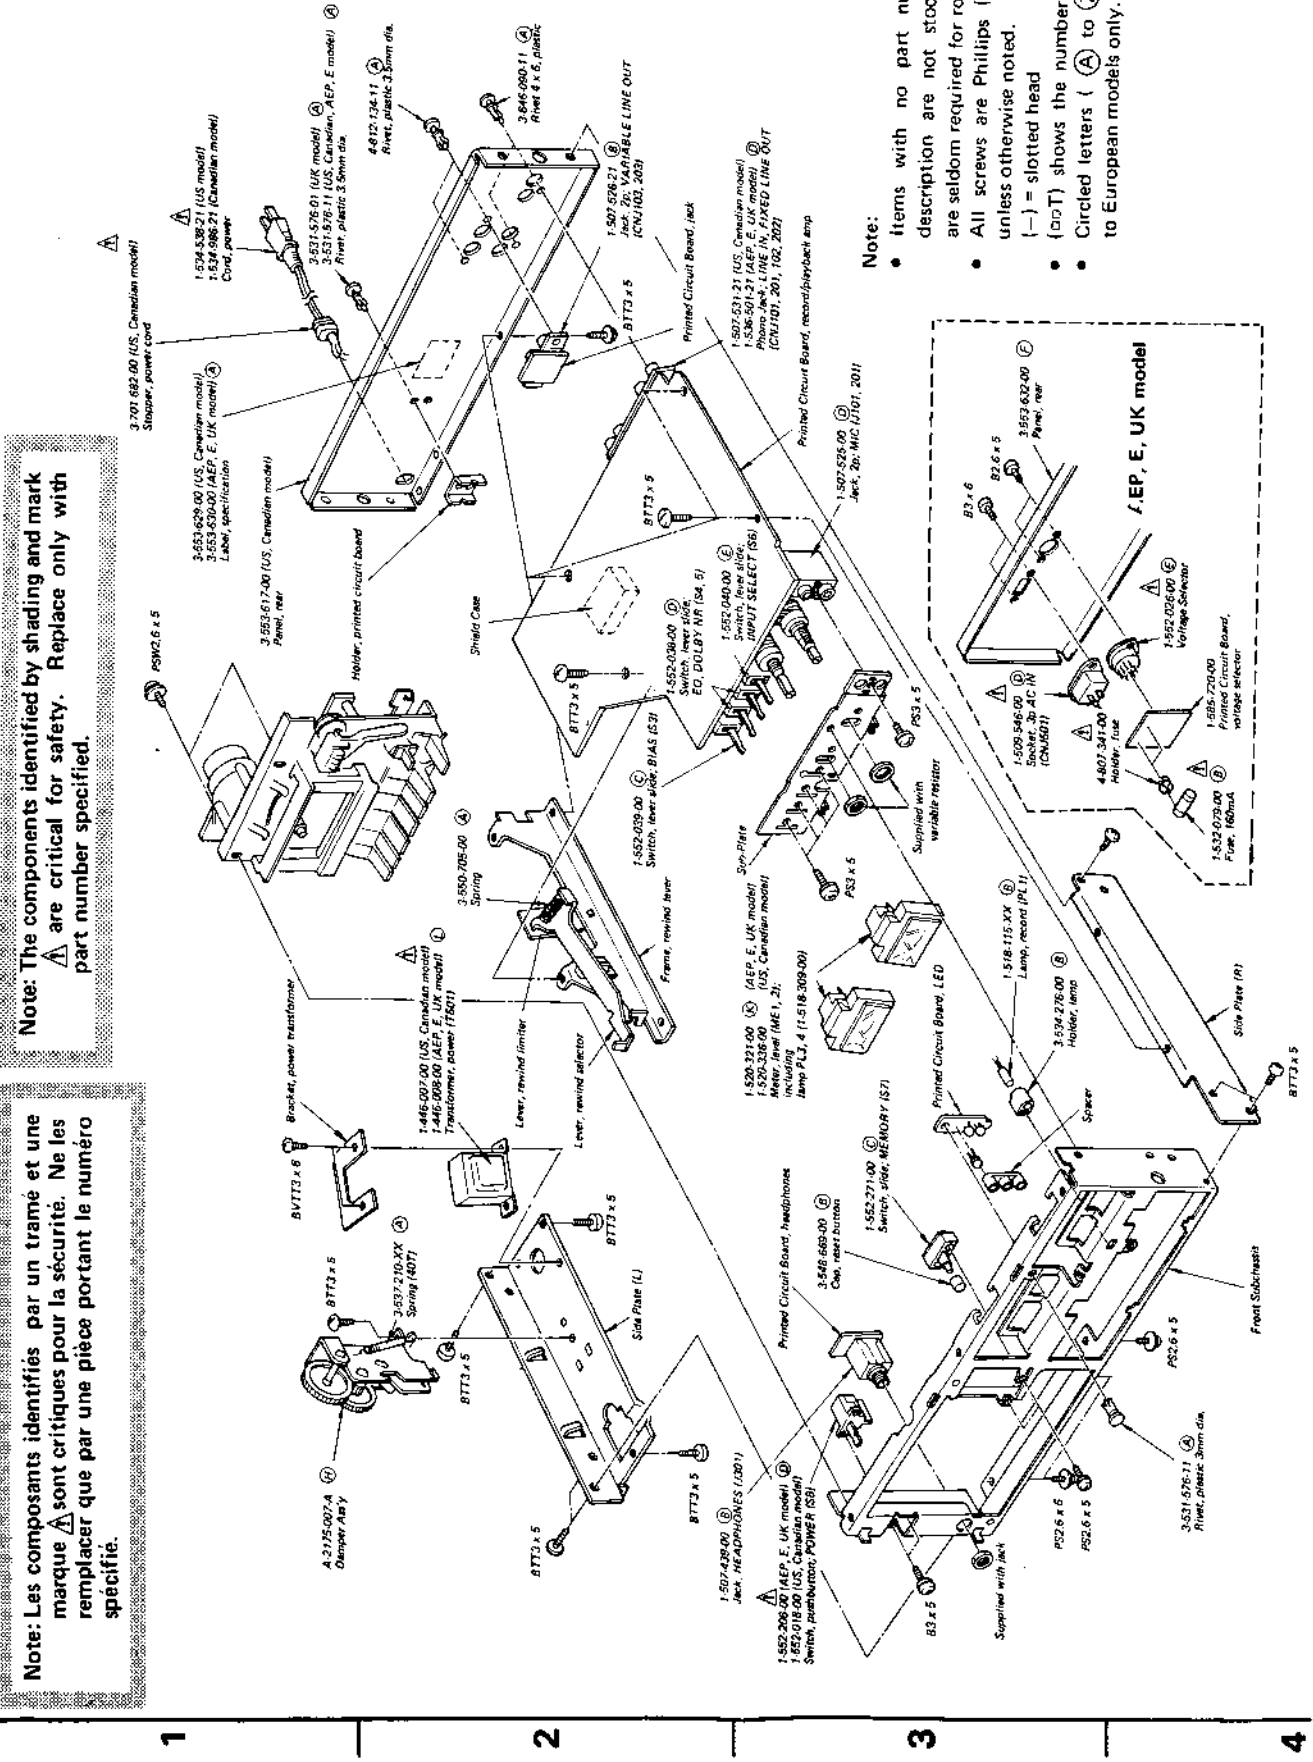

A B C D E

Note: The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.

Note: Les composants identifiés par un trame et une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

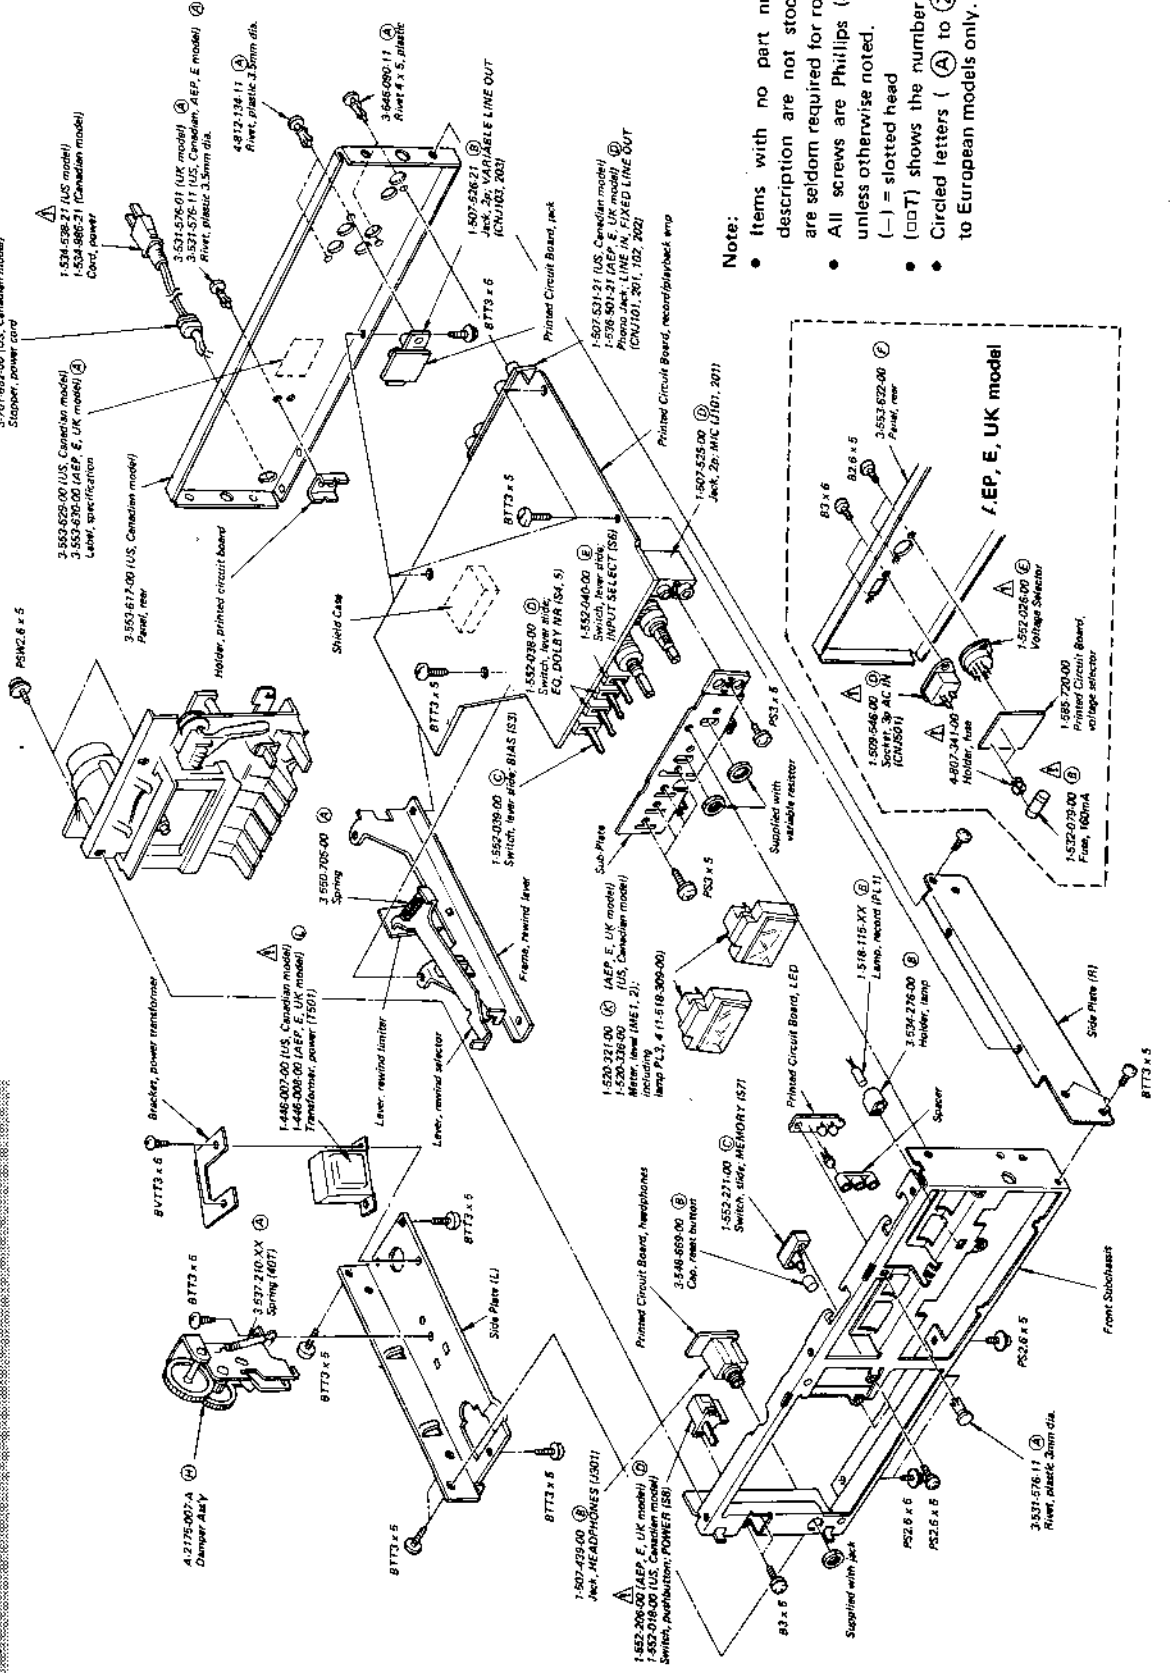


Note:

- Items with no part number and/or no description are not stocked because they are seldom required for routine service.
- All screws are Phillips (cross recess) type unless otherwise noted.
- (—) = slotted head
- Circled letters (A) to (Z) are applicable to European models only.

TC-K5 TC-K5


A B C D E

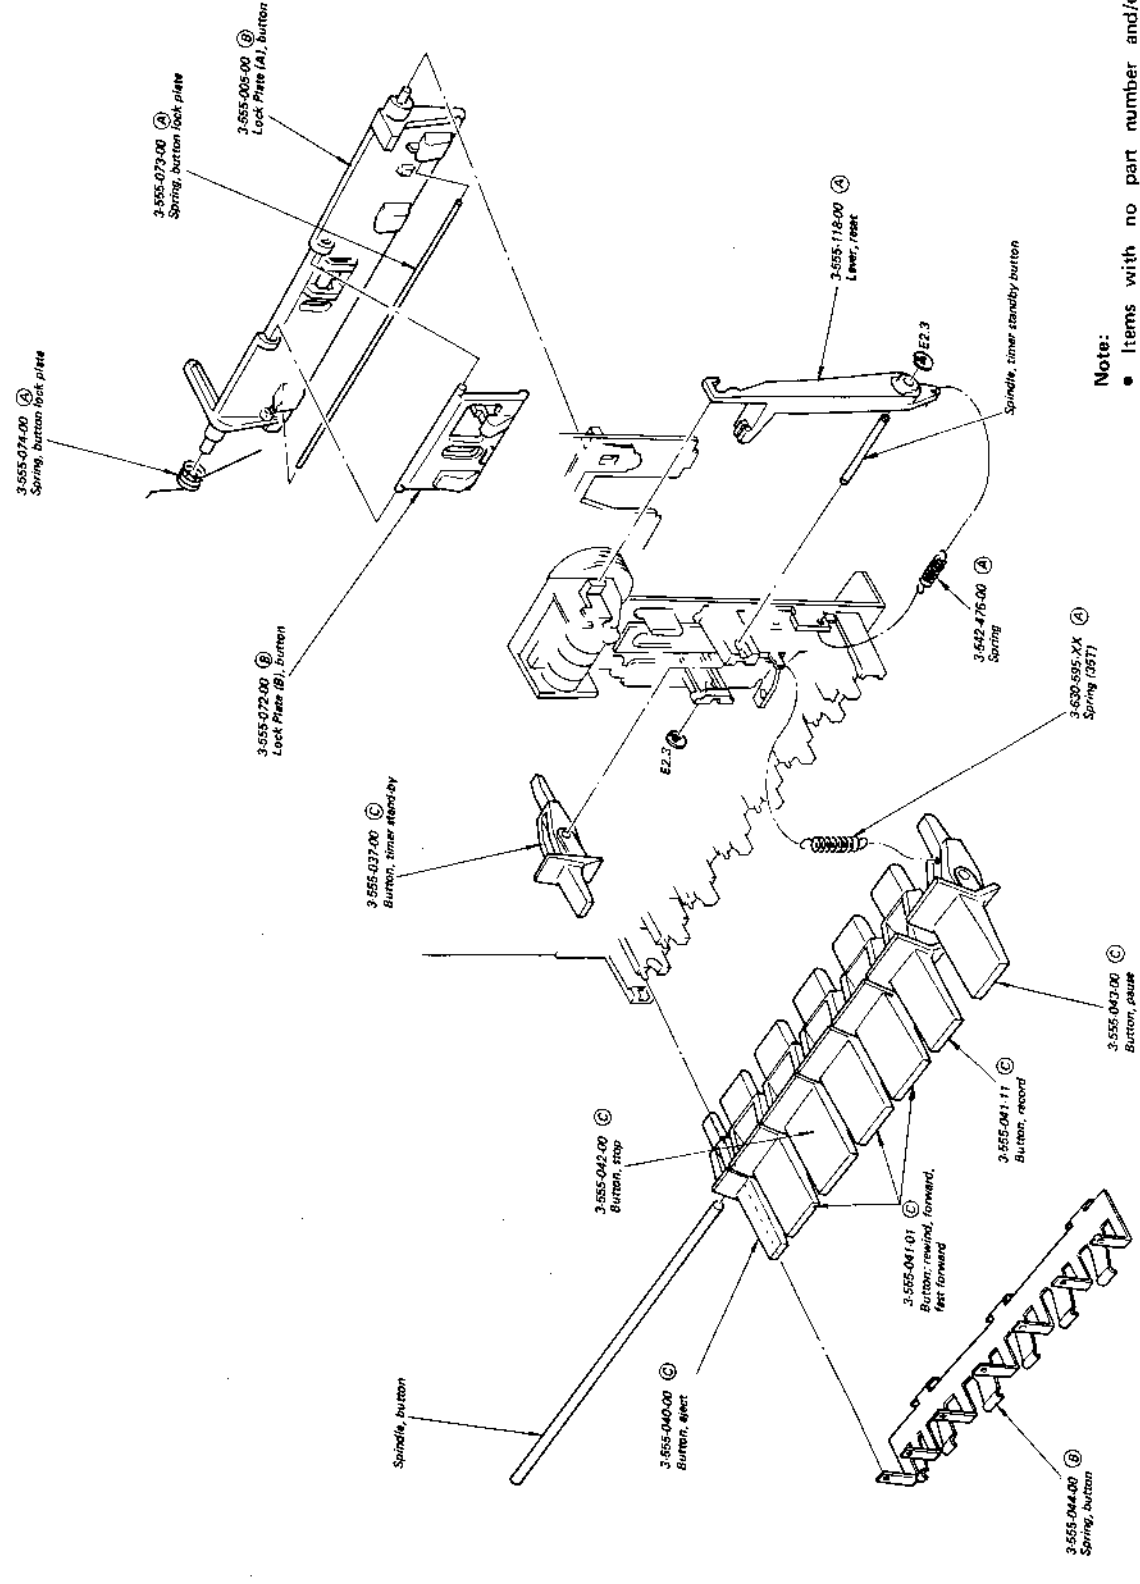

Note:

- Items with no part number and/or no description are not stocked because they are seldom required for routine service.
- All screws are Phillips (cross recess) type unless otherwise noted.
- (—) = slotted head
- Circled letters (A) to (Z) are applicable to European models only.


5-4.

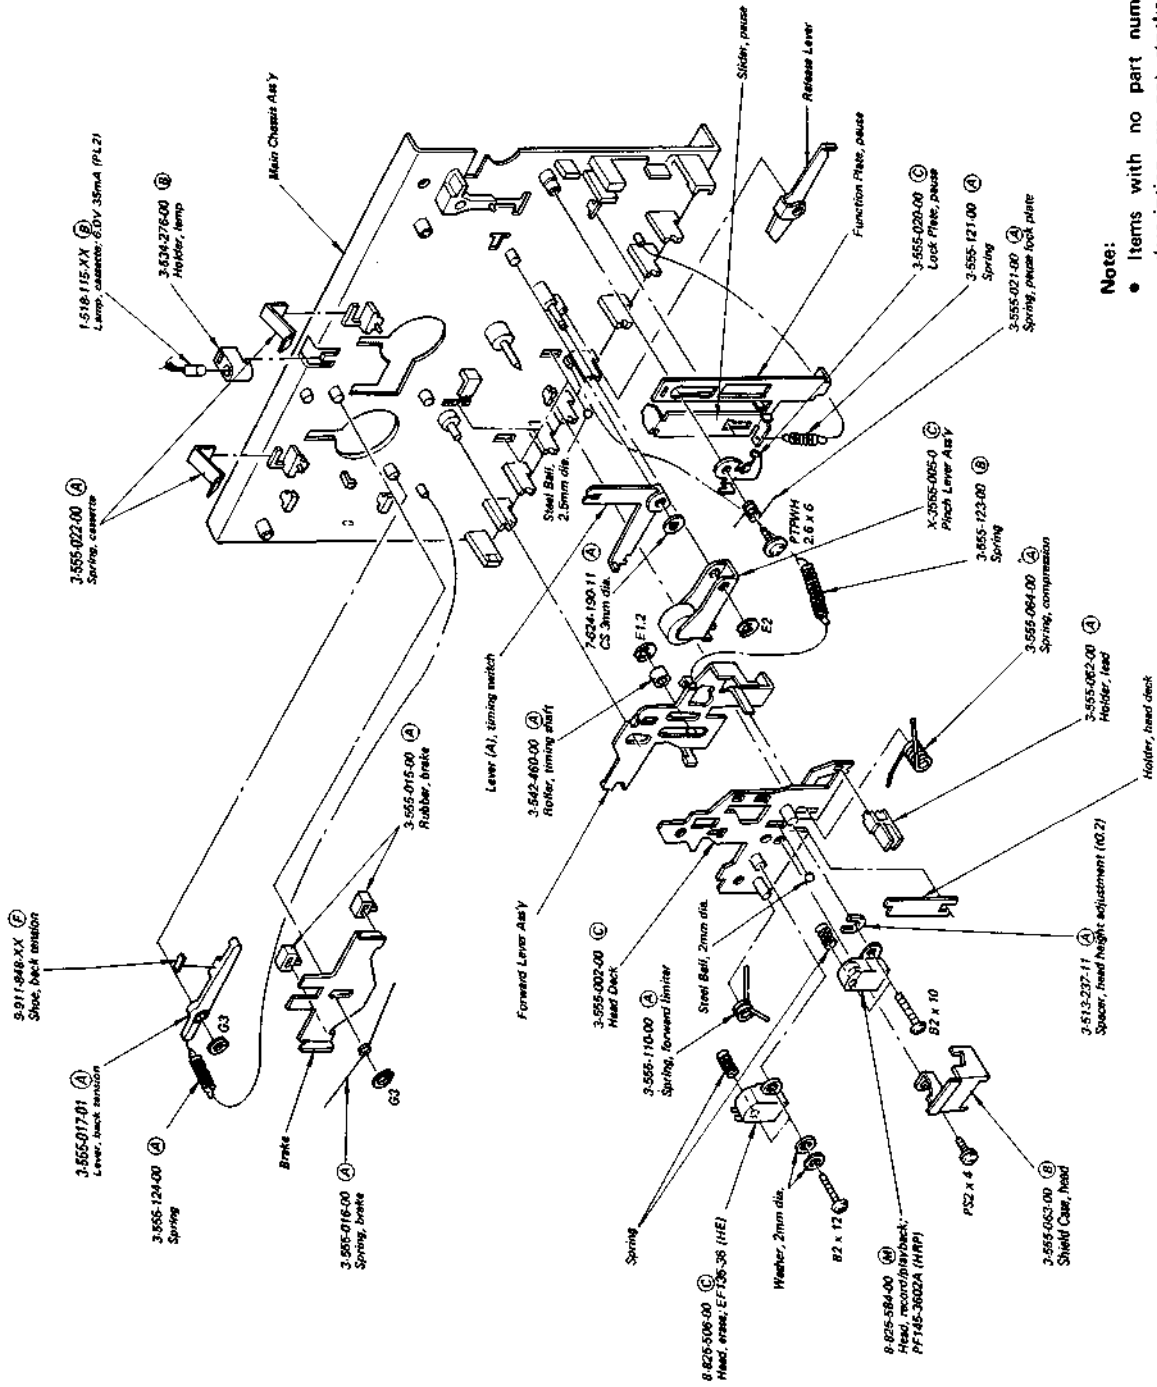

Note:

- Items with no part number and/or no description are not stocked because they are seldom required for routine service.
- All screws are Phillips (cross recess) type unless otherwise noted.
- (—) = slotted head
- (locT) shows the number of coils in spring.
- Circled letters (A) to (Z) are applicable to European models only.

A B C D E

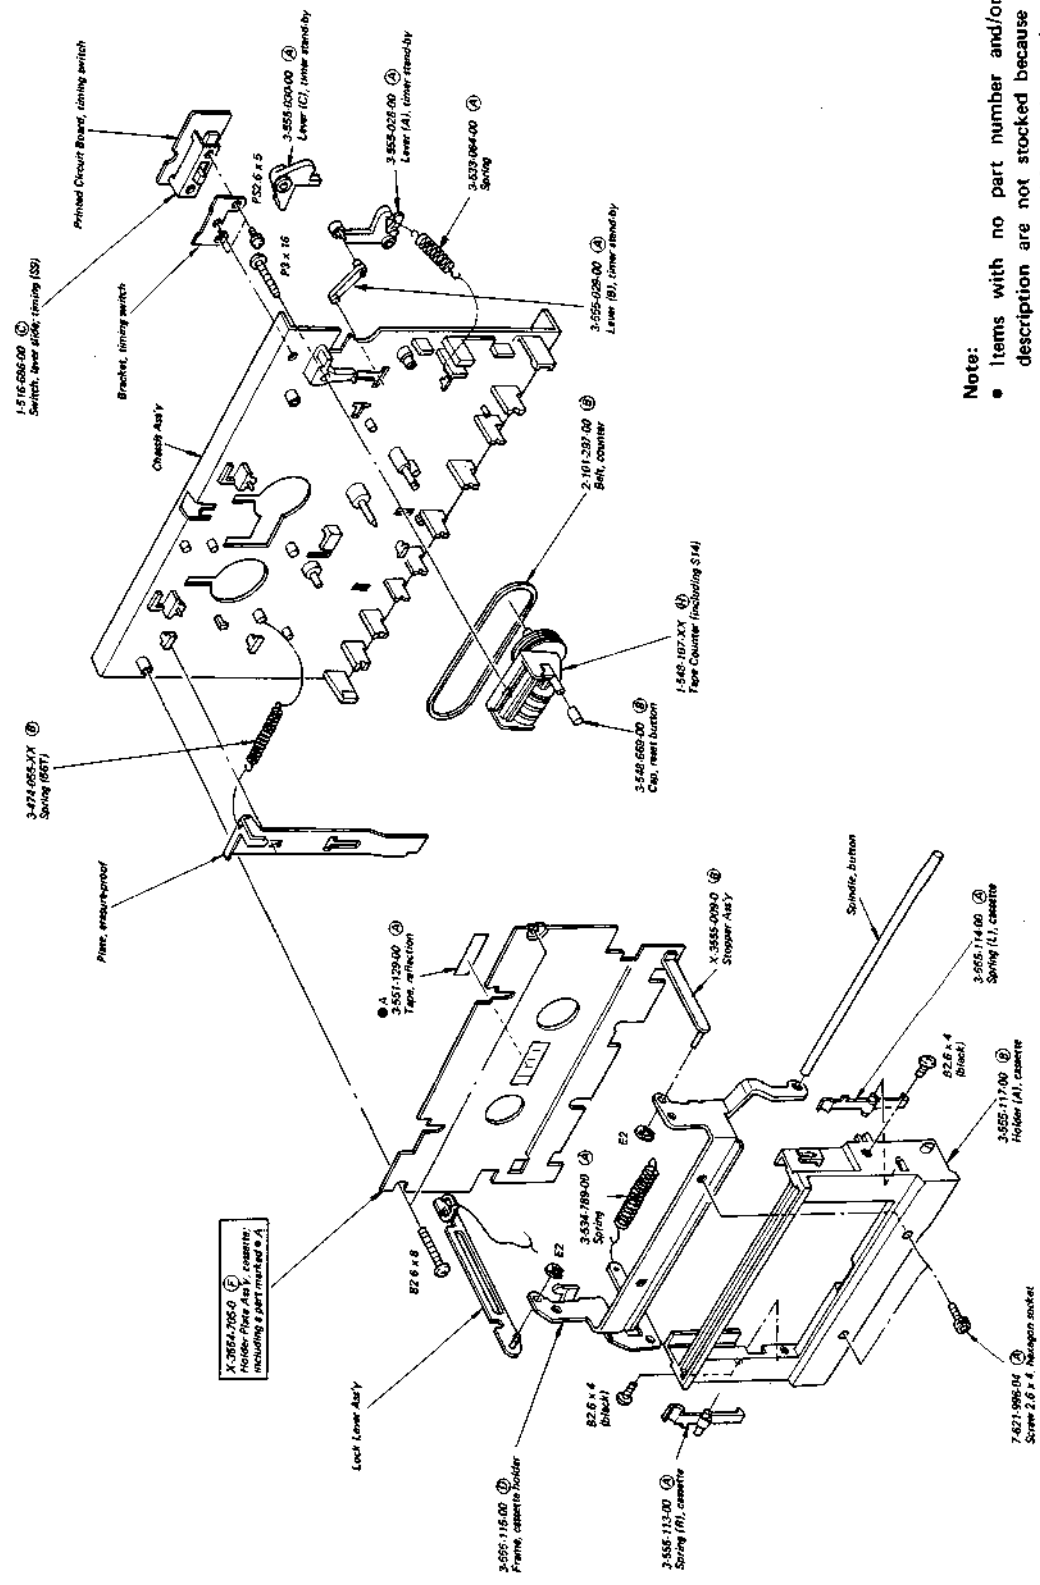

- Note:
- Items with no part number and/or no description are not stocked because they are seldom required for routine service.
 - All screws are Phillips (cross recess) type unless otherwise noted.
 - (-) = slotted head
 - (□T) shows the number of coils in spring.
 - Circled letters (A to Z) are applicable to European models only.

5-6.

A B C D E


- Note:**
- Items with no part number and/or no description are not stocked because they are seldom required for routine service.
 - All screws are Phillips (cross recess) type unless otherwise noted.
 - (□□T) shows the number of coils in spring.
 - Circled letters (A) to (Z) are applicable to European models only.

1

2

3

4

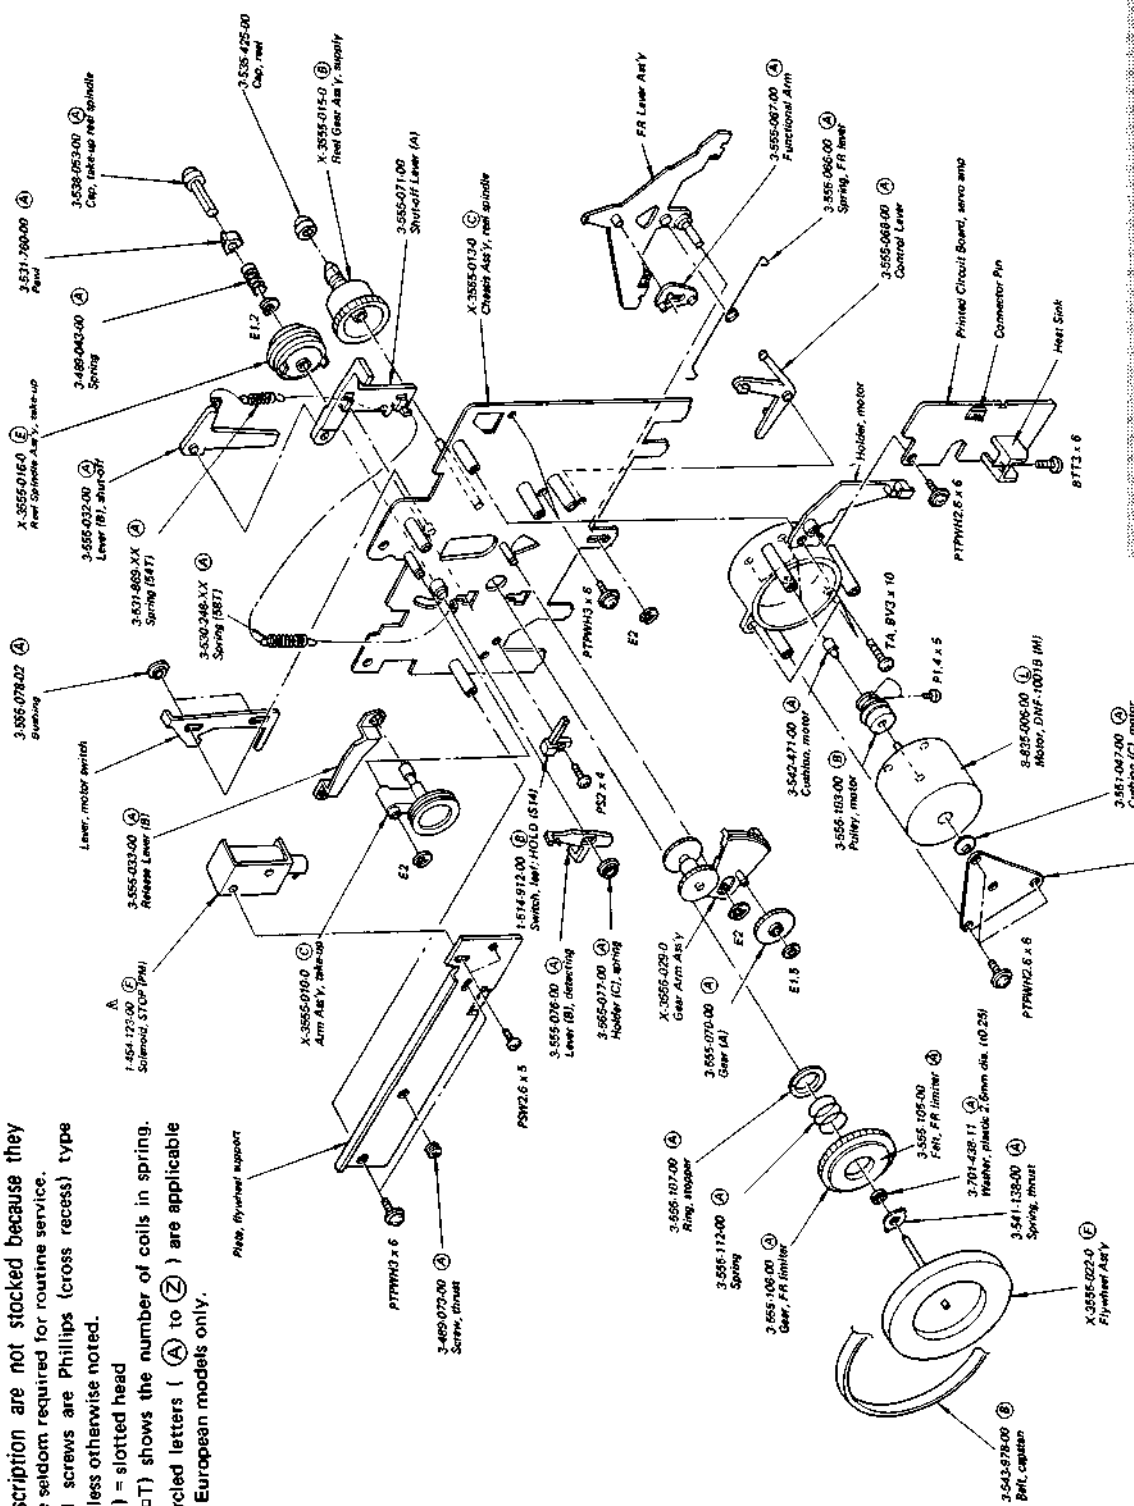


Note: Les composants identifiés par un triangle et une marque **A** sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Note: The components identified by shading and mark **A** are critical for safety. Replace only with part number specified.

5-7.

A B C D E

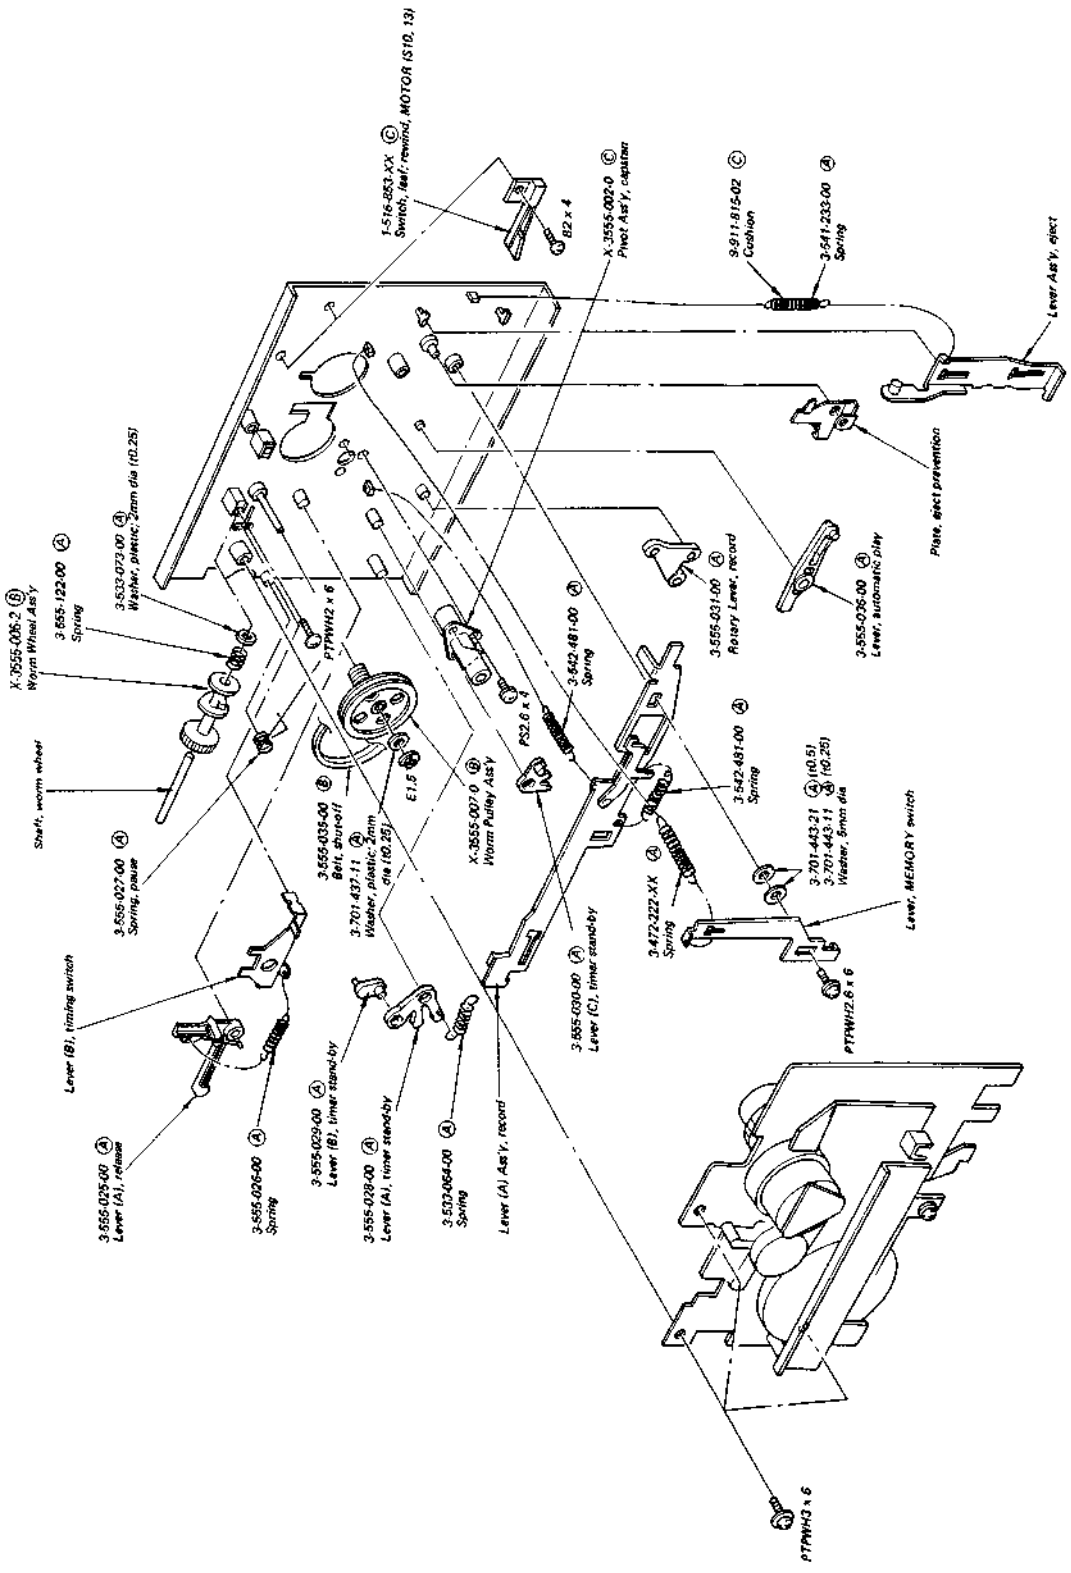

Note:

- Items with no part number and/or no description are not stocked because they are seldom required for routine service.
- All screws are Phillips (cross recess) type unless otherwise noted.
- (-) = slotted head
- (OUT) shows the number of coils in spring.
- Circled letters (A) to (Z) are applicable

SECTION 6 ELECTRICAL PARTS LIST

Ref. No. Part No. Description

CIRCUIT BOARDS

1-585-720-00 Voltage Selector

SEMICONDUCTORS

Transistors

⇒ Q101-104 }
⇒ Q201-204 } 8-729-665-47 (B) 2SC1362
⇒ Q106, 206 }
⇒ Q107, 207 } 8-729-663-47 (B) 2SC1364
⇒ Q108, 208 }
⇒ Q109, 209 } 8-729-665-47 (B) 2SC1362
⇒ Q110, 210 }
⇒ Q111-113 } 8-729-663-47 (B) 2SC1364
⇒ Q211-213 }

⇒ Q301-304 }
⇒ Q401-404 } 8-729-663-47 (B) 2SC1364

⇒ Q501 ⚠ 8-729-217-33 (C) 2SC1173
⇒ Q502-505 } 8-729-663-47 (B) 2SC1364
⇒ Q506 8-760-413-10 (B) 2SC1475
⇒ Q507-512 } 8-729-663-47 (B) 2SC1364
⇒ Q513 ⚠ 8-729-217-33 (C) 2SC1173
Q1001 8-729-316-12 (C) 2SC1061

Diodes

⇒ D301, 401 } 8-719-815-55 (A) 1S1555
⇒ D302, 402 } 8-719-422-21 (A) 1T22AM
⇒ D303, 403 }
⇒ D304, 404 } 8-719-815-55 (A) 1S1555
D501, 502 } ⚠ 8-719-200-02 (B) 10E2
⇒ D503 8-719-931-07 (B) EQB01-07
D506, 507 } ⚠ 8-719-200-02 (B) 10E2
D508-510 } 8-719-900-24 (B) SLP-24B
D511, 512 } ⚠ 8-719-200-02 (B) 10E2
D513 8-719-815-55 (A) 1S1555
D514 8-719-923-76 (A) 1S2076A

IC

IC1001 8-759-600-65 (D) CX065A

Ref. No. Part No. Description

COILS

All coils are microinductors unless otherwise noted.

L101, 201 1-407-212-XX (B) 33mH
L102, 202 1-407-240-00 (B) 22mH, variable; 19kHz
L103, 203 1-407-211-XX (B) 27mH
L104, 204 1-407-202-XX (B) 4.7mH
L105, 205 1-407-200-XX (B) 3.3mH
L106, 206 1-407-201-XX (B) 3.9mH

TRANSFORMERS

T101, 201 1-427-424-00 (C) Output
T501 ⚠ 1-446-007-00 Power (US, Canadian model)
 ⚠ 1-446-008-00 (L) Power (AEP, E, UK model)
T502 1-433-132-00 (C) Oscillator

CAPACITORS

All capacitors are in μF and ceramic unless otherwise noted.
50WV or less working voltages are not indicated except for electrolytics. pF : μF , elect : electrolytic

C101, 201 1-121-916-11 (B) 10 16V elect
C102, 202 1-102-074-11 (A) 0.001
C103, 203 1-121-915-11 (A) 4.7 25V elect
C104, 204 1-121-913-11 (A) 3.3 25V elect
C105, 205 1-121-416-11 (B) 100 25V elect

C106, 206 1-121-398-11 (A) 10 25V elect
C107, 207 1-101-888-11 (A) 68p
C108, 208 1-108-567-12 (A) 0.0033 mylar
C109, 209 1-108-569-12 (B) 0.0039 mylar
C110, 210 1-108-563-12 (B) 0.0022 mylar

C111, 211 1-102-106-11 (A) 100p
C113, 213 1-107-163-11 (A) 47p 500V mica
C114, 214 1-102-113-11 (A) 390p
C115, 215 1-102-108-11 (A) 150p

C116, 216 1-121-398-11 (A) 10 25V elect
C117, 217 1-131-198-11 (B) 6.8 16V tantalum
C118, 218 1-102-106-11 (A) 100p
C119, 219 1-121-414-11 (A) 100 10V elect
C120, 220 1-108-571-12 (A) 0.0047 mylar

Note:

- ⇒: Due to standardization, interchangeable replacements may be substituted for parts specified in the diagrams.

Note: The components identified by shading and mark ⚠ are critical for safety. Replace only with part number specified.

- Circled letters (A to Z) are applicable to European models only.

Note: Les composants identifiés par un tramé et une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

• Circled letters (**A** to **Z**) are applicable to European models only.

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>		
C121, 221	1-121-352-11	A 47	10V	elect
C122, 222	1-121-726-11	A 0.47	50V	elect
C123, 223	1-121-912-11	A 1	50V	elect
C124, 224	1-102-113-11	A 390p		
C125, 225	1-102-109-11	A 180p		
C127, 227	1-107-037-11	A 82p	500V	mica
C128, 228	1-141-010-XX	B		trimmer
C129, 229	1-108-571-12	A 0.0047		mylar
C130, 230	1-108-587-12	A 0.022		mylar
C131, 231	1-108-597-12	B 0.056		mylar
C132, 232	1-108-587-12	A 0.022		mylar
C133, 233	1-108-587-12	A 0.022		mylar
C134, 234	1-108-593-12	B 0.039		mylar
C135, 235	1-108-593-12	B 0.039		mylar
C137, 237	1-121-395-11	A 4.7	25V	elect
C138, 238	1-121-422-11	B 220	25V	elect
C139, 239	1-102-106-11	A 100p		
C140, 240	1-121-419-11	B 220	6.3V	elect
C141, 241	1-102-943-11	A 6p		
C142, 242	1-121-651-11	A 10	16V	elect
C143, 243	1-121-395-11	A 4.7	25V	elect
C144, 244	1-121-450-11	A 2.2	50V	elect
C145, 245	1-102-963-11	A 33p		
C146, 246	1-121-419-11	B 220	6.3V	elect
C147, 247	1-121-751-11	B 330	6.3V	elect
C148, 248	1-108-577-12	A 0.0082		mylar
C150, 250	1-108-246-12	A 0.047		mylar
C151, 251	1-121-392-11	A 3.3	25V	elect
C152, 252	1-121-726-11	A 0.47	50V	elect
C153, 253	1-121-416-11	B 100	25V	elect
C154, 254	1-121-392-11	A 3.3	25V	elect
C301, 401	1-108-579-12	A 0.01		mylar
C302, 402	1-108-581-12	B 0.012		mylar
C303, 403	1-108-597-12	B 0.056		mylar
C304, 404	1-108-573-12	A 0.0056		mylar
C305, 405	1-121-651-11	A 10	16V	elect
C306, 406	1-102-943-11	A 6p		
C307, 407	1-108-567-12	A 0.0033		mylar
C308, 408	1-121-986-11	A 2.2	50V	elect

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>		
C309, 409	1-121-960-11	A 3.3	25V	elect
C310, 410	1-108-571-12	A 0.0047		mylar
C501	A 1-121-945-11	C 1000	35V	elect
C502	1-121-261-11	B 220	35V	elect
C503, 504	1-121-416-11	B 100	25V	elect
C505	A 1-121-939-11	B 470	16V	elect
C506	1-121-975-11	A 47	10V	elect
C507	1-121-990-11	A 22	16V	elect
C508	1-121-974-11	B 33	10V	elect
C509	1-121-391-11	A 1	50V	elect
C510	1-108-585-12	B 0.018		mylar
C511	1-108-579-12	B 0.01		mylar
C512	1-129-710-11	A 0.0047	630V	film
C513	1-131-216-11	B 1.5	35V	tantalum
C514	1-102-106-11	A 100p		
C517	1-121-395-11	A 4.7	25V	elect
C519	1-161-034-11	A 0.022		(boundary layer)
C520	1-121-986-11	A 2.2	50V	elect
C521	1-121-388-11	C 1000	35V	elect
C1001	1-121-415-11	A 100	16V	elect
C1002	1-121-651-11	A 10	16V	elect
C1003	1-130-134-11	B 0.0082	100V	film
C1004	1-108-583-11	A 0.015		mylar
C1005	1-121-395-11	A 4.7	25V	elect
C1006	1-121-479-11	A 22	16V	elect
C1007	1-121-409-11	A 47	16V	elect
C1008	1-108-591-11	A 0.033		mylar

RESISTORS

All resistors are in ohms. Common 1/4W carbon resistors are omitted. Refer to the list on page 36 for their part numbers. All adjustable and variable resistors have characteristic curve B, unless otherwise noted. kΩ : 1000Ω, MΩ : 1000kΩ

R115, 215	1-244-919-11	A 82k	1/2W	carbon
R178, 278	A 1-213-135-11	A 220	1W	metal oxide (nonflammable)
R501	A 1-244-875-11	A 1.2k	1/2W	carbon
R503	1-244-843-11	A 56	1/2W	carbon

Note: The components identified by shading and mark **A** are critical for safety. Replace only with part number specified.

Note: Les composants identifiés par un trame et une marque **A** sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

• Circled letters (A to Z) are applicable to European models only.

Ref. No.	Part No.	Description
R505	1-244-895-11	(A) 8.2k ½W carbon
R506	1-244-901-11	(A) 15k ½W carbon
R518	△ 1-217-383-11	(B) 4.7 ½W fusible
R521	△ 1-213-135-11	(A) 220 1W metal oxide (nonflammable)
R539	△ 1-213-262-11	(A) 240 1W metal oxide (nonflammable)
R546	△ 1-244-865-11	(A) 470 ½W carbon
R547	△ 1-213-137-11	(A) 330 1W metal oxide (nonflammable)
R1001	1-244-871-11	(A) 820 ½W carbon
RV101,201	1-224-907-00	(B) 20k (A), variable; REC LEVEL
RV102,202	1-224-645-XX	(B) 20k, variable; REC LEVEL
RV103,203	1-224-644-XX	(B) 10k, adjustable; PB LEVEL
RV104,204	1-224-906-00	(D) 4.7k, variable; REC LEVEL HEADPHONES
RV105,205	1-224-644-XX	(B) 4.7k, adjustable; METER LEVEL
RV1001	1-224-491-00	(B) 22k, adjustable; TAPE SPEED

SWITCHES

S1, 2	1-552-204-00	(F) Slide, REC/PB
S3	1-552-039-00	(C) Lever Slide, BIAS
S4	1-552-038-00	(D) Lever Slide, EQ
S5	1-552-038-00	(D) Lever Slide, DOLBY NR
S6	1-552-040-00	(E) Lever Slide, INPUT SELECT
S7	1-552-271-00	(C) Slide, MEMORY
S8	△ 1-552-018-00	Pushbutton, POWER (US, Canadian model)
	△ 1-552-206-11	(D) Pushbutton, POWER (AEP, E, UK model)
S9	1-516-686-00	(C) Lever Slide, timing
S10	1-516-853-XX	(C) Leaf, motor on/off
S11	1-516-853-XX	(C) Leaf, muting
S13	1-516-853-XX	(C) Leaf, REW
S14	1-514-912-00	(B) Leaf, HOLD

CONNECTORS

J101, 201	1-507-525-00	(D) Jack, 2p; MIC
J301	1-507-439-00	(B) Jack, HEADPHONES

Ref. No.	Part No.	Description
CNJ101,201	1-507-531-21	Phono Jack, 4p; LINE IN, FIXED LINE OUT (US, Canadian model)
CNJ102,202		
CNJ101,201	1-536-501-21	(D) Phono Jack, 4p; LINE IN, FIXED LINE OUT (AEP, E, UK model)
CNJ301		
CNJ102,202		
CNJ103,203	1-507-526-21	(B) Phono Jack, 2p; VARIABLE LINE OUT
CNJ501	△ 1-509-546-00	(D) Socket, 3p AC IN (AEP, E, UK model)

MISCELLANEOUS

CP501	△ 1-231-057-31	(B) Spark Killer (AEP, E, UK model)
	△ 1-231-341-21	Spark Killer (Canadian model)
	△ 1-231-326-11	Spark Killer (US model)
EH	8-825-506-00	(C) Head, erase; EF135-36
F1	△ 1-532-079-00	(B) Fuse, 160mA (AEP, E, UK model)
M	8-835-006-00	(L) Motor, DNF-1001B
ME1, 2	1-520-321-00	(K) Meter, level (AEP, E, UK model)
	1-520-336-00	Meter, level (US, Canadian model)
PL1	1-518-115-XX	(B) Lamp, REC 6.0V, 35mA
PL2	1-518-115-XX	(B) Lamp, cassette; 6.0V, 35mA
PL3, 4	1-518-309-00	(B) Lamp, meter
PM	△ 1-454-123-00	(F) Solenoid, STOP
RPH	8-825-584-00	(M) Head, record/playback; PF145-3602A
	1-507-531-21	Plate, jack (US, Canadian model)
	△ 1-534-538-21	Cord, power (US model)
	△ 1-534-986-XX	Cord, power (Canadian model)
	1-548-107-XX	(H) Tape Counter (including S14)
	△ 1-552-026-00	(E) Voltage Selector (AEP, E, UK model)

Note: Les composants identifiés par un trame et une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Note: The components identified by shading and mark △ are critical for safety. Replace only with part number specified.

Note: The components identified by shading and mark **▲** are critical for safety. Replace only with part number specified.

Note: Les composants identifiés par un trame et une marque **▲** sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

ACCESSORIES AND PACKING MATERIALS

<u>Part No.</u>	<u>Description</u>
X-3553-607-0	(A) Cushion Ass'y, (AEP, E, UK model)
X-3701-105-0	(A) Tips Ass'y, head cleaning
1-534-049-31	(D) Cord, connecting; RK-74H
▲ 1-534-754-14	Cord, power; parallel-blade plug (E model)
▲ 1-551-216-11	Cord, power; euro-plug (E model)
▲ 1-534-819-00	(G) Cord, power (UK model)
3-429-126-00	Bag, plastic (Canadian model)
3-550-733-00	(B) Spacer (AEP model)
3-550-734-00	Holder, cord (E model)
3-550-739-00	Cushion A (US, Canadian model)
3-550-740-00	Cushion B (US, Canadian model)
3-553-636-00	Carton (US, Canadian model)
3-553-637-00	(E) Carton (AEP, UK model)
3-553-639-00	Carton (E model)
3-770-364-11	(F) Manual, instruction (AEP, E, UK model)
3-770-364-31	Manual, instruction (US, Canadian model)
3-794-173-31	Leaflet, instruction (Canadian model)
4-818-924-00	(B) Bag, plastic (E, UK model)
3-553-640-00	(B) Spacer (UK model)

• Circled letters (**(A)** to **(Z)**) are applicable to European models only.

1/4 WATT CARBON RESISTORS **(A)**

Ω	Part No.	Ω	Part No.	Ω	Part No.	Ω	Part No.	Ω	Part No.	Ω	Part No.	Ω	Part No.
1.0	1-244-601-11	10	1-244-625-11	100	1-244-649-11	1.0k	1-244-673-11	10k	1-244-697-11	100k	1-244-721-11	1.0M	1-244-745-11
1.1	1-244-602-11	11	1-244-626-11	110	1-244-650-11	1.1k	1-244-674-11	11k	1-244-698-11	110k	1-244-722-11	1.1M	1-244-746-11
1.2	1-244-603-11	12	1-244-627-11	120	1-244-651-11	1.2k	1-244-675-11	12k	1-244-699-11	120k	1-244-723-11	1.2M	1-244-747-11
1.3	1-244-604-11	13	1-244-628-11	130	1-244-652-11	1.3k	1-244-676-11	13k	1-244-700-11	130k	1-244-724-11	1.3M	1-244-748-11
1.5	1-244-605-11	15	1-244-629-11	150	1-244-653-11	1.5k	1-244-677-11	15k	1-244-701-11	150k	1-244-725-11	1.5M	1-244-749-11
1.6	1-244-606-11	16	1-244-630-11	160	1-244-654-11	1.6k	1-244-678-11	16k	1-244-702-11	160k	1-244-726-11	1.6M	1-244-750-11
1.8	1-244-607-11	18	1-244-631-11	180	1-244-655-11	1.8k	1-244-679-11	18k	1-244-703-11	180k	1-244-727-11	1.8M	1-244-751-11
2.0	1-244-608-11	20	1-244-632-11	200	1-244-656-11	2.0k	1-244-680-11	20k	1-244-704-11	200k	1-244-728-11	2.0M	1-244-752-11
2.2	1-244-609-11	22	1-244-633-11	220	1-244-657-11	2.2k	1-244-681-11	22k	1-244-705-11	220k	1-244-729-11	2.2M	1-244-753-11
2.4	1-244-610-11	24	1-244-634-11	240	1-244-658-11	2.4k	1-244-682-11	24k	1-244-706-11	240k	1-244-730-11	2.4M	1-244-754-11
2.7	1-244-611-11	27	1-244-635-11	270	1-244-659-11	2.7k	1-244-683-11	27k	1-244-707-11	270k	1-244-731-11	2.7M	1-244-755-11
3.0	1-244-612-11	30	1-244-636-11	300	1-244-660-11	3.0k	1-244-684-11	30k	1-244-708-11	300k	1-244-732-11	3.0M	1-244-756-11
3.3	1-244-613-11	33	1-244-637-11	330	1-244-661-11	3.3k	1-244-685-11	33k	1-244-709-11	330k	1-244-733-11	3.3M	1-244-757-11
3.6	1-244-614-11	36	1-244-638-11	360	1-244-662-11	3.6k	1-244-686-11	36k	1-244-710-11	360k	1-244-734-11	3.6M	1-244-758-11
3.9	1-244-615-11	39	1-244-639-11	390	1-244-663-11	3.9k	1-244-687-11	39k	1-244-711-11	390k	1-244-735-11	3.9M	1-244-759-11
4.3	1-244-616-11	43	1-244-640-11	430	1-244-664-11	4.3k	1-244-688-11	43k	1-244-712-11	430k	1-244-736-11	4.3M	1-244-760-11
4.7	1-244-617-11	47	1-244-641-11	470	1-244-665-11	4.7k	1-244-689-11	47k	1-244-713-11	470k	1-244-737-11	4.7M	1-244-761-11
5.1	1-244-618-11	51	1-244-642-11	510	1-244-666-11	5.1k	1-244-690-11	51k	1-244-714-11	510k	1-244-738-11	5.1M	1-244-762-11
5.6	1-244-619-11	56	1-244-643-11	560	1-244-667-11	5.6k	1-244-691-11	56k	1-244-715-11	560k	1-244-739-11		
6.2	1-244-620-11	62	1-244-644-11	620	1-244-668-11	6.2k	1-244-692-11	62k	1-244-716-11	620k	1-244-740-11		
6.8	1-244-621-11	68	1-244-645-11	680	1-244-669-11	6.8k	1-244-693-11	68k	1-244-717-11	680k	1-244-741-11		
7.5	1-244-622-11	75	1-244-646-11	750	1-244-670-11	7.5k	1-244-694-11	75k	1-244-718-11	750k	1-244-742-11		
8.2	1-244-623-11	82	1-244-647-11	820	1-244-671-11	8.2k	1-244-695-11	82k	1-244-719-11	820k	1-244-743-11		
9.1	1-244-624-11	91	1-244-648-11	910	1-244-672-11	9.1k	1-244-696-11	91k	1-244-720-11	910k	1-244-744-11		

US Model
 Canadian Model
 AEP Model
 E Model
 UK Model

CORRECTION

Correct the service manual as shown below.


No. 2

April, 1979

Page 24

➤ : corrected portion


SCHEMATIC DIAGRAM

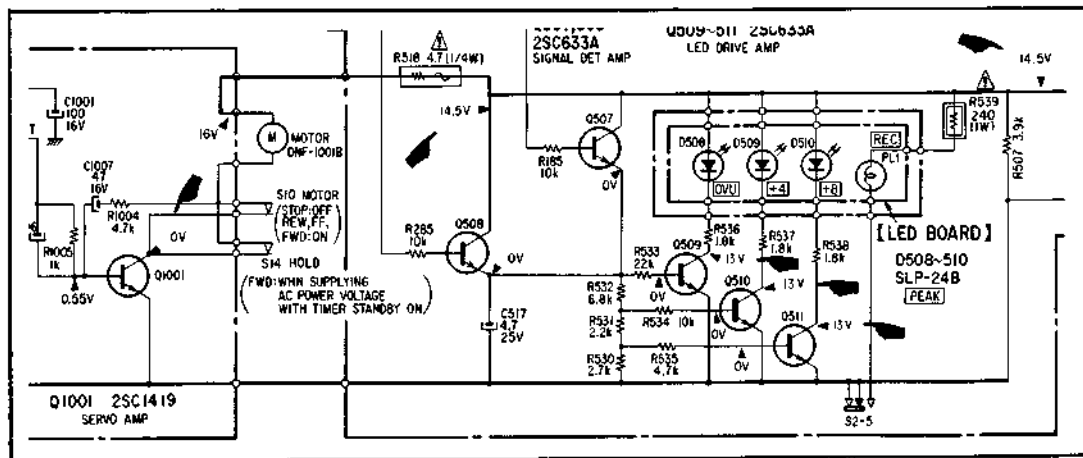


Page 21

MOUNTING DIAGRAM

[REC/PB AMP BOARD]

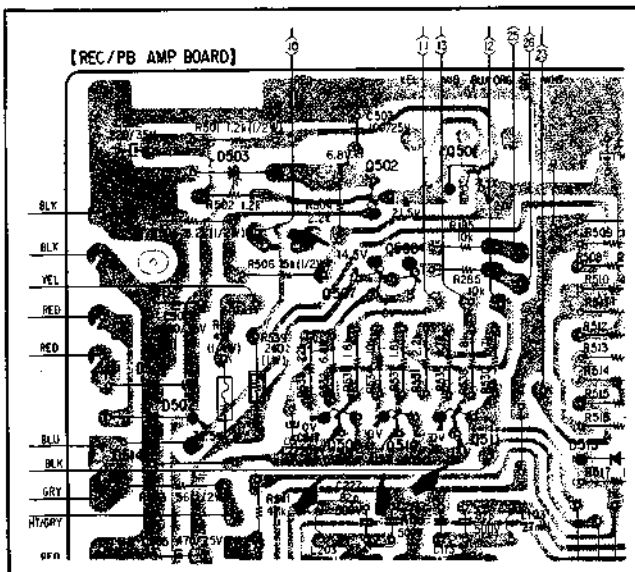

[SERVO AMP BOARD]

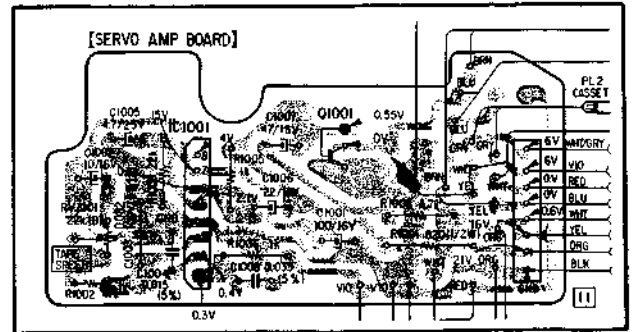


SONY®

 
SERVICE MANUAL


 

 

 
 
 
 

 

Sony Corporation


 


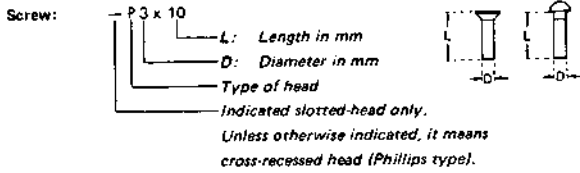



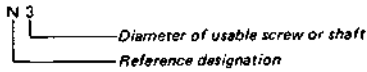




HARDWARE NOMENCLATURE



Nut, Washer, Retaining ring:



Reference Designation	Shape	Description	Remarks
SCREWS			
P		pan-head screw	binding-head (B) screw for replacement
PWH		pan-head screw with washer face	binding-head (B) screw and flat washer for replacement
PS PSP		pan-head screw with spring washer	binding-head (B) screw and spring washer for replacement
PSW PSPW		pan-head screw with spring and flat washers	binding-head (B) screw and spring and flat washers for replacement
R		round-head screw	binding-head (B) screw for replacement
K		flat-countersunk-head screw	
RK		oval-countersunk-head screw	
B		binding-head screw	
T		truss-head screw	binding-head (B) screw for replacement
F		flat-fillister-head screw	
RF		fillister-head screw	
BV		braizer-head screw	

Reference Designation	Shape	Description	Remarks
SELF-TAPPING SCREWS			
TA		self-tapping screw	ex: TA, P 3 x 10
PTP		pan-head self-tapping screw	binding-head self-tapping (TA, B) screw for replacement
PTPWH		pan-head self-tapping screw with washer face	binding-head self-tapping (TA, B) screw and flat washer for replacement
PTTWH		pan-head thread-rolling screw with washer face	binding-head (B) screw and flat washer for replacement
SET SCREWS			
SC		set screw	
SC		hexagon-socket set screw	ex: SC 2.6 x 4, hexagon socket
NUT			
N		nut	
WASHERS			
W		flat washer	
SW		spring washer	
LW		internal-tooth lock washer	ex: LW3, internal
LW		external-tooth lock washer	ex: LW3, external
RETAINING RINGS			
E		retaining ring	
G		grip-type retaining ring	