

# Precautions

- Operate the unit only on 3V DC.
- When the unit is not to be used, remove the batteries to avoid damage caused by battery leakage and corrosion.
- Do not leave the unit in a location near heat sources, or in a place subject to direct sunlight, excessive dust, or mechanical shock.
- For the unit to operate at its best, it should not be subjected to temperatures below 0°C (32°F).
- Should any solid object or liquid fall into the unit, remove the batteries, and have the unit checked by qualified personnel before operating it any further.
- If the unit has not been used for a long time, set it in the playback mode and warm it up for a few minutes before inserting a cassette.

### About the headphones

- Avoid listening with your headphones:
  - while driving, cycling, etc.
  - for an extended time at a loud volume.
- Remember not to disturb those close to you with the sounds from your headphones.
- Keep the plug of your headphones clean to obtain the optimum sound. Wipe it with a dry, soft cloth.

### Note on the 120-minute cassette

The use of a 120-minute cassette tape is not recommended except for long continuous playback.

## Do not Immerse in Water

- Before opening or shutting the cassette compartment lid, be sure to wipe off water, dust or sand on the outside of the unit.
- Since water in the headphones jack may cause rust, cover it with the attached rubber cap when the headphones are not used.
- If the unit or the headphones have been dropped in salt water, be sure to wash them in still fresh water. Never wash them under running water, and never use soap or detergent.
- The supplied headphones or earphones are not meant to be immersed in water or come in continuous contact with water. If they are accidentally dropped into water or if they get wet, dry them with a soft cloth. Never use an electric hair dryer.

### Notes on the clock

- The clock's digital display may become dim when exposed to heat. It will recover when the temperature drops to normal.
- When exposed to excessively high or low temperatures (for example, in a car), the flashing of digits or flags on the clock's display may become slower.
- In a poorly lighted place, the clock's display may become dim.
- Do not place the unit with its cassette compartment lid and clock controls facing down. Otherwise the controls may be depressed accidentally, and be reset incorrectly.
- Do not leave the clock in the temperature below 0°C or over 40°C. If you do, it will cause malfunction and battery leakage.
- Have the clock checked by a Sony dealer every 4 years.

If you have any question or problem concerning your unit that is not covered in this manual, please consult the nearest Sony dealer (service facility).

## Specifications

- Frequency range: FM: 87.6–108MHz AM: 530–1,605kHz
- Antennas: FM: Headphone cord antenna AM: Built-in ferrite bar antenna
- Frequency response: 40–14,000Hz (with metal tapes or CrO<sub>2</sub> tapes) 40–14,000Hz (with normal tapes)
- Power output: 15mW + 15mW at DC operation (at 10% harmonic distortion)
- Power requirements: 3V DC, two size AA (R6) batteries
- Battery life

Batteries	Radio reception	Playback
Sony battery SUM-3 (NS)	approx. 17 hours	approx. 4 hours
Sony alkaline battery AM3(N)	approx. 35 hours	approx. 8 hours

For maximum performance, we recommend the use of alkaline batteries.

# SONY

3-769-806-21 (1)

Radio Cassette Player

# WM-AF58

## Operating Instructions

Before operating the unit, please read this manual thoroughly and retain it for future reference.

## Owner's Record

The model number is located at the bottom and the serial number is located in the battery compartment. Record the serial number in the space provided below. Refer to these numbers whenever you call upon your Sony dealer regarding this product.

Model No. WM-AF58      Serial No. \_\_\_\_\_

Sony Corporation © 1988      Printed in Taiwan, R.O.C.

# SPORTS WALKMAN

WALKMAN is a trademark of Sony Corporation.

## INFORMATION

This equipment generates and uses radio frequency energy and if not installed and used properly, that is, in strict accordance with the manufacturer's instructions, may cause interference to radio and television reception. It has been type tested and found to comply with the limits for a Class B computing device in accordance with the specifications in Subpart J of Part 15 of FCC Rules, which are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient the receiving antenna
- Relocate the equipment with respect to the receiver
- Move the equipment away from the receiver
- Plug the equipment into a different outlet so that equipment and receiver are on different branch circuits.

If necessary, the user should consult the dealer or an experienced radio/television technician for additional suggestions. The user may find the following booklet prepared by the Federal Communications Commission helpful:

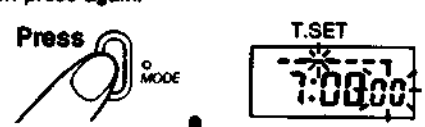 
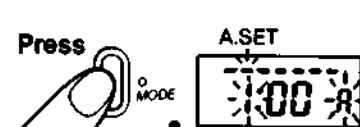 
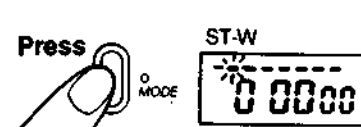 



 

 


"How to Identify and Resolve Radio-TV Interference Problems". This booklet is available from the U.S. Government Printing Office, Washington, DC 20402, Stock No. 004-000-00345-4.

- Dimensions: Approx. 104×140×47mm (w/h/d) (4¼×5½×1¾ inches) incl. projecting parts and controls  
Approx. 99×138×40mm (w/h/d) (4×5½×1½ inches) excl. projecting parts and controls
- Weight: Approx. 350g (12oz) incl. batteries excl. other accessories
- Accessories supplied: Stereo headphones (open air type, 1)

### Clock Section

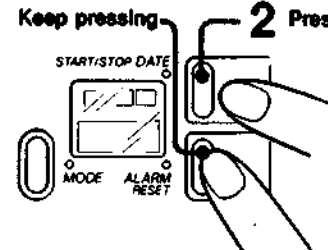 
- Digits: 6
  - Functions: 6 (Hour, minute, second, day/month, date, day)
  - Stopwatch: 1/100 second display (up to 40 minutes) 1 second (up to 24 hours)
  - Calendar: Auto calendar (based on February 28)
  - Timekeeping accuracy: ±30 seconds/month (+5°C to +35°C)
  - Power supply: Solar battery/auxiliary battery, automatic switching type
  - Battery life: Approx. 4 years (when exposed to at least 20 lx for at least 8 hours per day)
- Design and specifications subject to change without notice.

# How to Use the Clock


 
 

To set the time and date	To set the alarm time	To use the stopwatch
<p>Keep pressing for 1-2 seconds. Then press again.</p> 	<p>Keep pressing for 1-2 seconds.</p> 	<p>Press once.</p> 
<p>To select the flickering digits you want to adjust</p>  <p>Press</p> <p>With each press, it moves orderly from seconds to date.</p>	<p>To select the flickering digits you want to adjust</p>  <p>Press</p> <p>With each press, it moves orderly between minutes and hour.</p>	<p>To start</p>  <p>Press</p> <p>(To stop, press again.)</p>
<p>To adjust the digits</p>  <p>Press</p> <p>Example</p> <p>To adjust the seconds</p>  <p>To adjust the month</p>  <p>When adjusting the digits except seconds, they change by one with each press.</p> <p>To make the digits advance rapidly, keep the ALARM/RESET button pressed.</p>	<p>To adjust the digits</p>  <p>Press</p> <p>To make the digits advance rapidly, keep the ALARM/RESET button pressed.</p>	<p>To see the lap time while stopwatch is running</p>  <p>Press</p> <p>To return to the stopwatch, press again. (The stopwatch continues to run while lap time is shown.)</p> <p>To reset after stopping the stopwatch.</p>
<p>After adjusting the clock time or the alarm time, press MODE button to return to normal display. To return to normal display from the stopwatch, press MODE button.</p>		

To confirm the date, press DATE button while normal display.  
To confirm the alarm time, press ALARM/RESET button while normal display.

**1 Keep pressing** **2 Press**



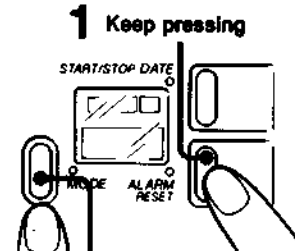 
With each press of DATE button, display changes orderly as follows.

<p><b>1</b></p>  <p>to obtain chime only</p>	<p><b>2</b></p>  <p>to obtain chime and alarm</p>	<p><b>3</b></p>  <p>to turn off chime and obtain alarm only</p>	<p><b>4</b></p>  <p>to turn off alarm</p>
---	--	--	--

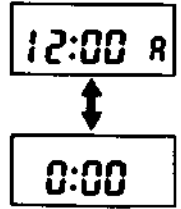 
Chime rings on the every hour.  
Alarm rings at the time already set for thirty seconds.

When the alarm beeps  
Press the ALARM/RESET button to turn off the alarm.

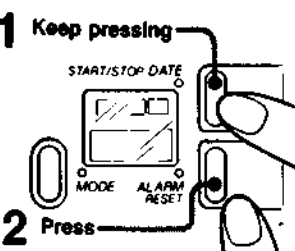 
**1 Keep pressing**



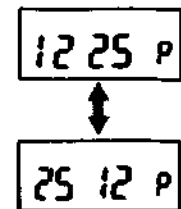 
Display switches between



**1 Keep pressing**

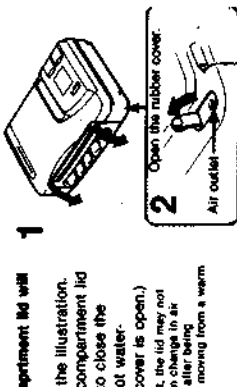 


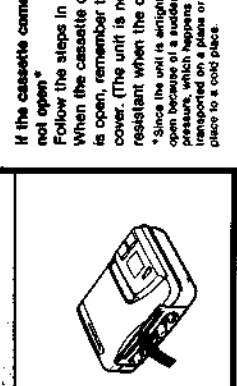 
Display switches between

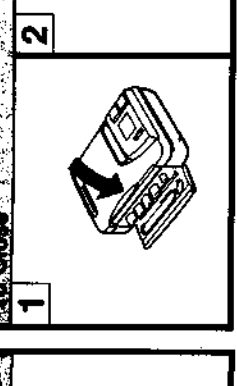 


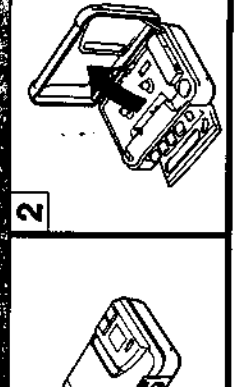 
**2 Press**


# How to Open and to Close the Cassette Compartment Lid

**1** 

**2** 

**1** 

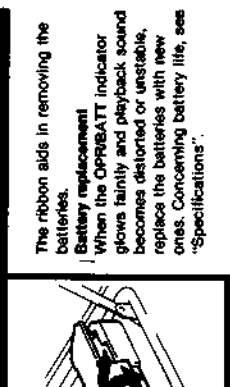 
**2** 

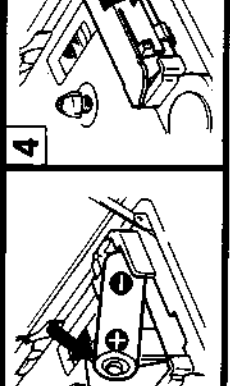 
**1** 

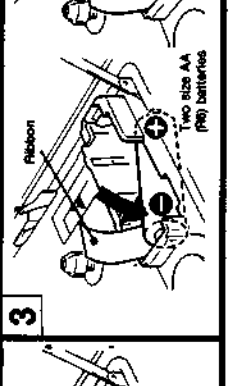 
If the cassette compartment lid will not open\* Follow the steps in the illustration. When the cassette compartment lid is open, remember to close the cover. (The unit is not water-resistant when the cover is open.)

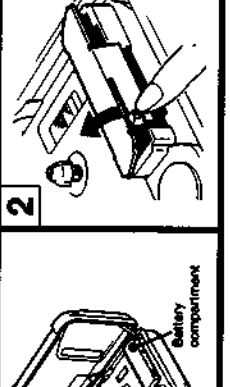 
\*Since the lid is tight, the lid may not open because of a sudden change in air pressure, which happens after being transported on a plane or moving from a warm place to a cold place.

# Battery Installation

**1** 

**2** 

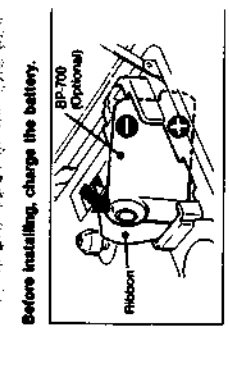 
**3** 

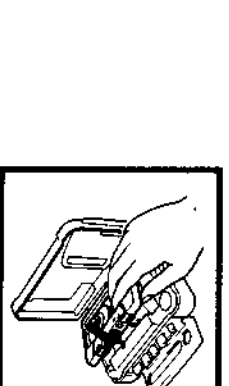 
**4** 

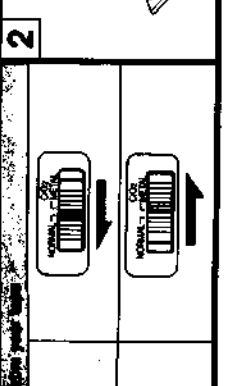 
The ribbon aids in removing the batteries.

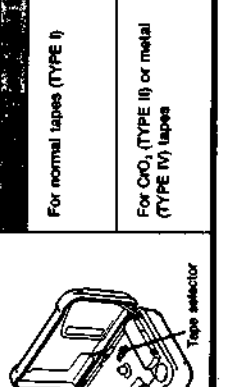 
**Battery replacement**  
When the OPORBATT indicator glows faintly and playback sound becomes distorted or unstable, replace the batteries with new ones. Concerning battery life, see "Specifications".

# Cassette Insertion

**1** 

**2** 

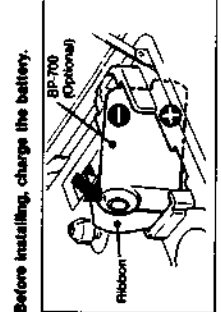 
**3** 

**2** 

# To install the Rechargeable Battery (Optional)

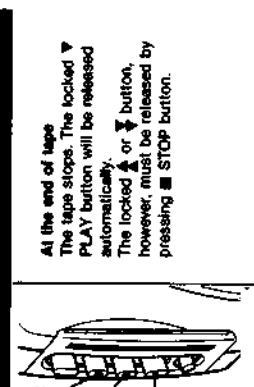 
Before installing, charge the battery.

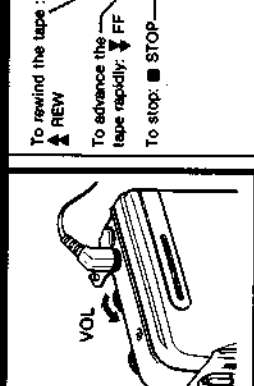 
**BP-700 (Optional)**

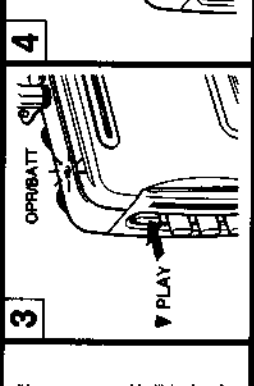 


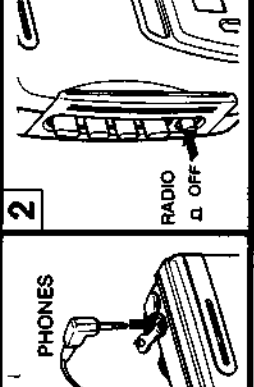 
Ribbon

# Tape Playback

**1** 

**2** 

**3** 

**4** 

At the end of tape The tape stops. The locked **PLAY** button will be released automatically.

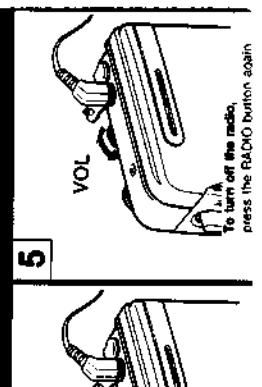 
The locked **STOP** button, however, must be released by pressing **STOP** button.

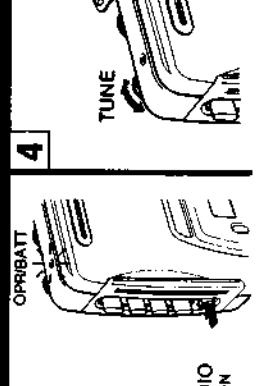 
To rewind the tape: **REW**

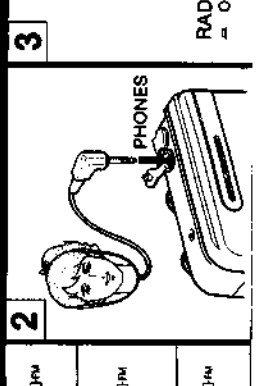 
To advance the tape rapidly: **FF**

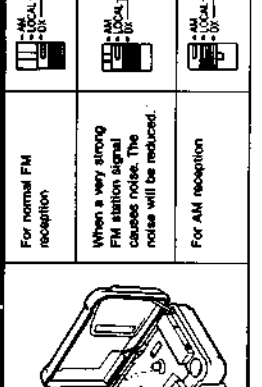 
To stop: **STOP**


# Radio Reception

**1** 

**2** 

**3** 

**4** 

**5** 

For normal FM reception

When a very strong FM station signal causes noise. The noise will be reduced.

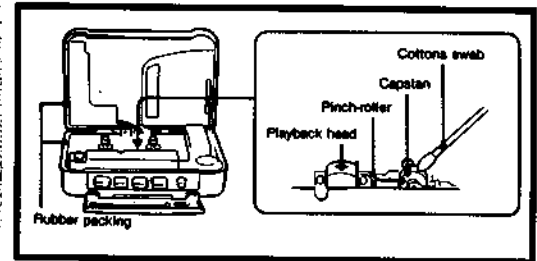 
For AM reception

To turn off the radio, press the RADIO button again.

# Maintenance

## Cleaning the Head

Clean the tape head after every 10 hours of use to enjoy optimum hi-fi stereo sound. Moisten a cotton swab or a soft cloth with alcohol and wipe the parts shown below.

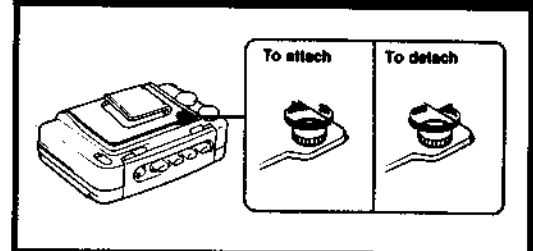 


Clean the case with a soft cloth slightly moistened with water. Do not use alcohol, benzine or thinner as they may mar the finish.

**Remove any dust or sand from the rubber packing**  
Any sand or dust on the rubber packing will prevent the cassette compartment lid from shutting tightly, and water may leak in. Brush off the dust once in a while.

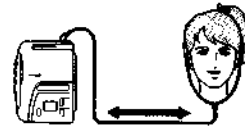 
**Useful life of the rubber packing**  
Although it depends on the maintenance and the length of use, we recommend changing the packing every year. Replacement packing is available at an authorized Sony Service Station.

## How to Use the Belt Clip



## To improve receiving condition

**FM**  
Since the headphone cord serves as an FM antenna, extend it for better reception.



**AM**  
Since the reception is affected by the direction of the unit, rotate it horizontally for optimum reception.

