
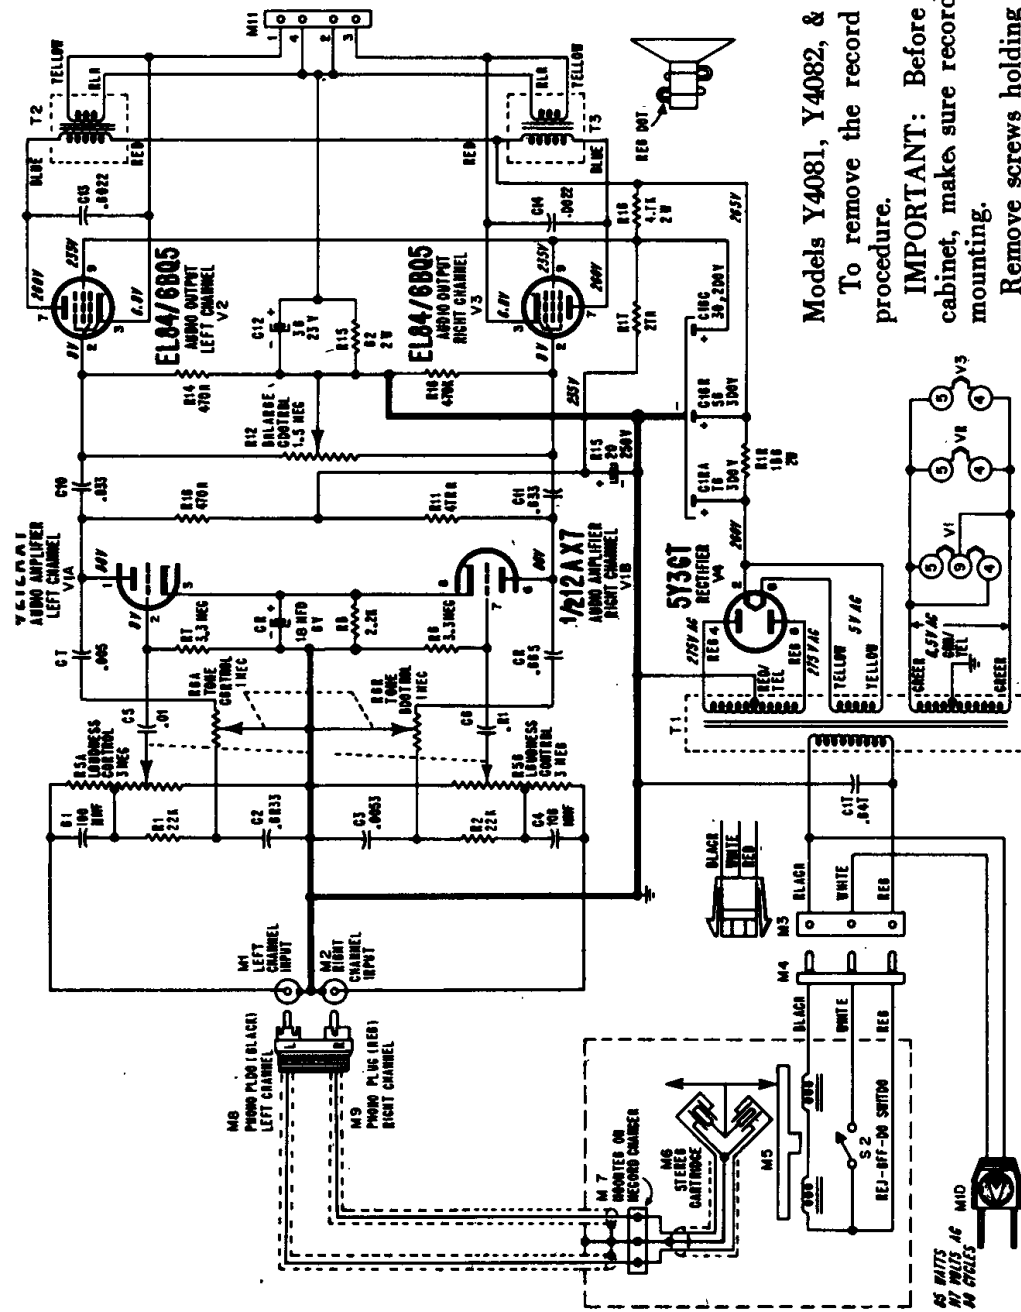


ADMIRAL

Chassis 4F3A

Models Y4057, Y4081,
Y4082, and Y4083

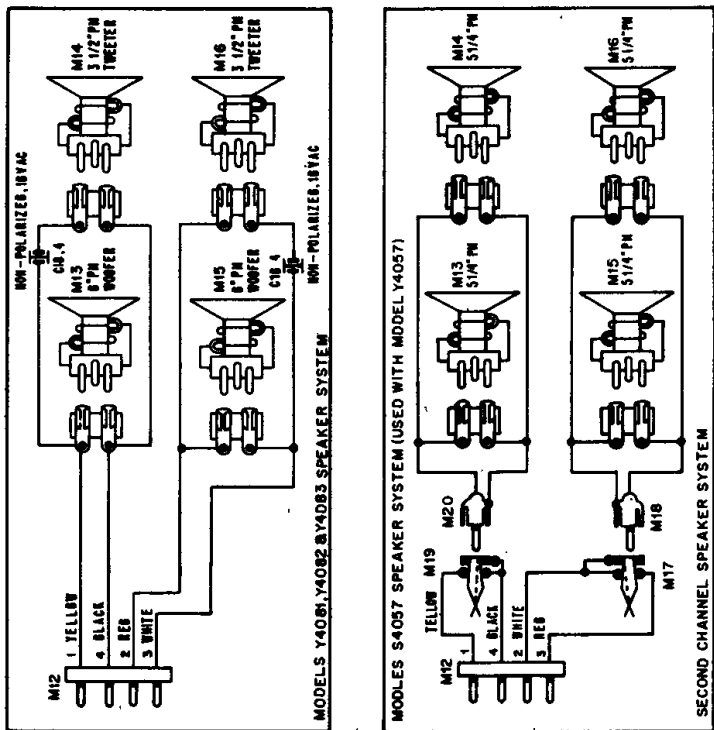

Models Y4081, Y4082, & Y4083:

To remove the record changer, perform the following procedure.

IMPORTANT: Before removing record changer from cabinet, make sure record changer "floats" on its spring mounting.

Remove screws holding the record changer compartment panel back and record changer bottom cover.

Speed clips (at bottom of each changer hold down screw) extend through holes in panel under changer. Press clip until it is perpendicular to the changer pan. Remove changer from cabinet for servicing. Disconnect all leads.

CHASSIS REMOVAL

Disconnect line cord.

Remove three (3) amplifier control knobs. (Pull knobs straight off from control shafts.)

Remove record changer compartment back panel by removing screws. Lift out panel.

Disconnect changer phono output plug, speaker and changer power plug.

Remove two hexnuts to dismount interlock plug.

Remove four hexnuts mounting the chassis. Lift entire assembly carefully from cabinet.

CHANGER REMOVAL

Model Y4057:

Disconnect line cord. Remove record changer compartment back panel by removing five (5) screws. Lift out panel.

Remove six motor board mounting screws.

Disconnect changer phono output plug and changer power plug.

Remove changer and motor board from cabinet.

- NOTES
1. ALL RESISTOR VALUES IN OHMS ARE CAPACITOR VALUES IN MICROFARADS UNLESS OTHERWISE SPECIFIED.
 2. ALL VOLTAGES TAKEN WITH A VTVM.
 3. 500 VOLTAGE READINGS, ALL CONTROLS AT MID-ROTATION AND NO SIGNAL APPLIED.
 4. ALL VOLTAGES ARE D.C. UNLESS OTHERWISE INDICATED.
 5. MEASURED WITH RESPECT TO GROUND.

