

**INTERMEDIATE FREQUENCY: AM 455 KC
FM 10.7 MC**

When replacing chassis into the cabinet rear, first thread the unipole antenna lead into the small hole provided in the rear of the cabinet.

CHASSIS REMOVAL

To remove the chassis from the cabinet it is necessary to remove only the rear cabinet section, since the front panel and knobs are attached to the chassis.

1. Remove two screws from the back of cabinet.
2. Remove two screws from the bottom of cabinet.
3. Turn set bottom side up and using a screw driver, force chassis forward by pushing on the front

