



- C1 - .05 - 400 V.
- C2 - .1 - 200 V.
- C3 - .0001 - mica
- C4 - .02 - 400 V.
- C5 - .1 - 200 V.
- C6 - .1 - 200 V.
- C7 - .0001 - mica
- C8 - .0001 - mica
- C9 - .005 - 400 V.
- C10 - .02 - 400 V.
- C11 - .0001 - mica
- C12 - .1 - 200 V.
- C13 - .02 - 400 V.
- C14 - .0005 - mica
- C15 - .02 - 400 V.

- L1 - 456 KC wave trap
- L2 - 3 band antenna coil
- L3 - 3 band oscillator coil
- L4 - 456 KC Input I. F.
- L5 - 456 KC Output I. F.

## MODEL 76

- R1 - 250 ohm 1/2 watt
- R2 - 50,000 - 1/2 "
- R3 - 20,000 - 1/2 "
- R4 - 25,000 - 2 "
- R5 - 500 - 1/2 "
- R6 - 3,000,000 - 1/2 "
- R7 - 1,000,000 - 1/2 "
- R8 - 400,000 - Tone Control
- R9 - 450,000 - Vol. Control
- R10 - 50,000 - 1/2 Watt
- R11 - 1,000,000 - 1/2 "
- R12 - 300,000 - 1/2 "
- R13 - 500,000 - 1/2 "

- F1 - .0048 mfd.
- F2 - 3800 mmf.
- F3 - 600 mmf. max.
- E8 - 8 mfd. - 450 V.
- E16 - 16 mfd. - 300 V.

Switches A, B, C, D, E, F, G - Two deck; outside deck, 3 section 1 to 3 position each section - inside deck, 4 section 1 to 3 position each section.