


# Admiral

CHASSIS 5M5  
MODEL Y4017

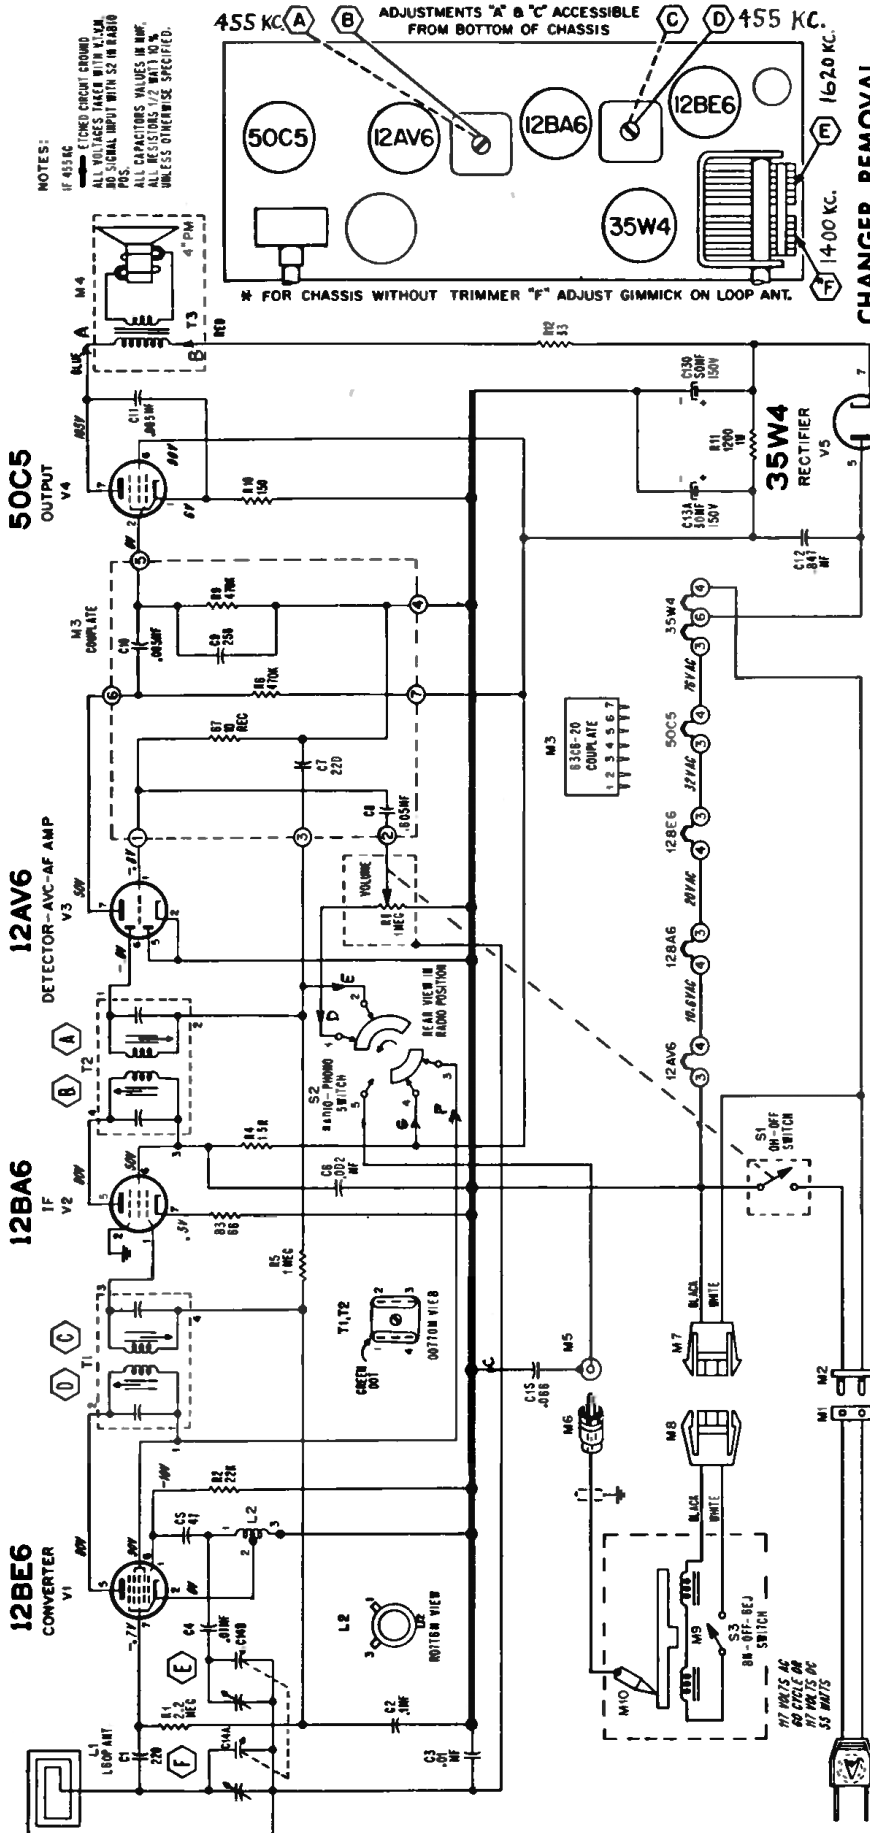

## CHANGER REMOVAL

Disconnect line cord. Remove record changer compartment back panel by removing five (5) screws. Lift out panel.

Remove six motor board mounting screws.

Disconnect changer phono output plug and changer power plug.

Remove changer and motor board from cabinet.

## CHASSIS REMOVAL

Remove three (3) amplifier control knobs. (Pull knobs straight off from control shafts.)

Remove record changer compartment back panel by removing five (5) screws. Lift out panel.


Disconnect changer phono output plug and changer power plug.

Remove two hexnuts to dismount speaker.

Remove two hexnuts to dismount interlock plug.

Remove four (4) hexnuts mounting the chassis; located on the antenna mounting board.

Lift entire assembly carefully from cabinet.

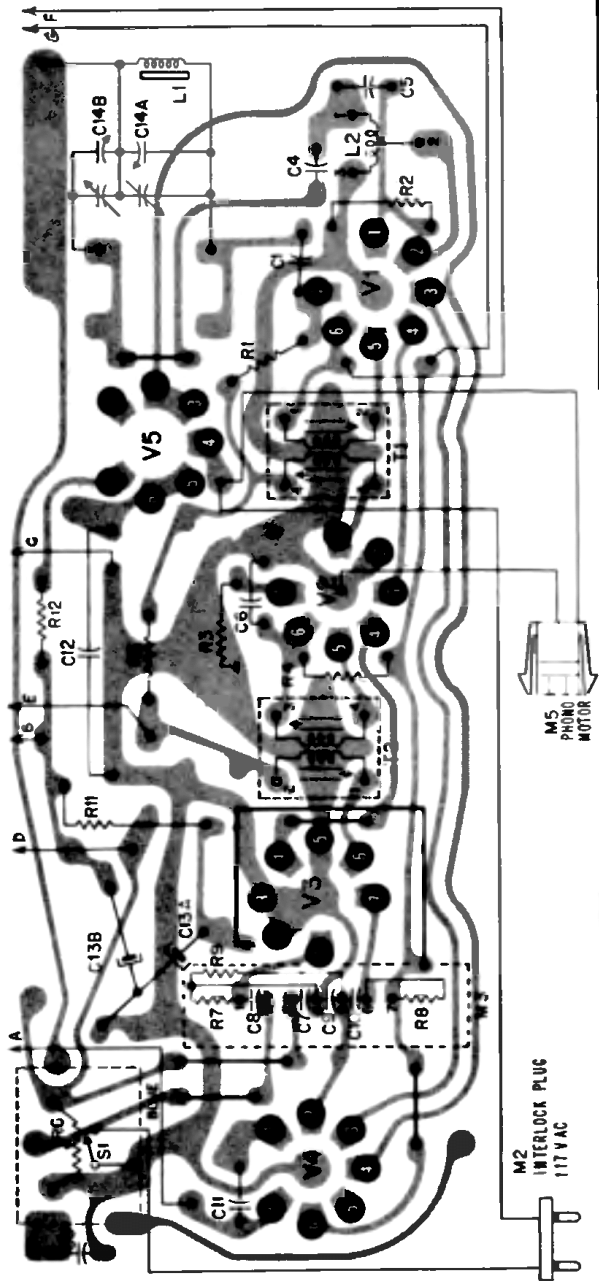

Bottom View of Etched Circuit Board. Gray area represents etched wiring; black symbols and lines represent components and connections on opposite side.