



Ref. No.	Part No.	Description
R99	17-4191	15,000 ohms 1/2 watt
R27	17-4788	2,000,000 ohms 1/2 watt
R106	17-14171	50,000 ohms 1/2 watt
R109	17-14174	500,000 ohms 1/2 watt
R-113	17-14178	250,000 ohms 1/2 watt
R149	17-14241	150 ohms 1/2 watt
R150	17-14242	5,000,000 ohms 1/2 watt
R154	17-14244	1,500,000 ohms 1/2 watt

Ref. No.	Part No.	Description
C7	17-2064	.0001 mfd. 600 volt
C104	17-4206	.01 mfd. 200 volt
G48	17-4207	.00025 mfd. 600 volt
C9	17-4292	.001 mfd. 600 volt
C5	17-14015	.05 mfd. 200 volt
C112	17-14139	.05 mfd. 400 volt
C172 A & B	17-14239	20-20 mfd. 150 volt
C174	17-14248	.2 mfd. 400 volt
C1-C2	17-19900	Tuning Condenser

Ref. No.	Part No.	Description
T2	00-15979	Oscillator Coil
T-5	00-15980	Output Transformer
T3	00-16060	1st I.F. Transformer
T4	00-16061	2nd I.F. Transformer
T1	00-16083	Antenna Coil

## SPEAKERS, DIAL PARTS, CABINETS &amp; MISCELLANEOUS

Part No.	Description
10-5181	Chassis Mounting Screw per dos.
28-5188	Dial drive pulley (rubber)
83-2357	Grille cloth (ivory rayon)
29-13470	Tuning shaft retaining washer
29-13583	Dial drive cord (16" long)
34-17360	Dial drive takeup spring
17-14997	Needle cup
17-14998	Needle cup cover
19-15476	Tuning condenser drive pulley

17-15791K	Line cord and plug
29-15905	Cabinet (58A- Ivory)
32-15907	Chassis bottom cover
29-15909	Cabinet (58-Black)
32-15915	Tuning shaft bracket
29-15916	Cabinet back cover
17-15926A	Volume control switch
29-15929	Knob (wood-walnut finish)
29-15937	Knob (walnut bakelite)
25-15958	Tuning Shaft
17-15973	Dial light socket and clip
81-15974	Dial glass (black background)
17-15983	Speaker (5" diameter)
17-15989	Speaker (6" diameter)
81-16015	Dial glass (brown background)
27-16020	Cabinet (Model 88)
17-16021	Phono pickup and arm
17-16022	Phono turntable and motor
29-16024	Knob (ivory bakelite)
17-16065	Radio-Phono switch
29-16068	Knob (Radio-Phono switch)

