


CROSLLEY

MODELS: 11-120U, 11-121U, 11-122U, 11-123U
11-124U, 11-125U

Models: D-25 WE, D-25 TN, D-25 CE,
D-25 MN, D-25 BE, D-25 GN

(Chassis 311, 311-1)

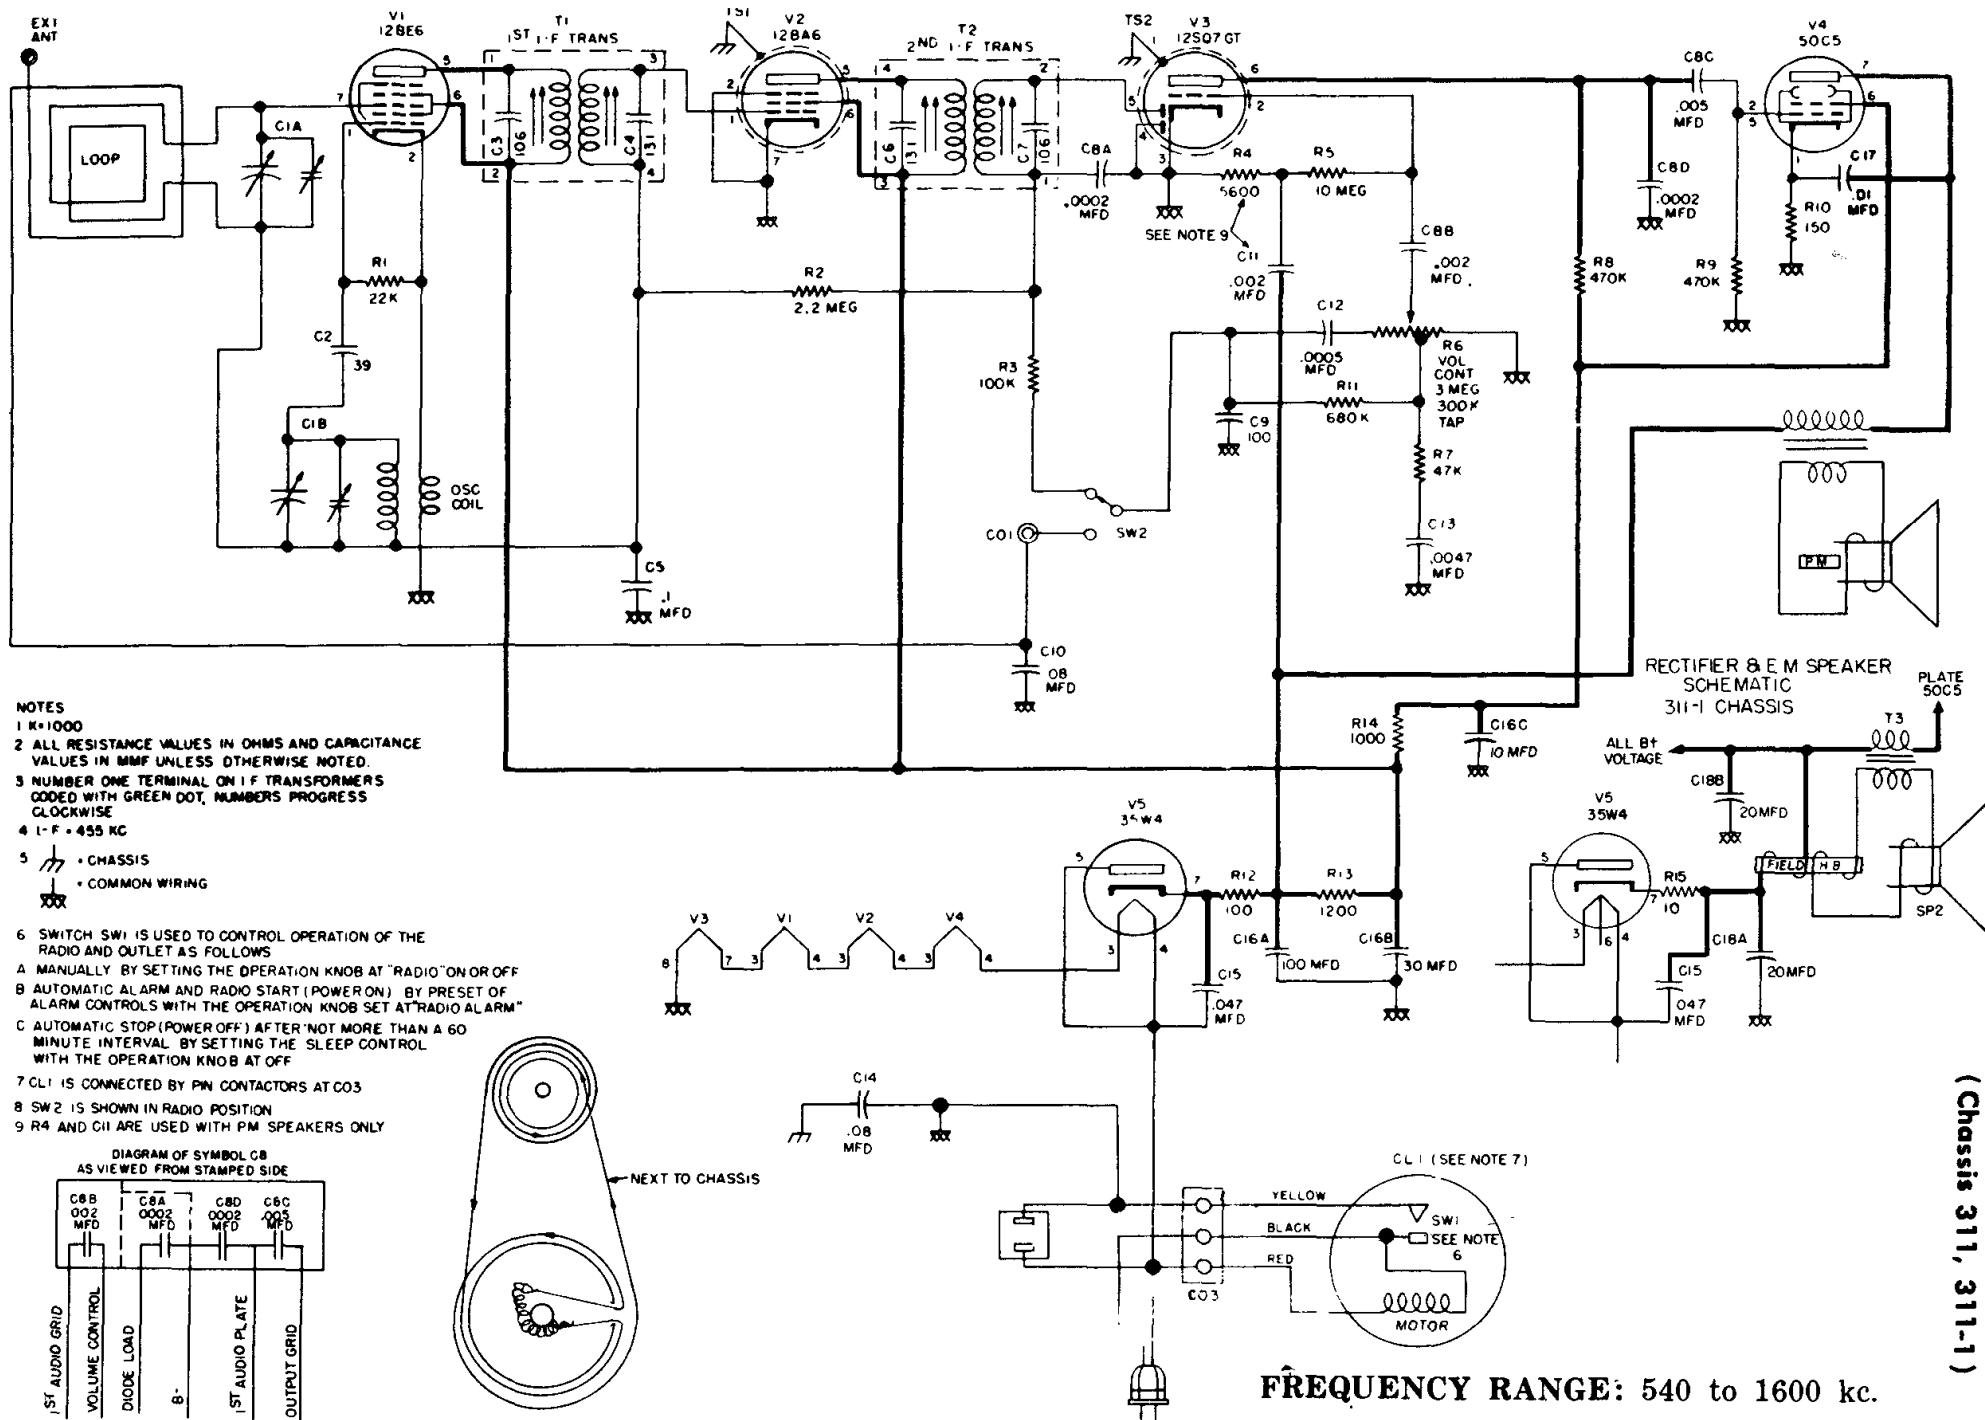

NOTES

- 1 K=1000
- 2 ALL RESISTANCE VALUES IN OHMS AND CAPACITANCE VALUES IN MMF UNLESS OTHERWISE NOTED.
- 3 NUMBER ONE TERMINAL ON I-F TRANSFORMERS ODD WITH GREEN DOT, NUMBERS PROGRESS CLOCKWISE
- 4 I-F = 455 KC
- 5 CHASSIS
 COMMON WIRING
- 6 SWITCH SW1 IS USED TO CONTROL OPERATION OF THE RADIO AND OUTLET AS FOLLOWS
A MANUALLY BY SETTING THE OPERATION KNOB AT "RADIO" ON OR OFF
B AUTOMATIC ALARM AND RADIO START (POWER ON) BY PRESET OF ALARM CONTROLS WITH THE OPERATION KNOB SET AT "RADIO ALARM"
C AUTOMATIC STOP (POWER OFF) AFTER NOT MORE THAN A 60 MINUTE INTERVAL BY SETTING THE SLEEP CONTROL WITH THE OPERATION KNOB AT OFF
- 7 CL1 IS CONNECTED BY PIN CONTACTORS AT C03
- 8 SW2 IS SHOWN IN RADIO POSITION
- 9 R4 AND C11 ARE USED WITH PM SPEAKERS ONLY

PLACEMENT OF DIAL DRIVE CORD
TUNING CAPACITOR IN THE CLOSED POSITION.

FREQUENCY RANGE: 540 to 1600 kc.
INTERMEDIATE FREQUENCY: 455 kc.
POWER SUPPLY: 60 cycle, a.c. only.
VOLTAGE RATING: 105-125 volts.