

# MODEL 536 AND 5536

Figures in first column refer to parts in Diagrams.

Item No.	Part No.	Description	Item No.	Part No.	Description
1	W —29784B	Antenna—Flexible	W	—41162	Drive Chain—5536 only
2A	W —4099B	Dial Light	W	—41160	Bearing Bracket—5536 only
2B	W —4099B	Dial Light	W	—41159A	Shaft—5536 only
	G6 —27134	Dial Light Socket Assembly	W	—40909	Spring Washer—5536 only
3	G4 —28859	Filter Choke	W	—31840A	Snaw Ring—5536 only
4	G106 —32000	Ant. Coil	W	—40999	Power Cord & Plug
5	G104 —32004	1st I-F Coil	B	—36316	Resistor, 2700 Ohm ¼W.
6	G103 —32004	2nd I-F Coil	21	—4921C	Resistor, 10,000 Ohm 1W.
7	G94 —32002	Osc. Coil	22	—35928	Resistor, 60,000 Ohm ¼W.
8Y	W —29804A	Condenser, { 8 Mfd. 125 V.	23A	—35600	Resistor, 100,000 Ohm ¼W.
8X		16 Mfd. 125 V.	23B	—35600	Resistor, 100,000 Ohm ¼W.
9	G1 —34002	Condenser, .00025 Mfd. (Molded)	24	—35601	Resistor, 300,000 Ohm ¼W.
10	W —28620	Condenser, .003 Mfd. 200 V.	25	—36322	Resistor, 500,000 Ohm ¼W.
11	W —23191A	Condenser, .01 Mfd. 400 V.	26	—35927	Resistor, 2 Megohm ¼W.
12A	W —36541	Condenser, .02 Mfd. 160 V.	27	—33490	Resistor, 10 Megohm ¼W.
12B	W —36541	Condenser, .02 Mfd. 160 V.	28	W —28589	Resistor, 350 Ohm ½W. Flex.
12C	W —36541	Condenser, .02 Mfd. 160 V.	29	W —41000	Candohm—2 Sections
12D	W —36541	Condenser, .02 Mfd. 160 V.	30A	G151 —3F400	Socket Type 6K7
13	W —32780B	Condenser, .05 Mfd. 400 V.	30B	G151 —3F400	Socket Type 6K7
14	W —24049C	Condenser, 1 Mfd. 160 V.	31	G157 —3F400	Socket Type 6J7
16	W —37075	Condenser, 2 Section Trimmer	32	G161 —36400	Socket Type 25A6
17	W —40998	Condenser, 1 Section Trimmer	33	G162 —36400	Socket Type 25Z6
18	G22 —33001	2 Section Var. Tuning Condenser	W	—40711	Tube Shield
	C —40926	Dial Glass—536 only	W	—27981A	Tube Shield Base
	W —40632B	Pointer Disc—536 only	B	—41012	Speaker 237BL9
	W —41014A	Dial Glass Bracket R-H—536 only	W	—40593	Speaker Mtg. Bracket
	W —41013A	Dial Glass Bracket L-H—536 only		—6415	Mtg. Bracket Screw
	W —41227	Drive Chain—536 only		—41004	Band Selector Switch
	W —40633B	Bearing Support—536 only	35		Volume Control 4800 Ohm Tap 160 Ohm
	W —41112A	Driven Sprocket—536 only	36Z		Line Switch
	W —41113A	Driver Sprocket	36Y		Escutcheon
	W —40486	Pointer Disc Mtg. Screw	B	—40590	Escutcheon Mtg. Screws (4) } 536 only
	C —40927	Dial Glass—5536 only	D	—28	Knob
	B —40818B	Pointer Disc—5536 only	W	—41019	Escutcheon
	W —41158	Support Bracket L-H—5536 only	W	—40839	Escutcheon Plate
	W —41143	Support Bracket R-H—5536 only	W	—40840	Escutcheon Pin } 5536 only
	W —40797	Dial Glass Bracket—5536 only	W	—29760A	Escutcheon Pin
			W	—41019	Knob (2)
			W	—41021	Knob (1)

